



BDC2FDRBK

Assembly Instructions

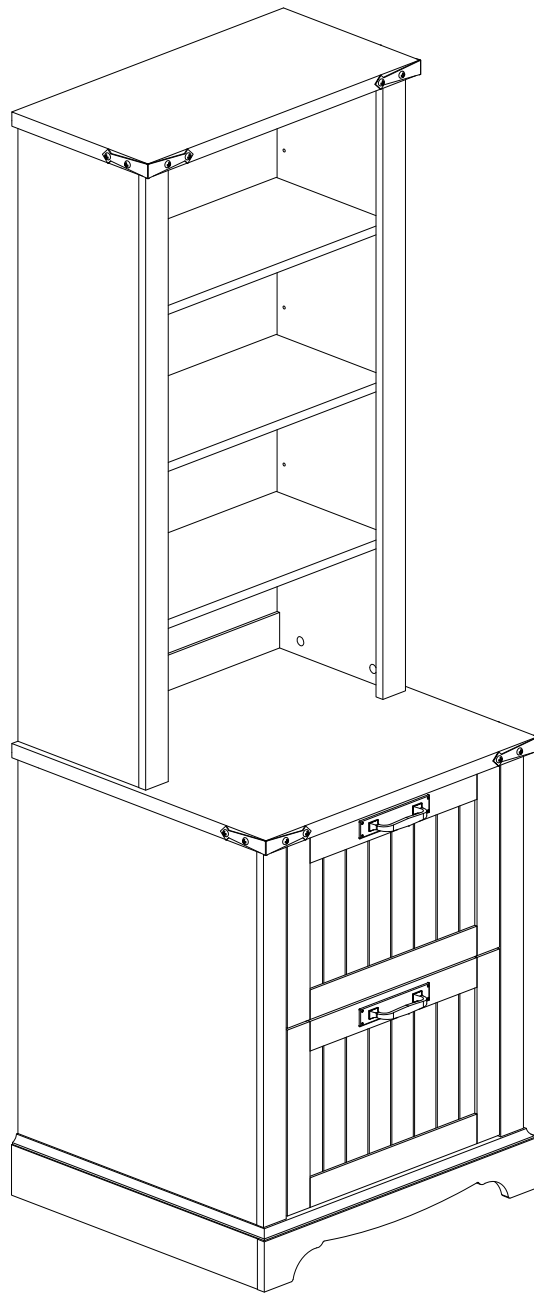


General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- VI. A Phillips head screwdriver is required for the assembly of this product .

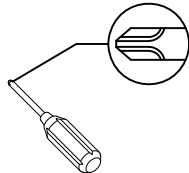


- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

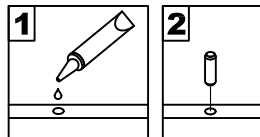


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

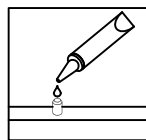



- VI. **HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS**
 - 1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
 - 2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.
 - 3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
 - 4.Use the sticker to conceal the Cam.

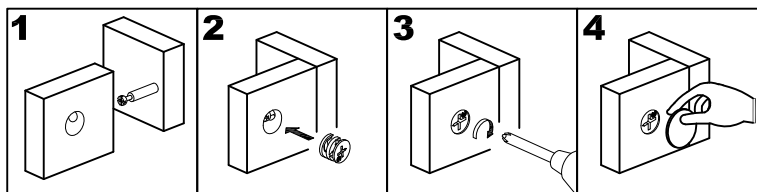





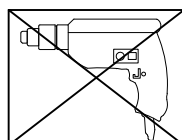


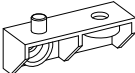


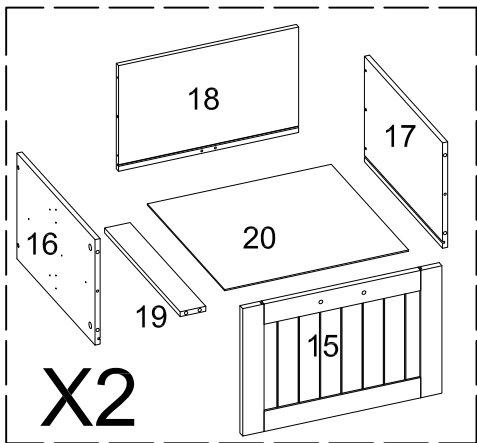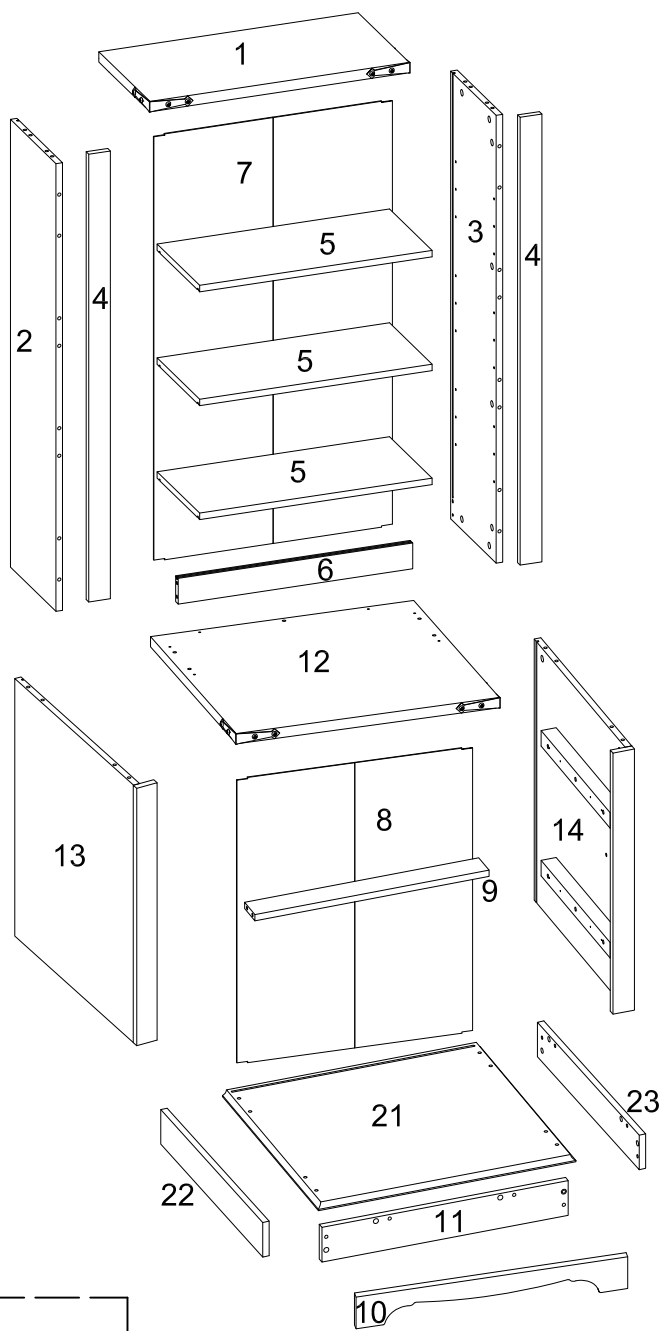





- VII. Power tools should not be used to assemble this product .




Parts List














Hardware List

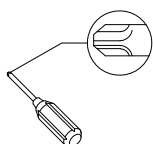
A		Ø8x30mm	Dowel	29 pcs
B		Ø6x35mm	Cam Bolt	38 pcs
C		Ø15x12mm	Clarge Cam Lock	26 pcs
D		Ø15x10mm	Smun Cam Lock	12 pcs
E		Ø30mm	Cam Cover	38 pcs
F			Handle	2 pcs
G		Ø4x9mm	Handle bolt	4 pcs
H			Connector	12 pcs
I		1/4x12mm	Bolt	24 pcs
J		Ø8x5x16mm	Shelf support pin	12 pcs
K		Ø6x50mm	Screw	4 pcs
L		Ø3x15mm	Screw	3 pcs
M		Ø3x12mm	Screw	42 pcs
N		Ø4x32mm	Screw	12 pcs
O		Ø6x30mm	Dowel	8 pcs
P		M4	Allen Wrench	1 pc



Philips head screwdriver required for assembly
(not included)



Hardware List

Q			Glue Tube	1 pc
R			Plastic Wedge	22 pcs
S		Ø3x17mm	Flat-head Screw	22 pcs
T		16"	Drawer Slider	2 sets
U			Safety Stop	1 pc
V			Drawer Stop	2 pcs
W			Long File Rail	2 pcs
X			Short File Rail	4 pcs
Y			Fixed File Rail	2 pcs
Z			File Hanger	2 pcs
AA			Tipping Restraint Hardware	1 set

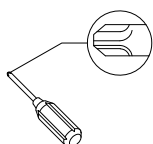


Philips head screwdriver required for assembly
(not included)


Step 1

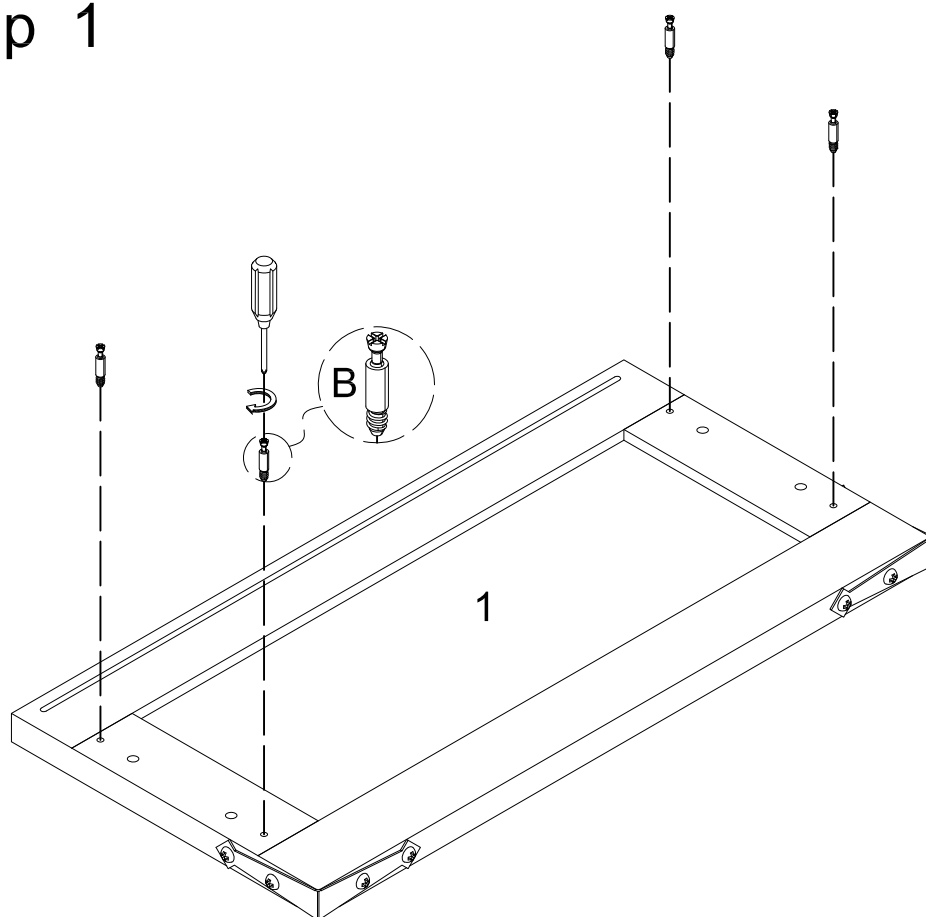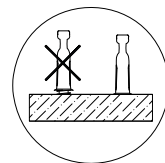


Step 2

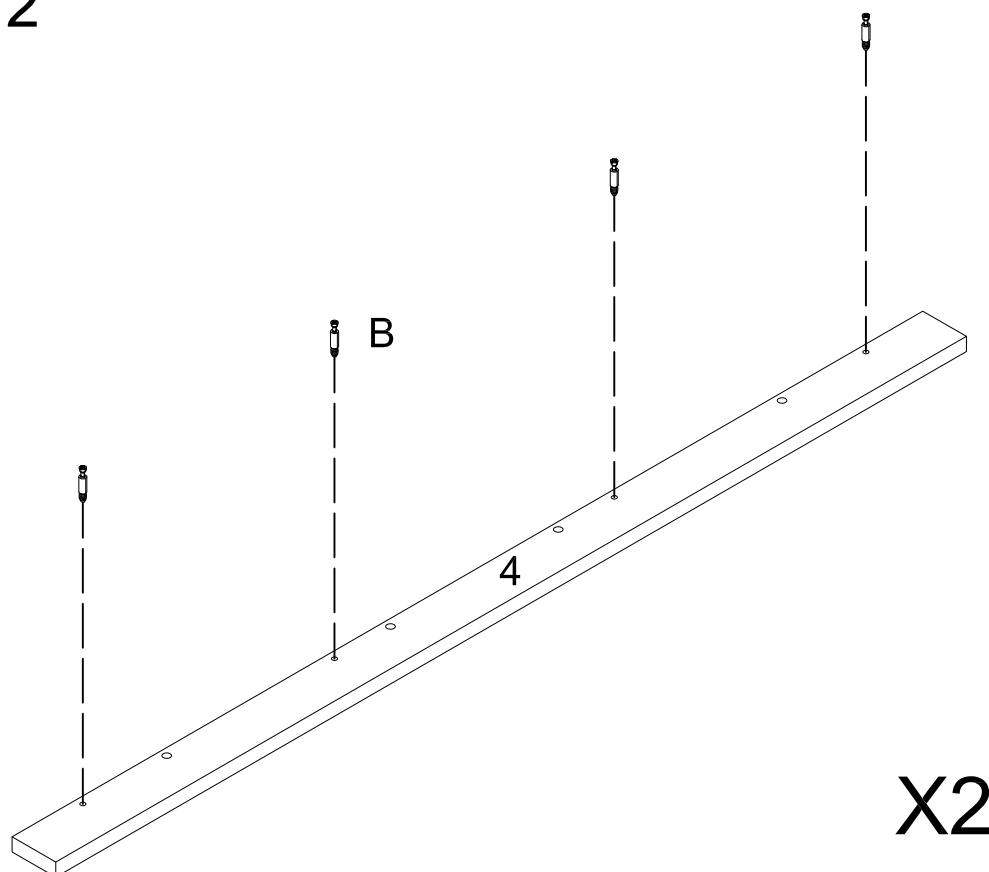


Step 3

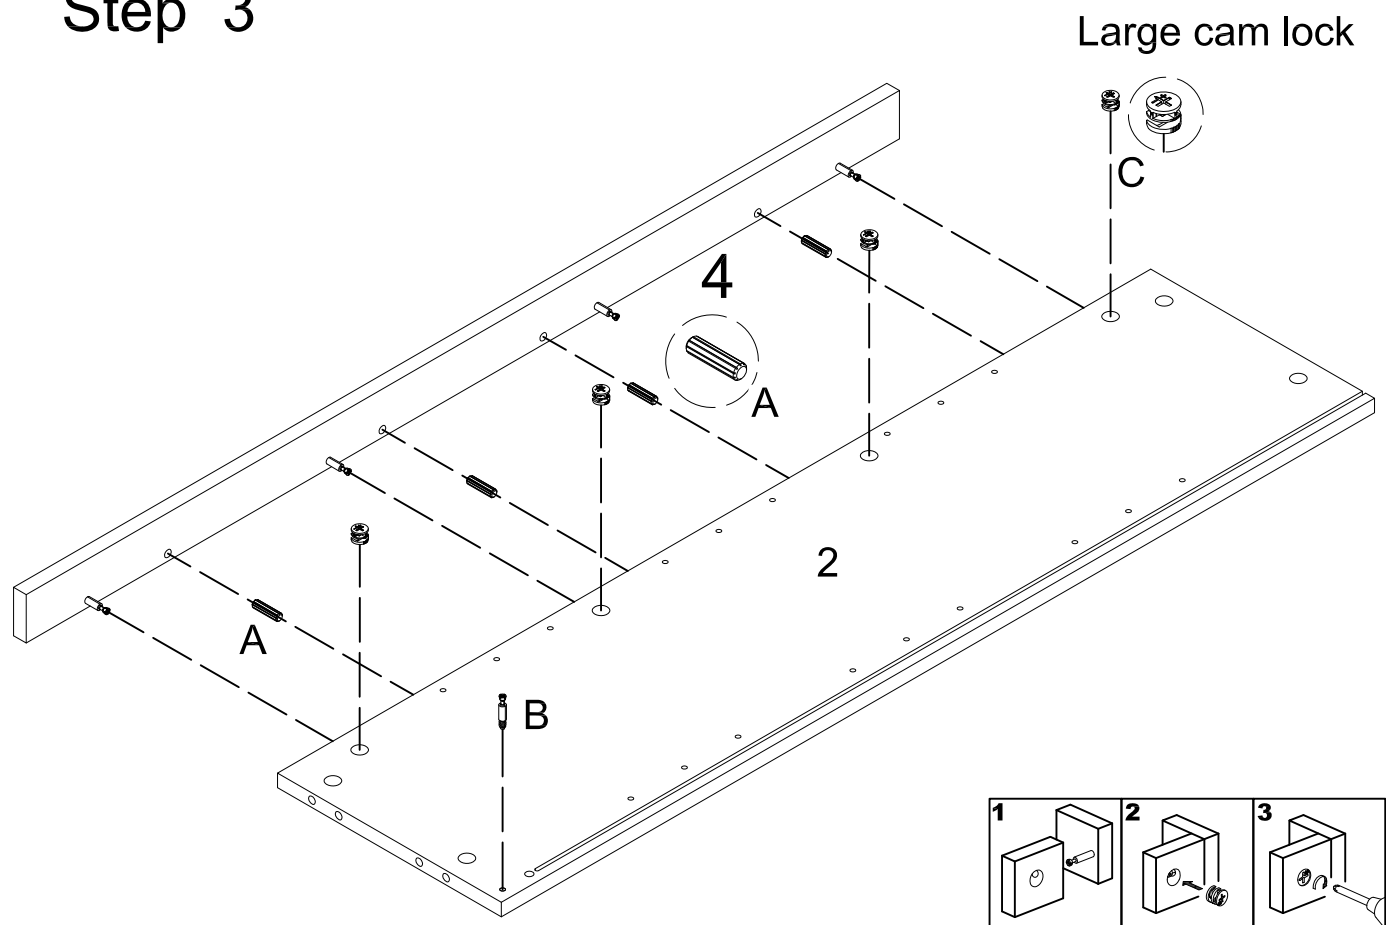



Step 4

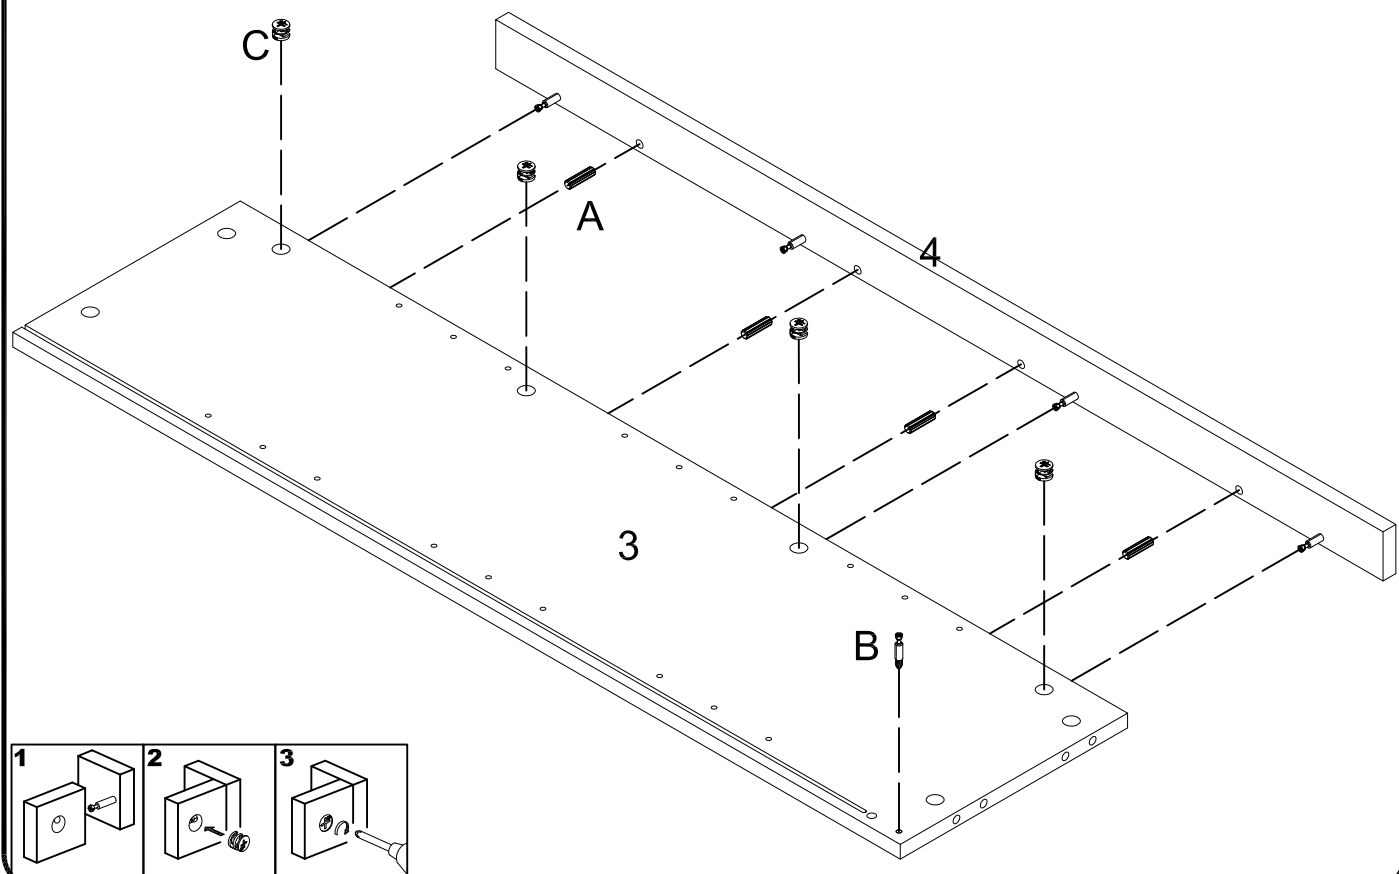

Step 5

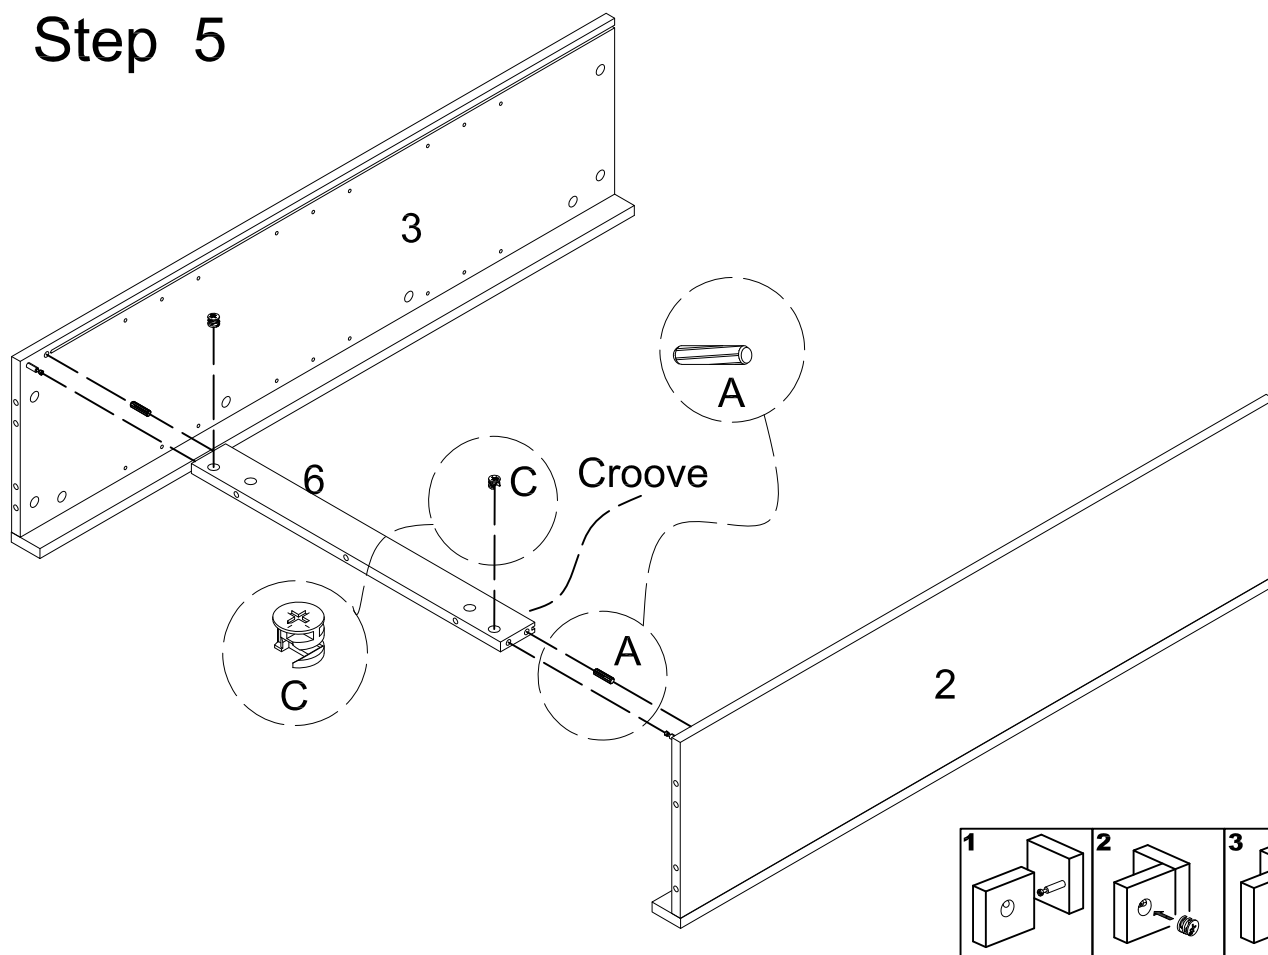


Step 6

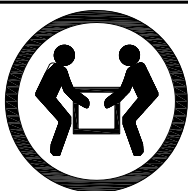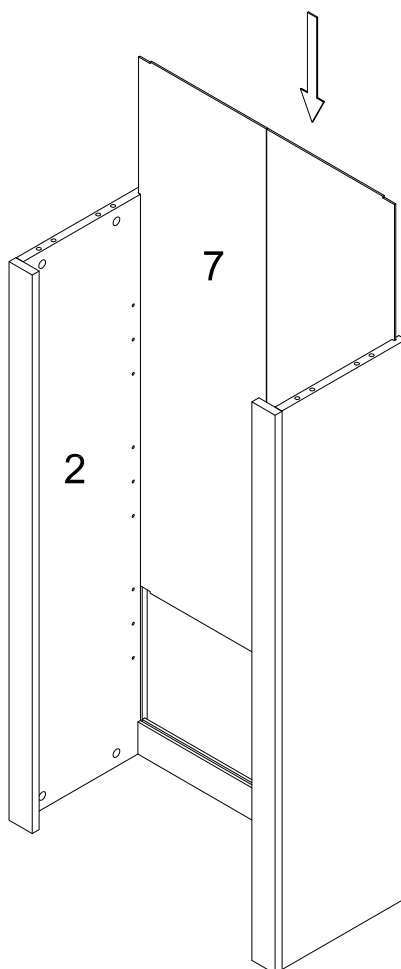


CAUTION: Heavy! You may need assistance with this step.


Step 7

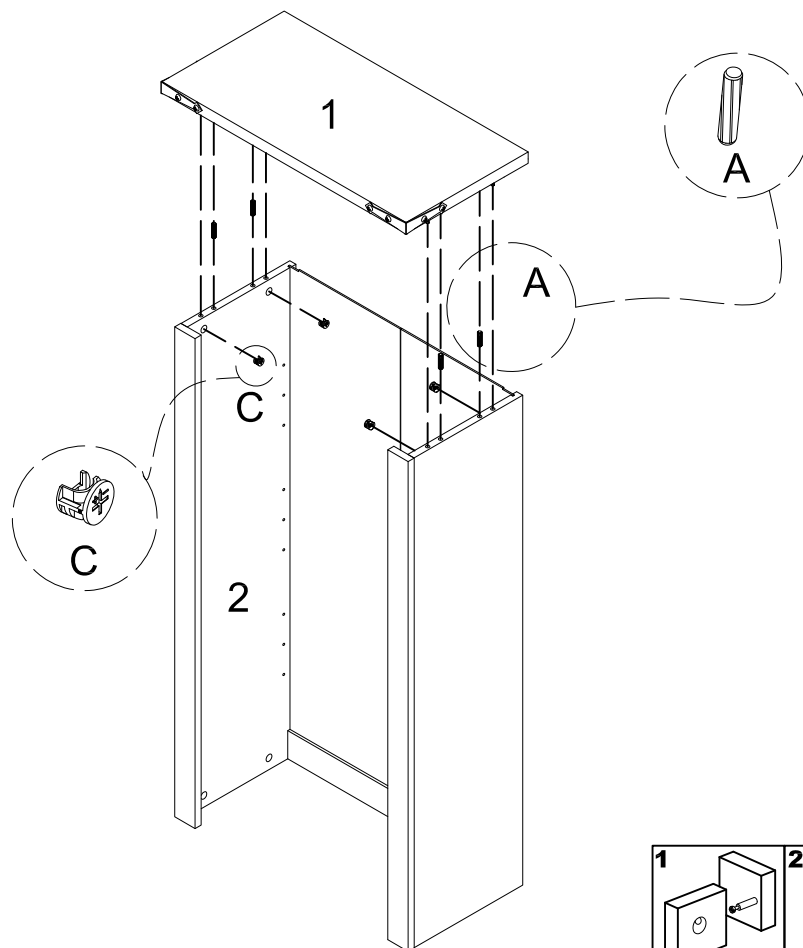


Step 8

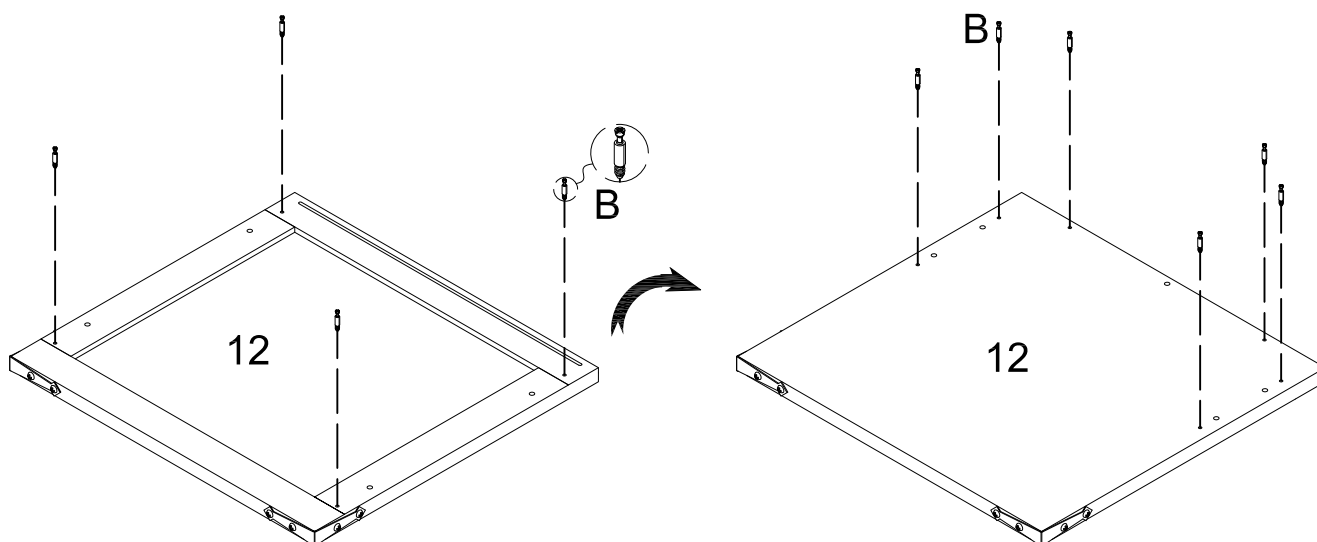


Step 9

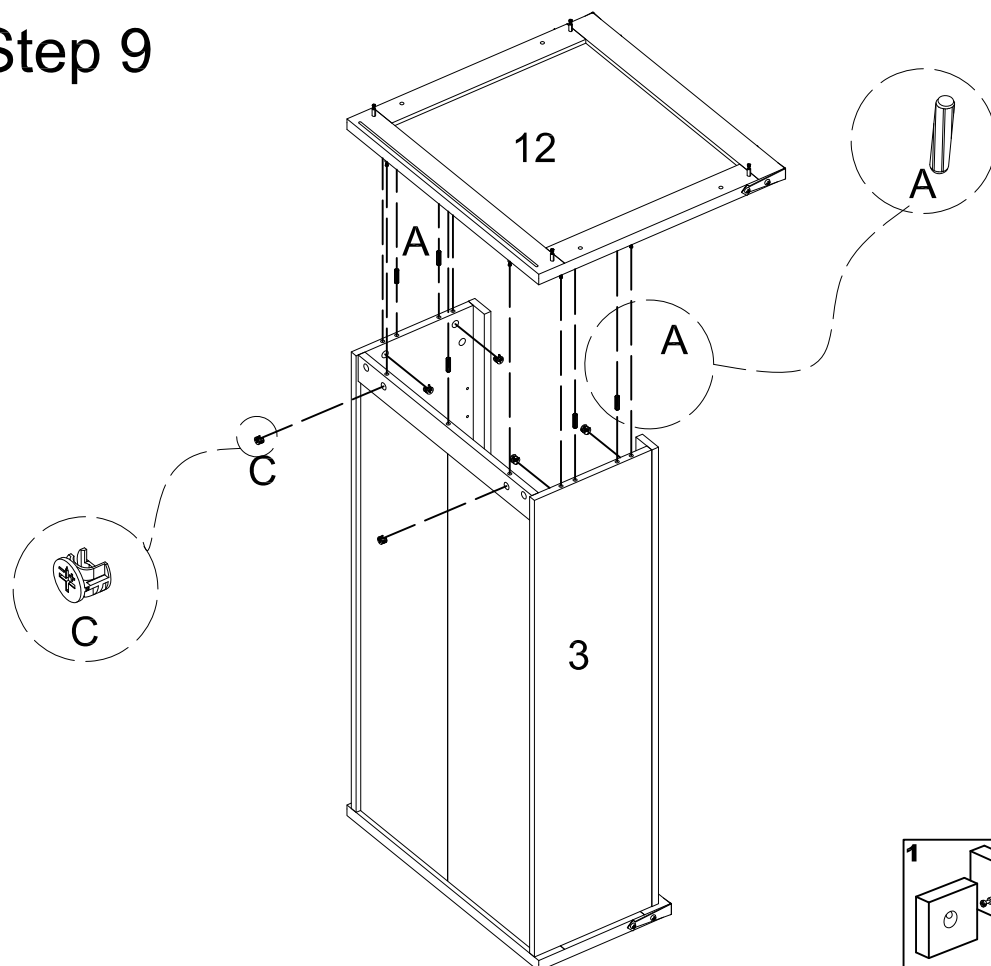


Step 10

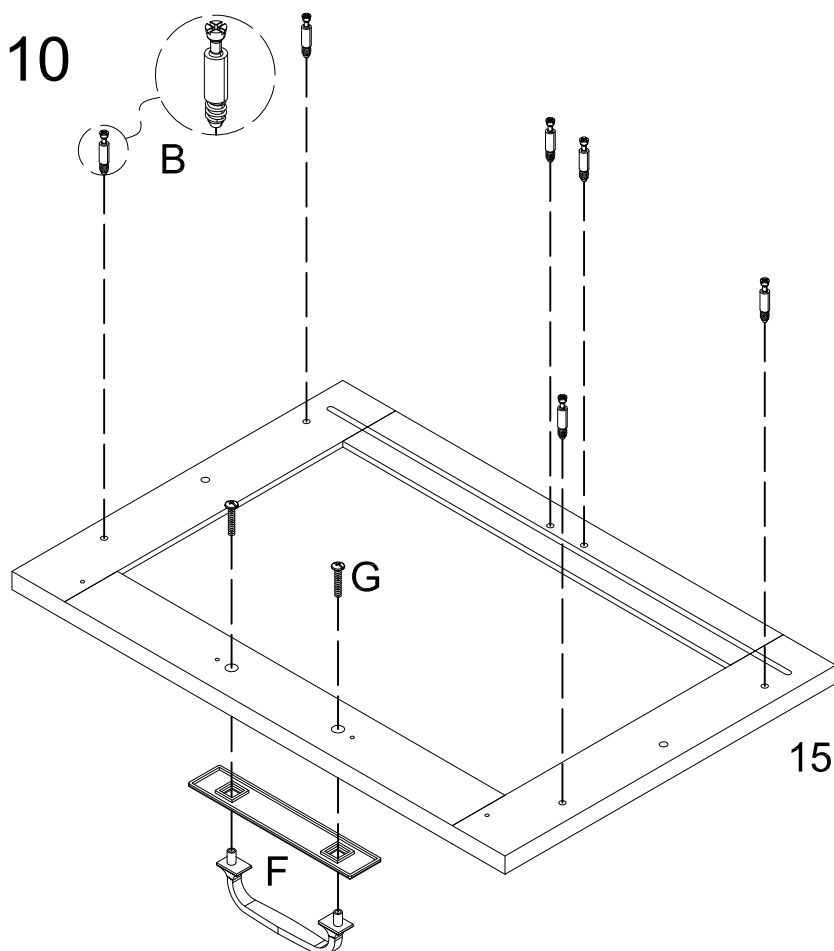


Step 11

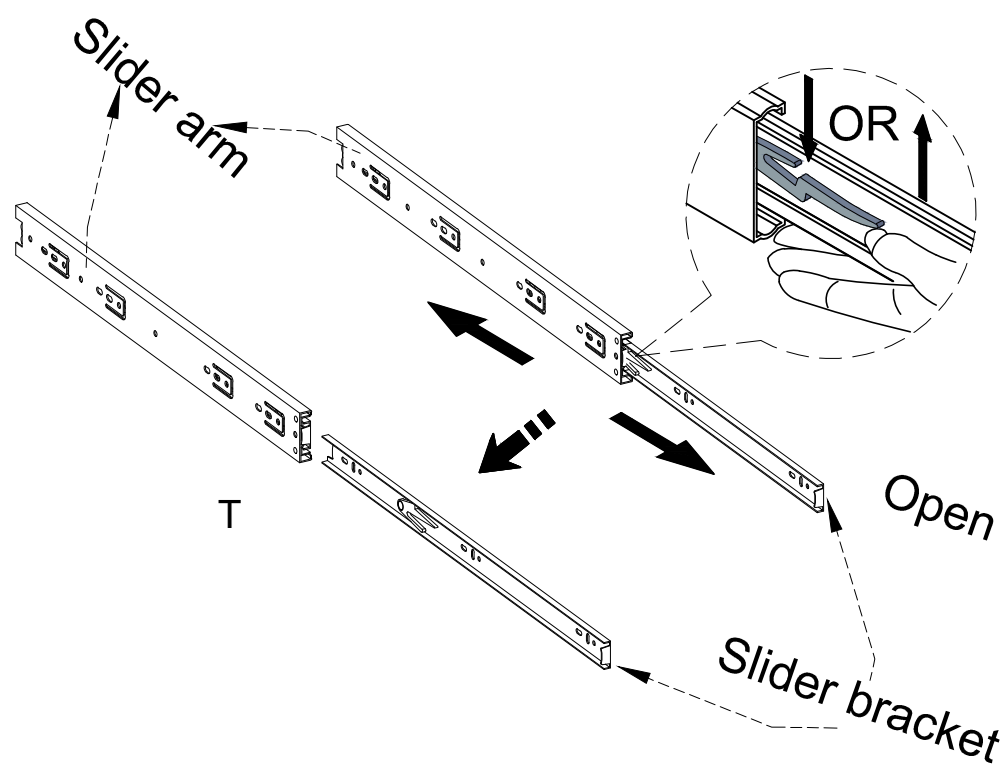

Step 12

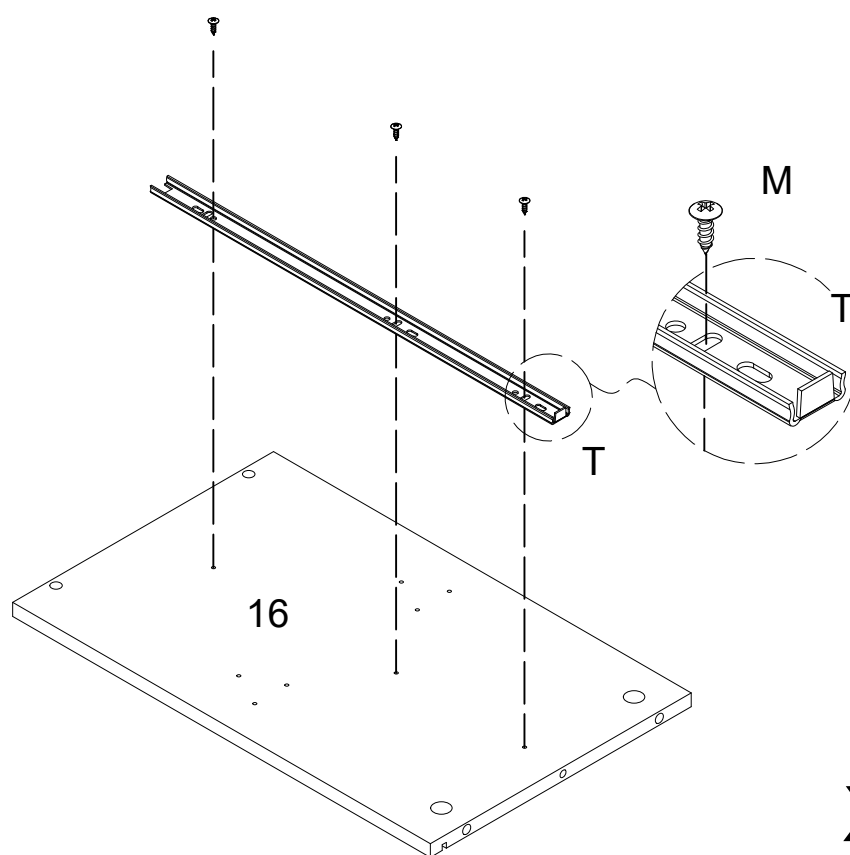


Step 13

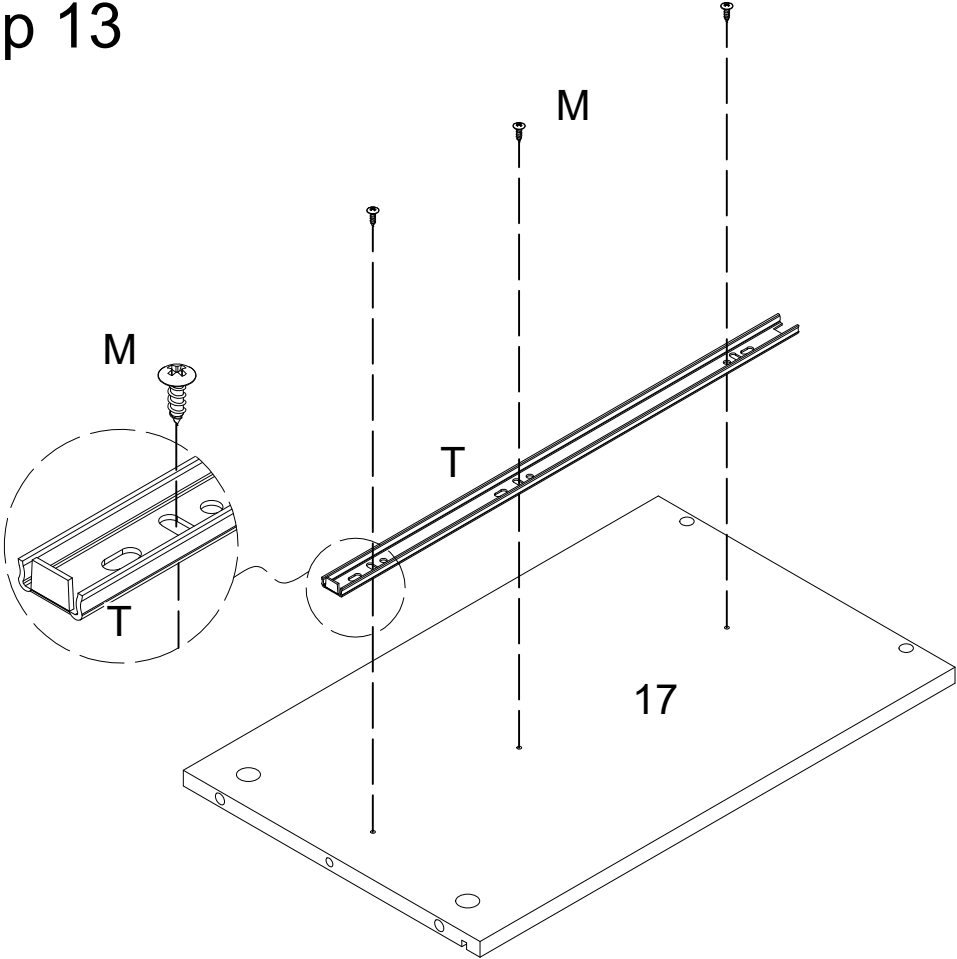


X2

Step 14

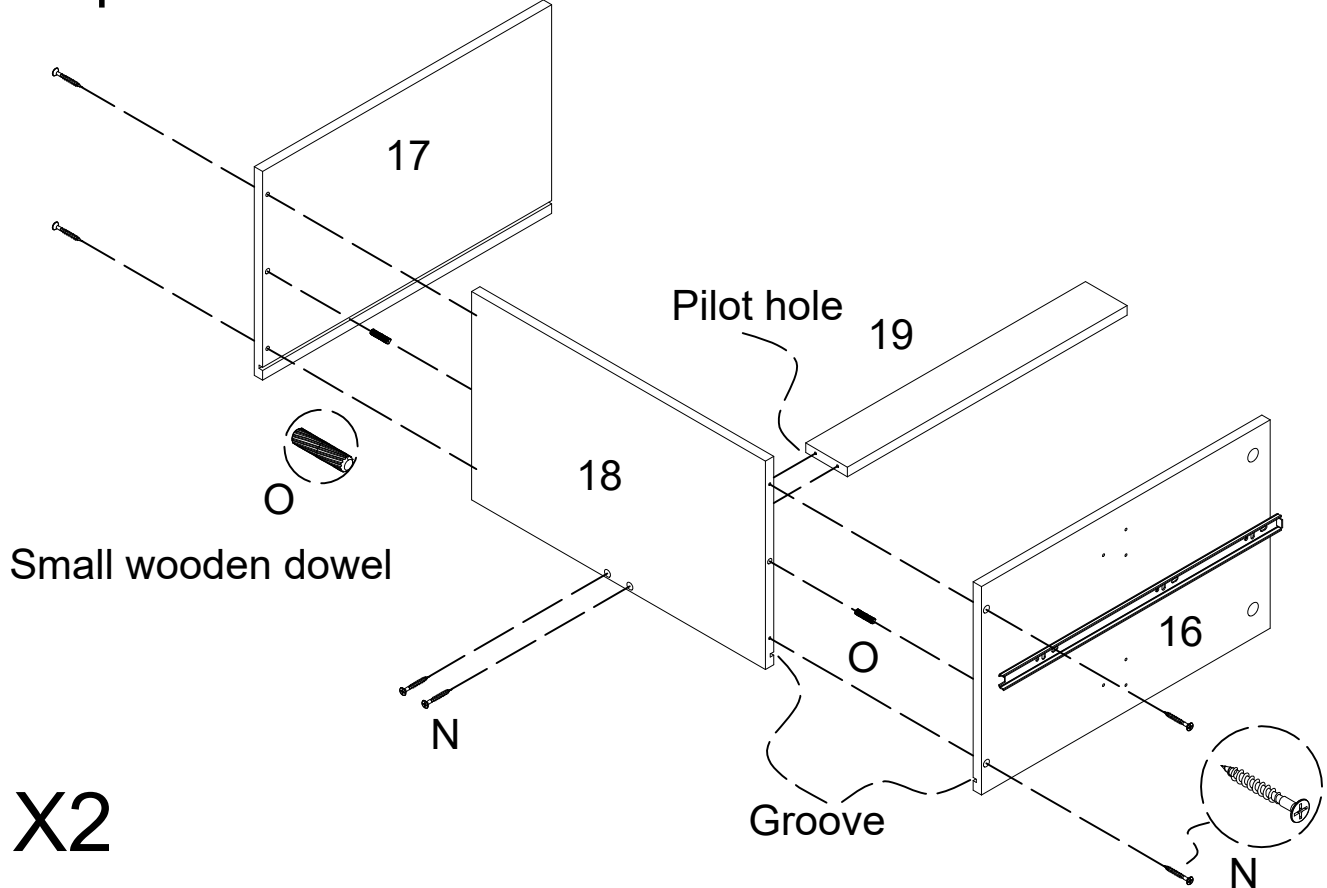


X2

Step 15

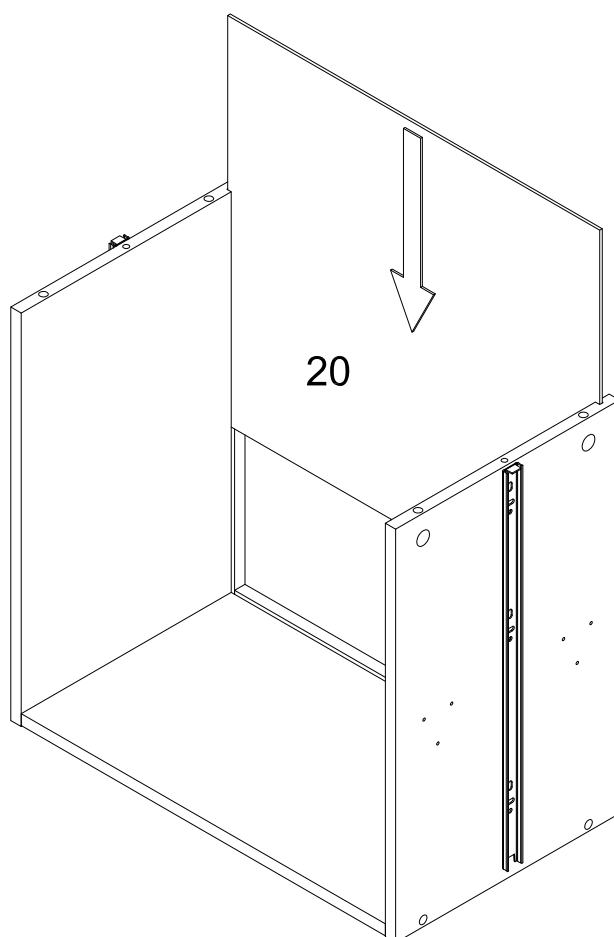


X2

Step 16

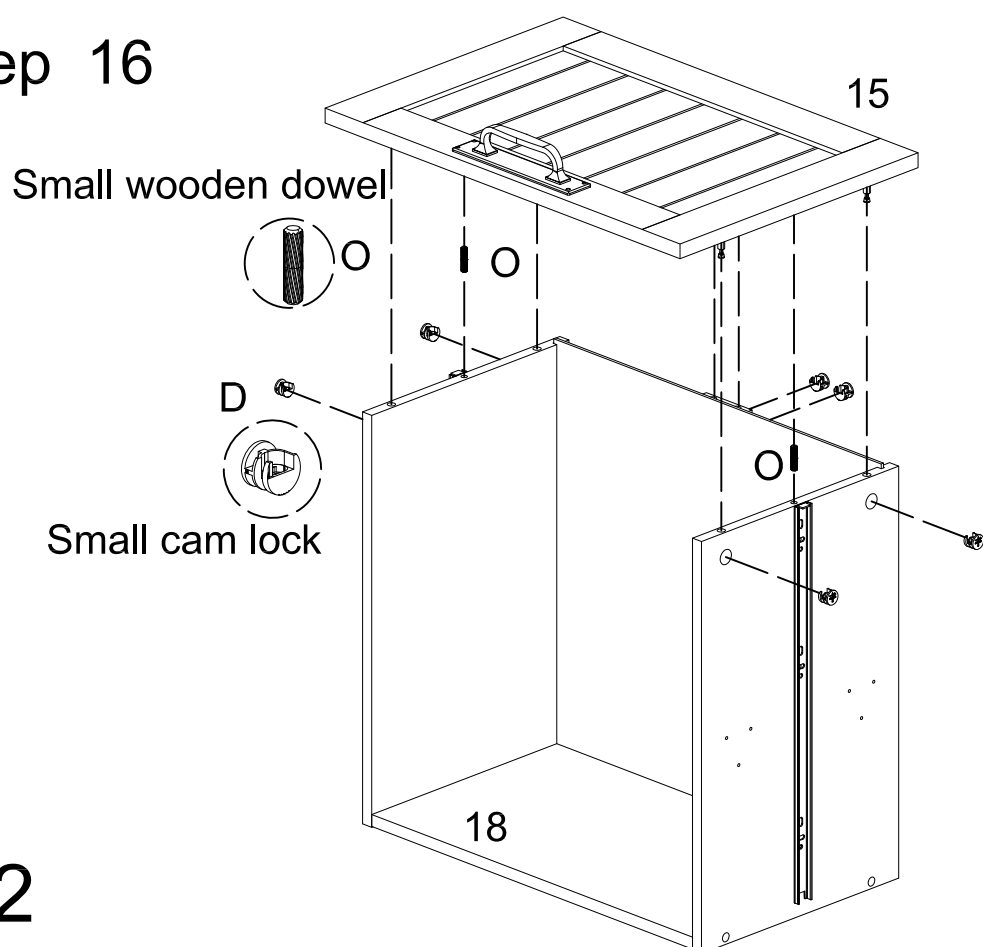


X2

Step 17

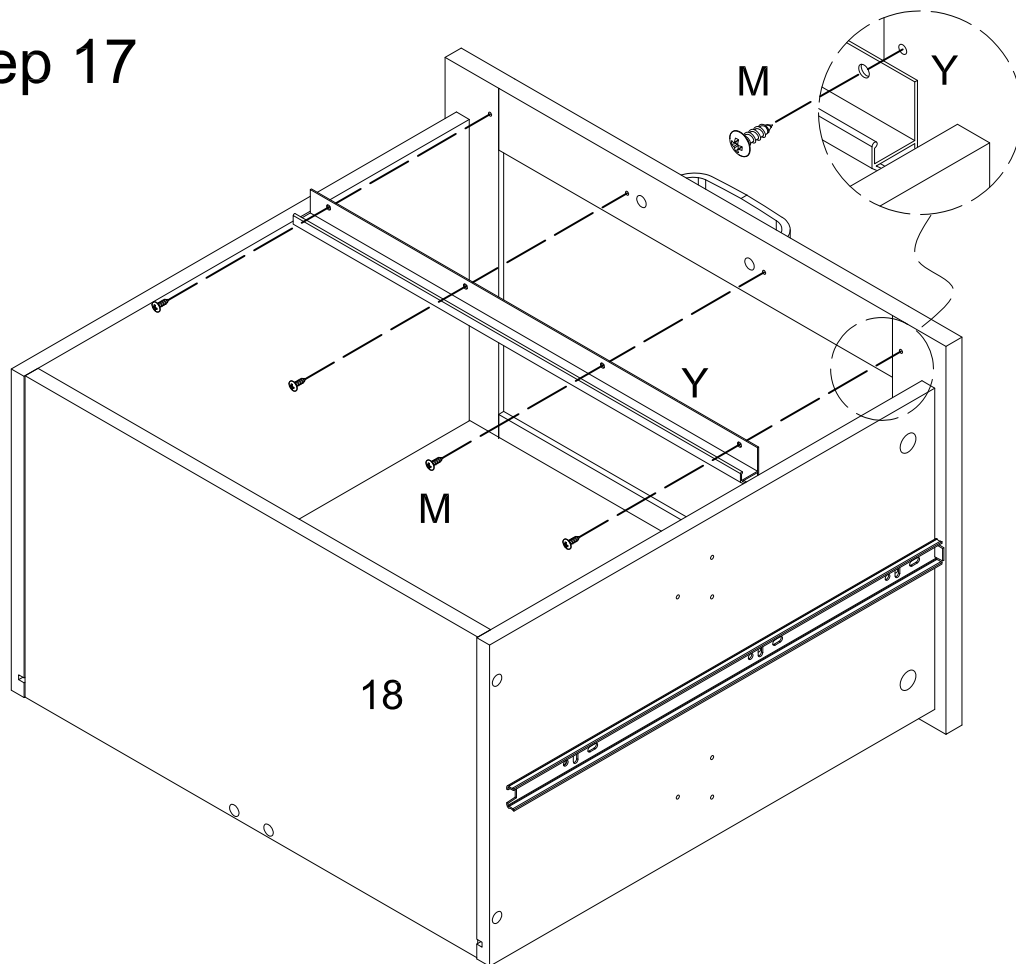


X2

Step 18

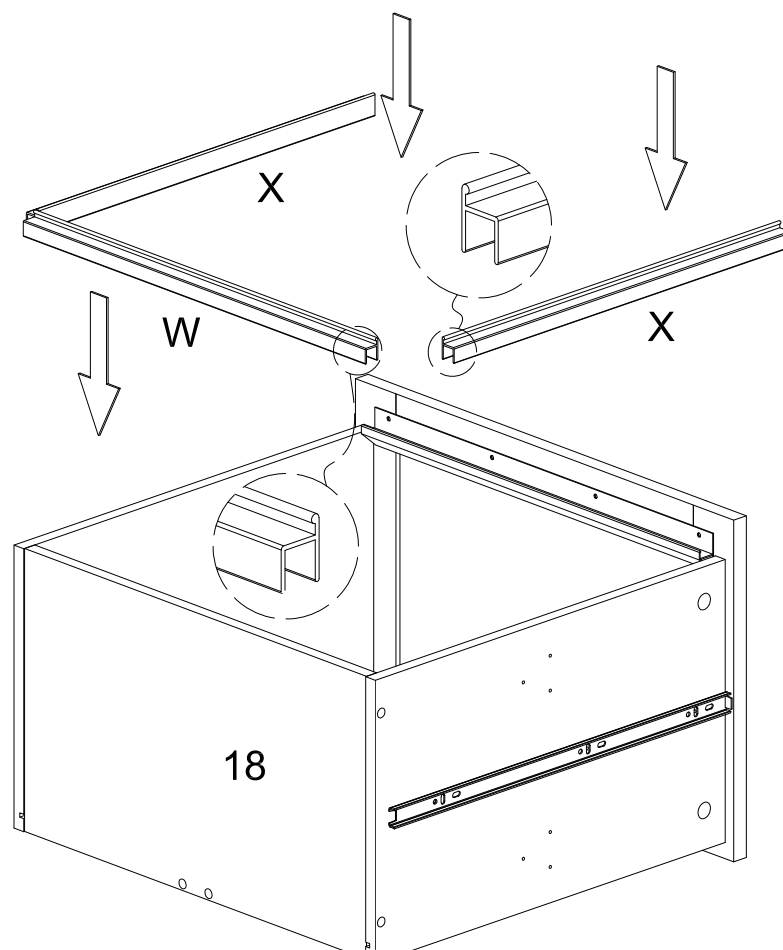



X2

Step 19

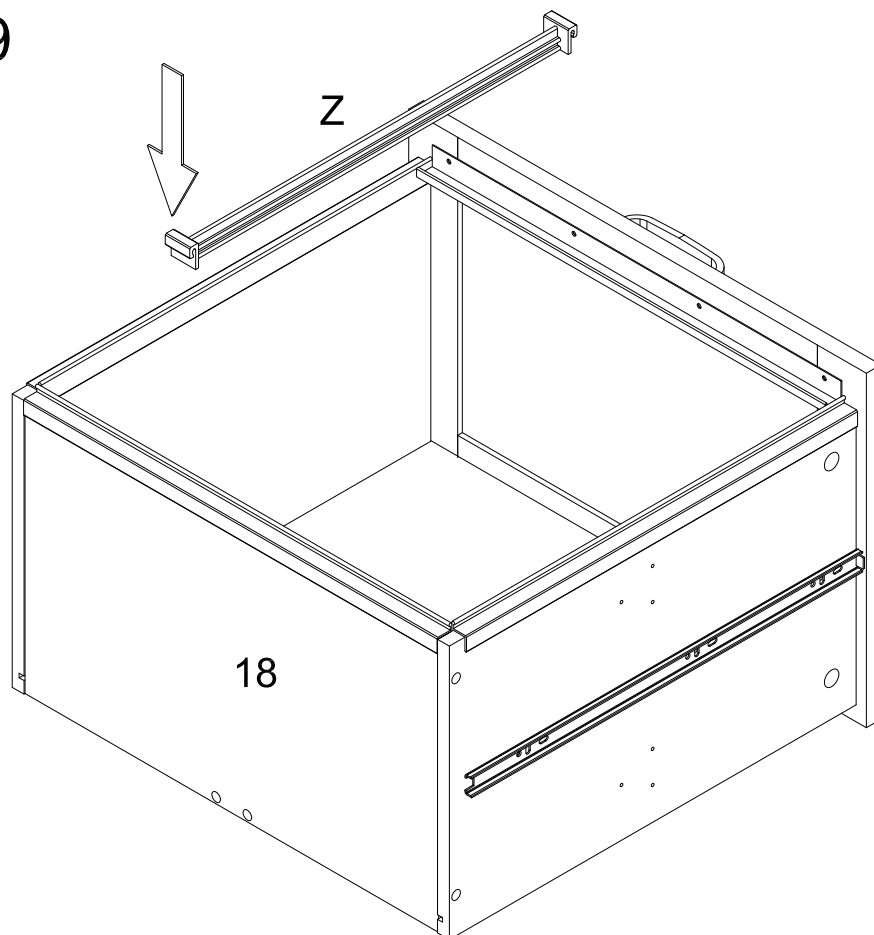



X2

Step 20

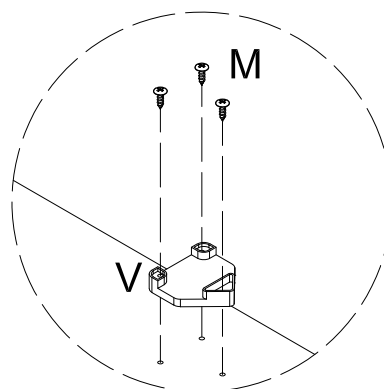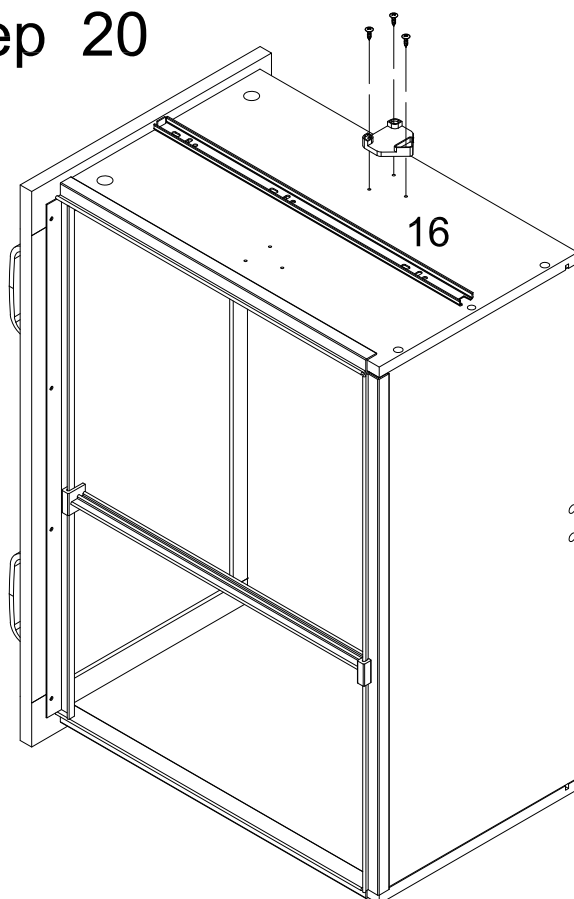


Upper Drawer

Step 21

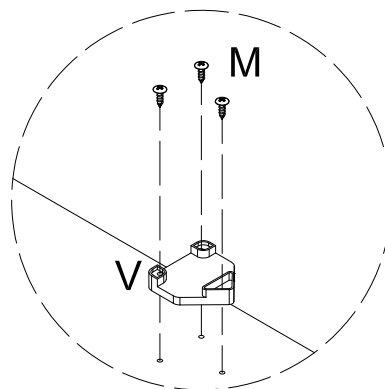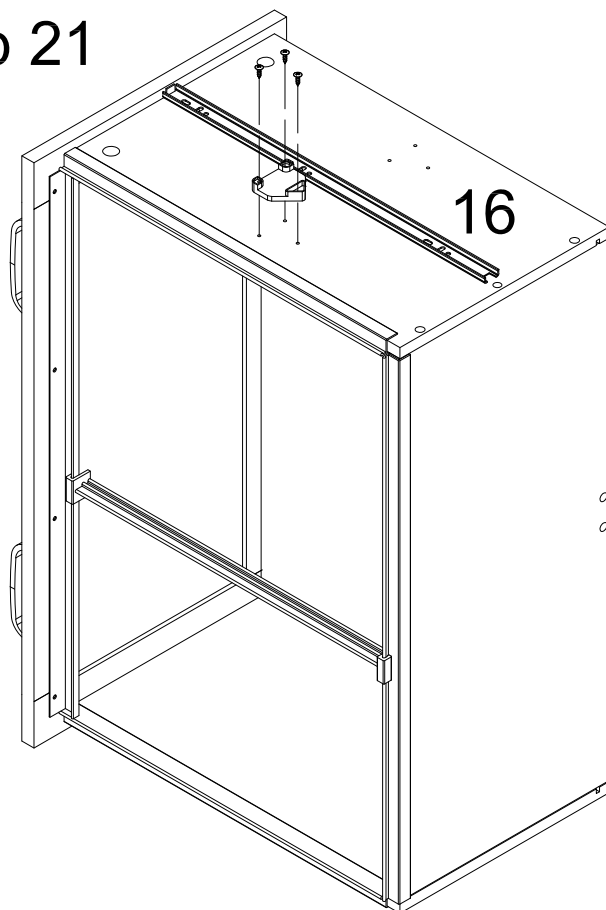


Lower Drawer


Step 22

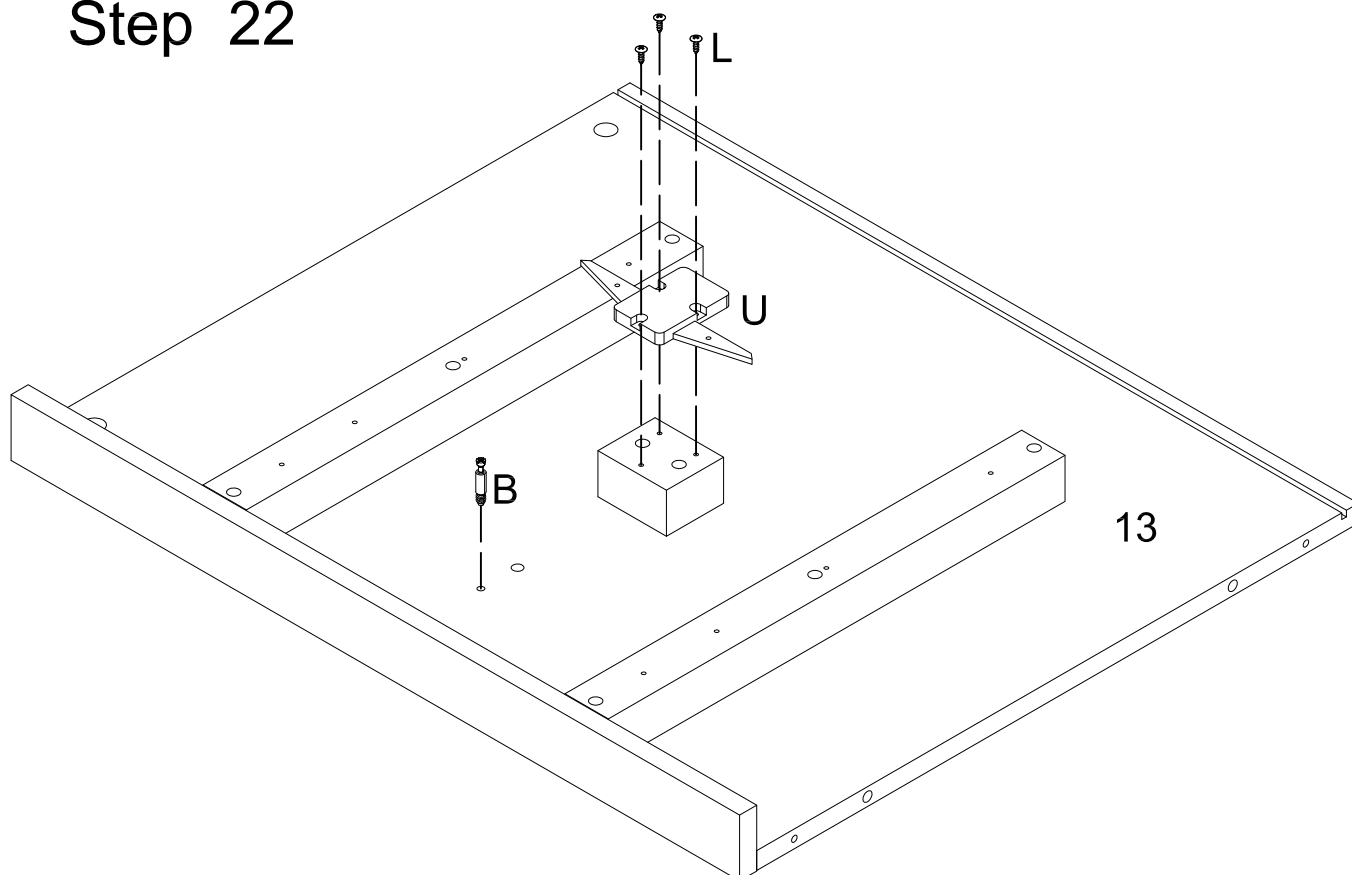



Step 23

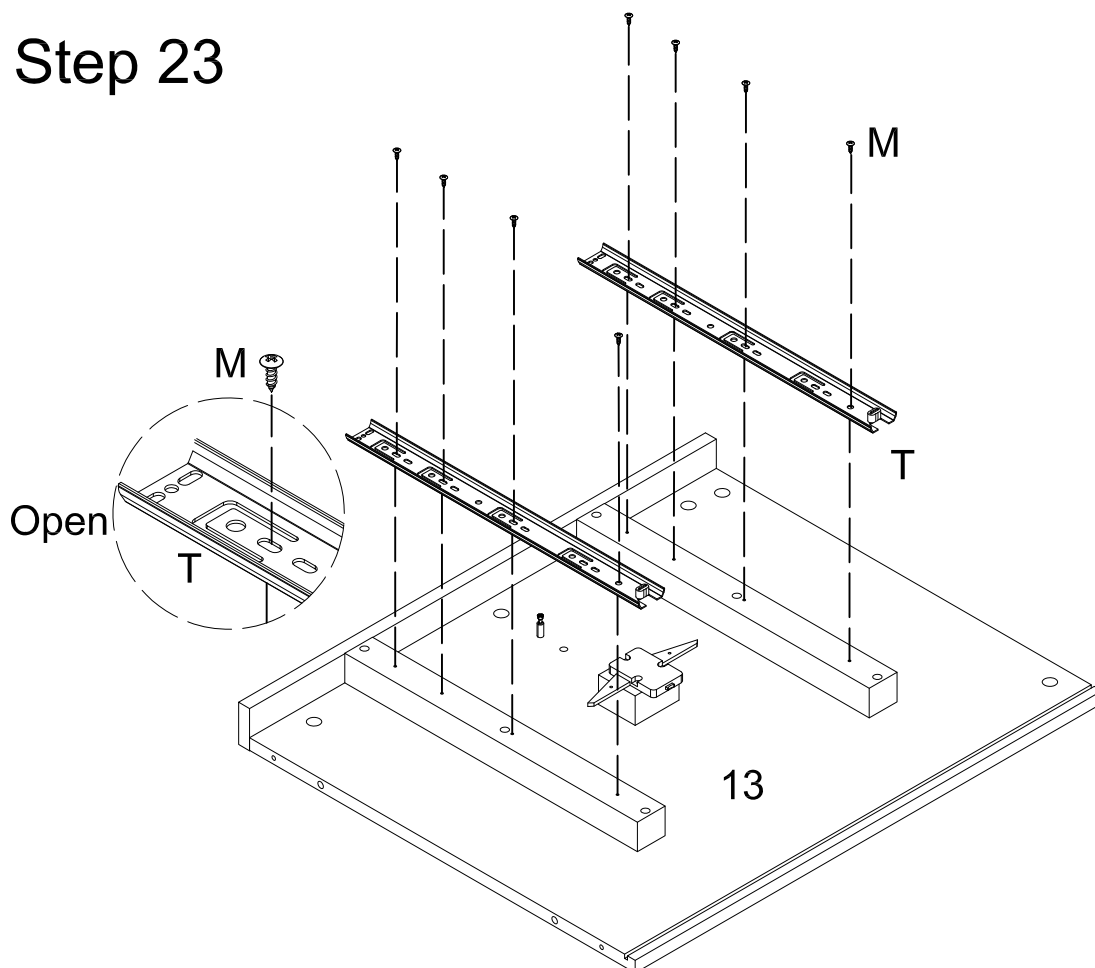


Step 24

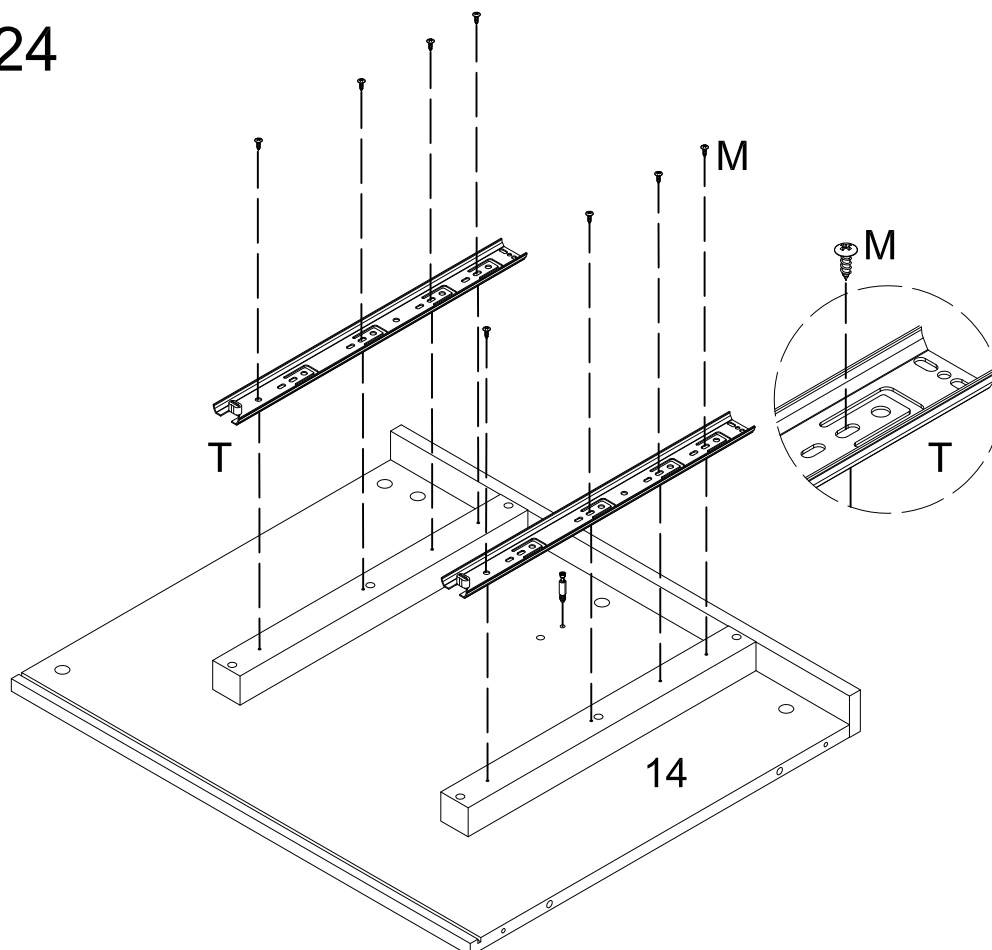


Step 25

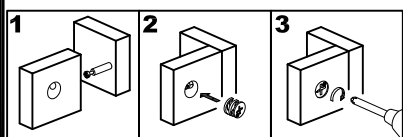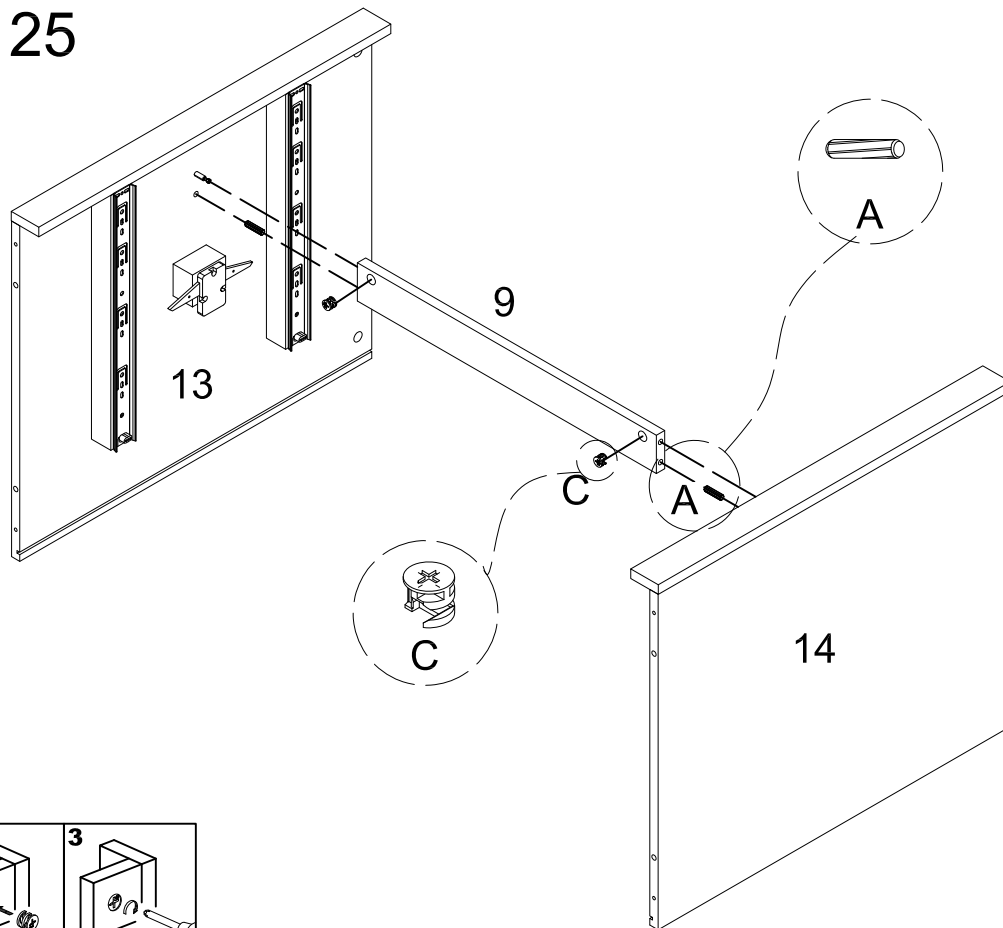


Step 26

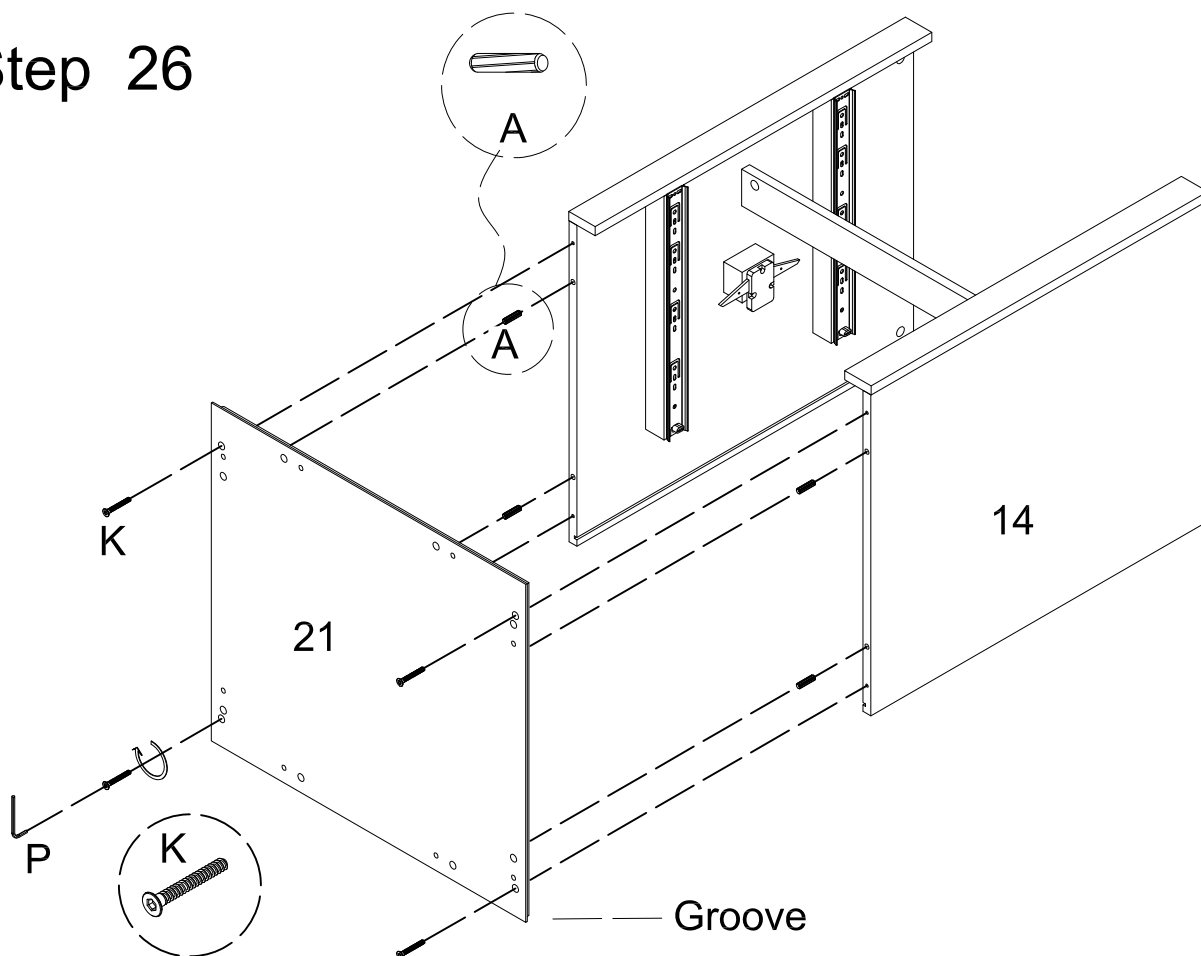


Step 27

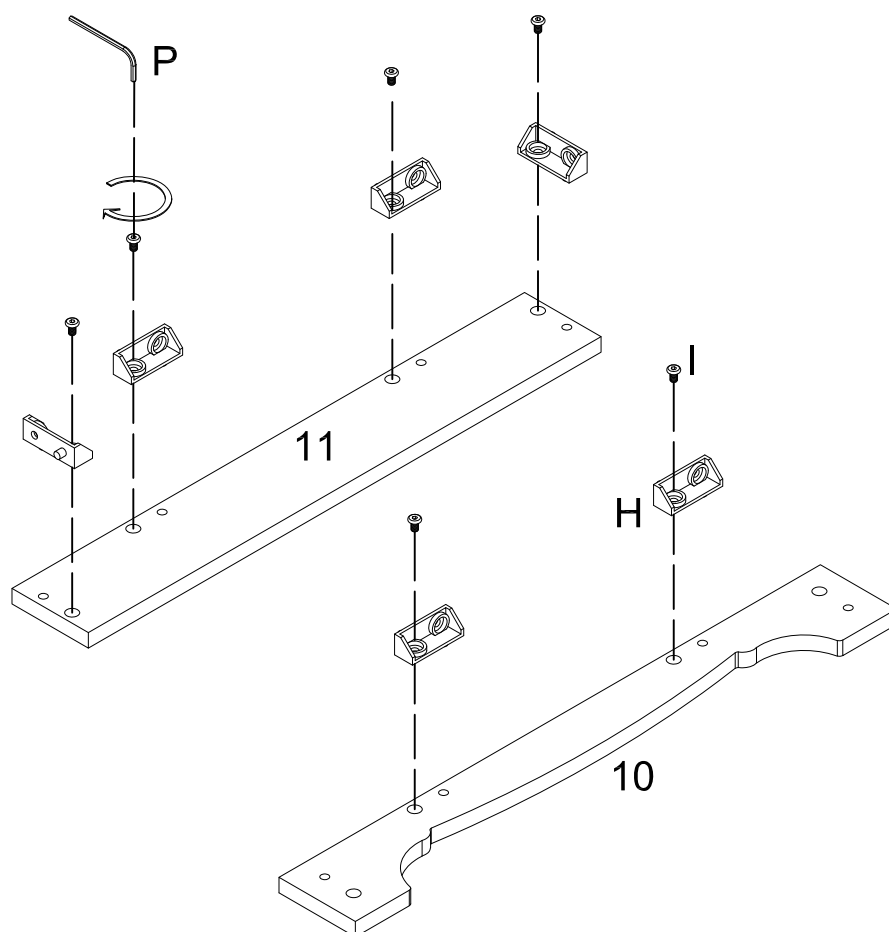


Step 28

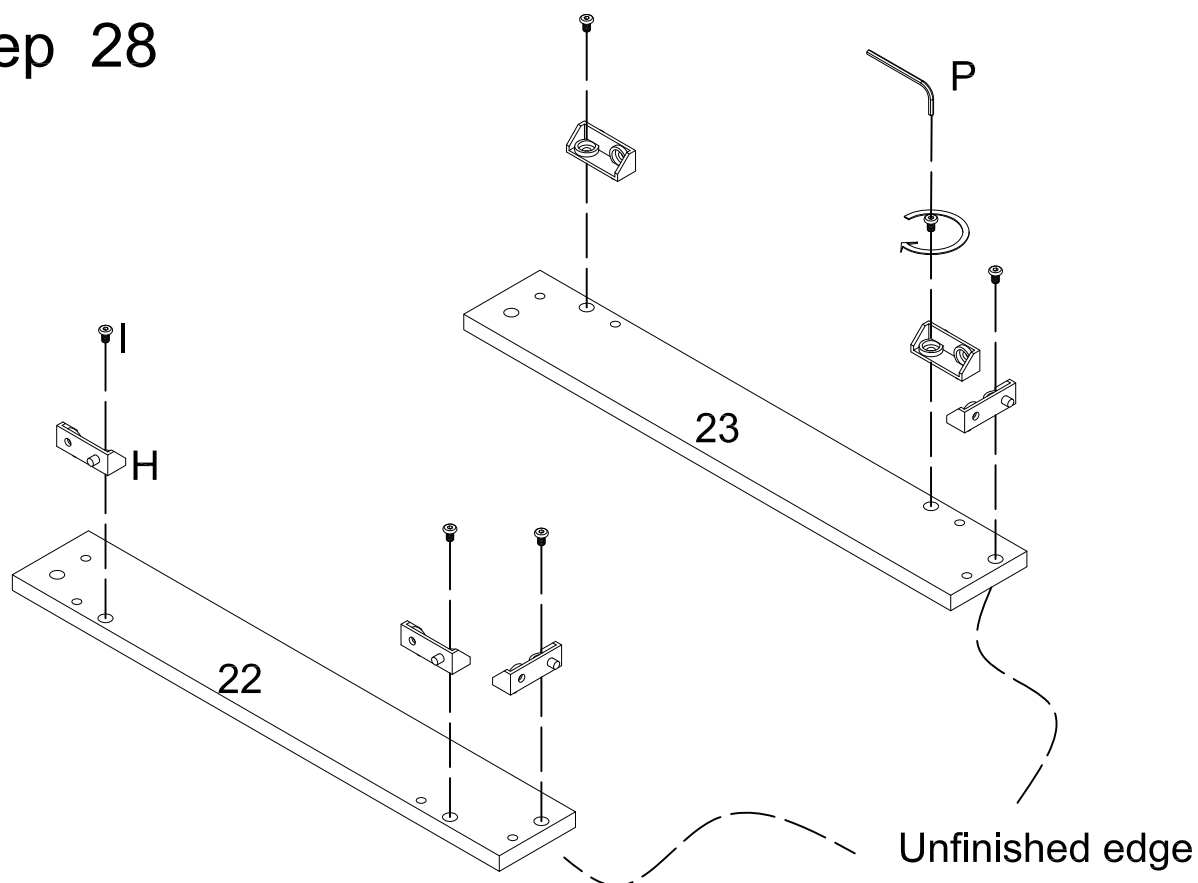


Step 29

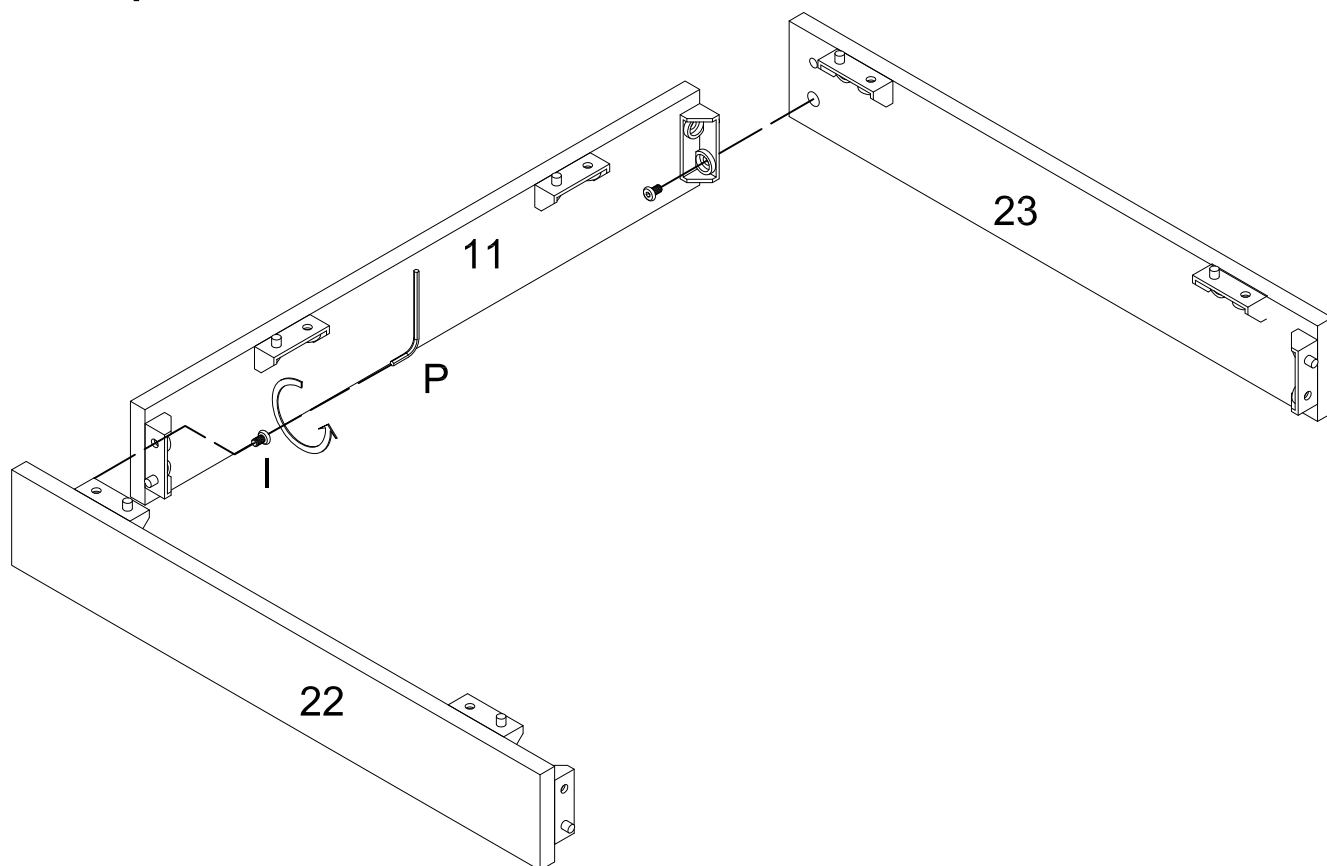


Step 30

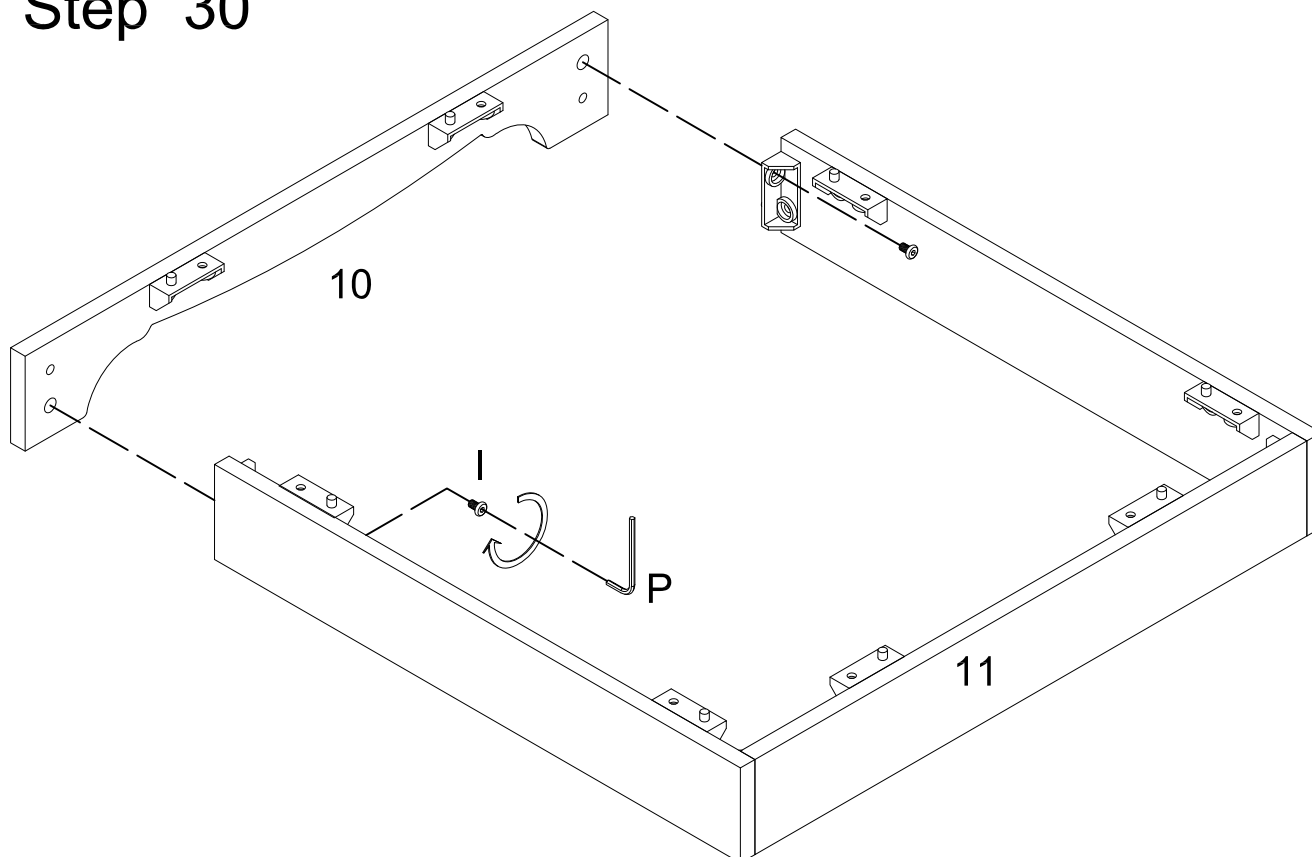


Step 31

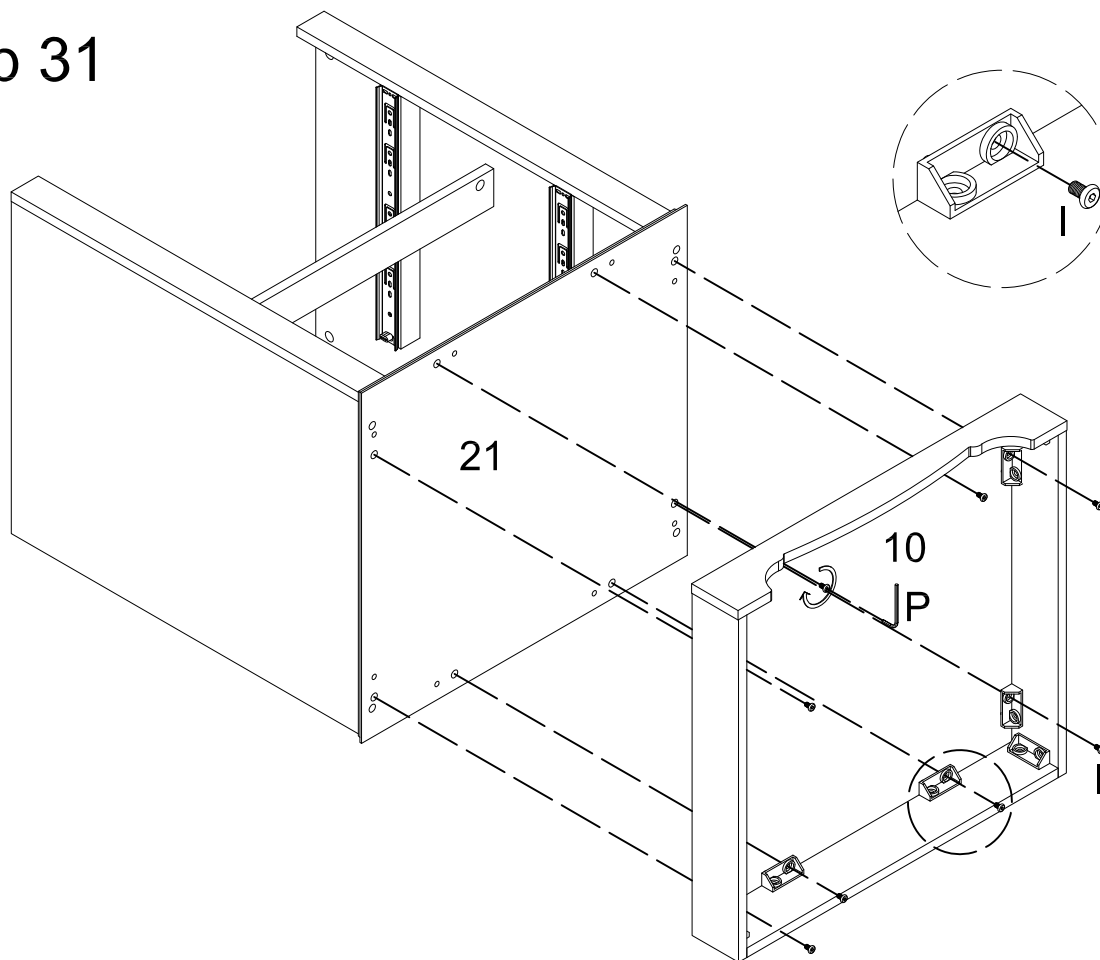



Step 32

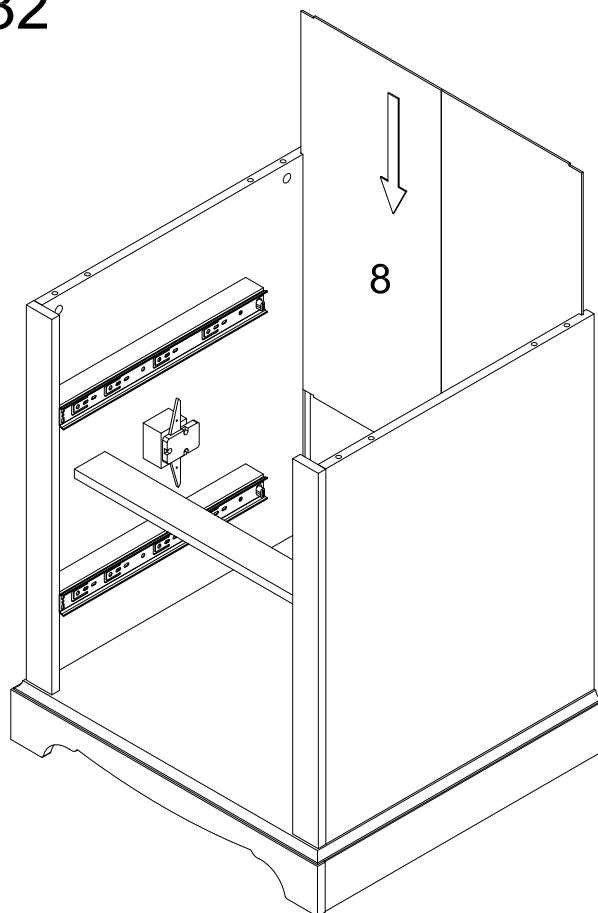


Step 33

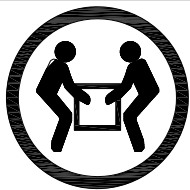

CAUTION: Heavy! You may need assistance with this step.

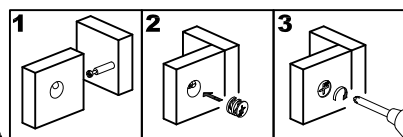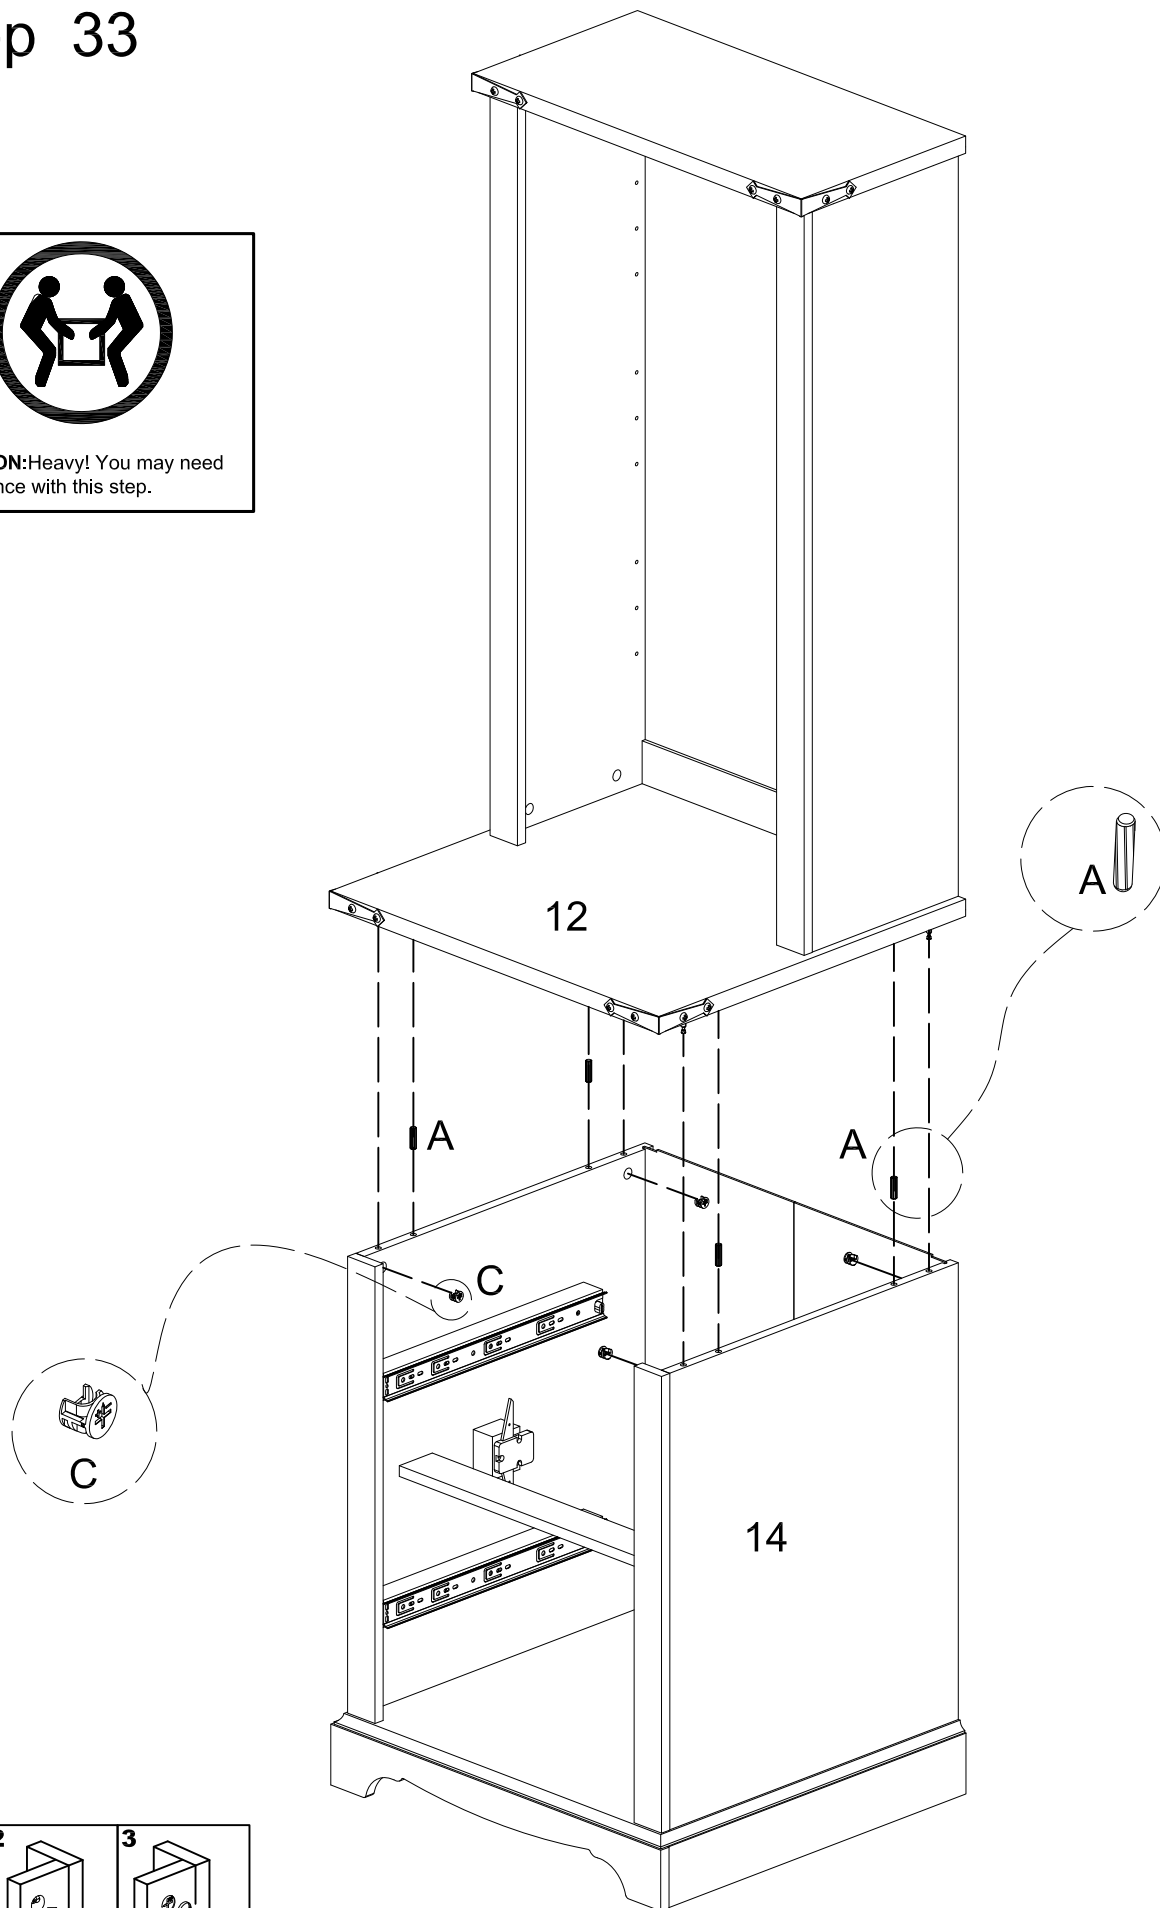

Step 34




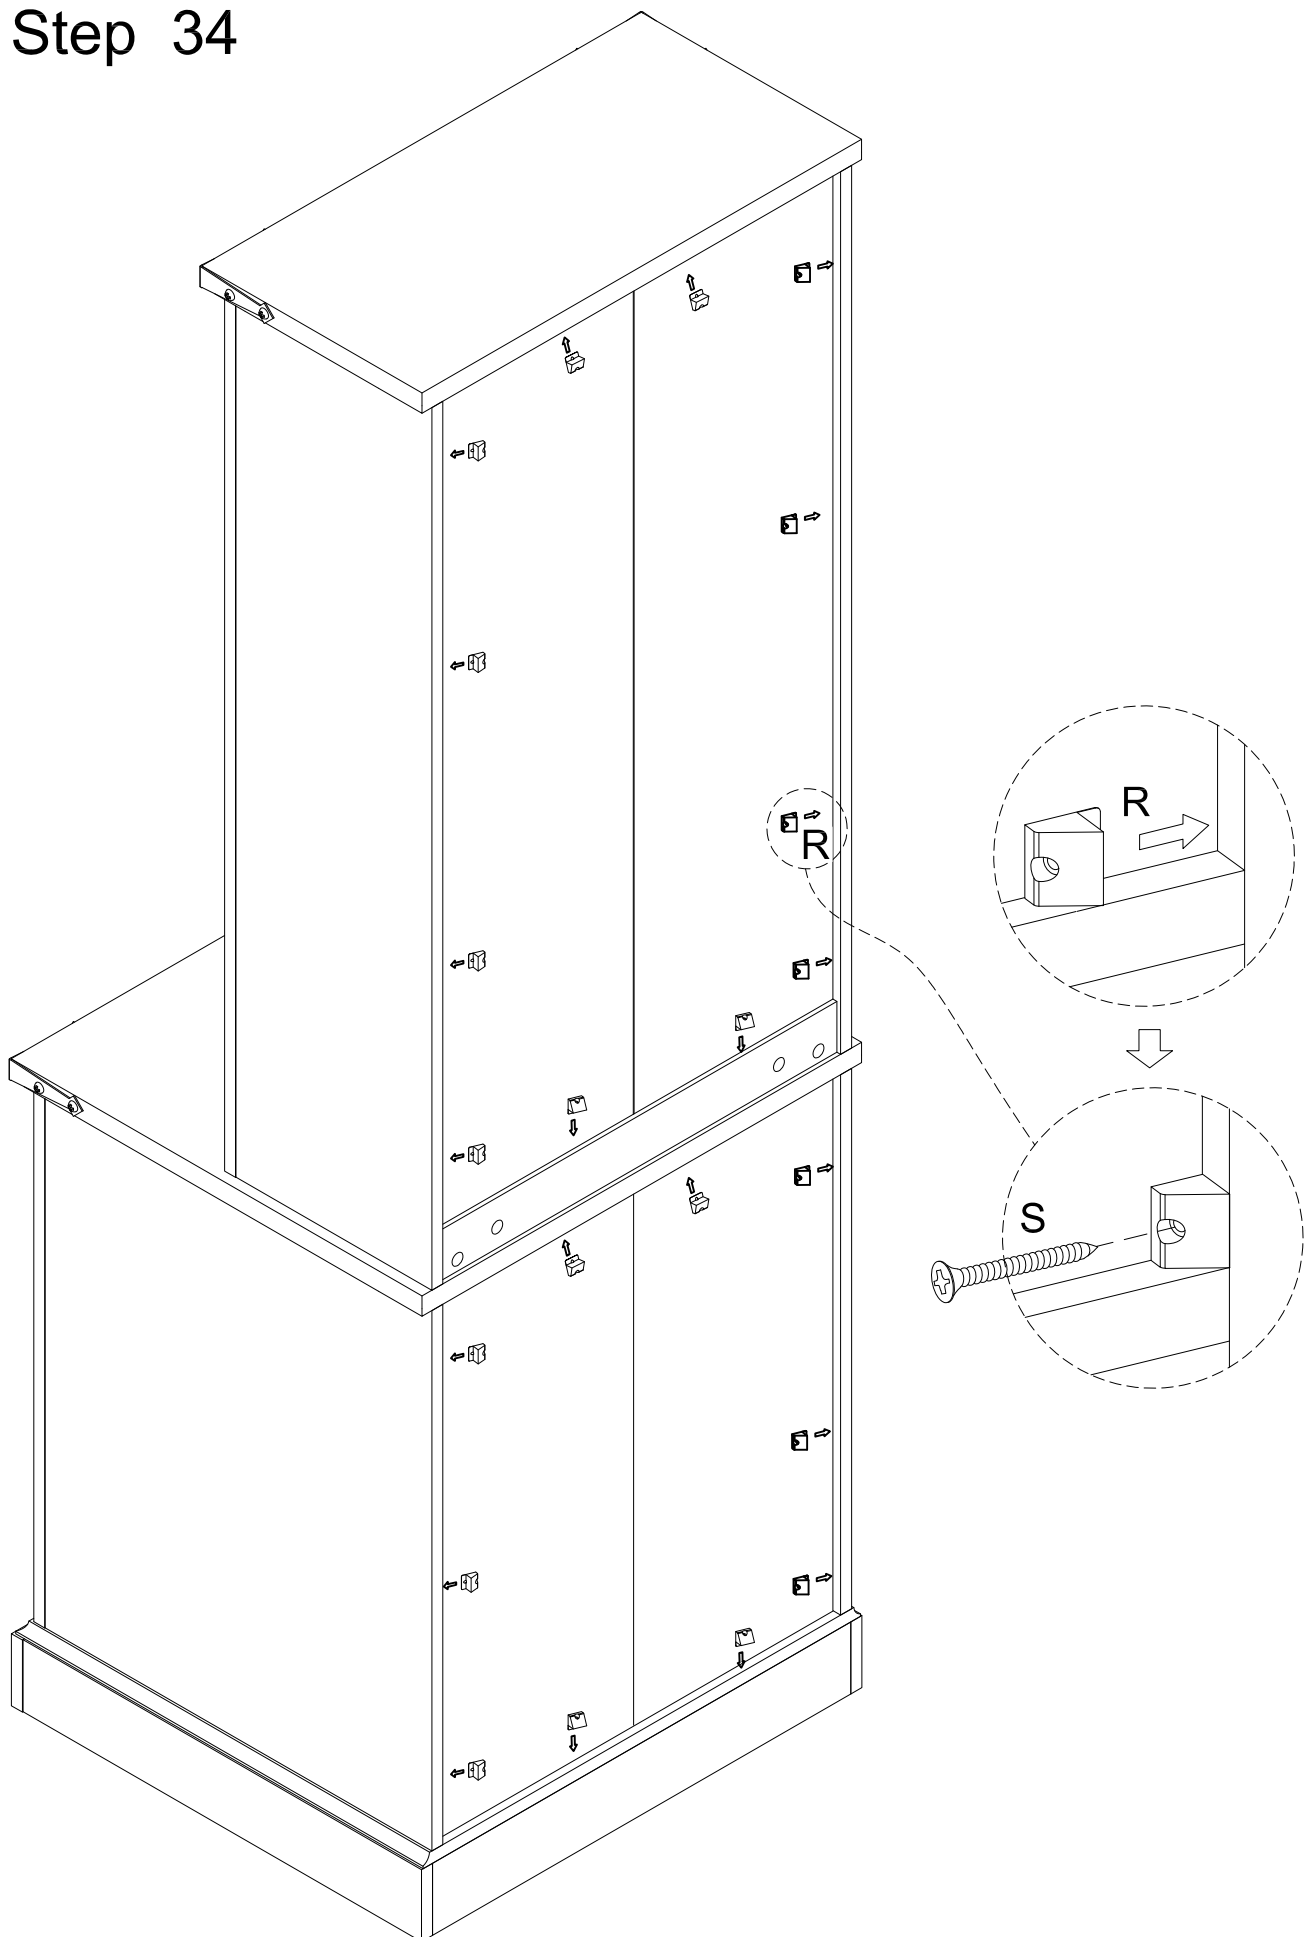


Step 35

Special attention


Lower drawer

15

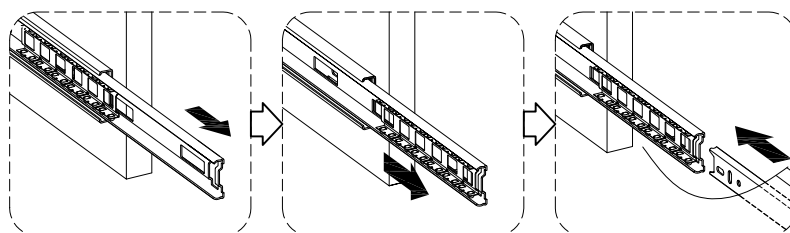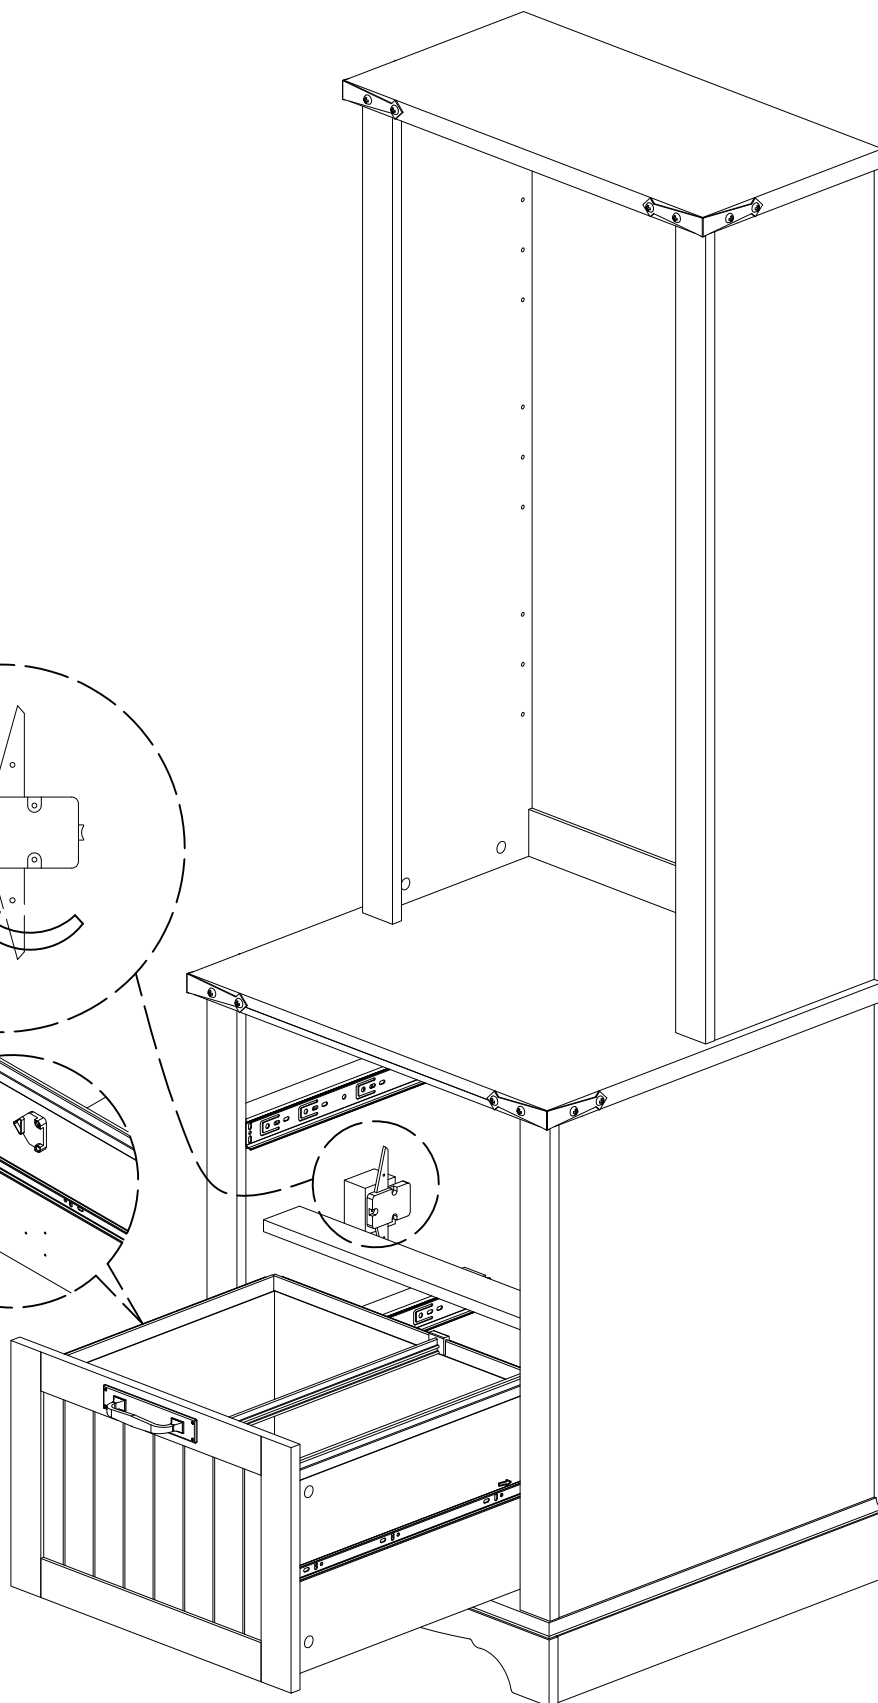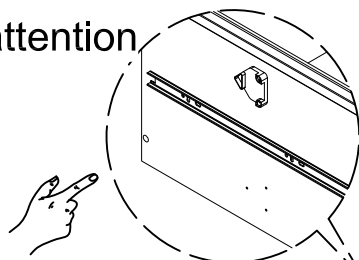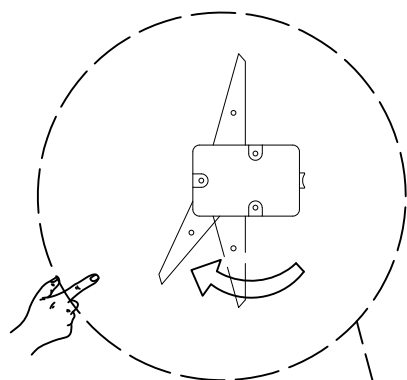


Step 36

Special attention

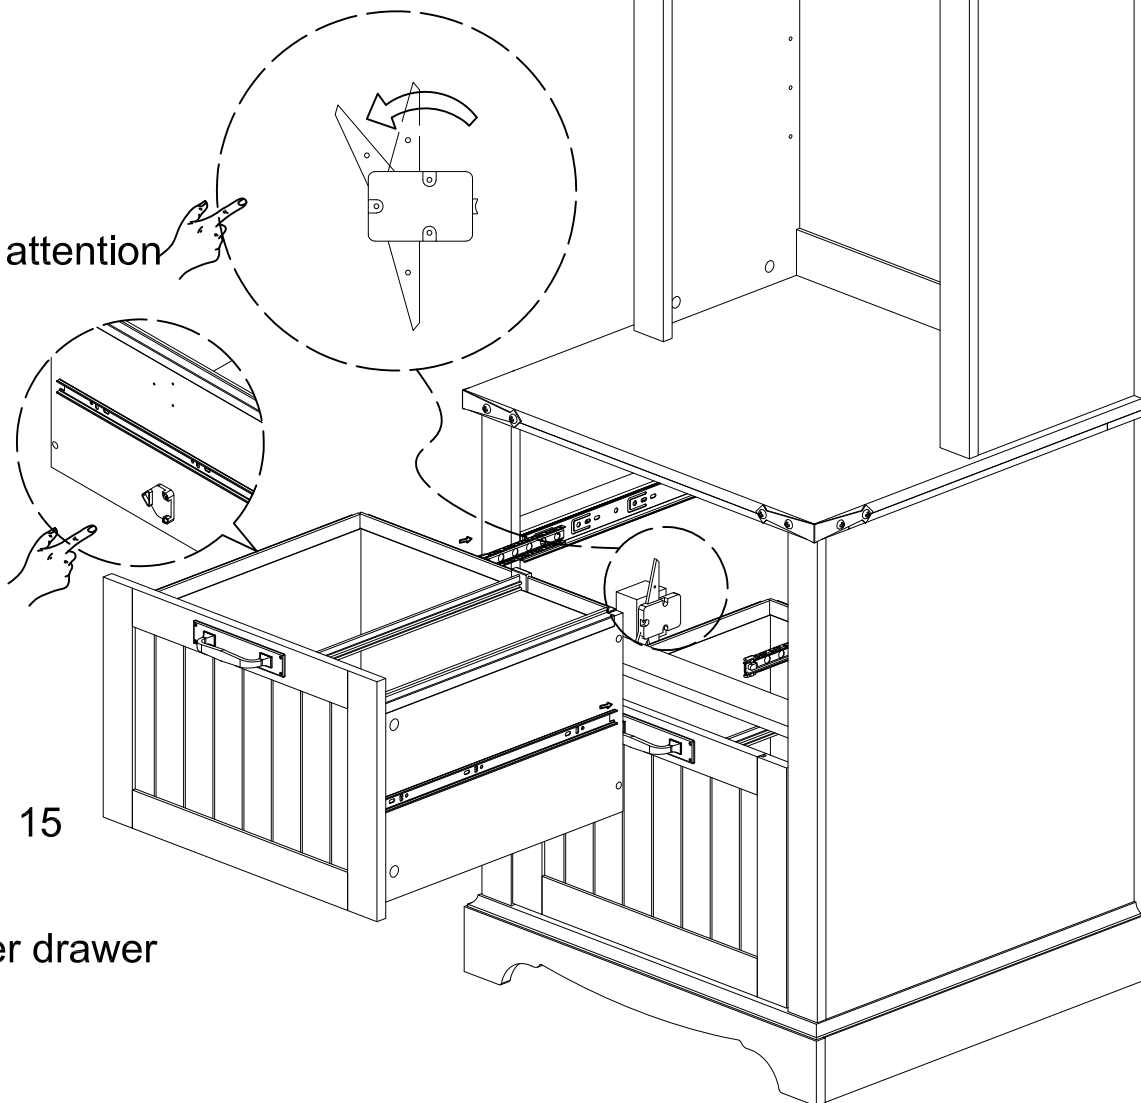


15

Upper drawer


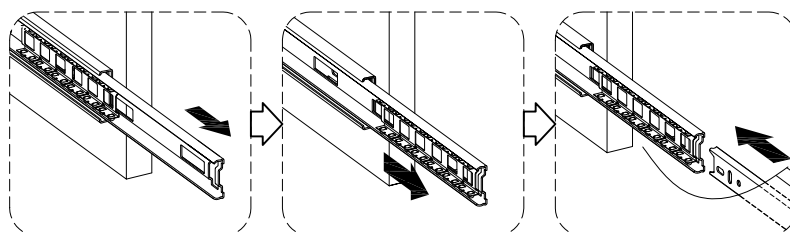


Step 37

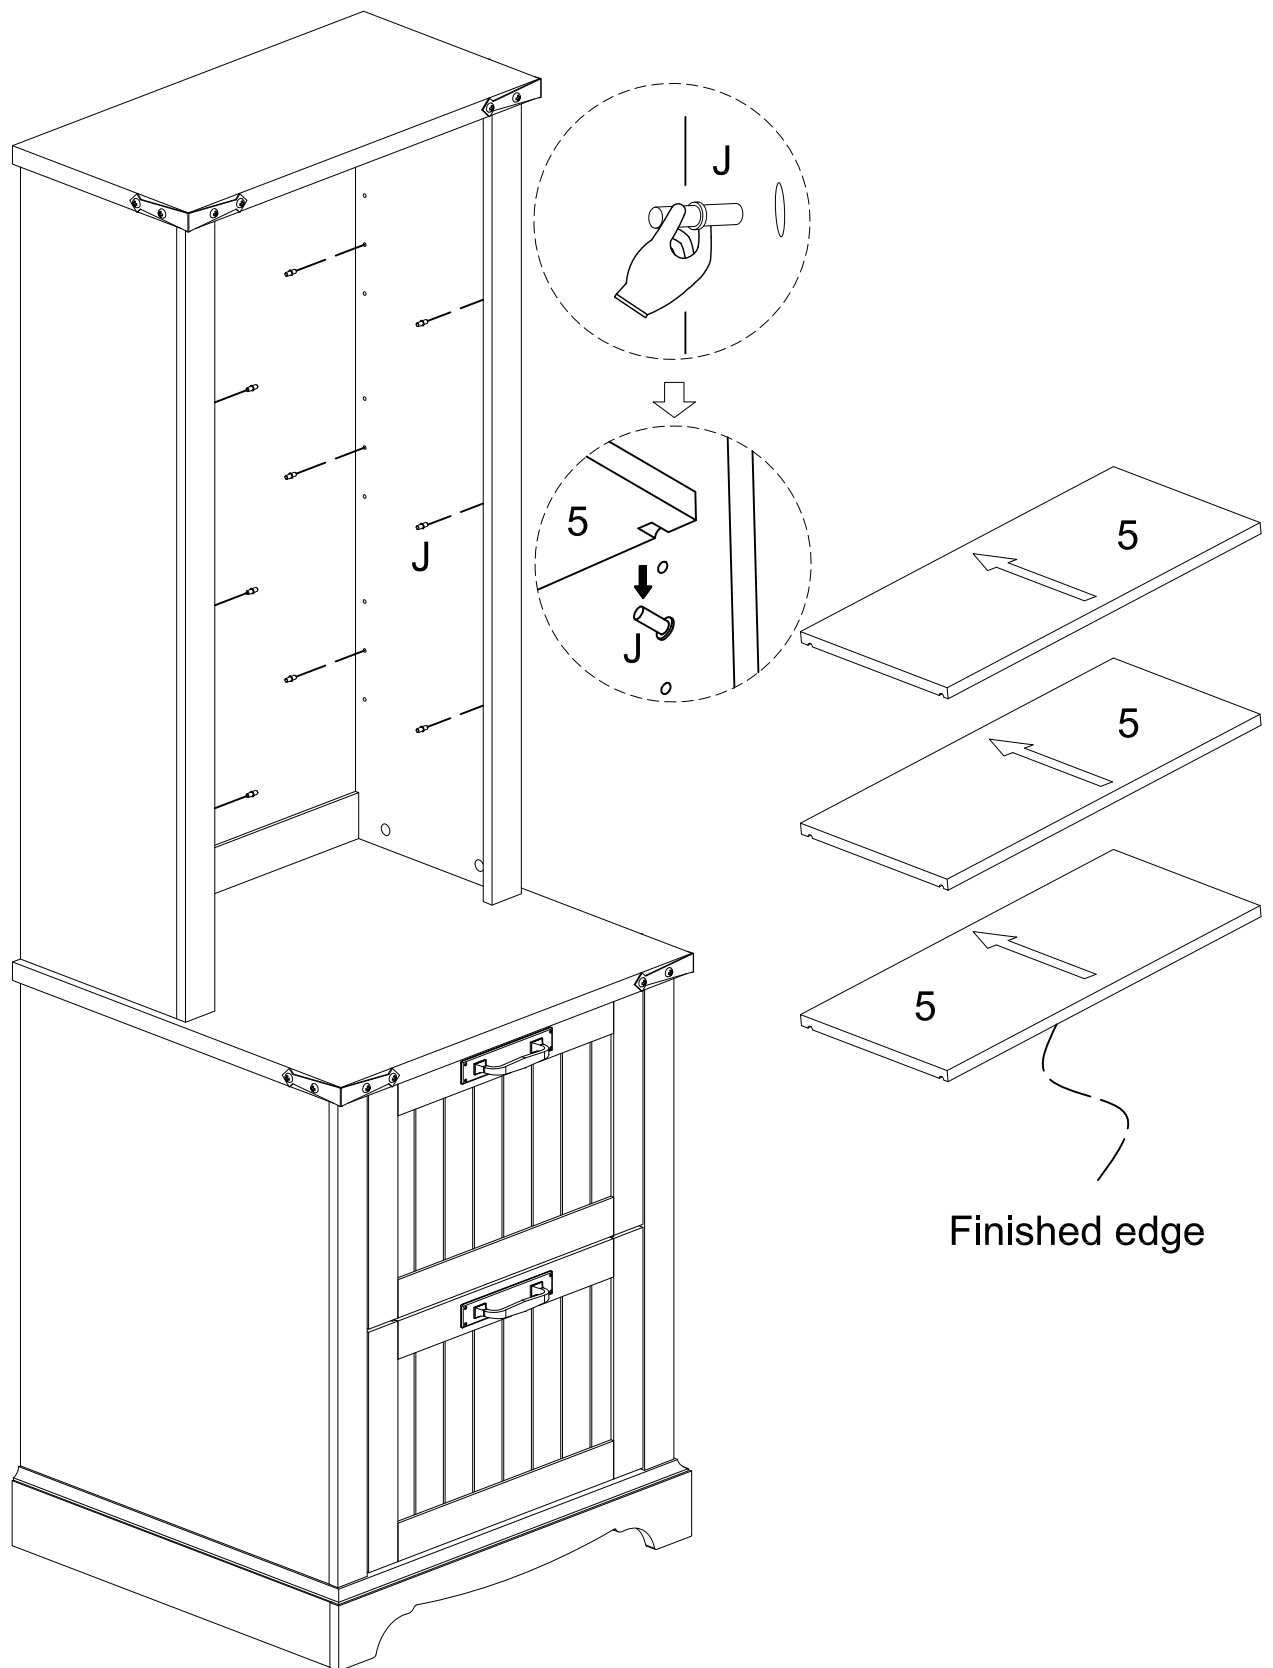


Step 38

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

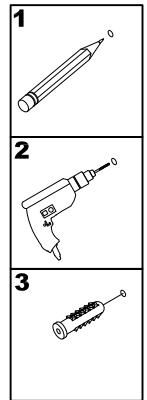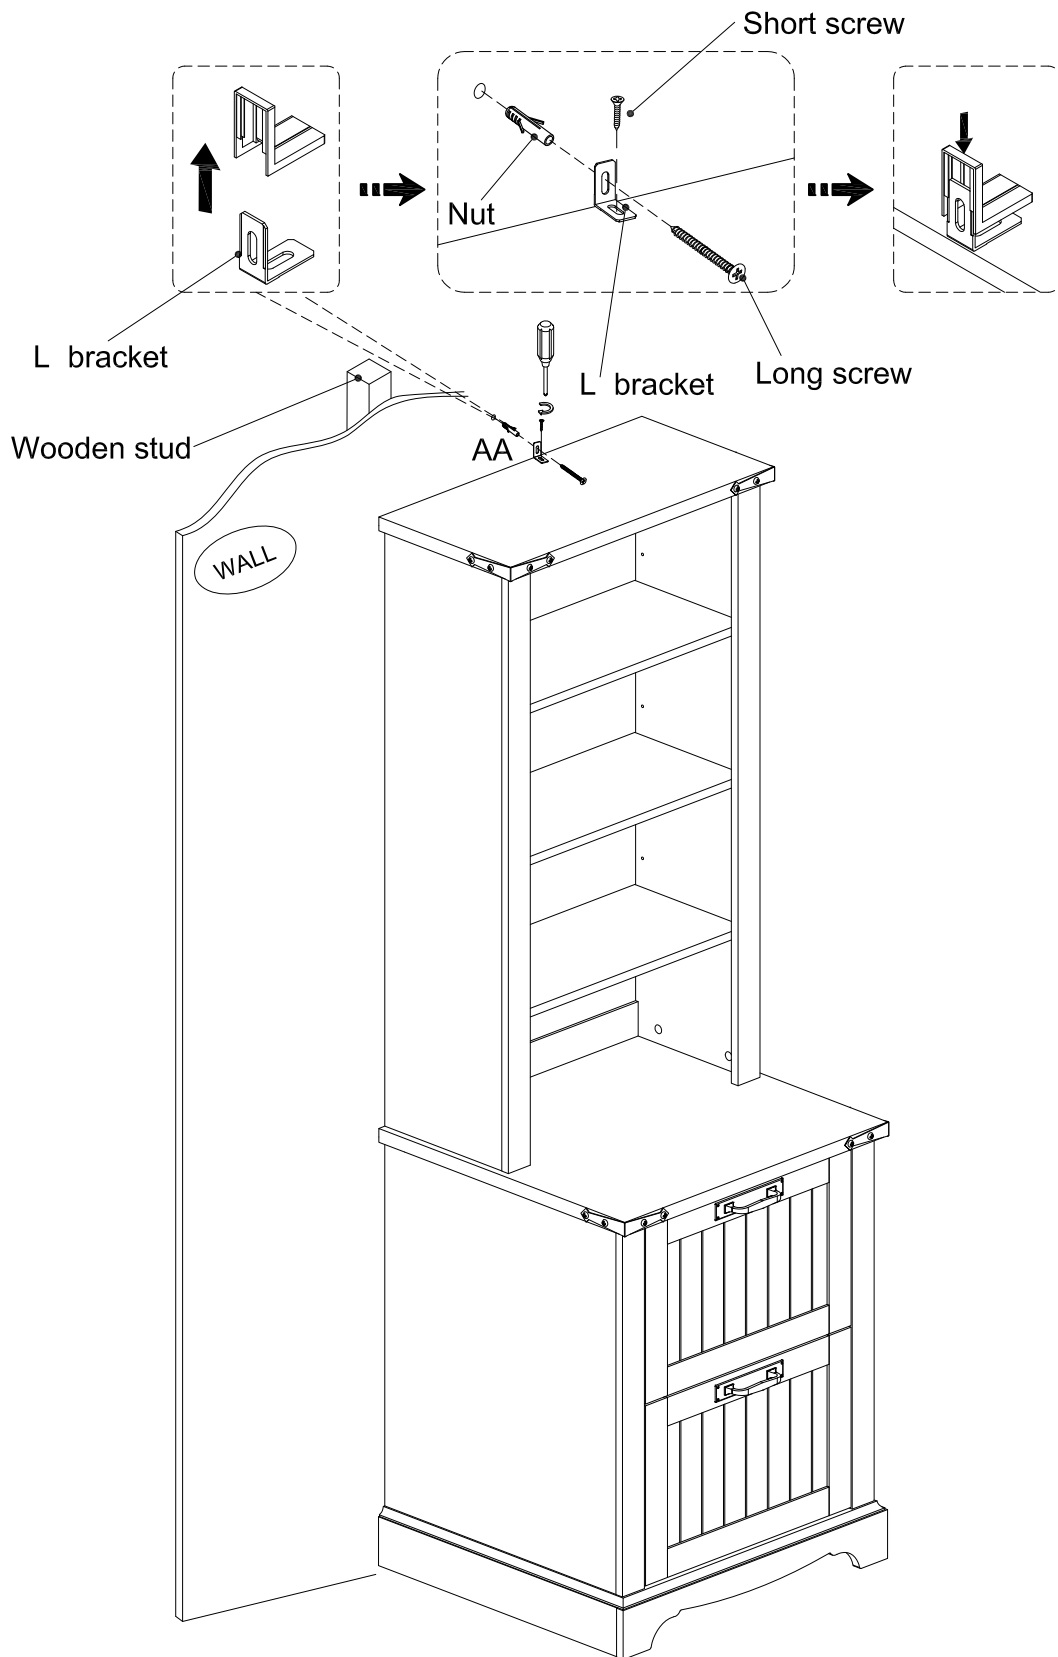

Step 39

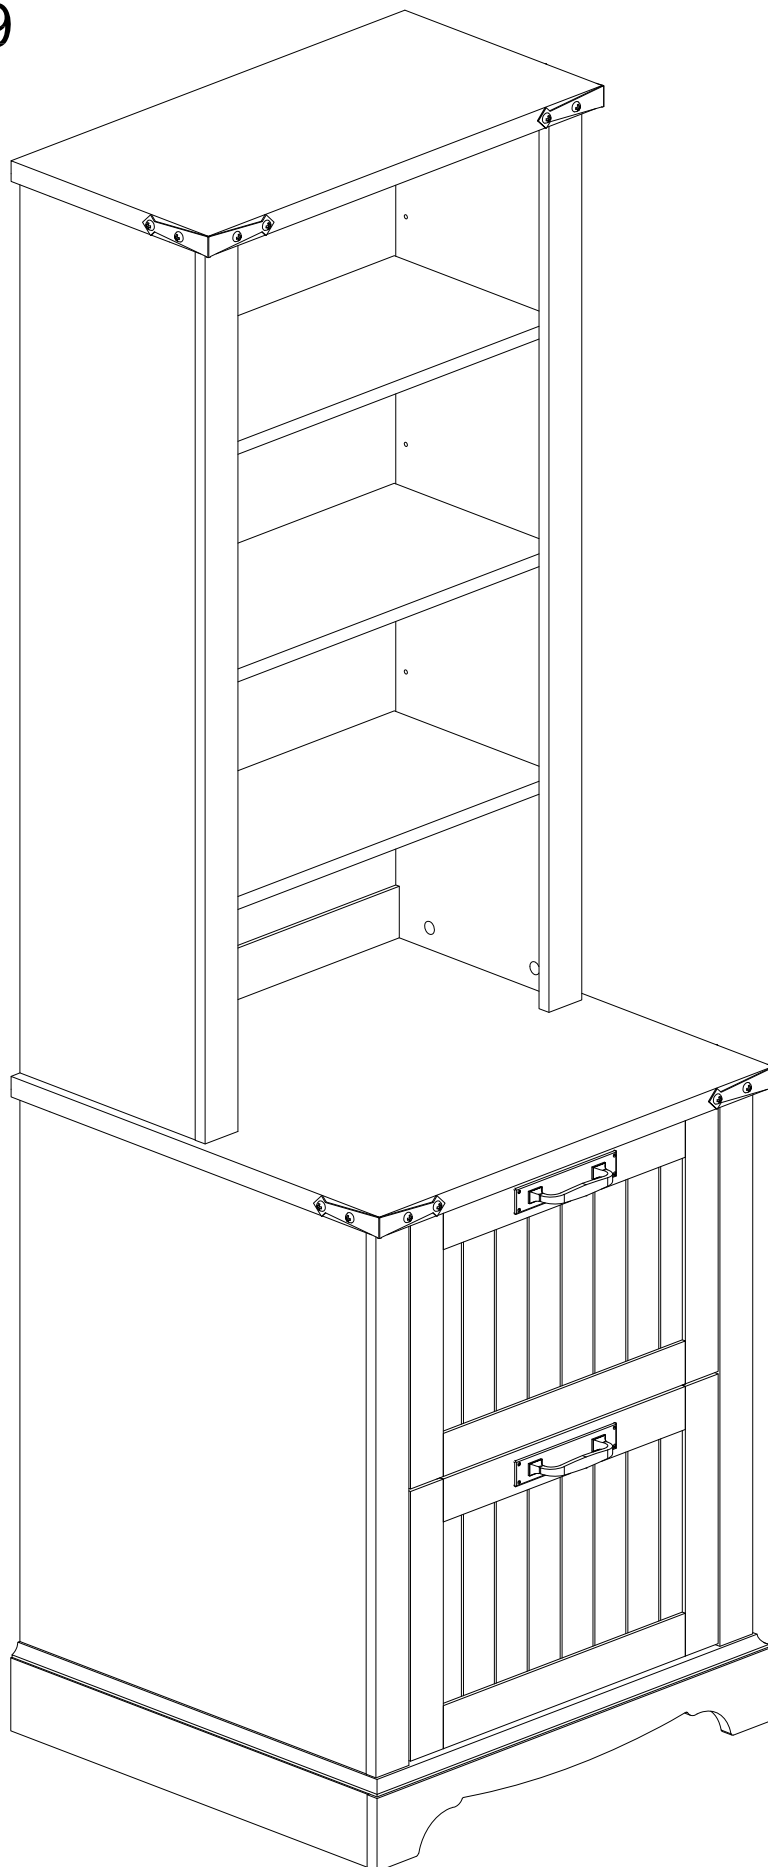

Final Assembly