



1.Place the seat legs on the bottom of the seat cushion, align them with the corresponding holes, insert the washers and screws and tighten them with a wrench.

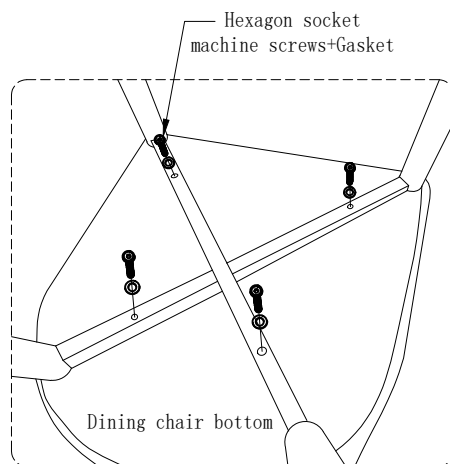

2. The installation is complete

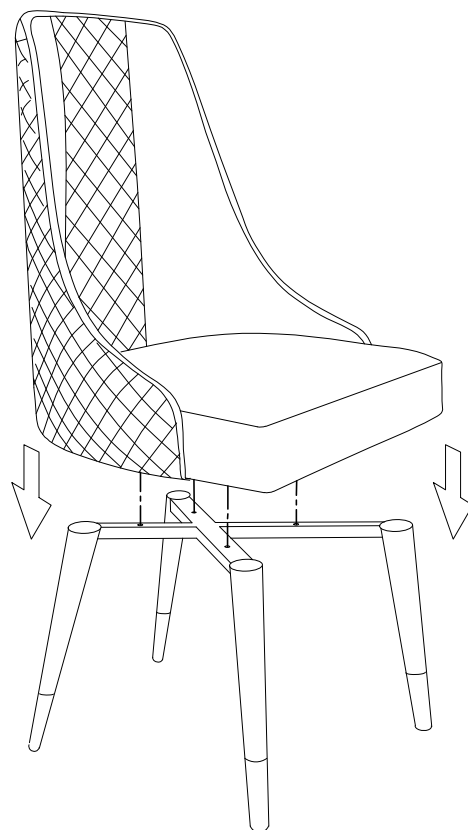

POVISON




## Installation instruction



CR039AEH/AEO Installation

The number of people needed for installation: 1

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Hexagon socket machine screws (M6*45mm)	4	1
B		Gasket (M6)	4	1
C		Allen wrench	1	0
D				
E				
F				
G				