

# Assembly Instructions

#### **Package Contents**

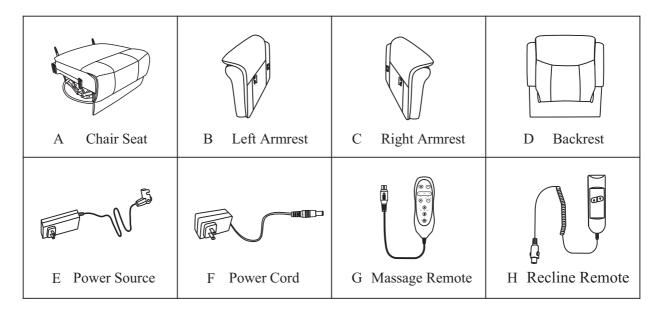


### Step 1

Take out a small package. This small package contains accessories E/F/G/H. If this small package is lost during transportation, please email us.

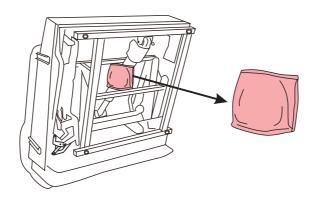


#### Step 2

Connect the Armrests (B&C) to the chair seat (A) by aligning the metal latchs (male brackets) and grooves (female brackets) and sliding the right/left armrest down to the bottom. Push down on the top of the armrest to lock the armrest into position. You will hear a click from each side of the armrest to ensure the back is locked properly.

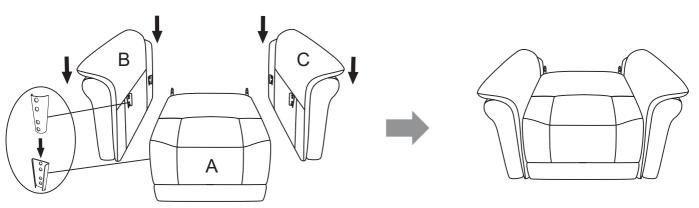


#### Step 3

Connect the chair backrest(D) to the chair seat(A) by aligning the metallatchs (male brackets) and grooves (female brackets) and sliding the backrest down to the bottom. Push down on the top of the back to lock the back into position. You will hear a click from each side of the backrest to ensure the back is locked properly.

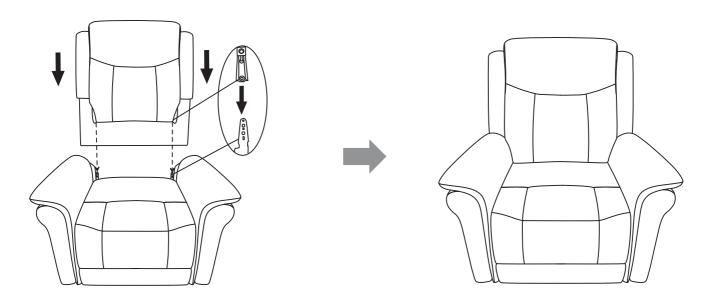

## **Instructions for Connecting Power**

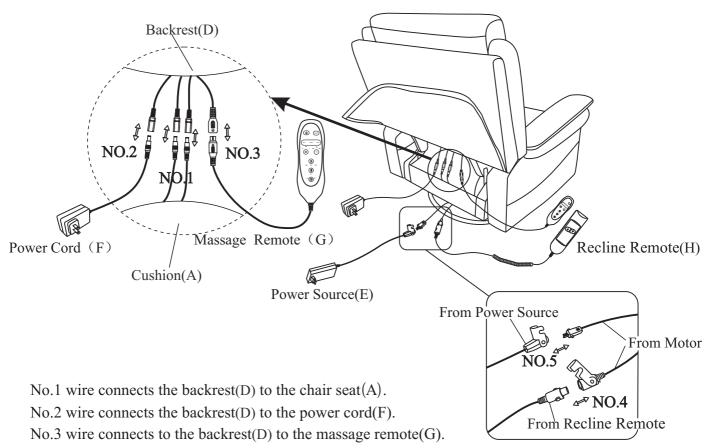

No.4 wire connects the motor's wire from the right armrest to the Recline Remote(H).

No.5 wire connects the motor's wire to the power source(E).