


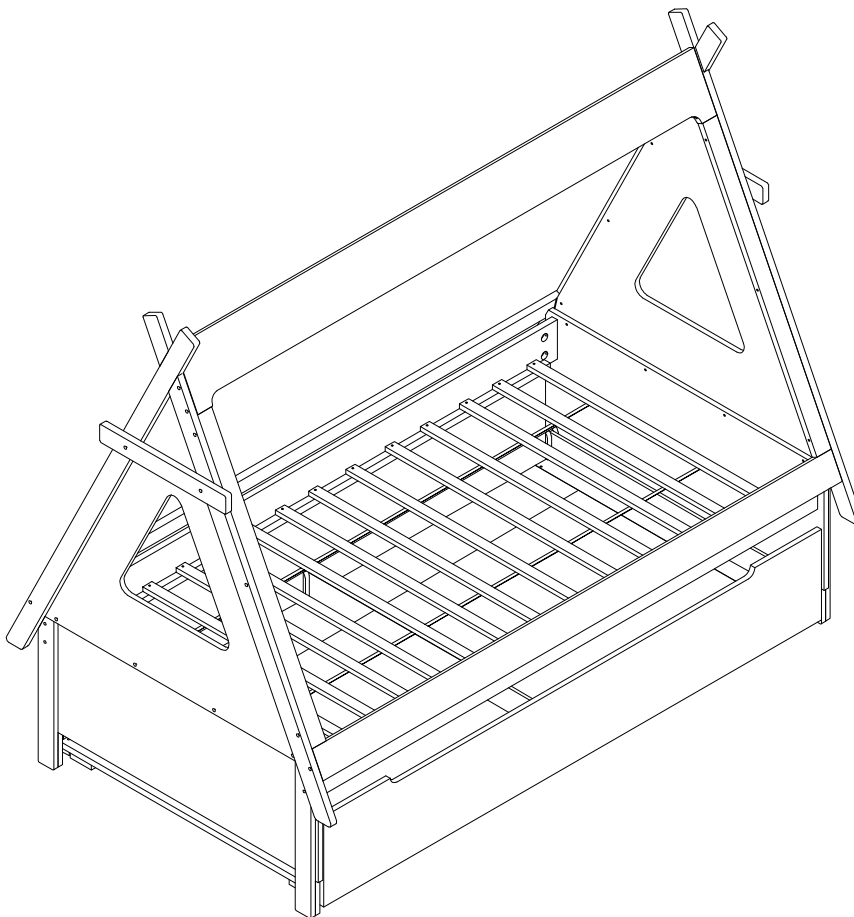












*** Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with parts list below.

*** Assemble product on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Read all instruction and study the drawings carefully before starting the assembly process.








IMPORTANT: Do not tighten bolts completely until all bolts are completely lined up and inserted into holes

PARTS LIST


NO.	DIAGRAM	PART NAME	Q'Ty
1		Left Headboard	1 pc
2		Right Headboard	1 pc
3		Side Rail	2 pcs
4		Triangle Panel	2 pcs
5		Crossbar (Bottom Left)	1 pc
6		Crossbar (Top Left)	1 pc
7		Crossbar (Bottom Right)	1 pc
8		Crossbar (Top Right)	1 pc
9		Front Crossbar	2 pcs
10		Front & Back Guadrail	2 pcs
11		Front Left & Right Guadrail	1 pc
12		Front Top Guadrail	1 pc
13		Completed Twin Slat (14pcs/1set)	1 sets

HARDWARE LIST








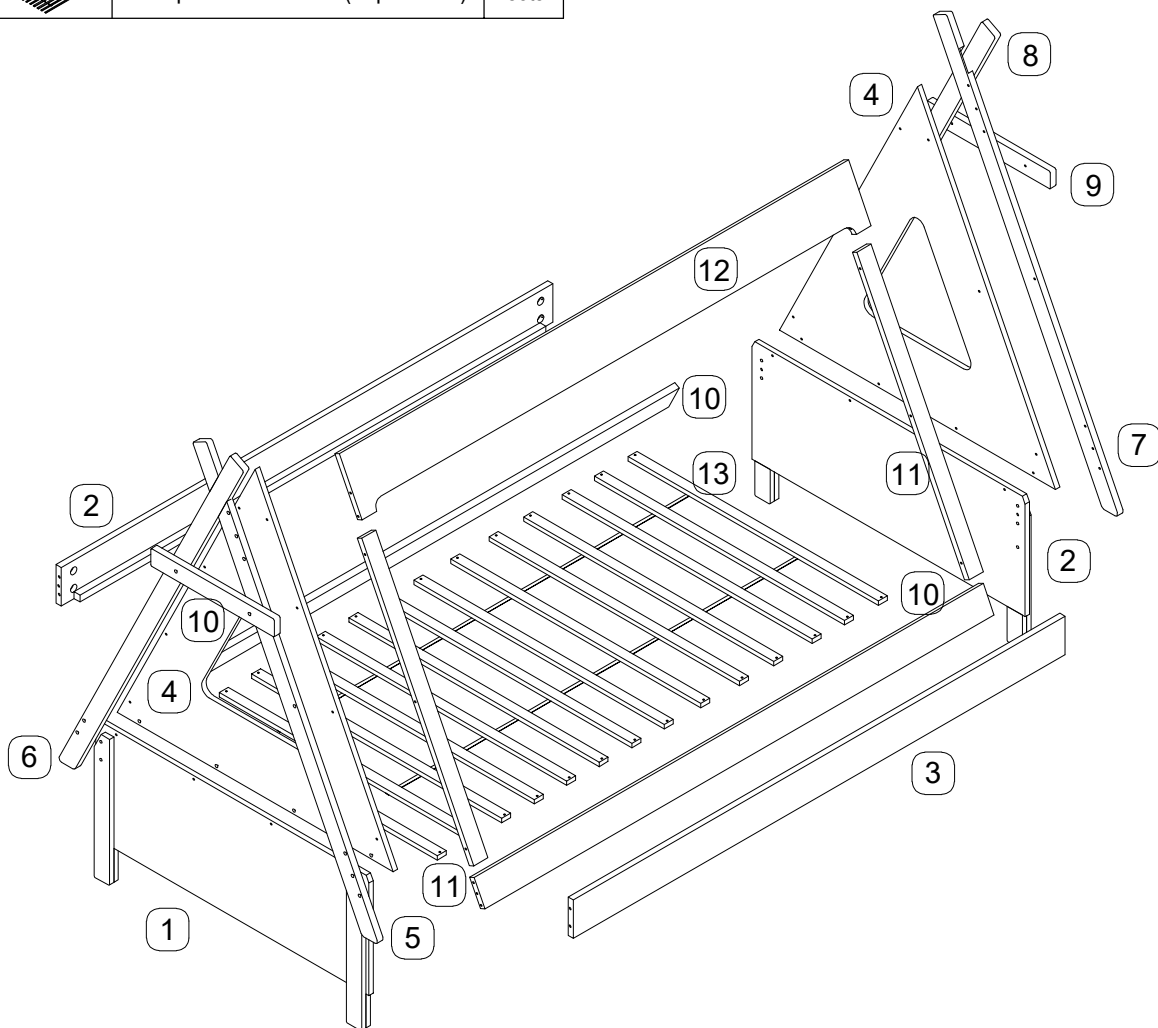











NO.	DIAGRAM	PART NAME	Q'Ty
A		Bolt: 6.3 x 80 (mm) Half Round Nut	8 sets
B		Screw 4 x 30 (mm)	28 pcs
C		Long Screw 6.3 x 30 (mm)	42 pcs
D		Wood Dowel 10 x 40 (mm)	8 pcs
E		Allen Key (M4)	1 pc

TOOL REQUIRED:

Cross-head Screwdriver (Not provided)







#BD01287 is packed in 2 cases

Carton	Disignation	Part		Hardware
#BD01287T1	Headboard x 1pc	#1		
	Headboard x 1pc	#2		
	Triangle Panel	#4		
	Completed Twin Slat (14pcs/1set)	#13		
#BD01287T2	Side Rail	#5		<div>  Bolt: 6.3 x 80 (mm)  Half Round Nut  Screw 4 x 30 (mm)  Long Screw 6.3 x 30 (mm)  Wood Dowel 10 x 40 (mm)  Allen Key (M4) </div>
	Crossbar (Bottom Left)	#6		
	Crossbar (Top Left)	#7		
	Crossbar (Bottom Right)	#8		
	Crossbar (Top Right)	#9		
	Front Crossbar	#10		
	Front & Back Guadrail	#11		
	Front Left & Right Guadrail	#12		
	Front Top Guadrail	#13		

STEP 1: SIDE RAIL ASSEMBLY

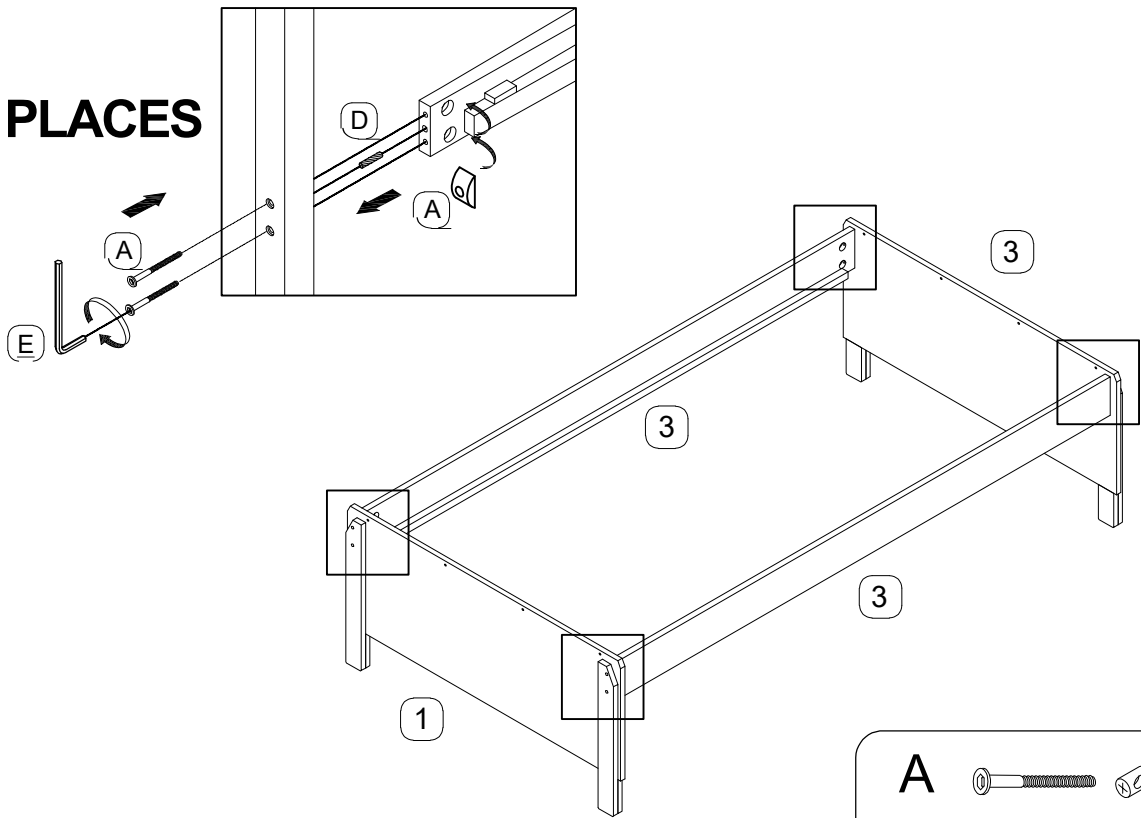
4 PLACES




A			8 Set
D			4 pcs


STEP 2: TRIANGLE PANEL ASSEMBLY

2 PLACES

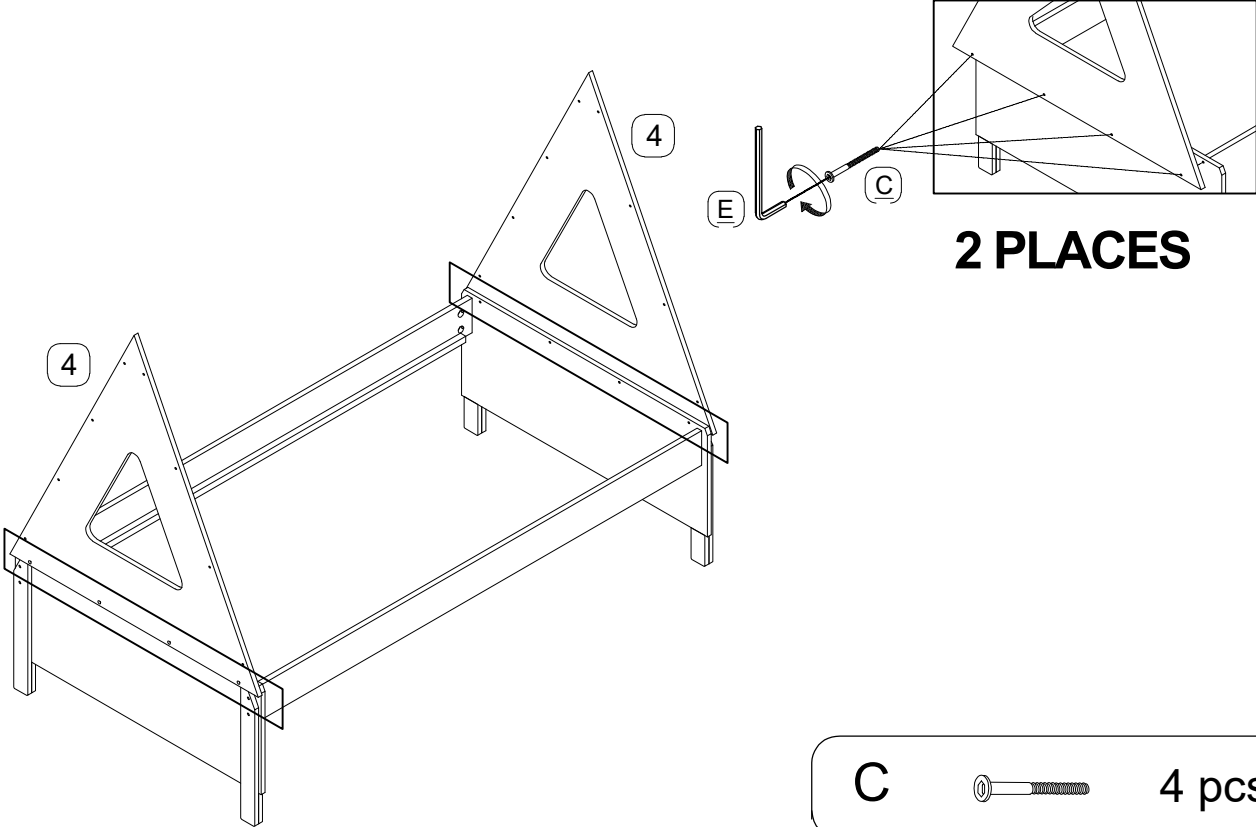


C			4 pcs
---	---	--	-------


STEP 3: CROSSBAR ASSEMBLY

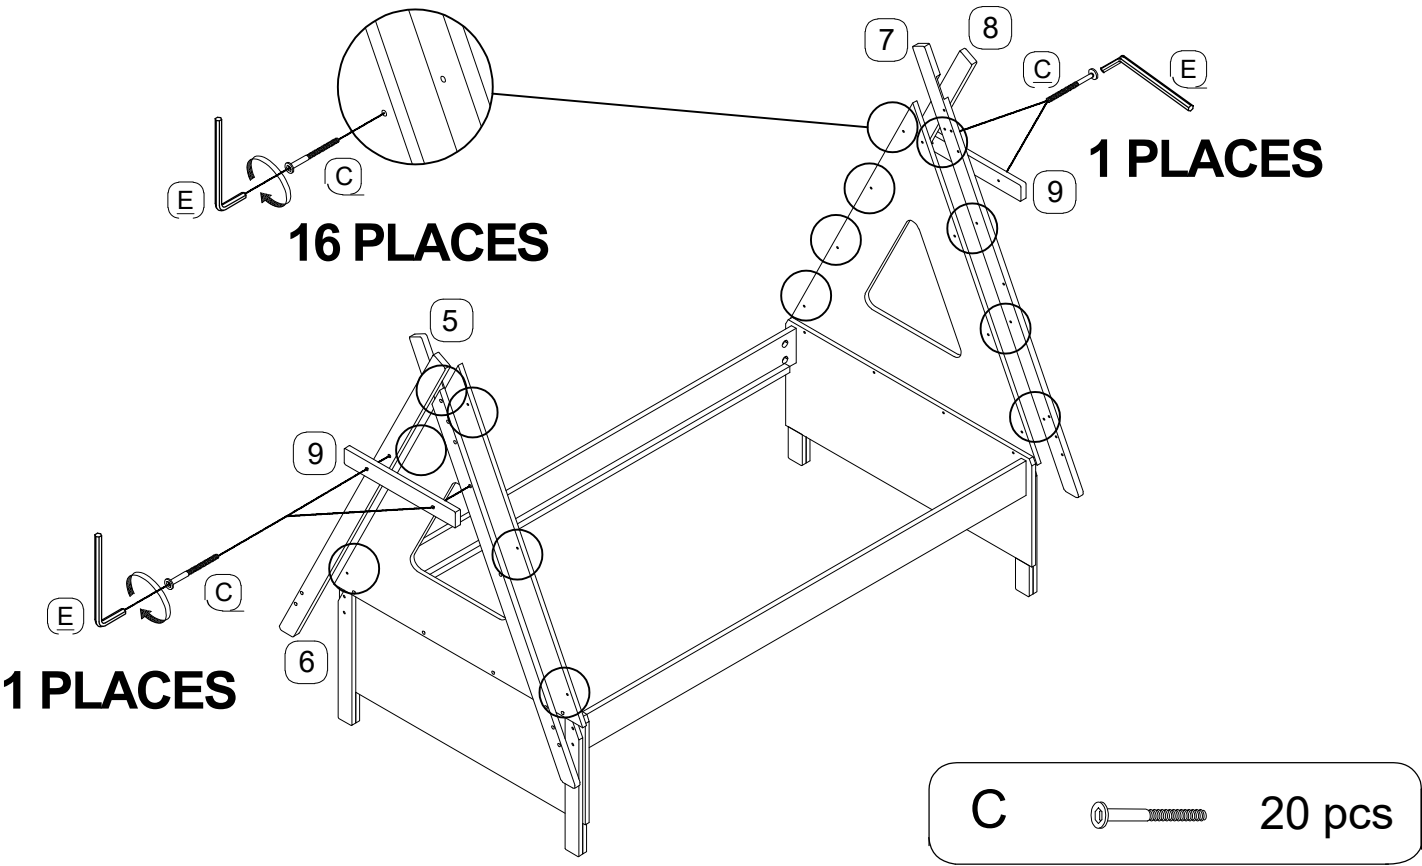


STEP 4: BOTTOM RAILS ASSEMBLY

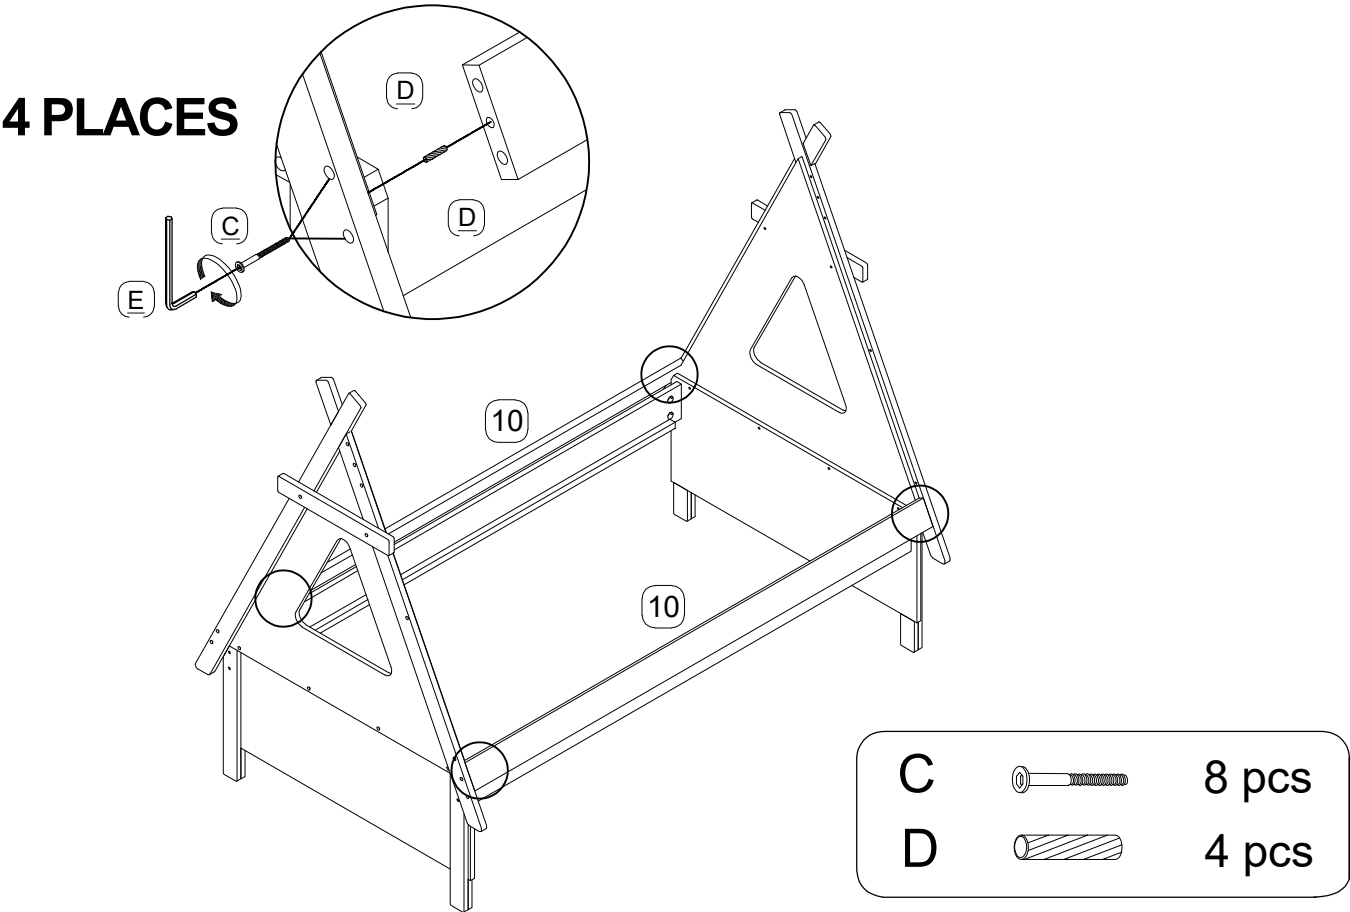


STEP 5: BACK GUARDRAIL ASSEMBLY

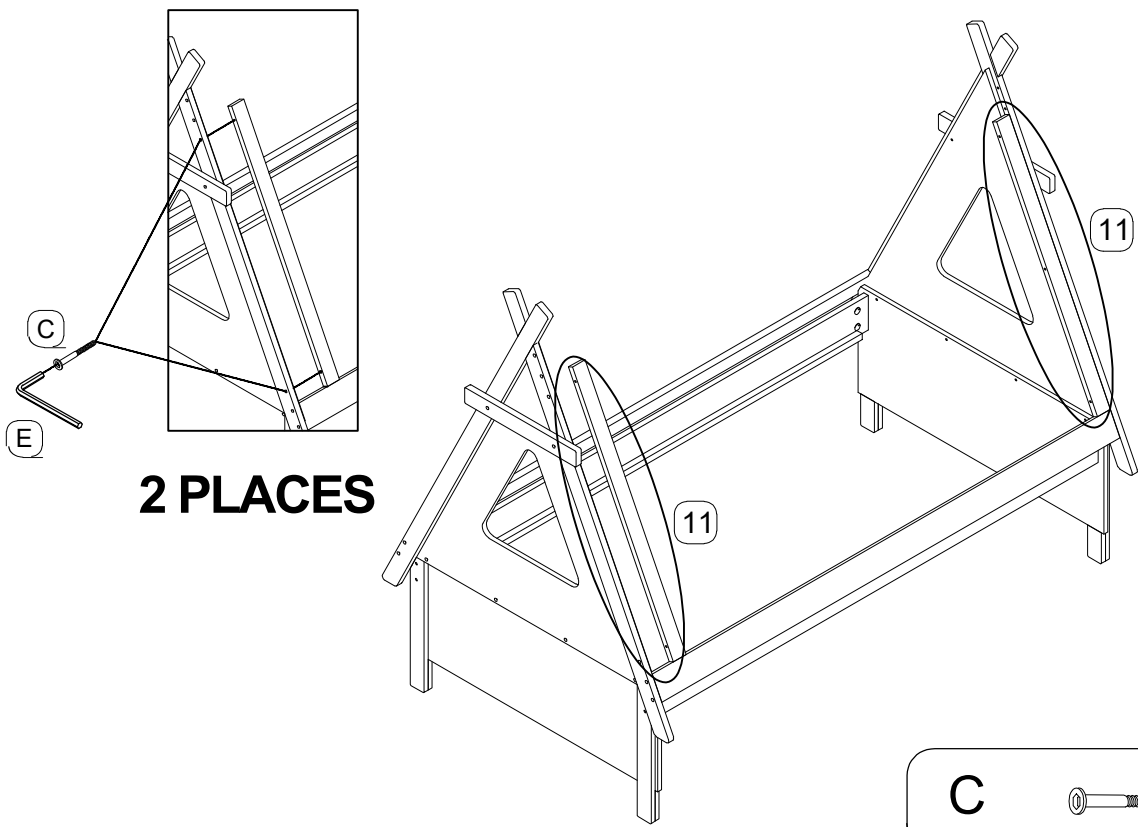


STEP 6: FRONT GUARDRAIL ASSEMBLY

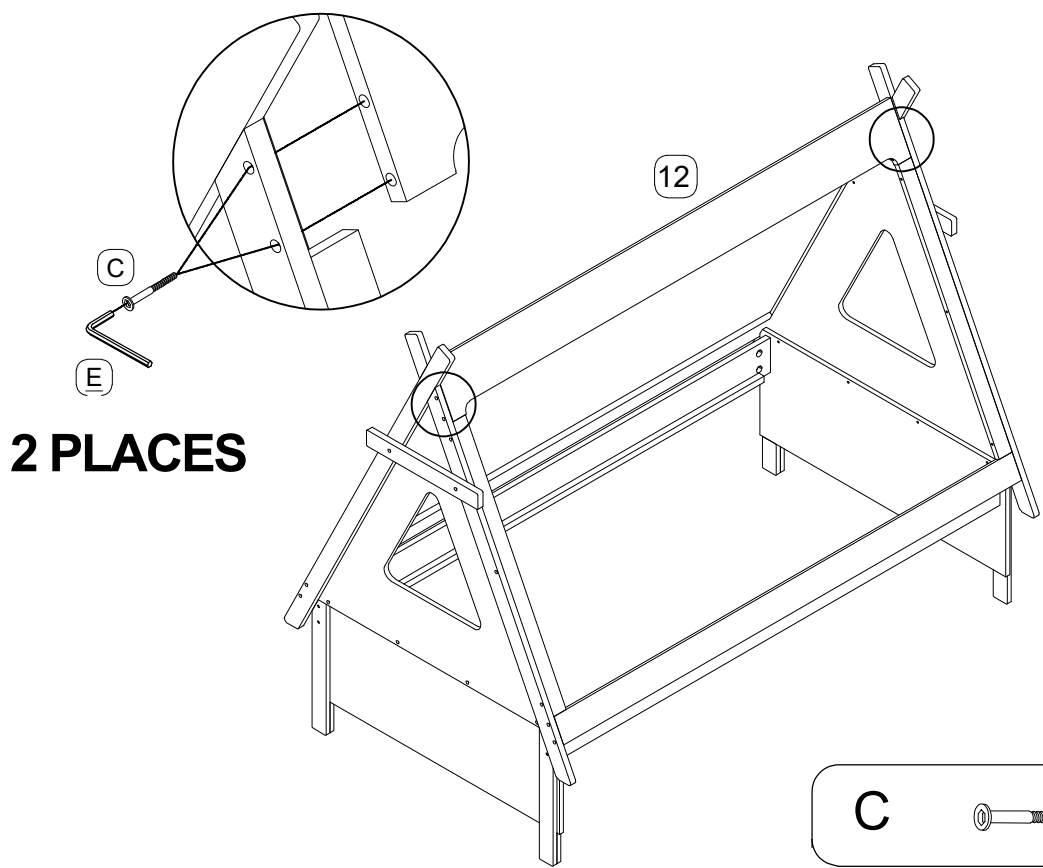

STEP 7: SLATS ASSEMBLY

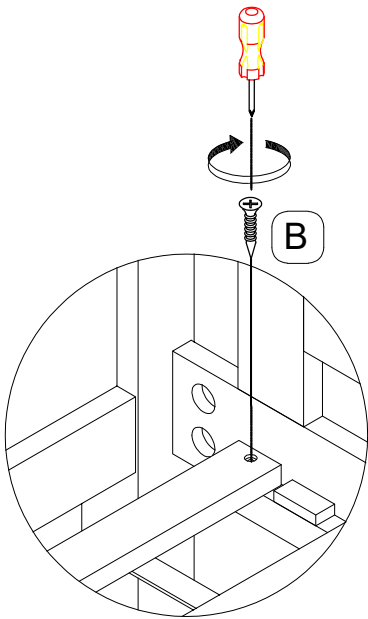

28 PLACES

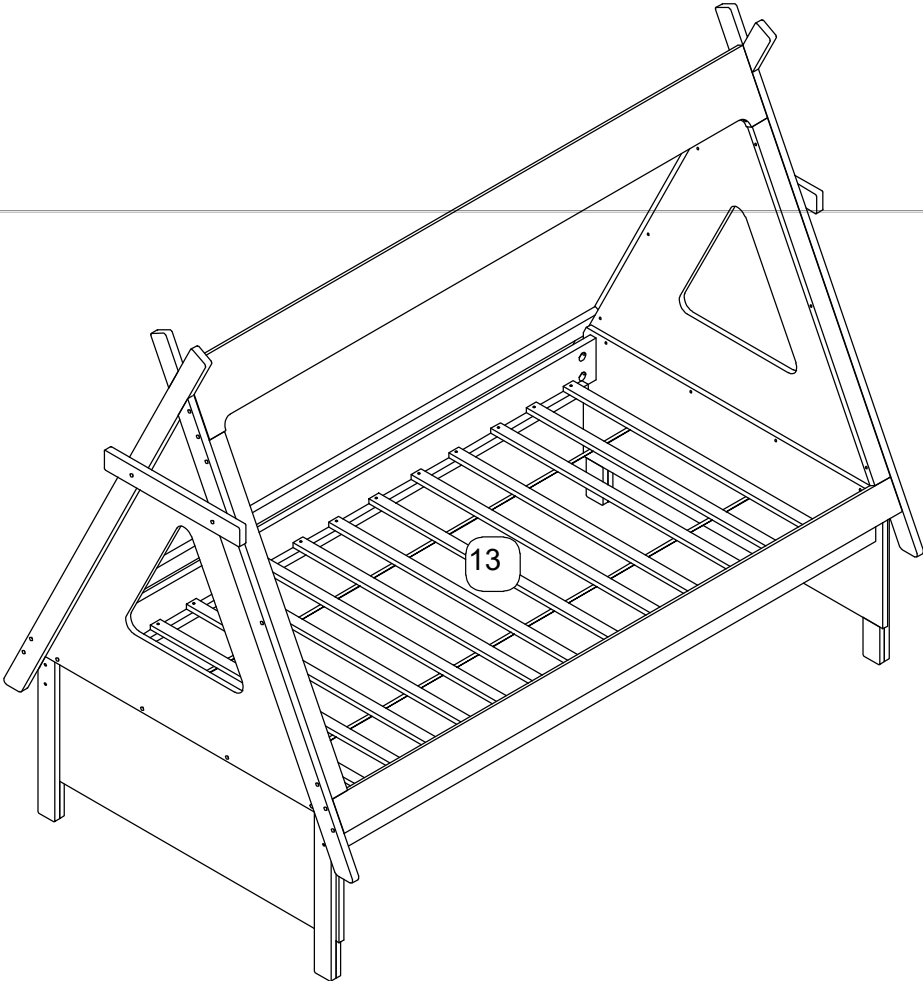

B  28pcs

ASSEMBLY COMPLETE