




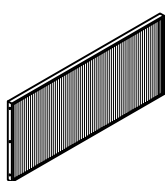
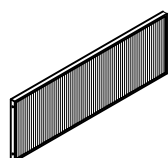
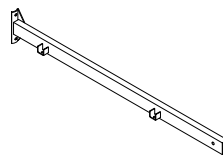
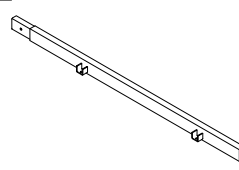
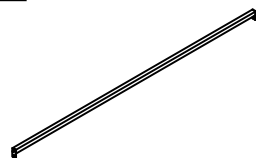
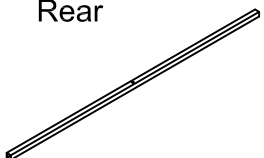
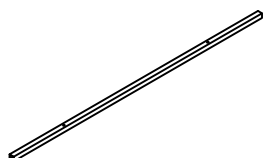
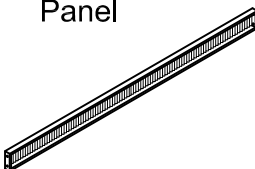
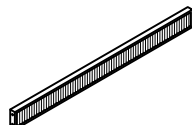








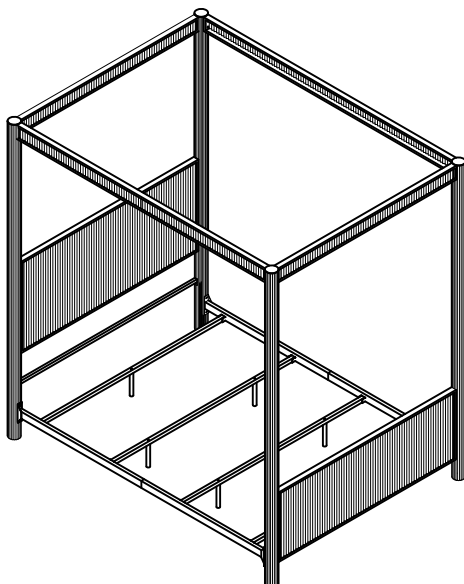


# ASSEMBLY INSTRUCTIONS

## METAL QUEEN BED

<b>A</b> Headboard Post (Left)  1pc	<b>B</b> Headboard Post (Right)  1pc	<b>C</b> Footboard Post (Left)  1pc	<b>D</b> Footboard Post (Right)  1pc	<b>E</b> Support Leg  6pcs
<b>F</b> Headboard  1pc	<b>G</b> Footboard  1pc	<b>H</b> Side Rail - Front  2pcs	<b>I</b> Side Rail - Rear  2pcs	<b>J</b> Bar  1pc
<b>K</b> Slat - Front / Rear  2pcs	<b>L</b> Slat - Center  2pcs	<b>M</b> Long Canopy Panel  2pcs	<b>N</b> Short Canopy Panel  2pcs	<b>O</b> Bolt $\phi 1/4" \times 3/4"$  20pcs
<b>P</b> Bolt $\phi 1/4" \times 1-1/8"$  26pcs	<b>Q</b> Bolt $\phi 1/4" \times 1-3/4"$  6pcs	<b>R</b> Bolt $\phi 1/4" \times 3-6/8"$  4pcs	<b>S</b> Flat Washer $\phi 1/4" \times 5/8"$  56pcs	<b>T</b> Nut $\phi 1/4"$  4pcs
<b>U</b> Allen Key 4 x 22 x 60mm  1pc	<b>V</b> Wrench 11.3mm  1pc			




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

### Note:


Do not fully tighten all bolts until the assembly is completed. This will help all parts to be assembled properly.

**Two people are needed for assembly.**

- 1** Attach the Headboard Post (A & B) to the Bar (J) using Bolt (O) and Flat Washer (S) with the Allen Key (U).

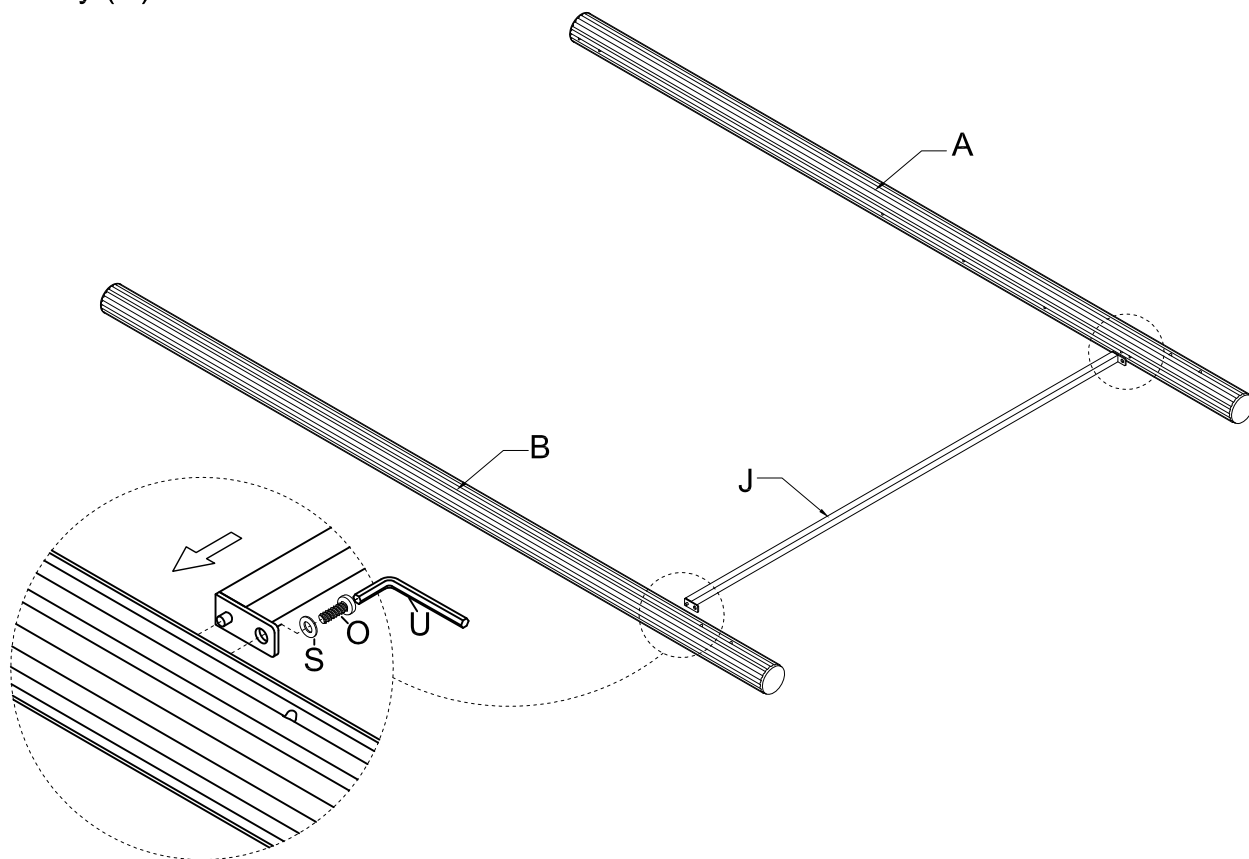


- 2** Attach the Headboard Post (A & B) to the Headboard (F) and the Short Canopy Panel (N) using Bolt (P) and Flat Washer (S) with the Allen Key (U).

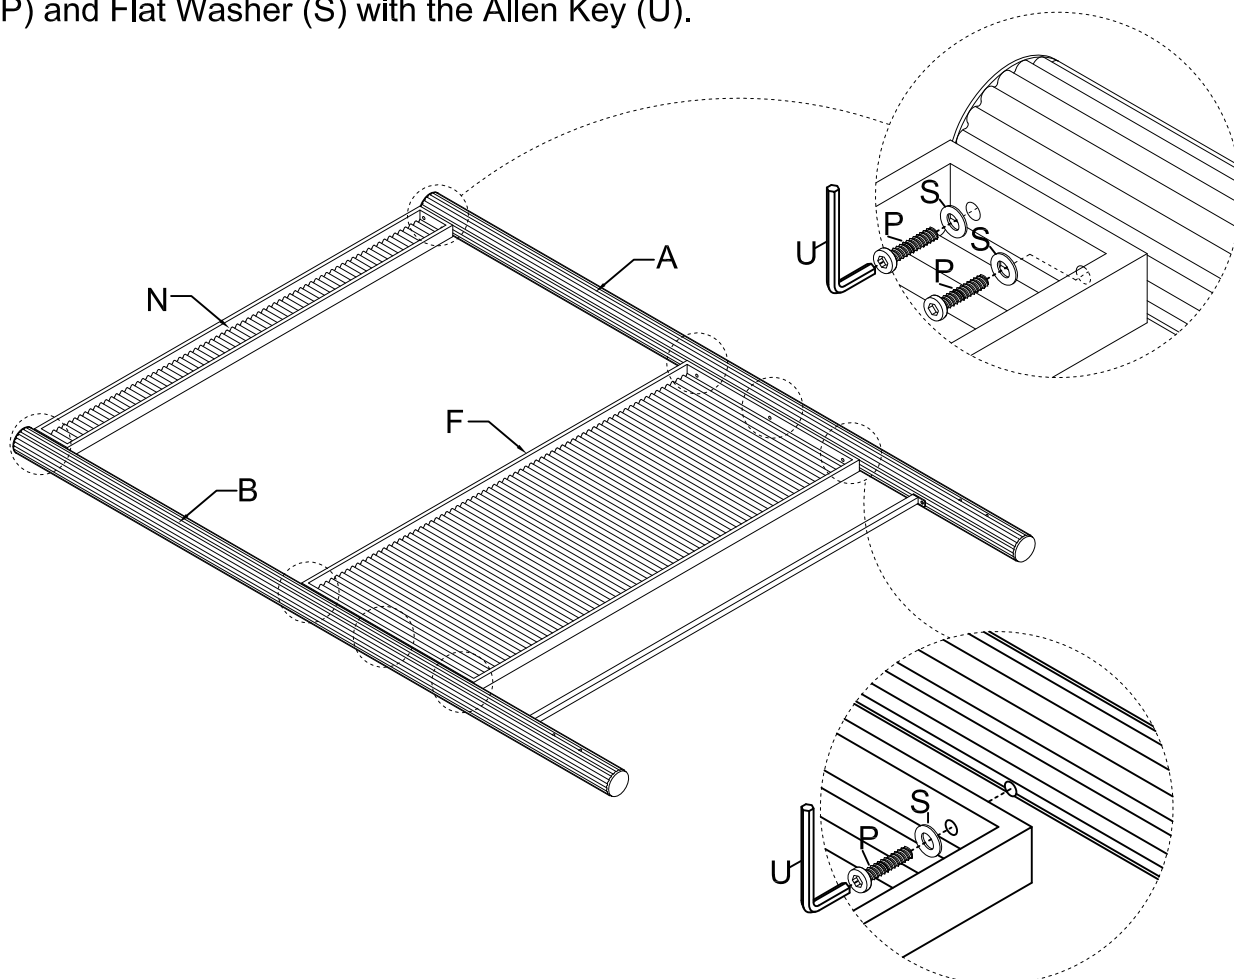


3

Attach the Footboard Post (C & D) to the Footboard (G) and the Short Canopy Panel (N) using Bolt (P) and Flat Washer (S) with the Allen Key (U).

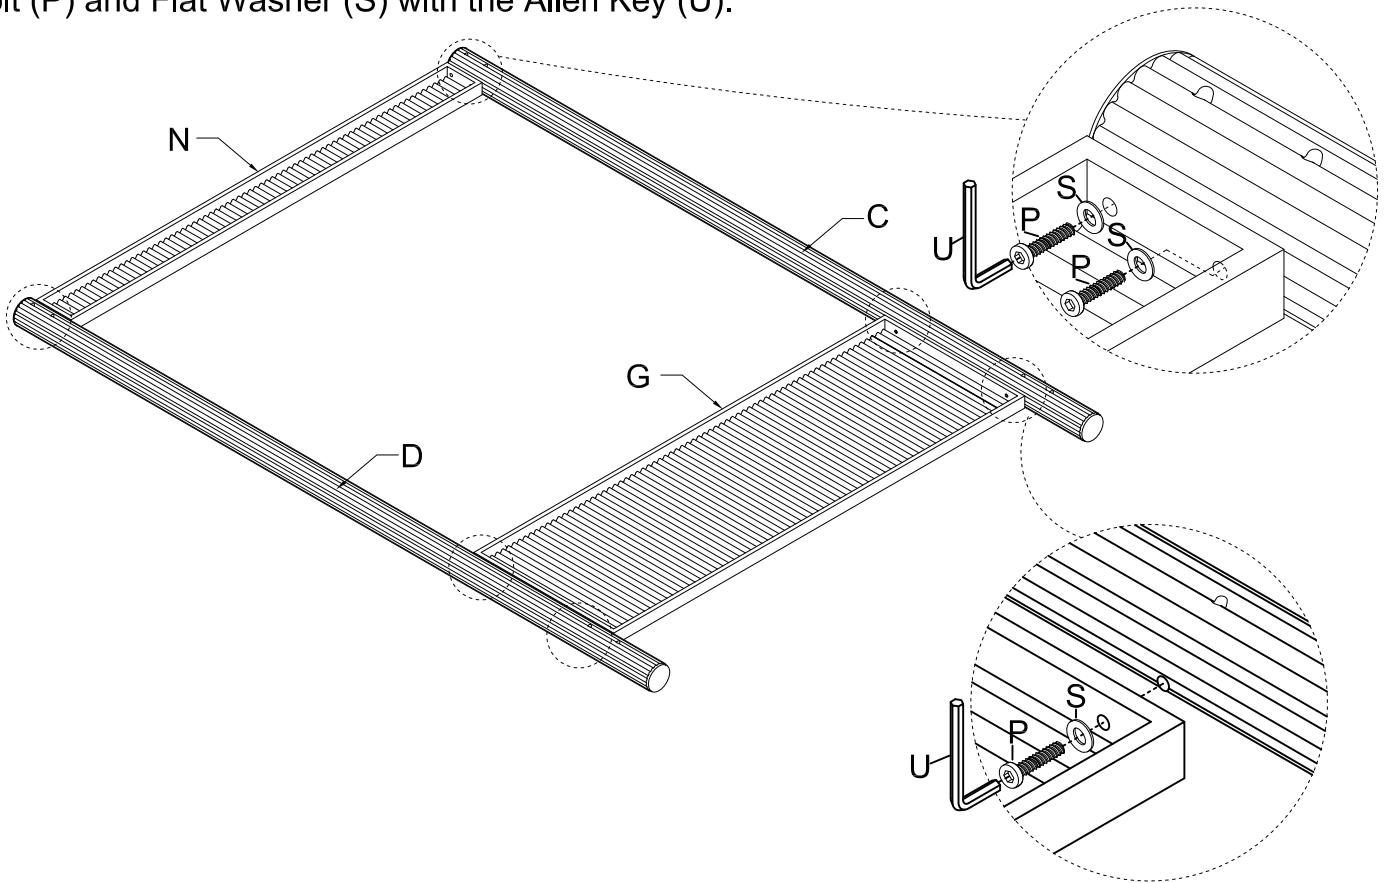


4

Attach the Side Rail - Front (H) to the Side Rail - Rear (I) using Bolt (O) and Flat Washer (S) with the Allen Key (U).

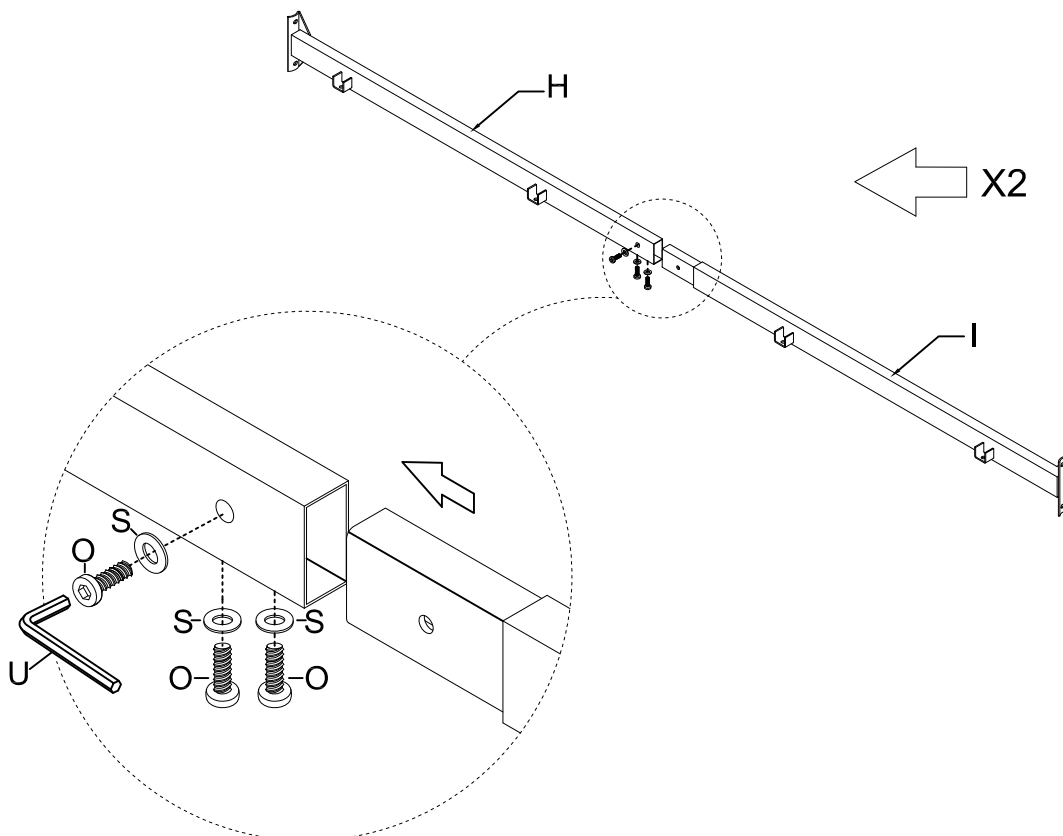


5

Attach the Slat (K & L) to the Support Leg (E) using Bolt (Q) and Flat Washer (S) with the Allen Key (U).

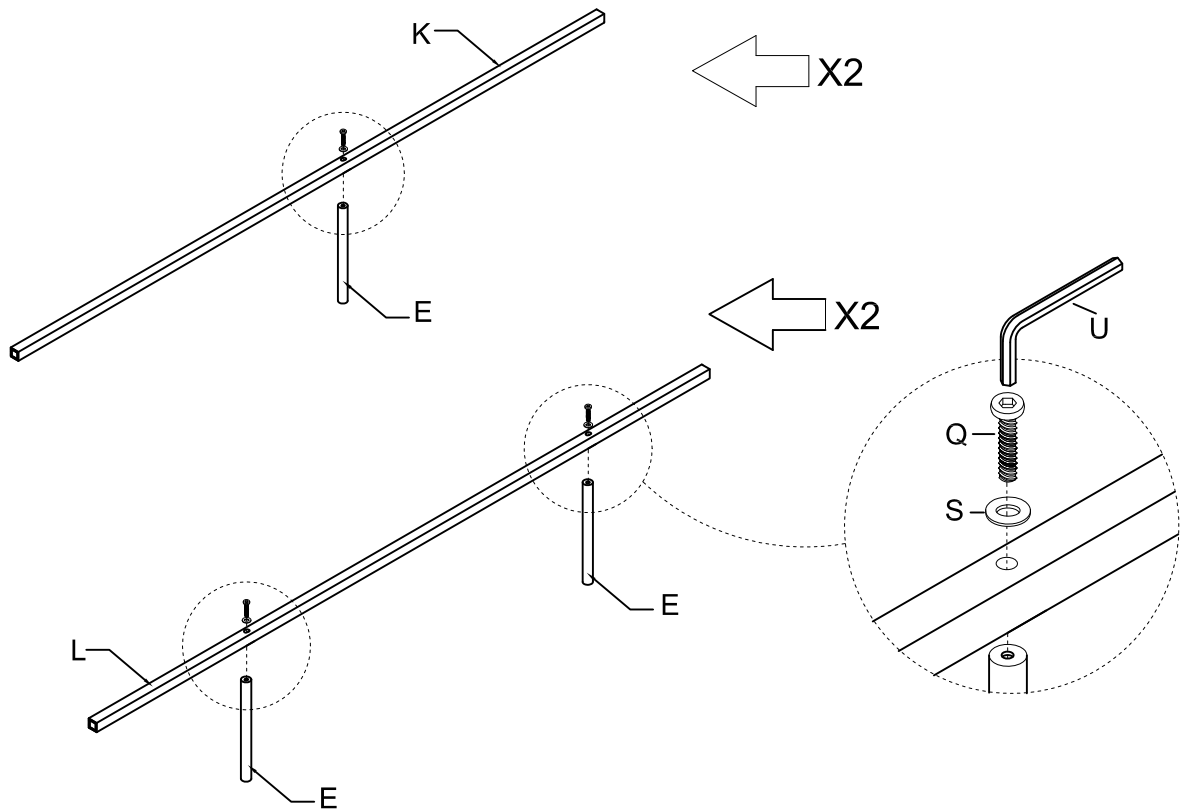


6


Attach the Headboard Post (A & B) and the Footboard Post (C & D) to the Long Canopy Panel (M) using Bolt (P) and Flat Washer (S) with the Allen Key (U).

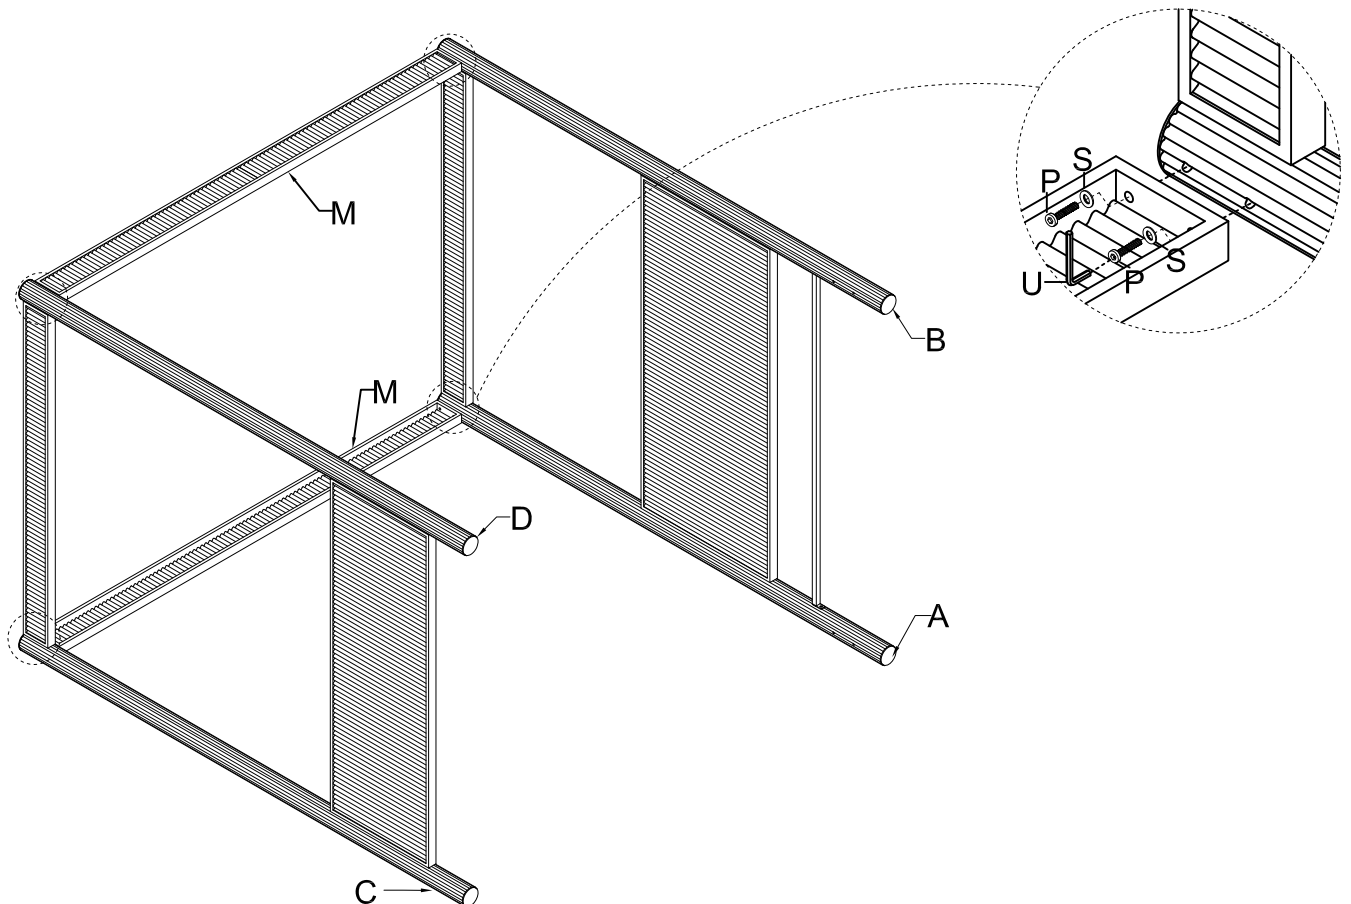

- 7** Attach the Side Rail (H & I) to the Headboard Post (A & B) and the Footboard Post (C & D) using Bolt (O & R), Flat Washer (S) and Nut (T) with the Allen Key (U) and the Wrench (V).

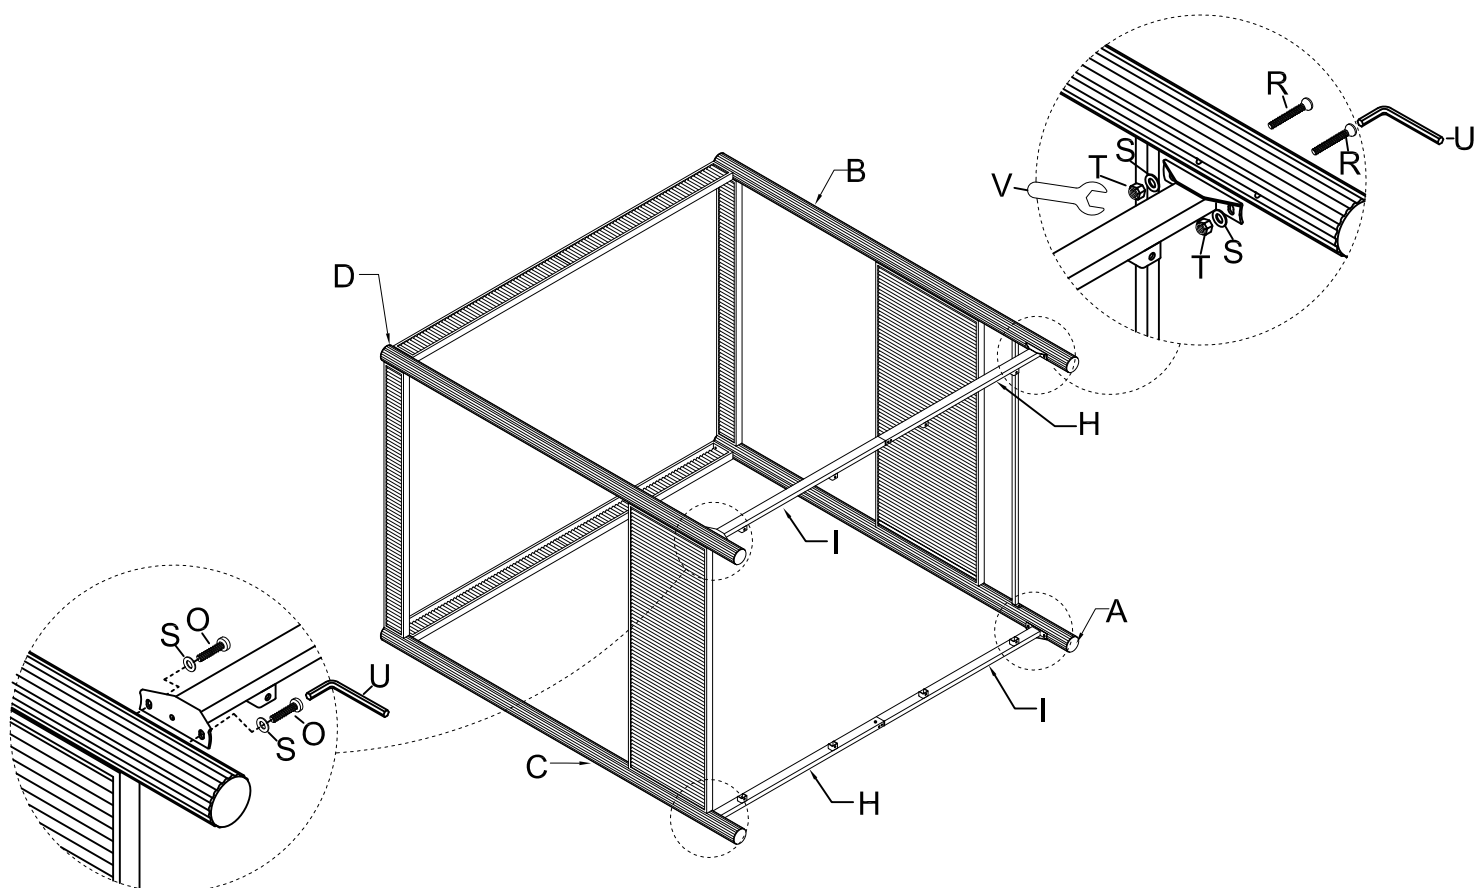

- 8** Attach the Slat (K & L) to the Side Rail (H & I) using Bolt (O) and Flat Washer (S) with the Allen Key (U).

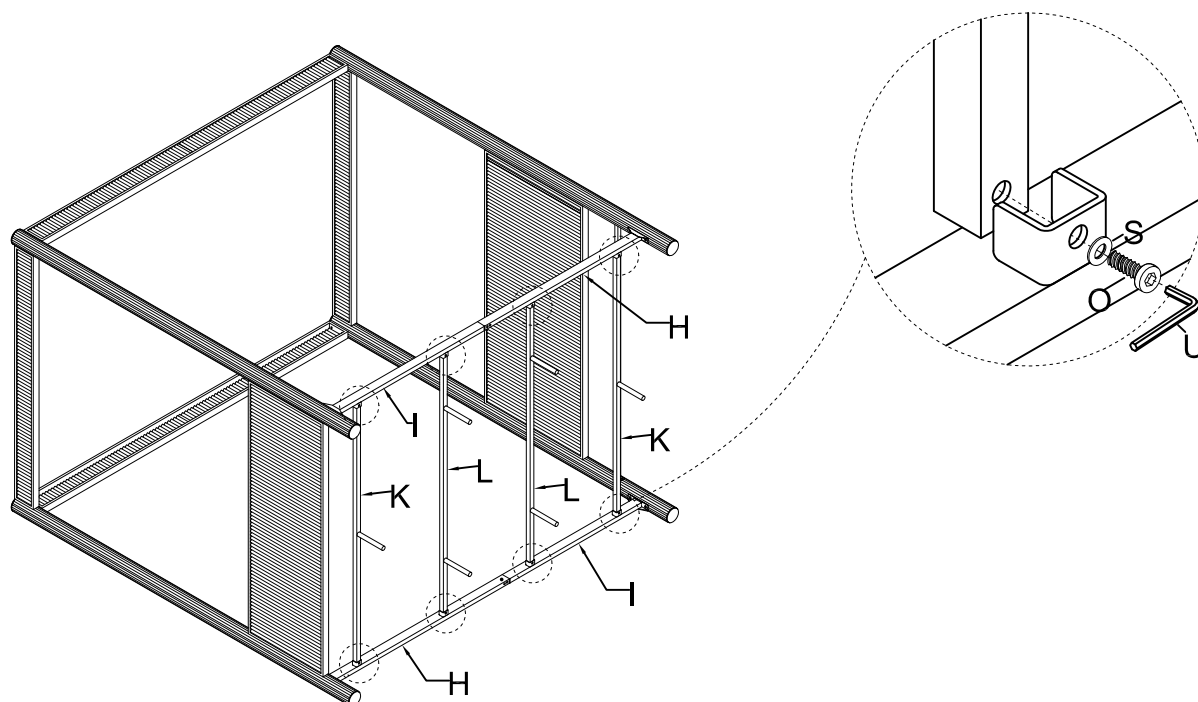

### Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.