



ASSEMBLY INSTRUCTIONS

TWIN FLOOR BED WITH SLAT







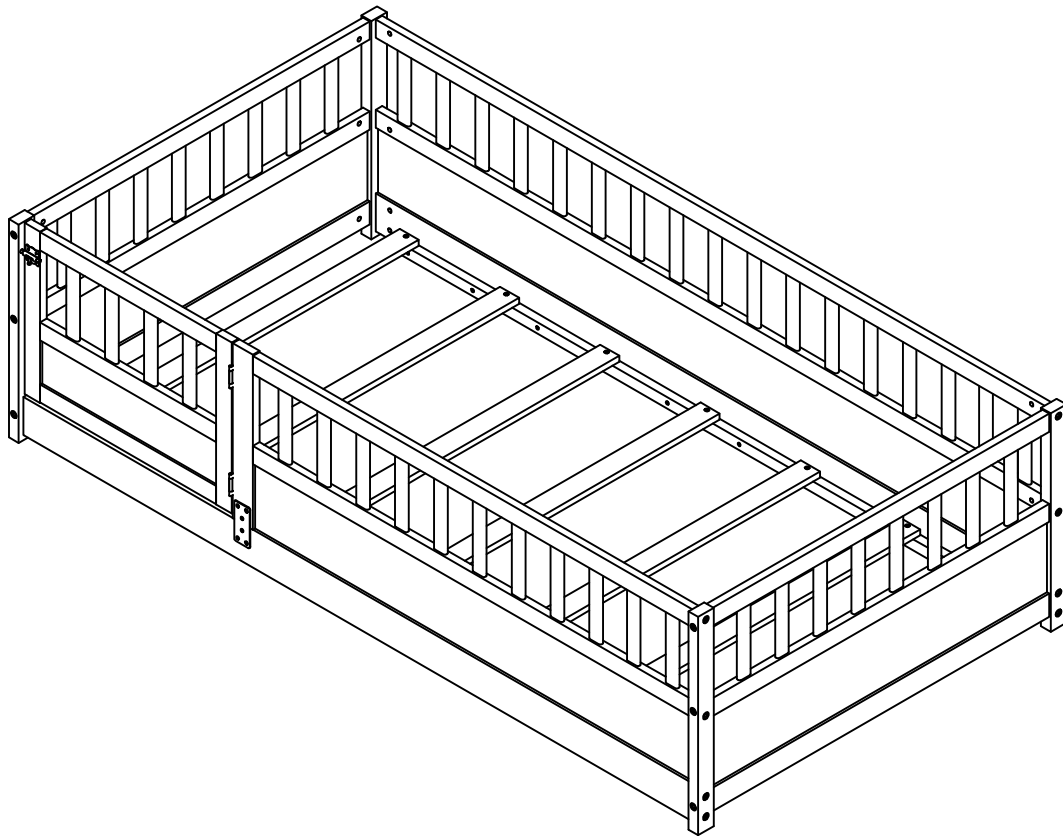


SWB011-012-016





Detail View

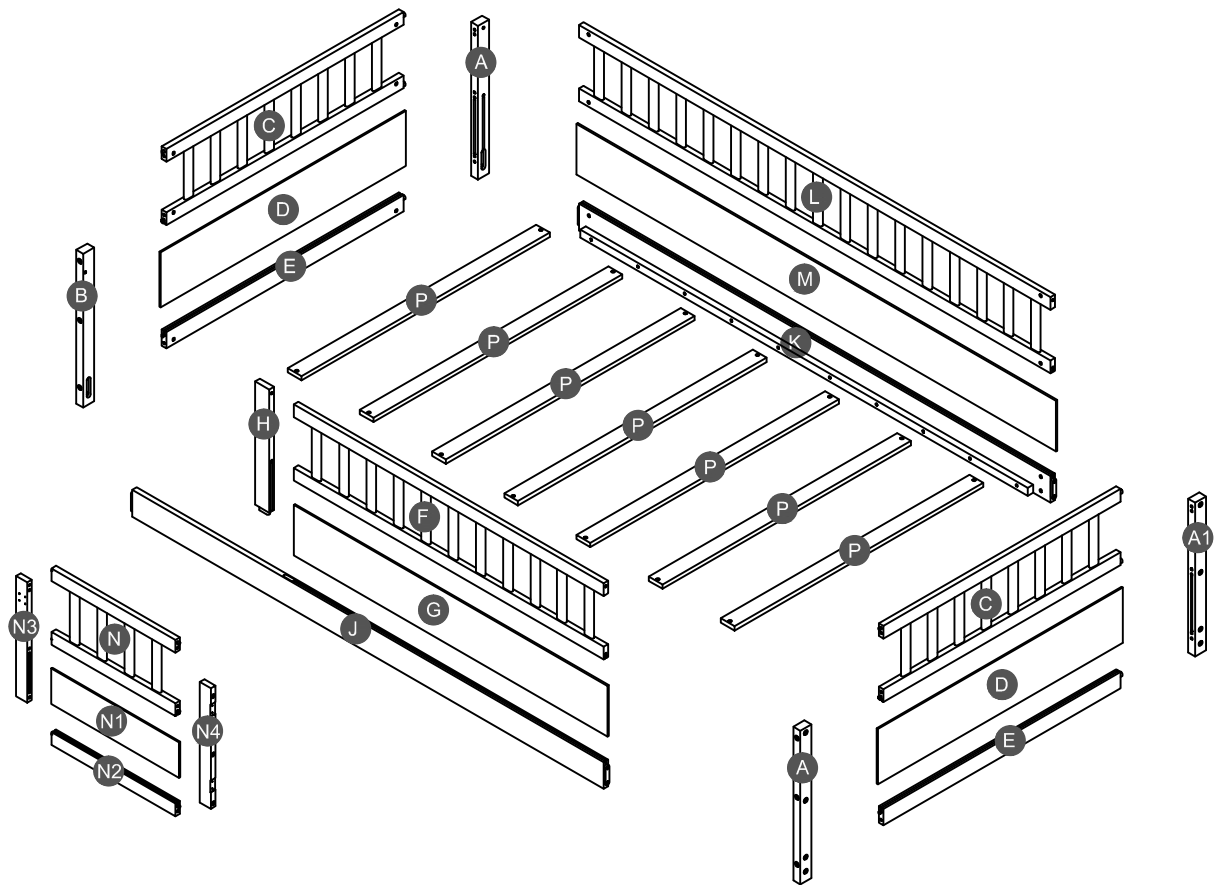


Part List

A  Leg (Left Back/Right Front) - 2pcs	A1  Leg (Right Back) - 1pc	B  Leg (Left Front) - 1pc
C  Frame HB/FB - 2pcs	D  Side Panel HB/FB - 2pcs	E  Lower horizontal bar HB/FB - 2pcs
F  Guard rail (Front) - 1pc	G  Side Panel (Front) - 1pc	H  Vertical bar (Front) - 1pc
J  Side rail (Front) - 1pc	K  Side rail (Back) - 1pc	L  Guard rail (Back) - 1pc
M  Side Panel (Back) - 1pc	N  Frame door - 1pc	N1  Panel door - 1pc
N2  Lower horizontal bar door - 1pc	N3  Vertical bar door (Left) - 1pc	N4  Vertical bar door (Right) - 1pc
P  Slat - 7pcs		

Hardware List


1  (Ø15)1/4"*100mm Hex-Head bolts (2pcs)	2  (Ø15)1/4"*80mm Hex-Head bolts (26pcs)	3  (Ø12)1/4"*70mm Hex-Head bolts (6pcs)
4  1/4"*15 (9.5mm) Horizontal-Hole bolts(34pcs)	5  (1/4")4.5*58mm Allen key (1pc)	6  55*27.5*7mm(180°) Hinges (2pcs)
7  60*38*10mm Lock (1pc)	8  100*44*1.5mm Metal bracket (1pc)	9  100*44*1.5mm Metal bracket (1pc)
10  Ø3.5*15mm Wood screws (24pcs)	11  Ø4*30mm Wood screws (14pcs)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

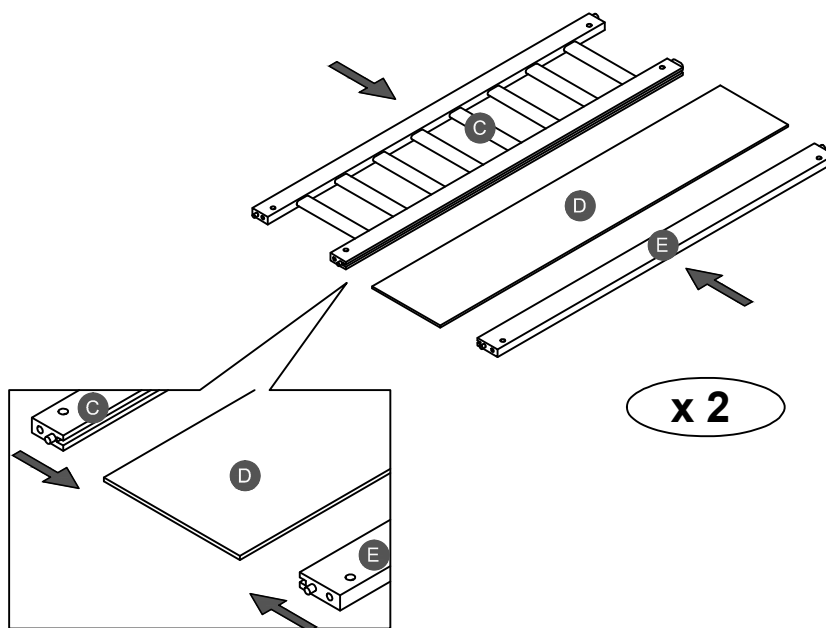


STEP 2:

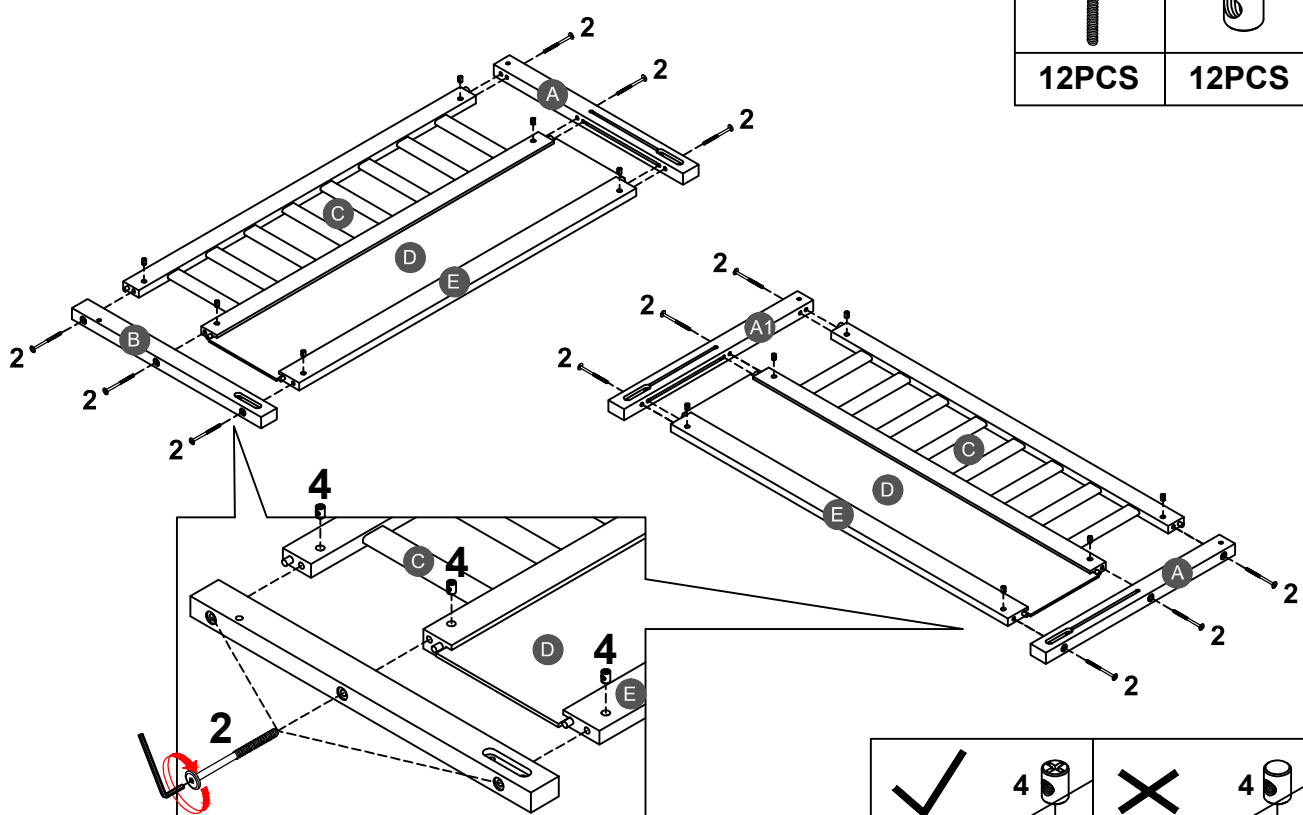


Note: Part 4 will face up with the "x" mark on it, otherwise it cannot be tightened

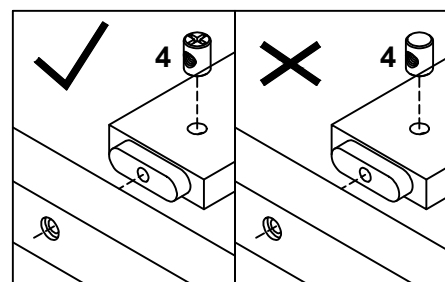

STEP 3:

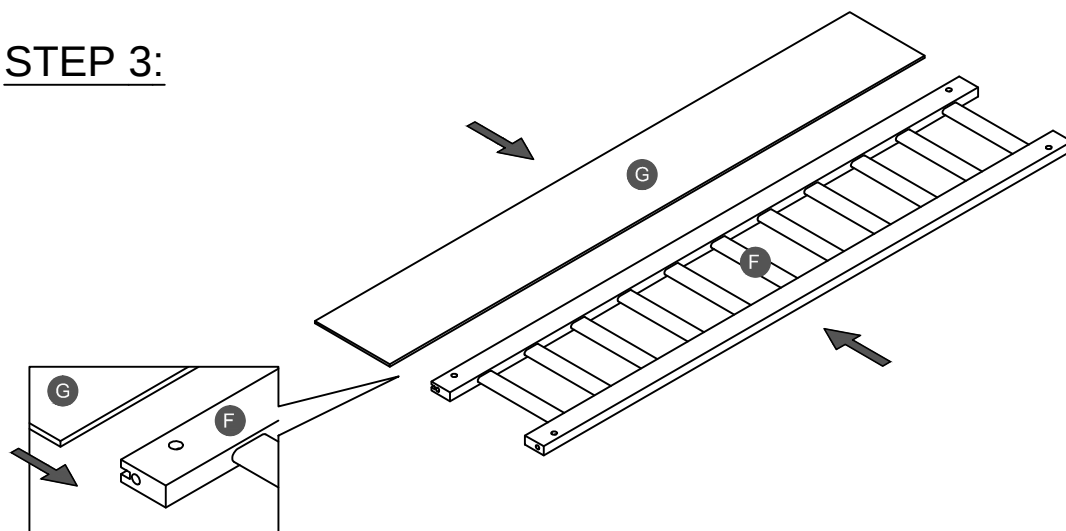


STEP 4:

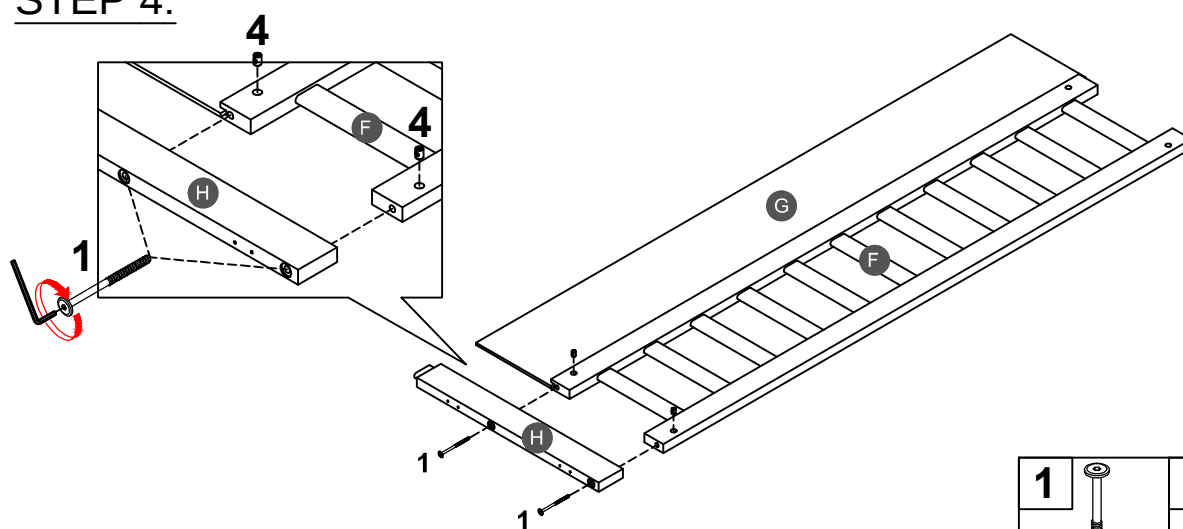


1	4
2PCS	2PCS

STEP 5:

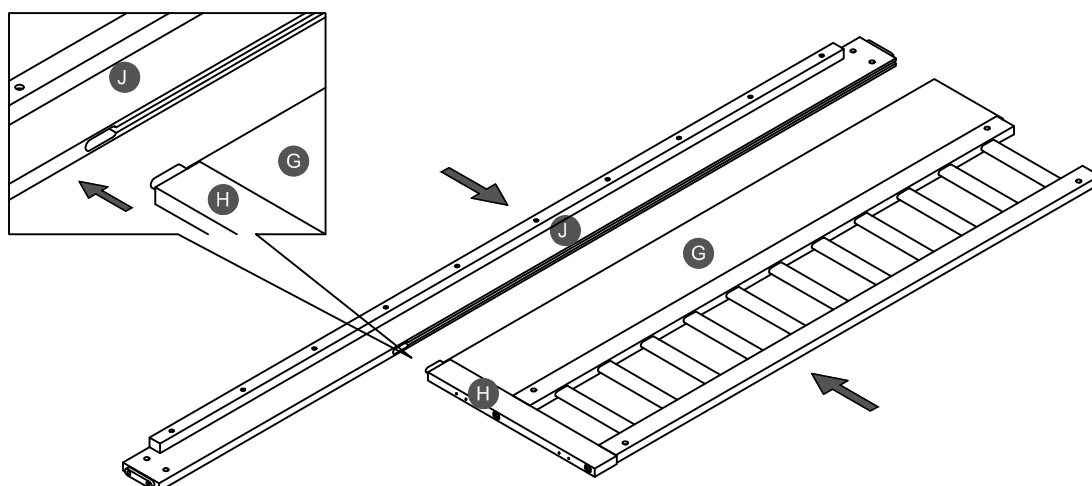

STEP 6:

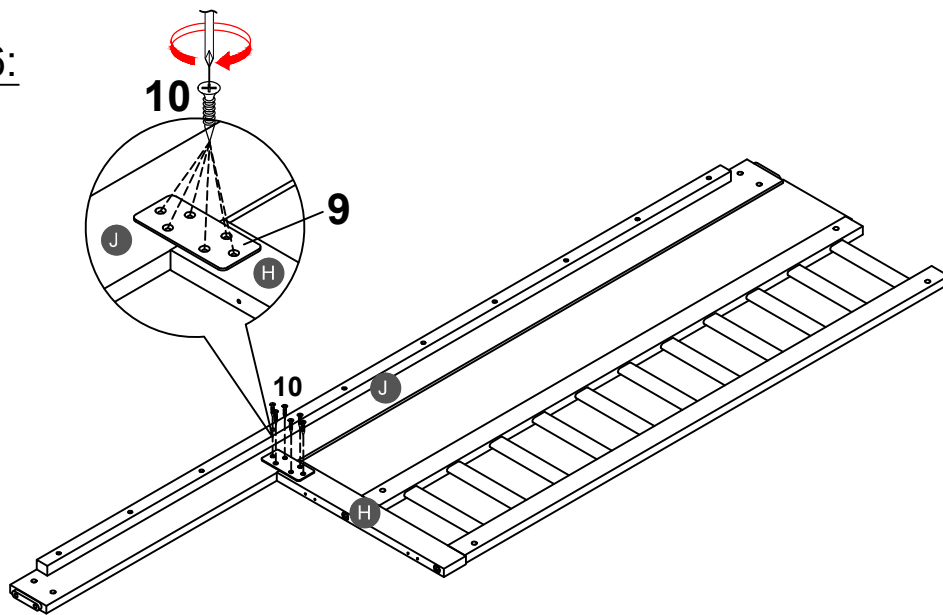

9




1PC

10




6PCS

STEP 7:

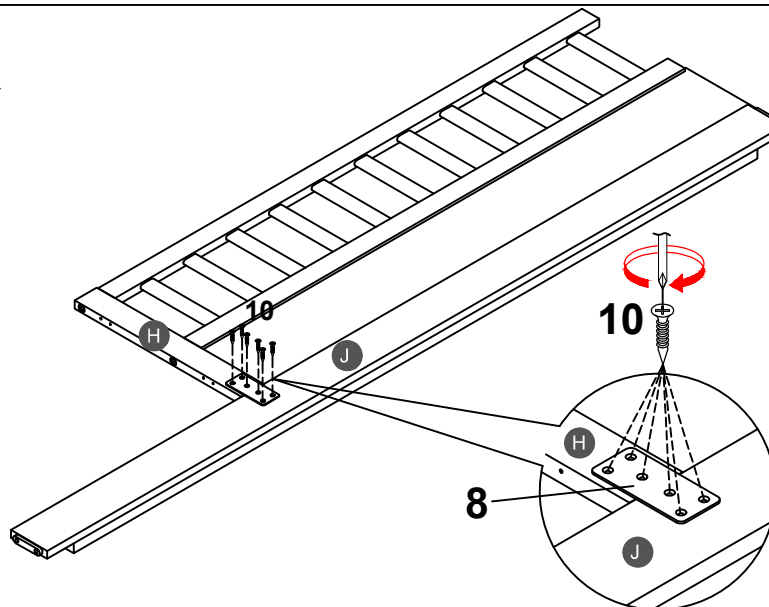

8




1PC

10




6PCS


STEP 8:

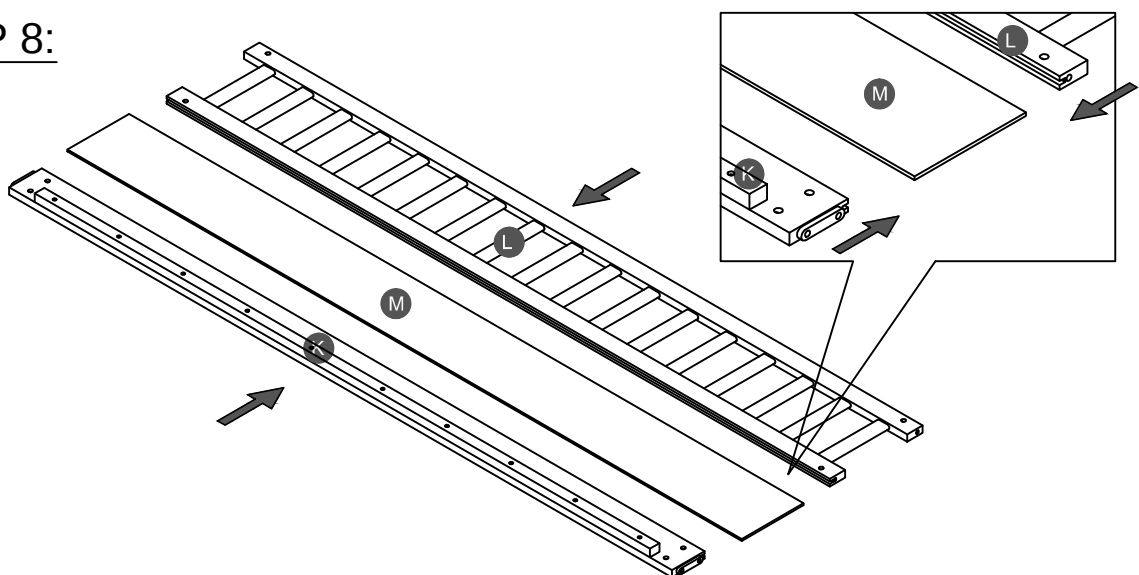


STEP 9:

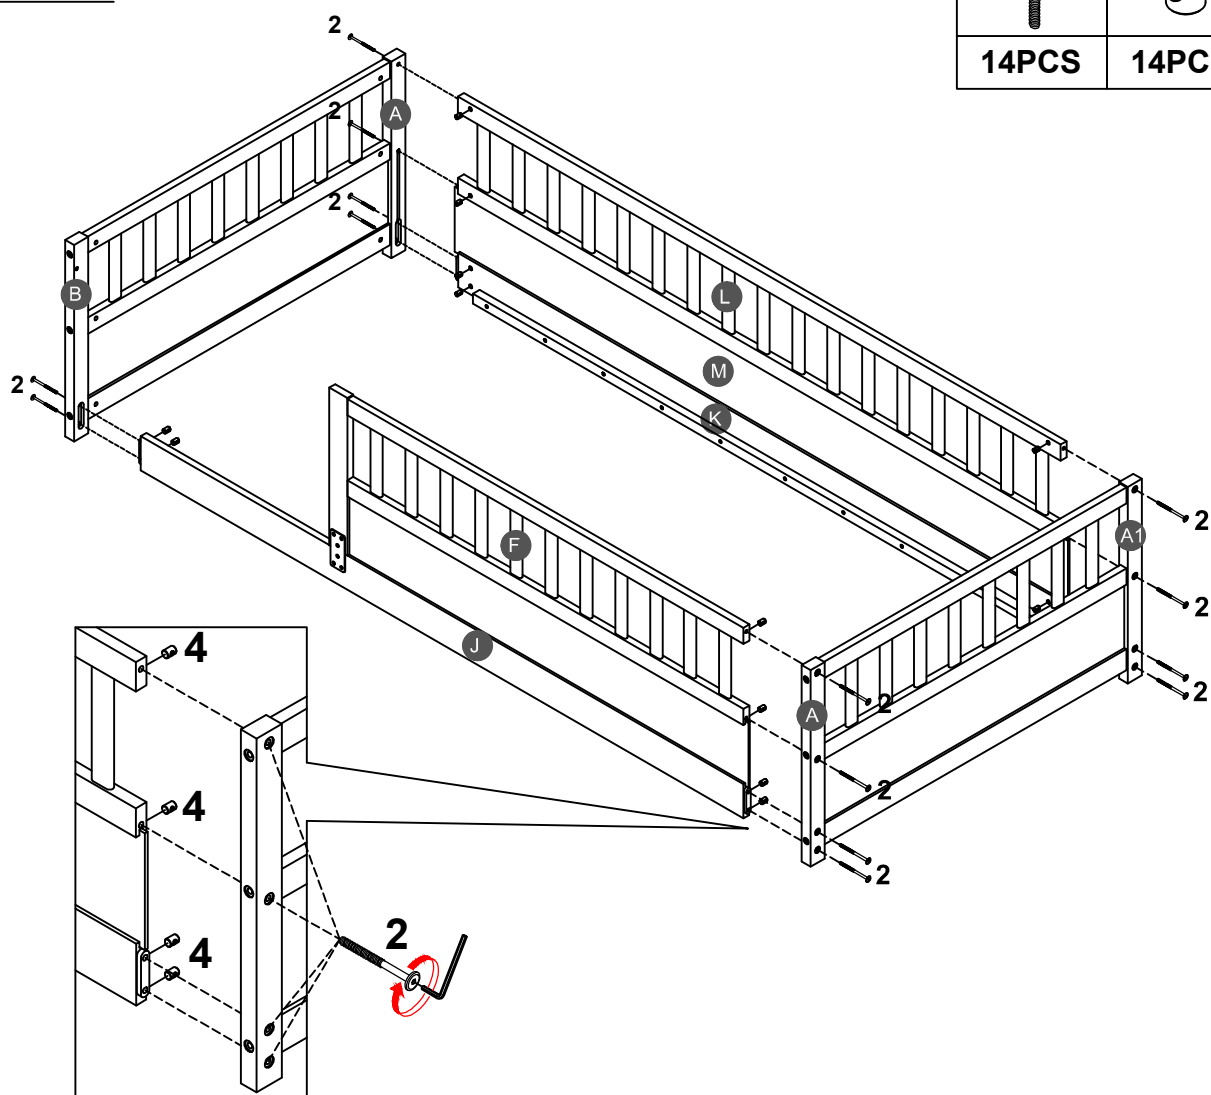

STEP 10:

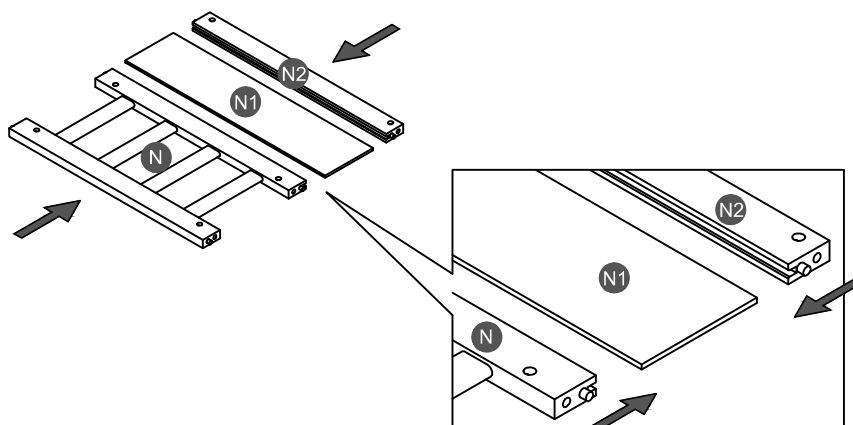


STEP 11:

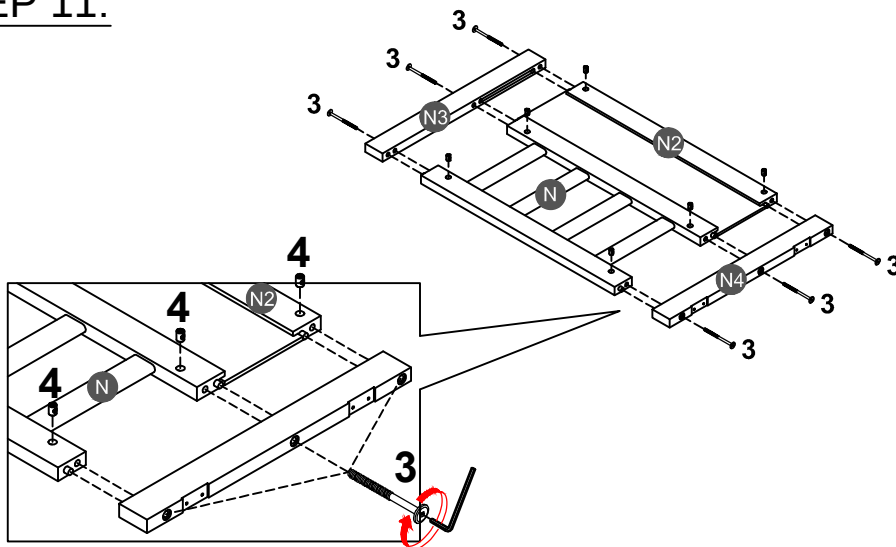


3		4	
6PCS		6PCS	


STEP 12:

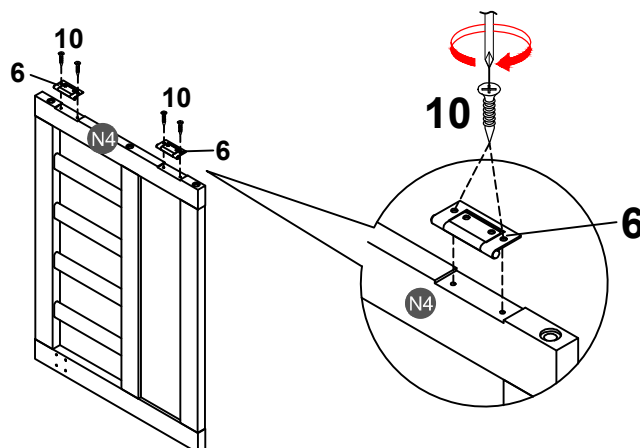


6		10	
2PCS		4PCS	

STEP 13:

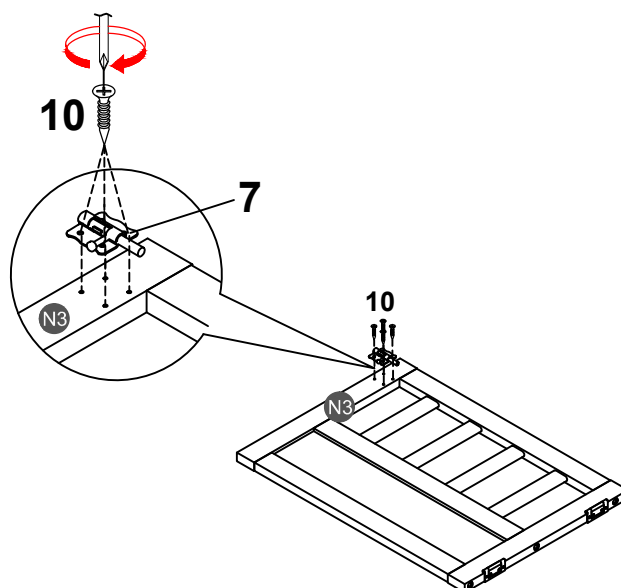

7		10	
1PC		4PCS	

STEP 14:

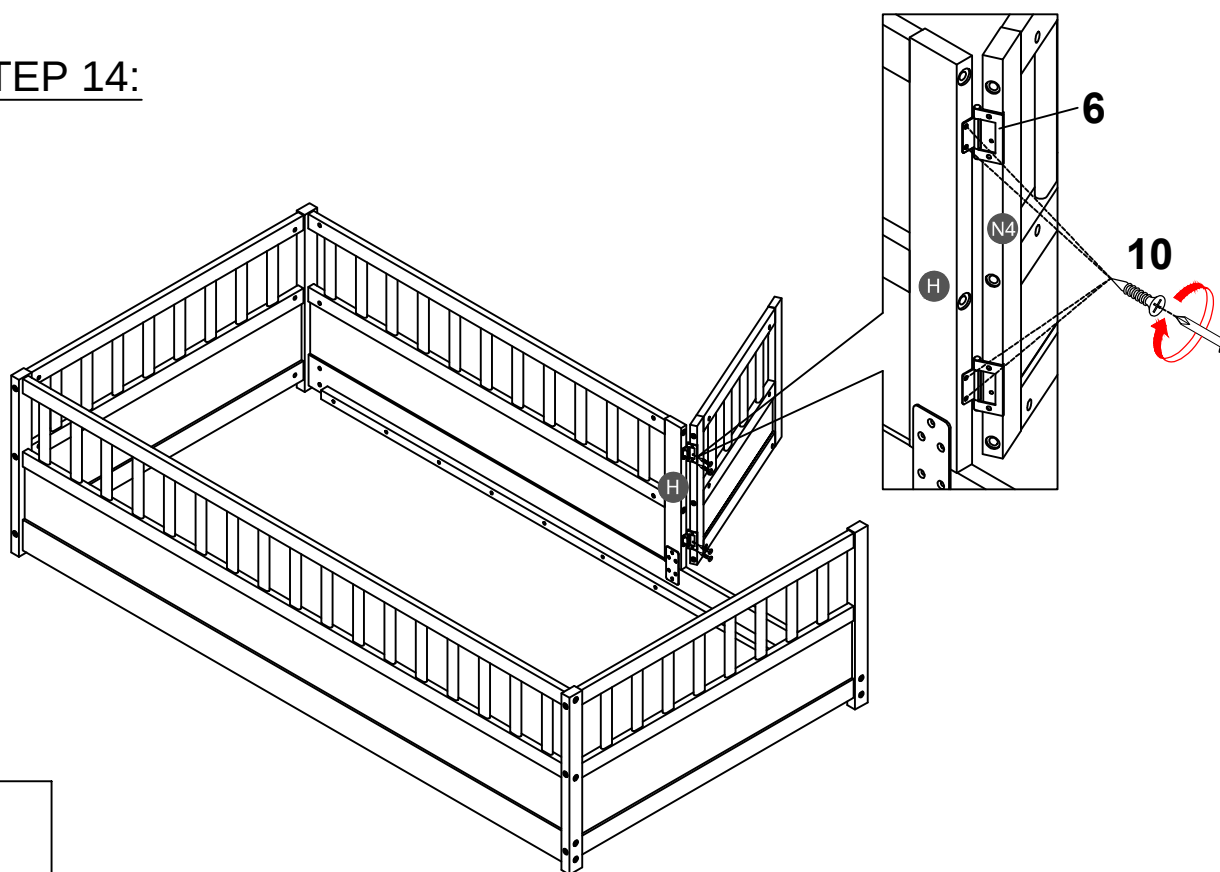


10



4PCS

STEP 15:


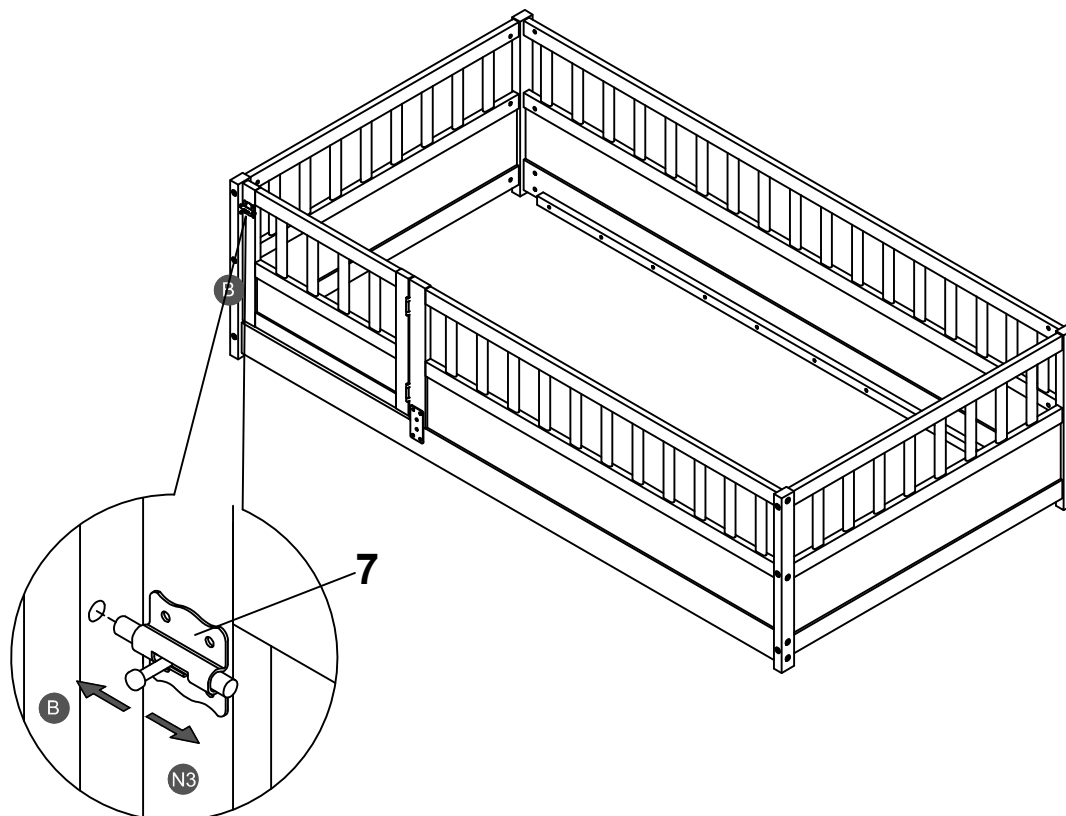


STEP 16:

11



14PCS

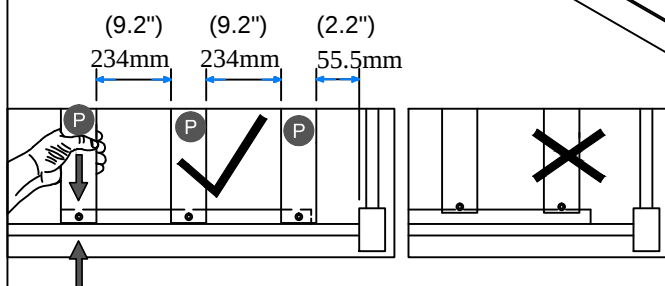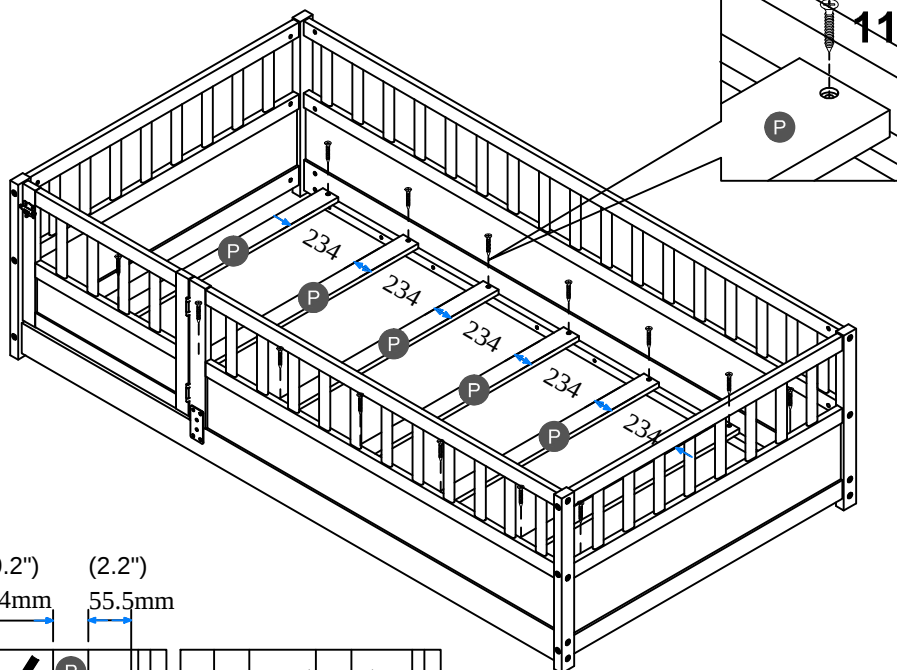

NOTE: Please make sure the bed slats close to the side rail before locking the screws to avoid breakage. This step is required for both the left and right sides. Moreover, please do not lock the screws of the bed slats at the outermost edge to avoid damaging.

