


ASSEMBLY INSTRUCTIONS

ITEM # : N759P207685K

Thank you for purchasing this quality Product. Be sure to check all packing material carefully for small parts, which may have come loose inside carton during shipment. identify and count all parts and compare with the parts list below.

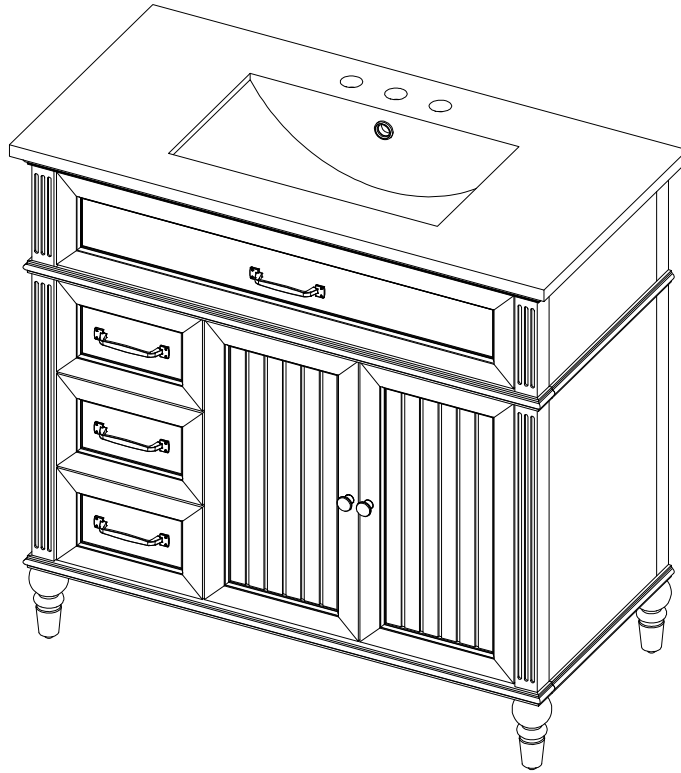


ASSEMBLY INSTRUCTION:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instruction in the same sequence as numbered assure fast and easy assembly.




















WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This products for home use only and not intended for commercial establishments.
3. Two persons are required for assembly.
4. Approximate assembly time 1/2 hours.
5. Component parts and fittings contained in the box. Please sort out all parts before you begin to assemble the item. This is to make sure you always use the correct part.
6. It is **STRONGLY RECOMMENDED** that you **ANCHOR** this product tooling furniture can cause serious injuries and death. To prevent your furniture from tipping forward it is strongly recommended that you securely attach this product to a wall other solid surface, using the anchor straps provided appropriate fixings.



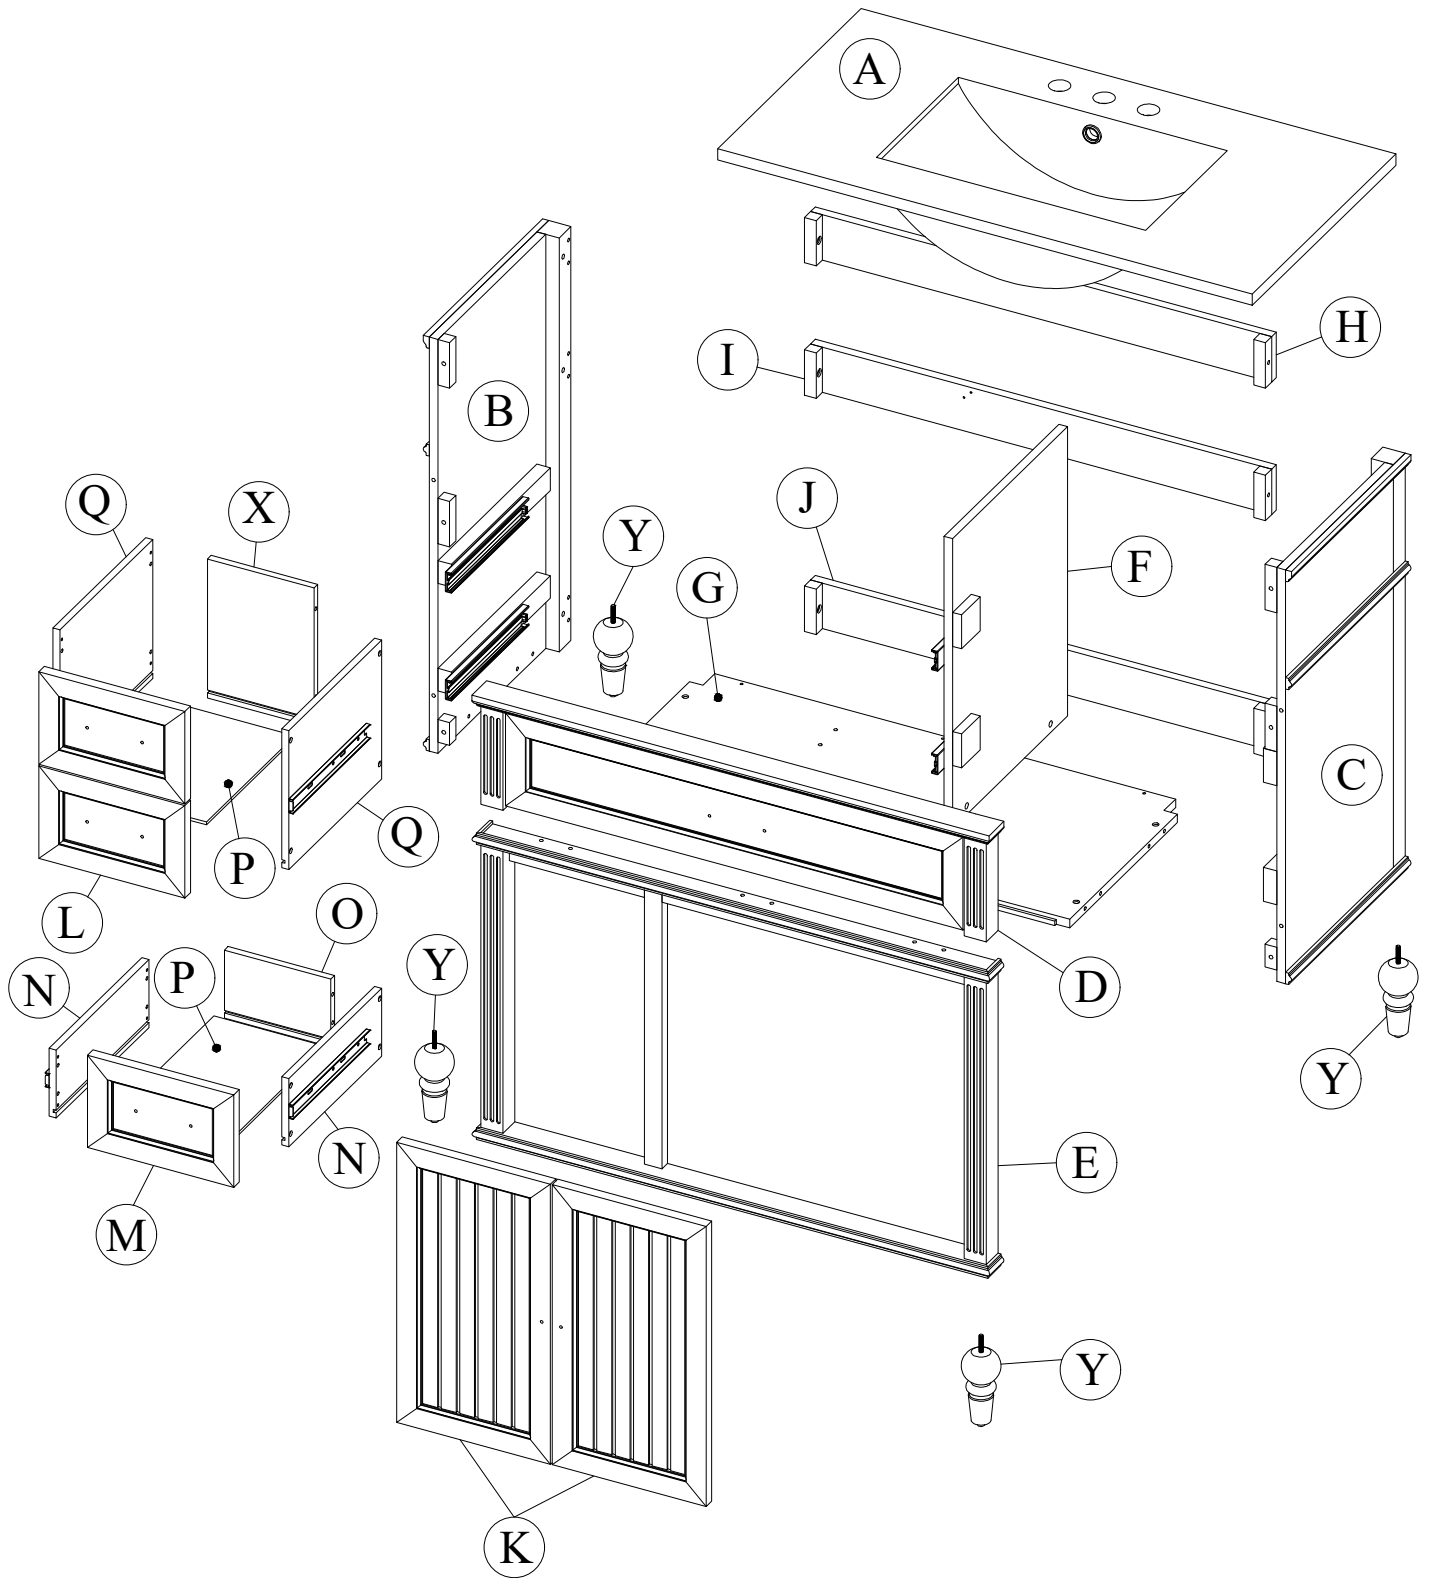




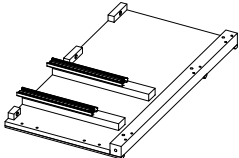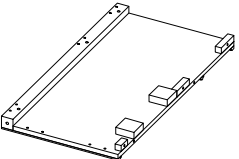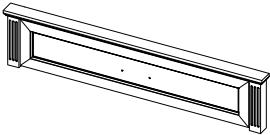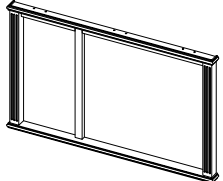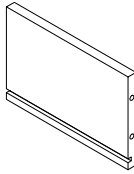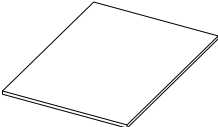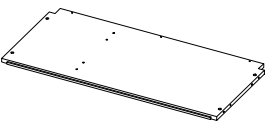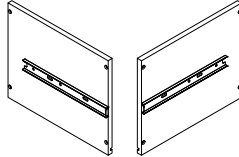

DETAIL VIEW














PART LIST


| No. | Component | | Q'ty | No. | Component | | Q'ty |
|-----|---|------------------------|------|-----|---|-----------------------------------|------|
| A |  | Sink | 1 | K |  | Doors (R/L) | 2 |
| B |  | Side panel (left) | 1 | L |  | Drawer Front (double) | 1 |
| C |  | Side panel (right) | 1 | M |  | Drawer Front | 1 |
| D |  | Front (top) | 1 | N |  | Drawer sides (R/L) | 2 |
| E |  | Front (bottom) | 1 | O |  | Drawer back | 1 |
| F |  | Middle panel | 1 | P |  | Drawer bottoms | 2 |
| G |  | Bottom | 1 | Q |  | Drawer sides (R/L) (double) | 2 |
| H |  | Back panel (top) | 1 | X |  | Drawer back (double) | 1 |
| I |  | Back panel (middle) | 1 | Y |  | Legs | 4 |
| J |  | Back panel (bottom) | 1 | | | | |

HARDWARE LIST



| No. | Hardware | | Q'ty |
|-----|---|---------------------|------|
| 1 |  | Allen Bolts 1/4"x35 | 12 |
| 2 |  | Wooden dowels | 43 |
| 3 |  | Handles | 4 |
| 4 |  | Knob | 2 |
| 5 |  | Bolts M4x25 | 8 |
| 6 |  | Bolts M4x15 | 2 |
| 7 |  | Cam lock screws | 9 |
| 8 |  | Cam locks | 9 |
| 9 |  | Screws 4x25 | 19 |

| No. | Hardware | | Q'ty |
|-----|---|----------------|------|
| 10 |  | Screws 4x15 | 32 |
| 11 |  | Allen key | 1 |
| 12 |  | Hinges | 4 |
| 13 |  | Angle Brackets | 2 |
| 14 | <div></div> <div>a b c d e</div> <div>Wall brackets 1 set</div> | | |
| | <div></div> <div>Not included</div> <div> Silicone</div> | | |



STEP 1

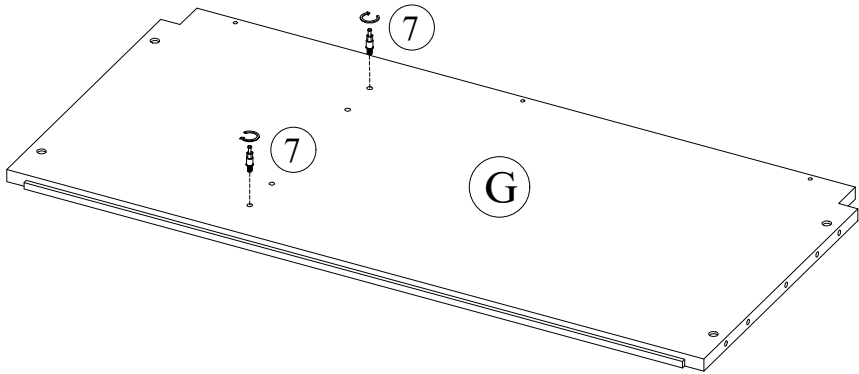


| No. | Hardware | Q'ty |
|-----|-----------------|------|
| 7 | Cam lock screws | 2 |

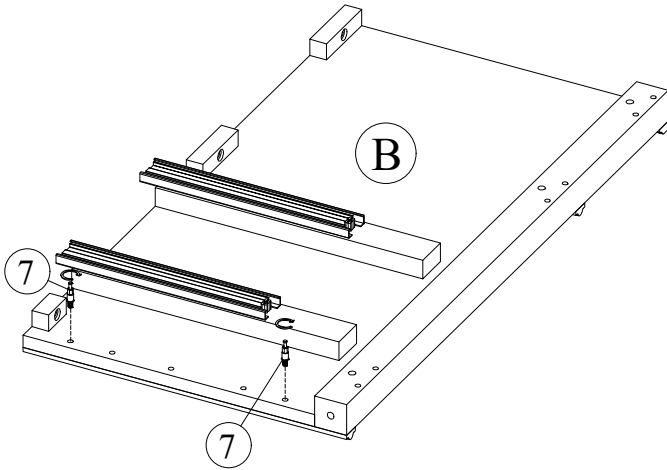


| No. | Hardware | Q'ty |
|-----|-----------------|------|
| 7 | Cam lock screws | 2 |

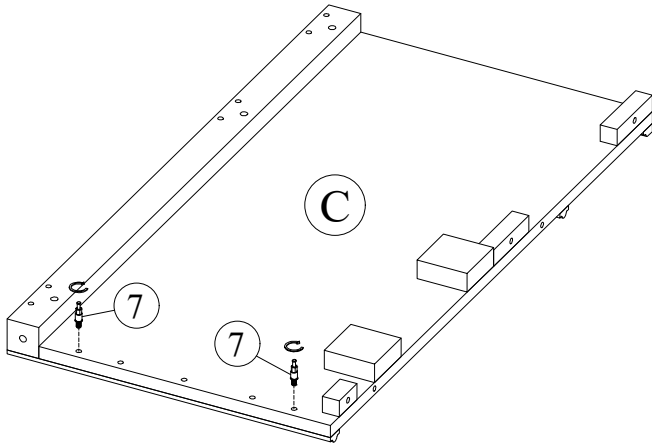


| No. | Hardware | Q'ty |
|-----|-----------------|------|
| 7 | Cam lock screws | 2 |




STEP 2

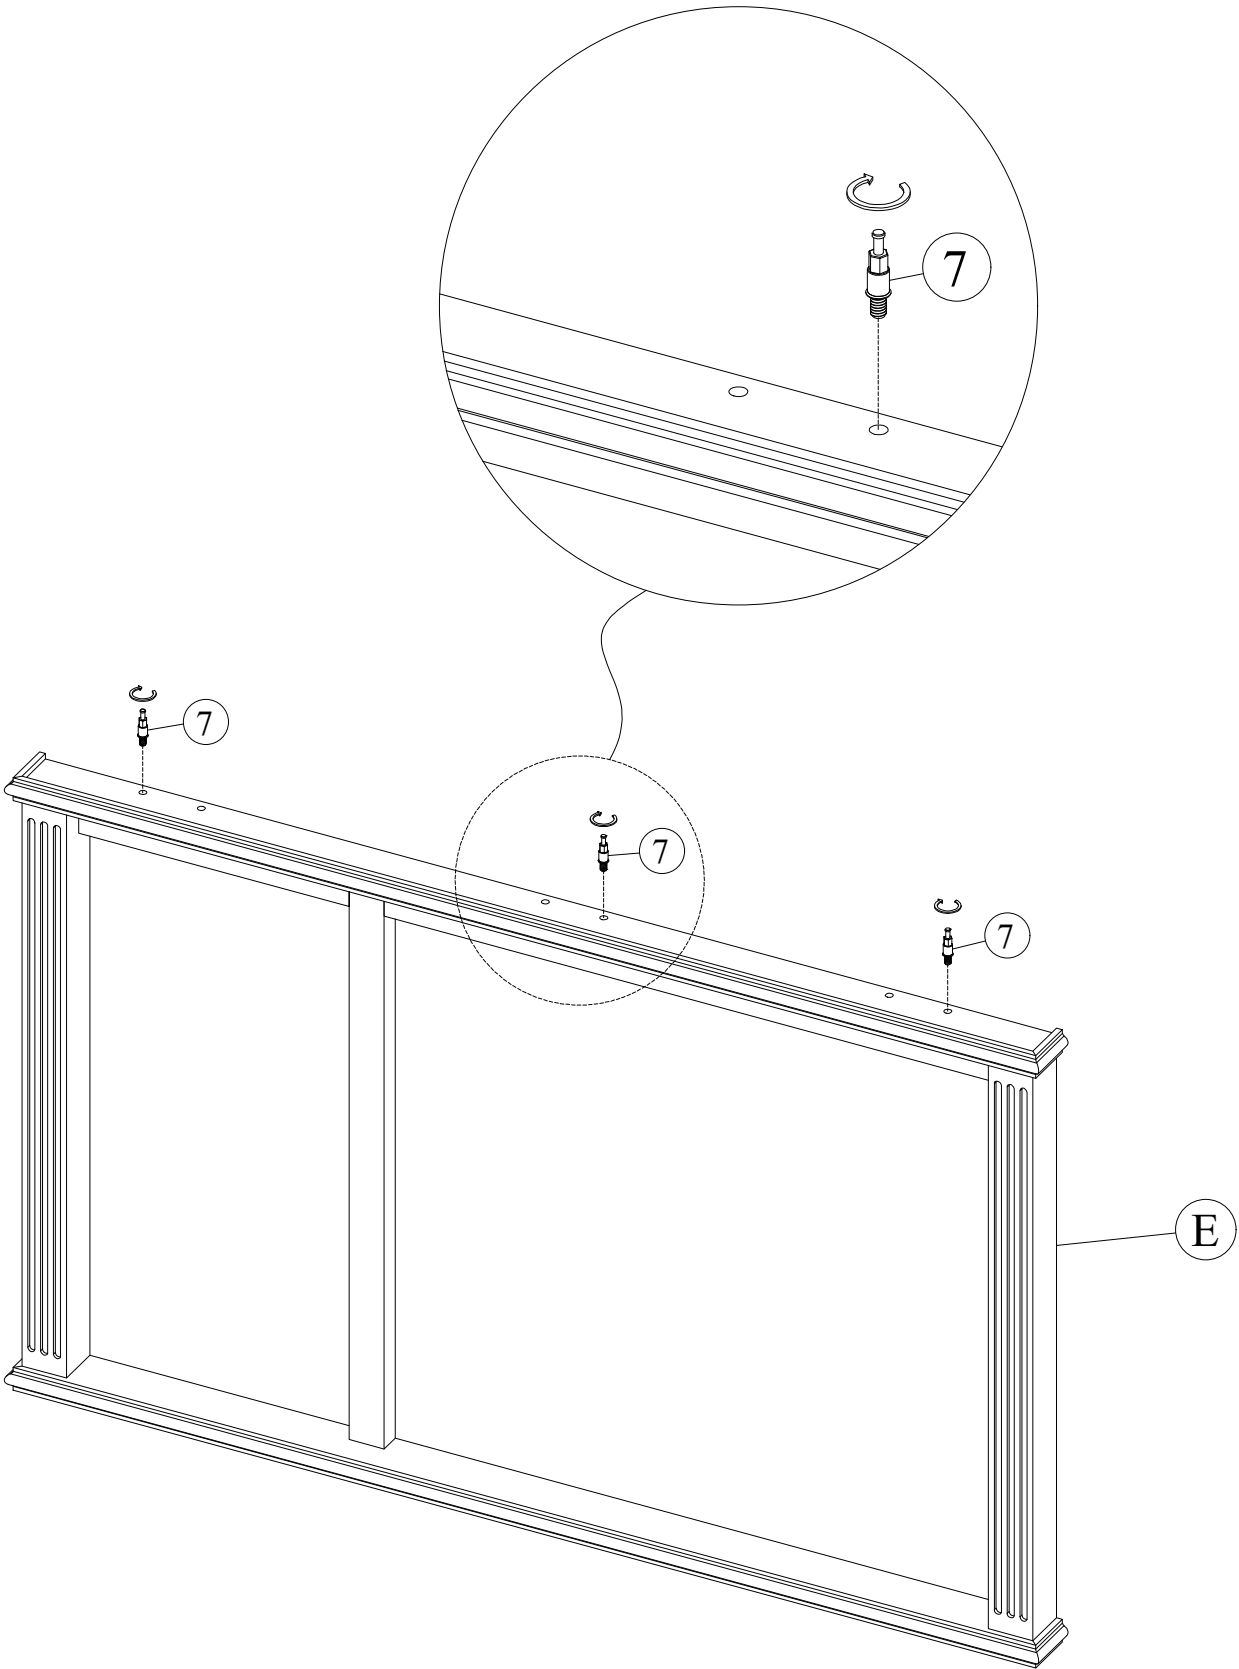

| No. | Hardware | Q'ty |
|-----|-----------------|------|
| 7 | Cam lock screws | 3 |




STEP 3

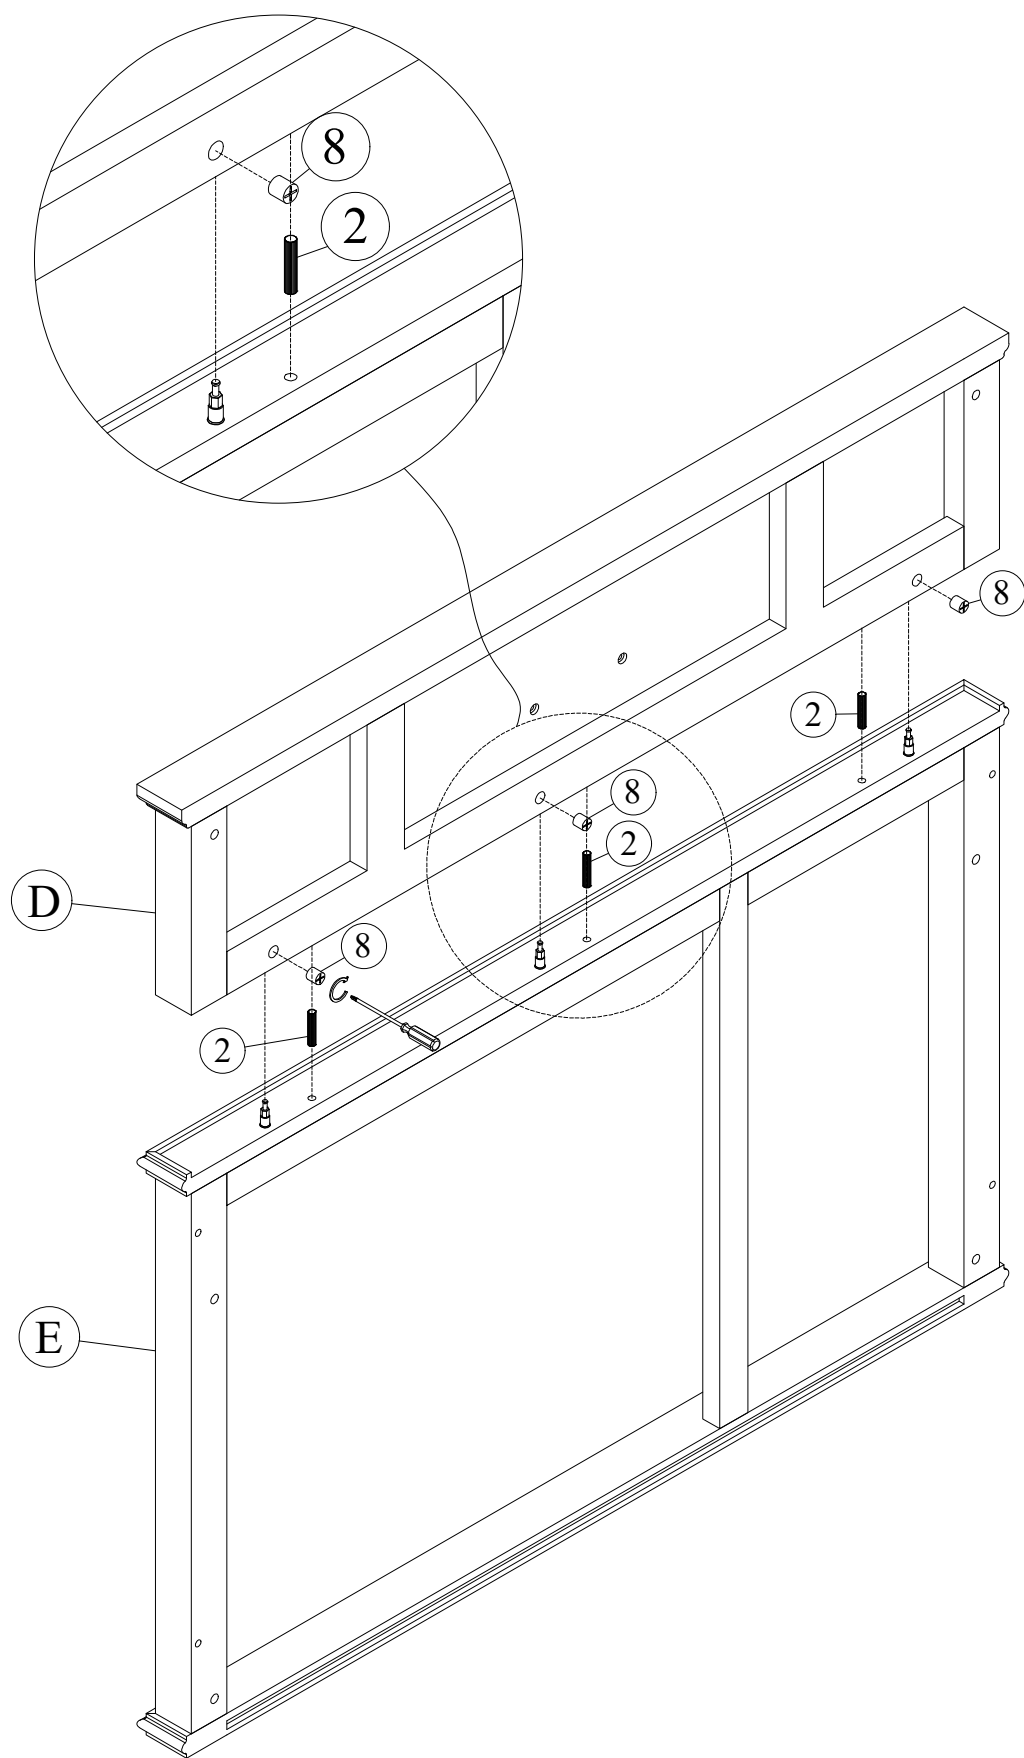


| No. | Hardware | Q'ty |
|-----|---------------|------|
| 2 | Wooden dowels | 3 |
| 8 | Cam locks | 3 |

STEP 4

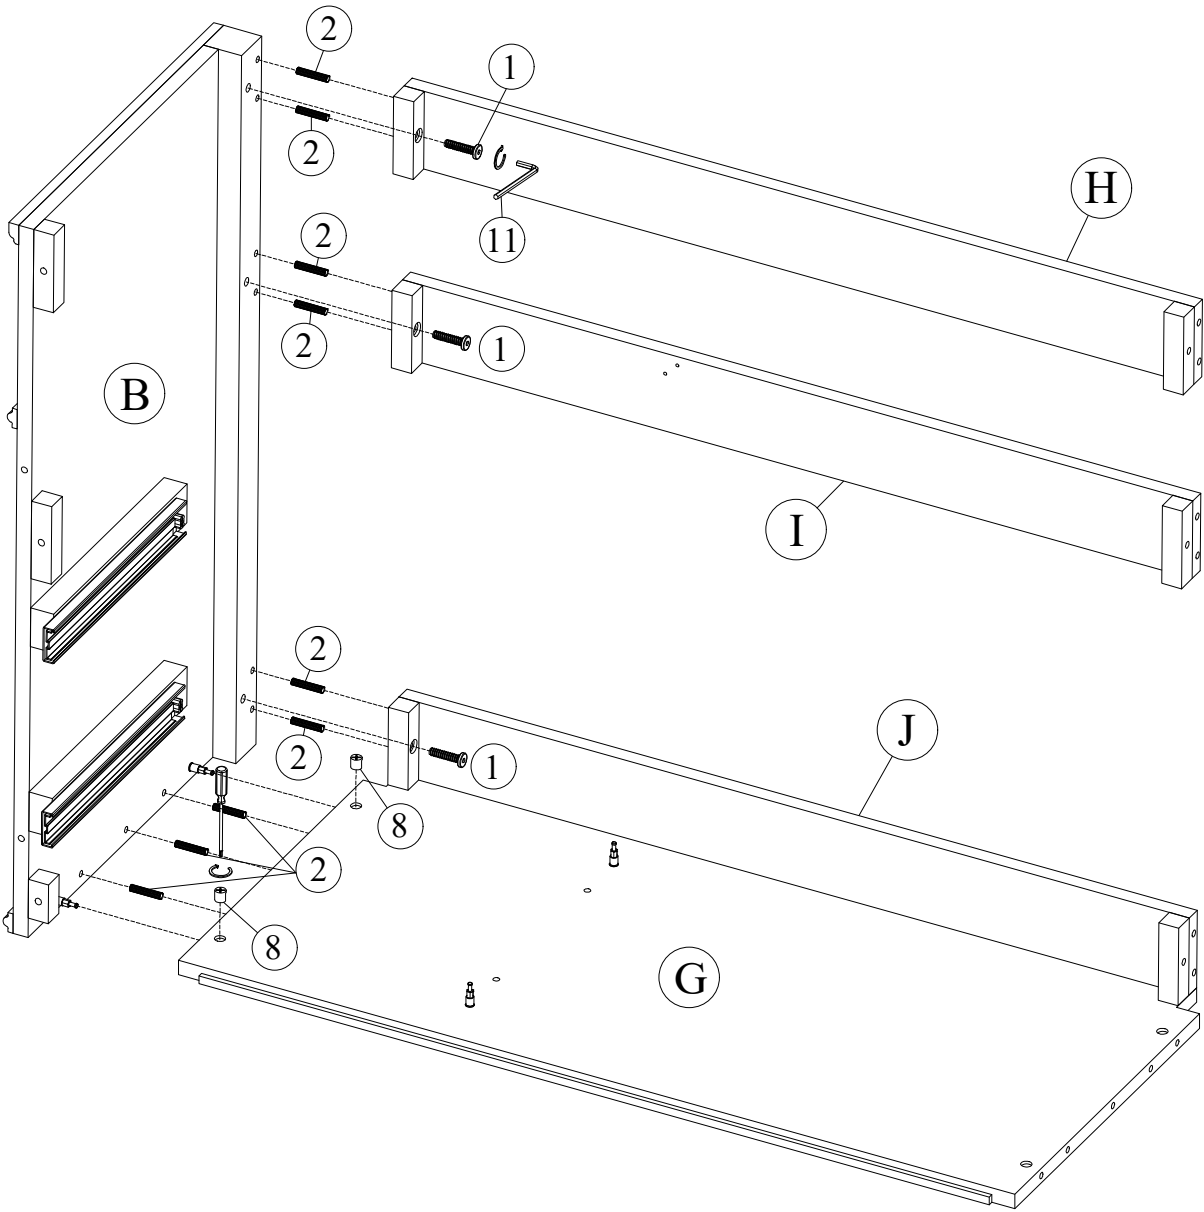



| No. | Hardware | Q'ty |
|-----|---------------------|------|
| 1 | Allen Bolts 1/4"x35 | 3 |
| 2 | Wooden dowels | 9 |
| 8 | Cam locks | 2 |
| 11 | Allen key | 1 |

STEP 5

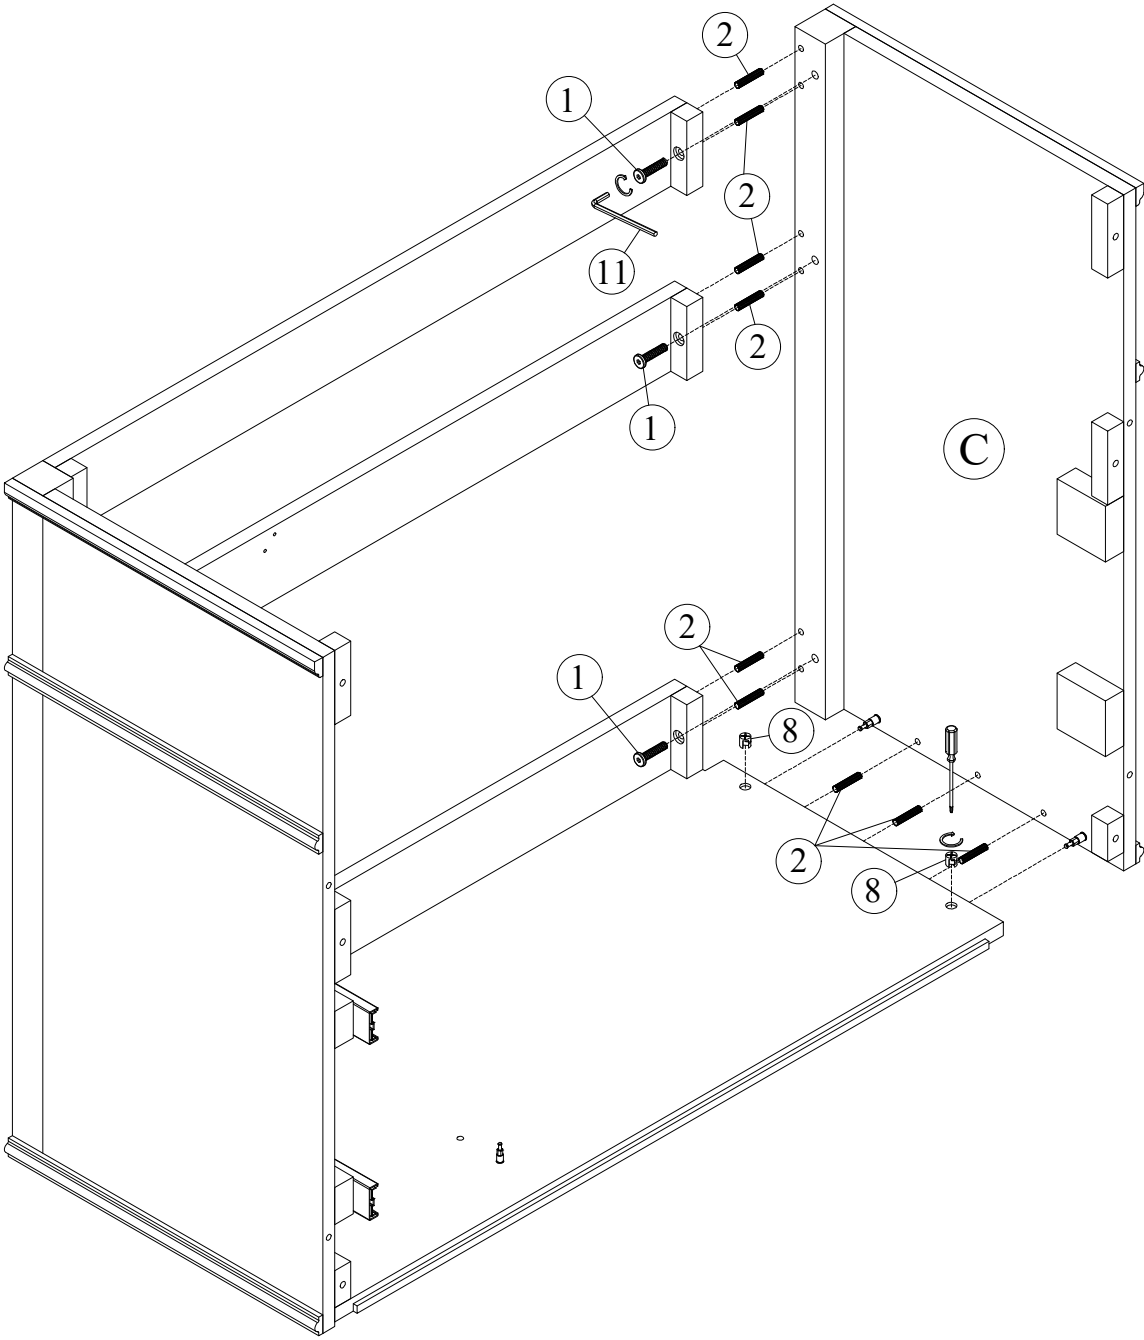


| No. | Hardware | Q'ty |
|-----|---------------------|------|
| 1 | Allen Bolts 1/4"x35 | 3 |
| 2 | Wooden dowels | 9 |
| 8 | Cam locks | 2 |
| 11 | Allen key | 1 |

STEP 6

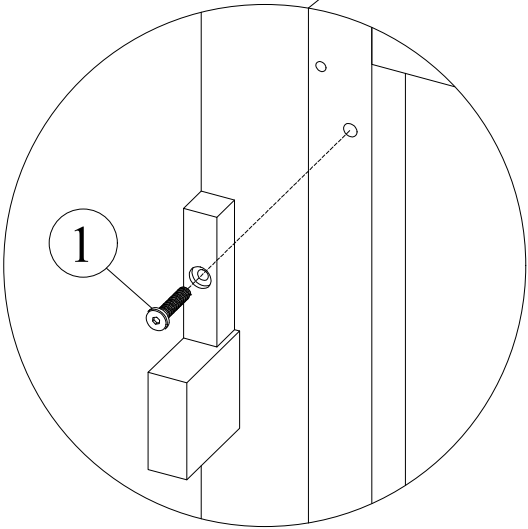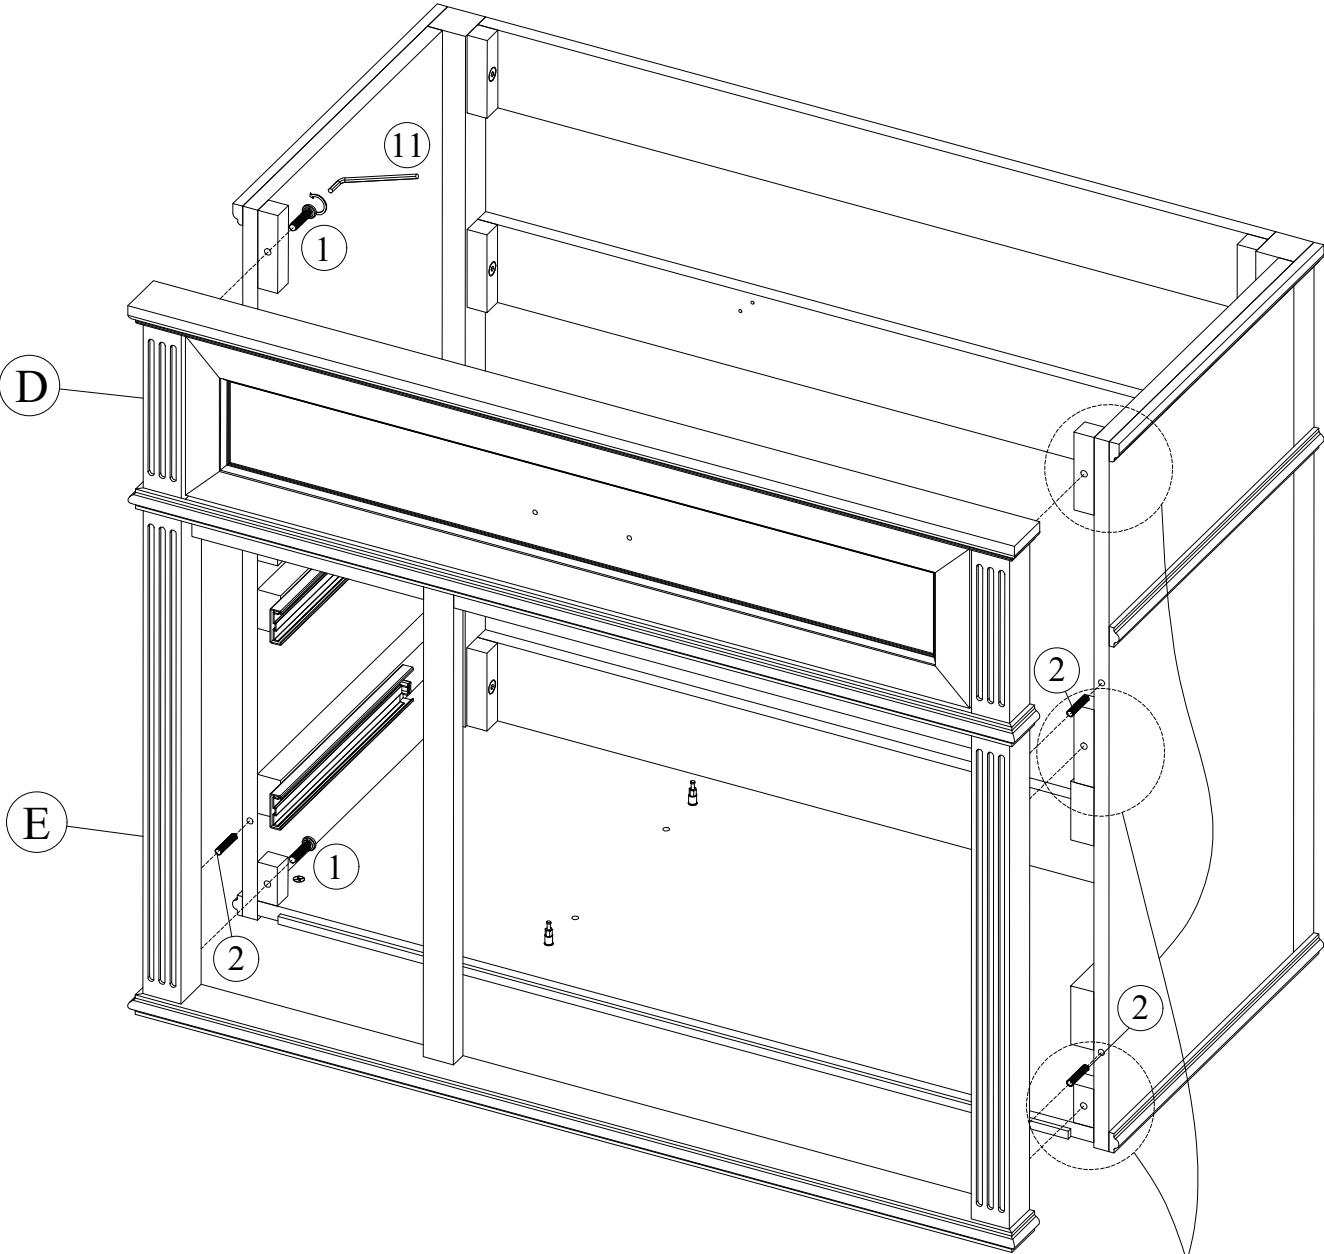



| No. | Hardware | Q'ty |
|-----|---------------------|------|
| 1 | Allen Bolts 1/4"x35 | 6 |
| 2 | Wooden dowels | 4 |
| 11 | Allen key | 1 |

STEP 7

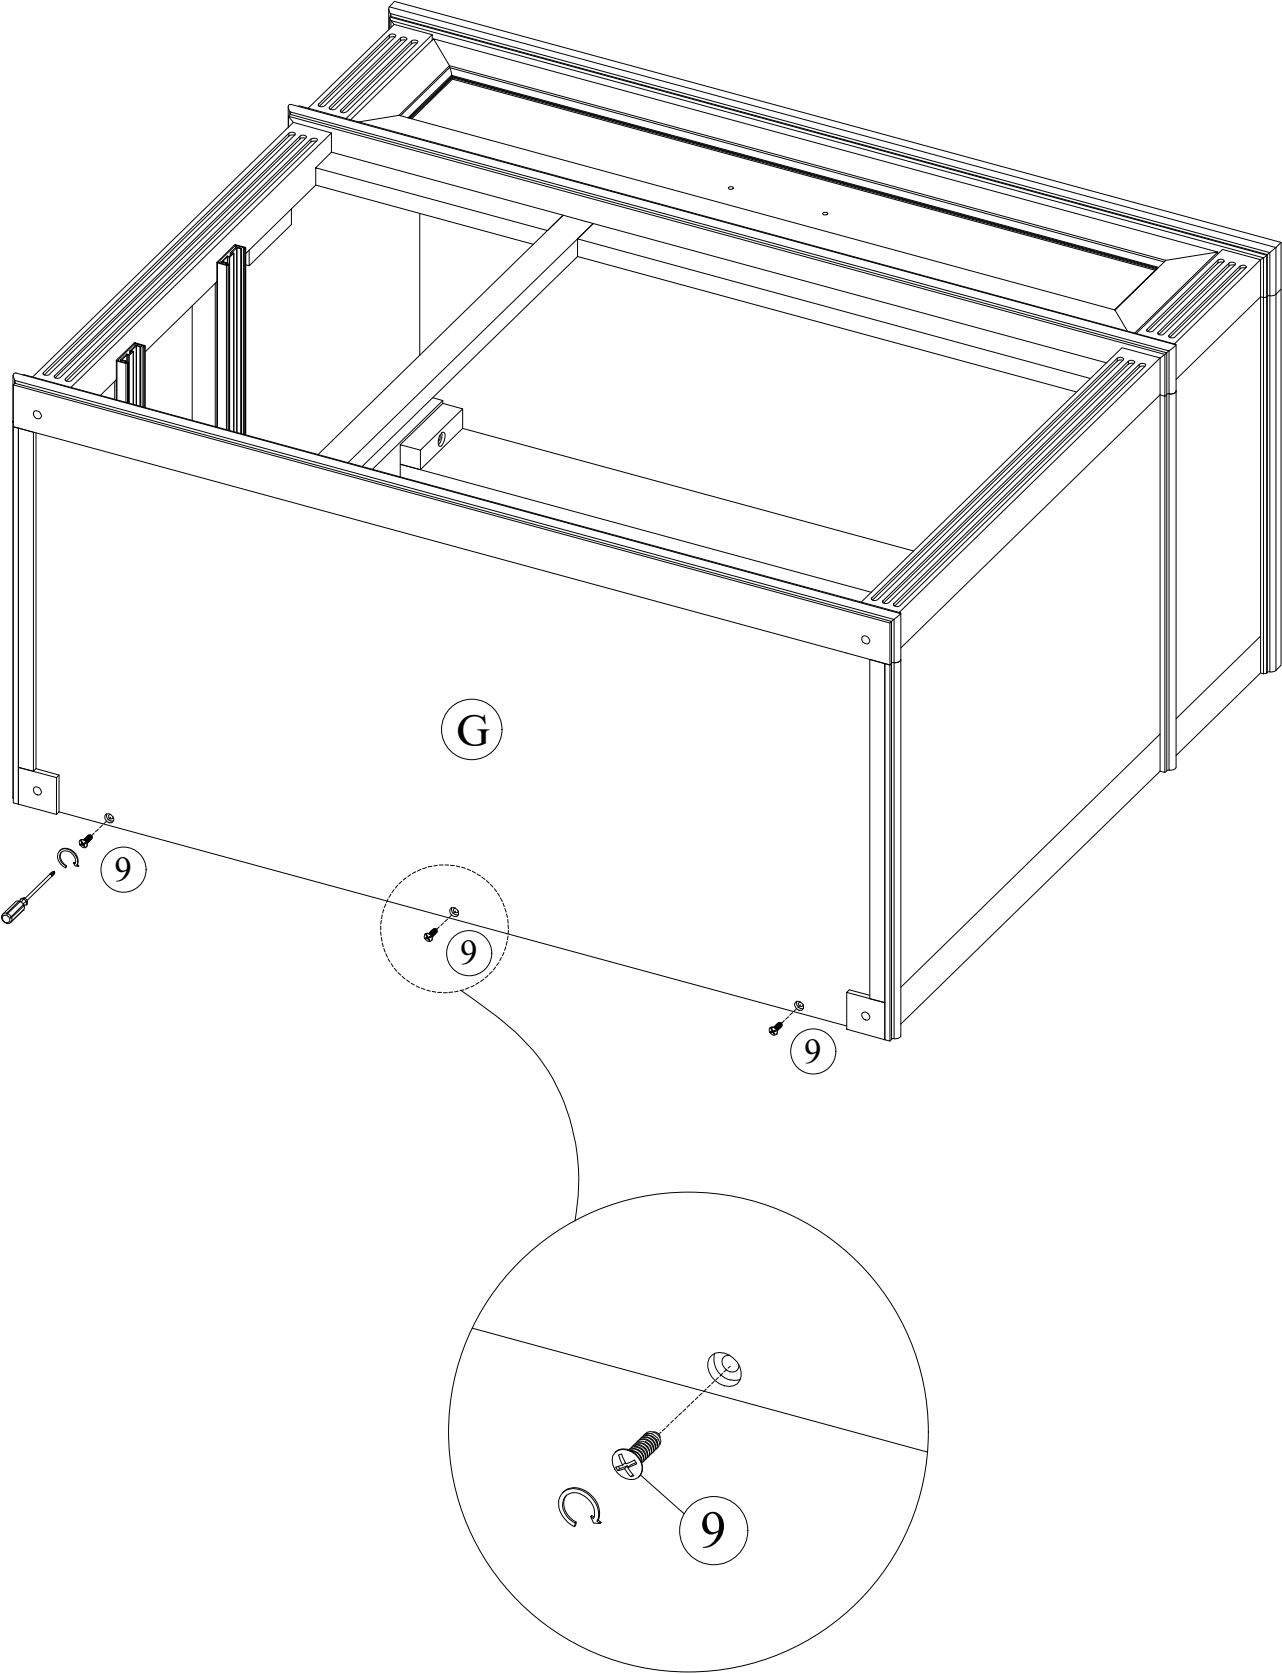


| No. | Hardware | Q'ty |
|-----|-------------|------|
| 9 | Screws 4x25 | 3 |

STEP 8

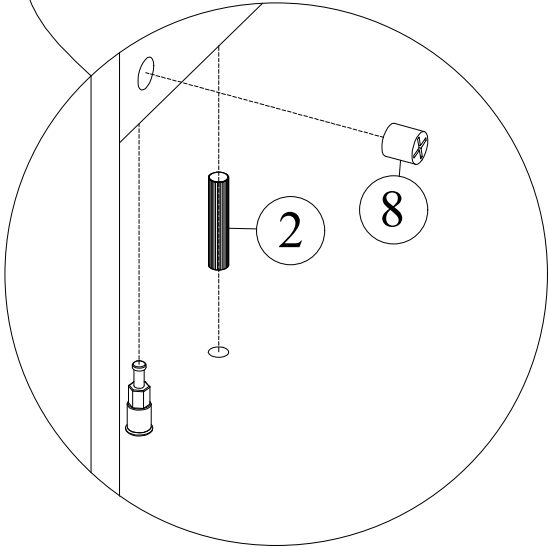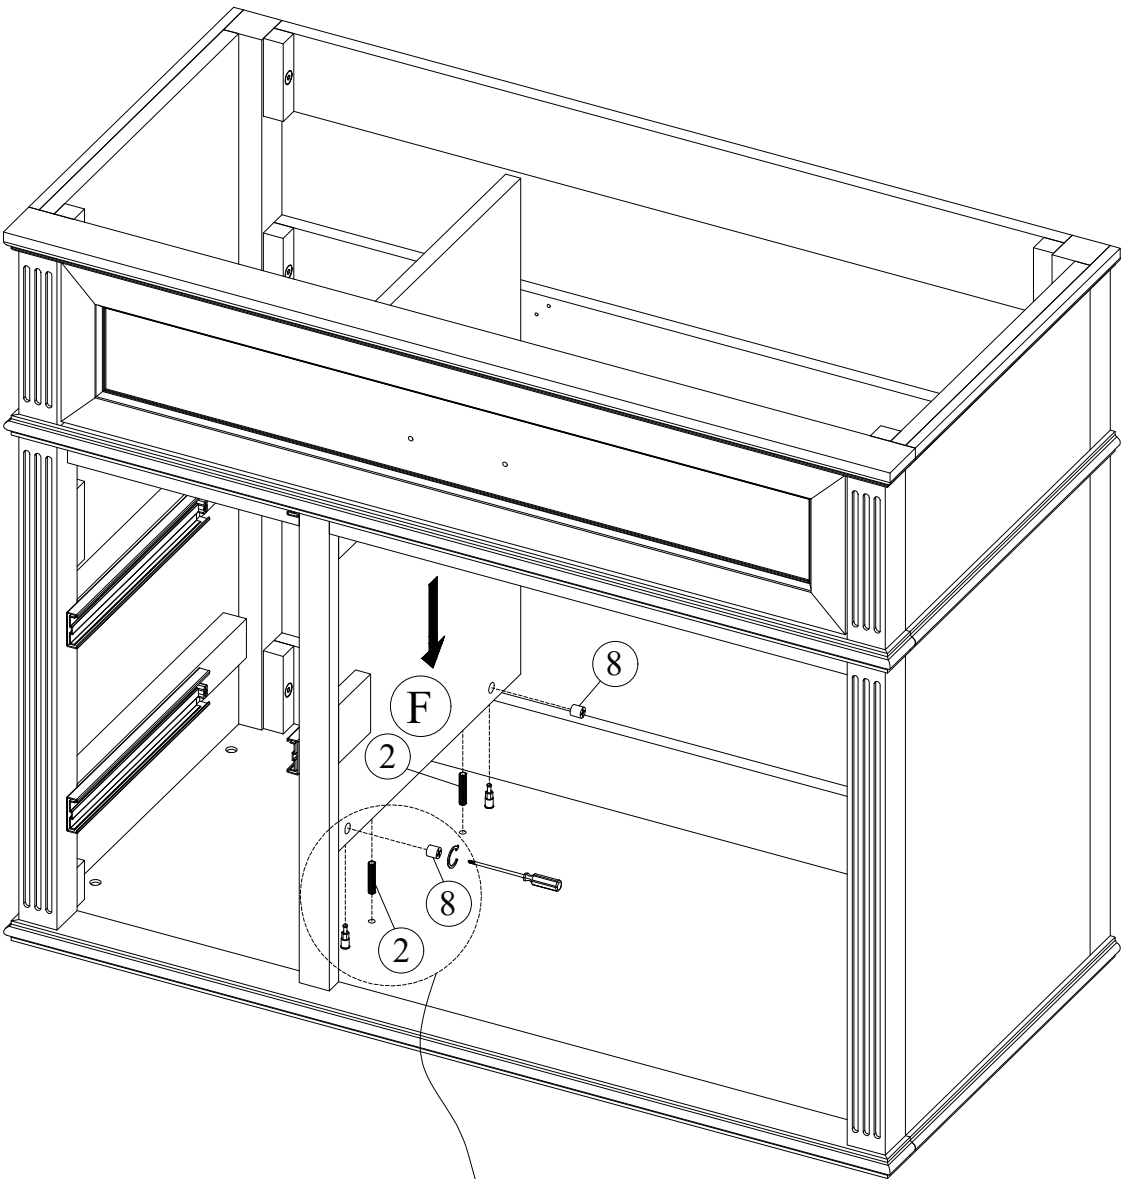


| No. | Hardware | Q'ty |
|-----|---------------|------|
| 2 | Wooden dowels | 2 |
| 8 | Cam locks | 2 |

STEP 9

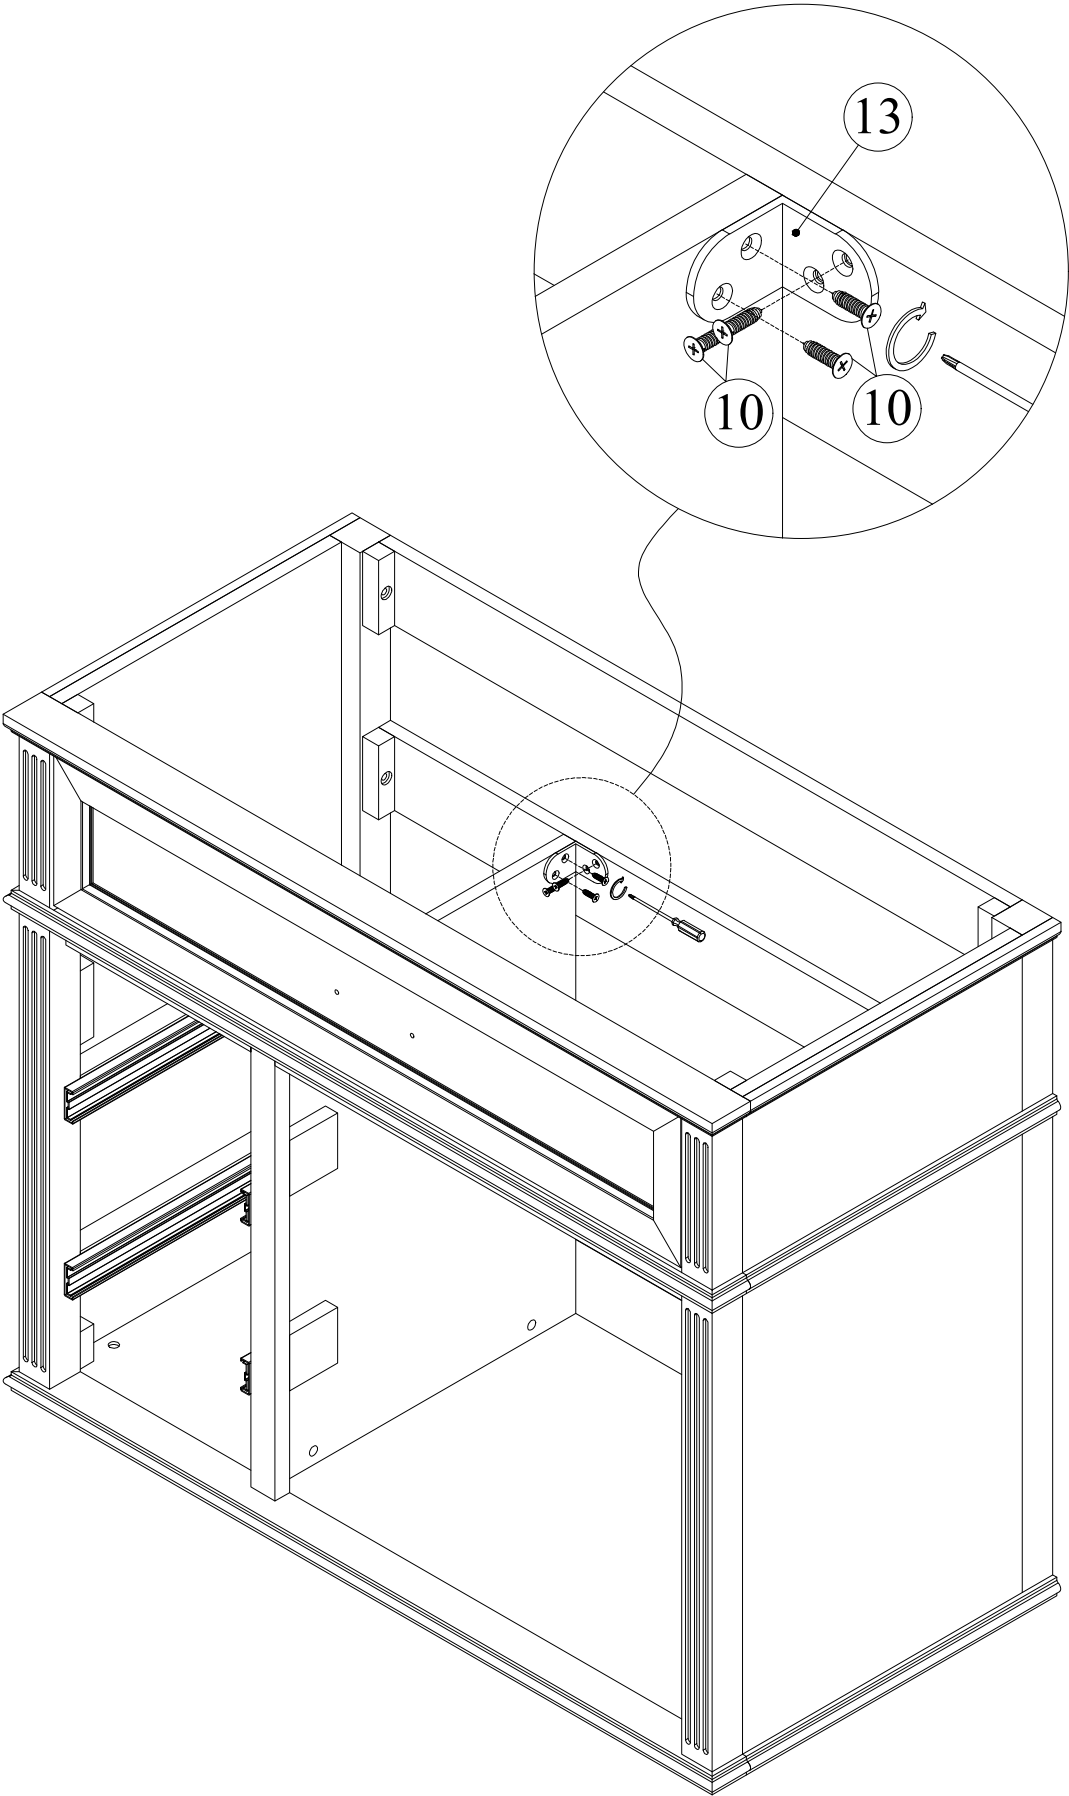


| No. | Hardware | Q'ty |
|-----|---------------|------|
| 10 | Screws 4x15 | 4 |
| 13 | Angle Bracket | 1 |

STEP 10

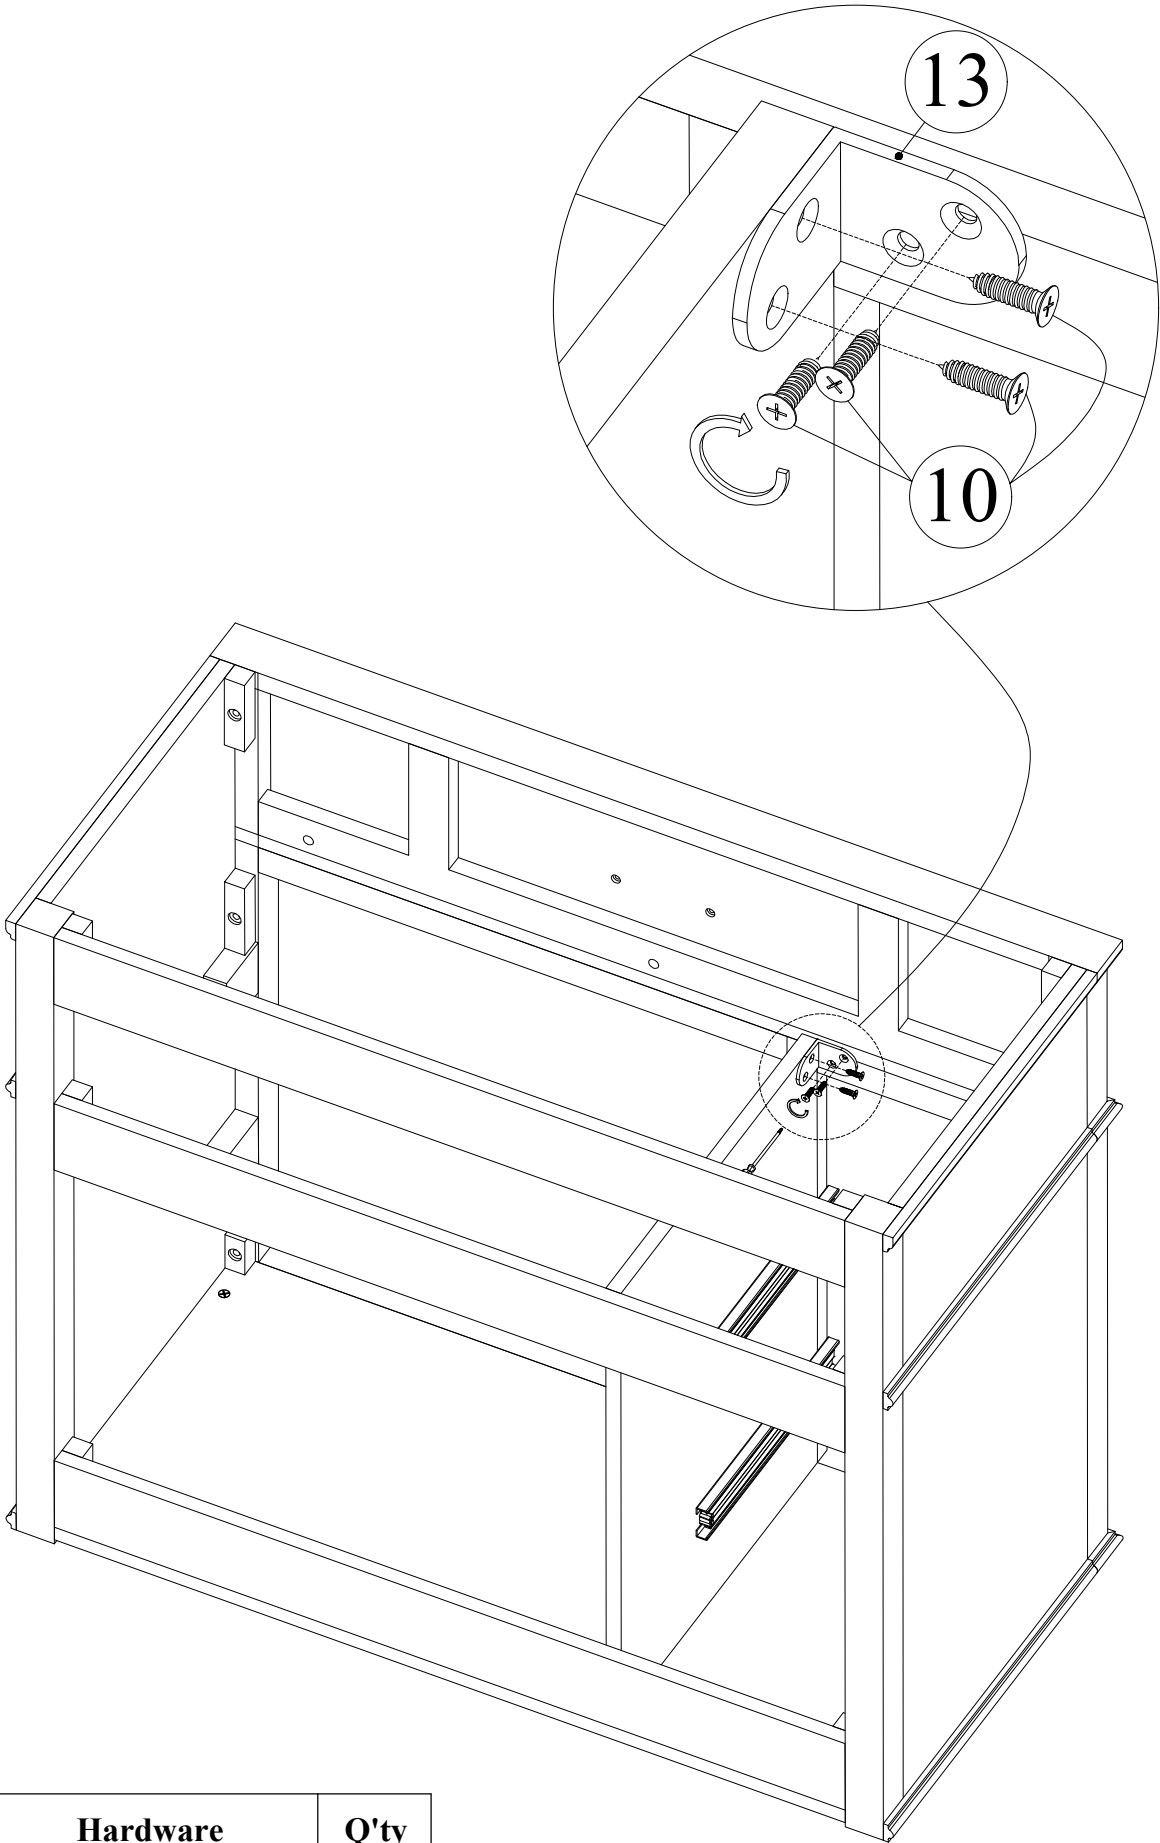


| No. | Hardware | Q'ty |
|-----|---------------|------|
| 10 | Screws 4x15 | 4 |
| 13 | Angle Bracket | 1 |

STEP 11

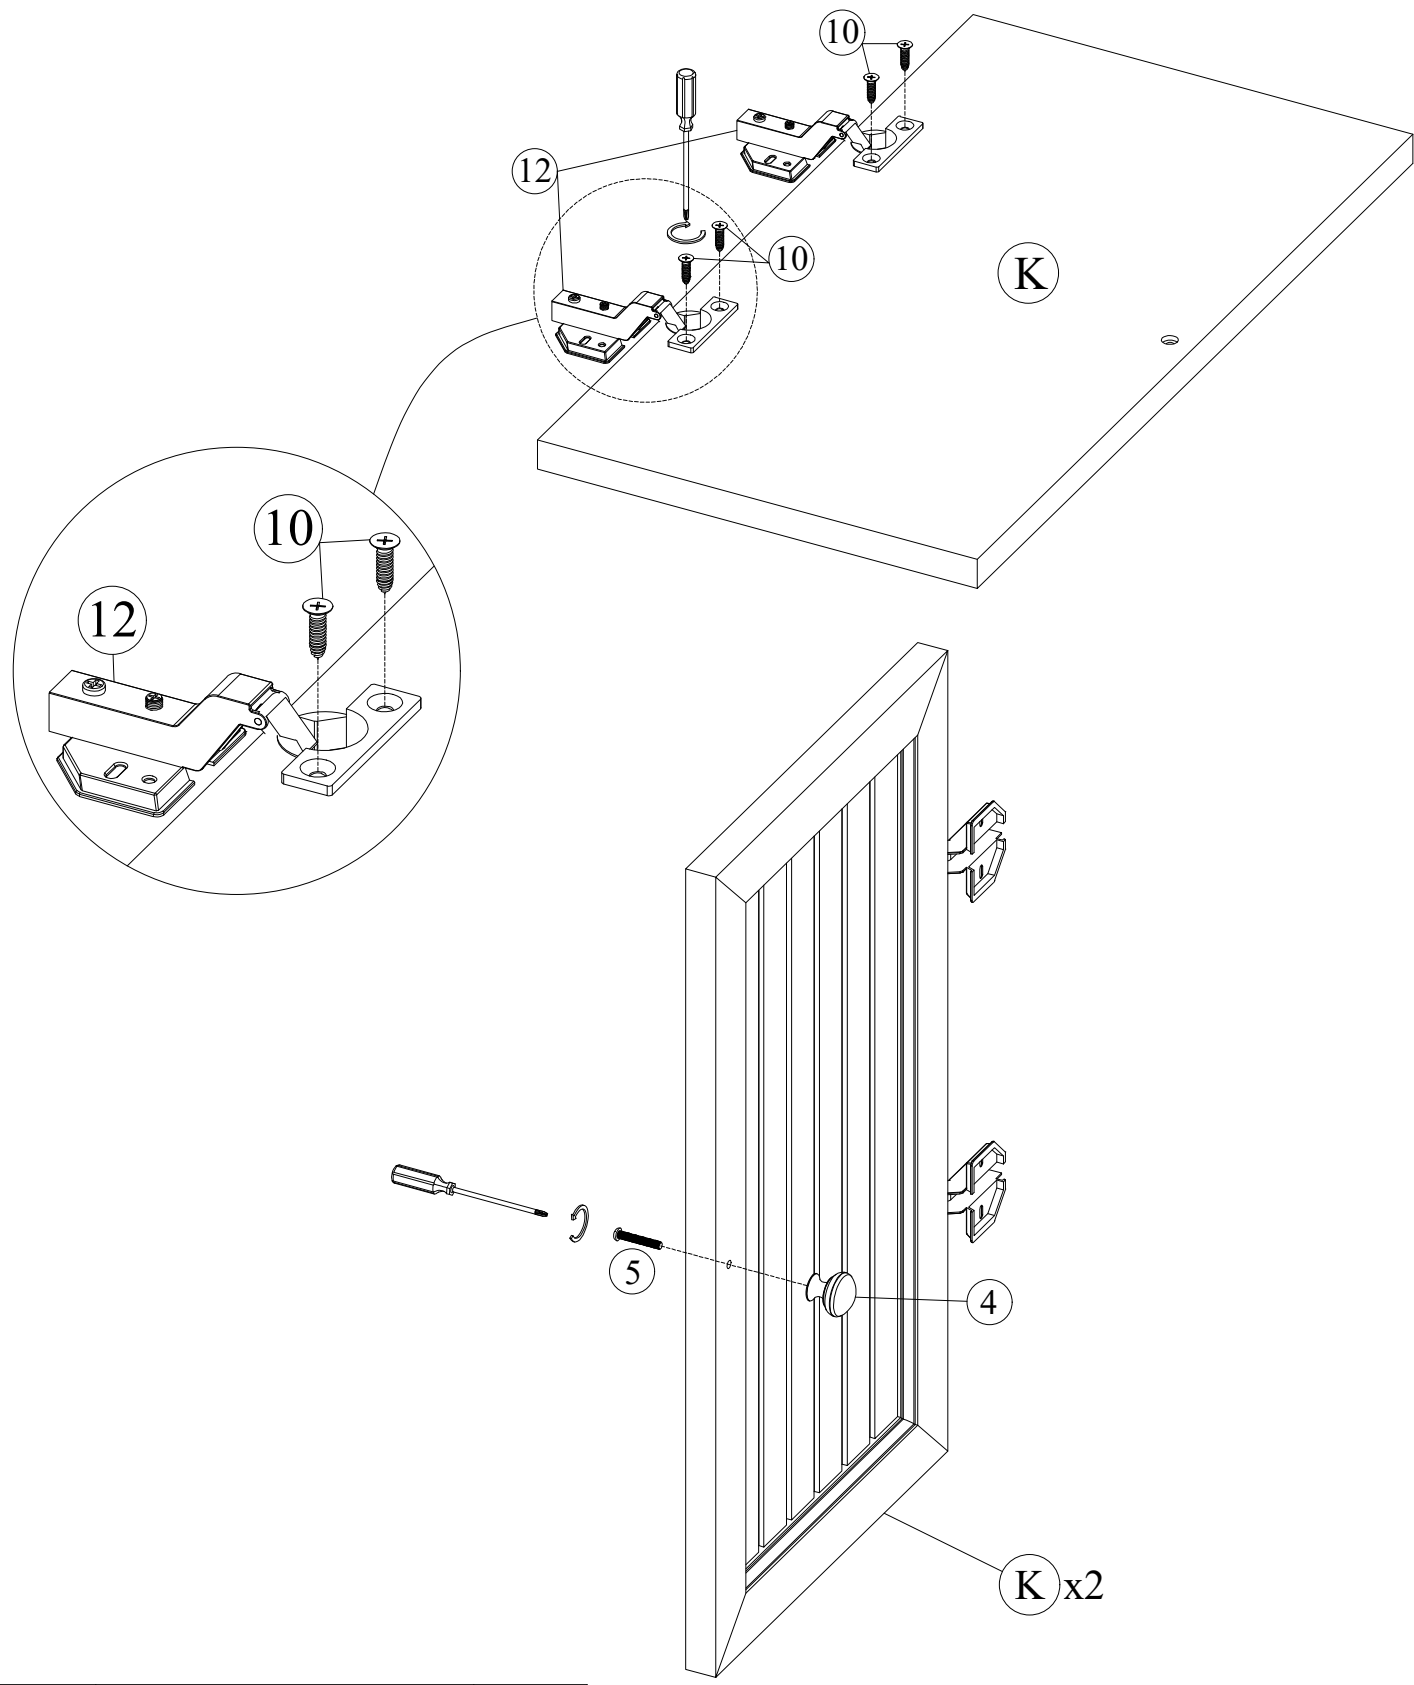

| No. | Hardware | Q'ty |
|-----|-------------|------|
| 4 | Knob | 2 |
| 5 | Bolt M4x25 | 2 |
| 10 | Screws 4x15 | 8 |
| 12 | Hinges | 4 |


STEP 12

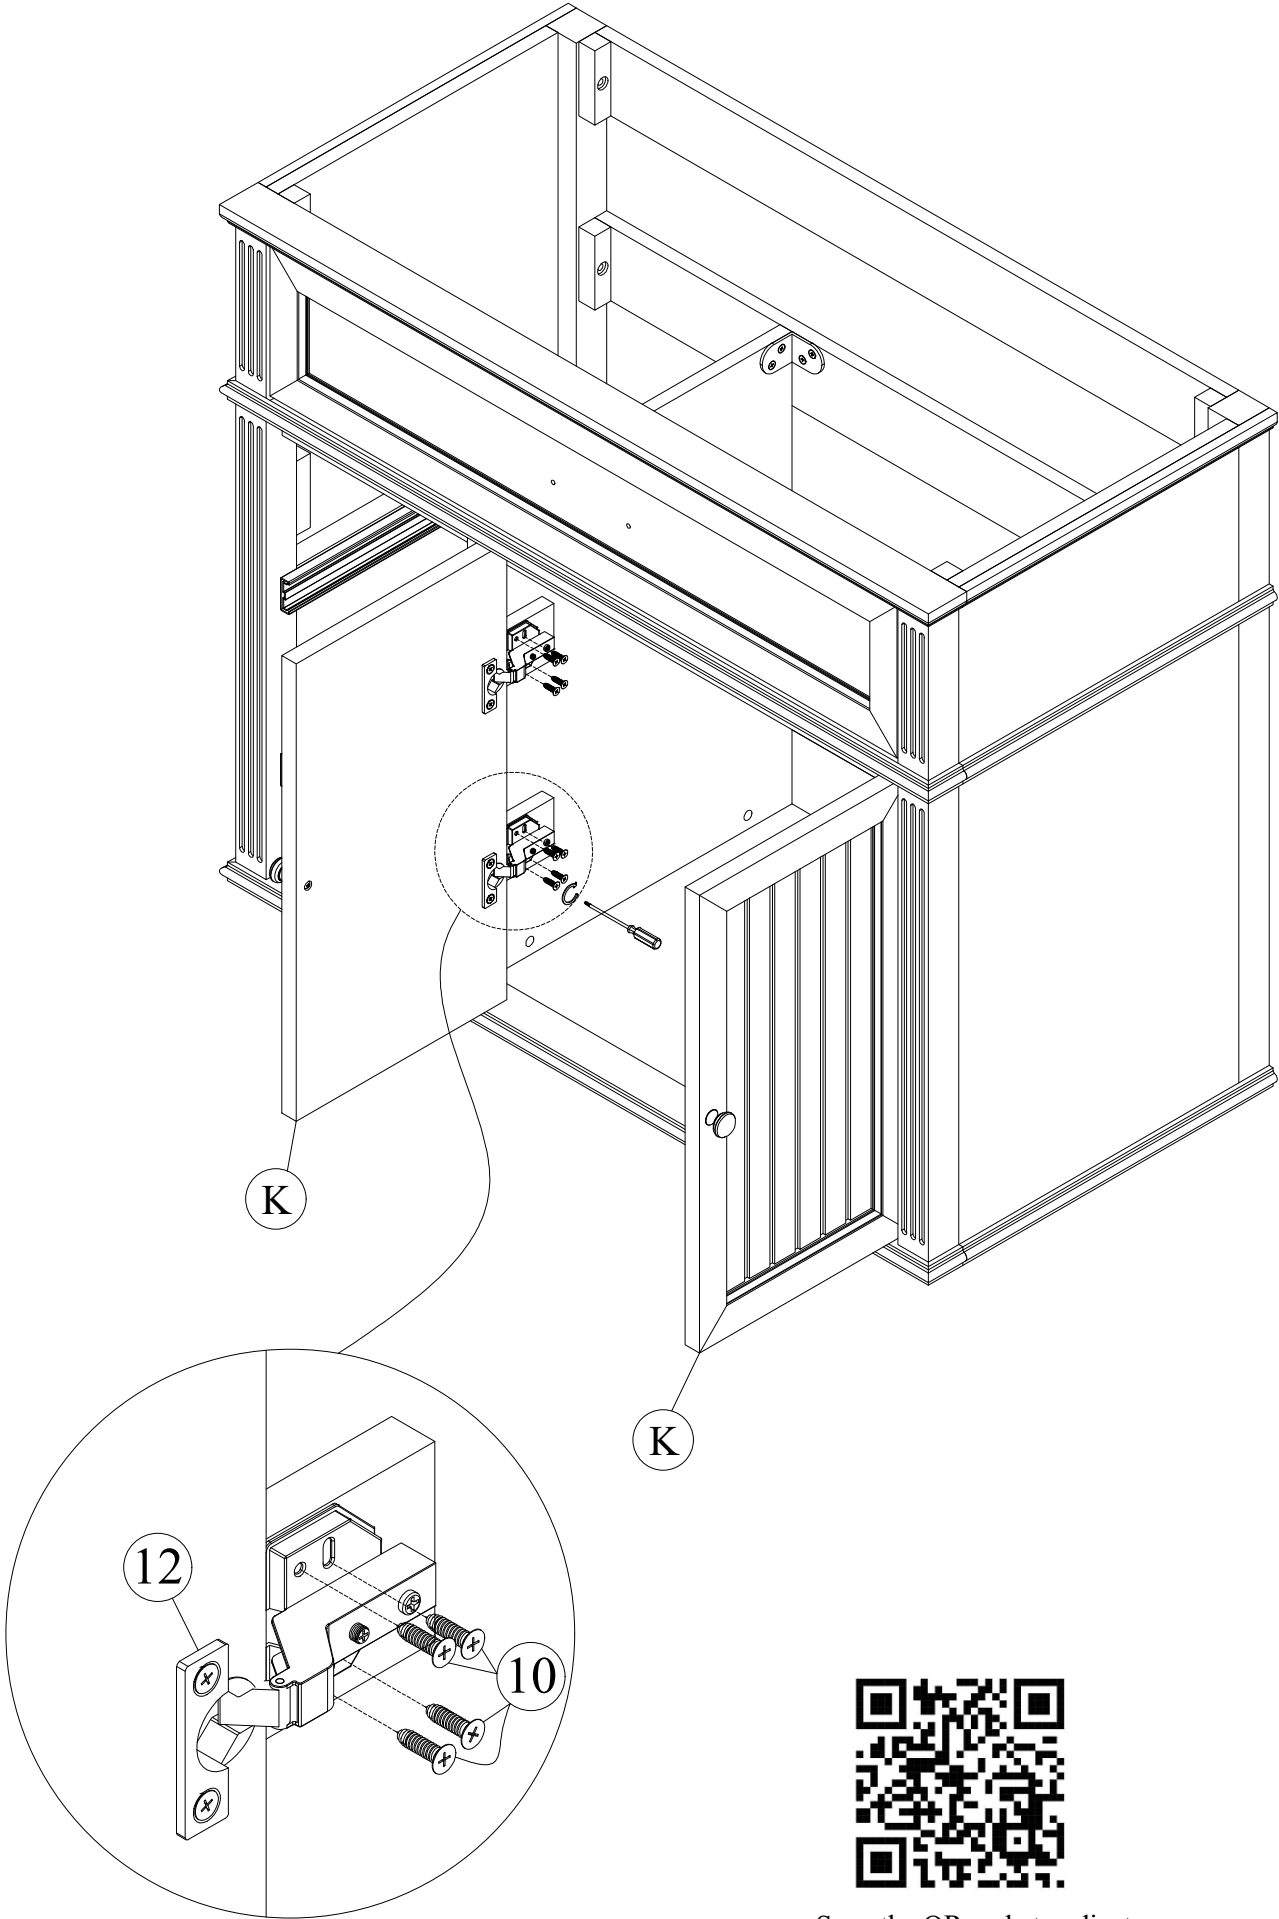


Scan the QR code to adjust the cabinet door clearance as desired.

| No. | Hardware | Q'ty |
|-----|-------------|------|
| 10 | Screws 4x15 | 8 |

STEP 13

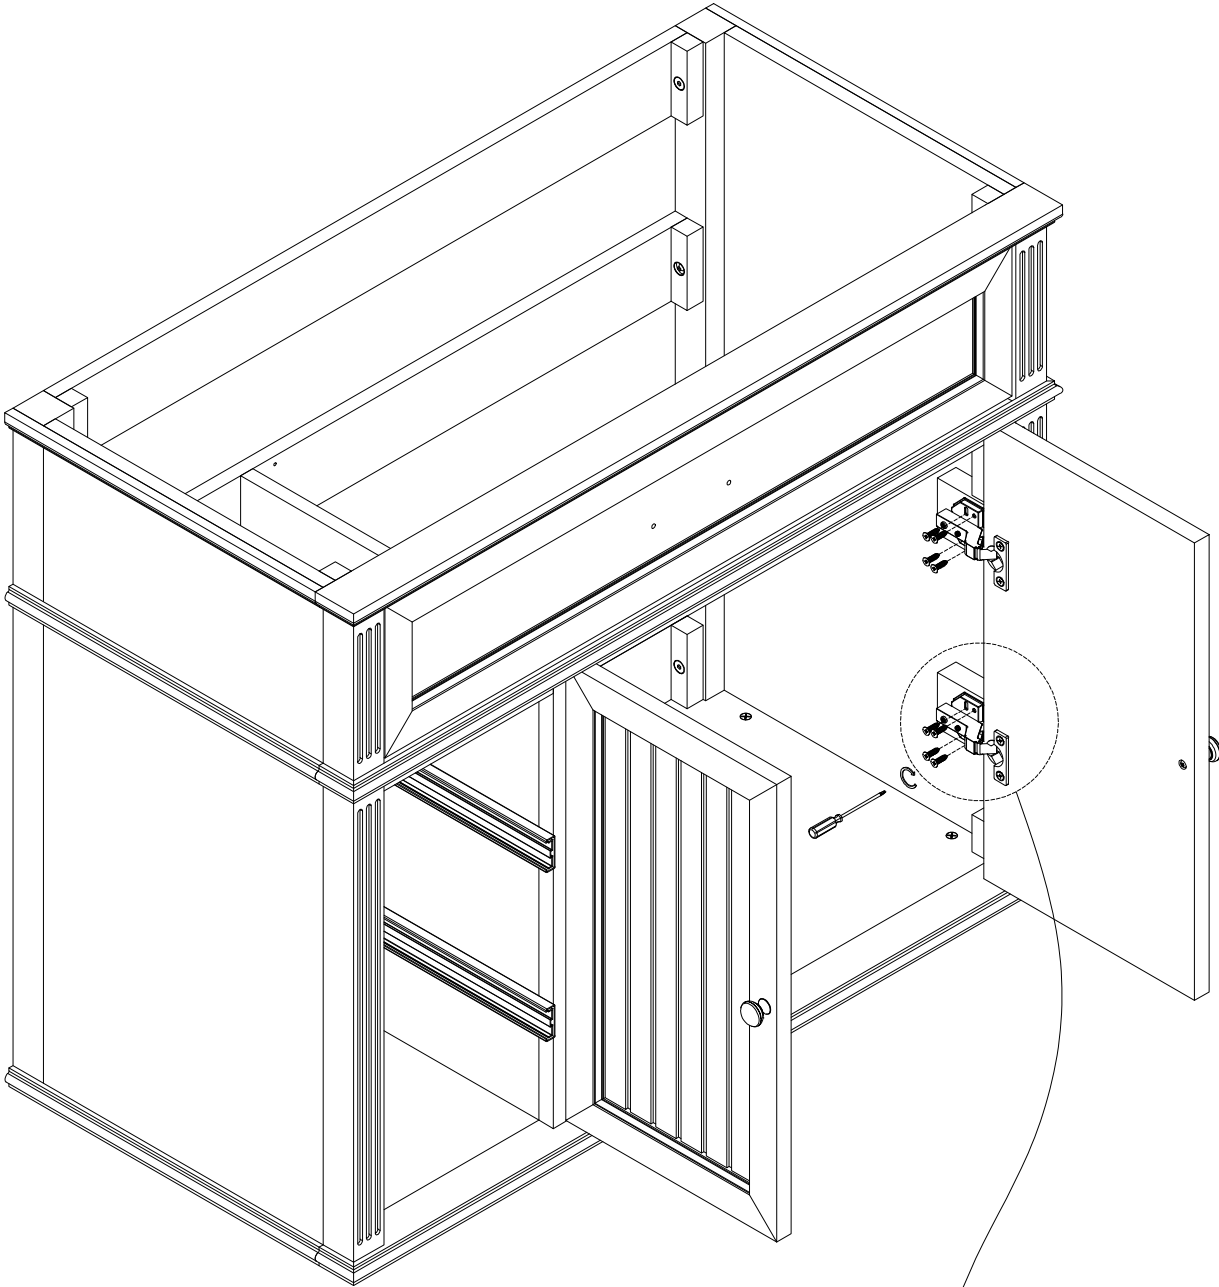


Scan the QR code to adjust
the cabinet door clearance as
desired.

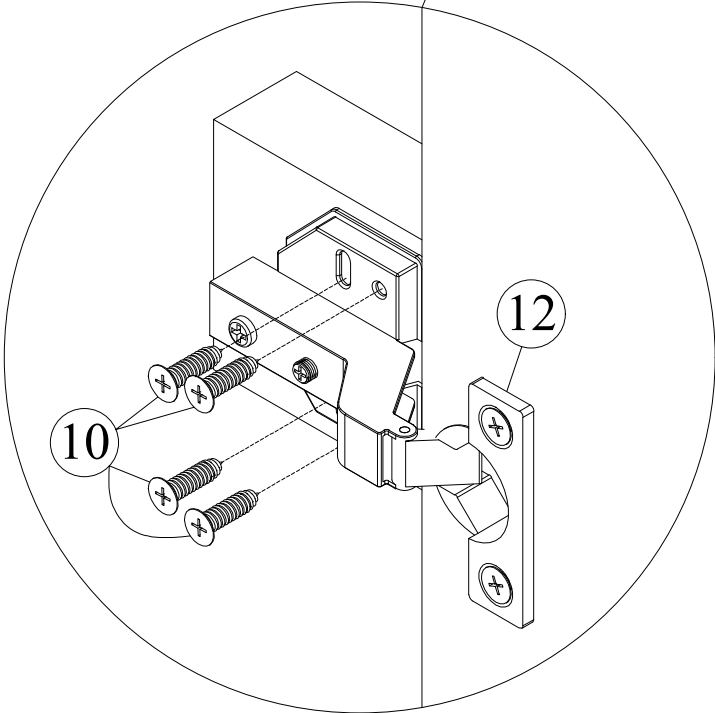


| No. | Hardware | Q'ty |
|-----|-------------|------|
| 10 | Screws 4x15 | 8 |


STEP 14

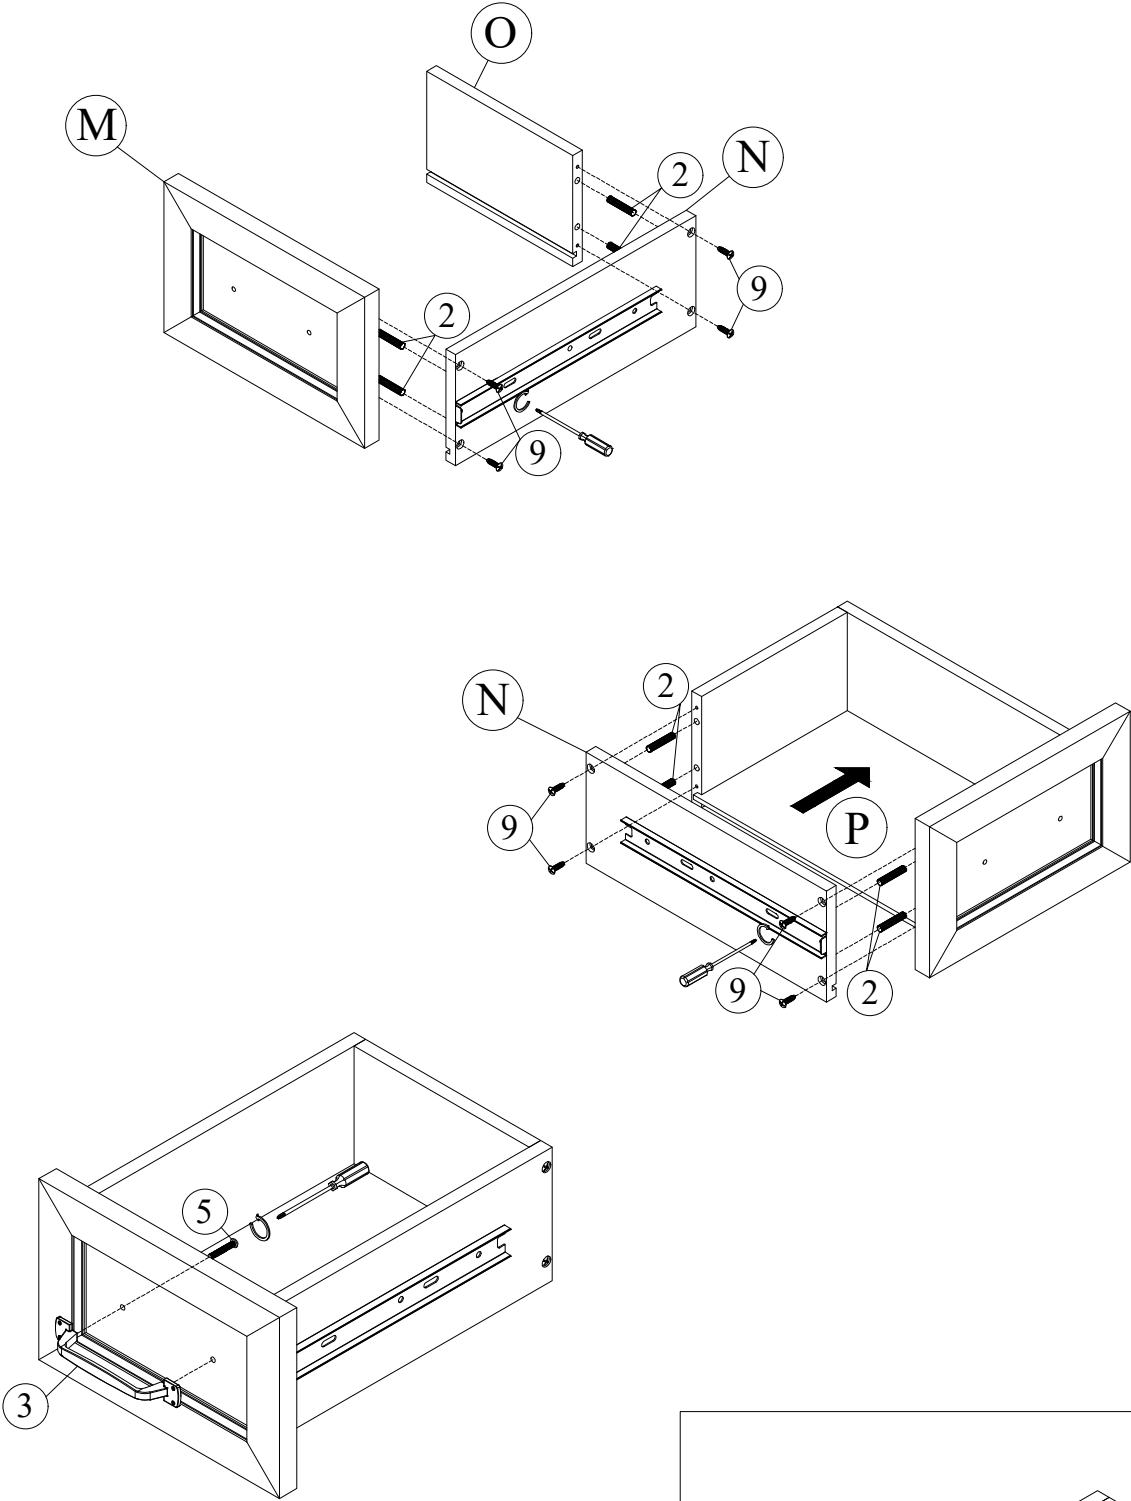


| No. | Hardware | Q'ty |
|-----|---------------|------|
| 2 | Wooden dowels | 8 |
| 3 | Handle | 1 |
| 5 | Bolts M4x25 | 2 |
| 9 | Screws 4x25 | 8 |

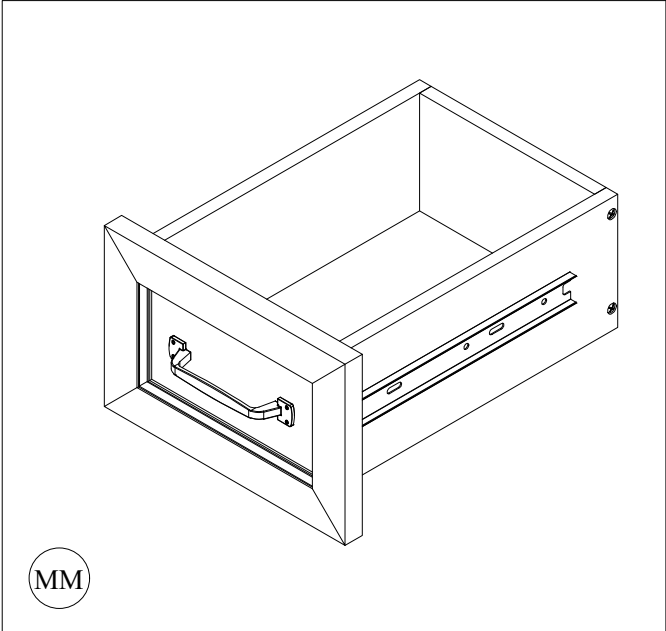


STEP 15

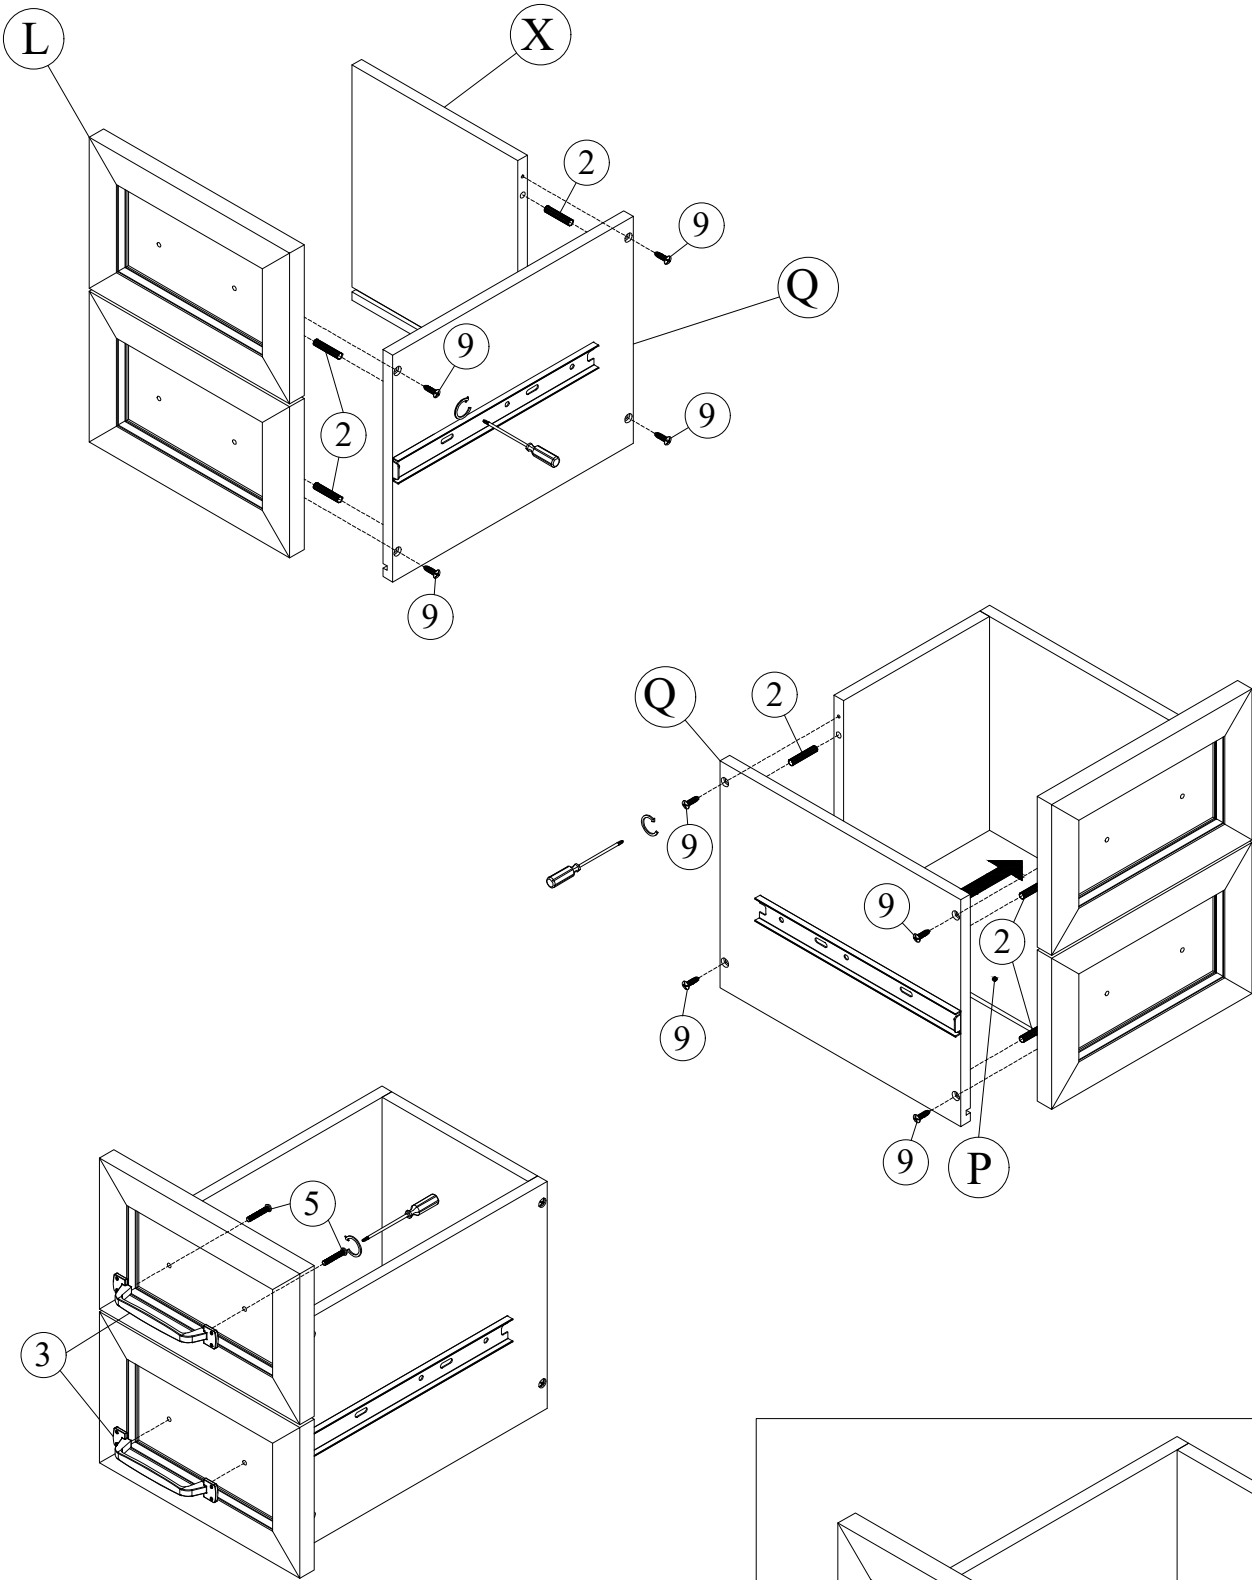


| No. | Hardware | Q'ty |
|-----|---------------|------|
| 2 | Wooden dowels | 8 |
| 3 | Handle | 2 |
| 5 | Bolts M4x25 | 4 |
| 9 | Screws 4x25 | 8 |

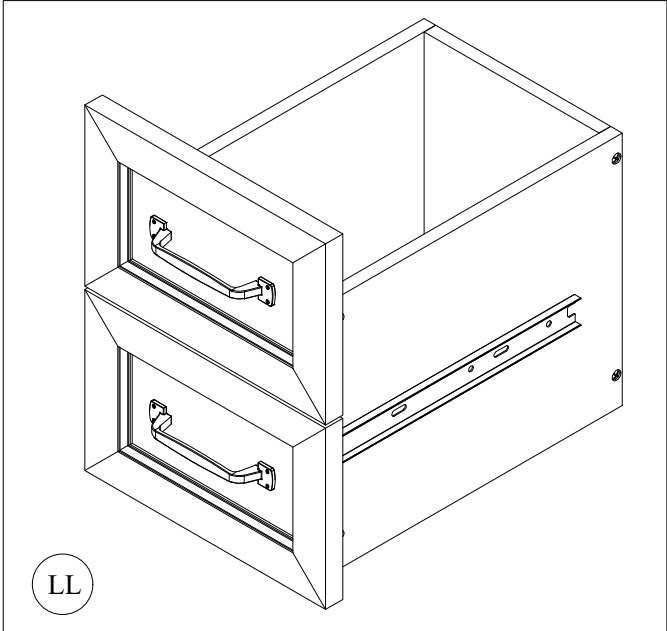


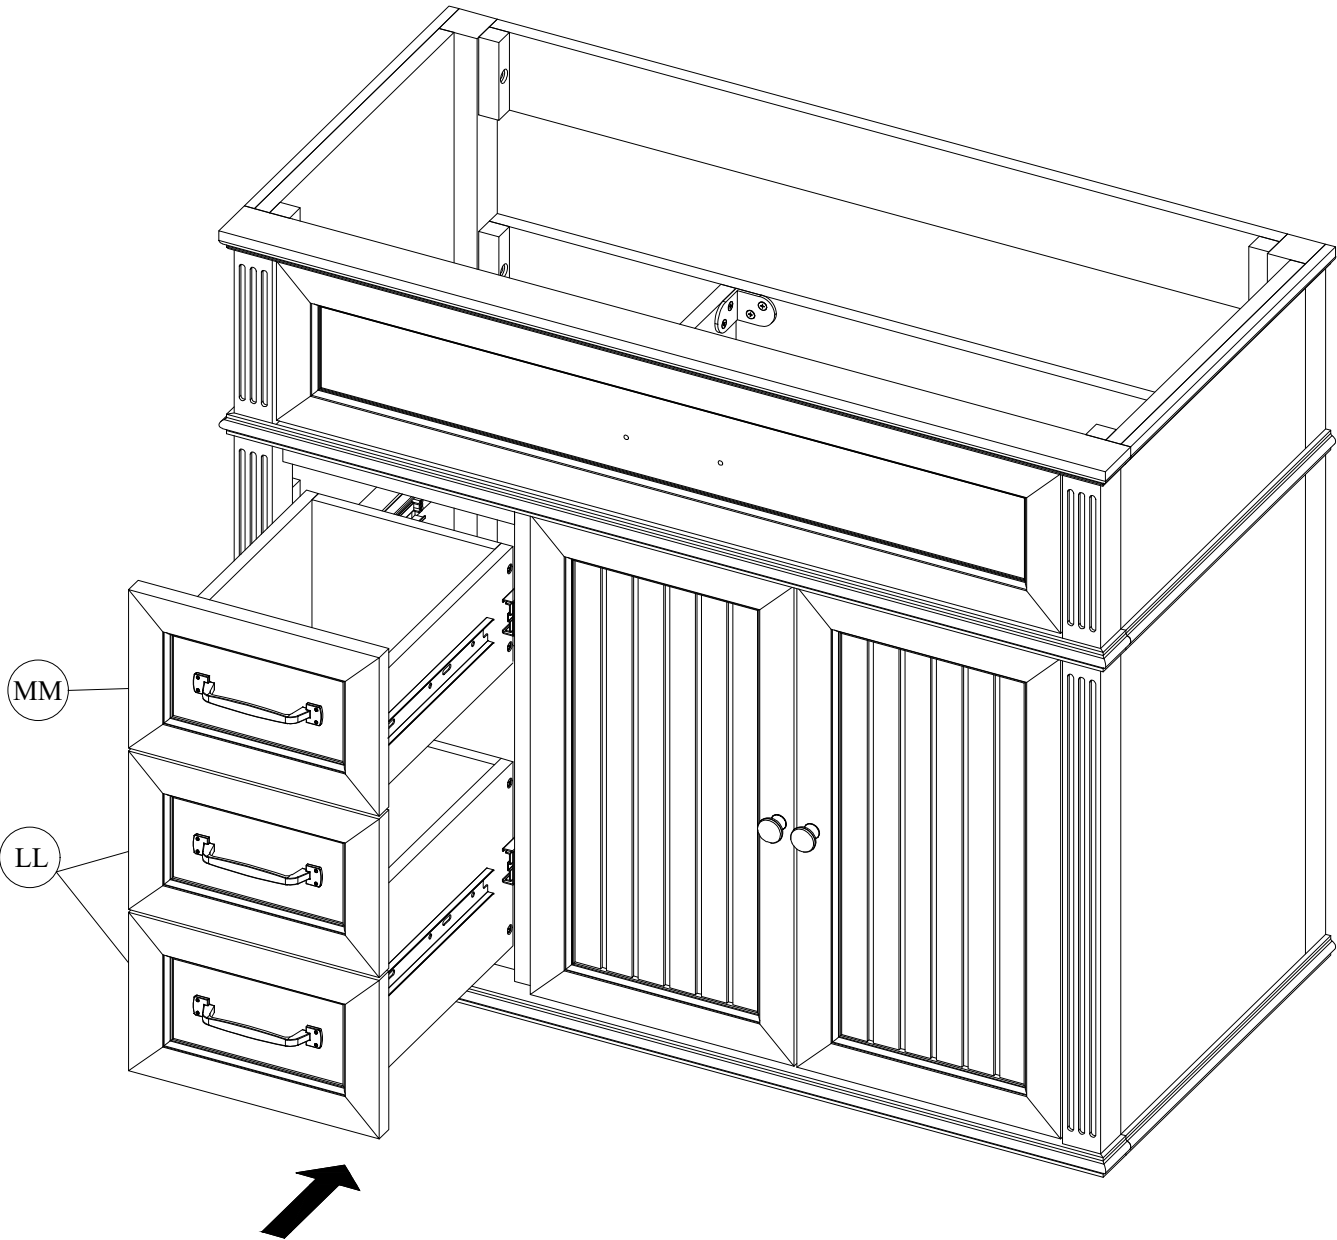


STEP 17

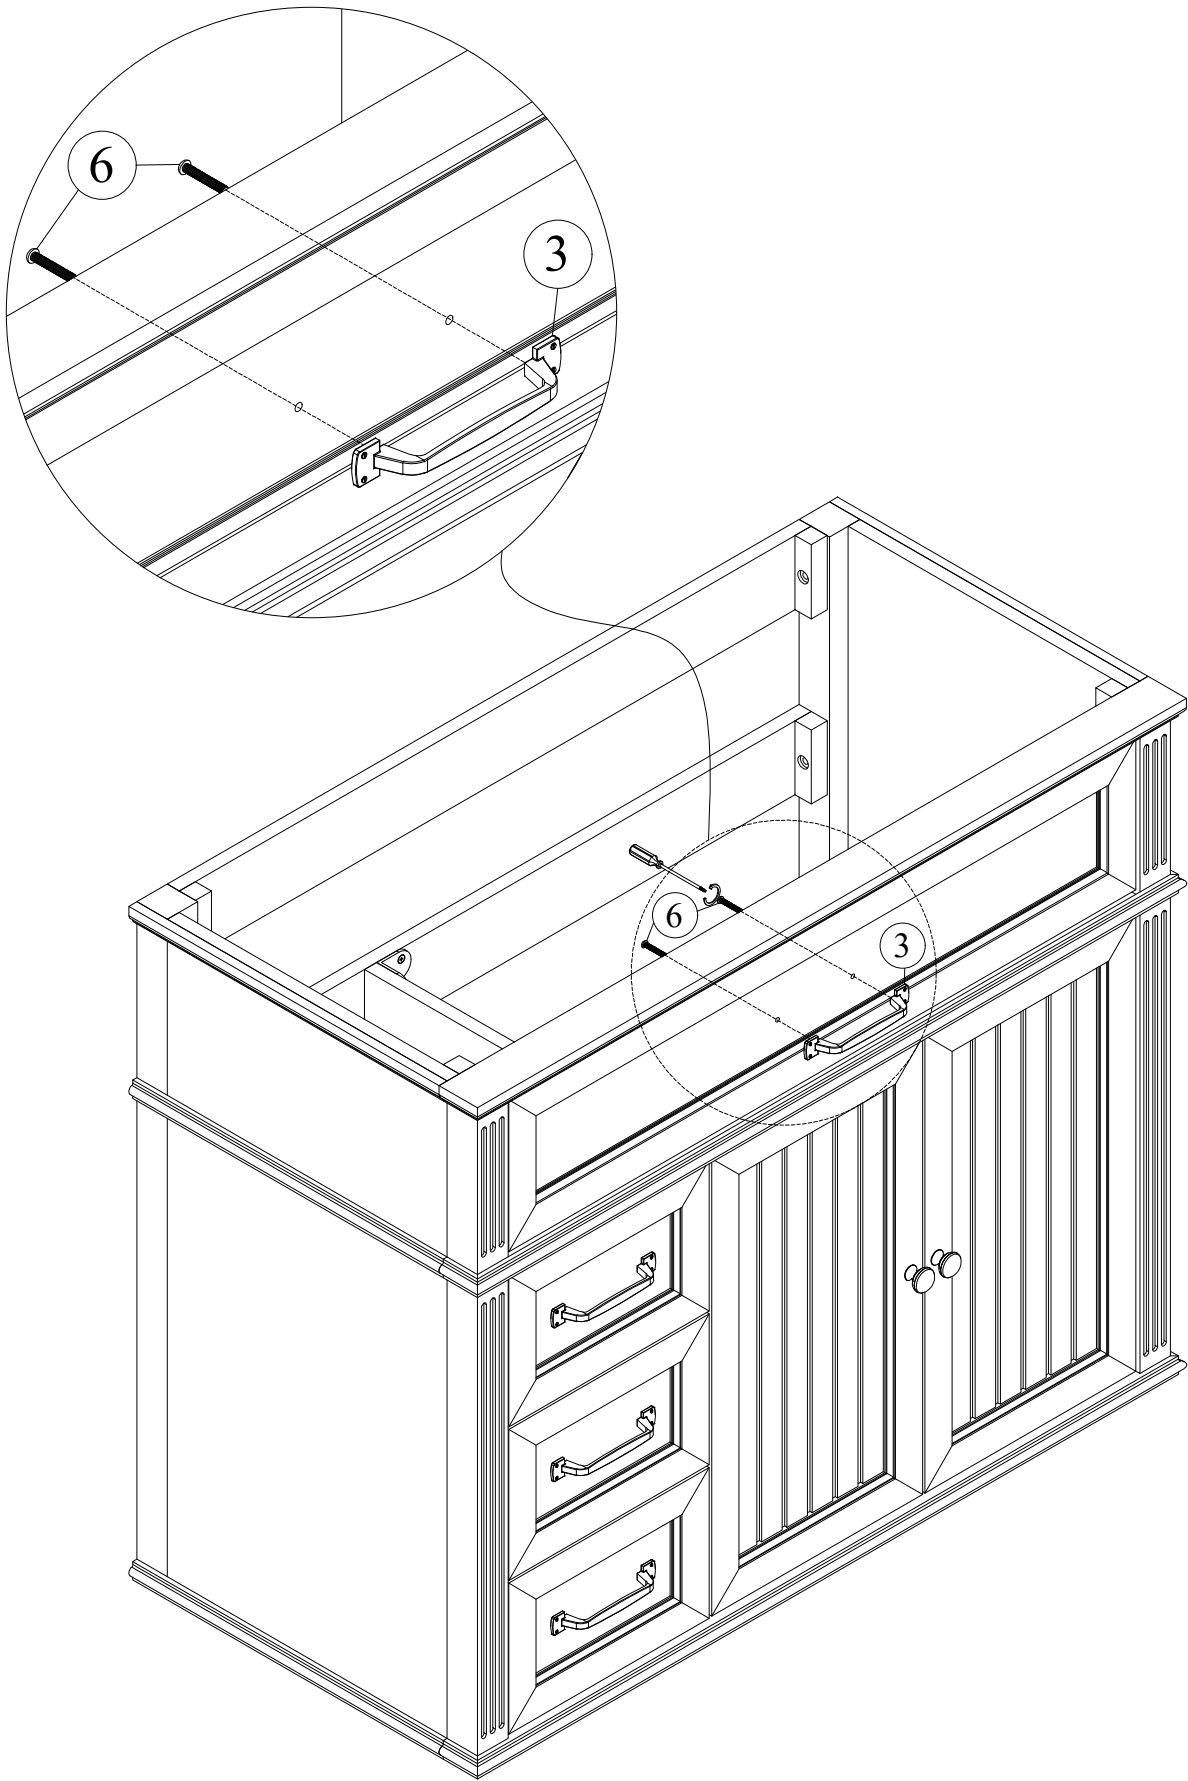

| No. | Hardware | Q'ty |
|-----|-------------|------|
| 3 | Handle | 1 |
| 6 | Bolts M4x15 | 2 |

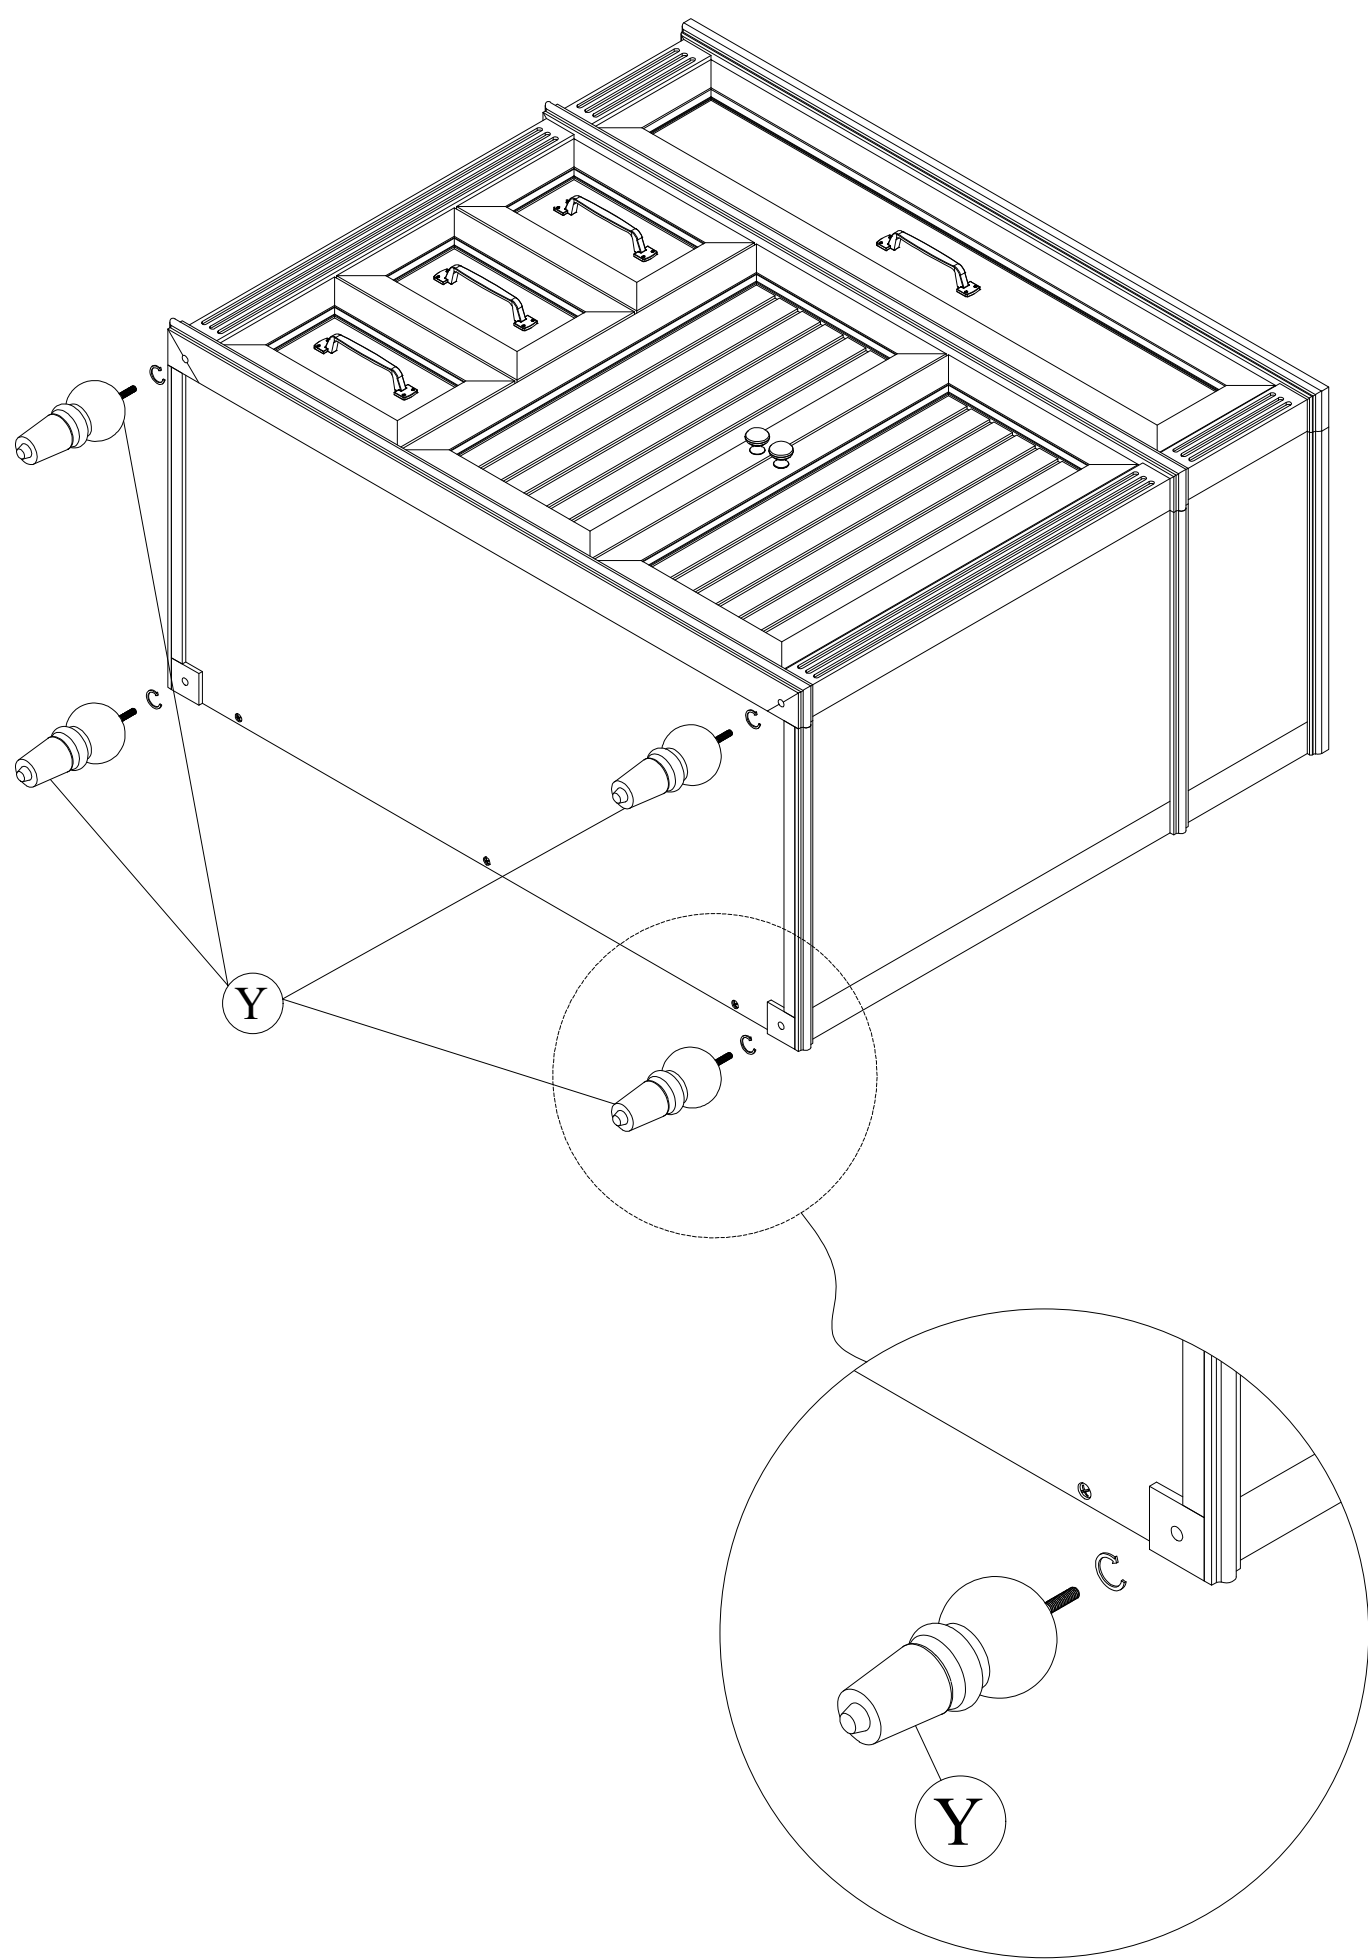

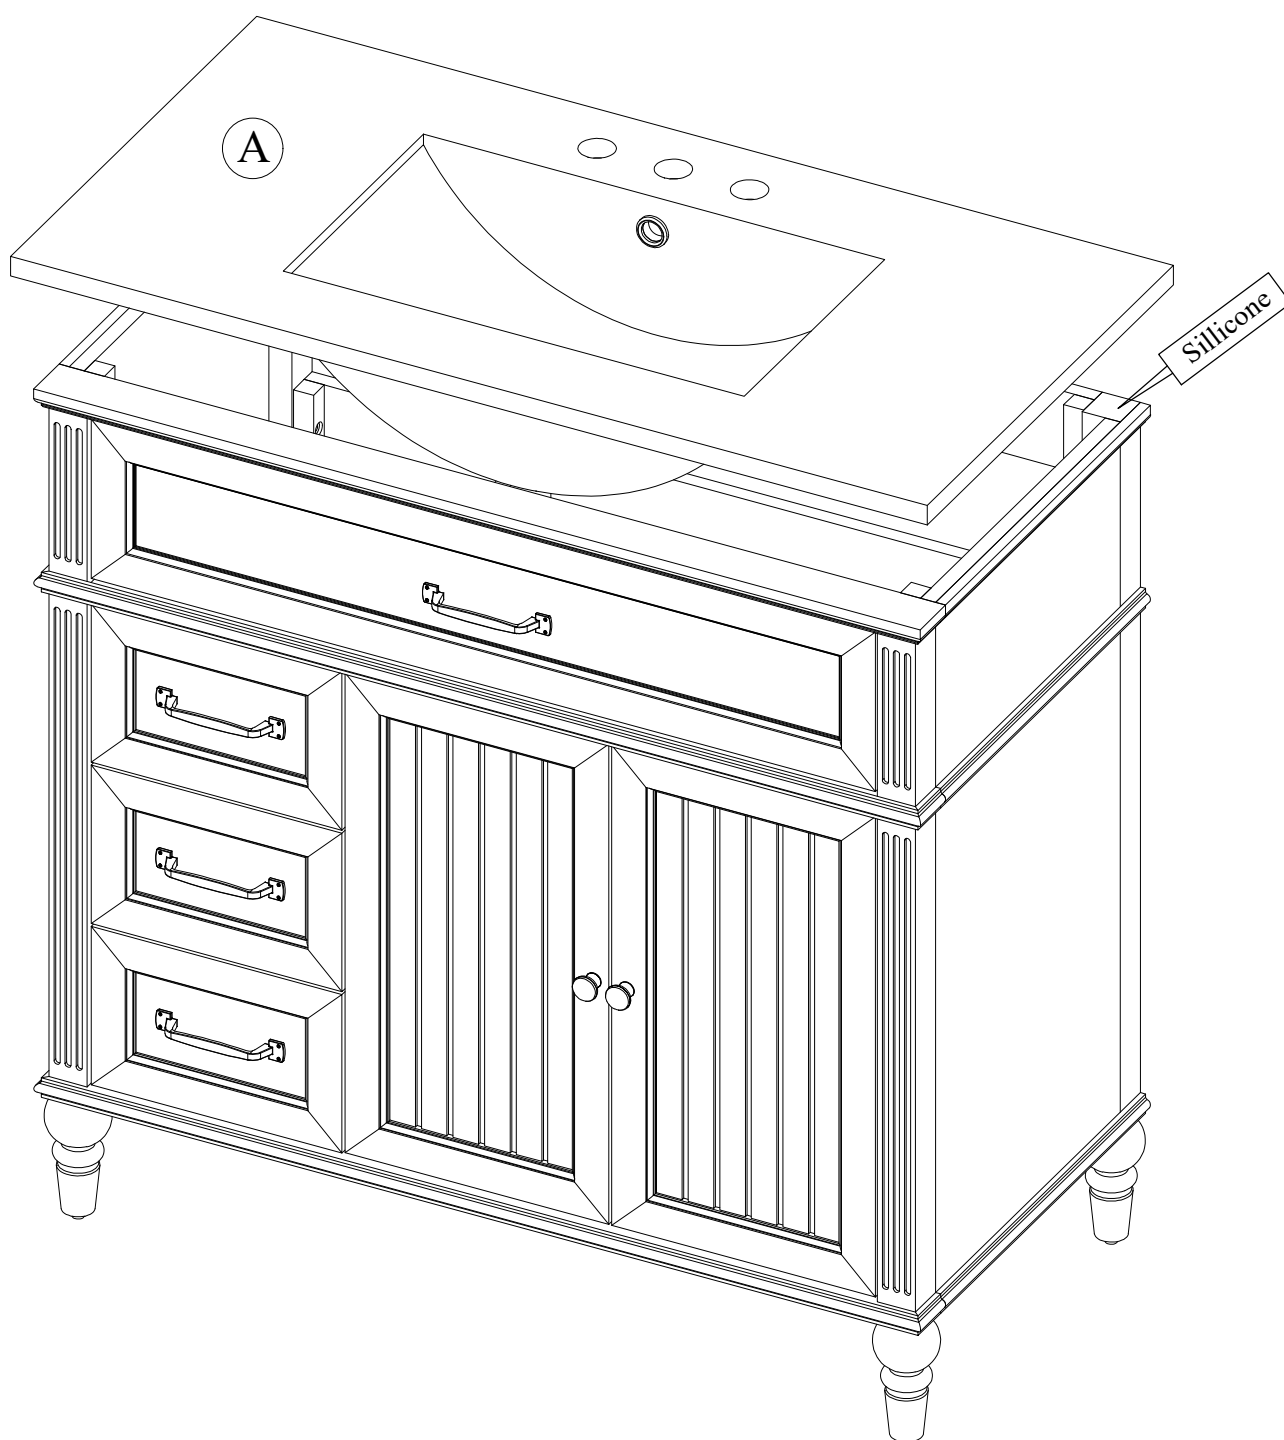



Install the Sink on the cabinet with glue.



Let stand for 24 hours.

Apply silicone caulk to the top edge of the wood cabinet.


With the help of another adult, gently lower the Sink top with assembled sink onto the cabinet.

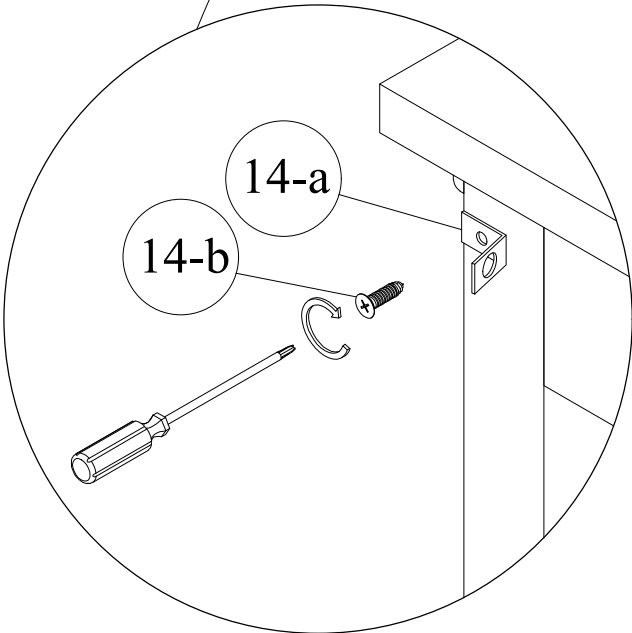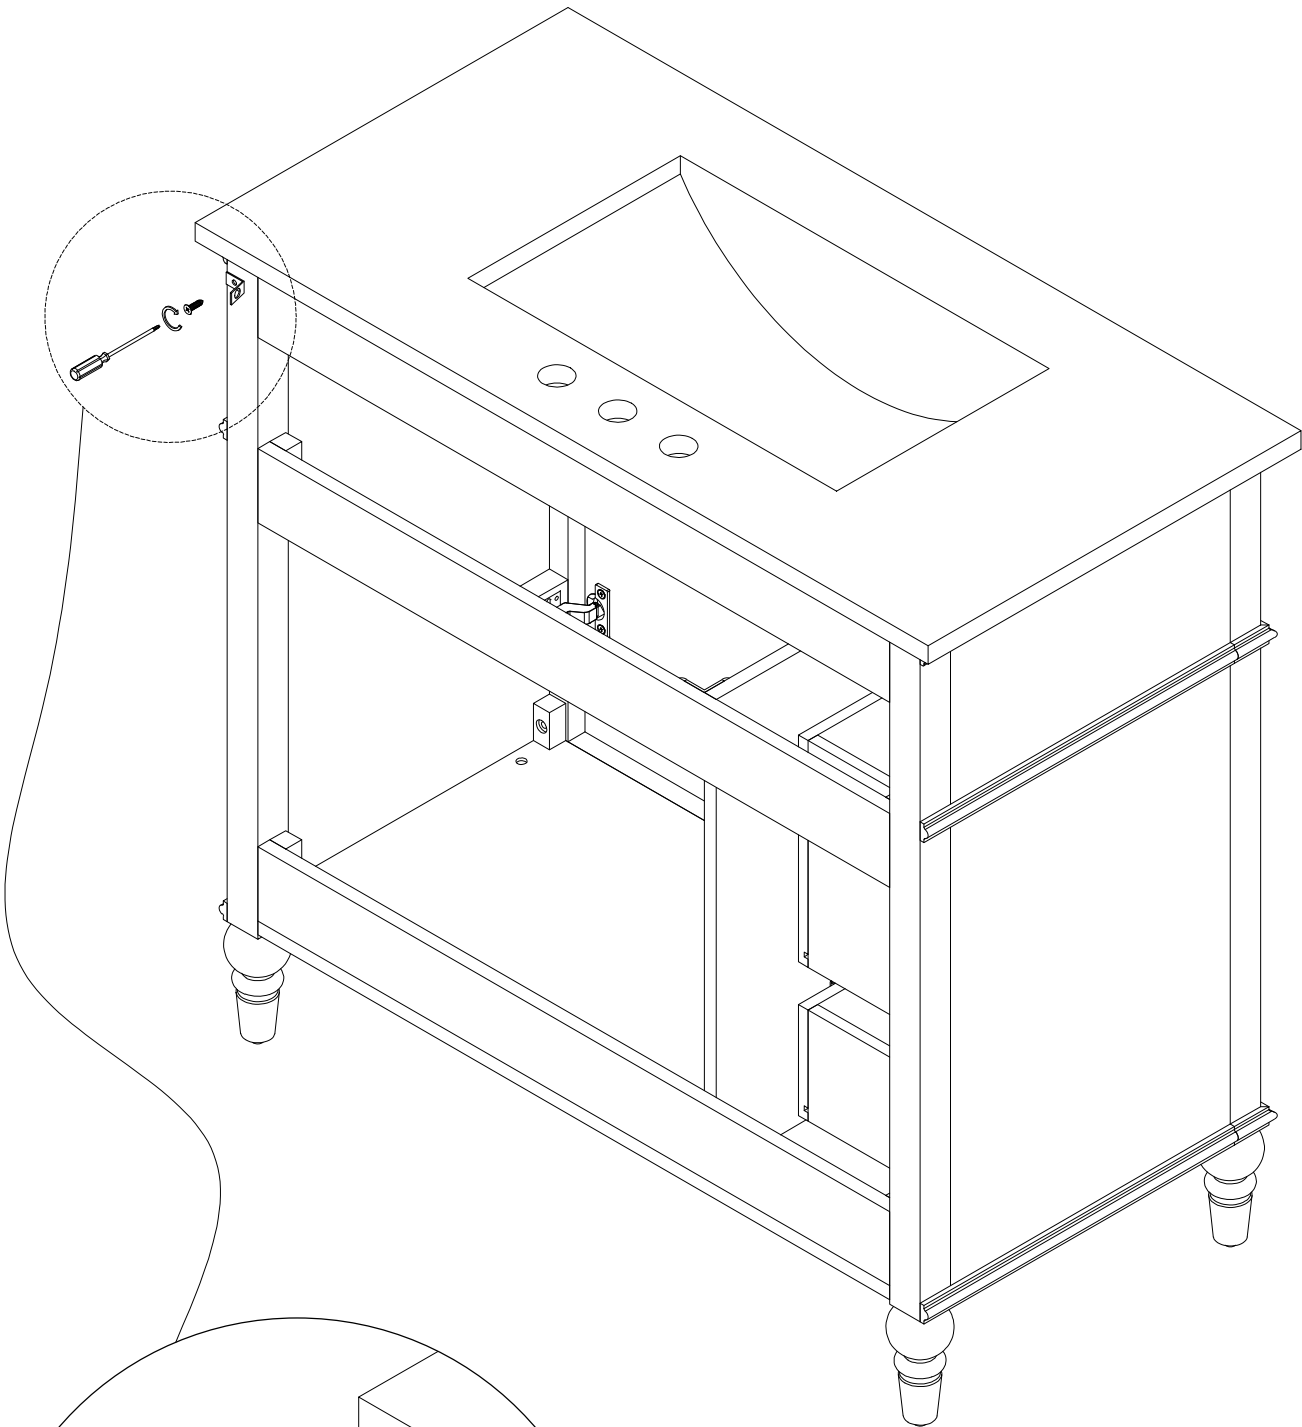


STEP 20




| No. | Hardware | Q'ty |
|------|---|------|
| 14-a |  | 1 |
| 14-b |  | 1 |

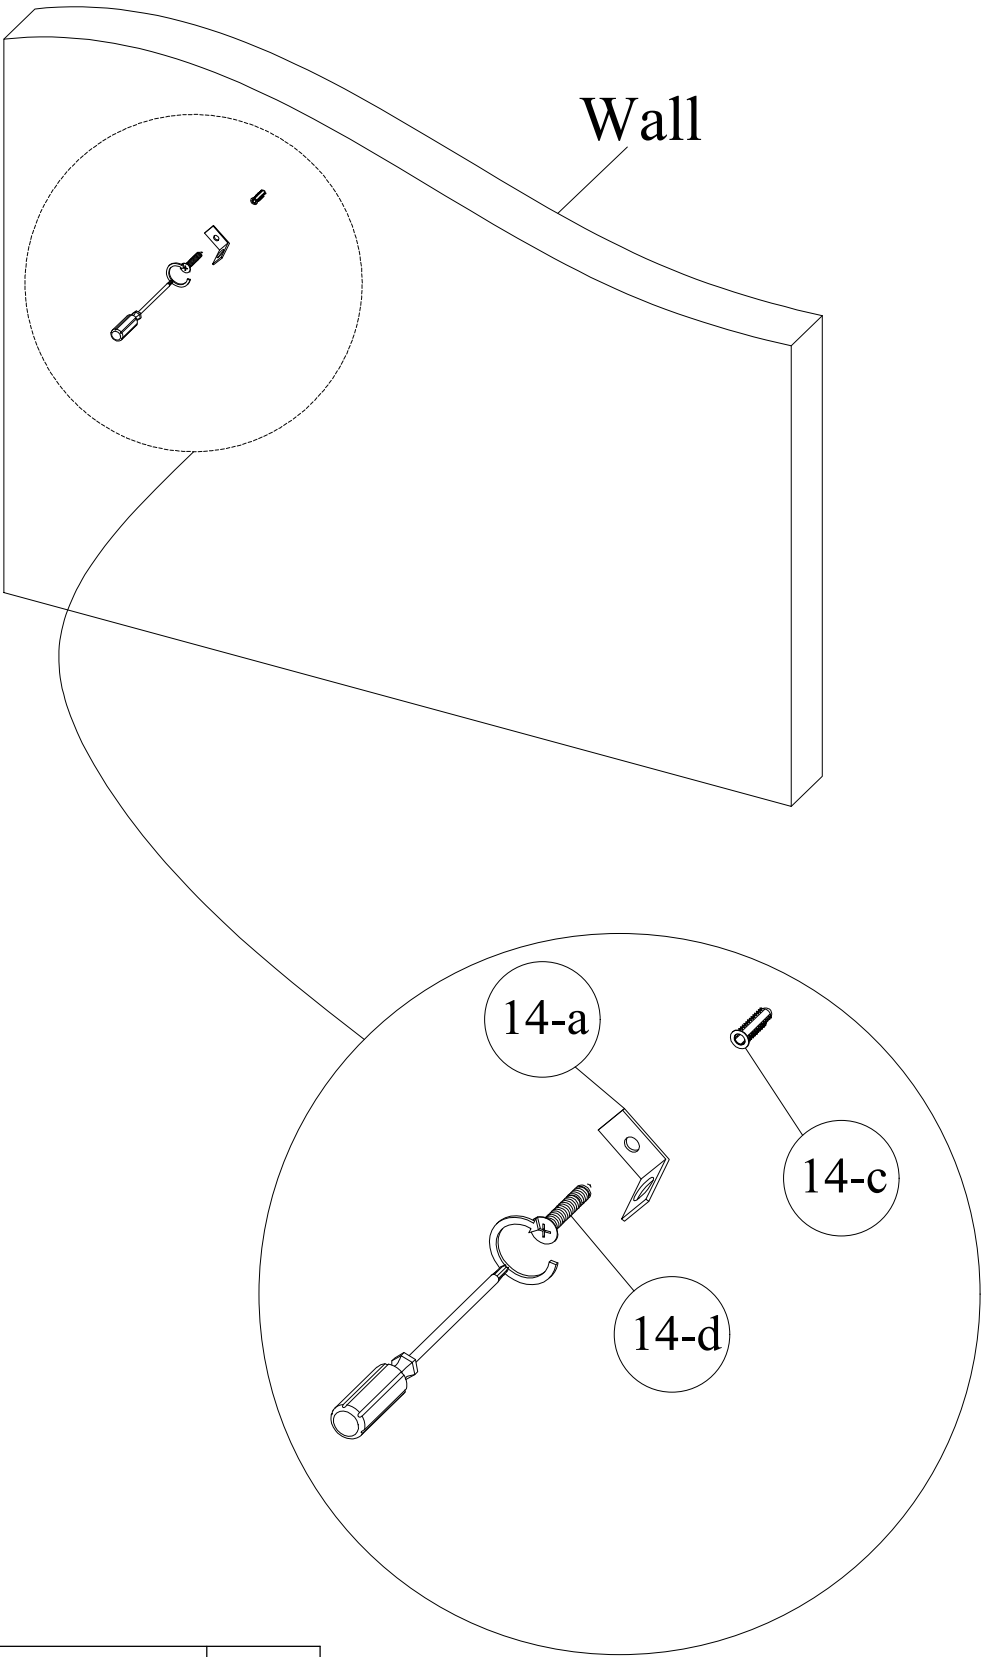
STEP 21



| No. | Hardware | Q'ty |
|------|---|------|
| 14-a |  | 1 |
| 14-c |  | 1 |
| 14-d |  | 1 |

STEP 22

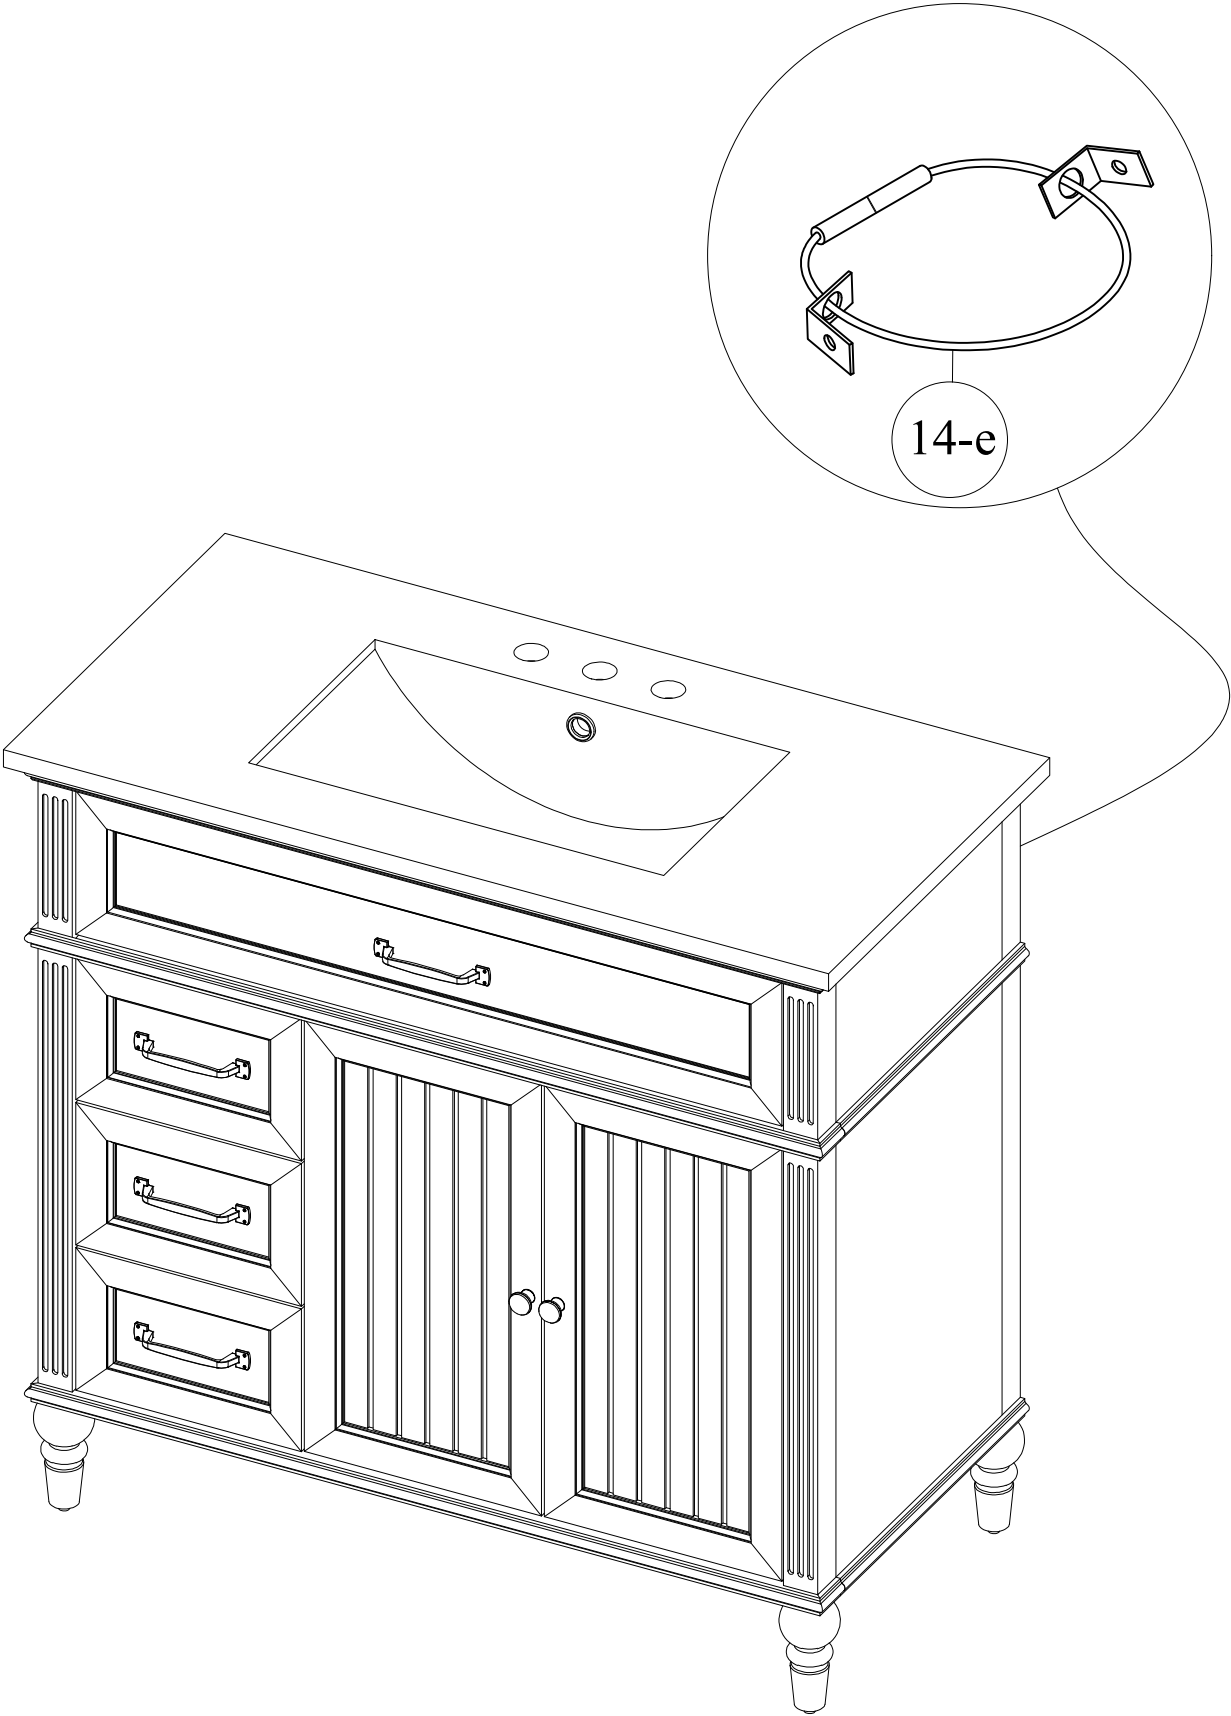

| No. | Hardware | Q'ty |
|------|---|------|
| 14-e |  | 1 |

FINISH

