


ASSEMBLY INSTRUCTION

ITEM NO. N711P218615

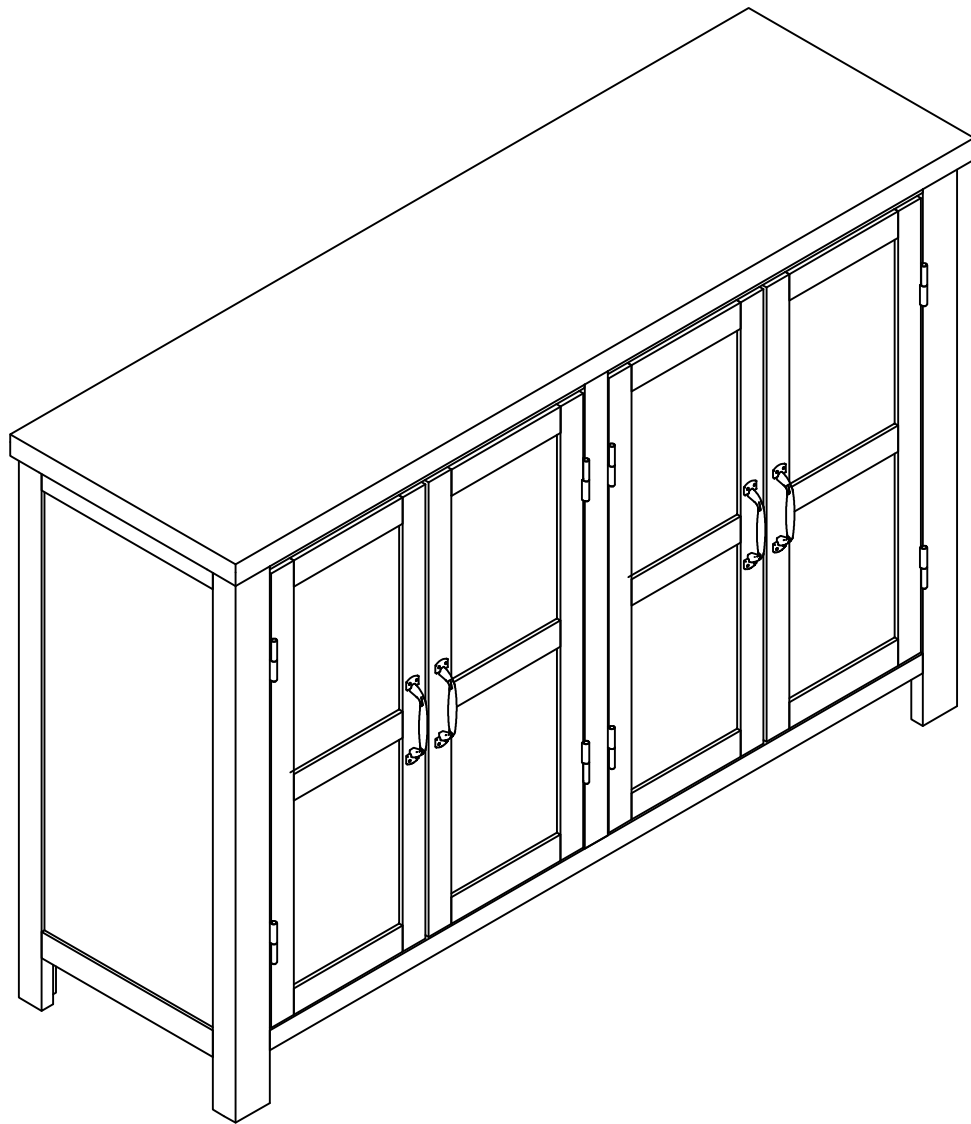

ASSEMBLY INSTRUCTION

ITEM NO. N711P218615

Please read these instructions fully before starting assembly:


1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts.
2. Kindly follow the assembly instructions step by step.
3. Do not tighten all screws and bolts until the table is fully assembled.
4. Unscrew the protective plastique supports from the metal insert of the table legs before assembly.
5. Parts of the assembly will be easier with 2 people.

Care and maintenance:

Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

ASSEMBLY INSTRUCTION

ITEM NO. N711P218615

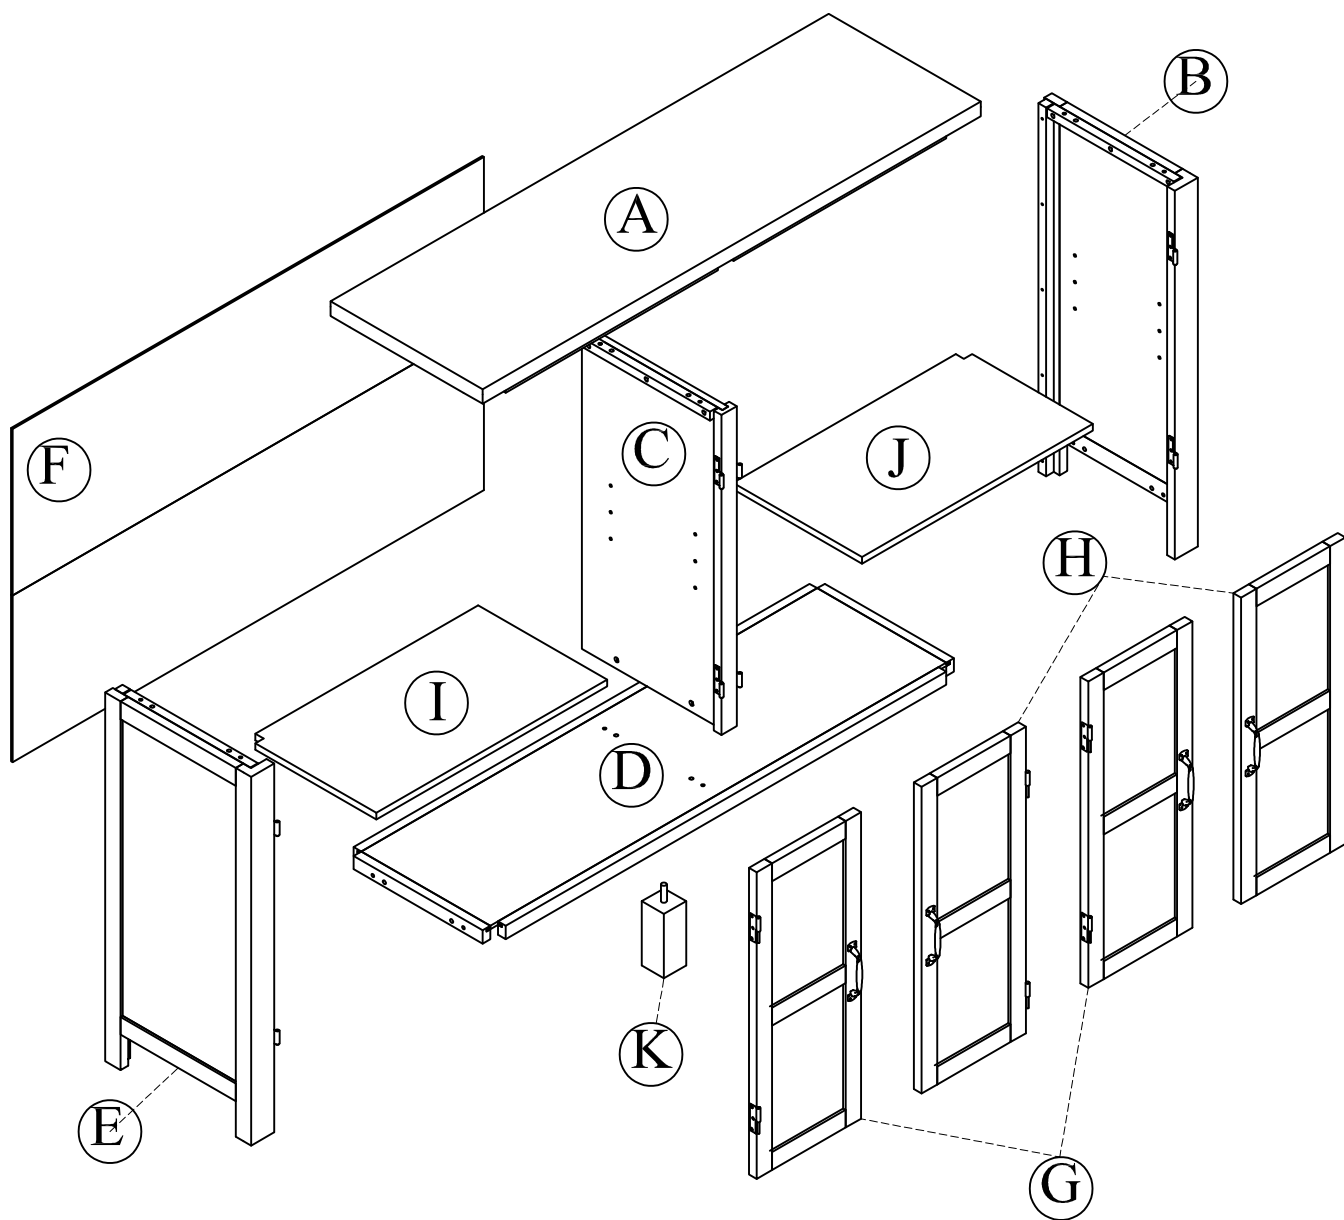


ASSEMBLY INSTRUCTION

ITEM NO. N711P218615


Part List

Ⓐ

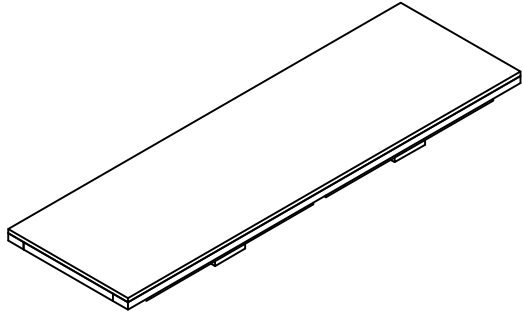


TOP = 1PC

Ⓑ

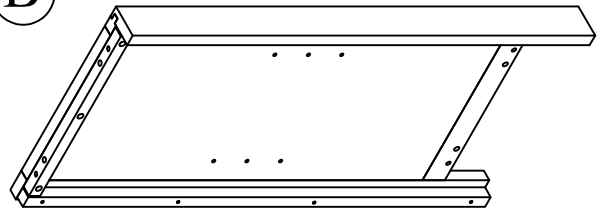


RIGHT SIDE PANEL = 1PC

Ⓒ

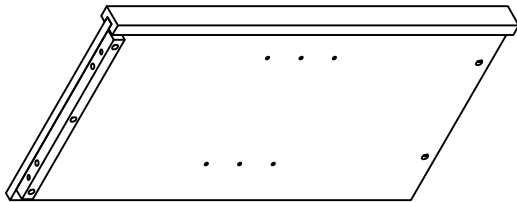


MIDDLE PANEL = 1PC

Ⓓ

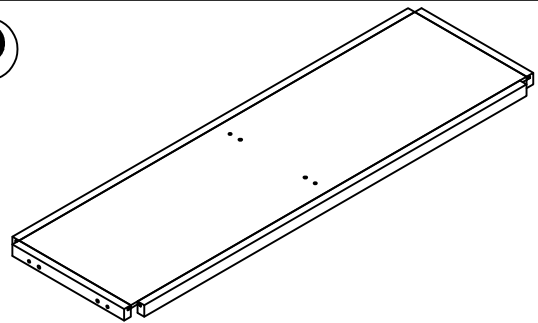


BOTTOM = 1PC

Ⓔ

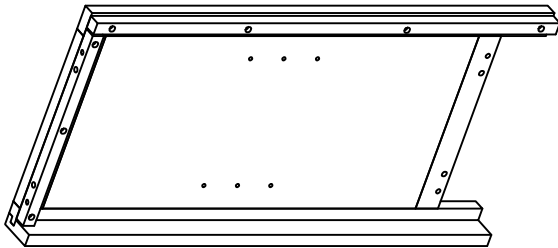


RIGHT SIDE PANEL = 1PC

Ⓕ

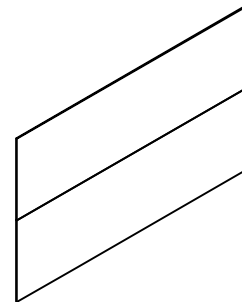


BACK PANEL = 1PC

Ⓖ

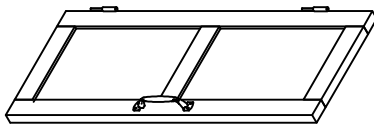


LEFT DOORS = 2PCS

Ⓖ

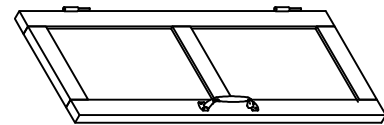


RIGHT DOORS = 2PCS

Ⓘ

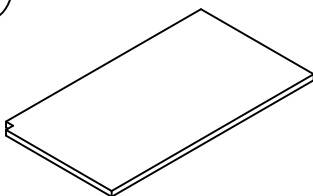


LEFT SHELF = 1PC

Ⓙ

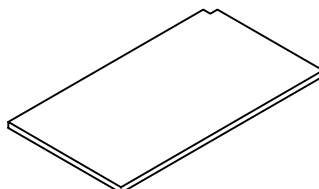

RIGHT SHELF = 1PC

Ⓚ








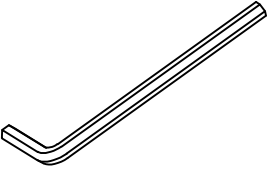








SUPPORT LEG = 1PC

ASSEMBLY INSTRUCTION

ITEM NO. N711P218615

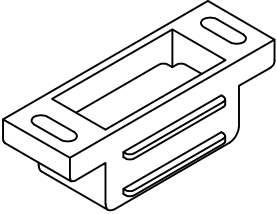
Hardware List
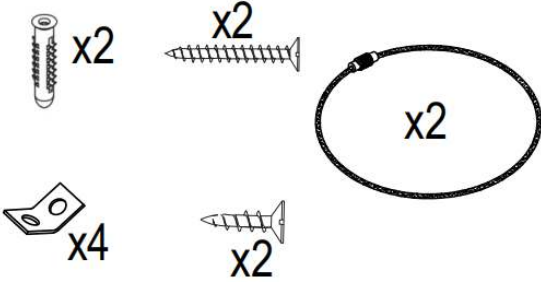
<p>①</p> 	<p>②</p> 	<p>③</p> 	<p>④</p> 
Magnetic Door Catch =4PCS	Screw M3X 15 =8PCS	Wooden Dowel=12PCS	BOLT 1/4" X 30 =10PCS
<p>⑤</p> 	<p>⑥</p> 	<p>⑦</p> 	<p>⑧</p> 
BOLT 1/4" X 55 =2PCS	SPRING WASHER =12PCS	FLAT WASHER =12PCS	Allen Key = 1 PC
<p>⑨</p> 	<p>⑩</p> 	<p>⑪</p> 	<p>⑫</p> 
T Nut=2PCS	Mushroom screw 3 x 15=30PCS	Pin Support Shelf=8PCS	HANDLE=4PCS
<p>⑬</p> 	<p>⑭</p> 		
BOLT OF HANDLE M4 X20=8PCS	ANTITIP KIT =2SETS		

ASSEMBLY INSTRUCTION

ITEM NO. N711P218615

Step 1

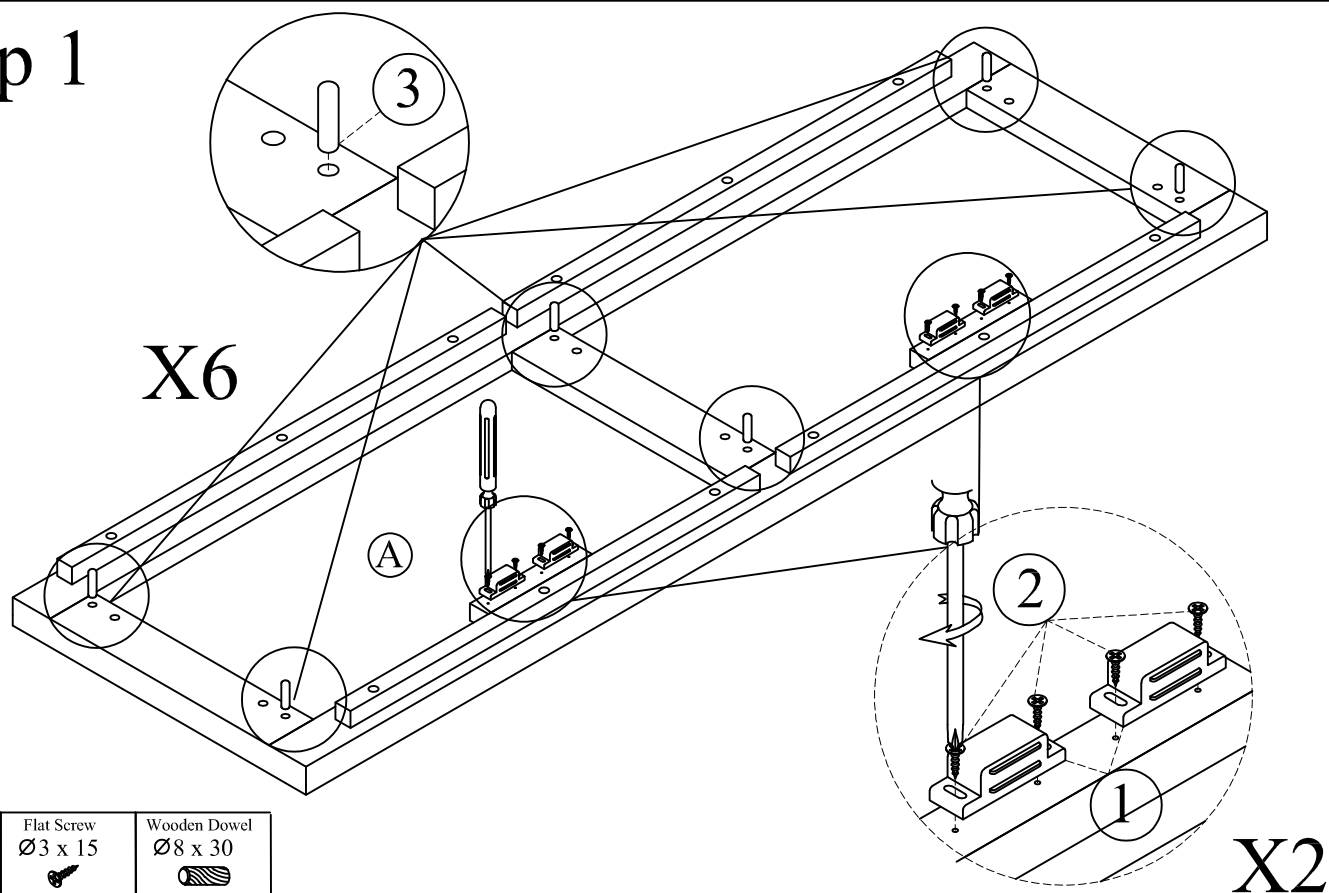

Magnetic Door



① x 4

Flat Screw
Ø3 x 15




② x 8

Wooden Dowel
Ø8 x 30



③ x 6

Step 2

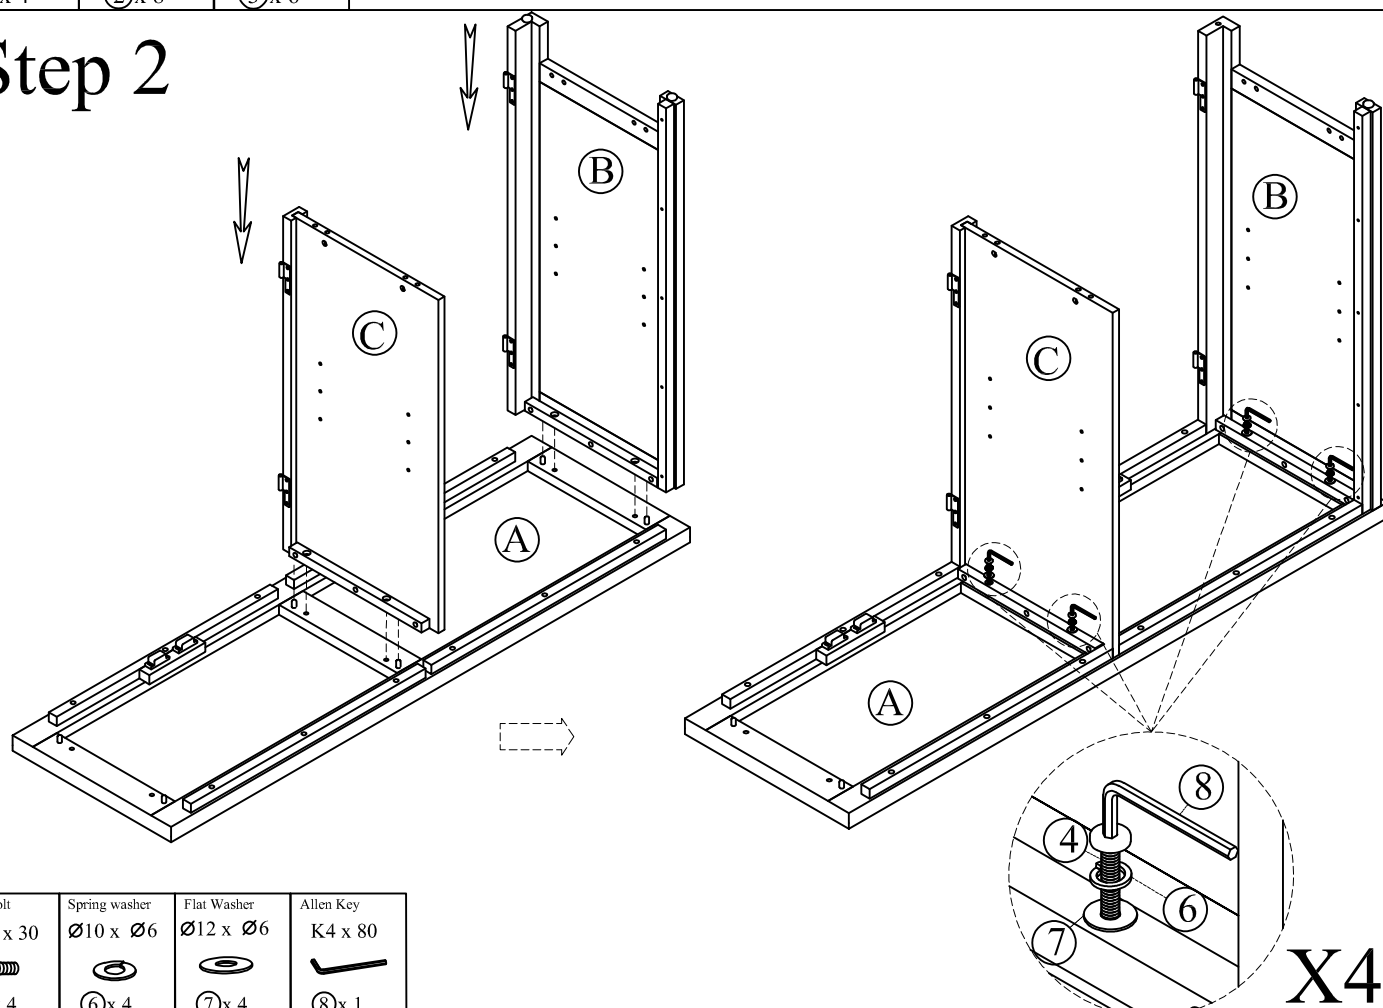

Bolt
1/4" x 30



④ x 4

Spring washer
Ø10 x Ø6



⑥ x 4

Flat Washer
Ø12 x Ø6



⑦ x 4

Allen Key
K4 x 80



⑧ x 1



ASSEMBLY INSTRUCTION

ITEM NO. N711P218615

Step 3

X2

X2

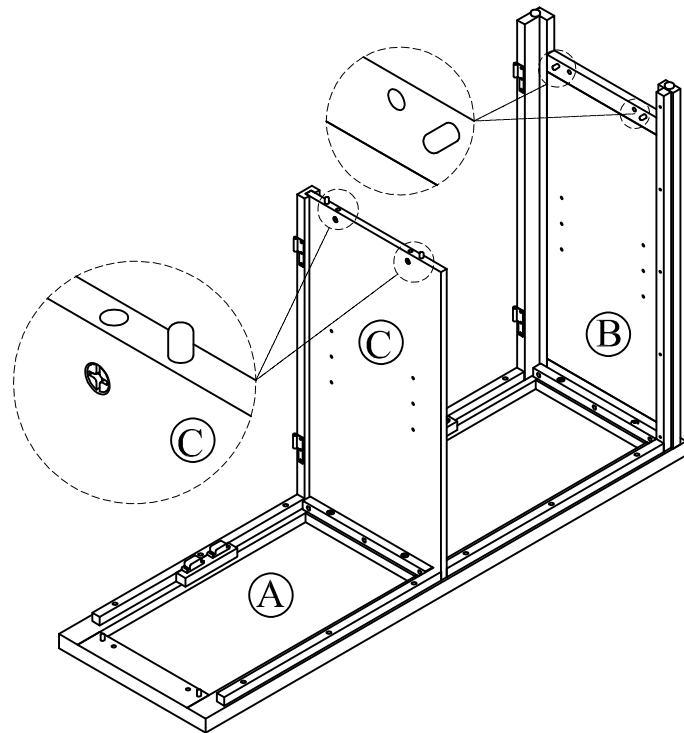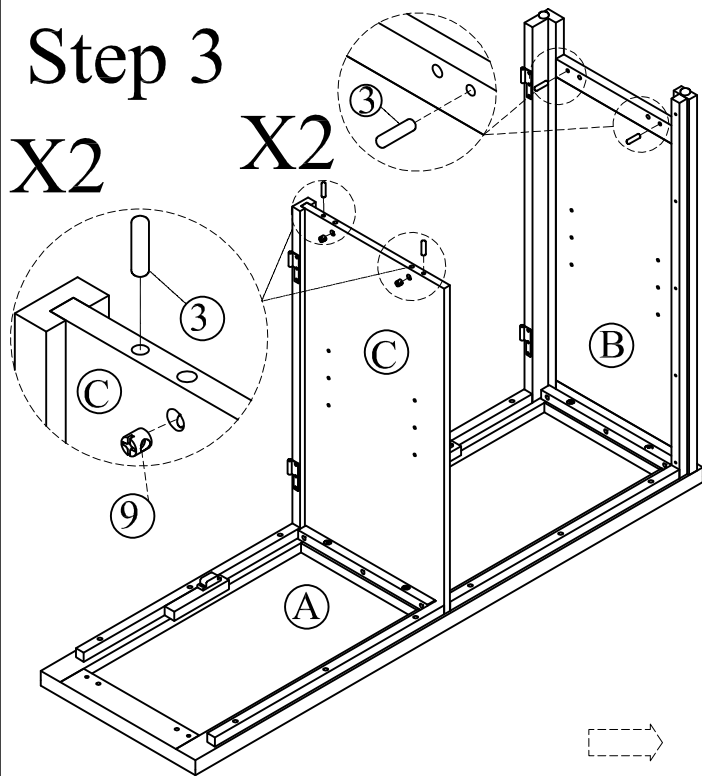

T Nut
Ø9 x 12



⑨ x 2

Wooden Dowel
Ø8 x 30




③ x 4

Step 4

X2

X2

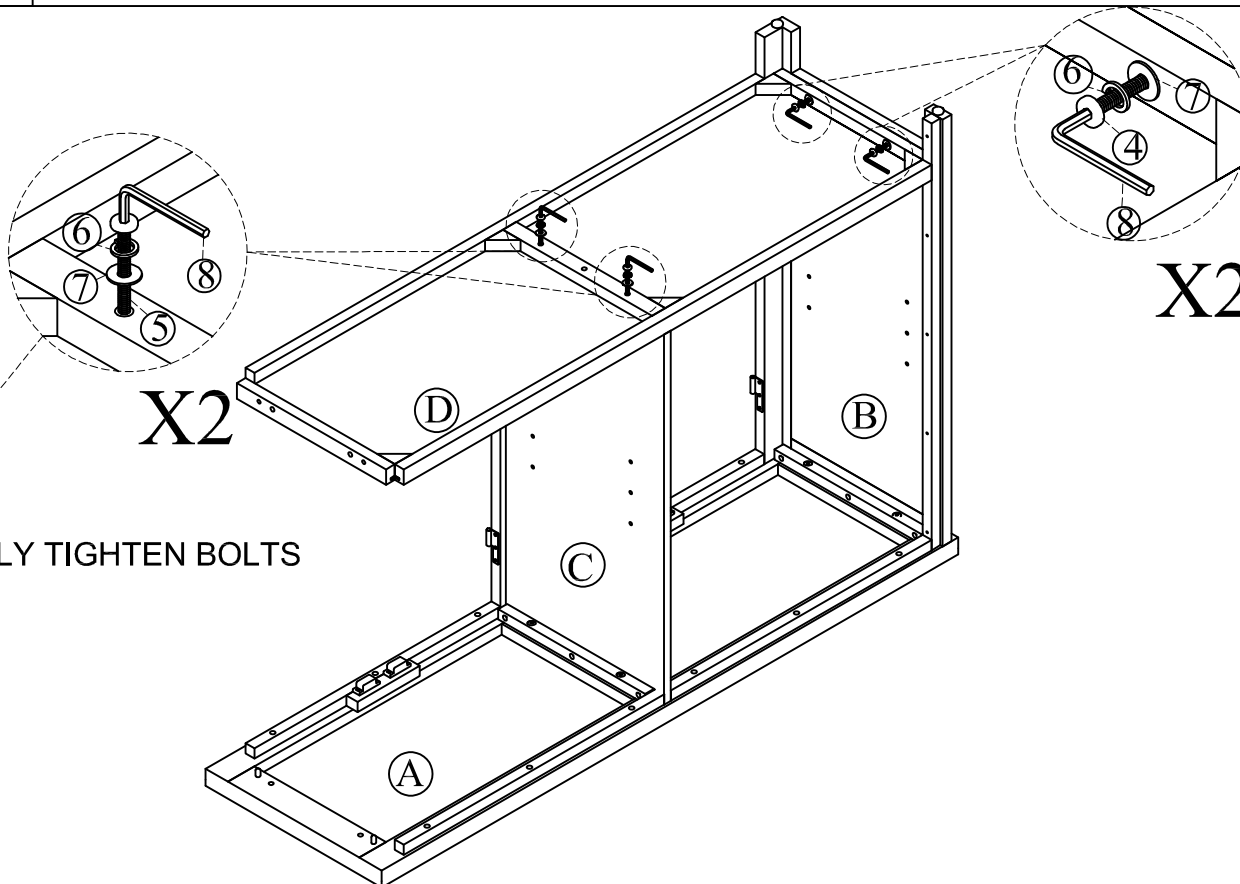

DO NOT FULLY TIGHTEN BOLTS
(50% ONLY)

Bolt
1/4" x 30




④ x 2

Bolt
1/4" x 55



⑤ x 2

Spring washer
Ø10 x Ø6



⑥ x 4

Flat Washer
Ø12 x Ø6



⑦ x 4

Allen Key
K4 x 80




⑧ x 1

ASSEMBLY INSTRUCTION


ITEM NO. N711P218615

Step 5

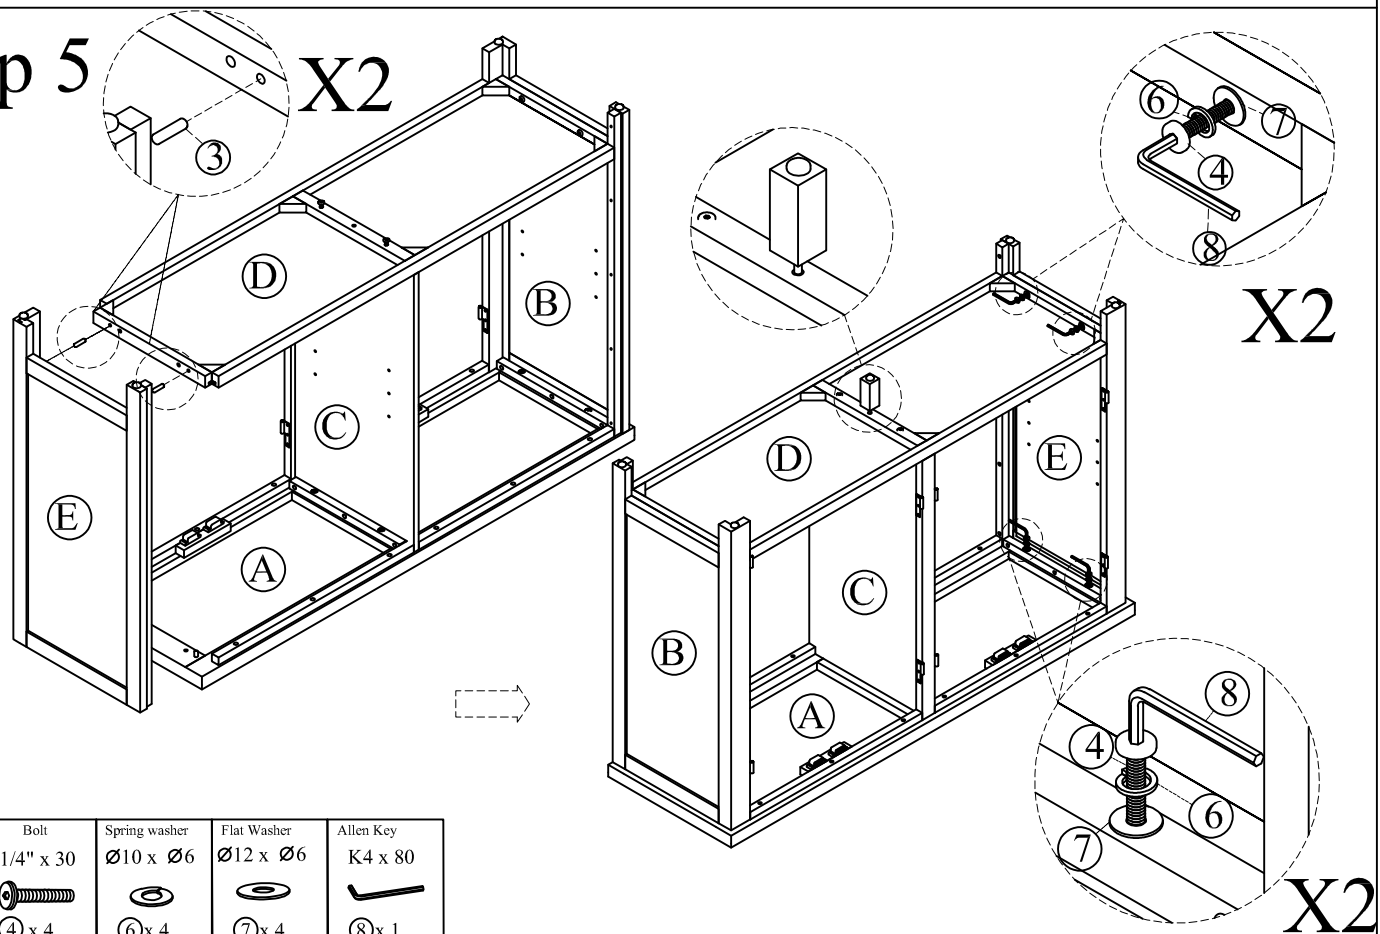

Step 6

FULLY TIGHTEN ALL BOLTS 100%

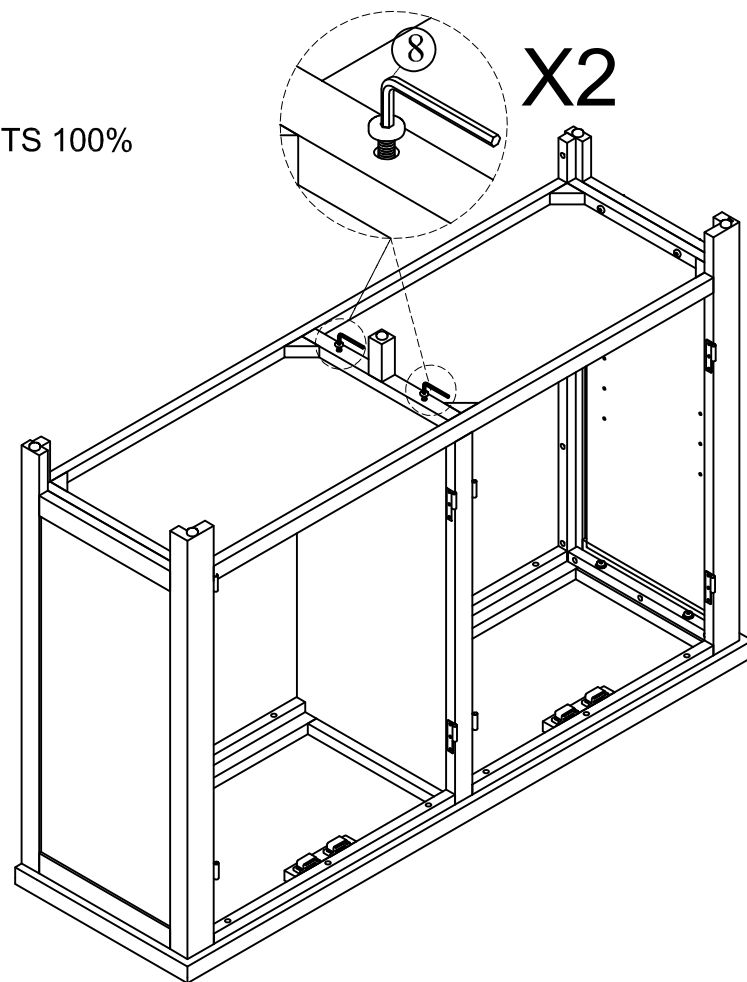


Allen Key
K4 x 80
(8) x 1

ASSEMBLY INSTRUCTION

ITEM NO. N711P218615

Step 7

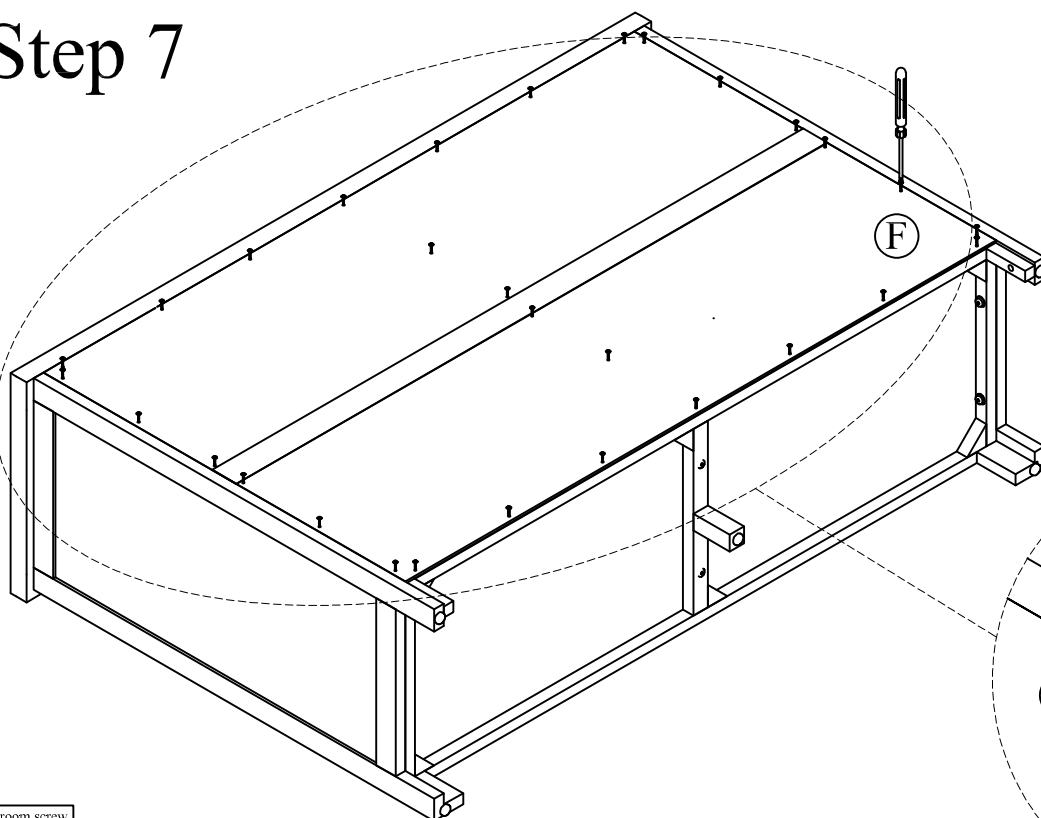

Mushroom screw


M3.5 x 15



⑩x 30

X30

Step 8

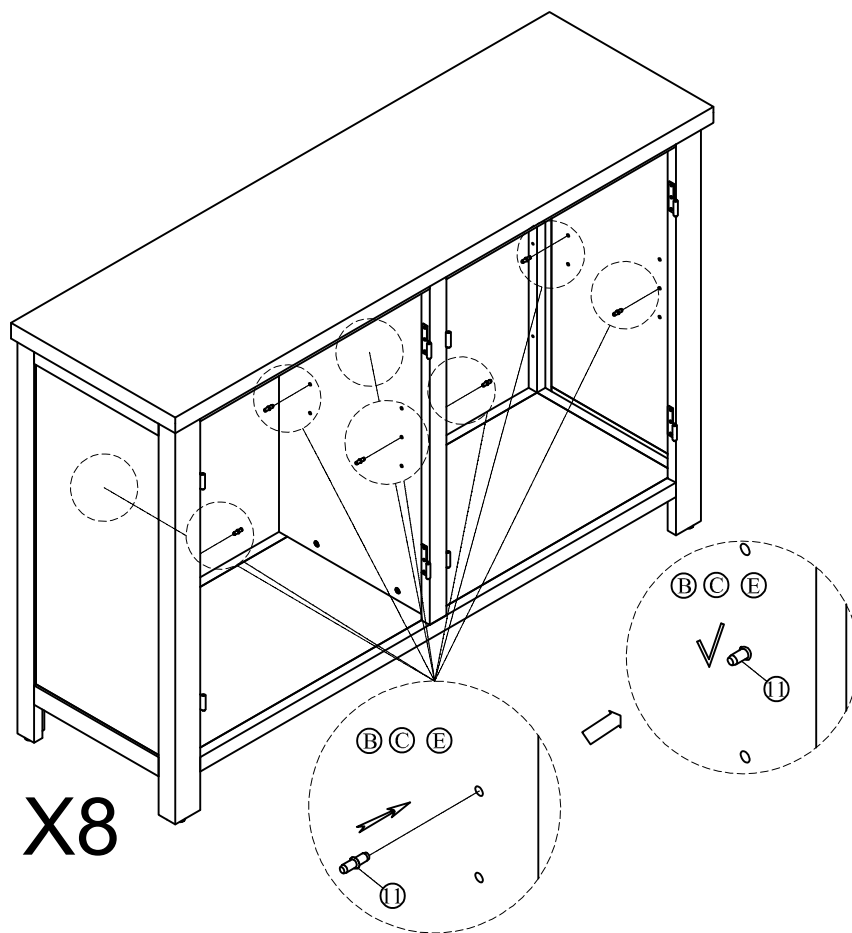

X8

Pin Support Shelf

Ø6 x 11




⑪x 8


ASSEMBLY INSTRUCTION

ITEM NO. N711P218615

Step 9

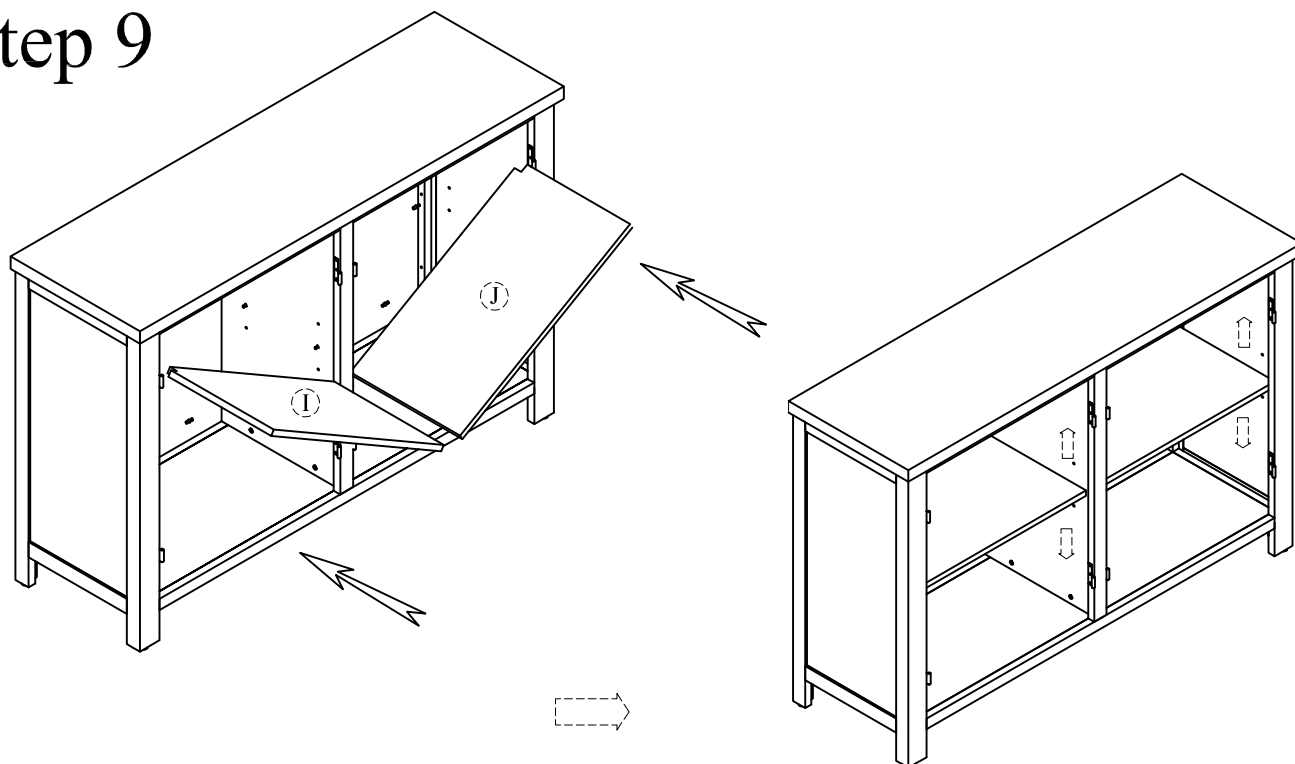


Step 10

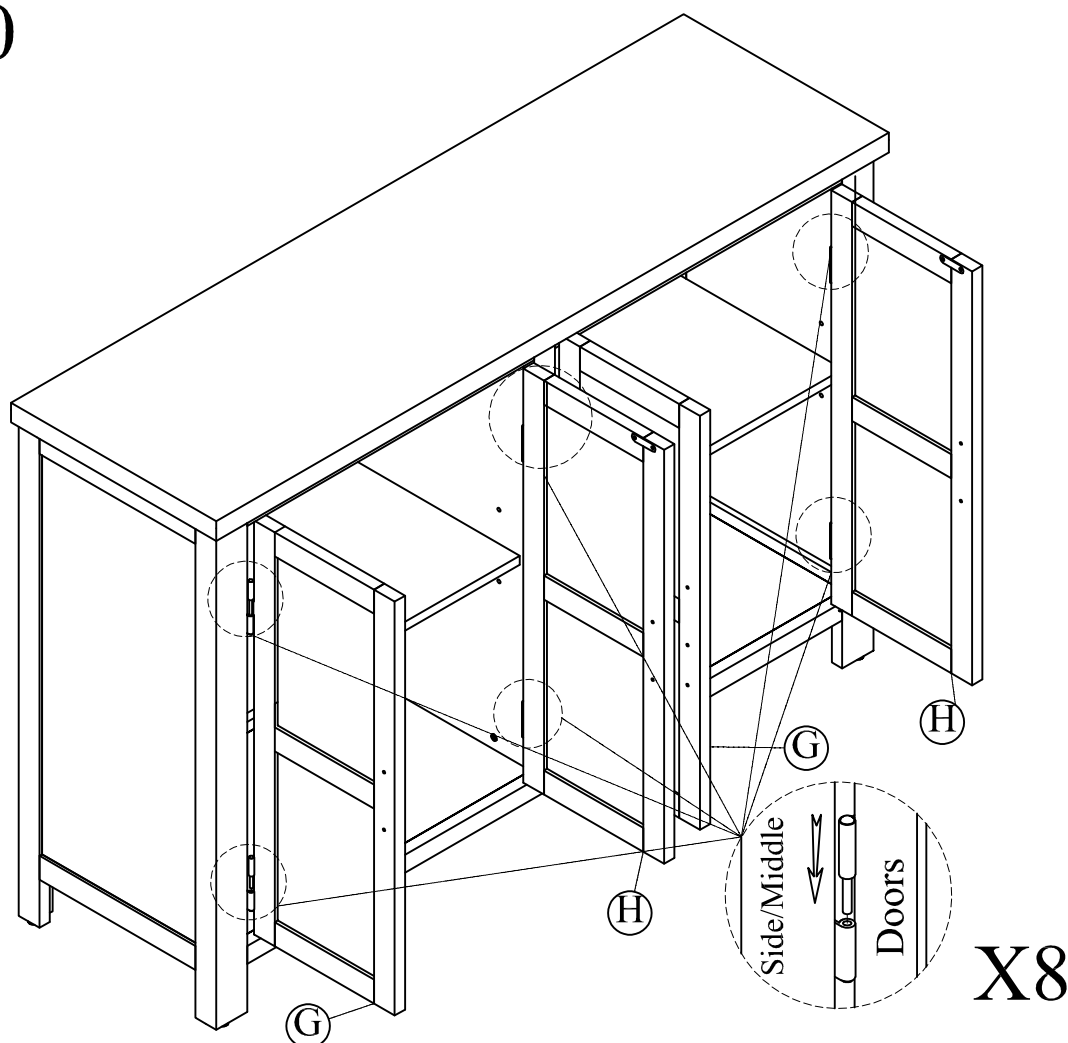



ASSEMBLY INSTRUCTION

ITEM NO. N711P218615

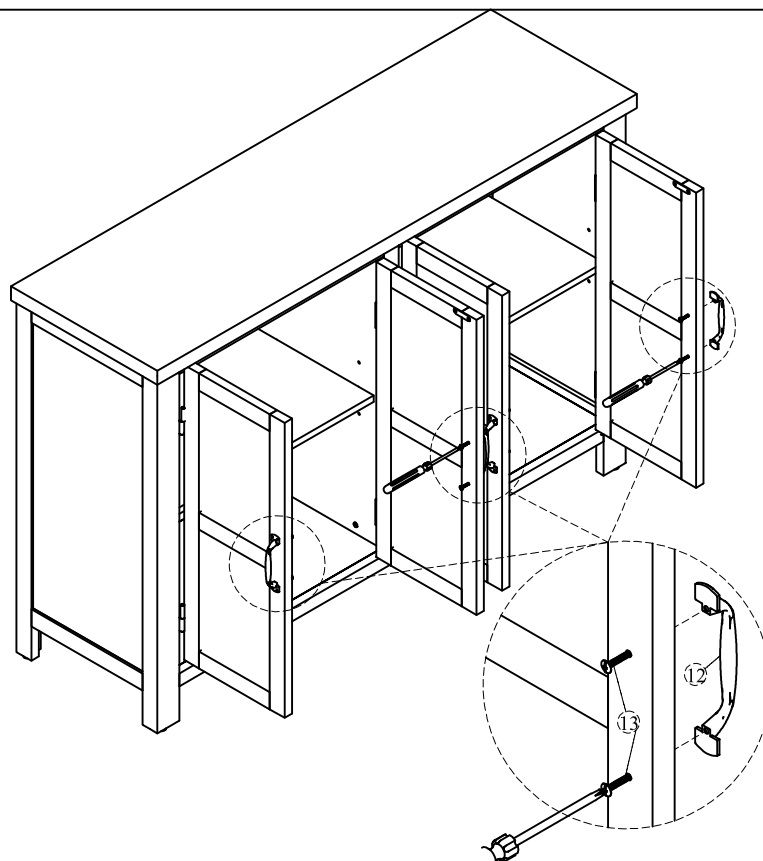
Step 11








Handle	Bolt of Handle M4 x 20
	
⑫x 4	⑬x 8

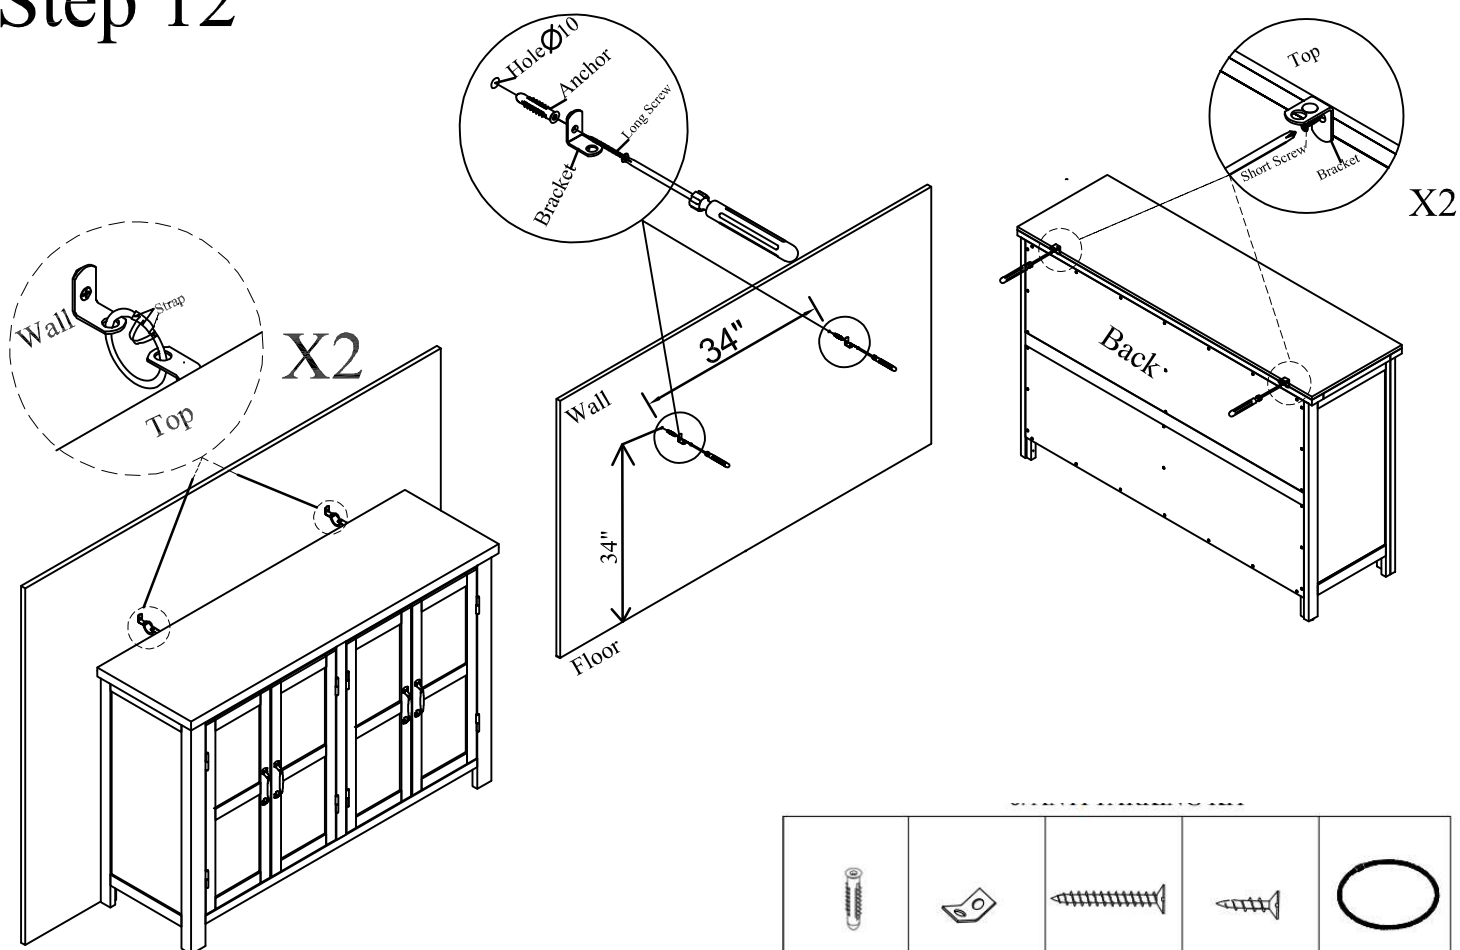X4

Step 12



				
2 pcs	4 pcs	2 pcs	2 pcs	2 pcs


ASSEMBLY INSTRUCTION

ITEM NO. N711P218615

Is your cabinet door looking crooked or unevenly spaced?

If you're still having trouble lining everything up, your next step should be to try to adjust the feet slightly to square up the cabinet and doors. Follow the instructions below:

If the right door appears to be hanging low, you can adjust the adjustable leveler on the front right until the door is better aligned.

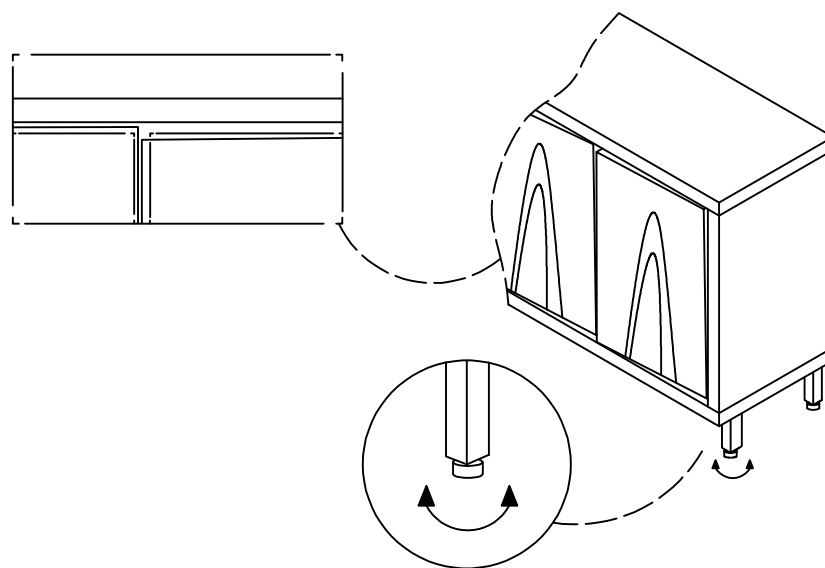

If the left door appears to be hanging low, you can adjust the adjustable leveler on the front left until the door is better aligned.

