

WARRANTY

We strive to offer high-quality product and we also try our best to satisfy each customer that orders from us with product or service as needed.

Each customer a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.

Are you having difficulty
with assembly? Missing parts?

Please contact us : info@firstopintl.com
telephone No. : 5627813327


send an email with your order No.to us

For return, please check the return policy with
the retailer or market place you bought from.

Appreciate your purchasing from us.

Pop up your life by our furniture !

uíxe

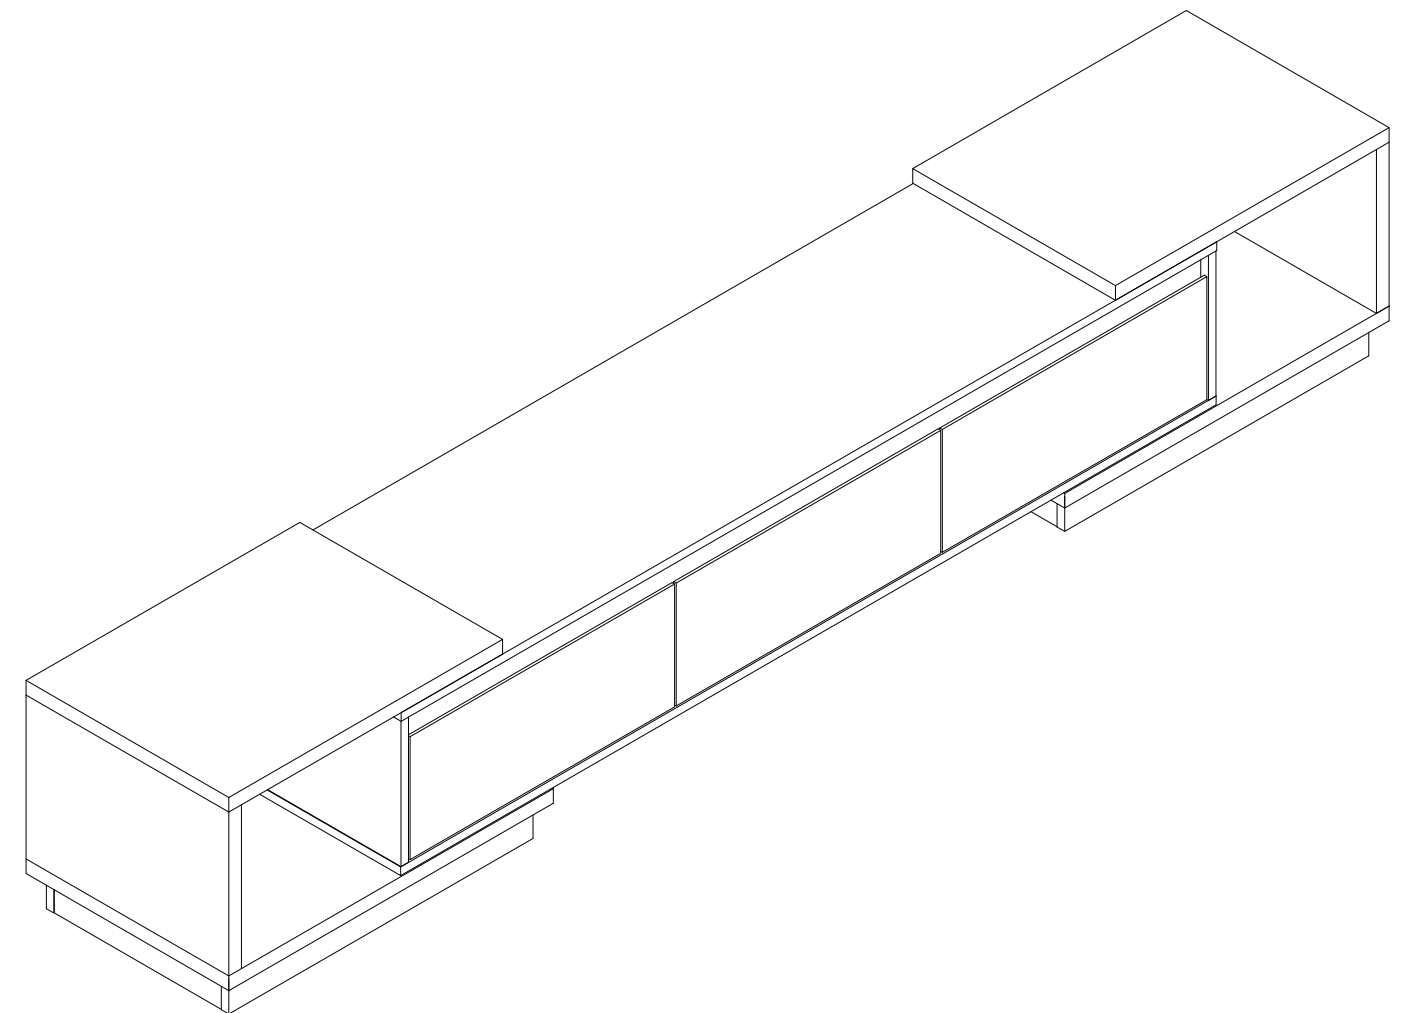

ITEM NO. CB0008

NOTE :


This brochure contains IMPORTANT safety info. Please read
and keep for future reference.

ATTENTION

- 1. A person who is proficient in assembly can work alone, if not, please ask someone to cooperate with this job.
- 2. When assembling the parts, please follow the orders, methods and positions of the assembly instruction.

If meeting any difficulties, please check with the instruction carefully first.

- 3. It will take about 3 hours to complete the assembly for those who are new in this field.
- 4. When assembling, at least six- square- meter space is requested.
- 5. Pay attention to the below instructions for componets assembly.
- 6. Any problems during the assembly, please contact us with email info@firstopintl.com or telephone us by 5627813327.

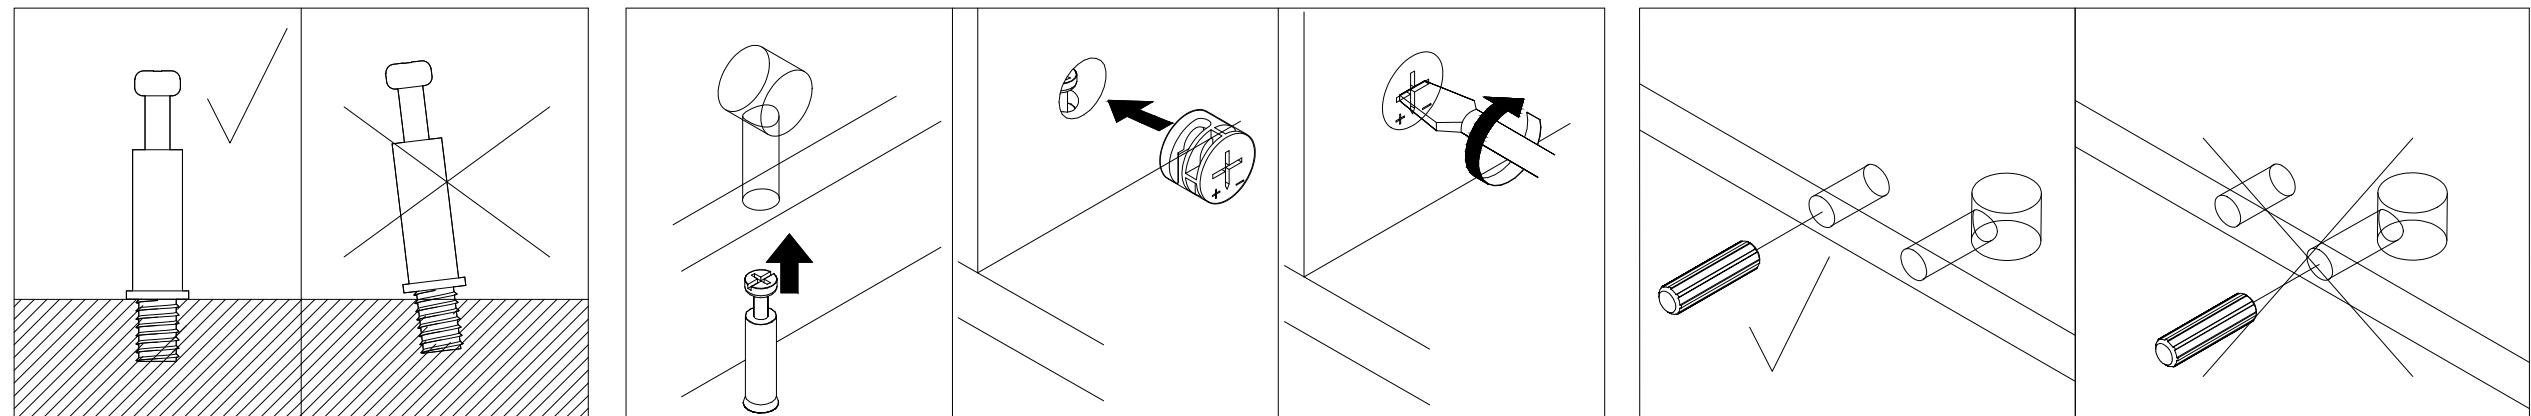

MAINTENANCE AND WARNING










- Keep furniture away from heat and fire.
- Keep furniture away from sharp objects.
- Do not clean furniture with harsh cleansers or polish. Do not use detergents, Solvents, abrasives, spray packs or leather cleaner. Use non-color mild soap with warm water clean spills(Mix 1:10 soap to water)
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not jump or strike on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- Not for commercial use, For residential use only.



Weight Limitation


100LBS

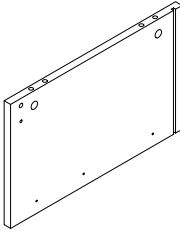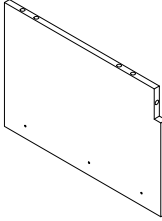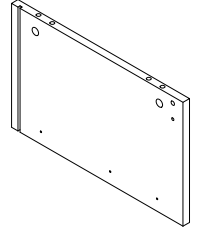PARTS LIST
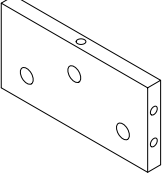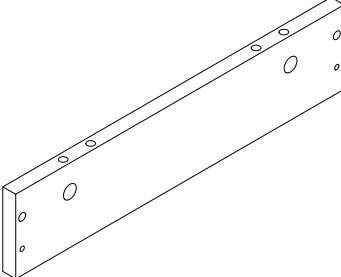
<div>① x 1</div>  <div>Left side plate</div>	<div>② x 2</div>  <div>Middle panel</div>	<div>③ x 1</div>  <div>Right side plate</div>
<div>④ x 1</div>  <div>Top</div>	<div>⑤ x 1</div>  <div>Rear panel</div>	<div>⑥ x 1</div>  <div>Centre support</div>
<div>⑦ x 1</div>  <div>Shelf</div>	<div>⑧ x 2</div>  <div>Foot attachment strip</div>	<div>⑨ x 2</div>  <div>Foot attachment strip</div>


PARTS LIST

⑩ x 2

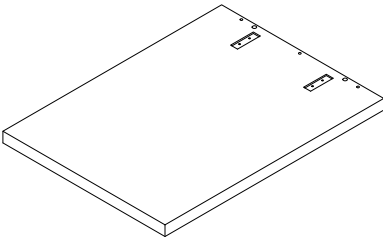


Top

⑪ x 2

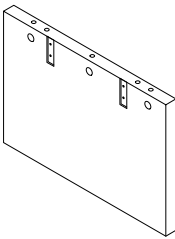


side plate

⑫ x 2

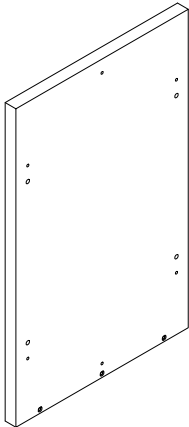


Shelf

⑬ x 4

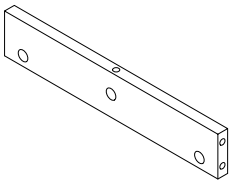


Foot attachment strip

⑭ x 4

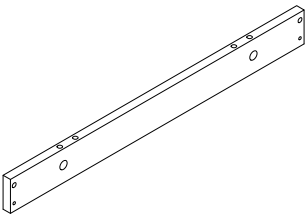


Foot attachment strip

⑮ x 1

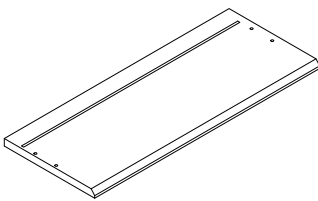


Small drawer front

⑯ x 1

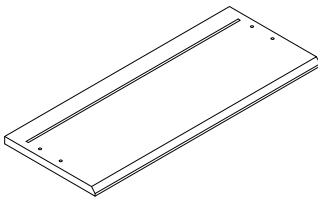


Small drawer front

⑰ x 1

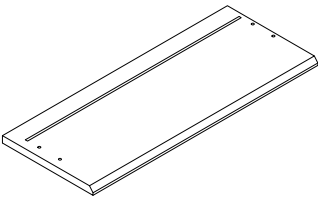

Small drawer front


⑱ x 3

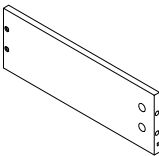

Drawer left panel


PARTS LIST

⑲ x 3

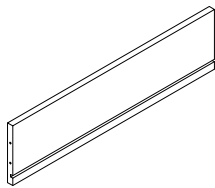


Drawer back panel

⑳ x 3

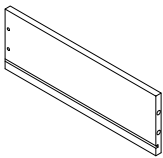


Drawer right panel

㉑ x 3

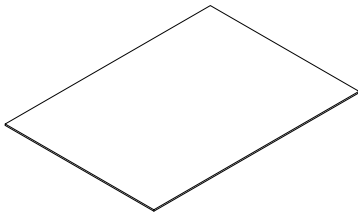


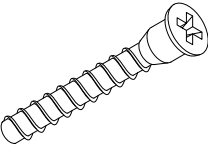













Drawer Floor

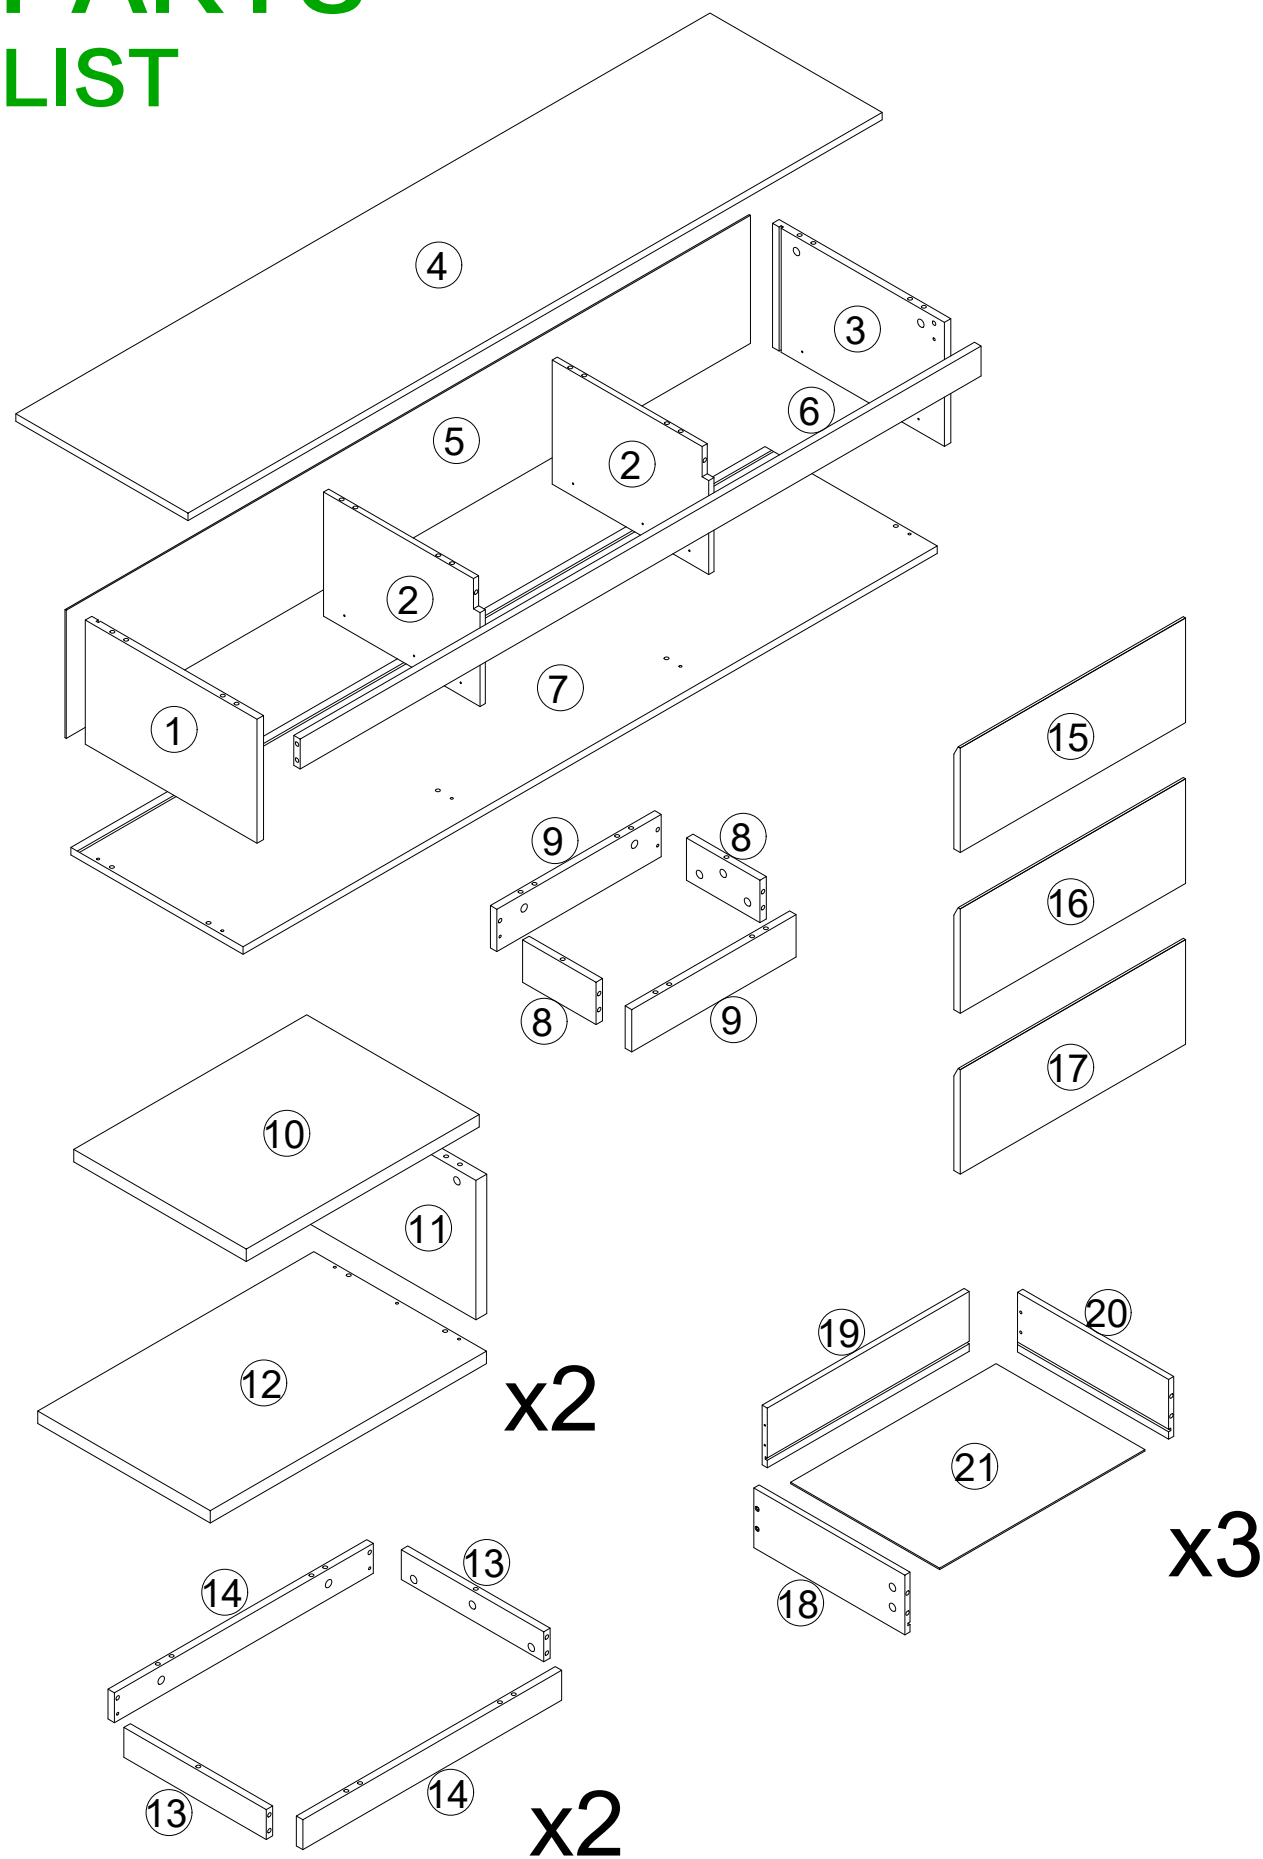PARTS LIST




HARDWARE and TOOL LIST

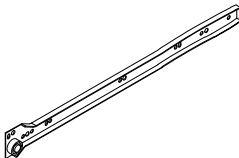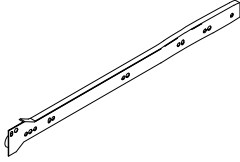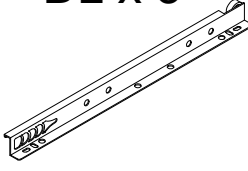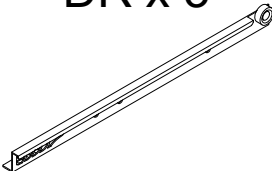A x 60+2	B x 60+2	C x 50+2	D x 6
			
Cam bolt Ø6x35mm	Cam lock Ø15x9.5mm	Wood dowel Ø6x30mm	Screw M7x50mm
E x 30+2	F x 12+1	G x 20+2	H x 12+1
			
Screw M3.5x12mm	Screw M3x14mm	Screw M4x35mm	Back plate buckle
I x 4	J x 16+1	Z x 1	
			
Corner code	Screw M4x18mm	Screwdriver	
CL x 3	CR x 3	DL x 3	DR x 3
			
Drawer tracks	Drawer tracks	Drawer tracks	Drawer tracks


SPARE

A x 2




Cam bolt
Ø6x35mm

B x 2




Cam lock
Ø15x9.5mm

C x 2




Wood dowel
Ø6x30mm

E x 2




Screw
M3.5x12mm

F x 1




Screw
M3x14mm

G x 2




Screw
M4x35mm

H x 1



Back plate buckle


J x 1




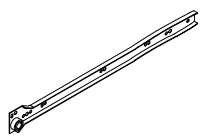
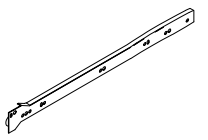
Screw
M4x18mm


Be sure to check all packing material fitting the packing list. Be careful for small parts, which may have come loose inside the carton during shipment.



ASSEMBLY INSTRUCTIONS

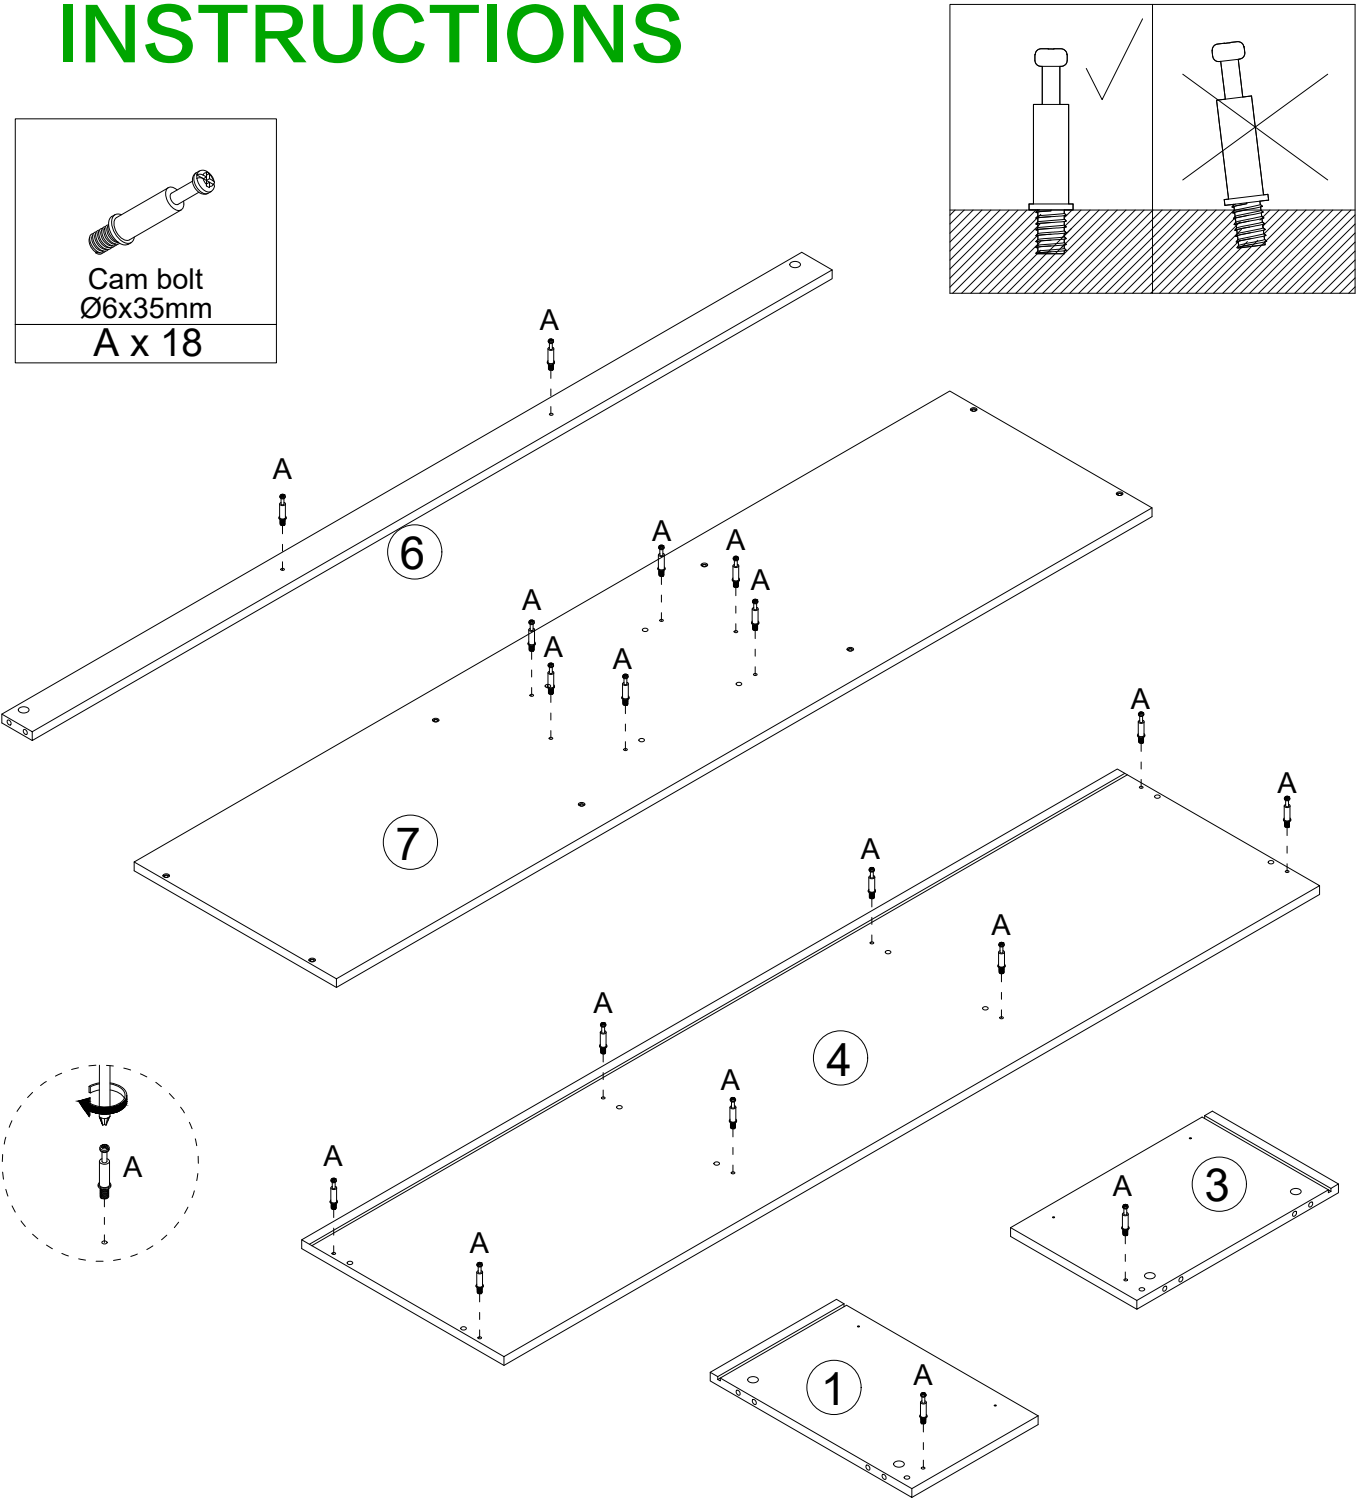


STEP 1 Insert cam bolts A into the settled holes on panels 1 3 4 6 7.

		
Screw M3.5x12mm E x 18	Drawer tracks CL x 3	Drawer tracks CR x 3

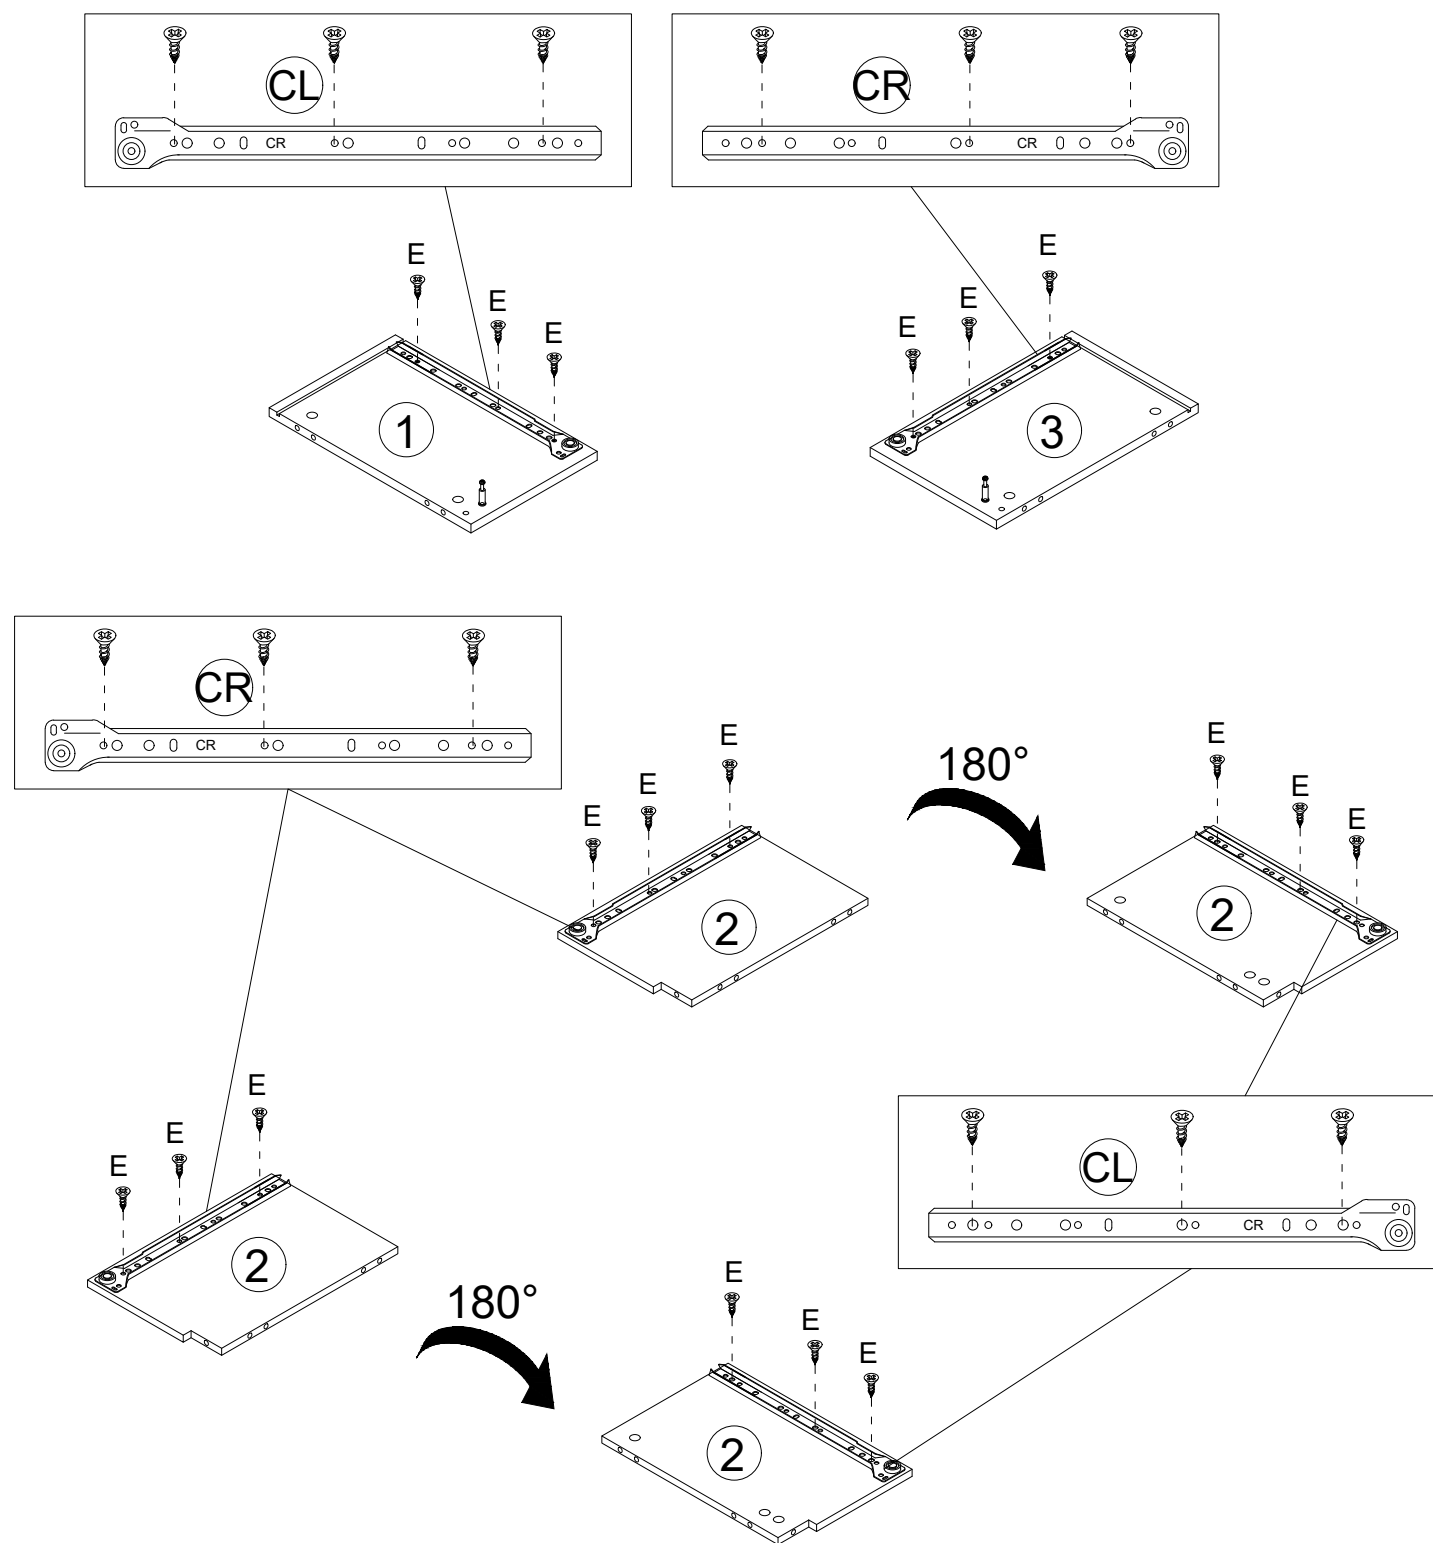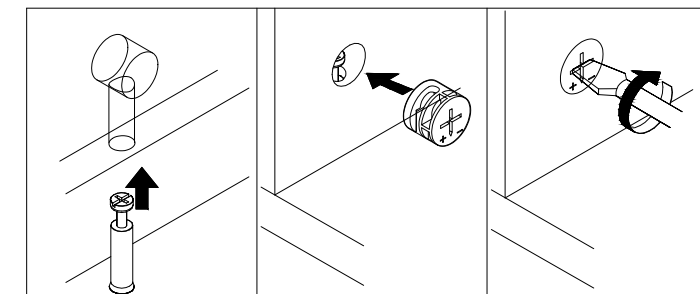


Cam lock Ø15x9.5mm B x 2


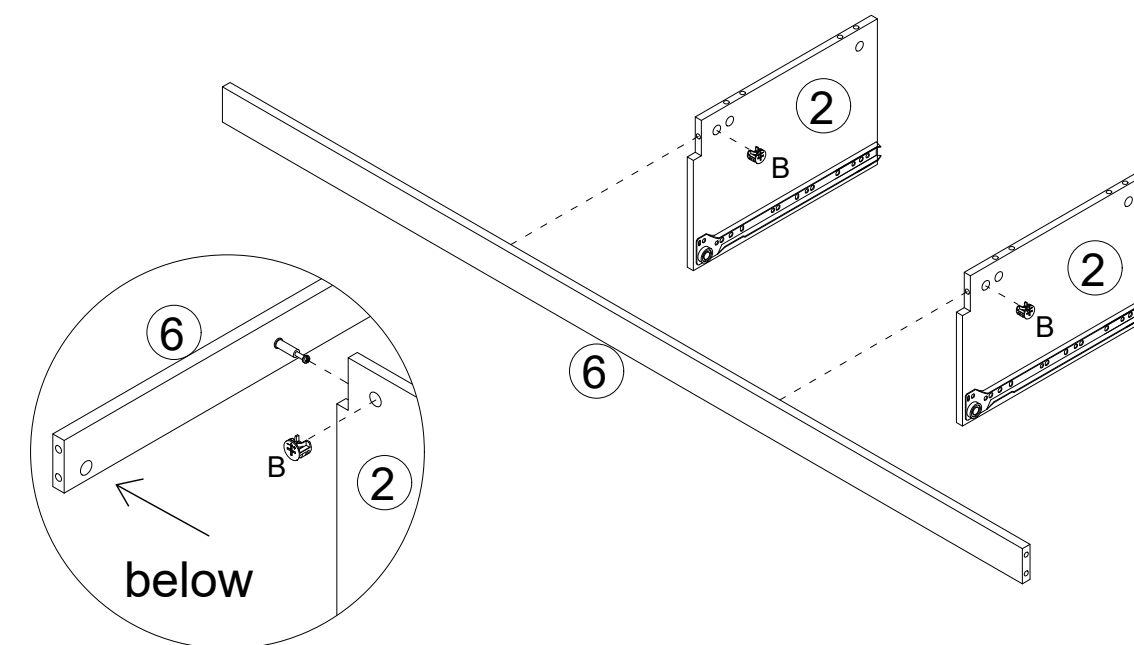



STEP 2 Fix drawer tracks CL and CR onto the plates ①② and middle panel ③. Tighten them with screws E.





STEP 3 Put the cam locks B into the settled holes on panel ② accordingly. Align the other side of bolts A on centre support ⑥ with the breach of cam locks B. Tighten the cam locks.


 Cam lock Ø15x9.5mm B x 2	 Wood dowel Ø6x30mm C x 2
---	---

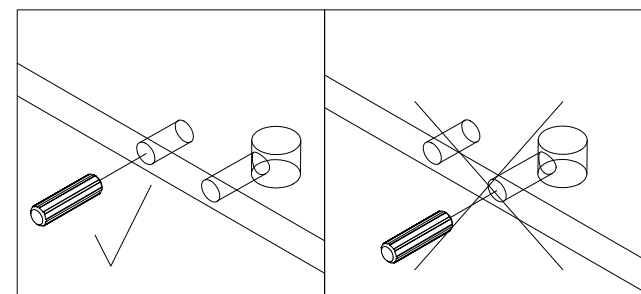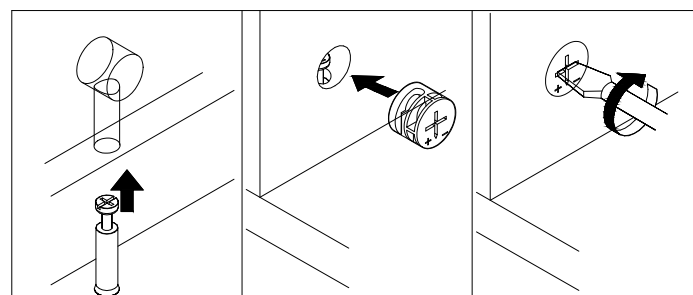






 Wood dowel Ø6x30mm C x 8

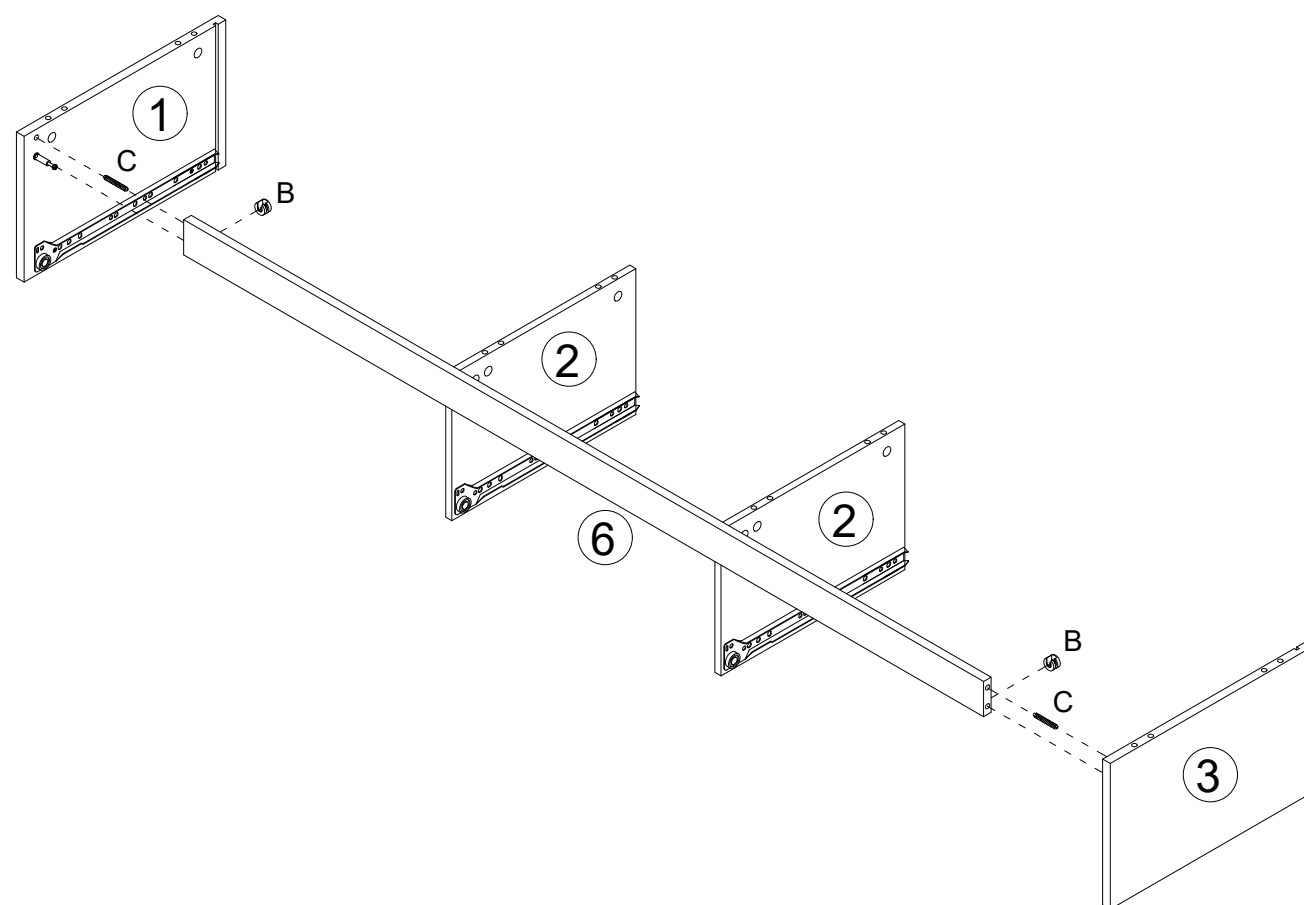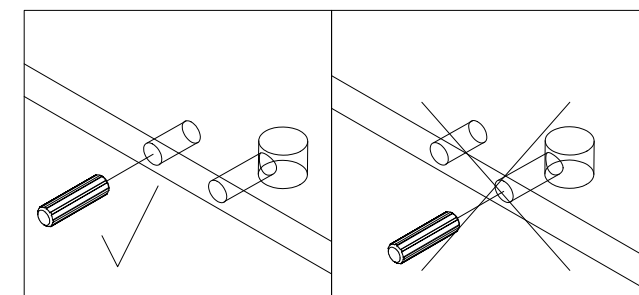


STEP 4 Do as the above instruction. Insert wood dowels C into the settled holes on support ⑥ and panels ①③ .
 Put the cam locks B into the settled holes on support⑥ accordingly.
 Align the other side of bolts A on centre panels①③with the breach of cam locks B. Tighten the cam locks.

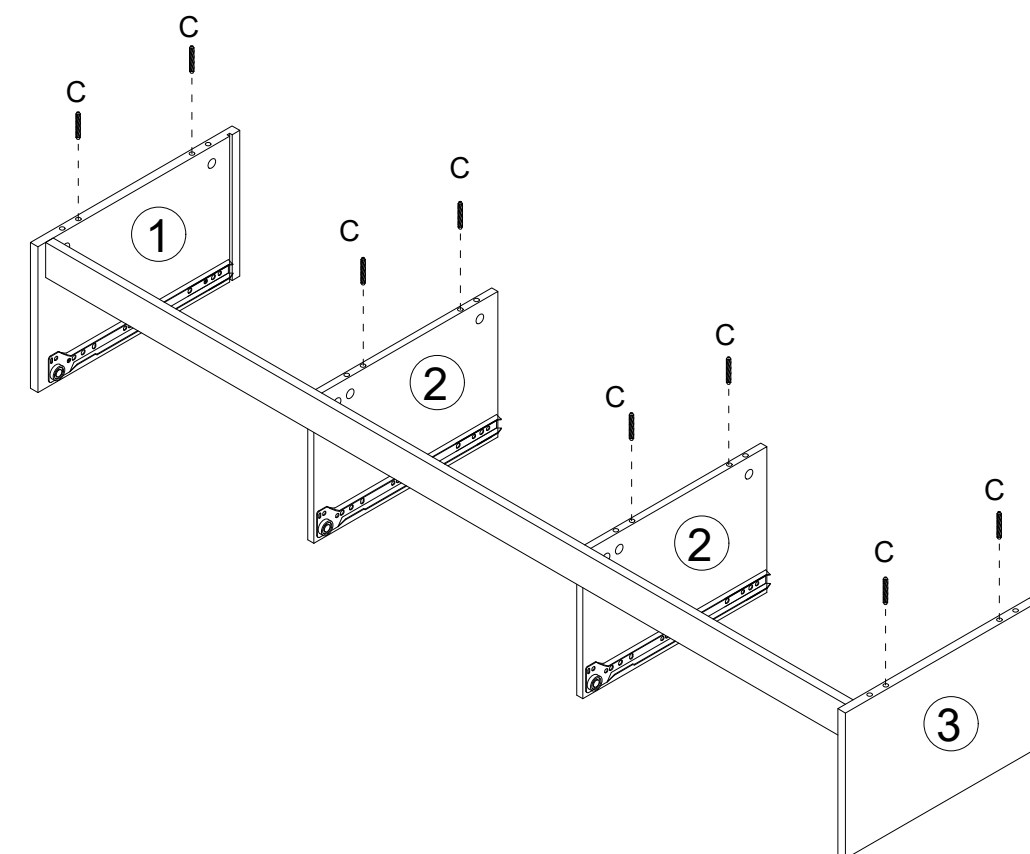


STEP 5 Do as the above instruction. Insert wood dowels C into the settled holes on panel ②and plates ①③ .

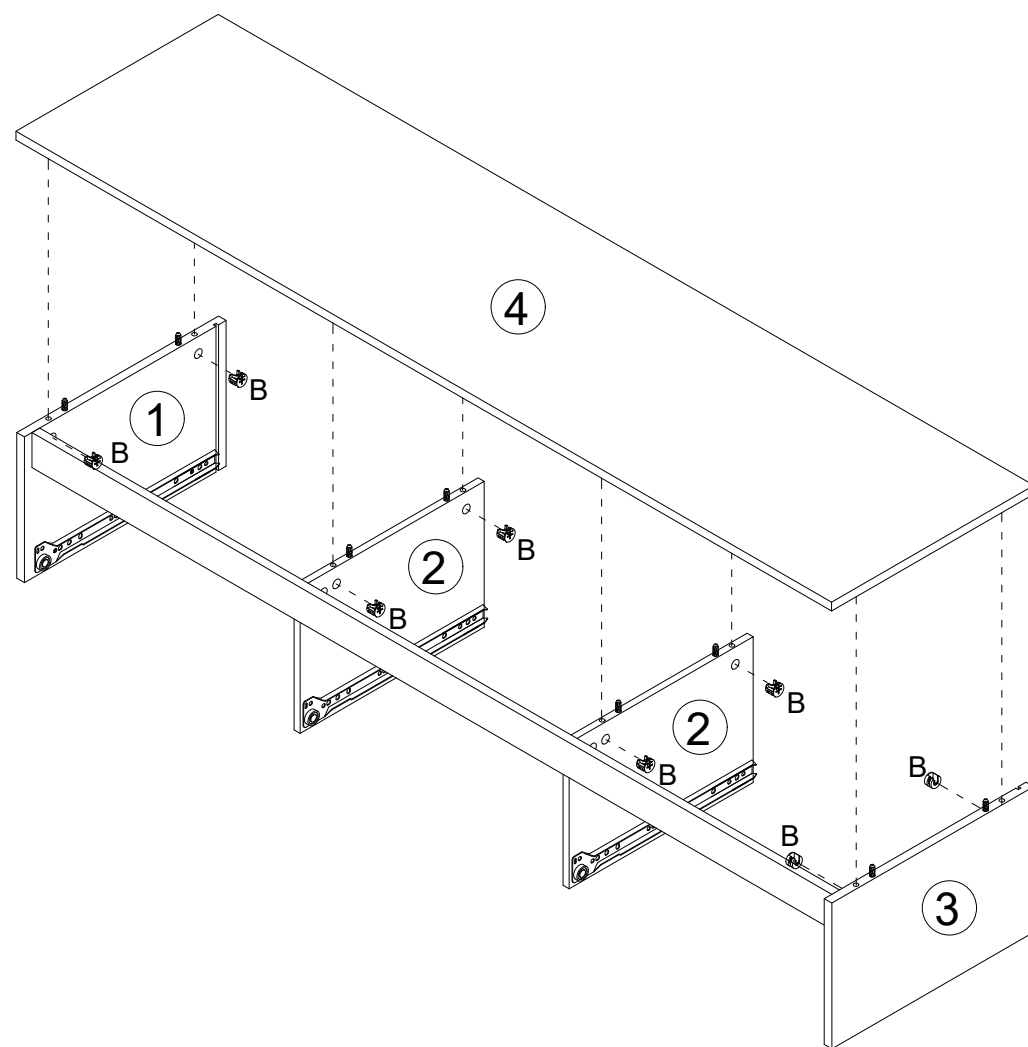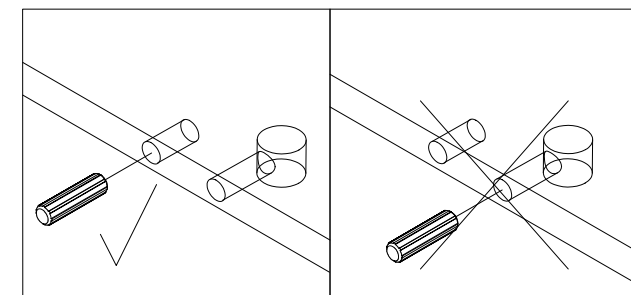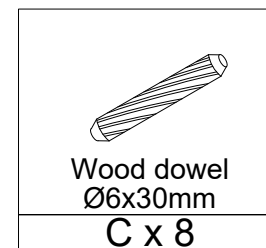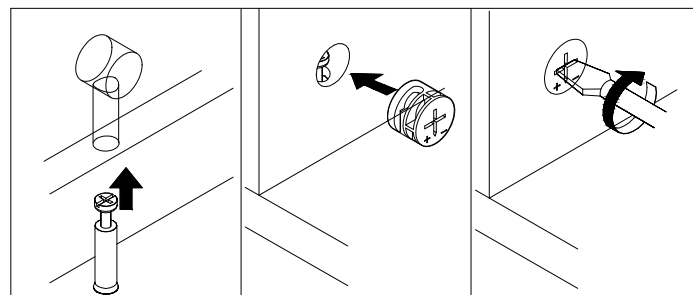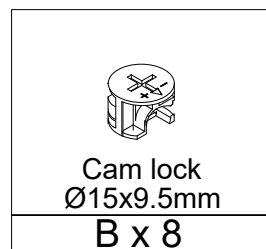



STEP 6 Put the cam locks **B** into the settled holes on plates ①②③ accordingly. Align the other side of bolts **A** on plate ④ with the breach of cam locks **B**. Tighten the cam locks.

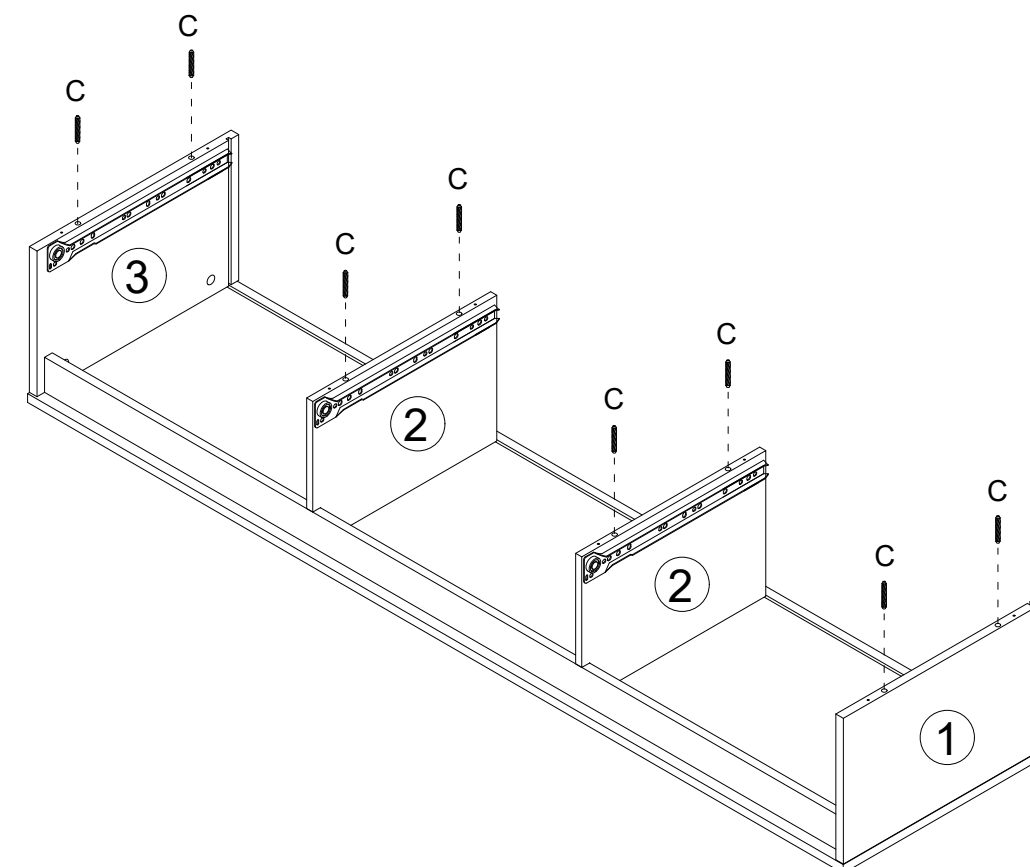












STEP 7 Do as the above instruction. Insert wood dowels **C** into the settled holes on panel ② and plates ①③.

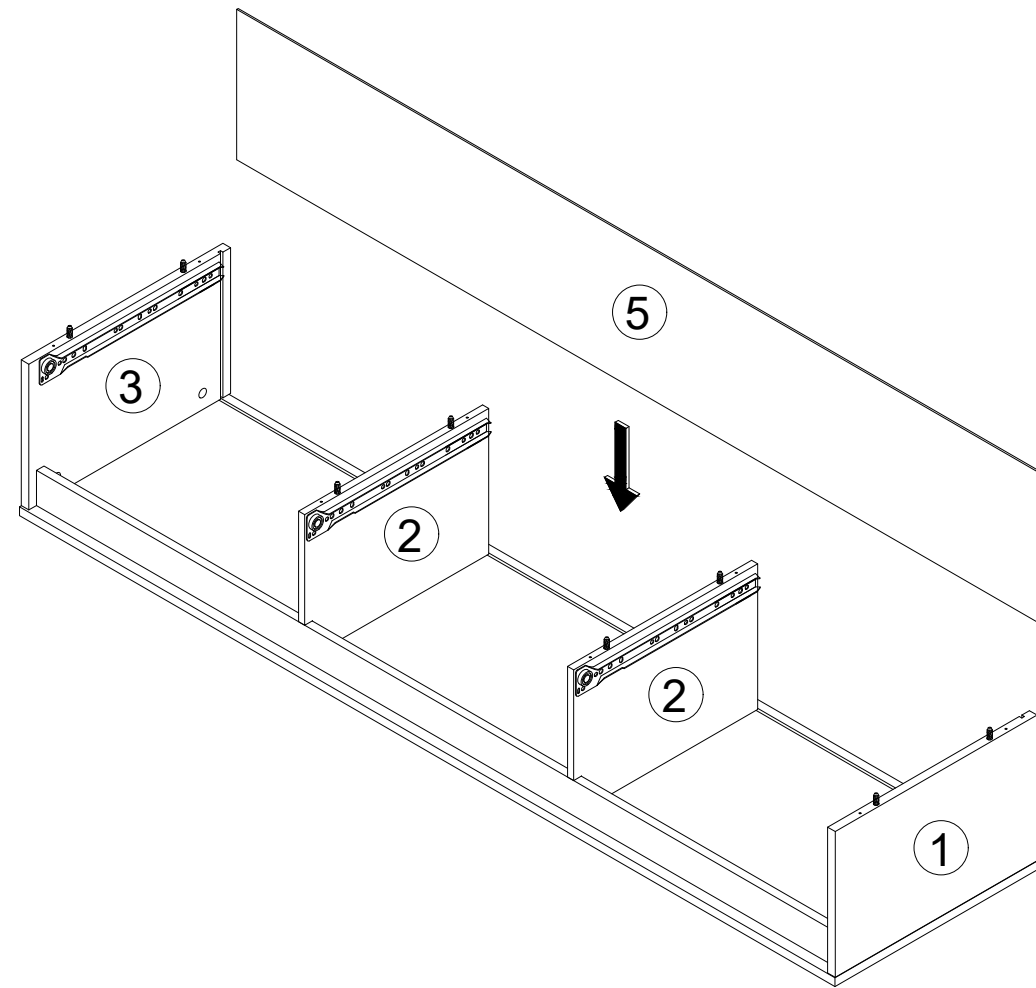

STEP 8 Do as the above instruction. Insert rear panel⑤into the assembled part. Please embed the panel along with the wood trough.


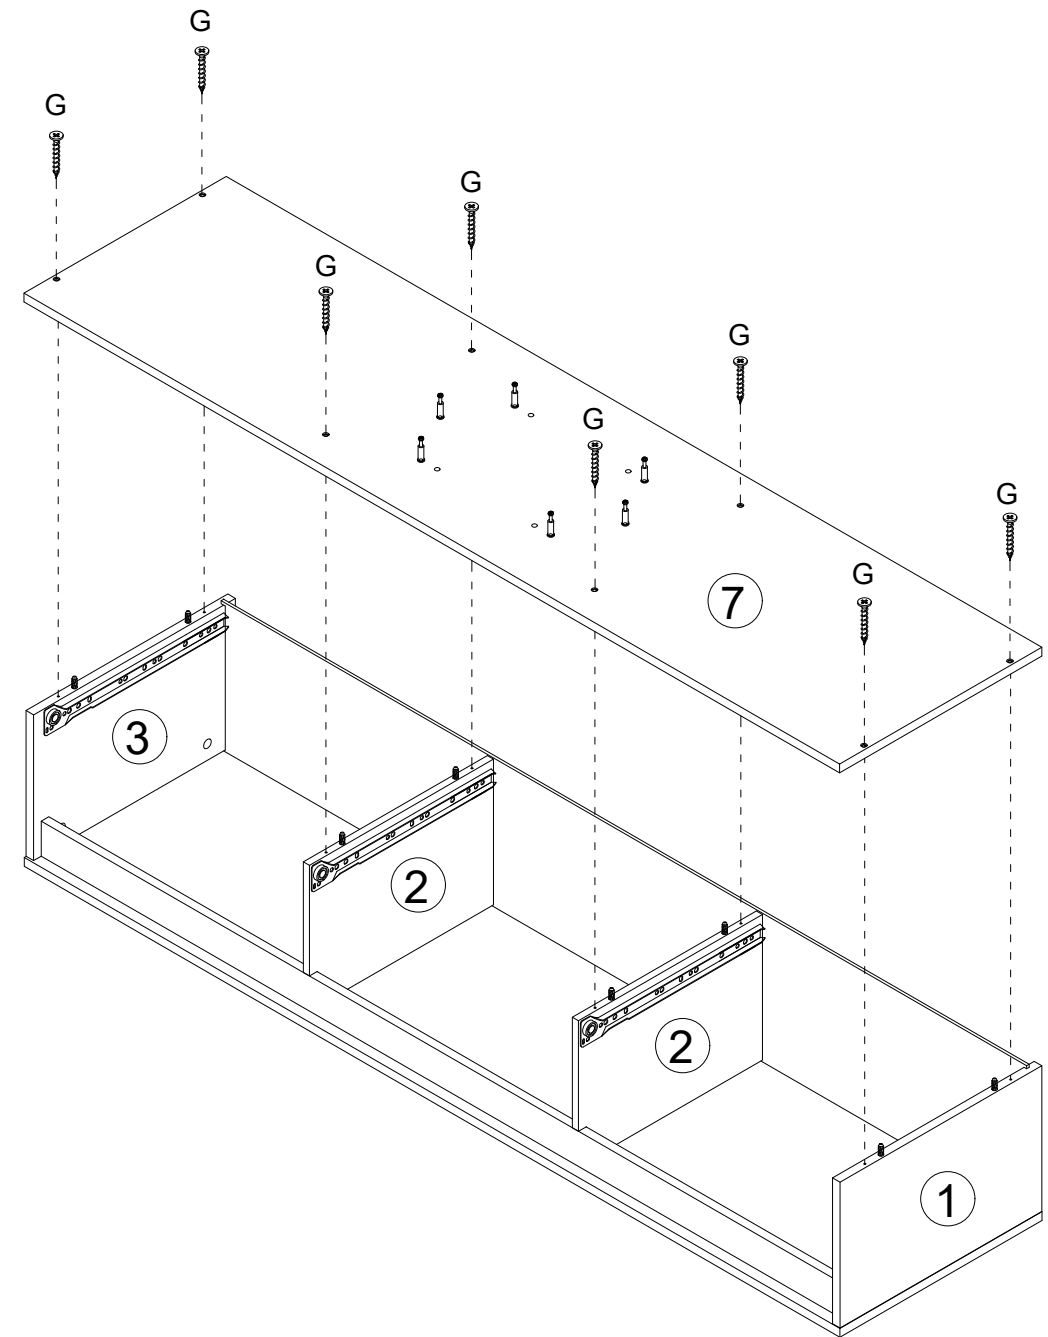
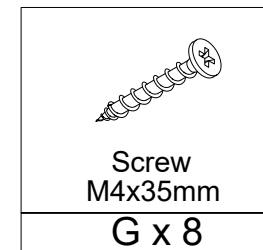


STEP 9 Do as the above instruction. Put the shelf⑦onto the assembled part. Align them accordingly. Insert the screws G into the settled holes on shelf⑦. Tighten the screws.

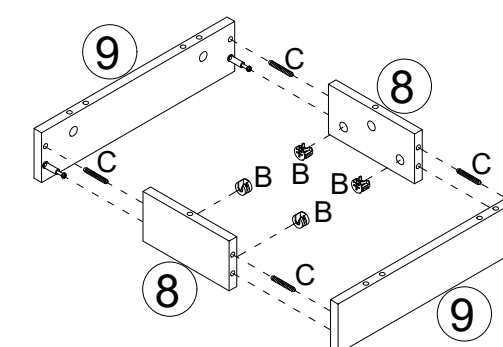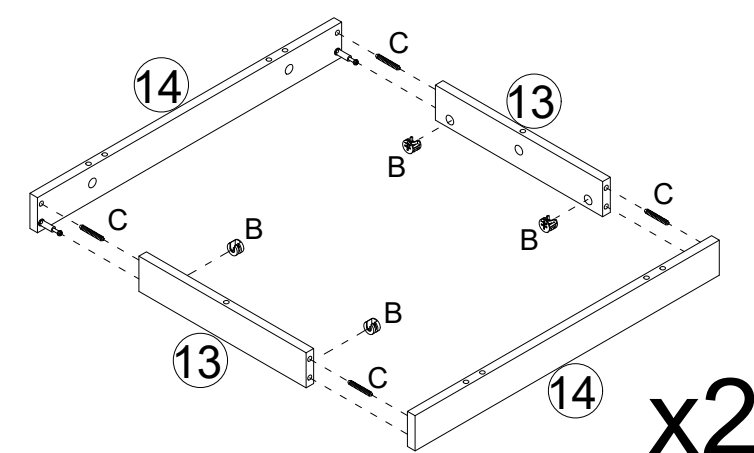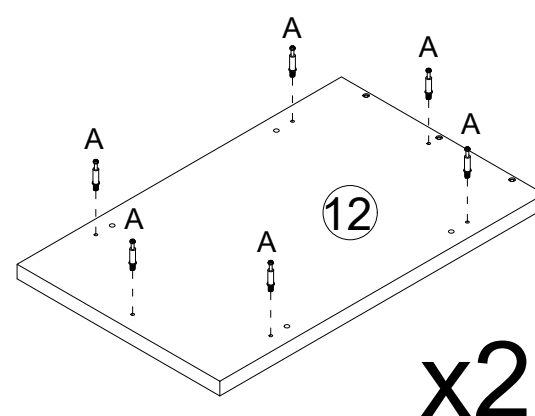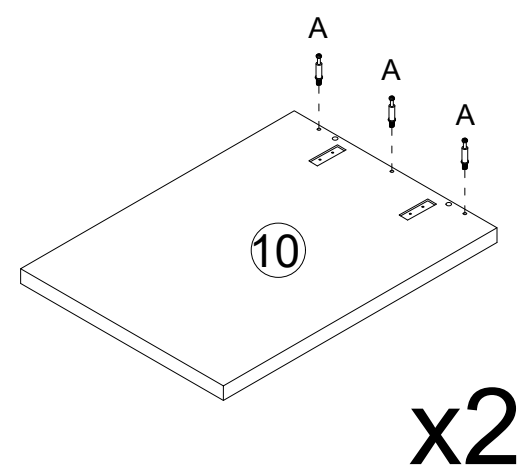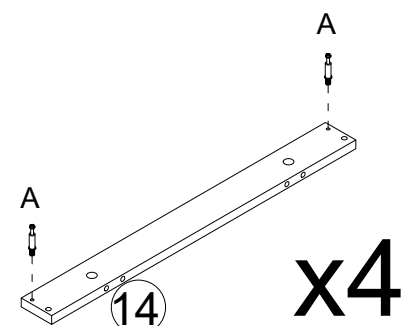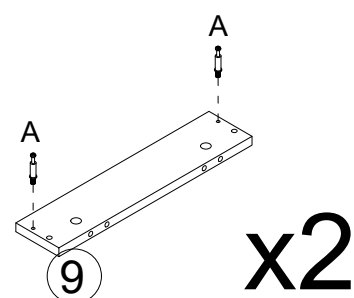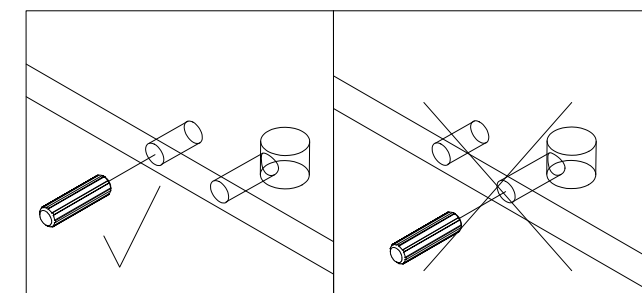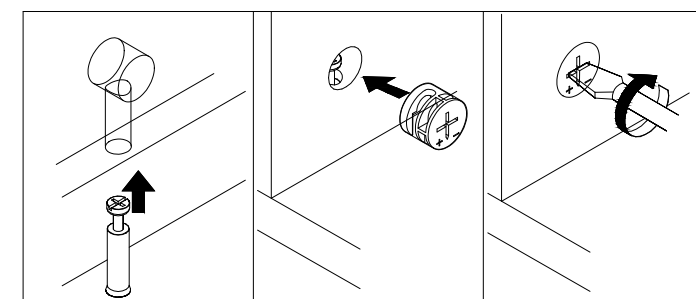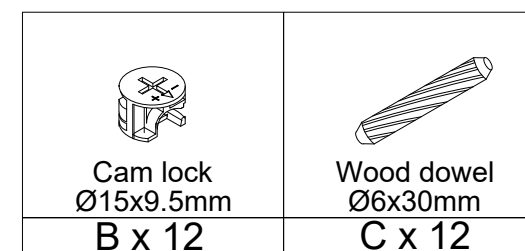
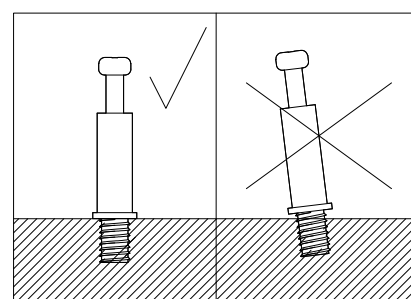
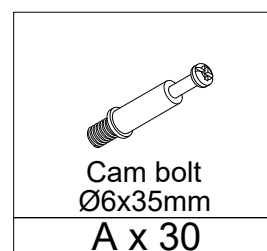


STEP 10 Insert cam bolts A into the settled holes on panels ⑨⑩⑫⑭.





STEP 11 Do as the above instruction. Insert wood dowels C into the settled holes on strips ⑧⑬.
Put the cam locks B into the settled holes on strips ⑬ accordingly.
Align the other side of bolts A on strips ⑭ with the breach of B.
Put the cam locks B into the settled holes on strips ⑧ accordingly.
Align the other side of bolts A on strips ⑨ with the breach of B.
Tighten all of the cam locks.

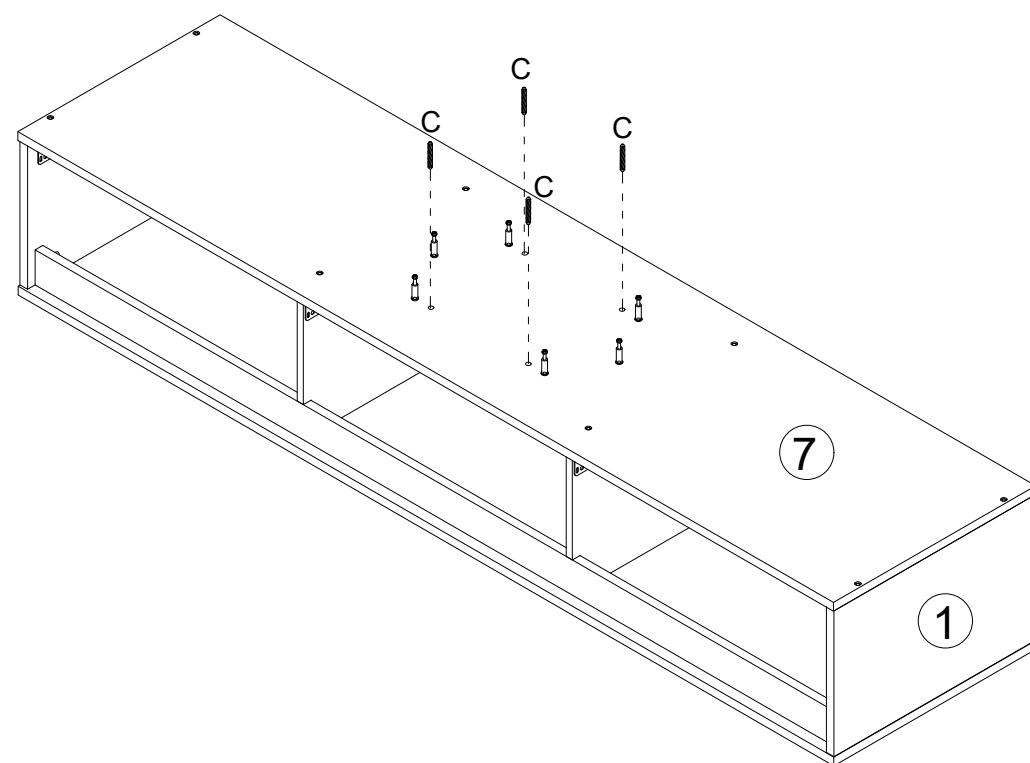
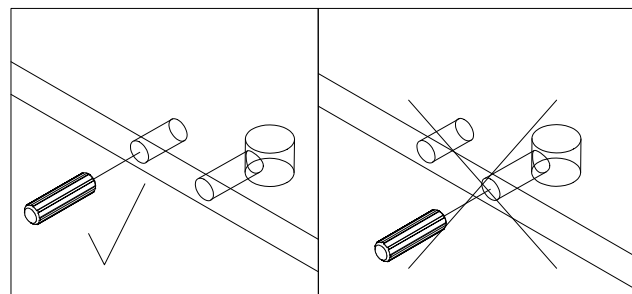
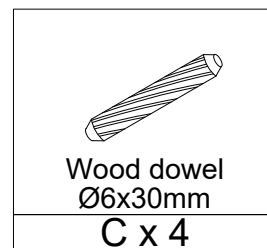


STEP 12 Do as the above instruction. Insert wood dowels C into the settled holes on shelf ⑦ .

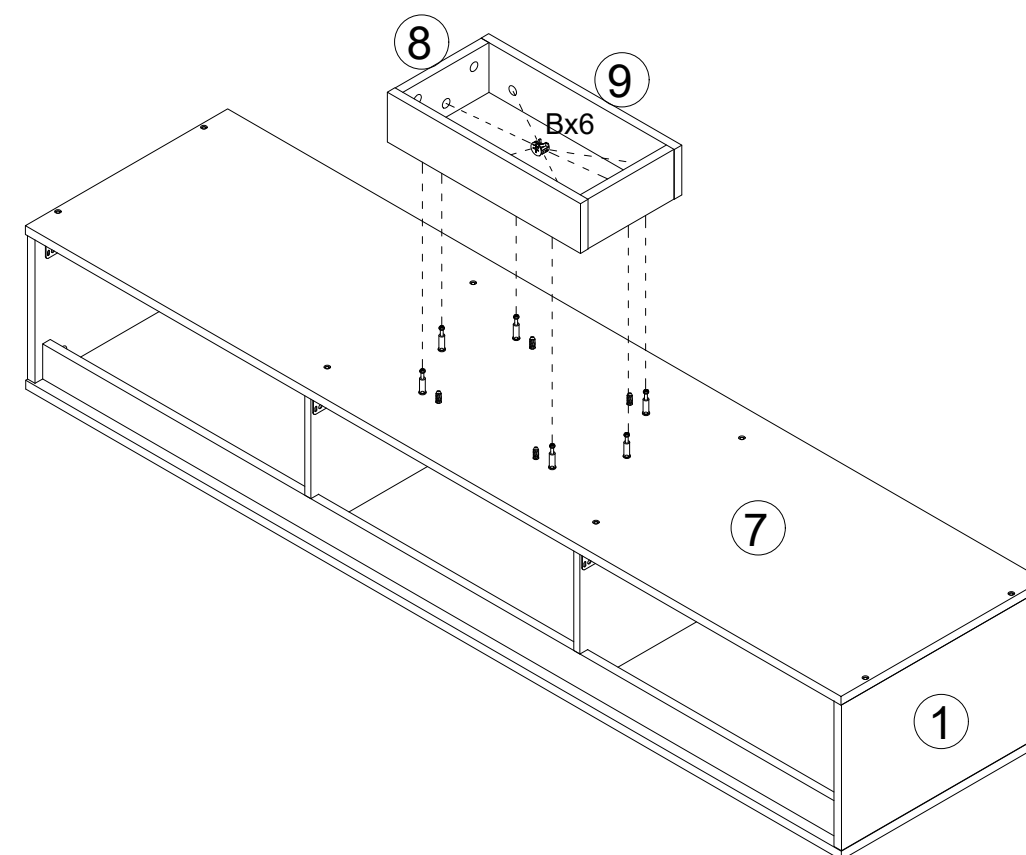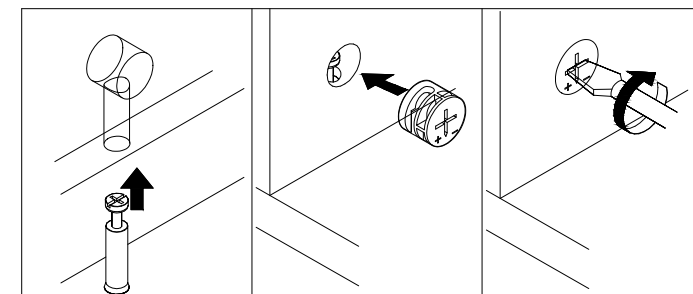
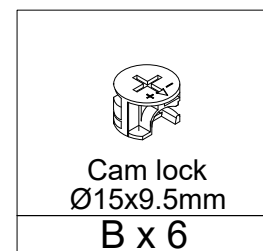


STEP 13 Put the cam locks B into the settled holes on strips ⑧⑨ accordingly. Align the other side of bolts A on strip ⑦ with the breach of B. Tighten the cam locks.

 Cam lock Ø15x9.5mm B x 6	 Wood dowel Ø6x30mm C x 4
 Corner code I x 4	 Screw M4x18mm J x 16

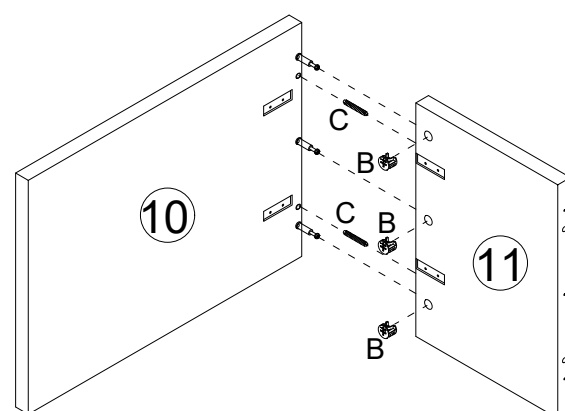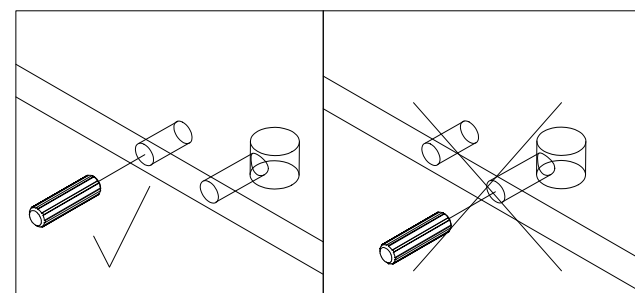
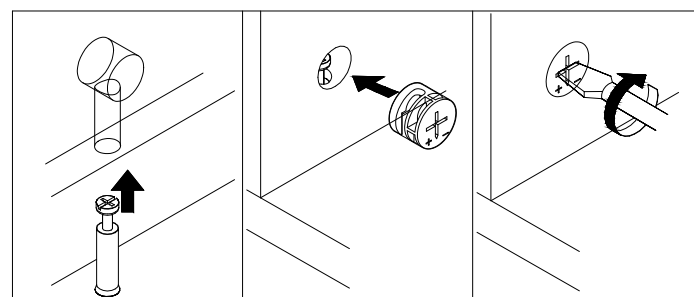




x2

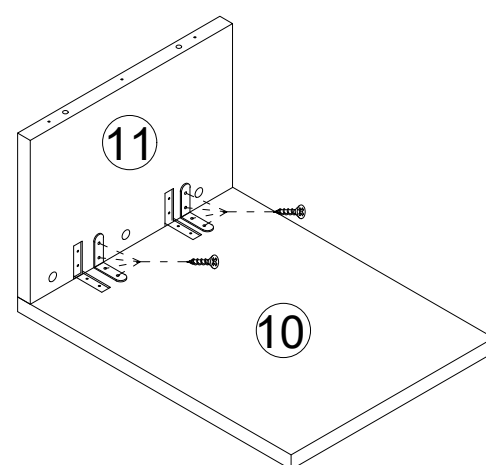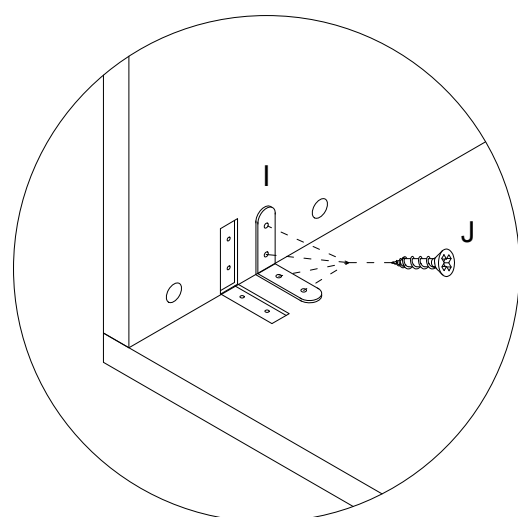

x2




STEP 14 Insert wood dowels **C** into the settled holes on plates ⑪ .
 Put the cam locks **B** into the settled holes on plates ⑪ accordingly.
 Align the other side of bolts **A** on panels ⑩ with the breach of **B**.
 Tighten the cam locks.
 Insert screws **J** into the settled holes on plates ⑩ ⑪ through corner codes **I** , tighten the screws..

 Wood dowel Ø6x30mm C x 4	 Screw M4x45mm D x 6
--	---


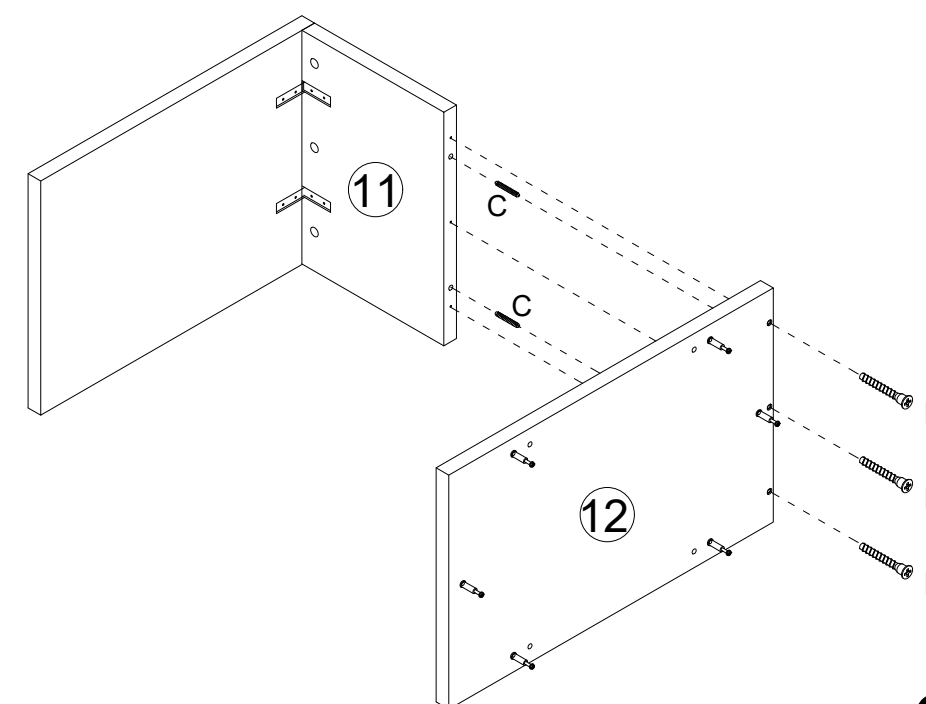
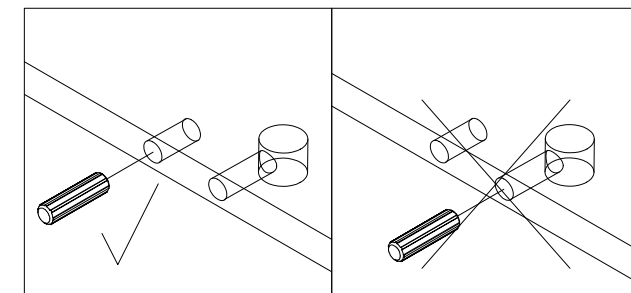


x2


STEP 15 Insert wood dowels **C** into the settled holes on plates ⑪ .
 Put the shelves ⑫ onto the assembled part. Align them accordingly.
 Insert the screws **D** into the settled holes on shelves ⑫ . Tighten the screws.

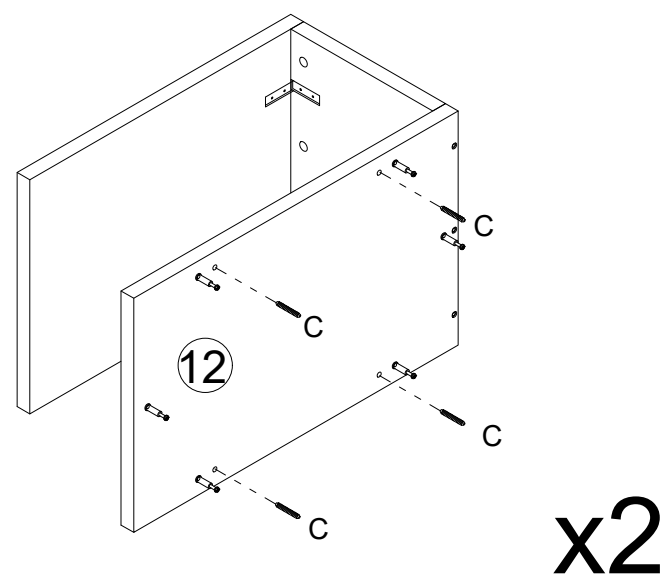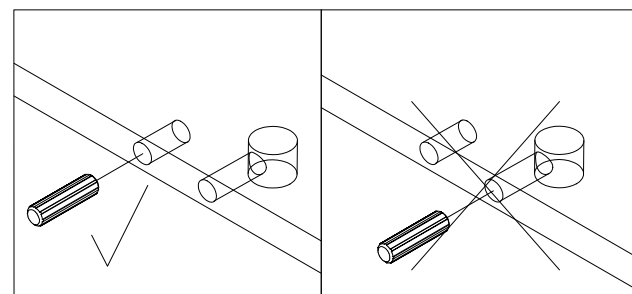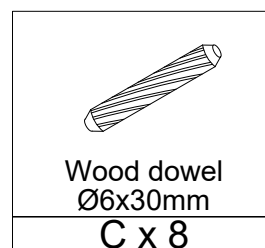






STEP 16 Insert wood dowels C into the settled holes on shelves ⑪ .

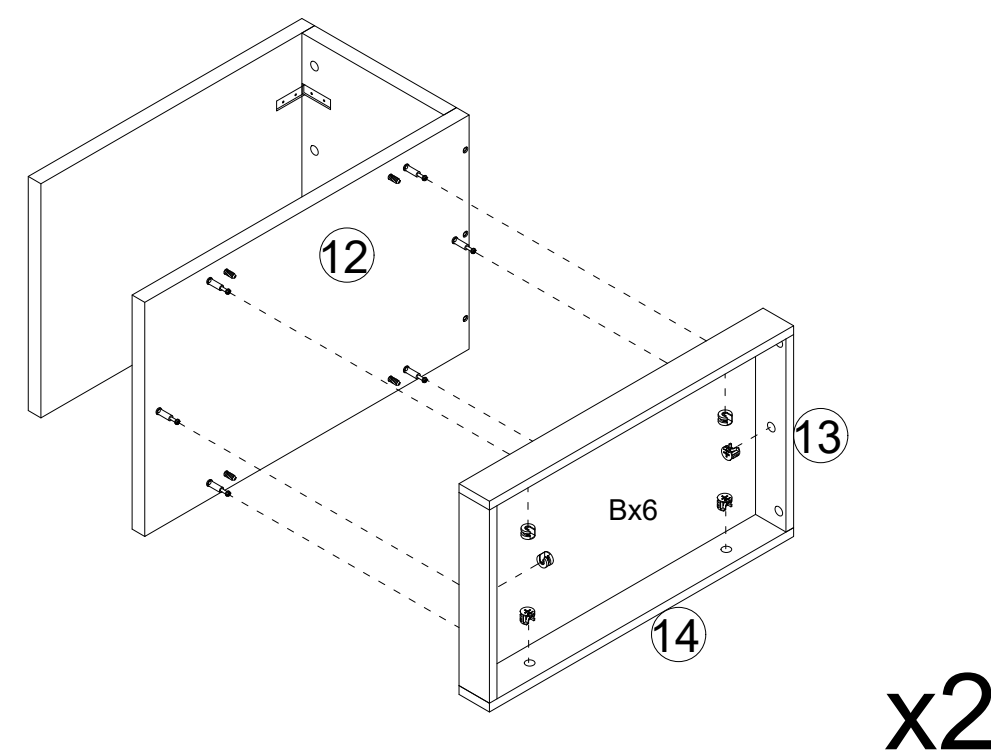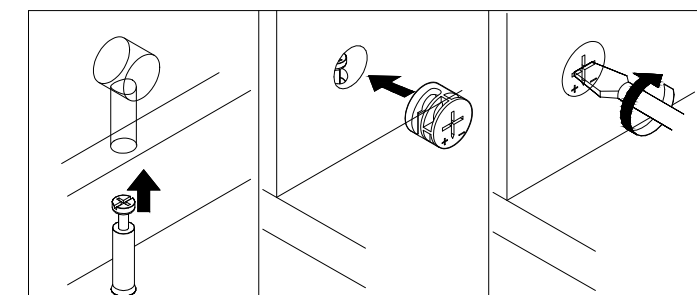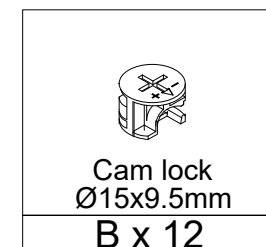







STEP 17 Put the cam locks B into the settled holes on strips ⑬ ⑭ accordingly. Align the other side of bolts A on shelves ⑫ with the breach of B. Tighten the cam locks.

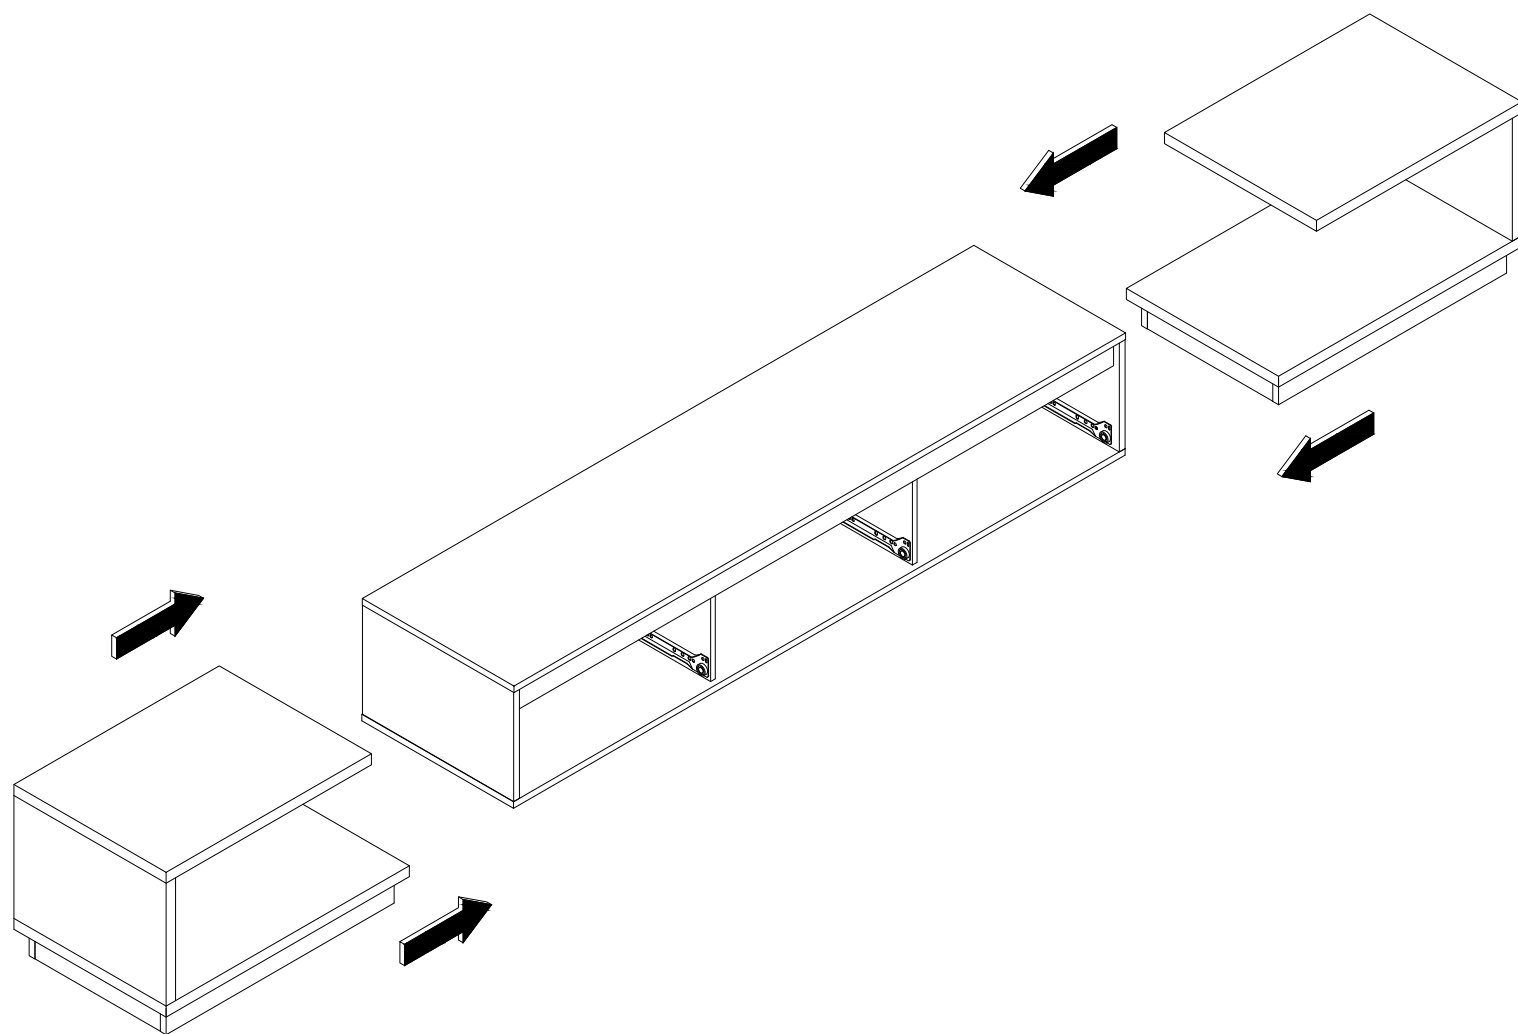

STEP 18 Do as the above instruction. Put the assembled cabinet parts together. Adjust the length of connected parts as requested.

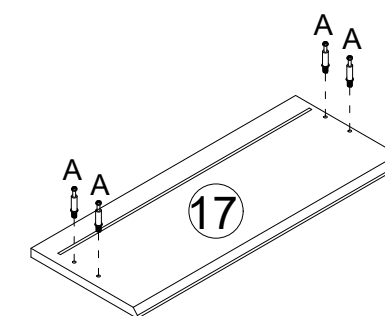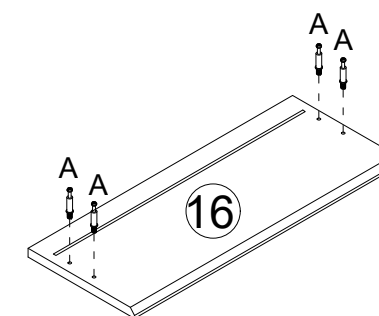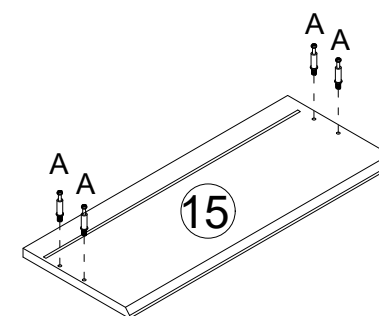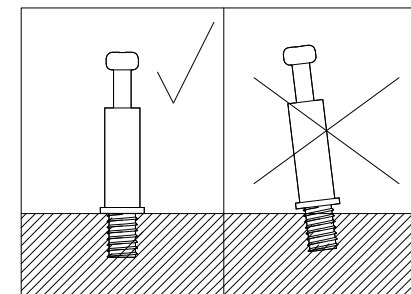
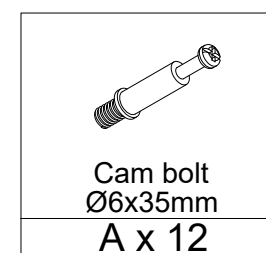


STEP 19 Insert cam bolts A into the settled holes on panels 15 16 17 19 .

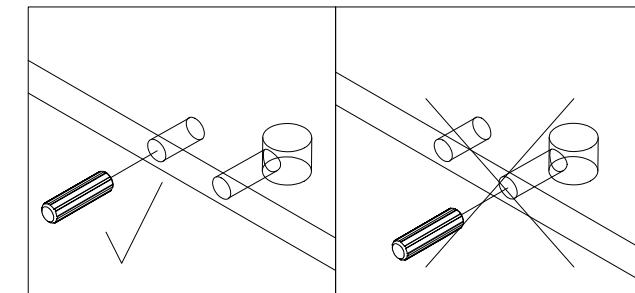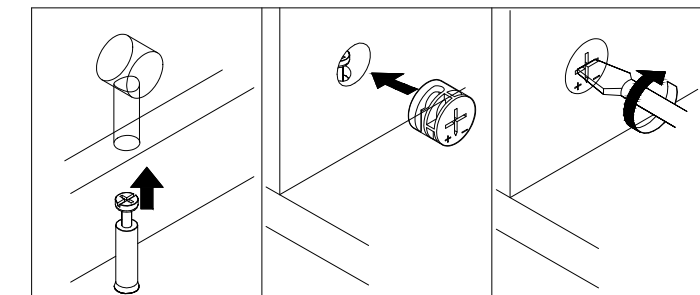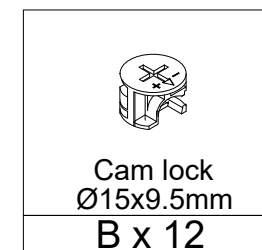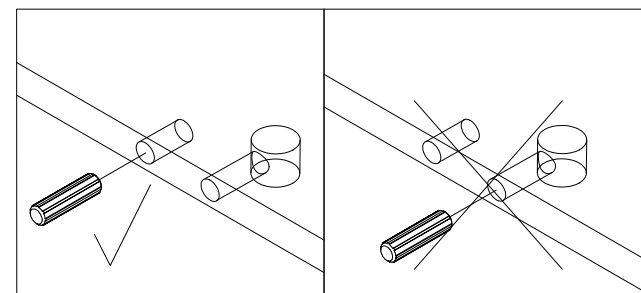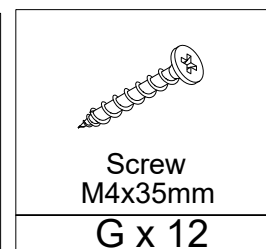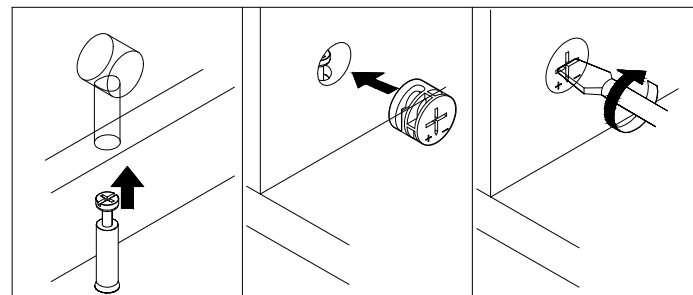

8


9

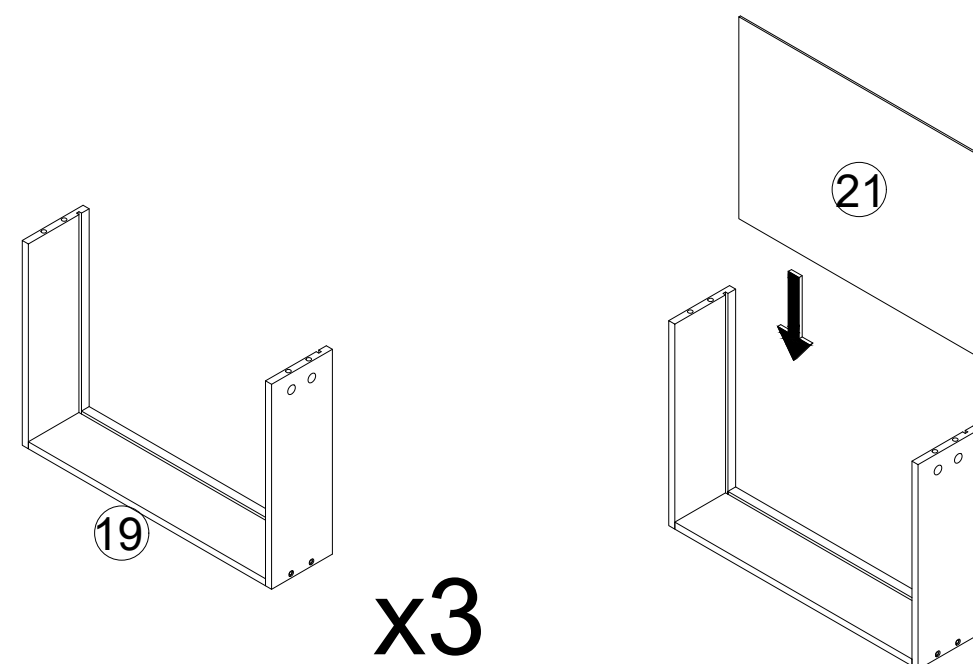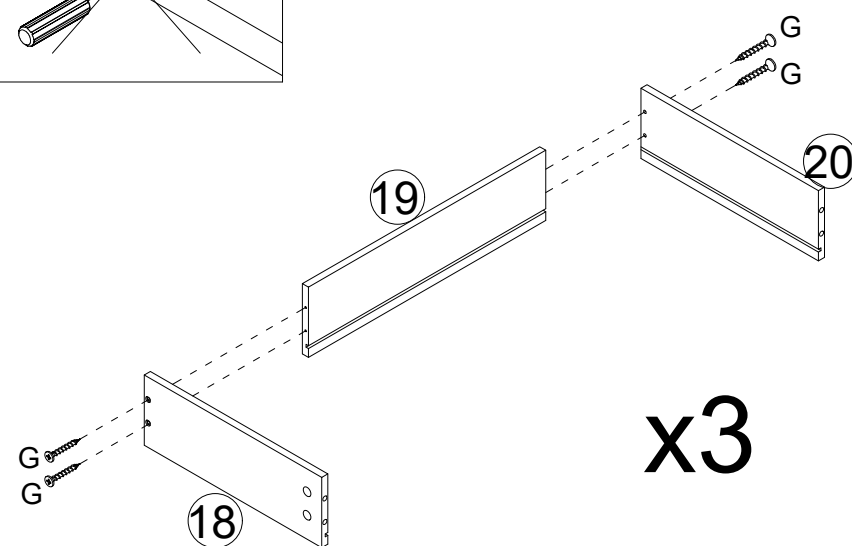


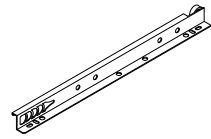
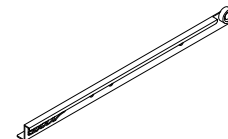
x3


x3

STEP 20 Do as the above instruction. Install panels 18 19 20 together with screws G. Align the edges and tighten the screws. Insert drawer floors 21 into the assembled drawers. Please embed the floor along with the wood trough to the end gently.

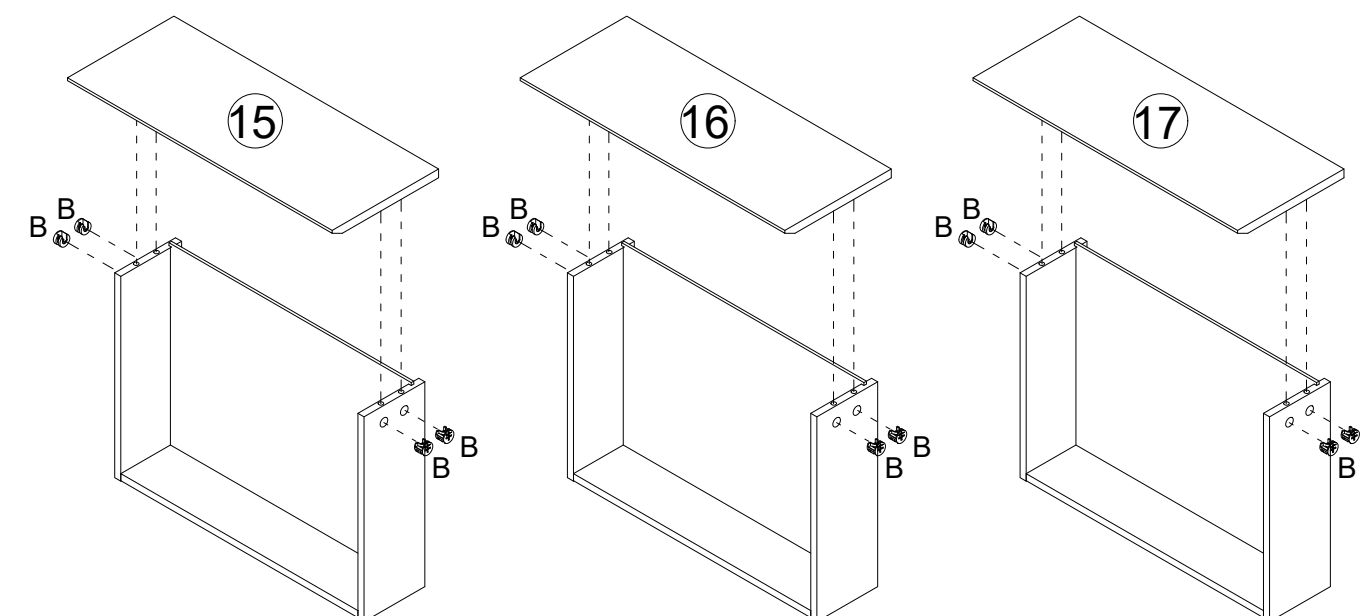


STEP 21 Do as the above instruction. Put the cam locks B into the settled holes on the assembled drawers accordingly. Align the other side of bolts A on panels 15 16 17 with the breach of B. Tighten all of the cam locks.



		
Screw M3.5x12mm	Drawer tracks	Drawer tracks
E x 12	DL x 3	DR x 3

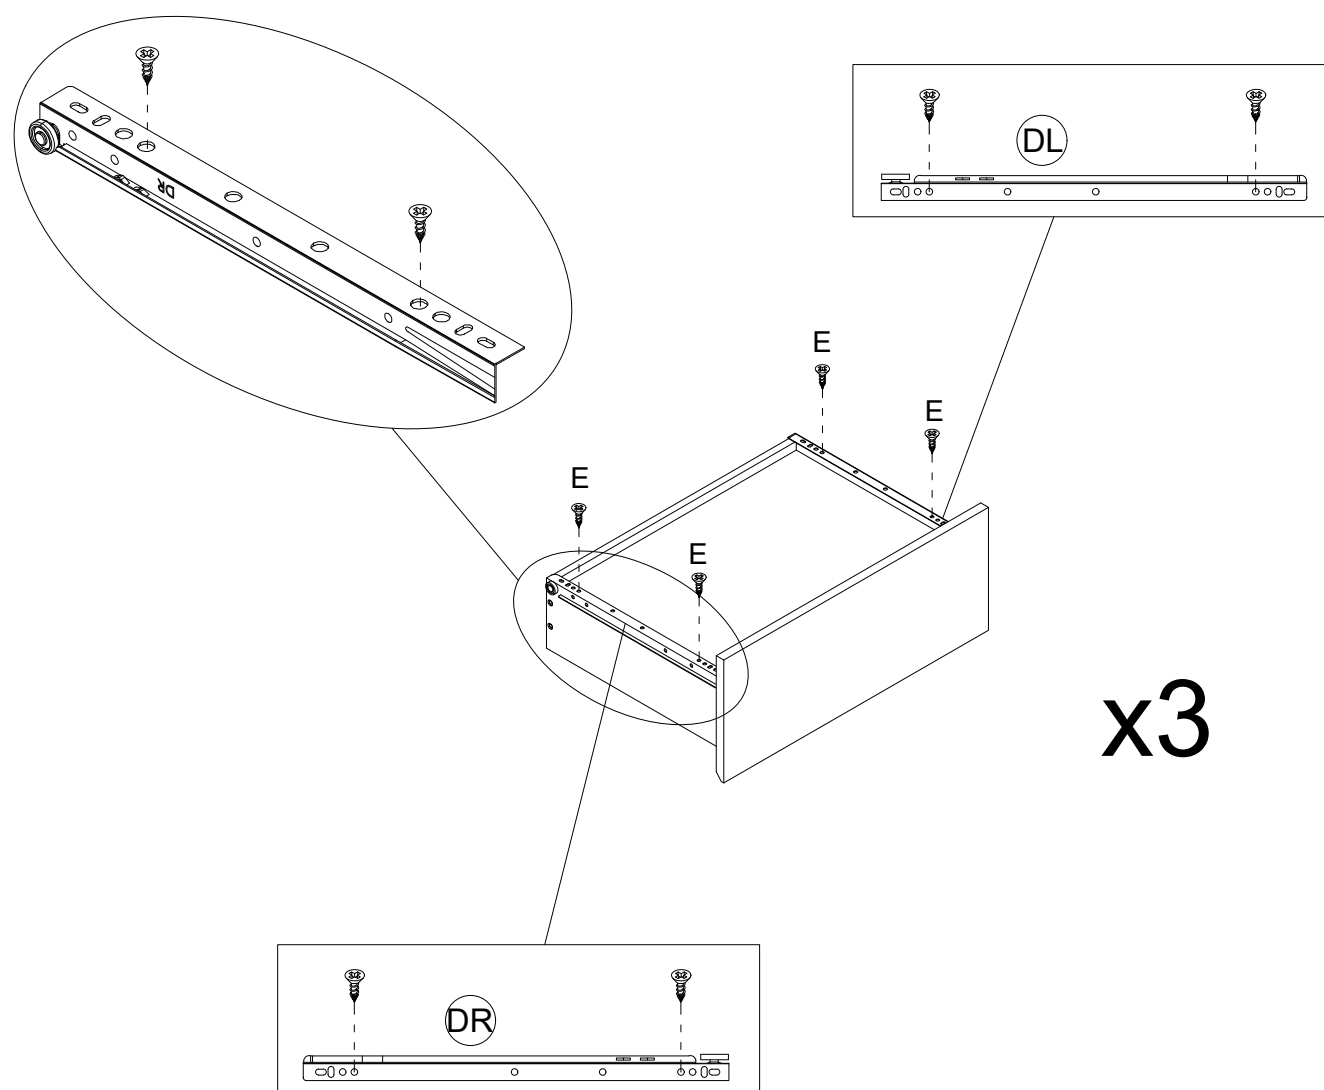


STEP 22 Fix drawer tracks DL and DR onto the bottom of the assembled drawers as above instruction.

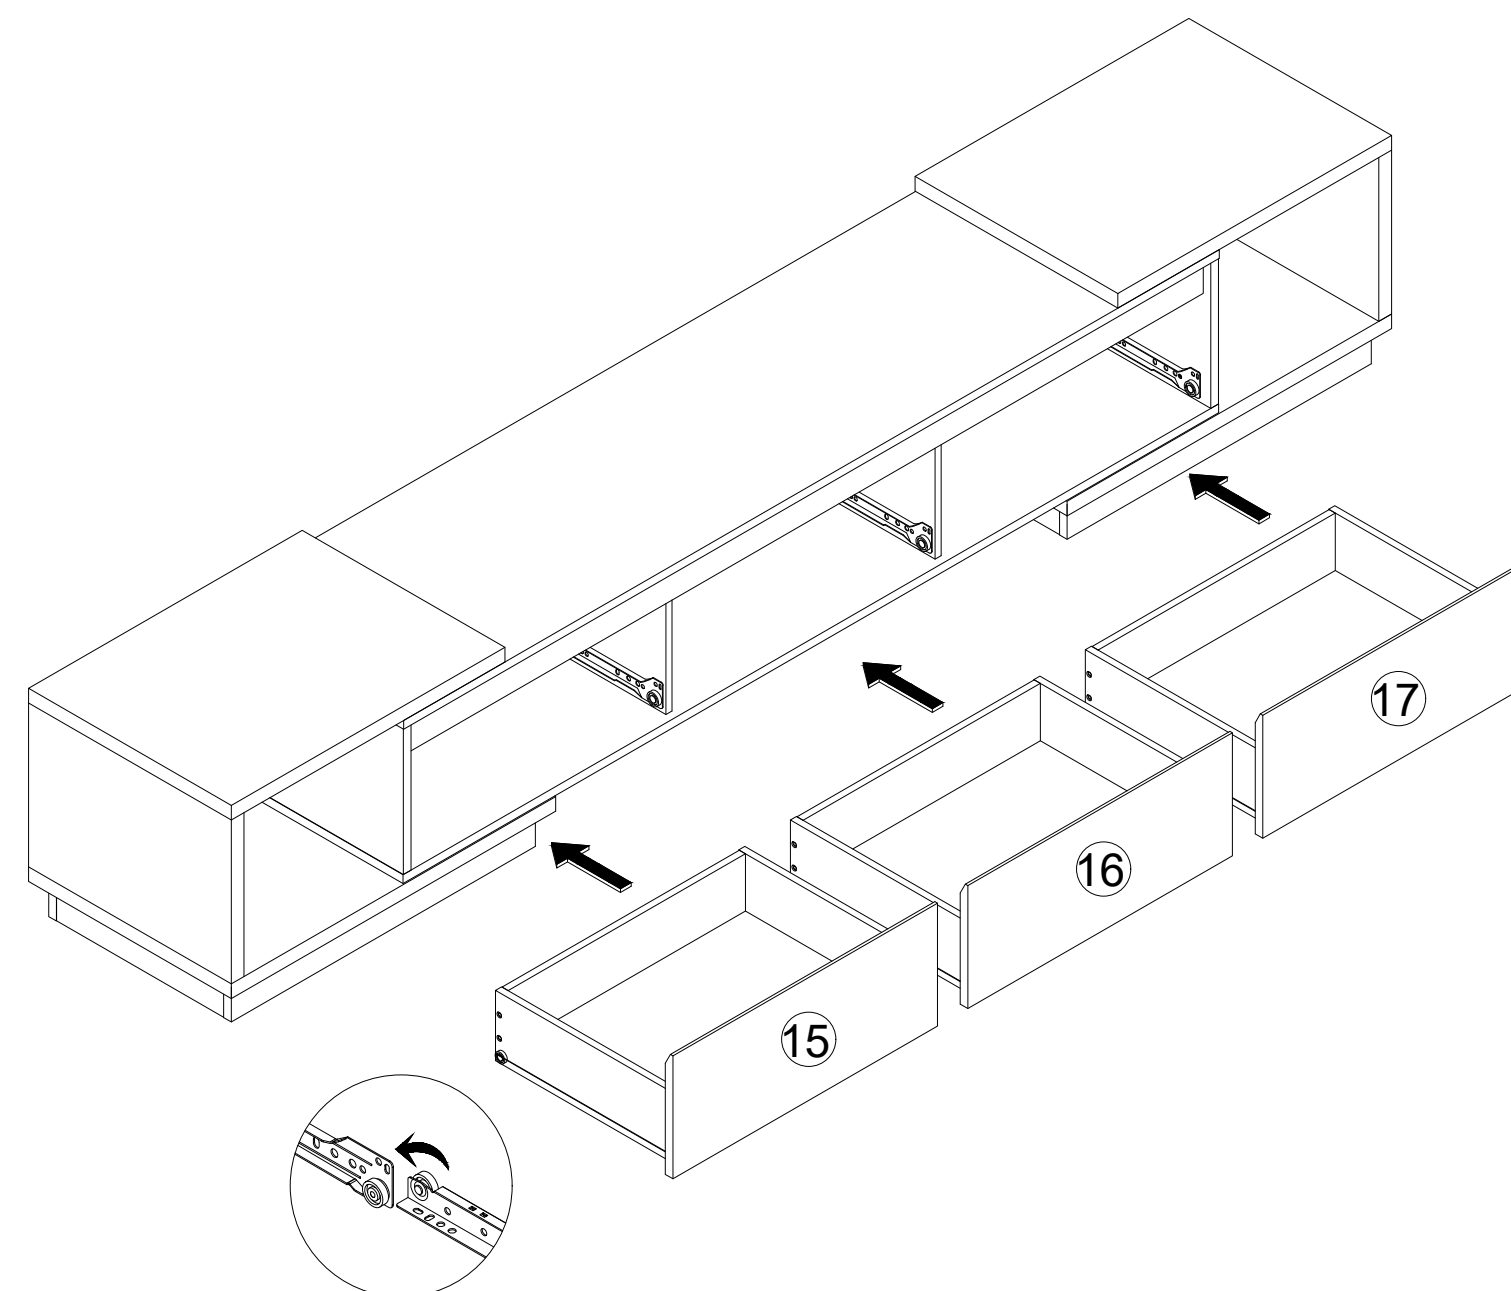


STEP 23 Do as the above instruction. Load the wheels of drawer tracks onto the corresponding track in the cabinet. Push gently the drawers into the cabinet.

	
Screw M3x14mm	Back plate buckle
F x 12	H x 12

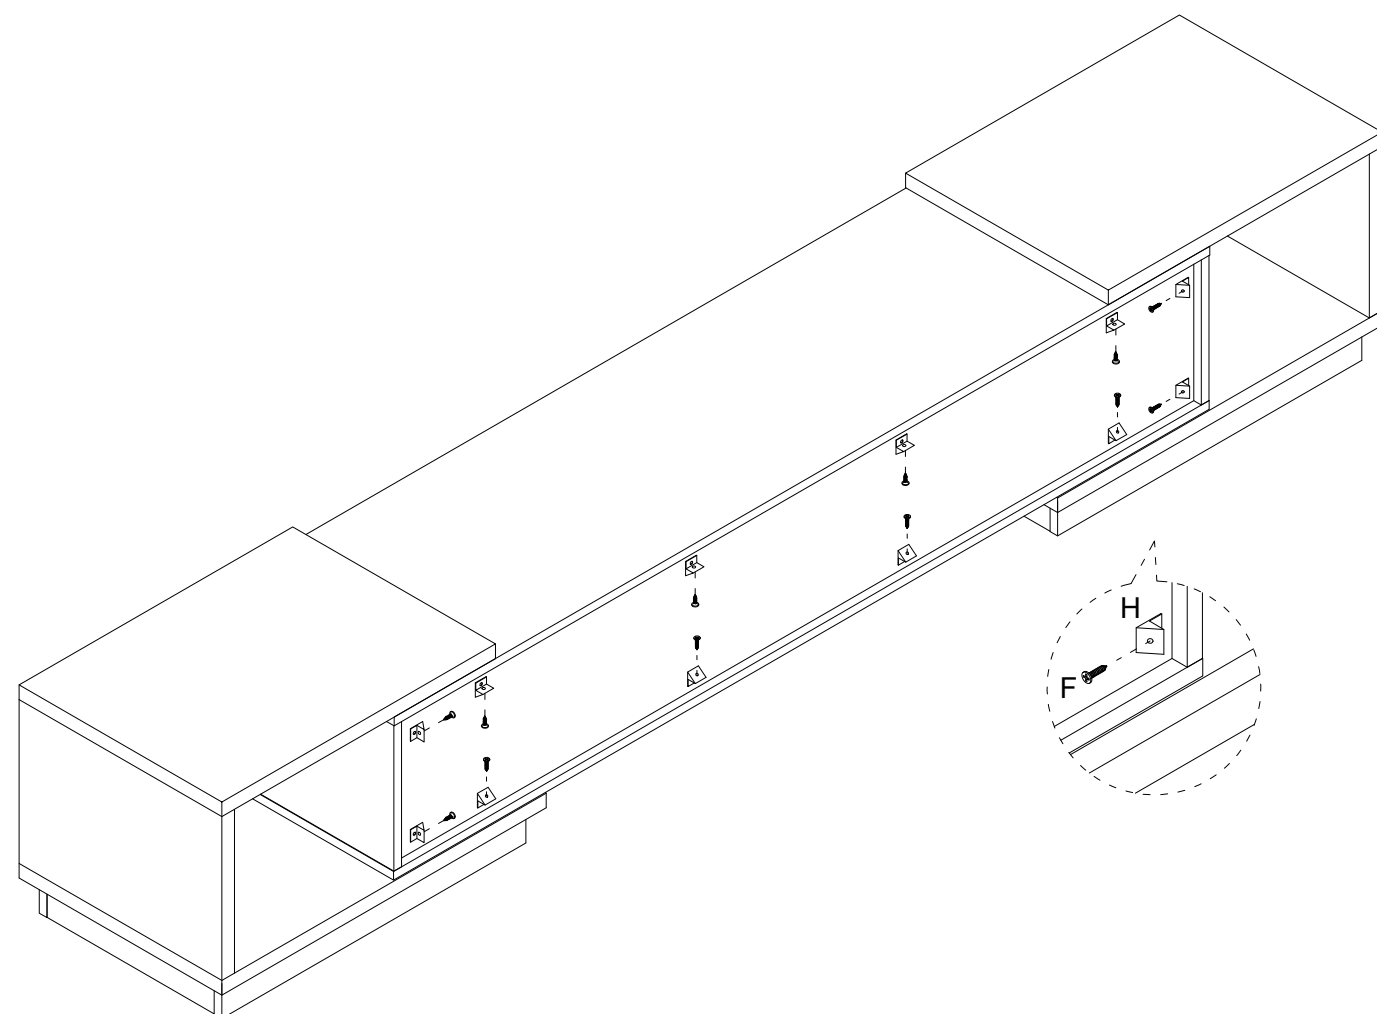

STEP 24 Do as the above instruction. Adjust the gaps between the panels. Fasten the back plate buckles H on the corners of the cabinet back accordingly. Tighten with screws F.

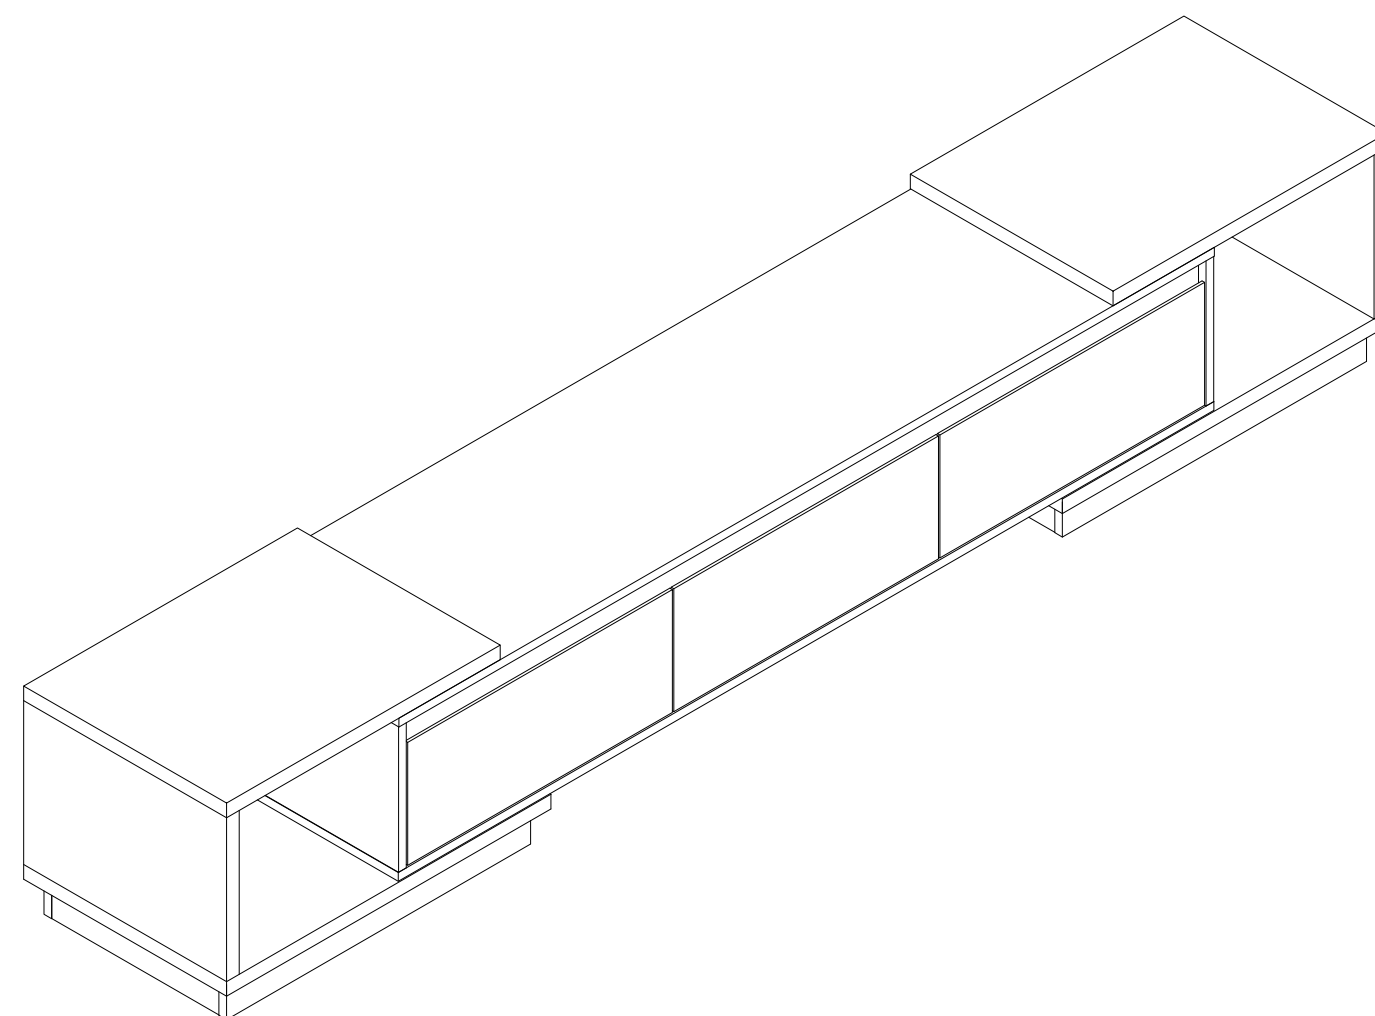

STEP 25 Assembly is completed.