


# 2-Person Patio Porch Swing

## ASSEMBLY Instructions

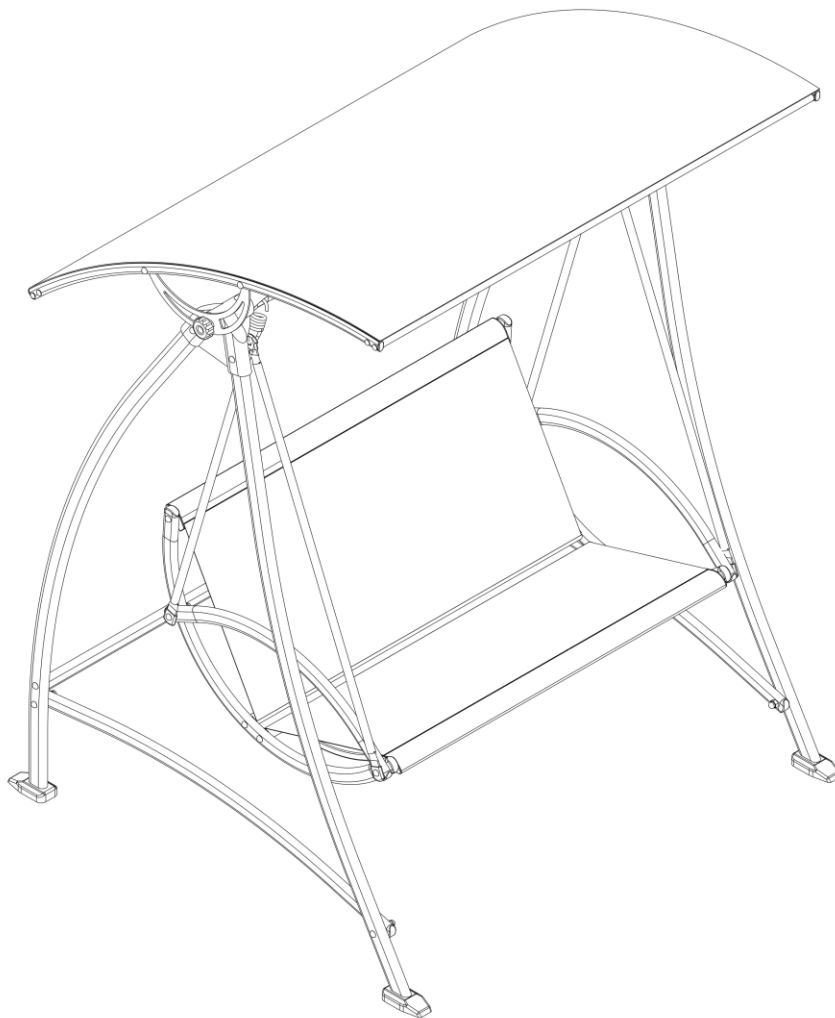





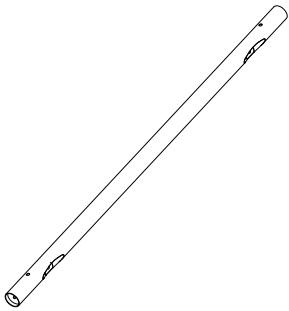
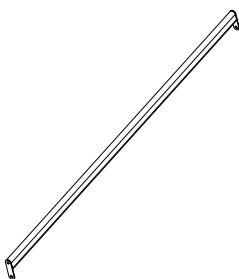
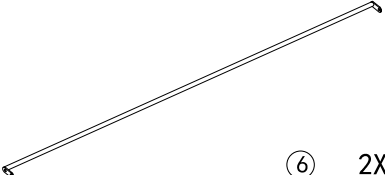
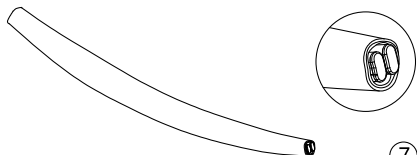

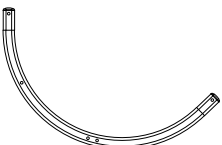
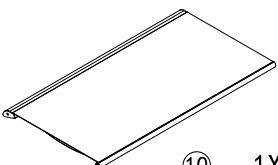
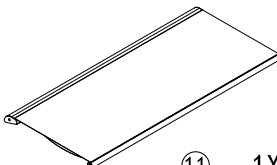

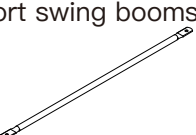
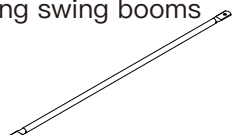















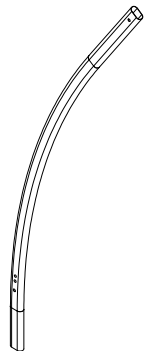











Missing part? Damaged? Contact us via email at  
[service@domioutdoorliving.com](mailto:service@domioutdoorliving.com)



[www.domioutdoorliving.com](http://www.domioutdoorliving.com)

© Copyright 2022–2024 domi LLC. | All Rights Reserved.



Please ensure all parts included before assembly and feel free to contact us if there are any problems.




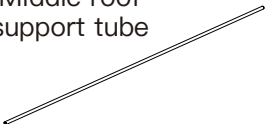


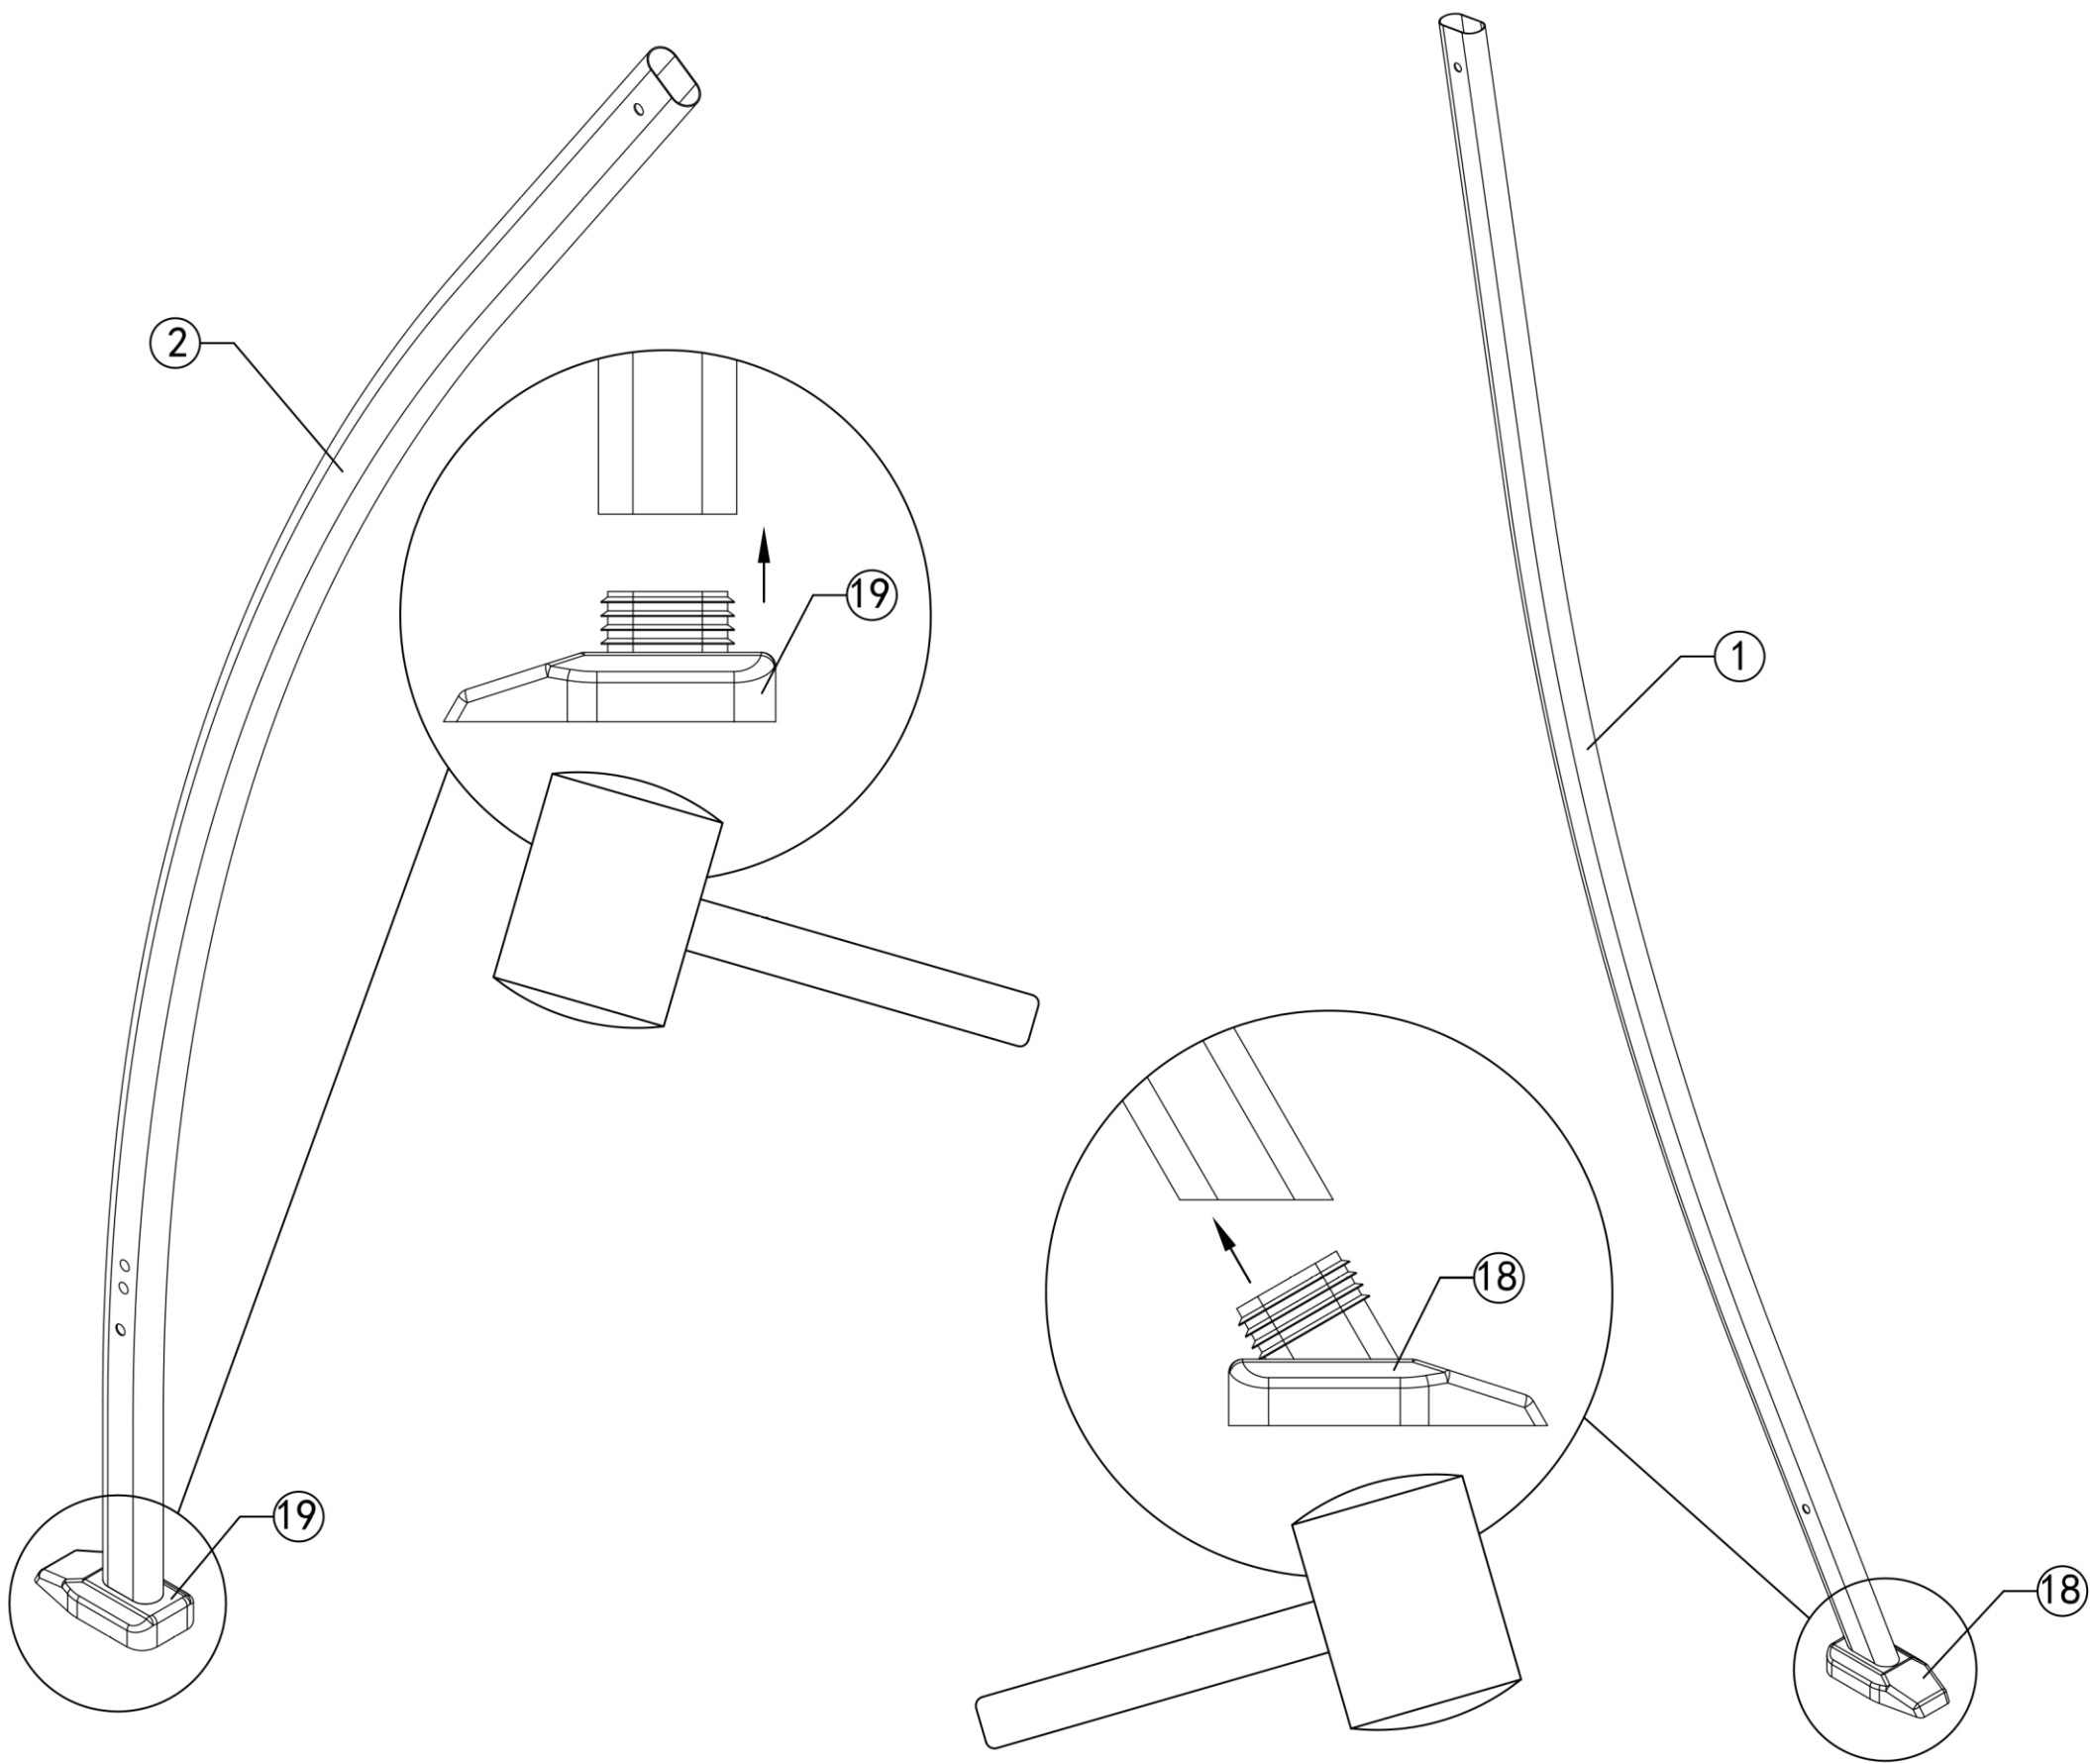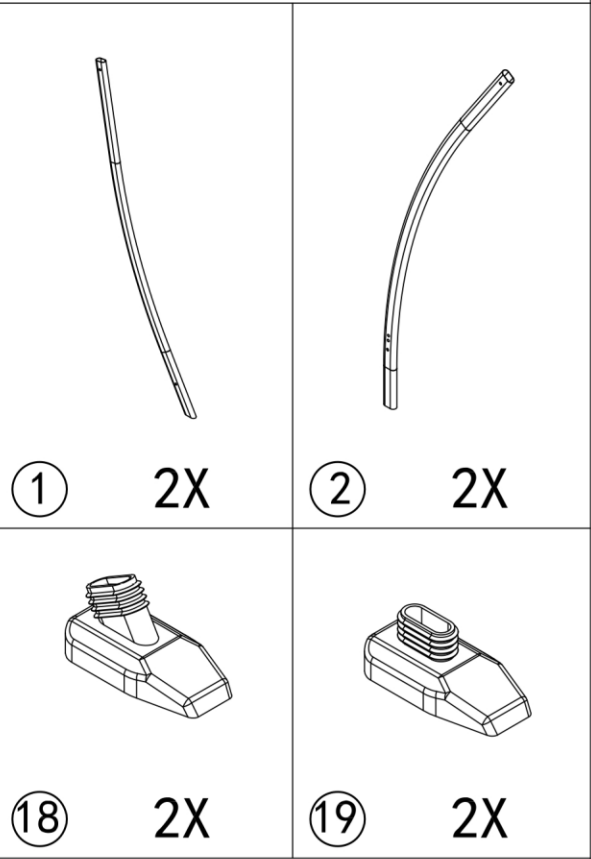



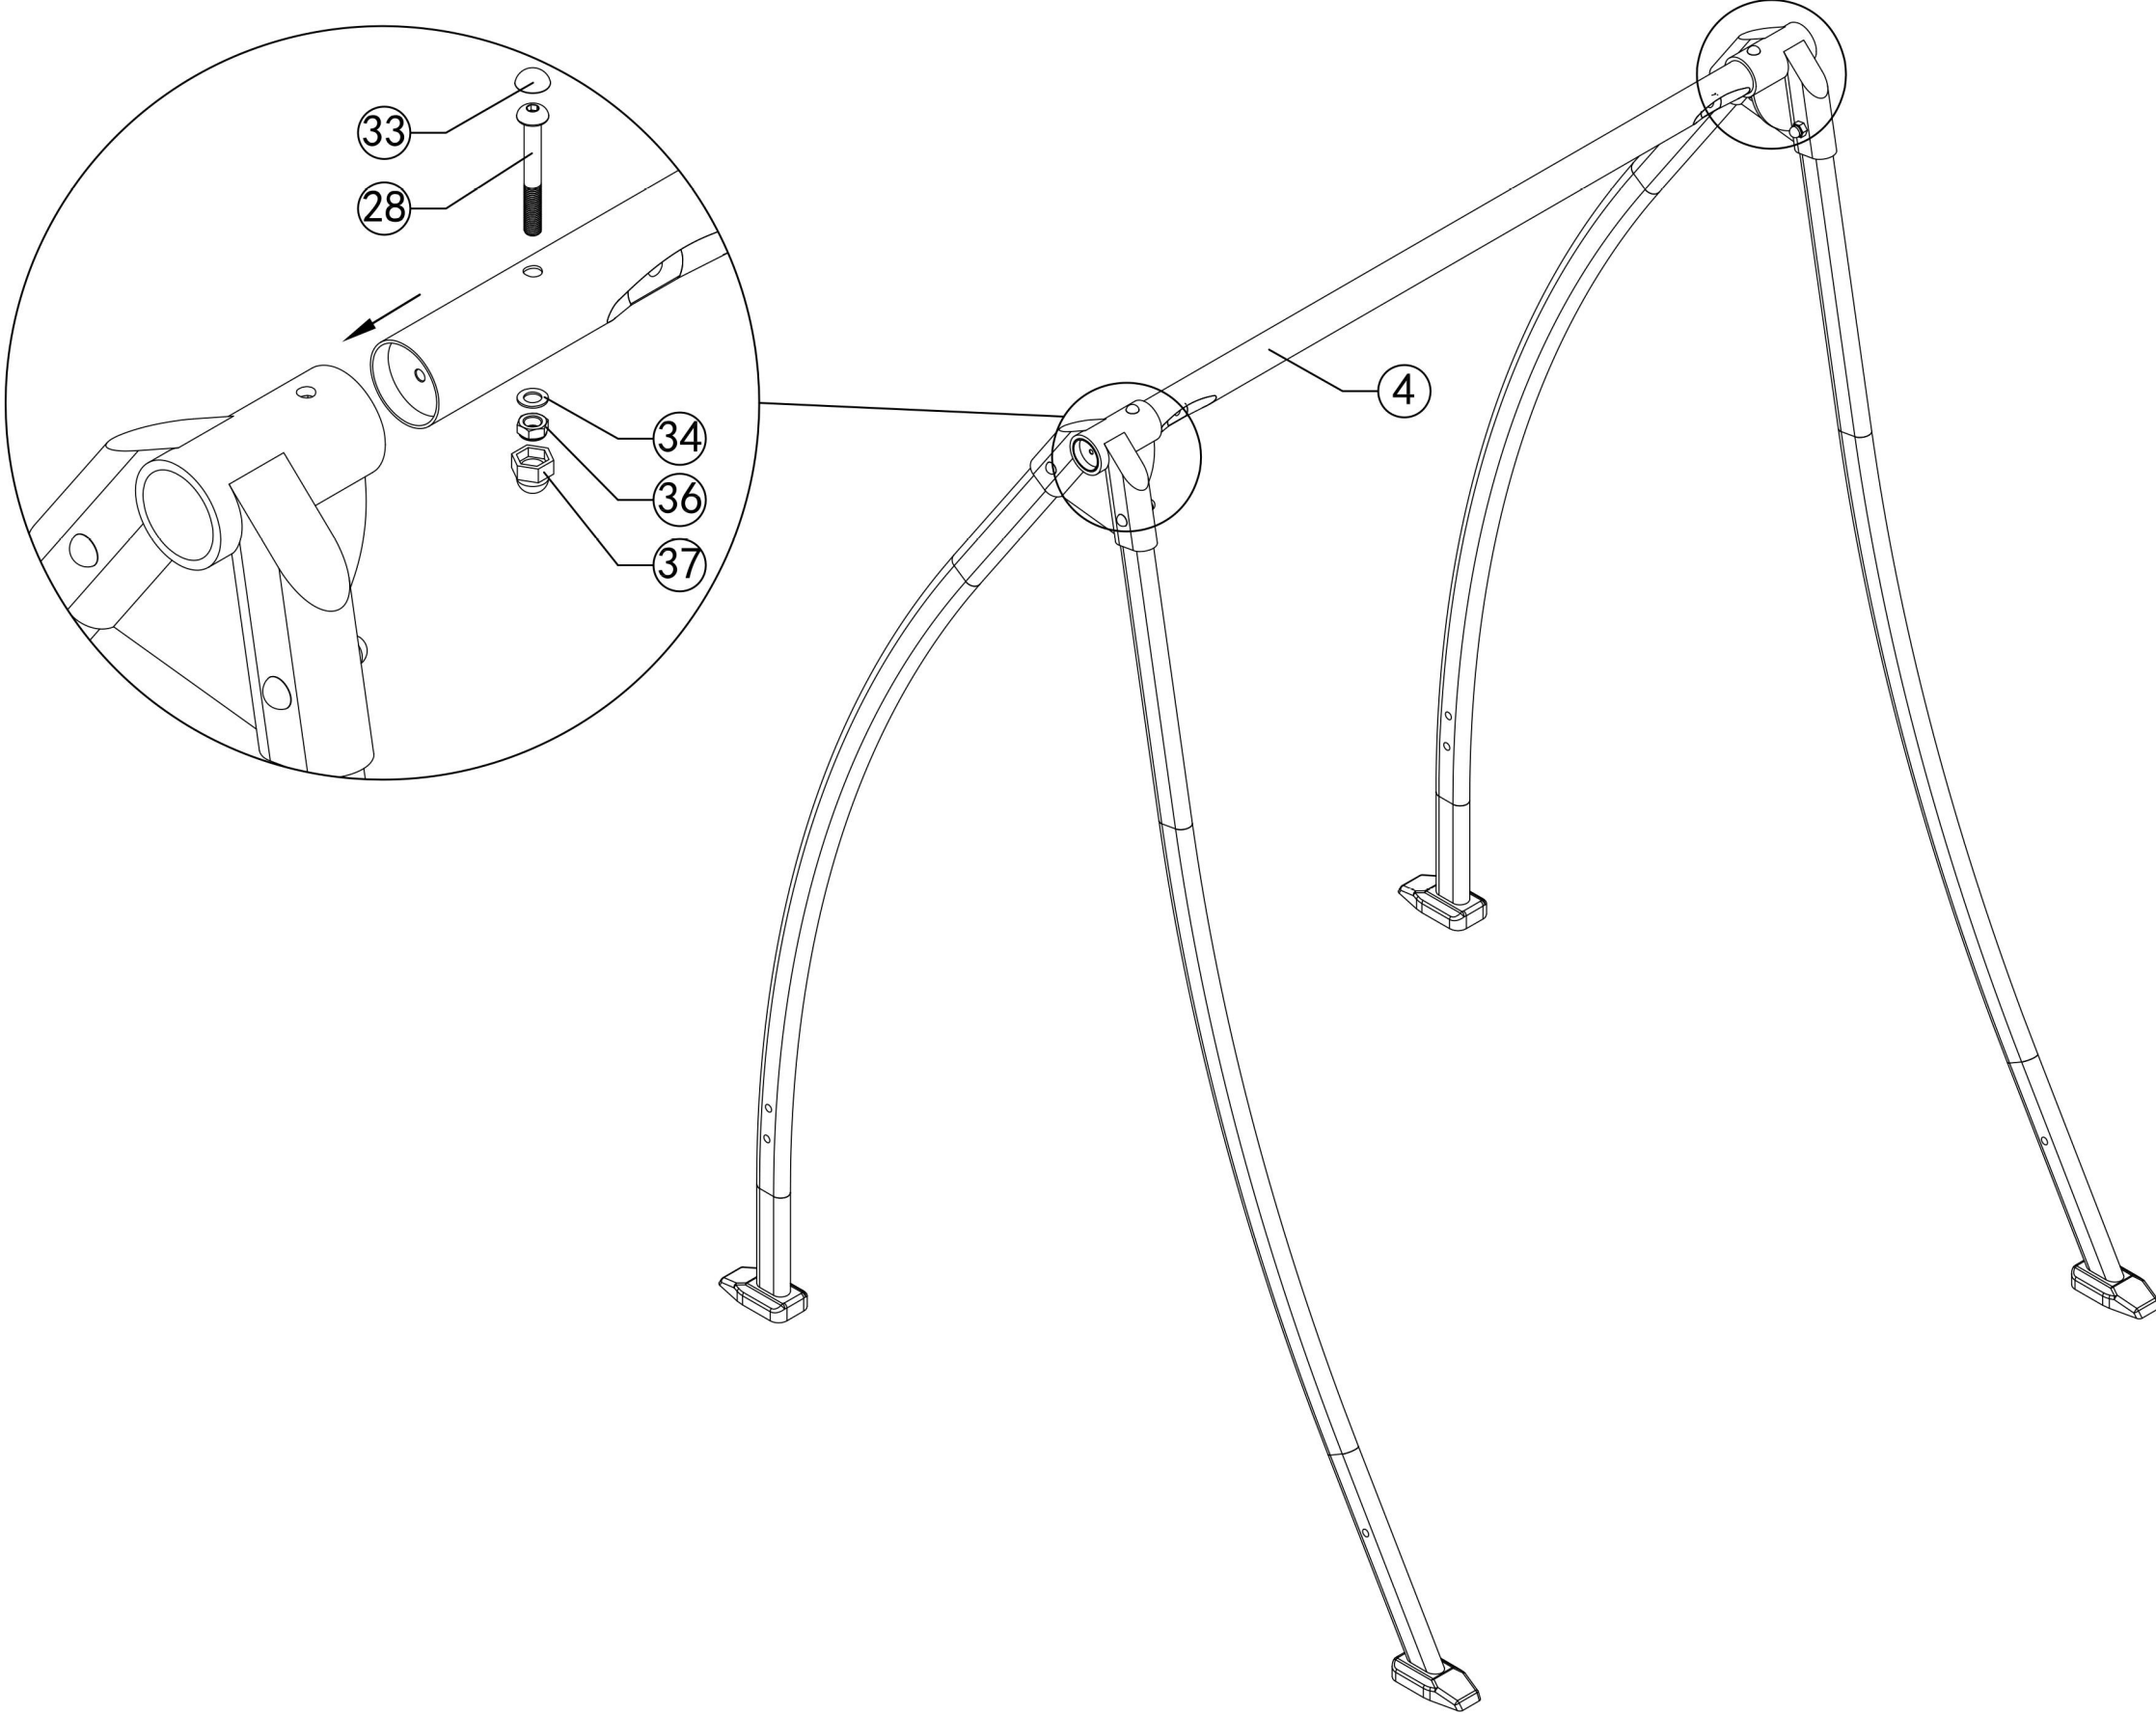




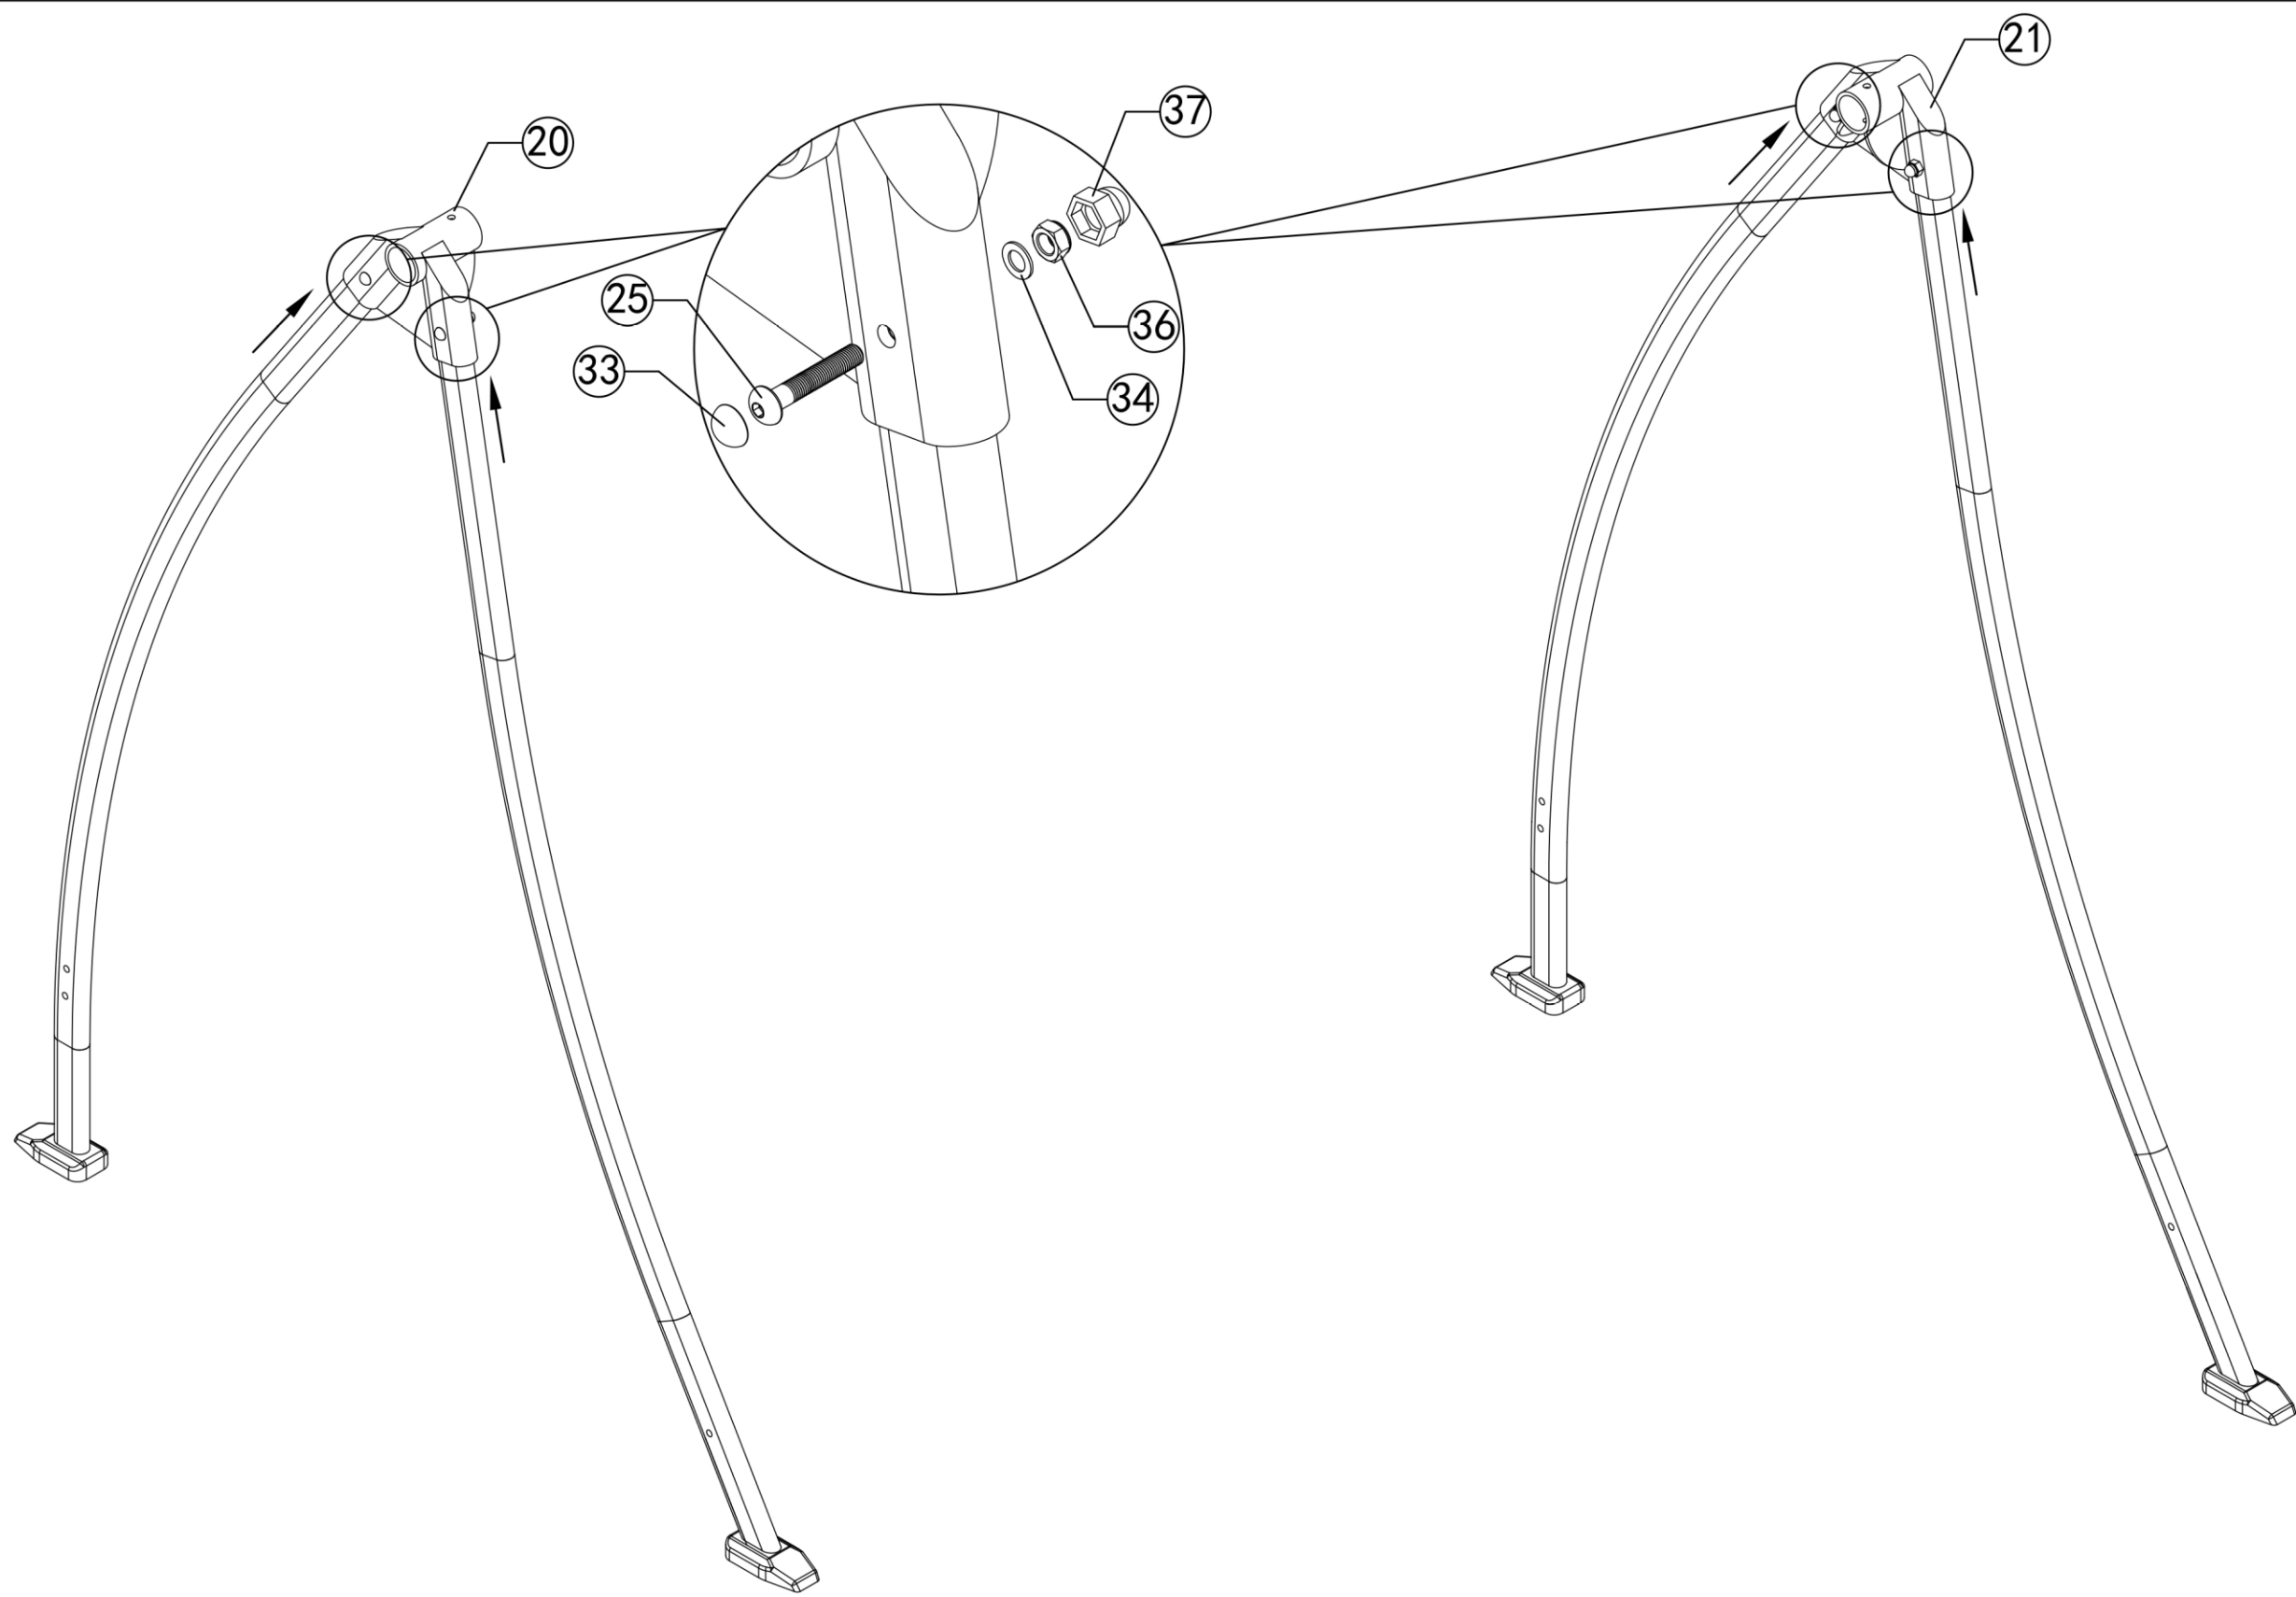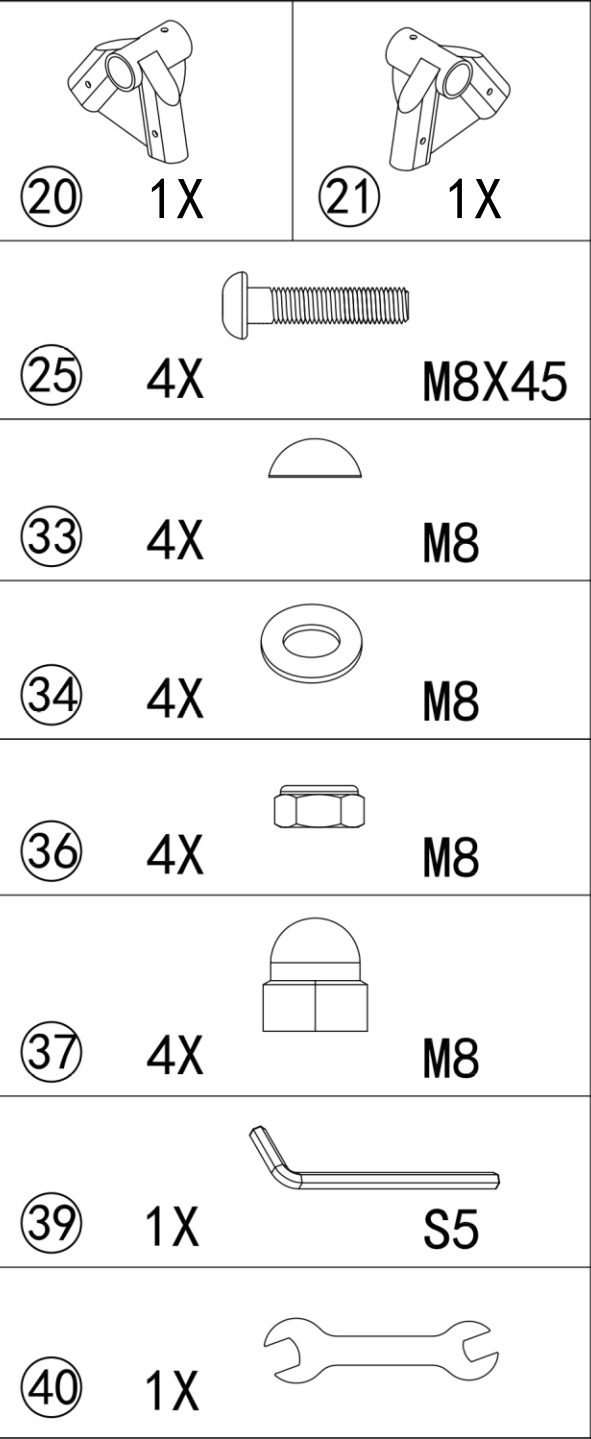
 ① 2X	 ② 2X	 ③ 2X	 ④ 1X	 ⑤ 1X
 ⑥ 2X		 ⑦ 1X		 ⑧ 2X
 ⑨ 2X	 ⑩ 1X	 ⑪ 1X	 ⑫ 2X	
 short swing booms ⑬ 2X	 long swing booms ⑭ 2X		 ⑮ 2X	
 ⑯ 8X	 ⑰ 2X	 ⑱ 2X	 ⑲ 2X	 ⑳ 1X
	 ㉑ 1X	 M6X25 ㉒ 10X		 M8X30 ㉓ 4X
 M8X35 ㉔ 8X	 M8X45 ㉕ 4X	 M8X55 ㉖ 2X	 M8X60 ㉗ 4X	 M8X65 ㉘ 4X
			 M6 ㉙ 10X	 M6 ㉚ 4X
				 M6 ㉛ 4X
 M6 ㉜ 4X	 M8 ㉝ 26X	 M8 ㉞ 16X	 M8 ㉟ 6X	 M8 ㊱ 16X
			 M8 ㊲ 16X	 S4 ㊳ 1X
				 S5 ㊴ 1X
 ④① 1X	 Middle roof support tube ④① 1X			











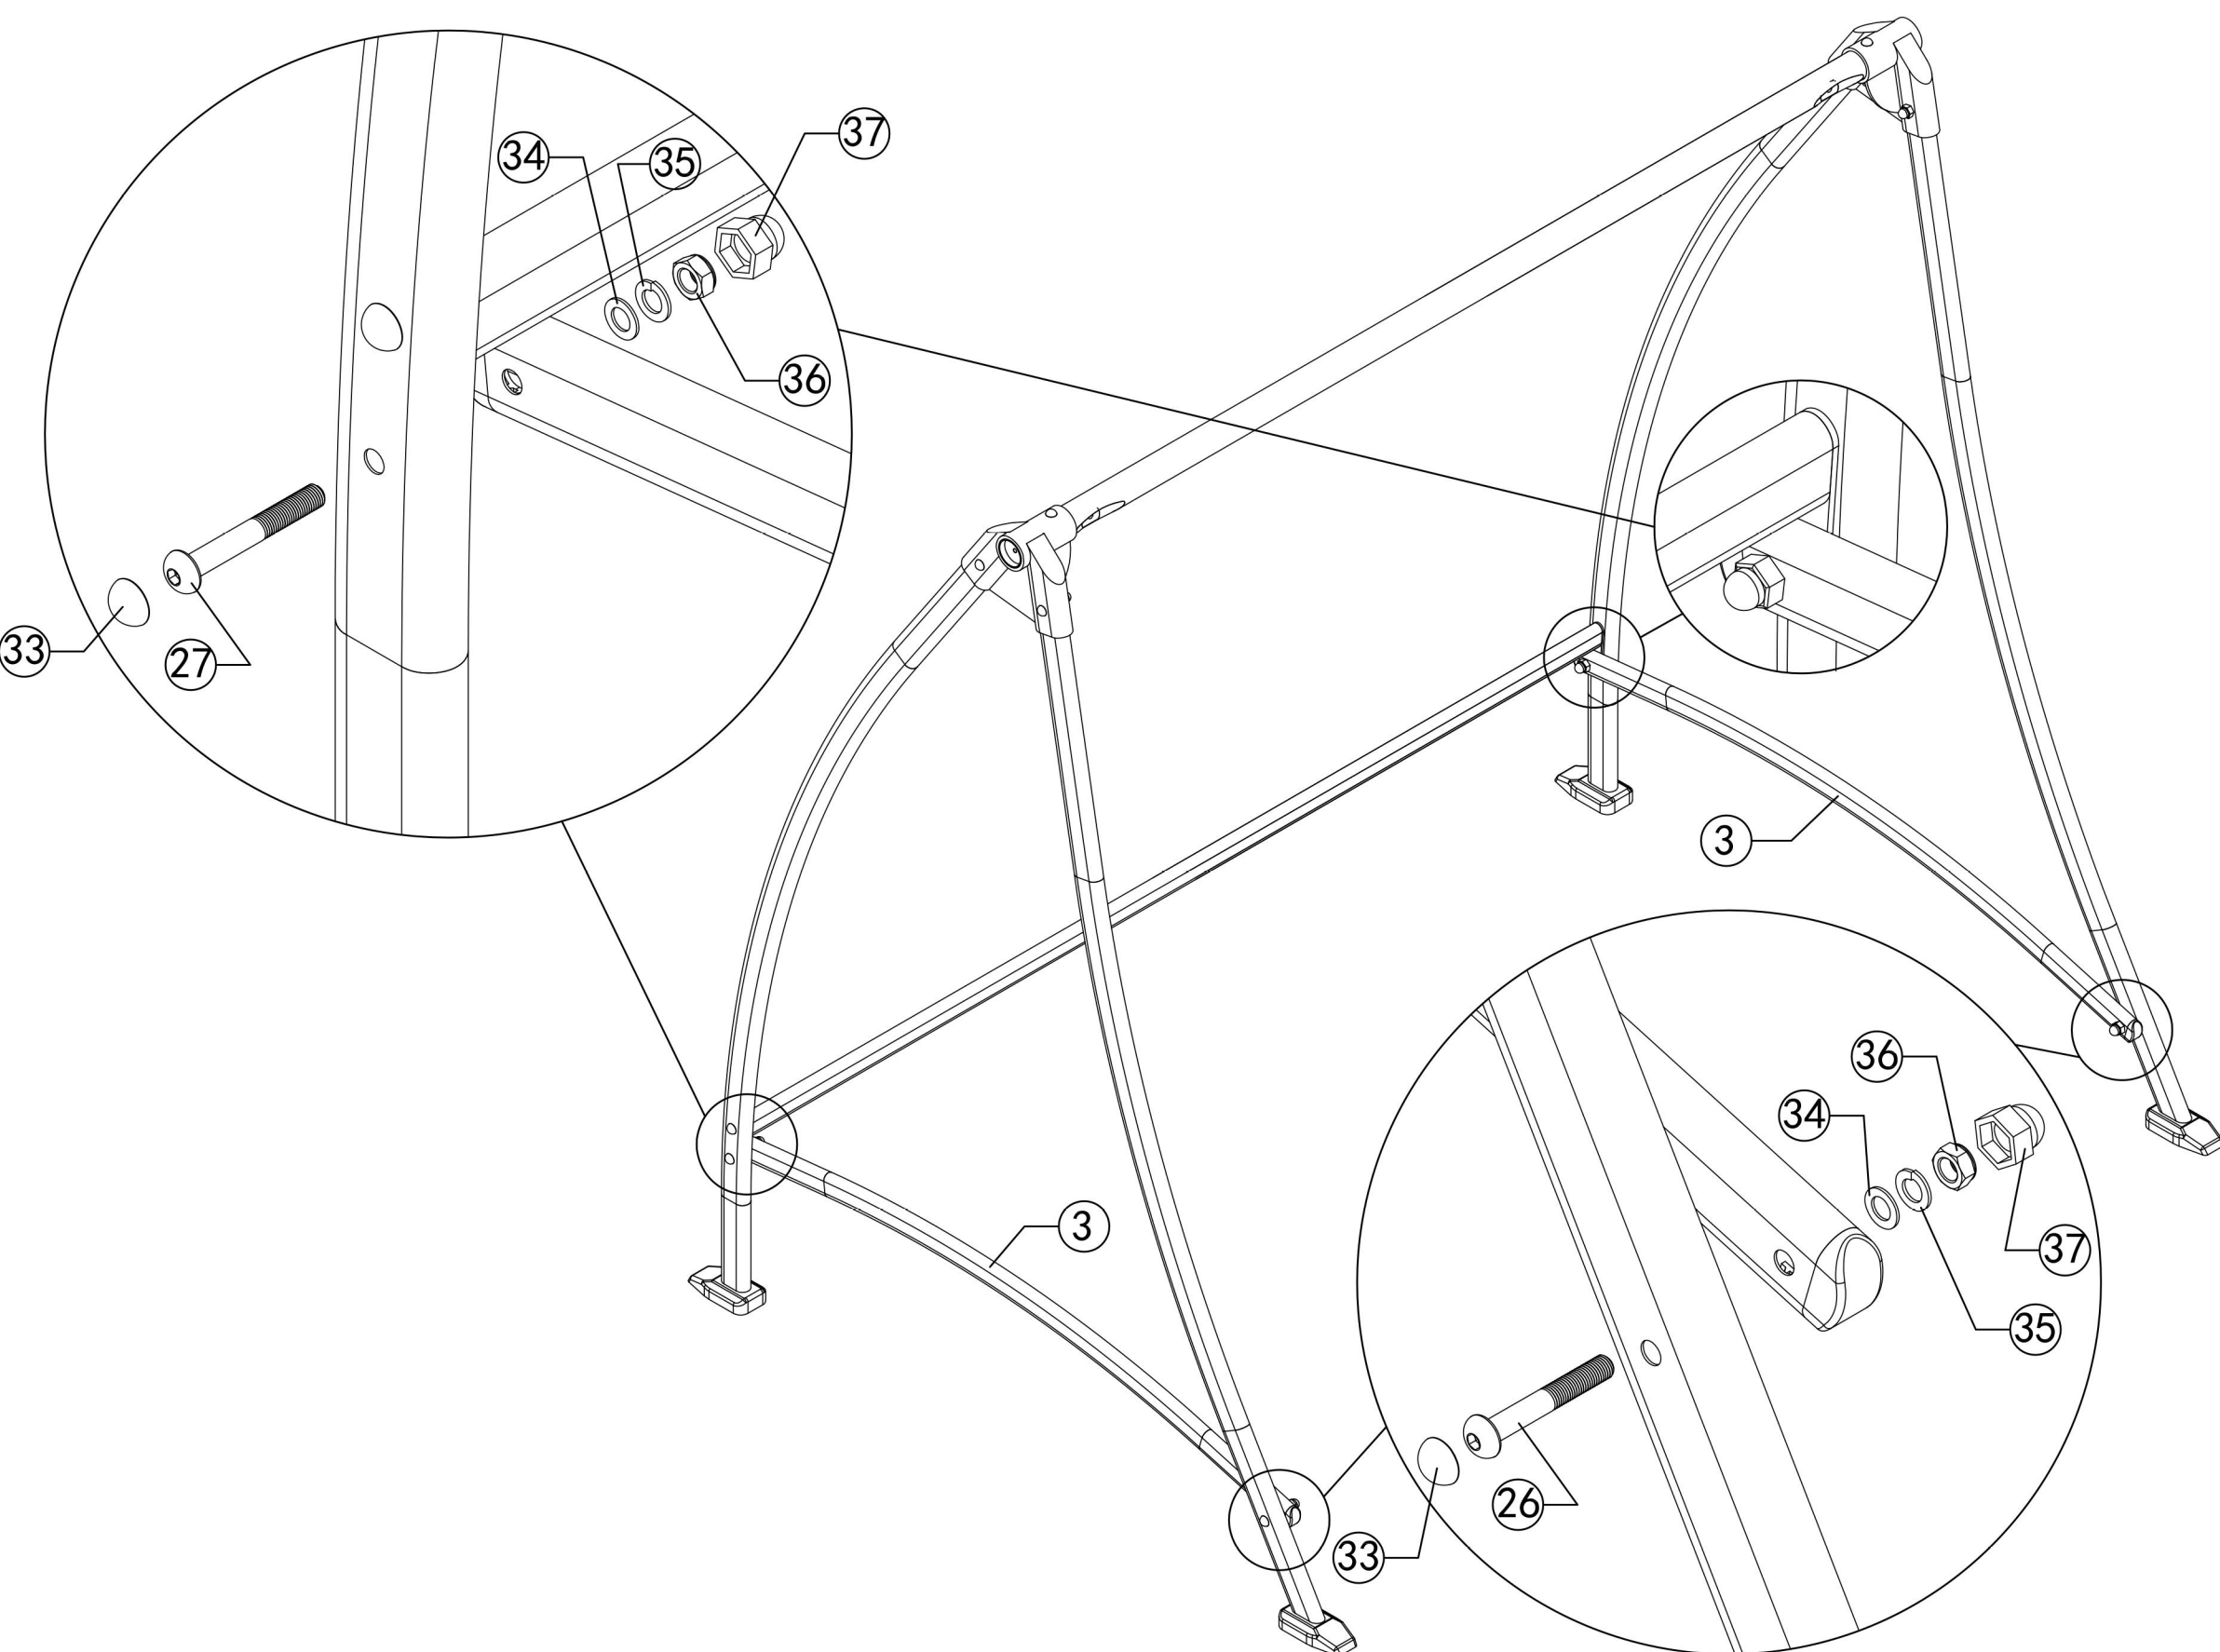
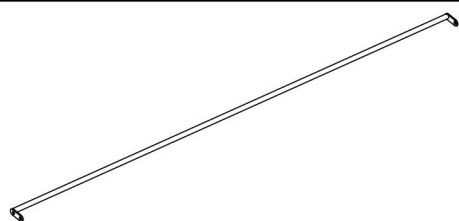
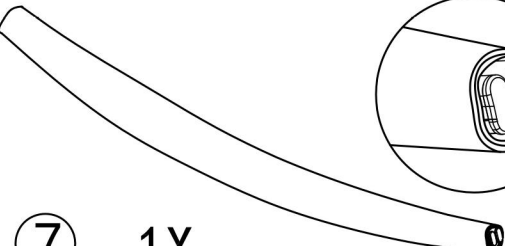
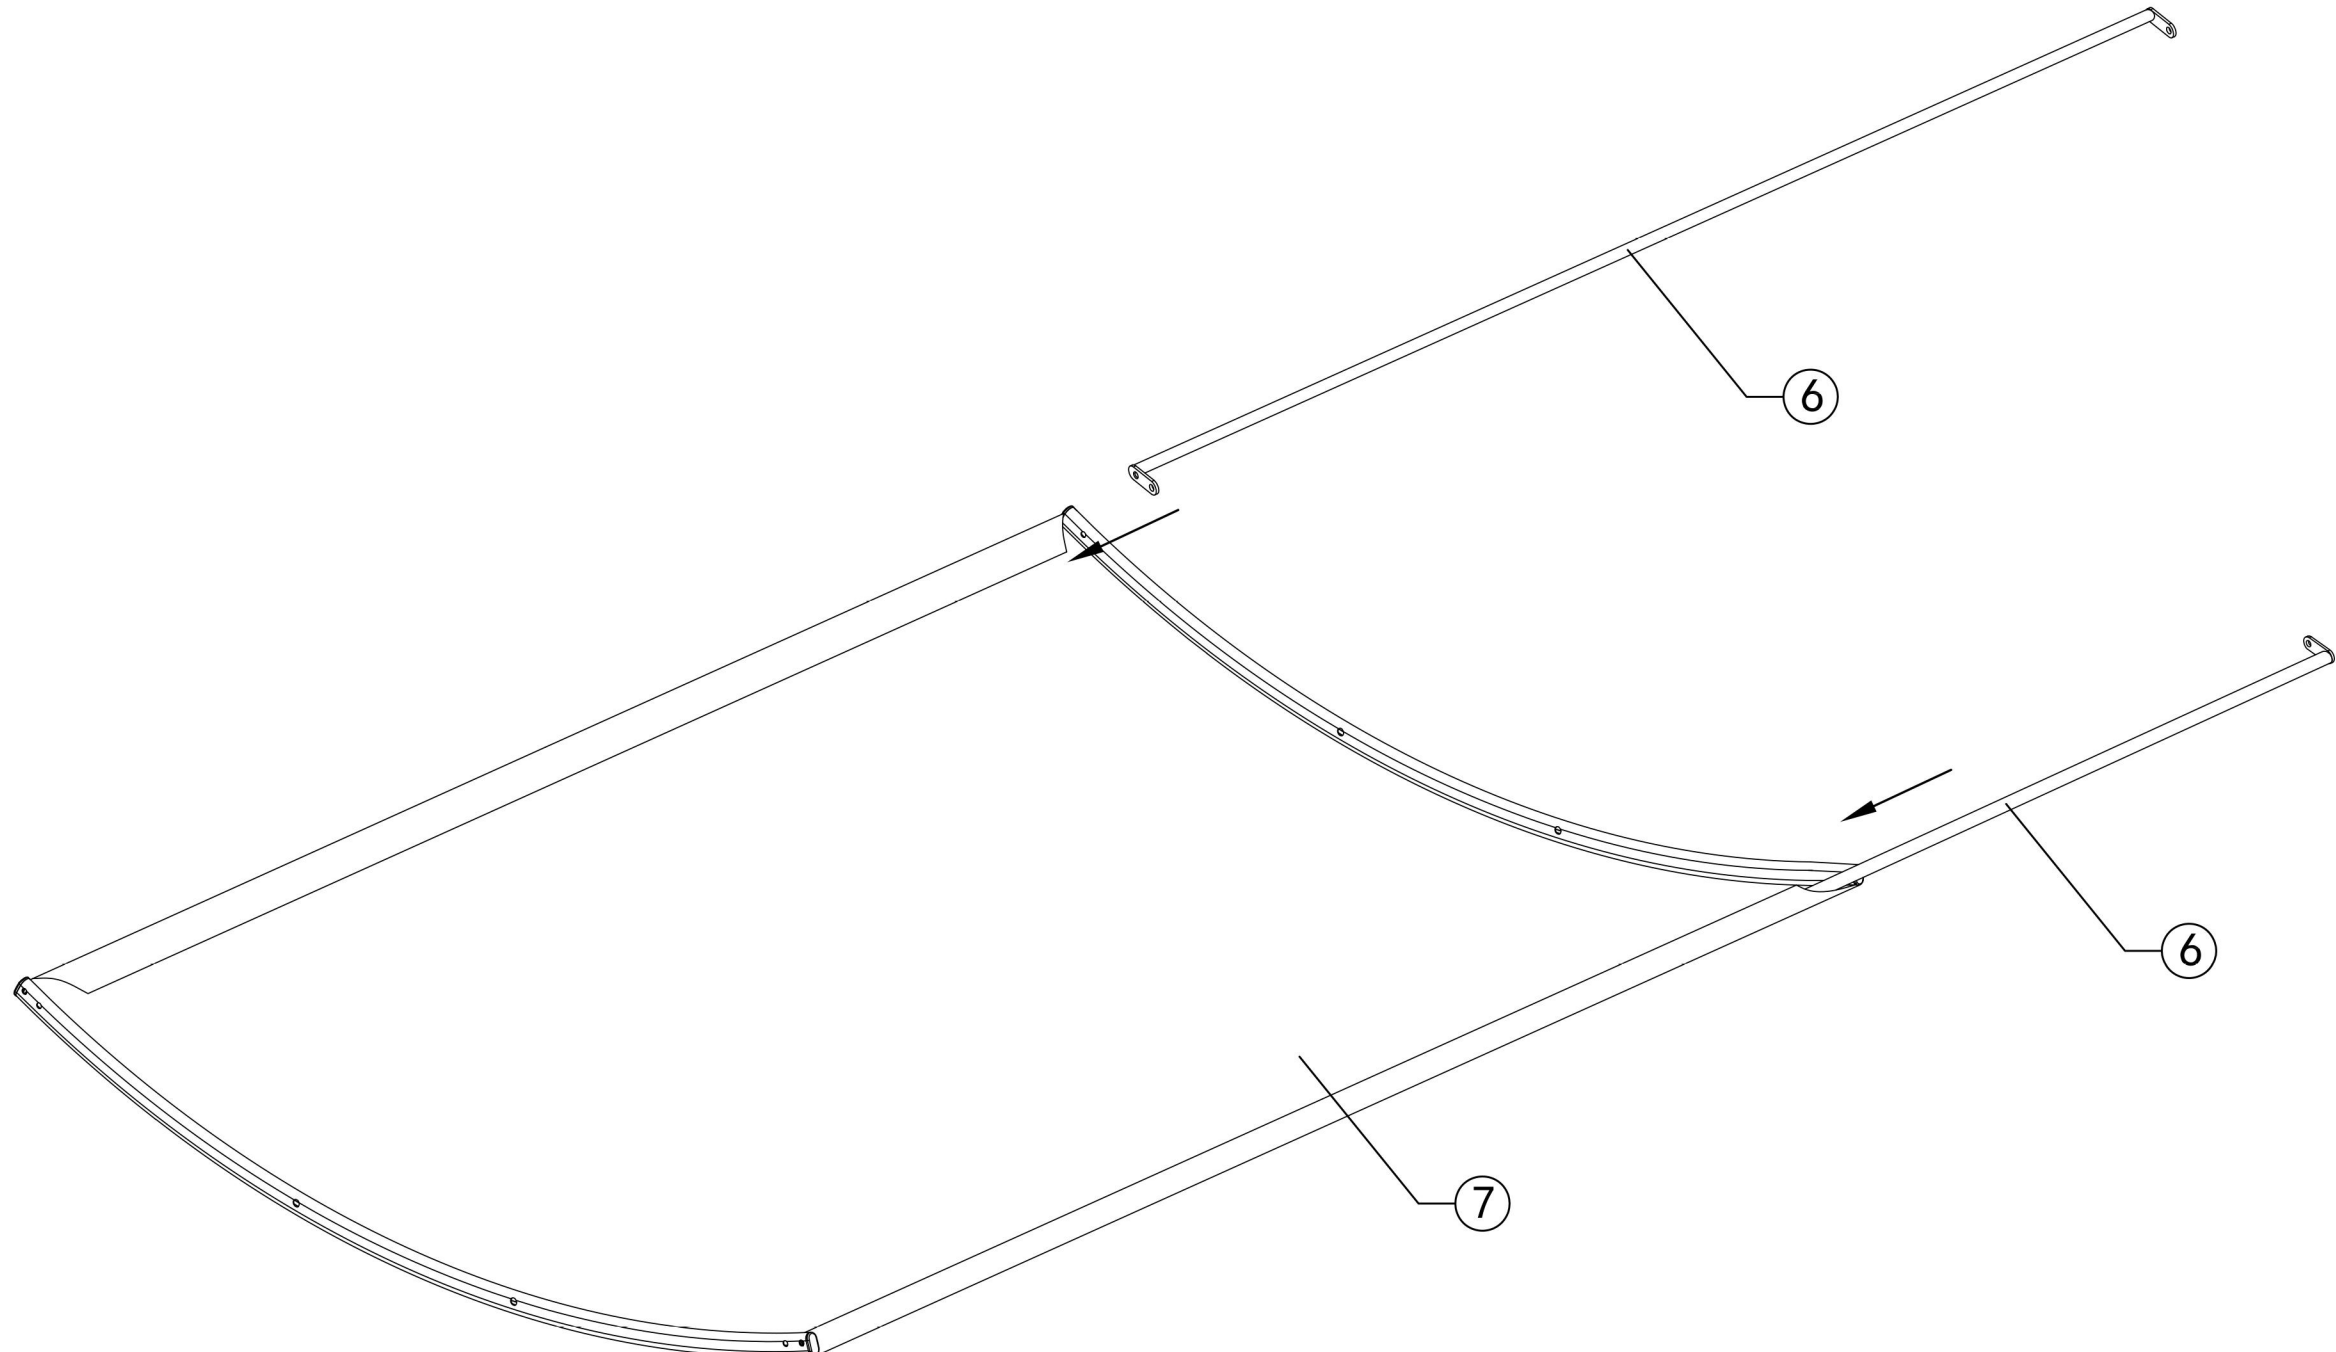






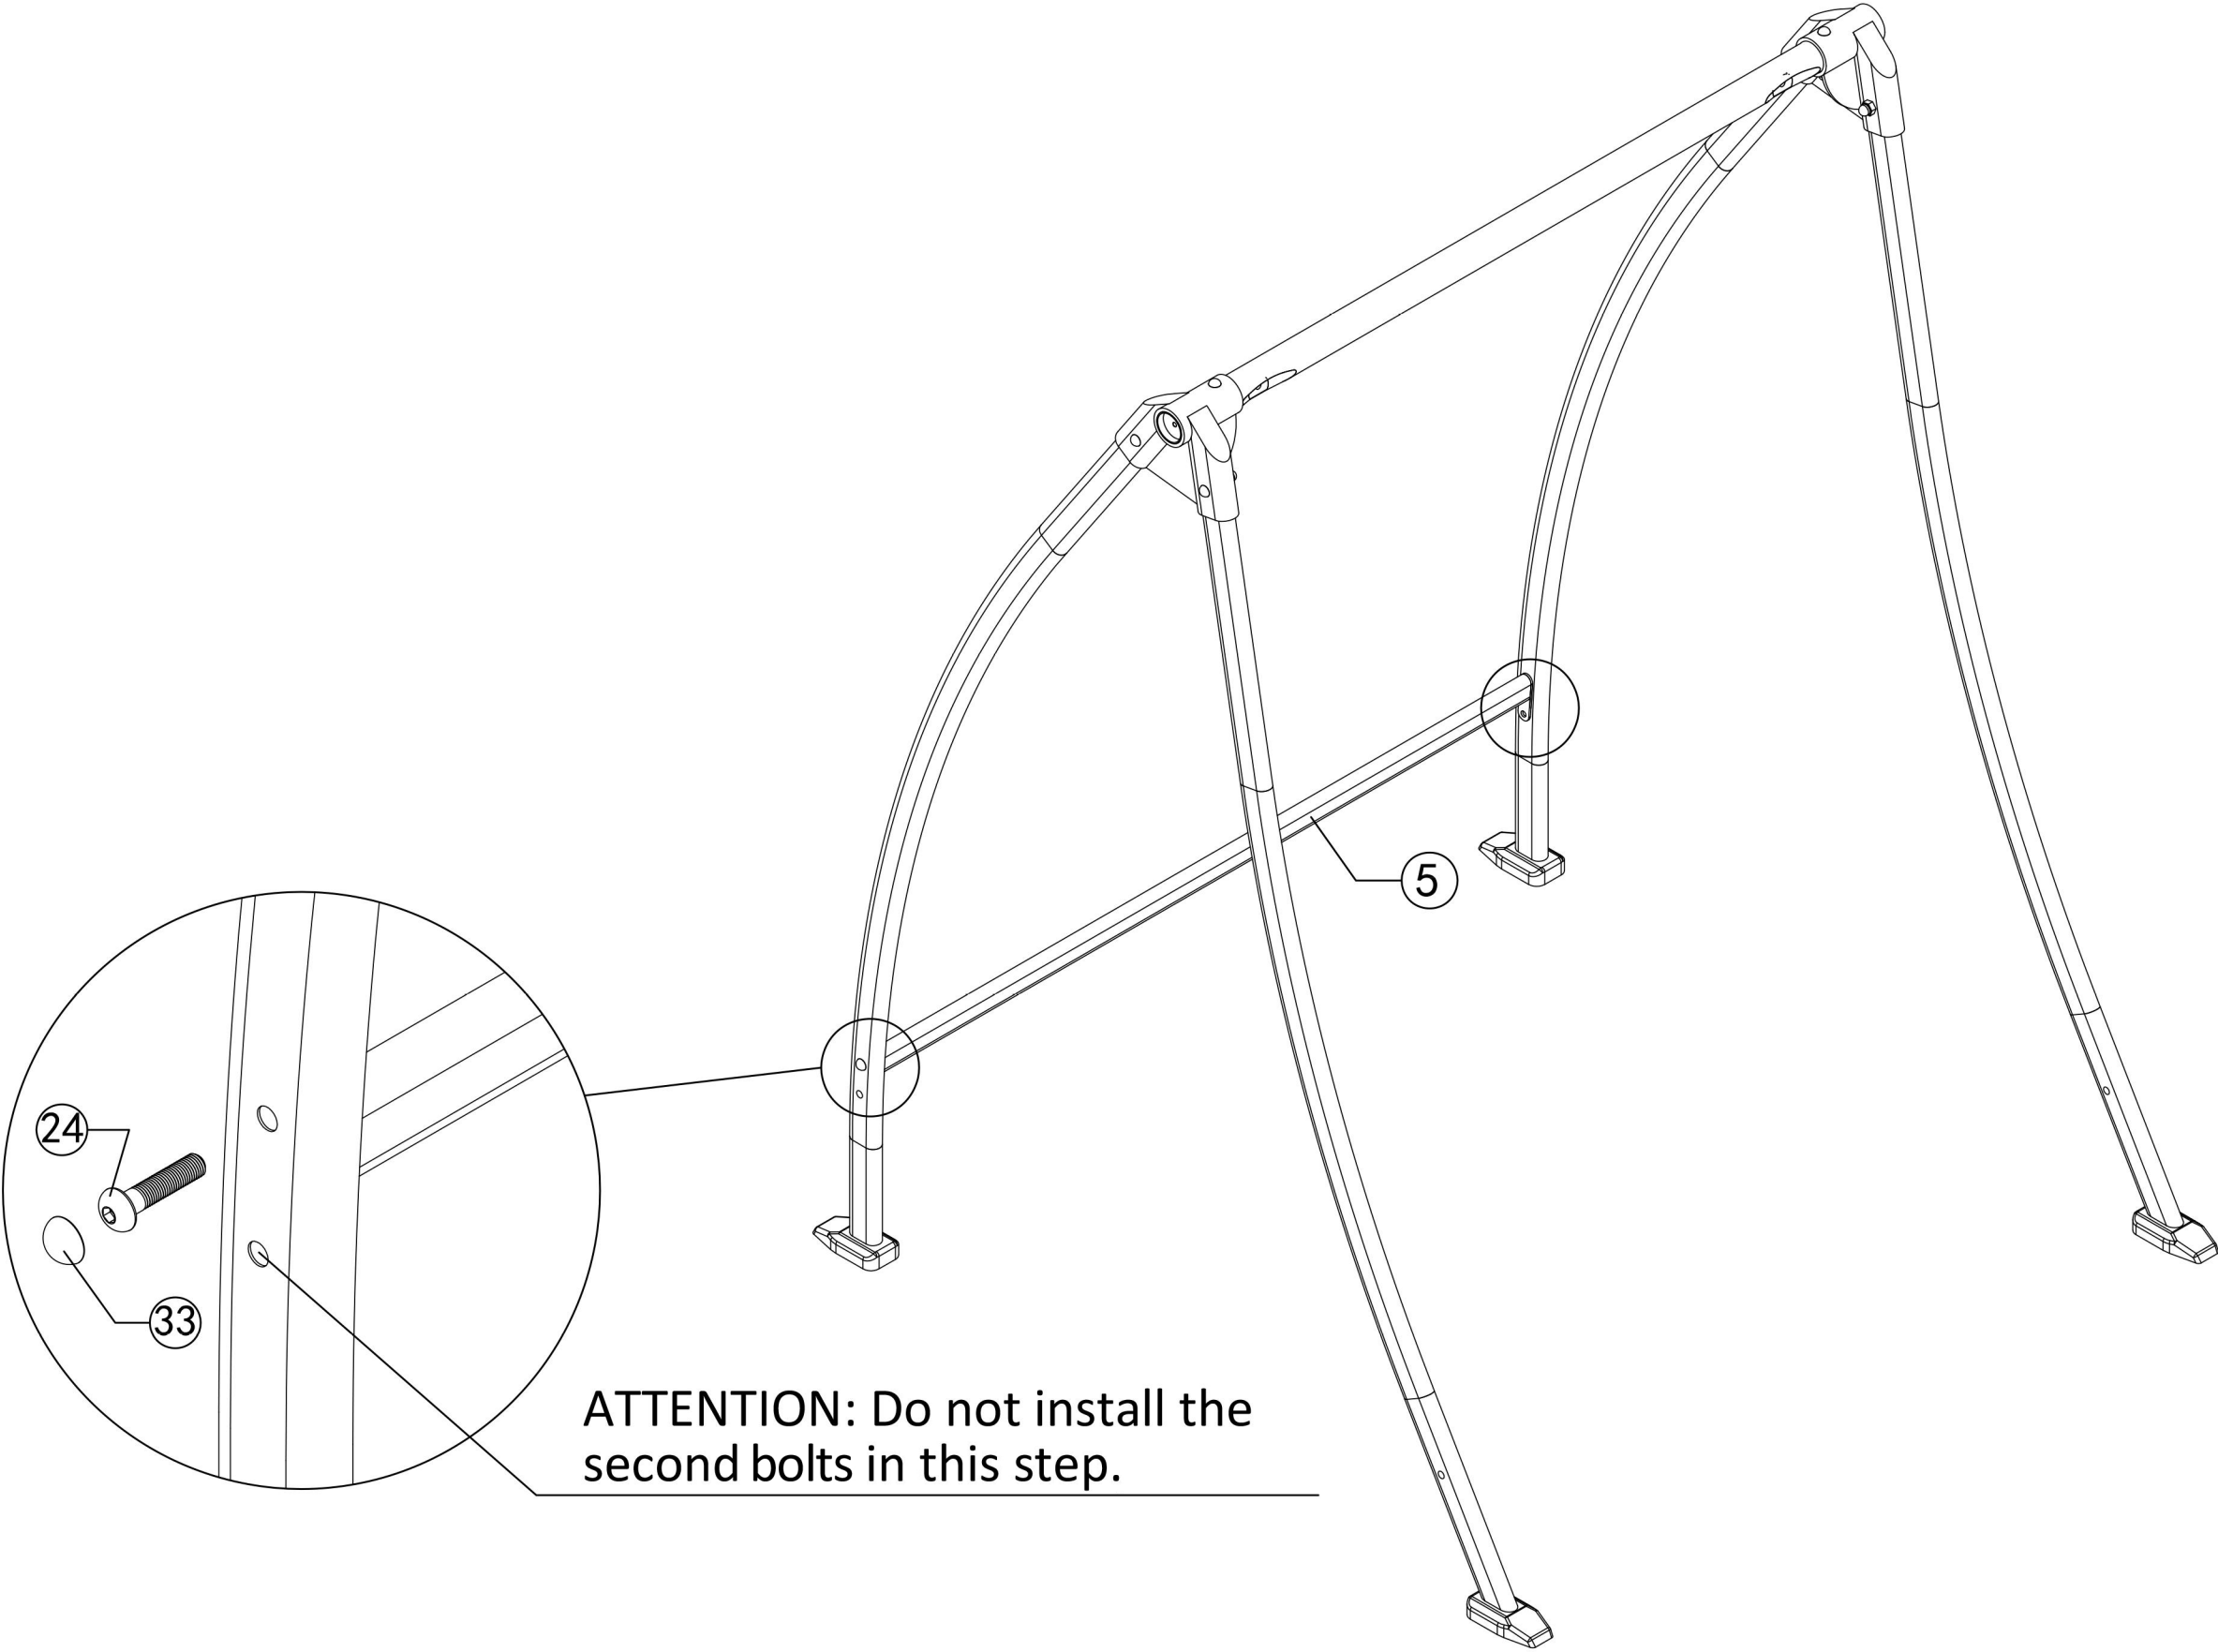


Step 1: Please find the required parts according to the instructions in the left frame, prepare a wooden hammer, and knock the plastic foot pad (Part 18) into the leg tube(Part 1) , knock Part 19 into the Part 2 as shown.




Step 2: Put the front and rear leg tubes (Part 1 is front leg tube, Part 2 is rear leg tube) into the fixator (Part 20 and Part 21) as shown, and secure with bolts and nuts as required (After all the bolts are assembled in place, tighten them together, finally cover the caps).





<div data-bbox="21 112 378 231">  <div> <div>④</div> <div>1X</div> </div> </div> <div data-bbox="21 261 378 379">  <div> <div>②⑧</div> <div>2X</div> <div>M8X65</div> </div> </div> <div data-bbox="21 409 378 528">  <div> <div>③③</div> <div>2X</div> <div>M8</div> </div> </div> <div data-bbox="21 557 378 676">  <div> <div>③④</div> <div>2X</div> <div>M8</div> </div> </div> <div data-bbox="21 706 378 825">  <div> <div>③⑥</div> <div>2X</div> <div>M8</div> </div> </div> <div data-bbox="21 854 378 973">  <div> <div>③⑦</div> <div>2X</div> <div>M8</div> </div> </div> <div data-bbox="21 1003 378 1059">  <div> <div>③⑨</div> <div>1X</div> <div>S5</div> </div> </div> <div data-bbox="21 1089 378 1145">  <div> <div>④①</div> <div>1X</div> </div> </div>	<div data-bbox="468 112 1955 1302">  </div>
<div data-bbox="415 1329 2041 1418"> <p>Step 3: Put the beam( Part 4) assembly into the fixator according as shown, and secure with bolts and nuts as required (After all the bolts are assembled in place, tighten them together, finally cover the caps).</p> </div>	
<div data-bbox="21 1478 378 1596">  <div> <div>⑤</div> <div>1X</div> </div> </div> <div data-bbox="21 1626 378 1745">  <div> <div>②④</div> <div>2X</div> <div>M8X35</div> </div> </div> <div data-bbox="21 1774 378 1893">  <div> <div>③③</div> <div>2X</div> <div>M8</div> </div> </div> <div data-bbox="21 1923 378 1976">  <div> <div>③⑨</div> <div>1X</div> <div>S5</div> </div> </div>	<div data-bbox="422 1478 1997 2659">  <div data-bbox="835 2466 1312 2546"> <p>ATTENTION: Do not install the second bolts in this step.</p> </div> </div>
<div data-bbox="415 2694 2026 2783"> <p>Step 4: Connect the bar (part 5) to the rear leg tubes (Align the first holes and fix the bolts ) as shown. After all the bolts are assembled in place, tighten them together, finally cover the caps.</p> </div>	
<div data-bbox="184 2864 235 2944"> <p>3</p> </div>	


<div> <div>  <div> <div>③</div> <div>2X</div> </div> </div> <div>  <div> <div>②6</div> <div>2X</div> <div>M8X55</div> </div> </div> <div>  <div> <div>②7</div> <div>2X</div> <div>M8X60</div> </div> </div> <div>  <div> <div>③3</div> <div>4X</div> <div>M8</div> </div> </div> <div>  <div> <div>③4</div> <div>4X</div> <div>M8</div> </div> </div> <div>  <div> <div>③5</div> <div>4X</div> <div>M8</div> </div> </div> <div>  <div> <div>③6</div> <div>4X</div> <div>M8</div> </div> </div> <div>  <div> <div>③7</div> <div>4X</div> <div>M8</div> </div> </div> <div>  <div> <div>③9</div> <div>1X</div> <div>S5</div> </div> </div> <div>  <div> <div>④0</div> <div>1X</div> </div> </div> </div>	<div>  </div> <div> <p>Step 5: Assemble the Part 3 to the front and rear leg tubes (Align the second holes and secure the bolts ). Secure with bolts and nuts as required (After all the bolts are assembled in place, tighten them together, finally cover the caps).</p> </div>
<div> <div>  <div> <div>⑥</div> <div>2X</div> </div> </div> <div>  <div> <div>⑦</div> <div>1X</div> </div> </div> </div>	<div>  </div> <div> <p>Step 6: Gently Insert the roof tubes (Part 6) into the canopy (Part 7).</p> </div>
<div> <div>4</div> </div>	

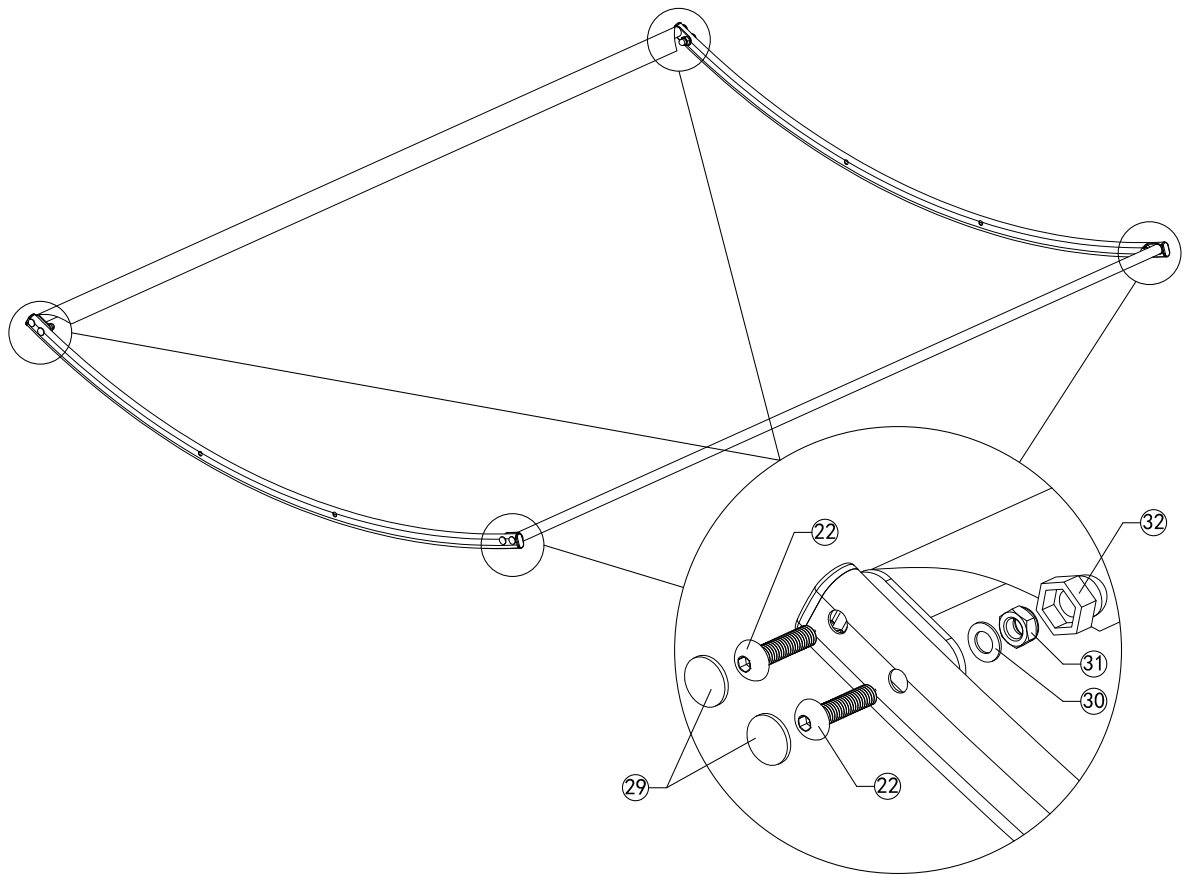		
②②	8X	M6X25
		
②⑨	8X	M6
		
③①	4X	M6
		
③①	4X	M6
		
③②	4X	M6
		
③⑧	1X	S4
		
④①	1X	

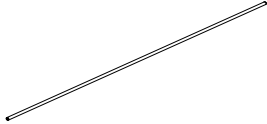

Step 7: Secure the four corners of the canopy with bolts and nuts as required  
(After all the bolts are assembled in place, tighten them together, finally cover the caps).


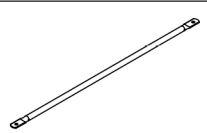
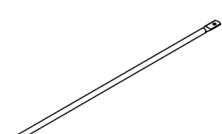







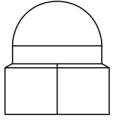


		
④①	1X	
		
②②	2X	M6X25
		
②⑨	2X	M6
		
③⑧	1X	S4

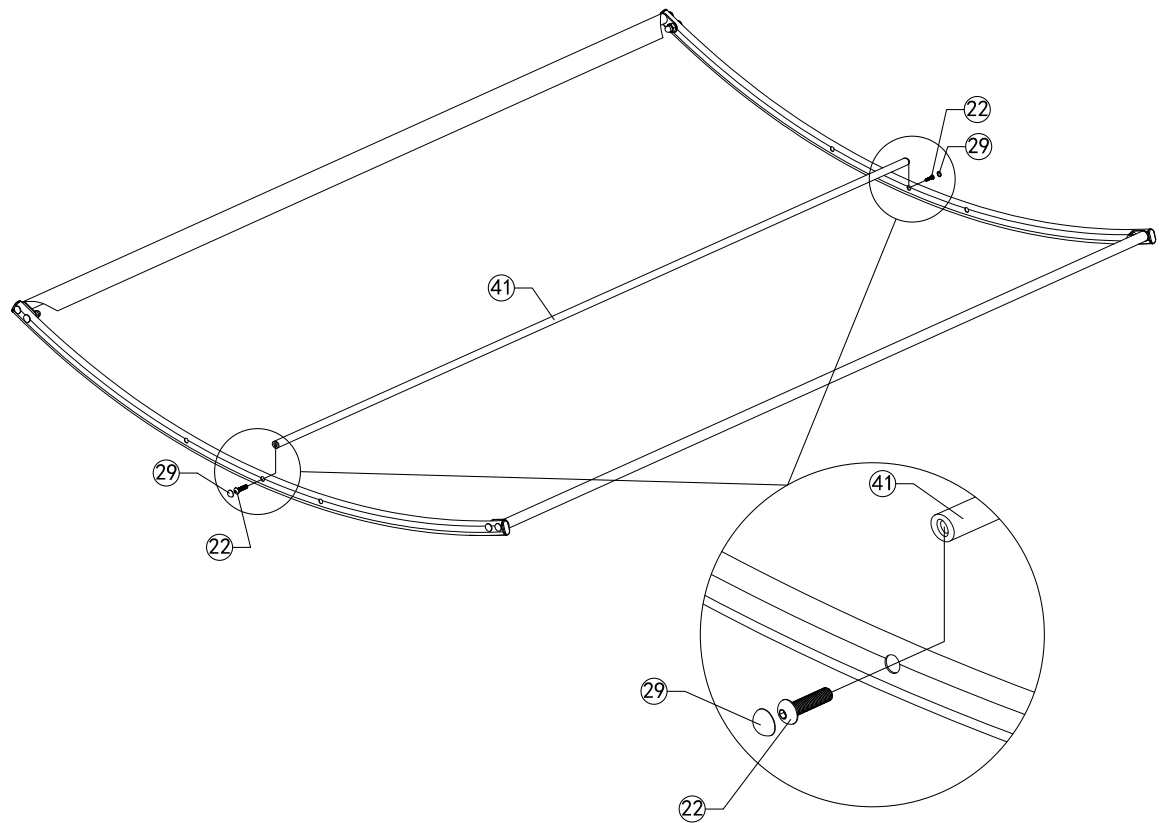


Use 2 bolts #22 to secure the middle roof support tube #41 to form the canopy frame.



<div data-bbox="119 78 268 212" data-label="Image"> </div> <div data-bbox="15 185 108 224" data-label="Text"> <p>⑧ 2X</p> </div> <div data-bbox="119 235 199 280" data-label="Image"> </div> <div data-bbox="15 280 295 318" data-label="Text"> <p>②③ 4X M8X30</p> </div> <div data-bbox="135 347 199 376" data-label="Image"> </div> <div data-bbox="15 380 247 418" data-label="Text"> <p>③③ 4X M8</p> </div> <div data-bbox="135 448 199 492" data-label="Image"> </div> <div data-bbox="15 492 247 530" data-label="Text"> <p>③④ 4X M8</p> </div> <div data-bbox="135 548 199 593" data-label="Image"> </div> <div data-bbox="15 593 247 631" data-label="Text"> <p>③⑥ 4X M8</p> </div> <div data-bbox="135 638 199 705" data-label="Image"> </div> <div data-bbox="15 705 247 743" data-label="Text"> <p>③⑦ 4X M8</p> </div> <div data-bbox="103 750 247 795" data-label="Image"> </div> <div data-bbox="15 795 247 833" data-label="Text"> <p>③⑨ 1X S5</p> </div> <div data-bbox="119 862 247 907" data-label="Image"> </div> <div data-bbox="15 907 108 945" data-label="Text"> <p>④① 1X</p> </div>	<div data-bbox="395 443 1528 1579" data-label="Image"> </div>
	<p>Step 8: Install Part 8 to top canopy. Align the holes and secure with bolts and nuts as required as required(After all the bolts are assembled in place, tighten them together, finally cover the caps).</p>
<div data-bbox="92 2161 210 2228" data-label="Page-Footer"> <p>5-2</p> </div>	


<div data-bbox="21 118 315 281"> <div> <div>17</div> <div>2X</div> </div> </div>	<div data-bbox="441 103 1932 1291"> </div> <div data-bbox="420 1335 1911 1424"> <p>Step 9: Fix the canopy on the assembled leg frame with the adjusting knob (Part 17) as shown. Attention: According to your own requirements to adjust canopy roof, then tighten the knob.</p> </div>
<div data-bbox="21 1484 336 1587"> <div> <div>9</div> <div>2X</div> </div> </div> <div data-bbox="21 1602 336 1706"> <div> <div>10</div> <div>1X</div> </div> </div> <div data-bbox="21 1721 336 1825"> <div> <div>11</div> <div>1X</div> </div> </div> <div data-bbox="21 1840 336 1944"> <div> <div>33</div> <div>6X</div> <div>M8</div> </div> </div> <div data-bbox="21 1958 378 2062"> <div> <div>24</div> <div>6X</div> <div>M8X35</div> </div> </div> <div data-bbox="21 2077 336 2211"> <div> <div>39</div> <div>1X</div> <div>S5</div> </div> </div>	<div data-bbox="567 1484 1995 2582"> </div> <div data-bbox="588 2597 1050 2671"> <p><b>ATTENTION:</b> Do not install the bolts in this step.</p> </div> <div data-bbox="420 2686 2058 2819"> <p>Step 10: Use bolt #24 to secure fixing tube (Part 9) on back (part 10) and seat (Part 11)as shown, secure with bolts and nuts as required (After all the bolts are assembled in place, tighten them together, finally cover the caps).</p> </div>
<div data-bbox="168 2849 252 2953"> <div>6</div> </div>	

12	2X	
13	2X	
14	2X	
16	4X	
27	2X	 M8X60
28	2X	 M8x65
33	4X	 M8
34	2X	 M8
35	2X	 M8
36	2X	 M8
37	2X	 M8
39	1X	 S5
40	1X	

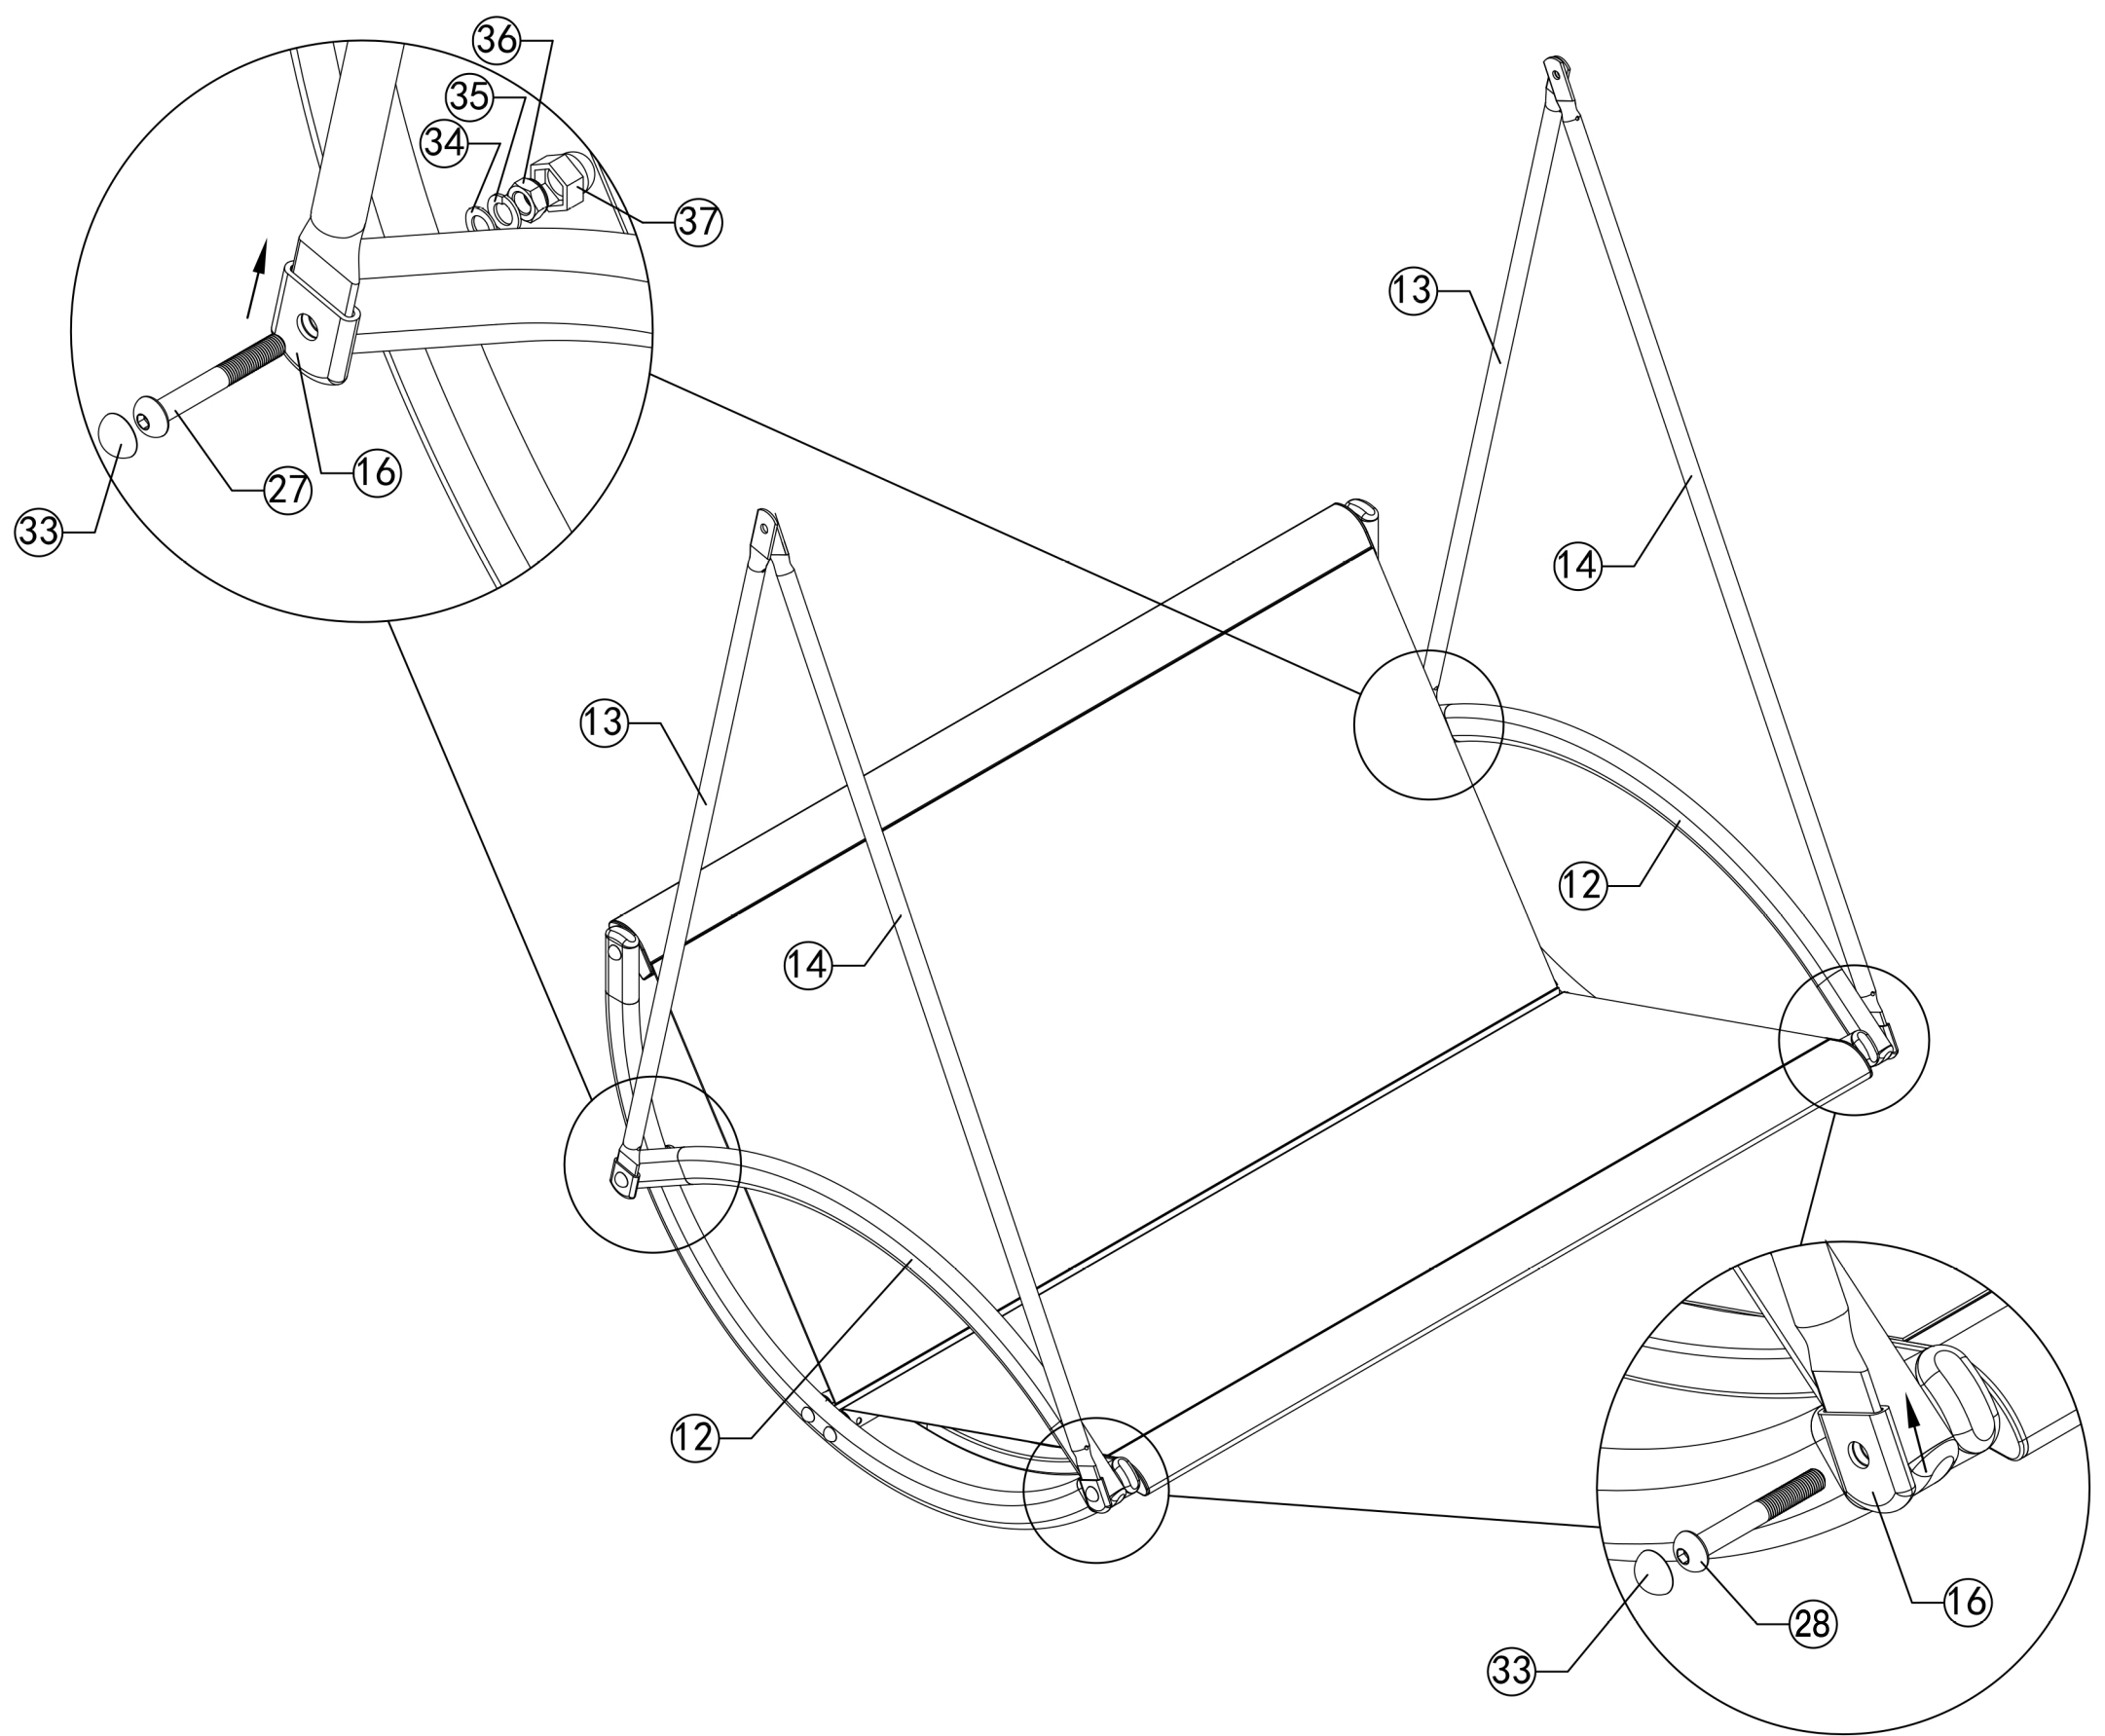


Step 11: Install swing booms and armrests. First fit part 16 on short swing booms (Part 13) and long swing booms (Part 14). Then align the holes and secure with bolts and nuts as required (After all the bolts are assembled in place, tighten them together, finally cover the caps).

16	4X	
15	2X	

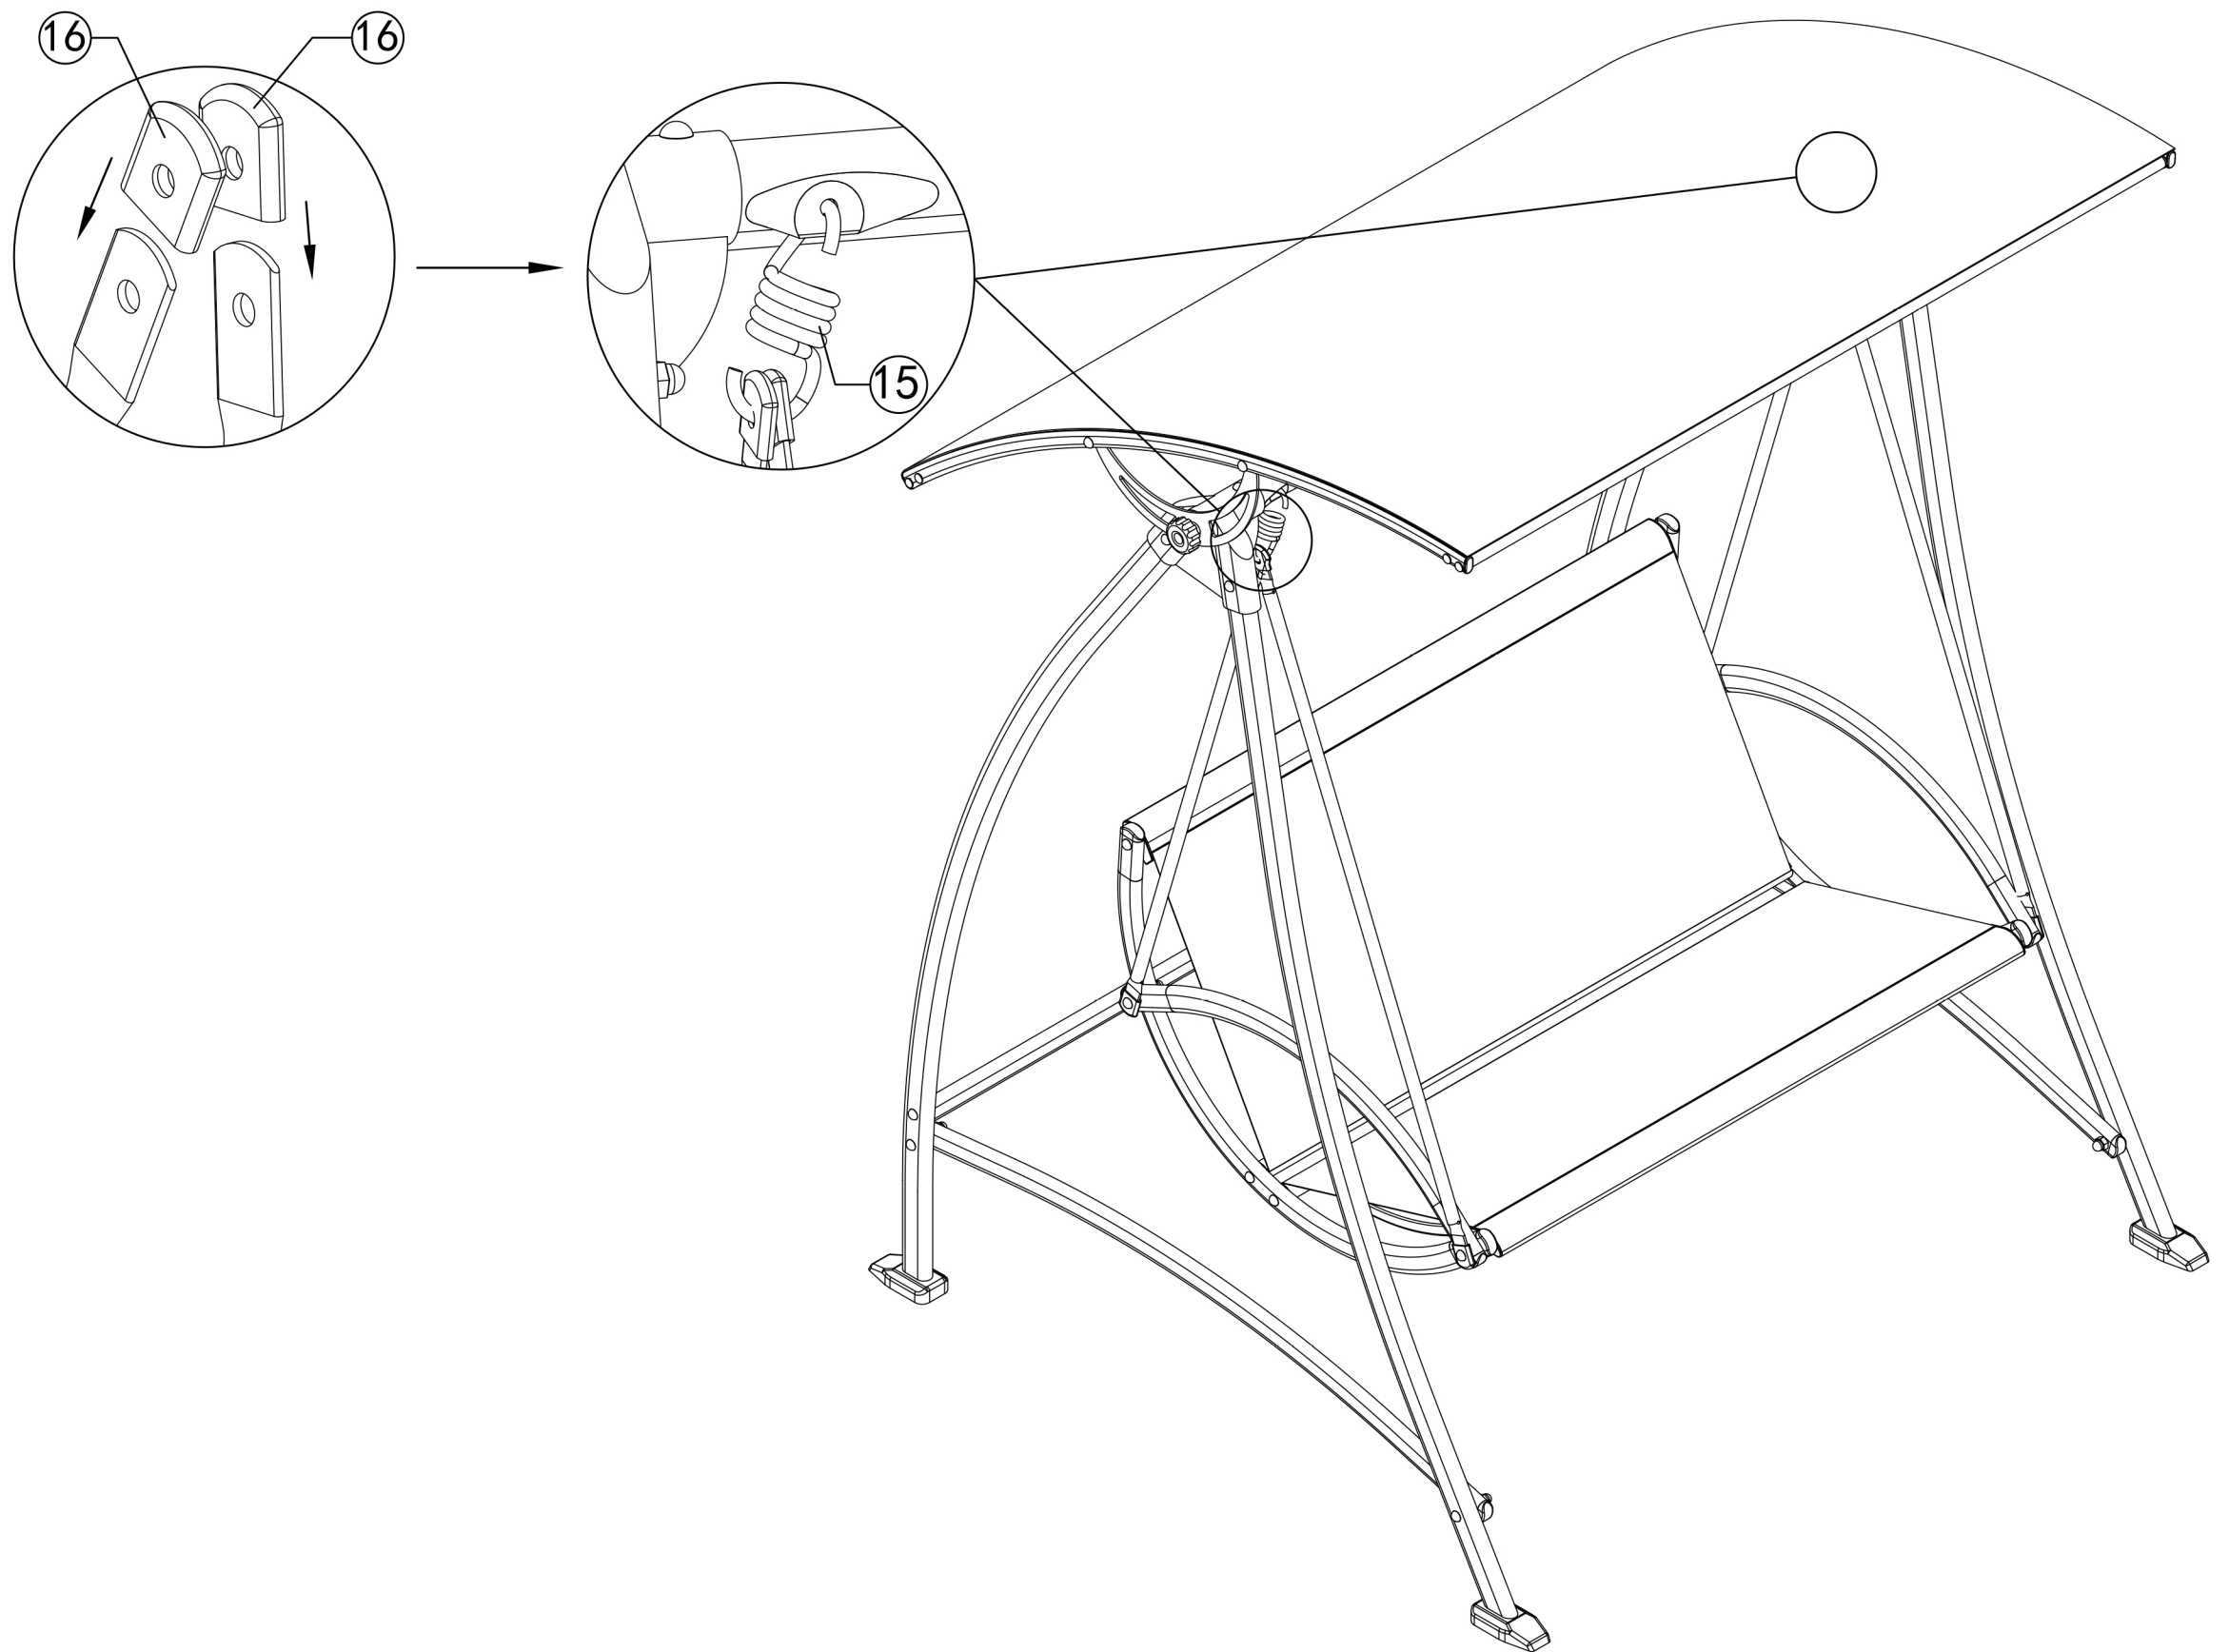

Step 12: Insert Part 16 into the swing booms as shown, and hang it on the swing beam with hanging spring (Part 15).

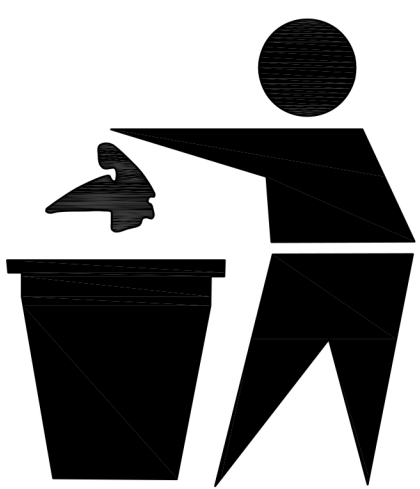

# Thanks for your purchase.

At domi outdoor living, we believe in our products.

That's why we provide a 12-month warranty and

friendly, easy-to-reach after-sales service. So if you

have any questions about our product and assembly-

,please feel free to contact us. We will be here for you.

**Support:**



**After-sales contact email:**

[service@domioutdoorliving.com](mailto:service@domioutdoorliving.com)

Please tell us your order ID when contact.

Attach photos of damaged part for instant reply.