


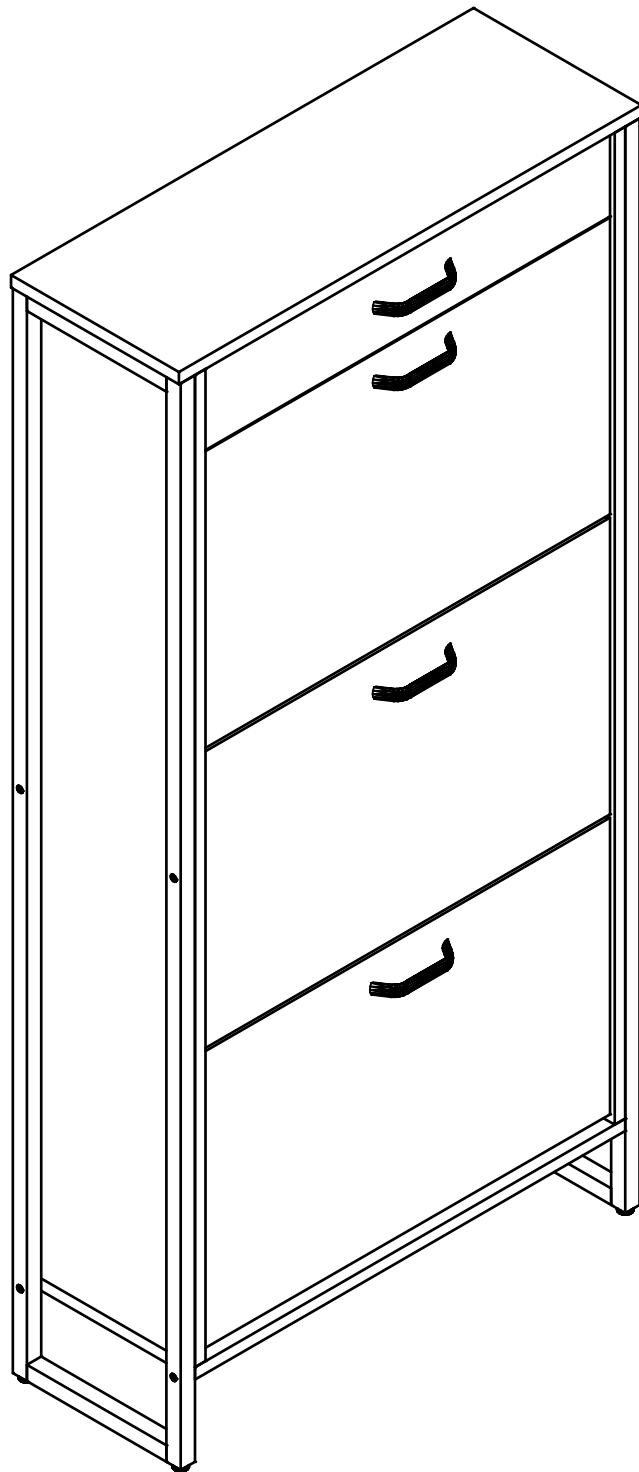
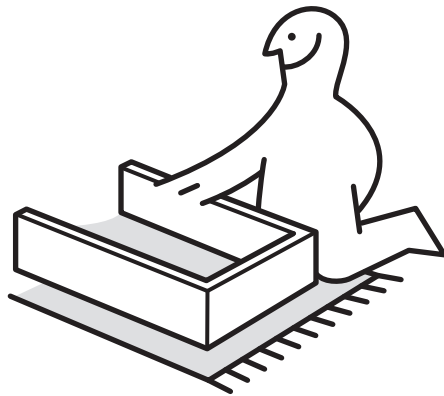


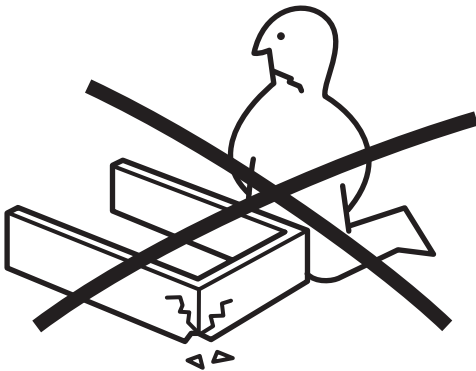

Thanks for purchasing one of our products,
please carefully read the assembly instructions
before installation(Attention:Do not tighten
the screws before all screws are in place).

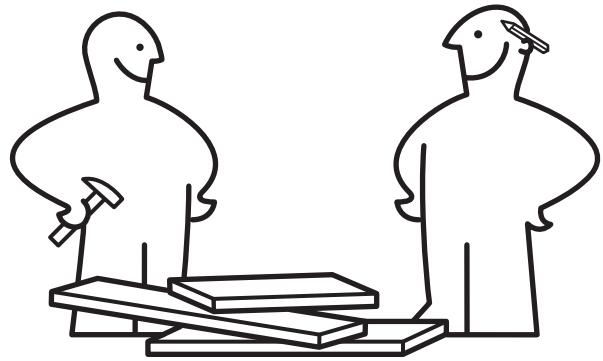


(Tools not provided)
Flat Blade Screwdriver
Phillips Head Screwdriver
Wooden Hammer









To Assemble the Unit
Wooden Hammer

PAGE1
Exploded View

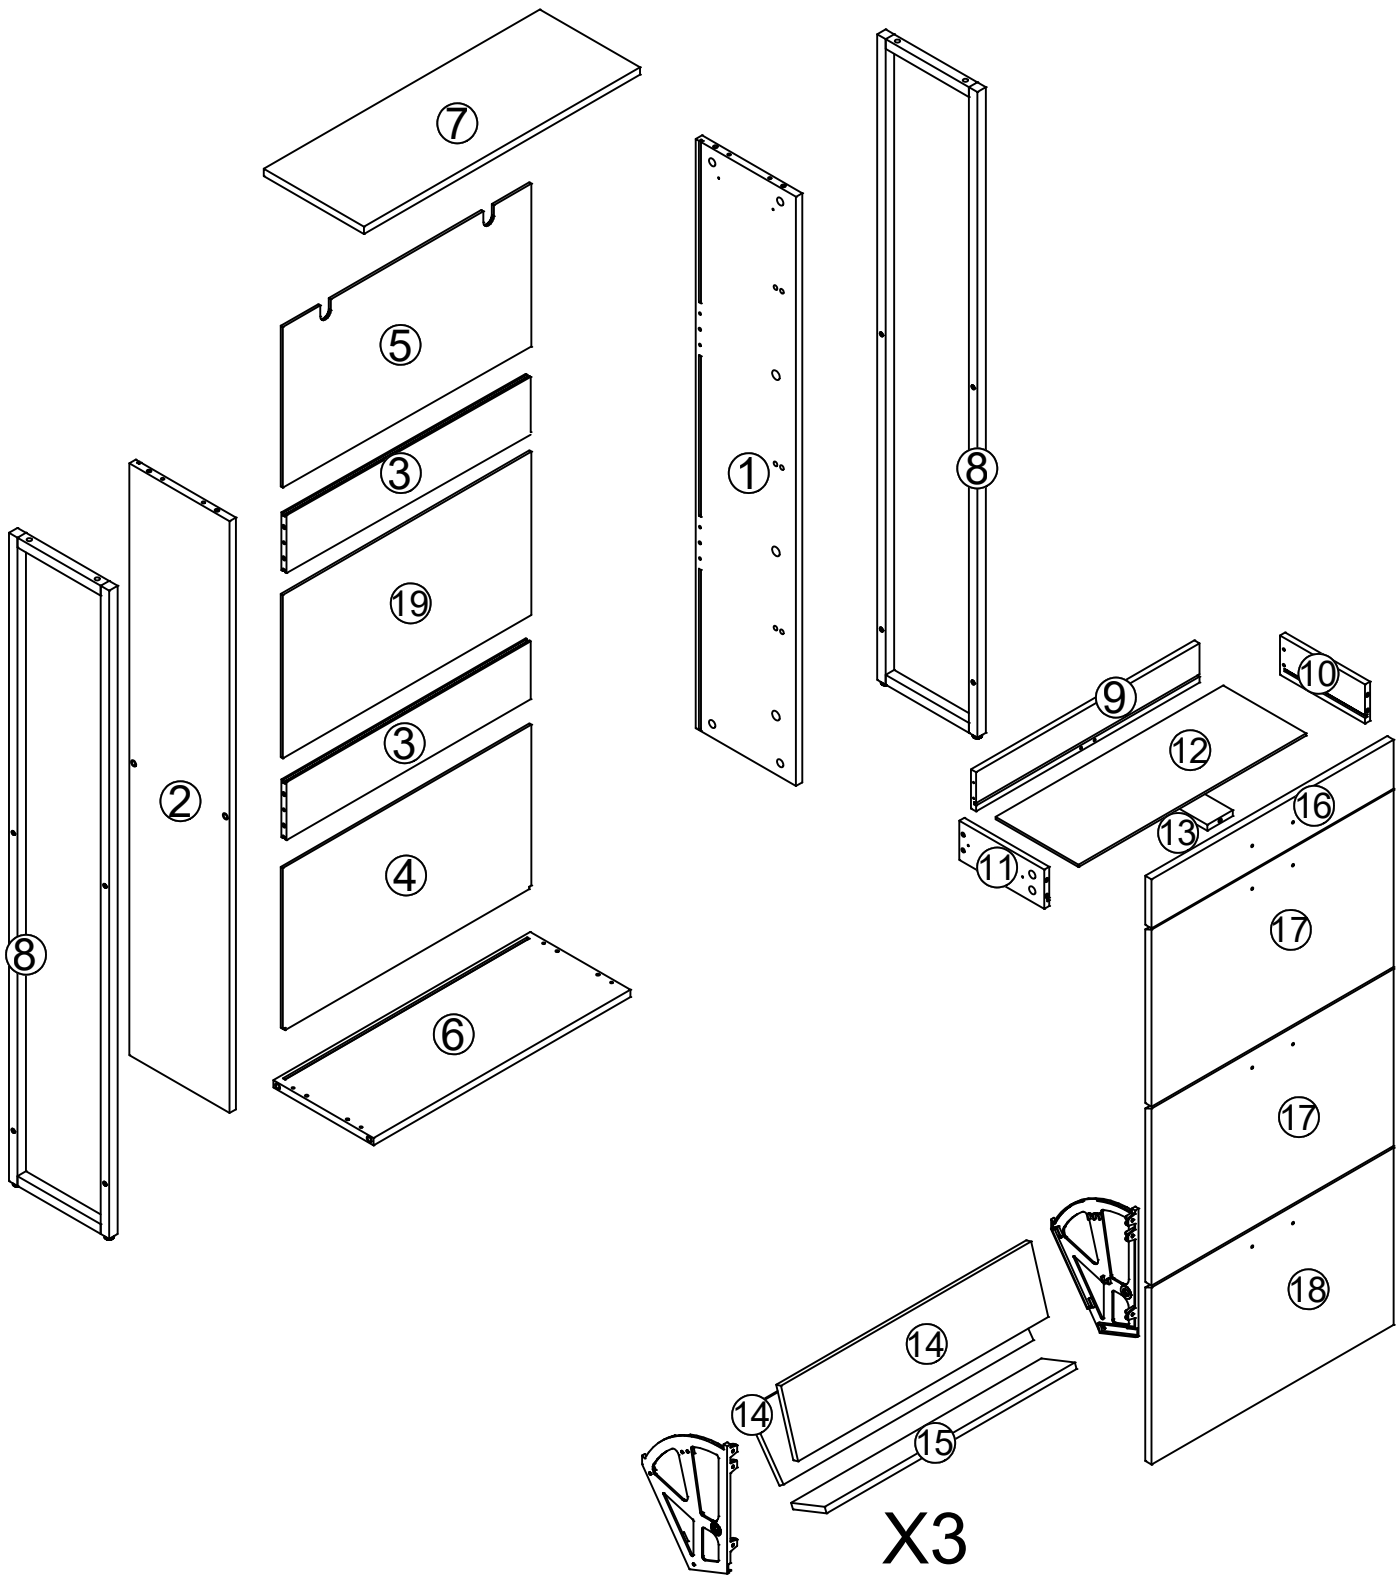

PAGE2


will require these parts

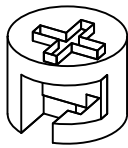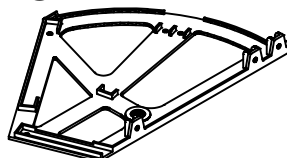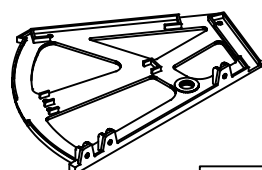A  21+1PCS	B  21+1PCS	C  M6X30MM 12+2PCS	D  M3.5X16M 18+2PCS
E  4PCS	F  8+1PCS	G  3PCS	H  3PCS
I  M6X30M 12+1PCS	J  M4X16M 6+1PCS	K  6PCS	L  6PCS
M  6PCS	N  M3X10M 18+2PCS	O  M3.5X30M 6+1PCS	P  2PCS
Q  M3.5X12M 8+2PCS	R  4PCS	S  2PCS	T  M3.5X14M 2PCS
U  2PCS	V  M3.5X25M 2PCS		


PAEG3

will require these parts

STEP1

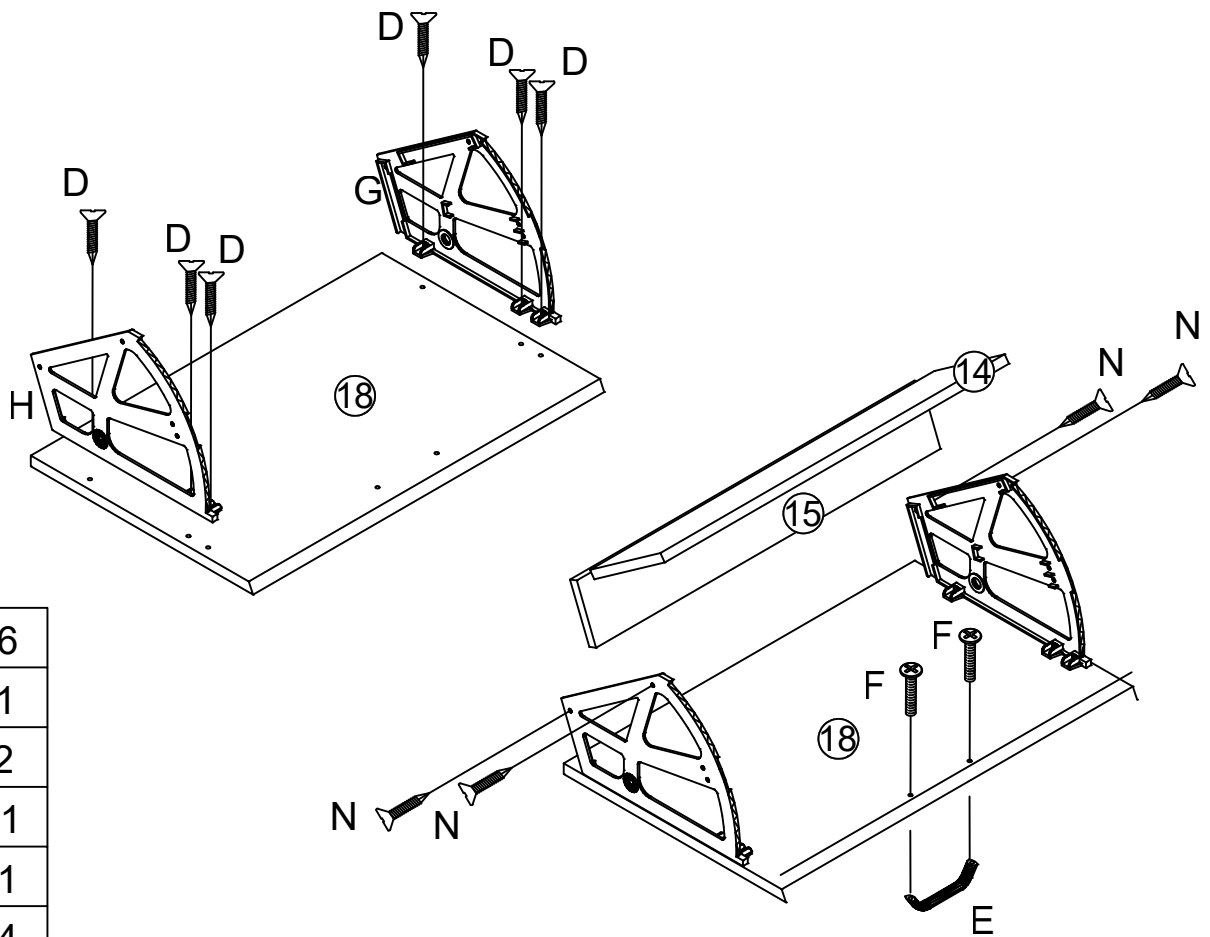

	DX6
	EX1
	FX2
	GX1
	HX1
	NX4

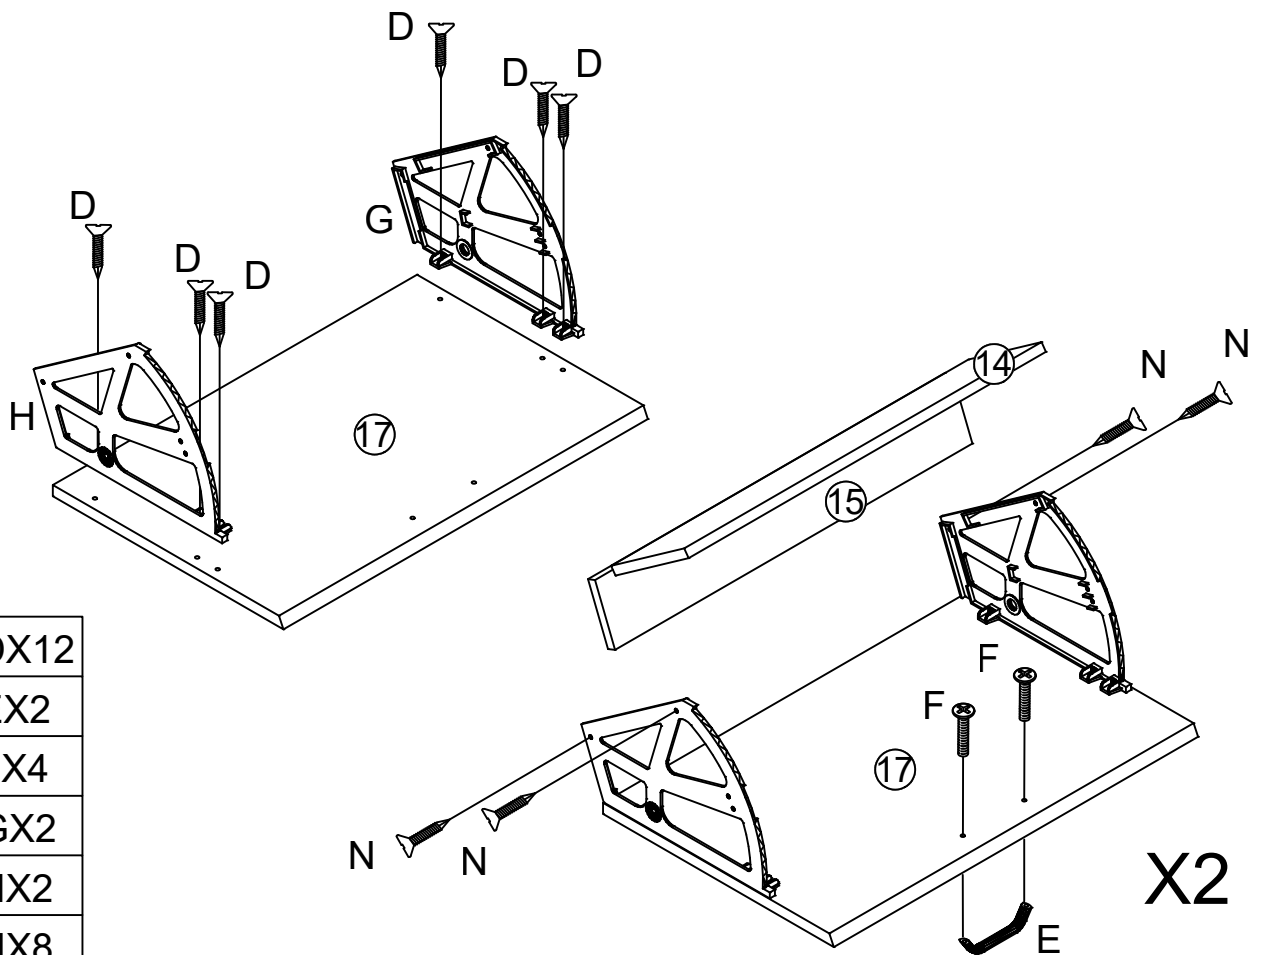


	DX12
	EX2
	FX4
	GX2
	HX2
	NX8

X2

PAEG4

STEP2



will require these parts

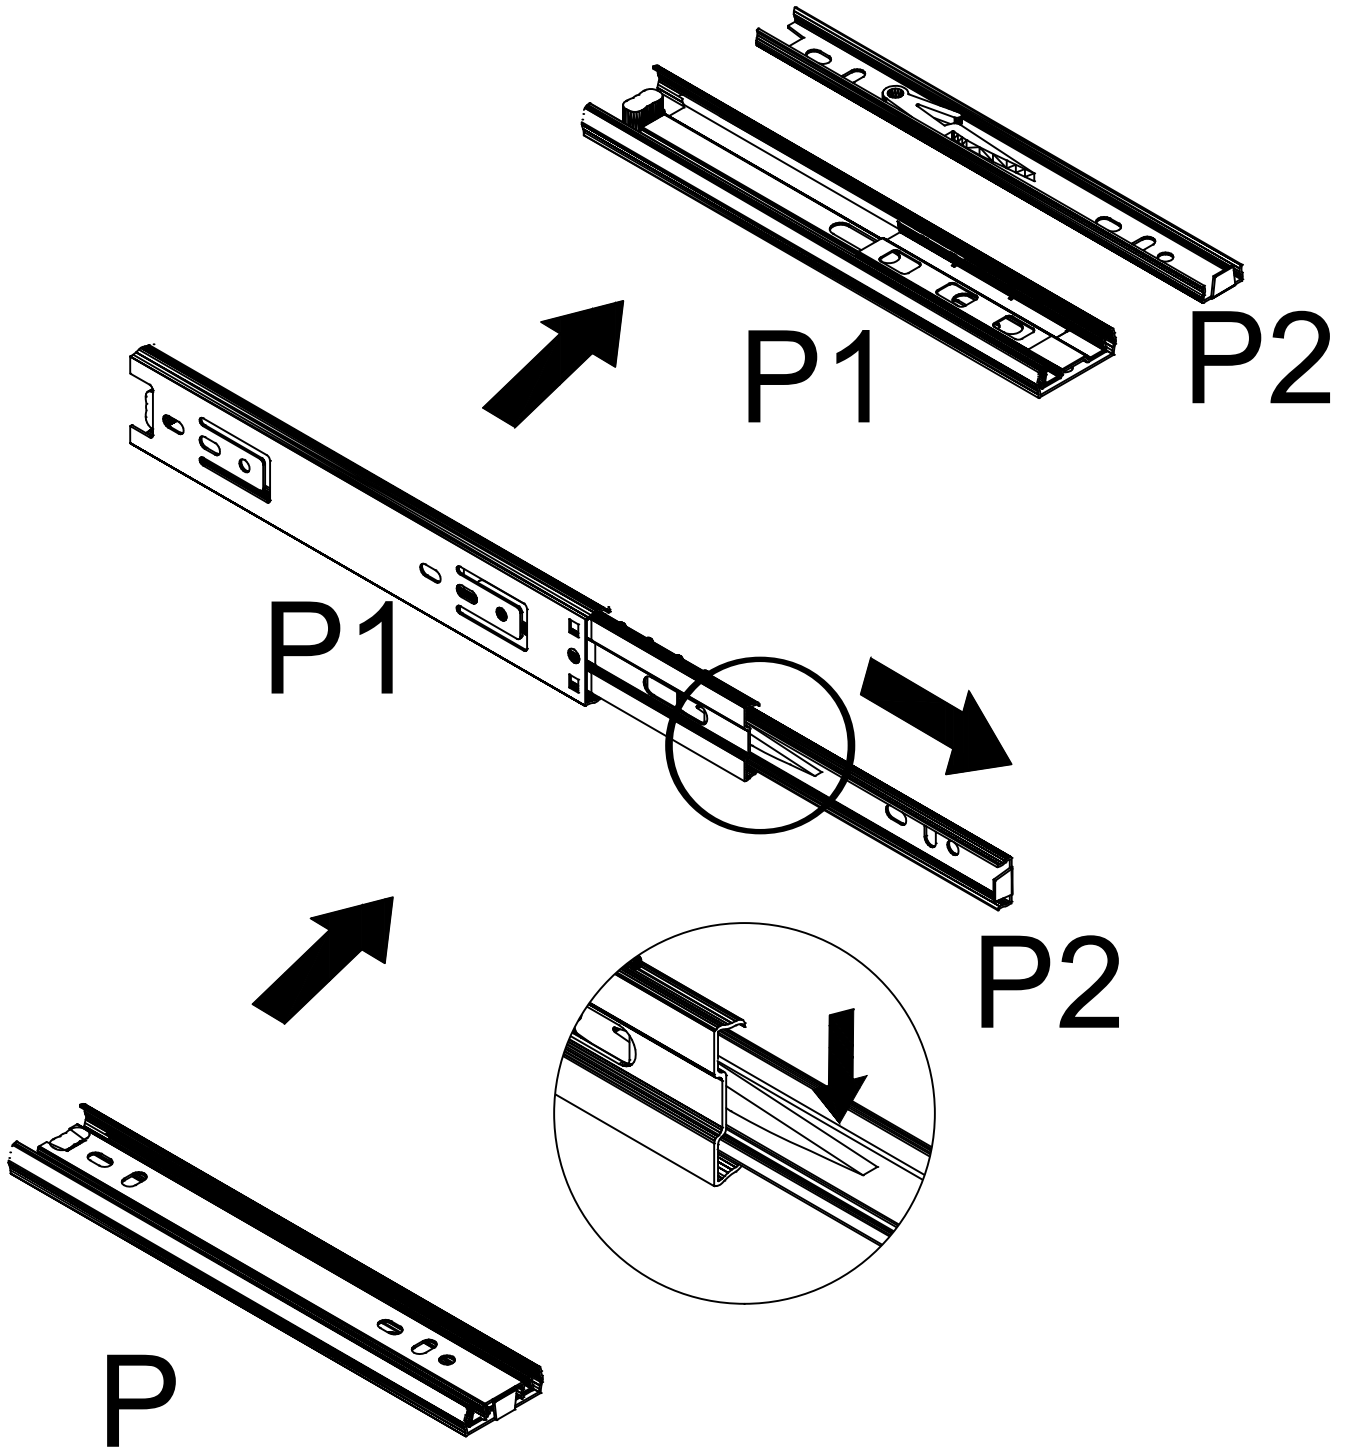

PAEG5

will require these parts


STEP3

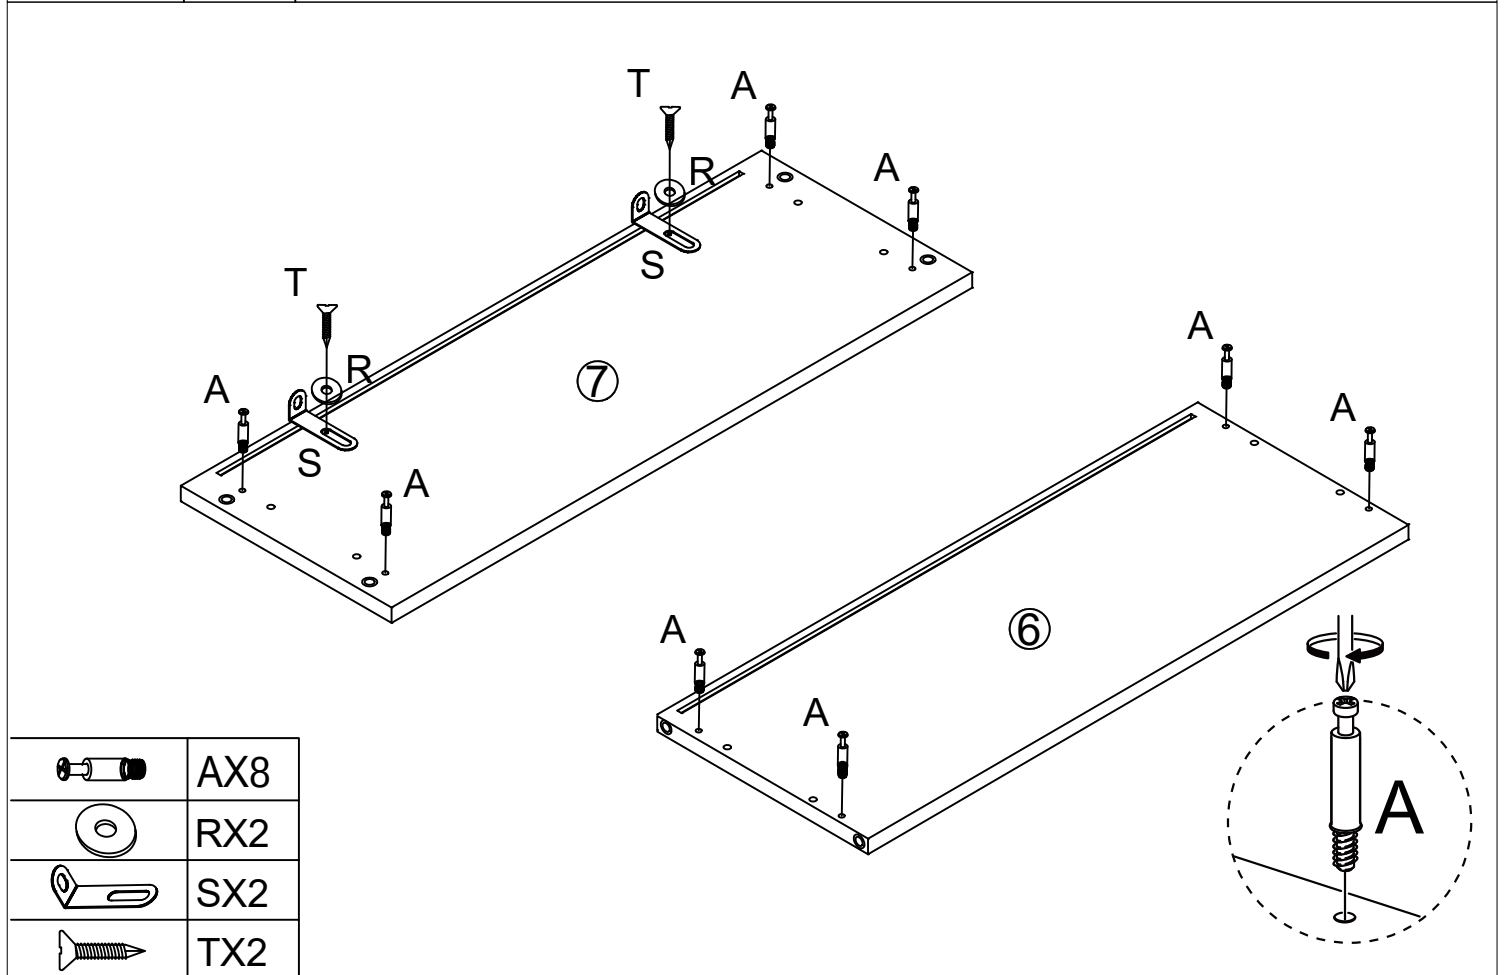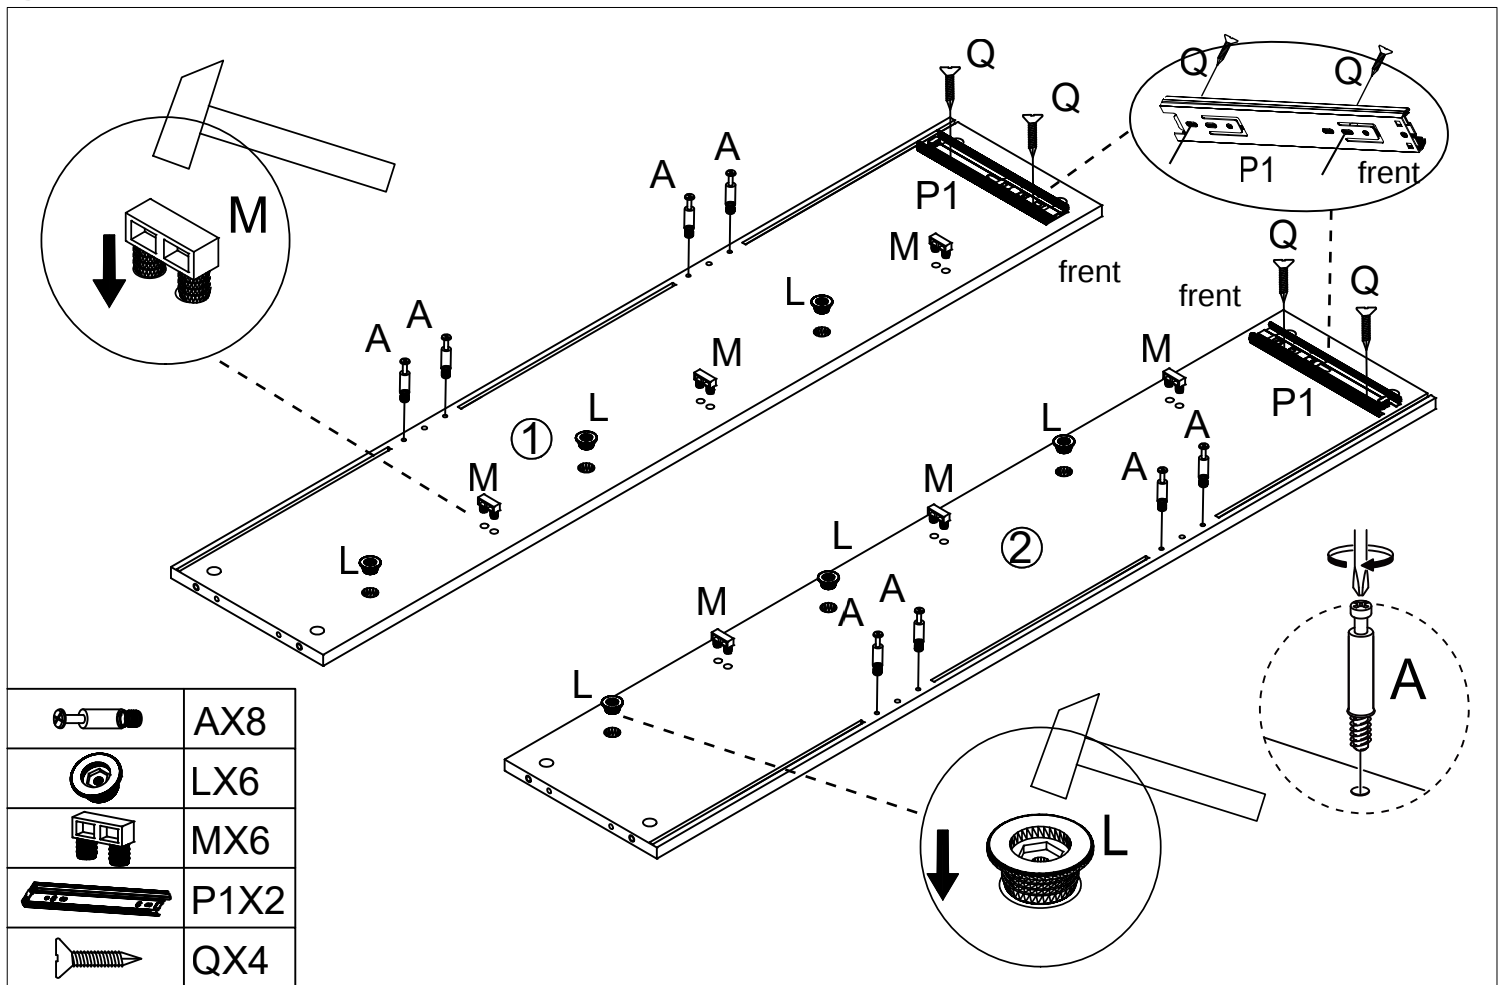

PAEG6


STEP4

will require these parts

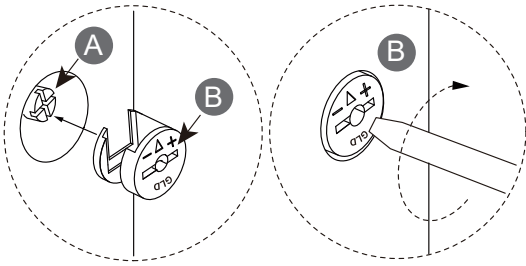


Attention:

Put **B** into the hole and turn **B** clockwise to lock **A** tightly.

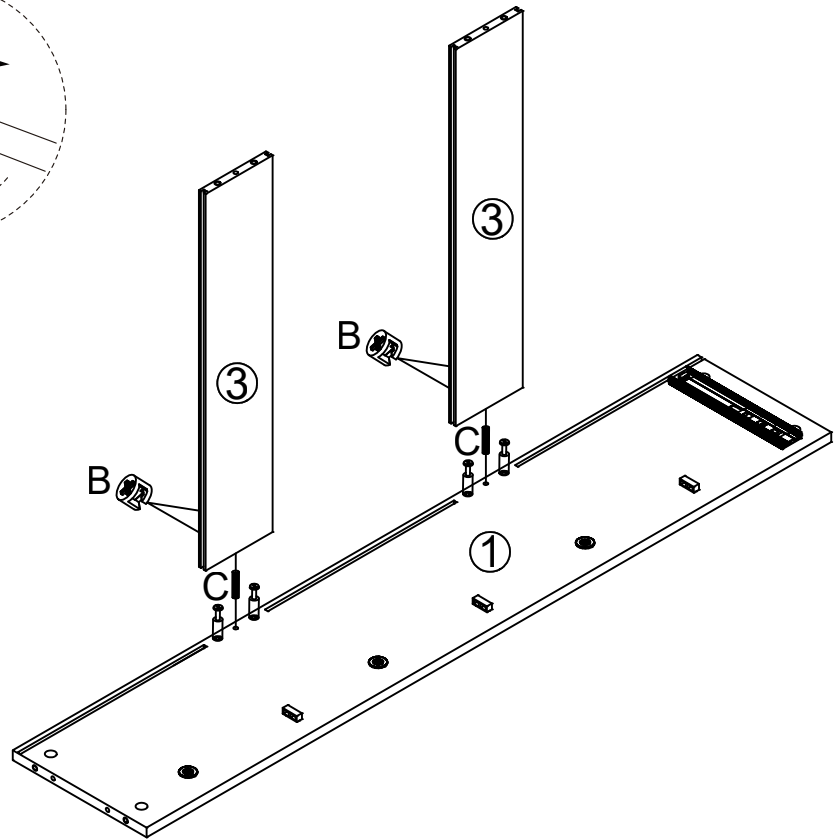


	BX4
	CX2

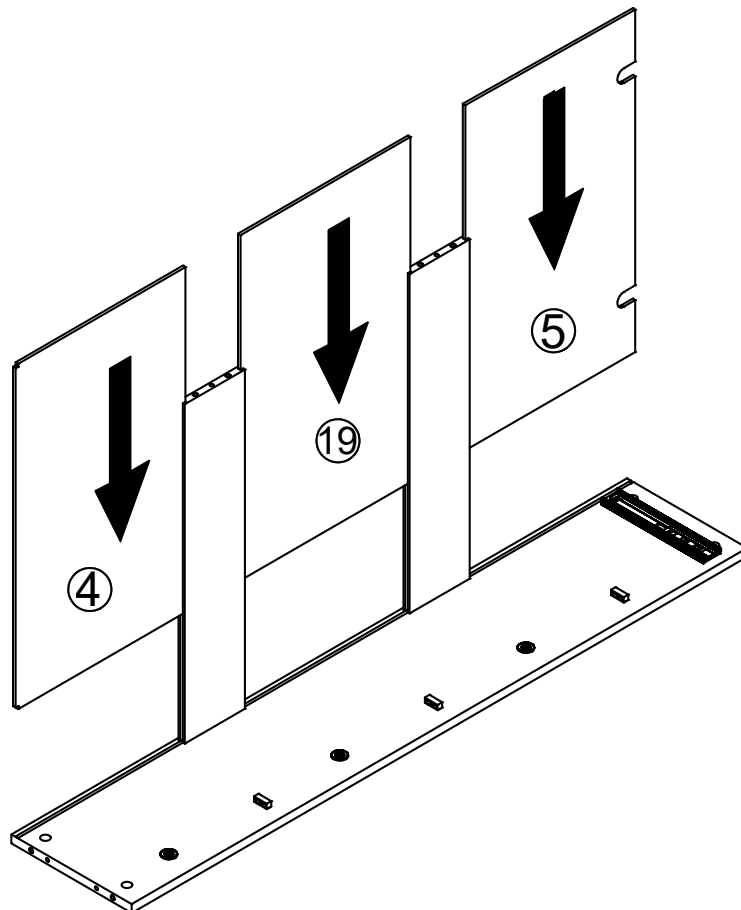

PAEG7


STEP5

will require these parts

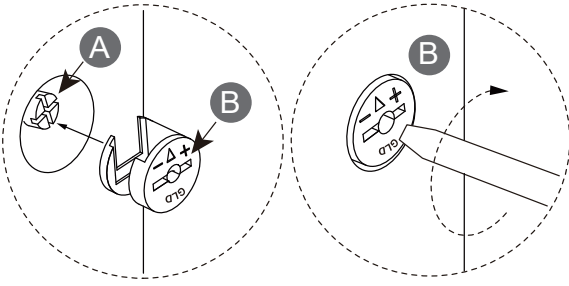


Attention:

Put **(B)** into the hole and turn **(B)** clockwise to lock **(A)** tightly.

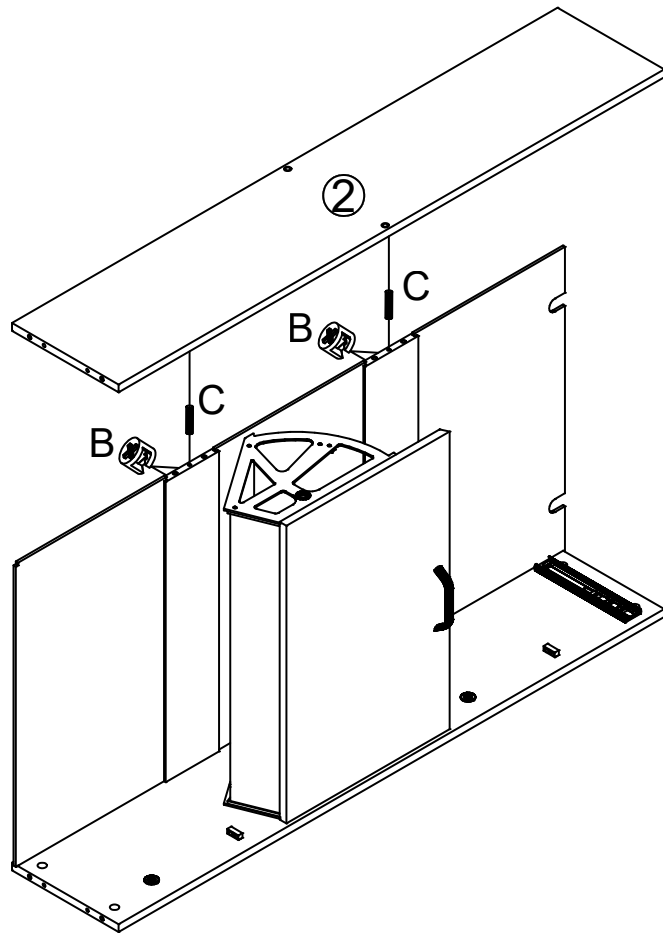


	BX4
	CX2

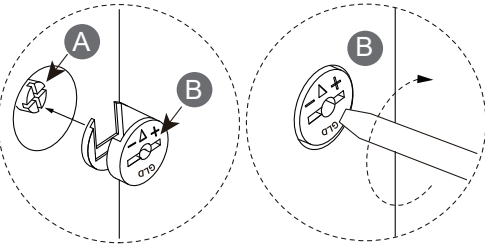

Attention:

Put **(B)** into the hole and turn **(B)** clockwise to lock **(A)** tightly.

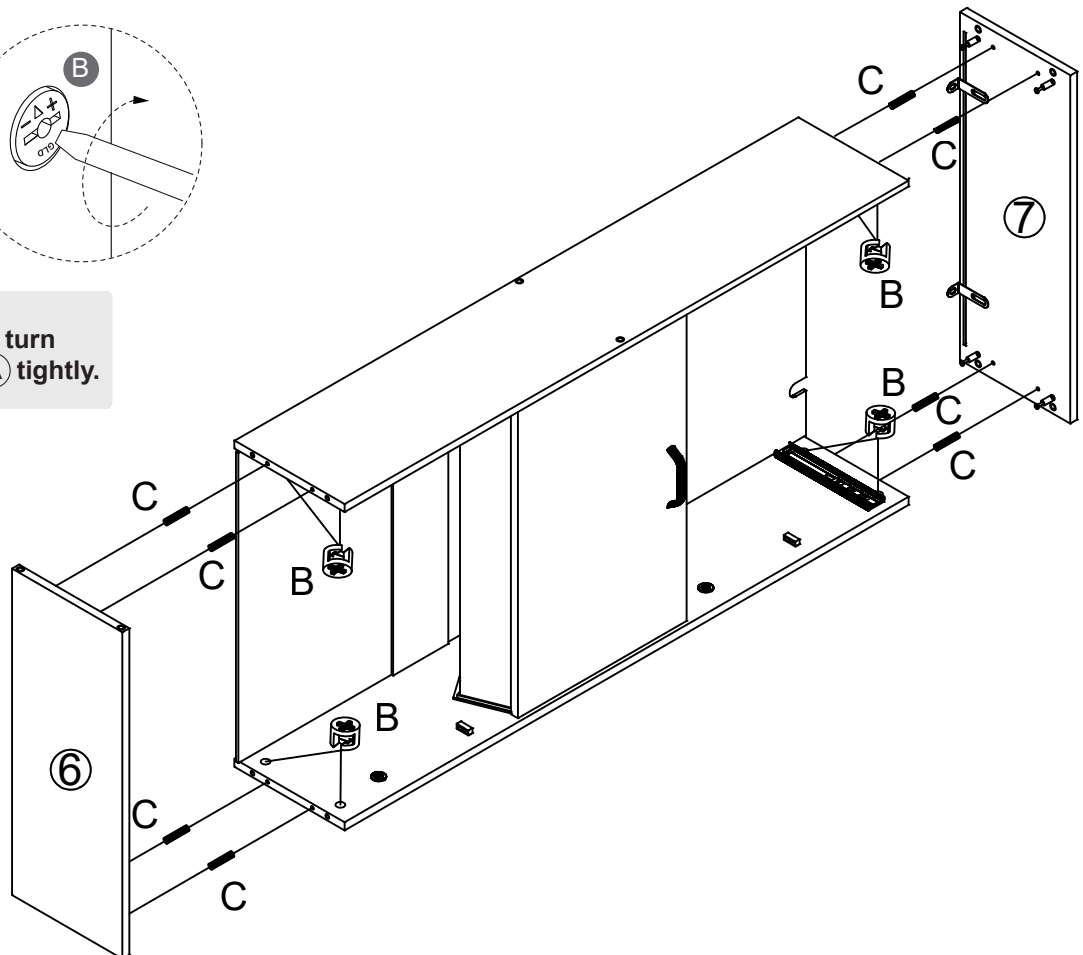


	BX8
	CX8


PAEG8

STEP6



will require these parts

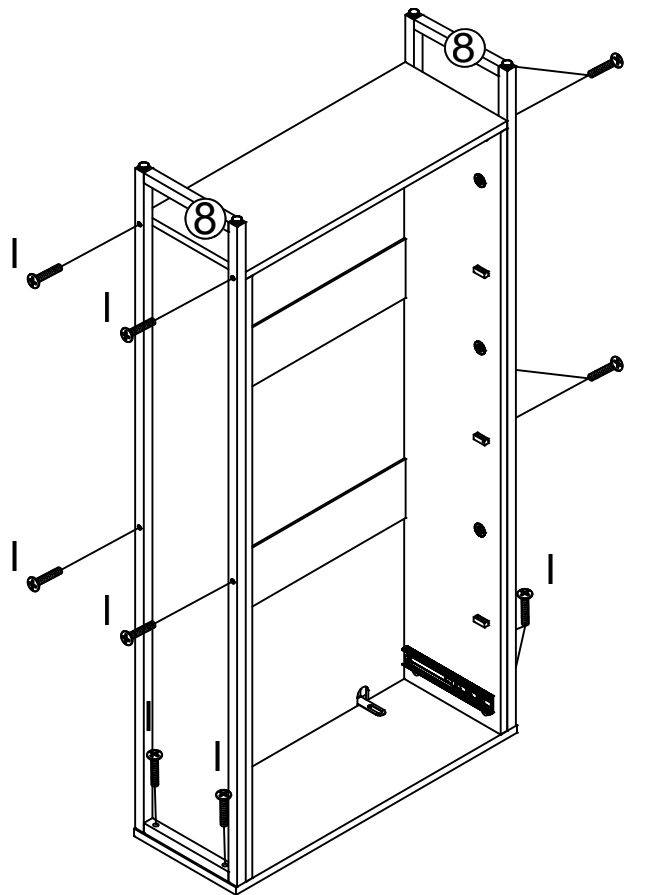

IX12

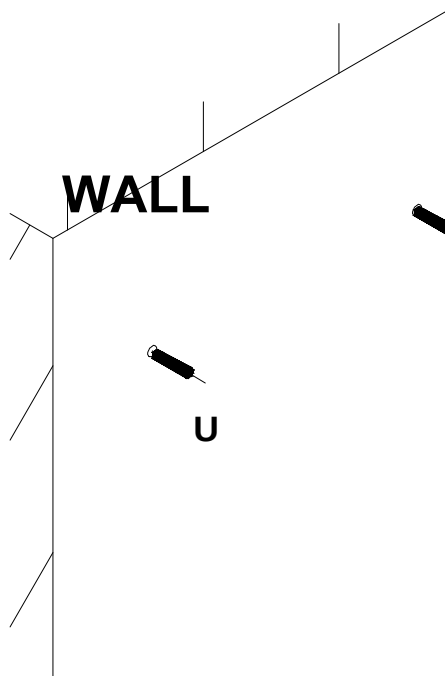

Drill 2 holes on the wall at the required position for anti-falling device installation.

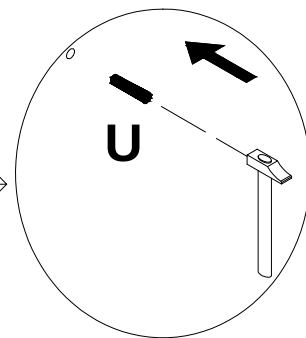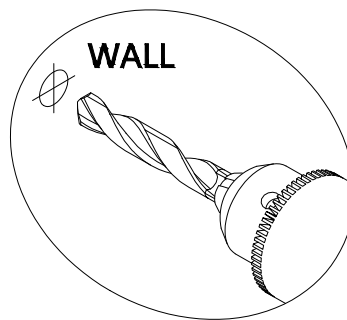

Ux 2



PAEG9

will require these parts



STEP7

Move the cabinet to the required position, use the "V" long screw to fix the cabinet to the wall.

WALL

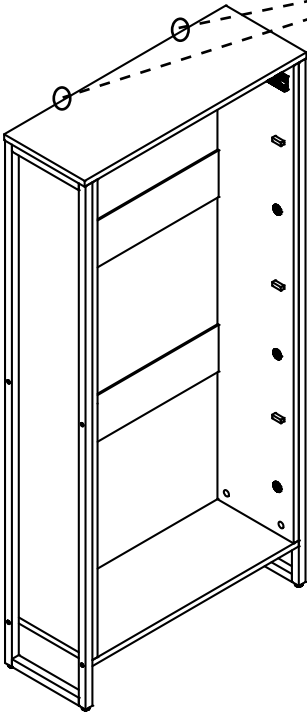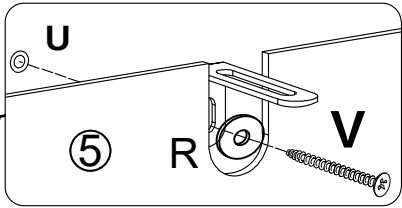

	RX2
	VX2

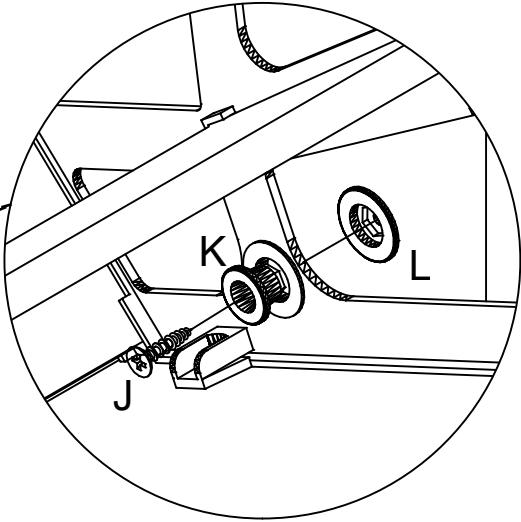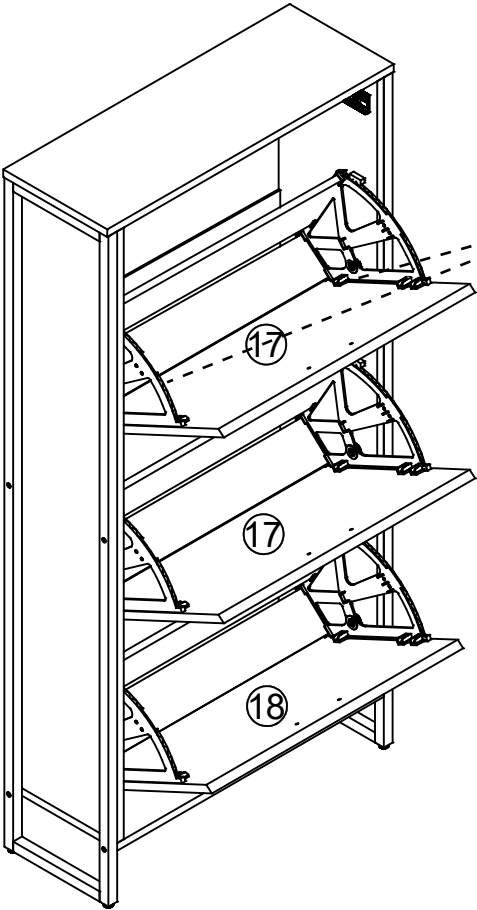


	JX6
	KX6

PAEG10

STEP8

will require these parts





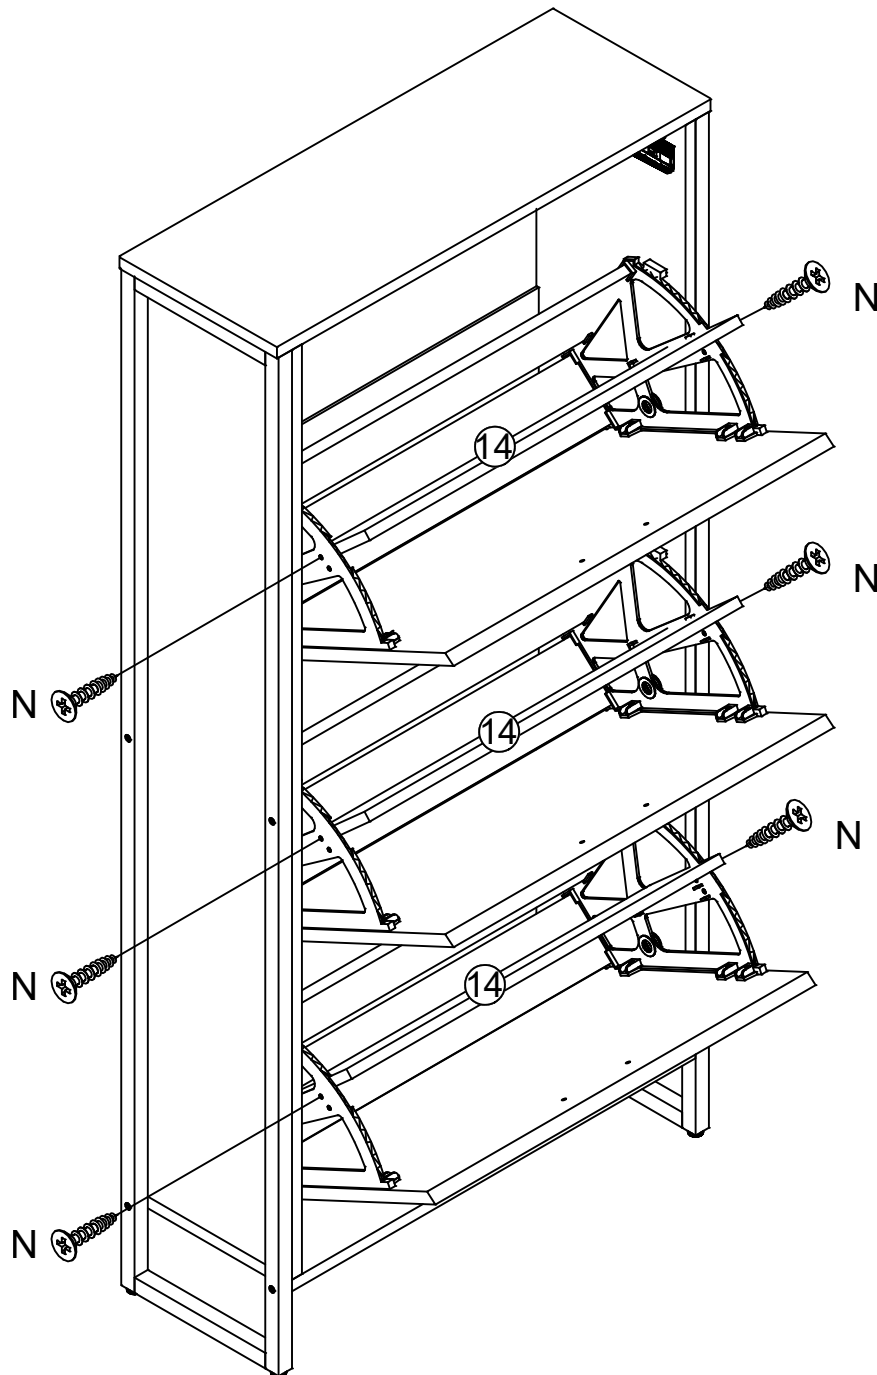


NX6



PAEG11

STEP9

will require these parts

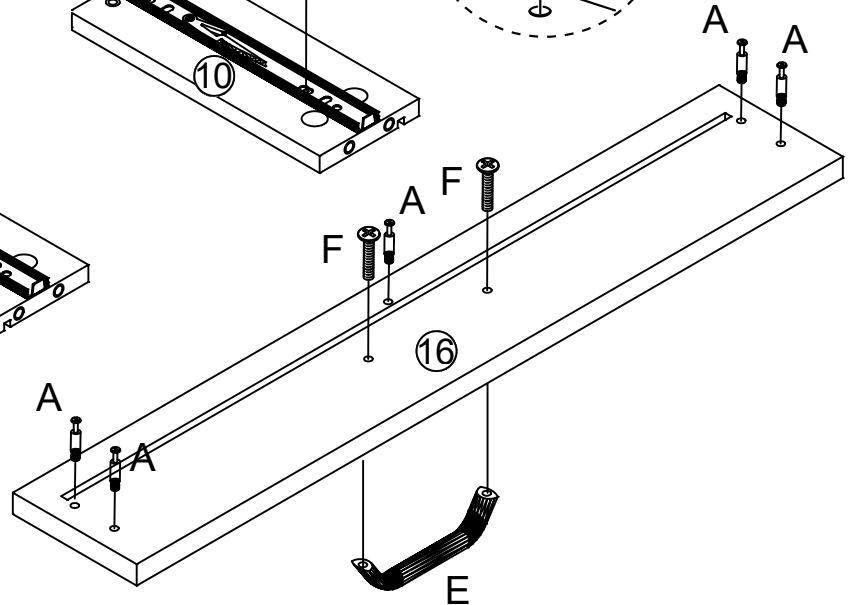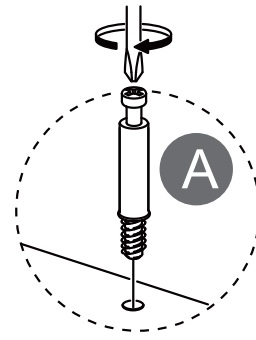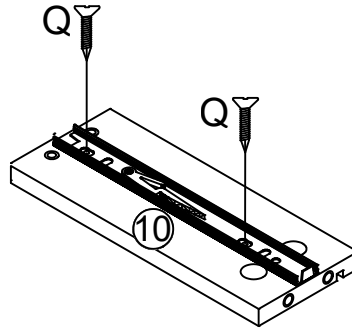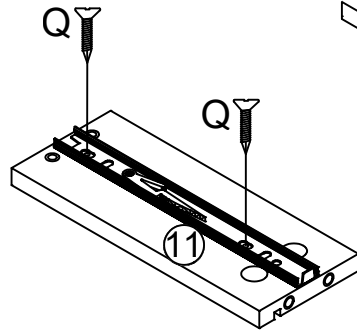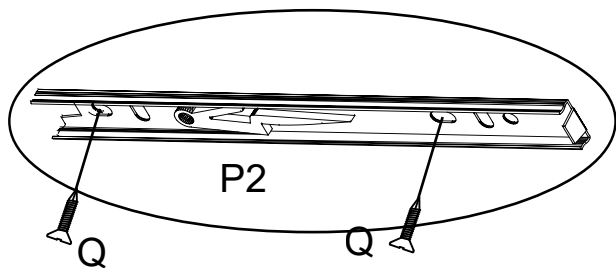

	AX5
	EX1
	FX2
	P2X2
	QX4

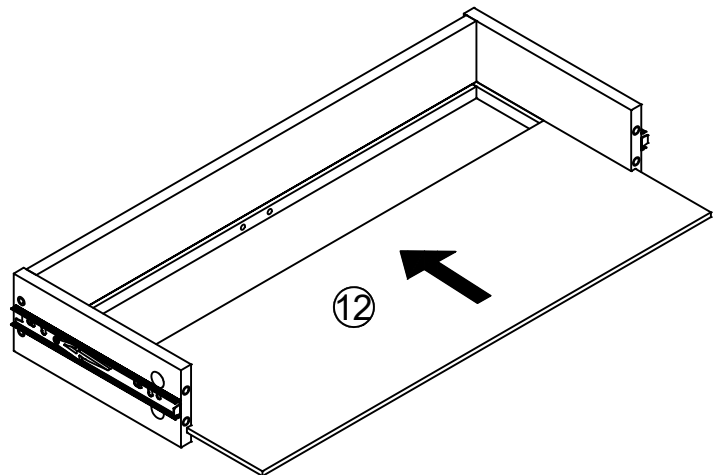
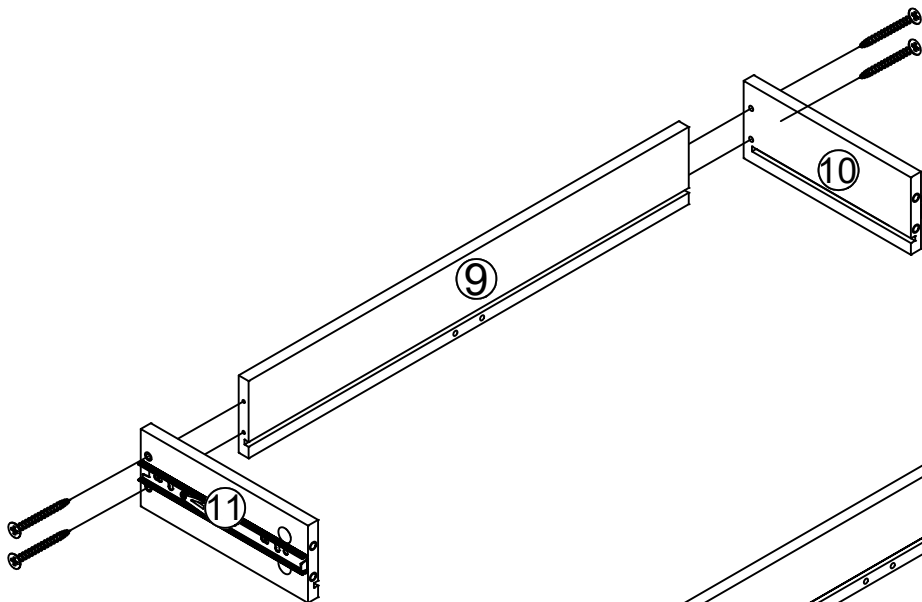


	OX4
--	-----


PAEG12

STEP10

will require these parts

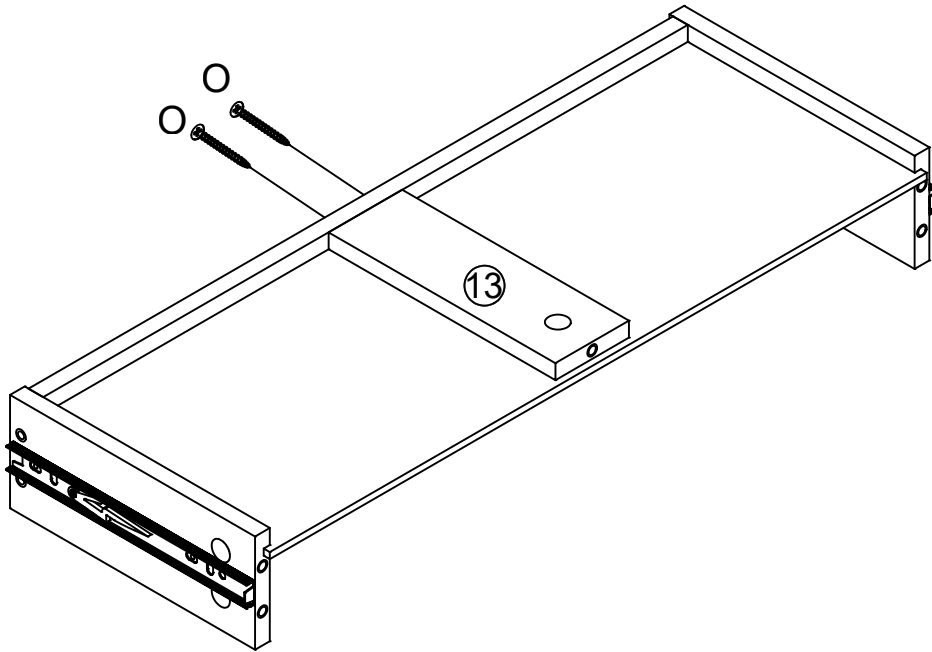


OX2

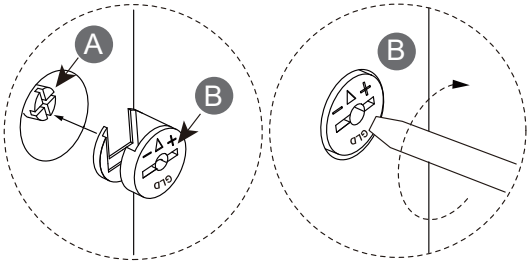

Attention:


Put **B** into the hole and turn **B** clockwise to lock **A** tightly.

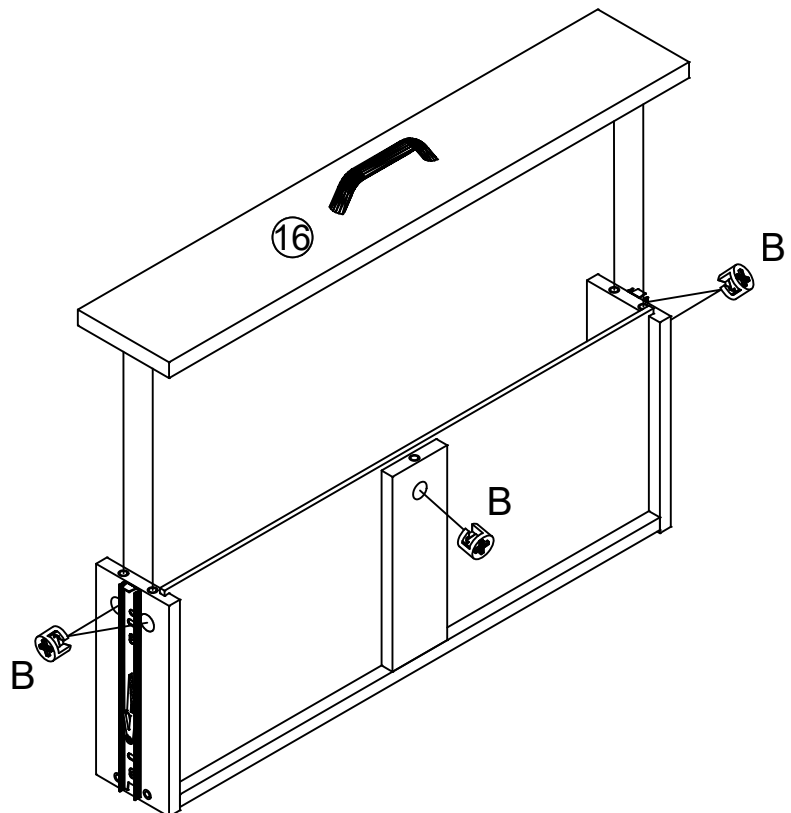

BX5


STEP11

PAEG13
will require these parts

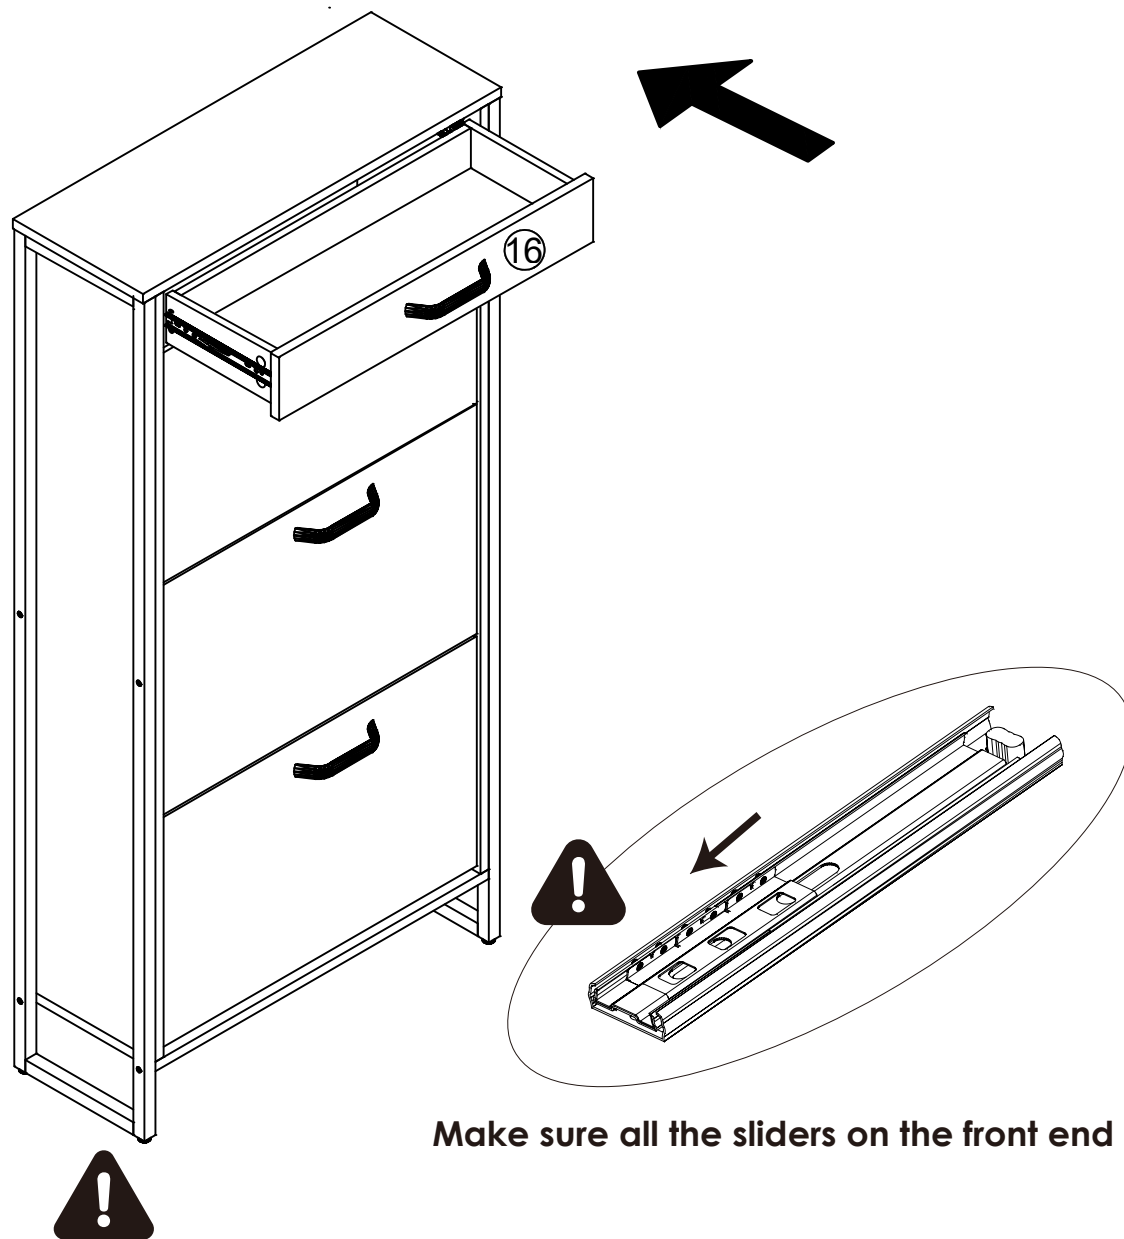

- EN: 1, Drawers must be **horizontally put into** the cabinet
2, Make sure both side sliders **match well** to avoid damage

Wrong: P2 and P1 are not be horizontally placed and pushed

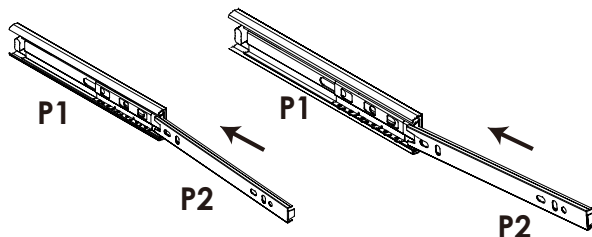

Right: Push P2 and P1 horizontally until you hear a "click"

