


# Resin Garden Shed

## OWNER'S MANUAL Instructions for Assembly

---

# SLD-B68-V3

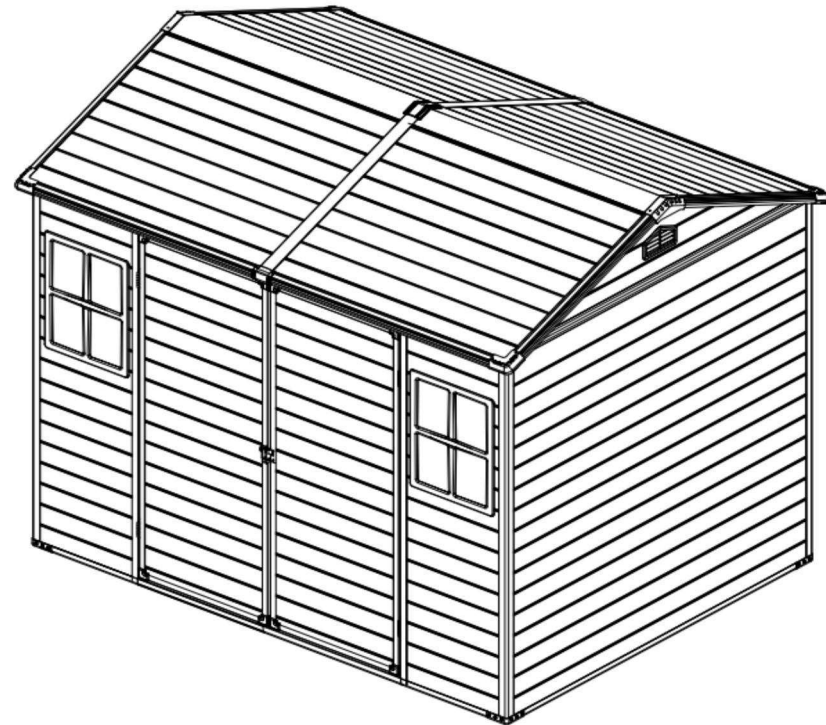

2024-06-29

Requires three people and take 3-4 hours for installation.  
Quick & Easy assembly. Ridge Reinforced Walls.  
Available in Various Sizes.

# BEFORE YOU START

## Owner's Manual

Prior to installation, it is important that you contact your local government authority to determine if building approval is required. Study and understand this owner's manual. Important information and helpful tips will make your construction easier and more enjoyable.

## Assembly instructions

Instructions are supplied in this manual and contain all appropriate information for your building model. Review all instructions before you begin. During assembly, follow the step sequence carefully for correct results. Please be aware: **this unit takes two people about one full day to complete.**


## Parts

Check to be sure that you have all the necessary parts for the building.

Separate contents of the carton by the part number while reviewing parts list.


Familiarize yourself with the hardware and fasteners for easier use during construction. These are packaged within the carton. Note that extra fasteners have been supplied for your convenience.

## TOOLS MAY REQUIRED

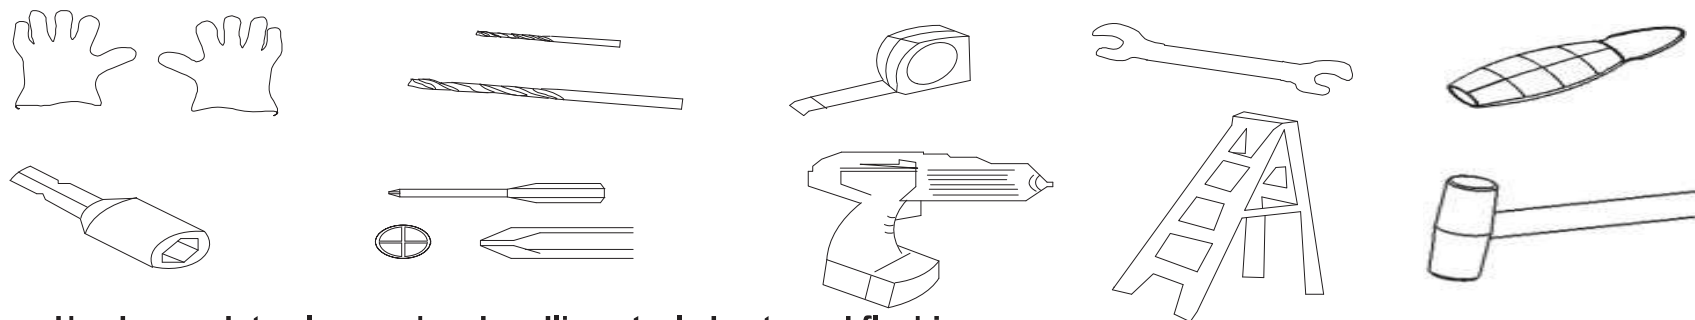

**Use heavy duty gloves when handling steel sheets and flashing**

## PLAN AHEAD

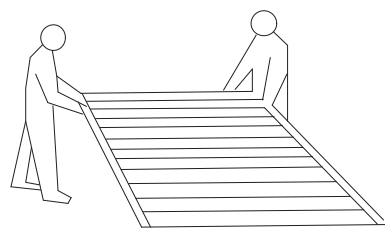

### Watch the weather:

Please be sure the day you select for installation is dry and calm.

**DO NOT attempt to assemble your shed in windy weather** because of risk of damage to panels, or personal injury. Be careful of wet or muddy ground.

### Teamwork:

Whenever possible, two or more people should work together to assemble the building. One person can position parts or panels

# PLAN AHEAD

---

## Site Selection

- Avoid overhanging trees as much as possible as leaves will make regular cleaning necessary and broken branches are a potential hazard.
- Small trees, bushes or fences nearby can be helpful, acting as a wind break.

If a concrete pad is made, it is important that this slopes towards the edges to prevent water ingress.

Time must be allowed for any concrete or cement to dry before building the shed on top.

## Site Preparation

The site must be prepared so that the base of the shed is level all round and checking with a spirit level is required.

The base can be constructed by treated timber or concrete, in order to stop the moisture getting into the shed. **The shed is not designed to be built onto lawn directly.** Also the ground will get muddy during rainy days.








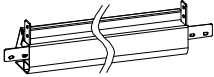
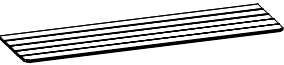

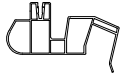



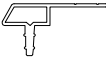



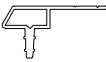




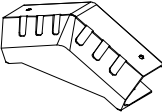








Bases can also be constructed from bricks, blocks, or mounted on a concrete pad.






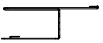

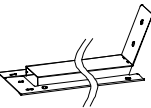

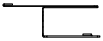

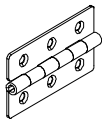
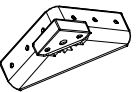















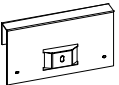
The bricks or blocks should be cemented onto firm and level concrete footings and the greenhouse frame drilled and screwed to the base.

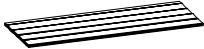

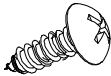
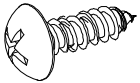


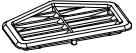

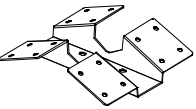
---
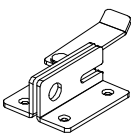
## IMPORTANT NOTES:

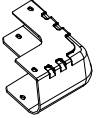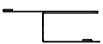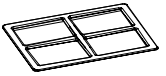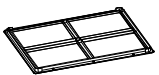- Find someone to help you: it is much easier with someone to hold parts, pass tools ect. Also some steps require two people to lift structures together. This is not very heavy work so would suit most able-bodied people.
- Allow plenty of time: rushing often causes errors and the re-doing of incorrect assemblies. If you have never built a shed before, it can take most of a day to carefully complete the construction.
- Have the right tools to hand.
- Safety clothing as recommended in the 'Tools' section.
- Ideally lay out the parts and check that all are present before commencing construction. Lay on cloths or plastic sheets if there is any risk of scratching the parts.
- Tighten all nuts carefully, being sure not to miss any. Check the frame is square and using a spirit level to check that it is upright.


A86-C01 	x 1	B68-C03 	x 2	A86-C14 	x 4	B68-C11 	x 2
A86-C02 	x 9	B68-C04 	x 4	A86-C15 	x 4	B68-A05 	x 1
A86-C03 	x 1	B68-C05 	x 2	A86-C16 	x 4	A86-C24 	x 2
A64-C04 	x 8	B68-C06 	x 2	A86-C17 	x 4	B68-C12 	x 1
A64-C05 	x 2	B68-C07 	x 6	A86-C18 	x 4	B68-C13 	x 2
B68-C01L 	x 1	A86-C11 	x 2	B68-C08 	x 4	A64-C29 	x 2
B68-C01R 	x 1	A86-C12 	x 2	B68-C09 	x 2	A64-C30 	x 1
B68-C02 	x 2	A86-C13 	x 4	B68-C10 	x 2	A64-C31 	x 2

A64-C32		x 2	F35-C33		x 1	A86-A04		x 2	A64-A13		x 1
A64-C33		x 2	B68-A01		x 1	A86-A05		x 2	B68-A04		x 1
A64-C34		x 1	B68-A02		x 1	A86-A06		x 2	A64-A15		x 4
F35-C27		x 4	A64-A02		x 2	A86-A07		x 2	F35-D02		x 1
F35-C29		x 8	B68-A03		x 1	A64-A09		x 2	A86-D01		x 2
F35-C30		x 4	A86-A03		x 1	A64-A10		x 2			
F35-C31		x 1	A64-A05		x 1	A64-A11		x 4			
F35-C32		x 1	A64-A06		x 4	A64-A12		x 4			



E01		x 36	E11		x 4				
E02		x 440							
E03		x 28							
E04		x 5							
E07		x 4							
E12		x 28							
E08		x 20							
E09		x 20							

- 6 -

# Pre-installed Exploded View I

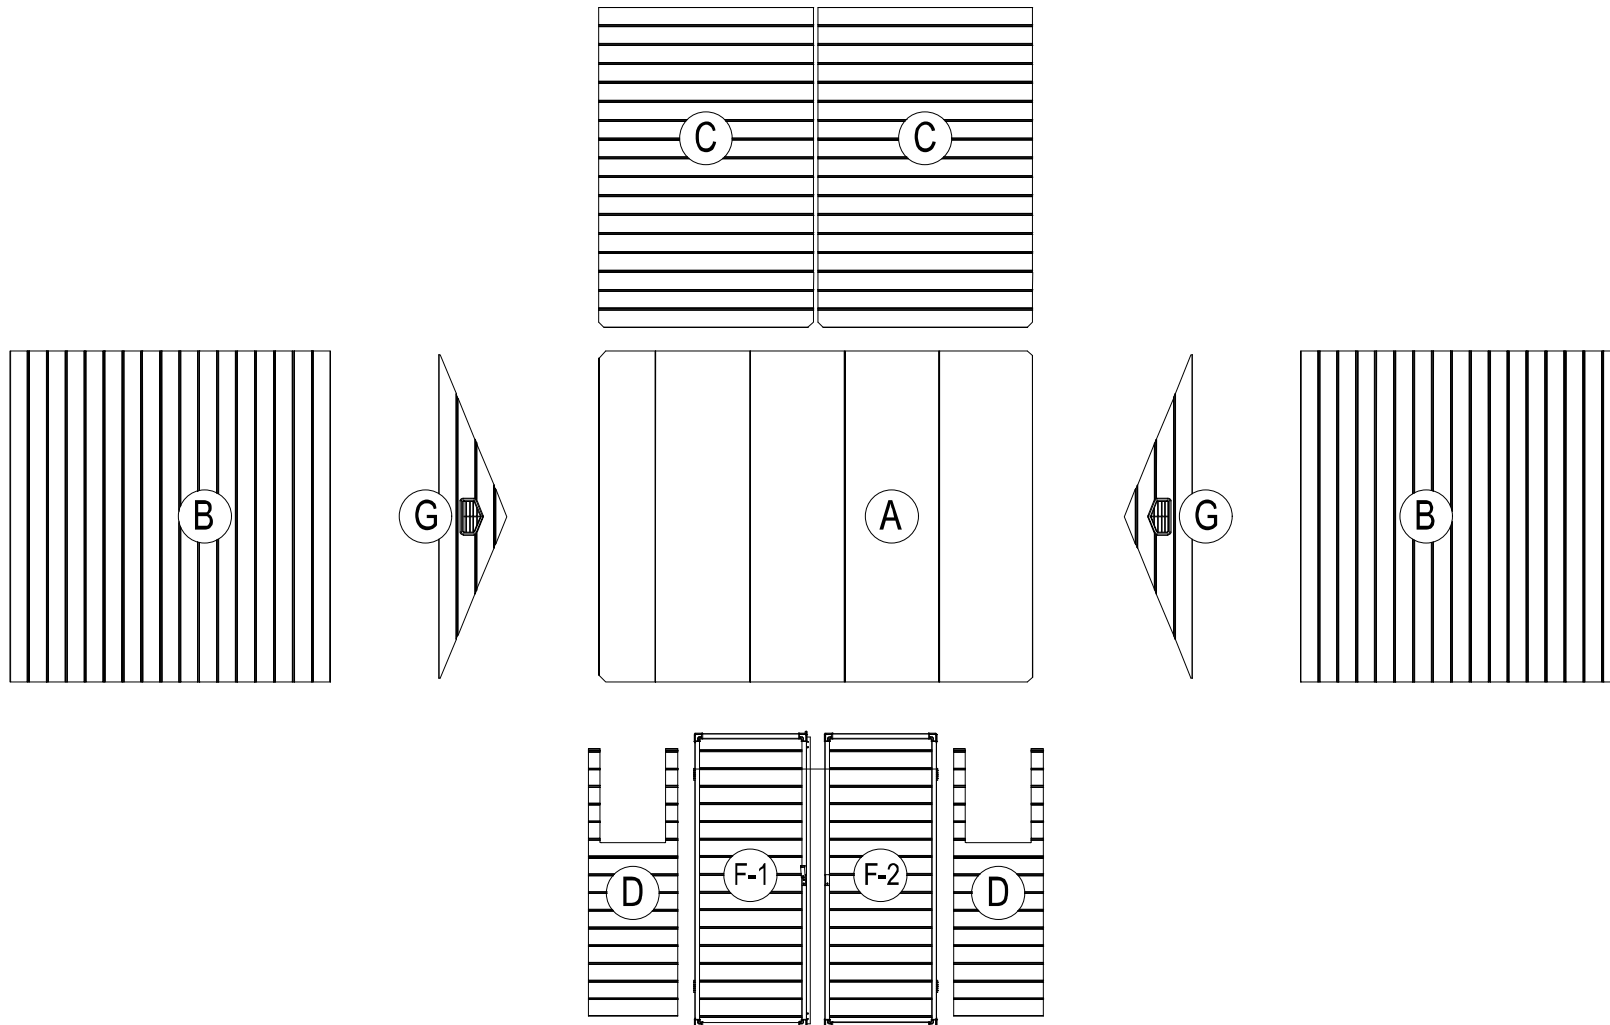


## Pre-installed Exploded View II

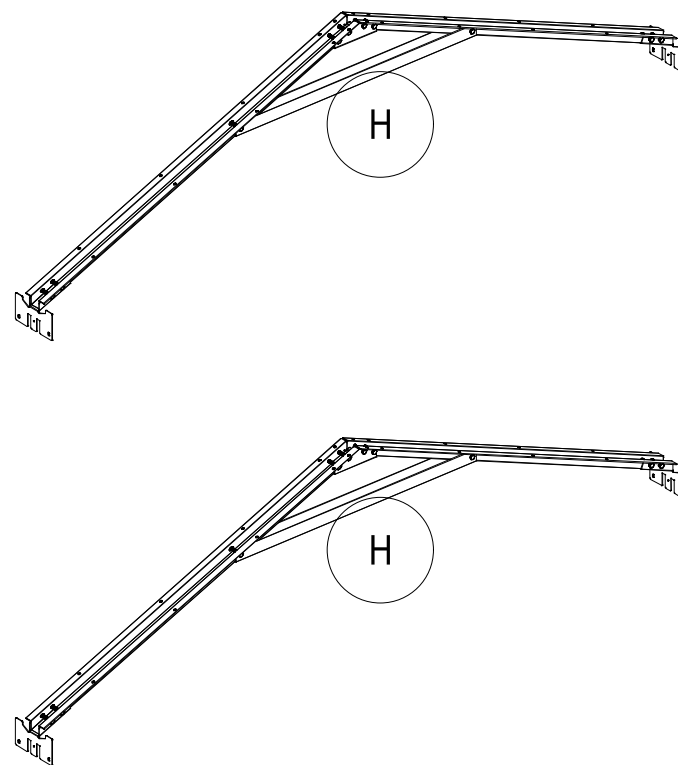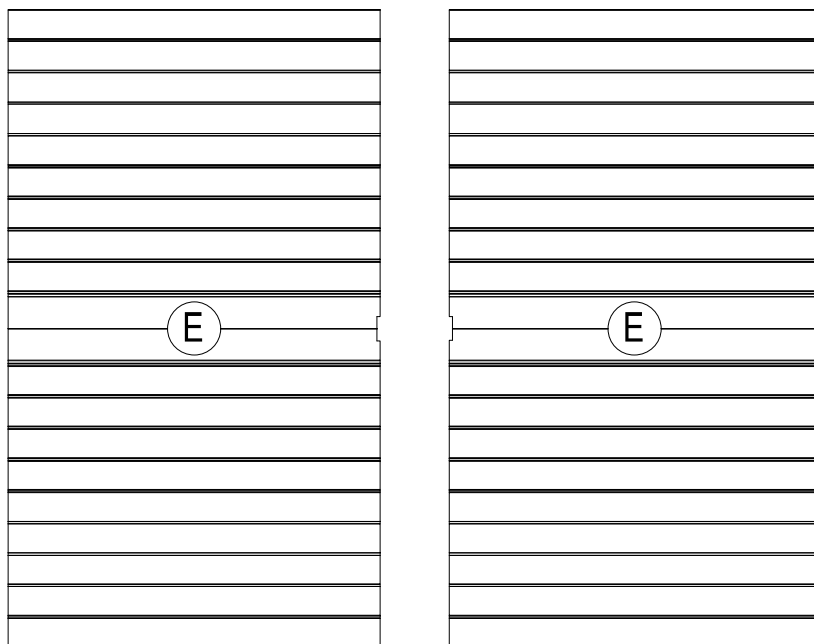






A86-C03 x1



A86-C02 x3




A86-C01 x1






(ST4.2x12)  
E02x8




## Pre-installed Basement

A





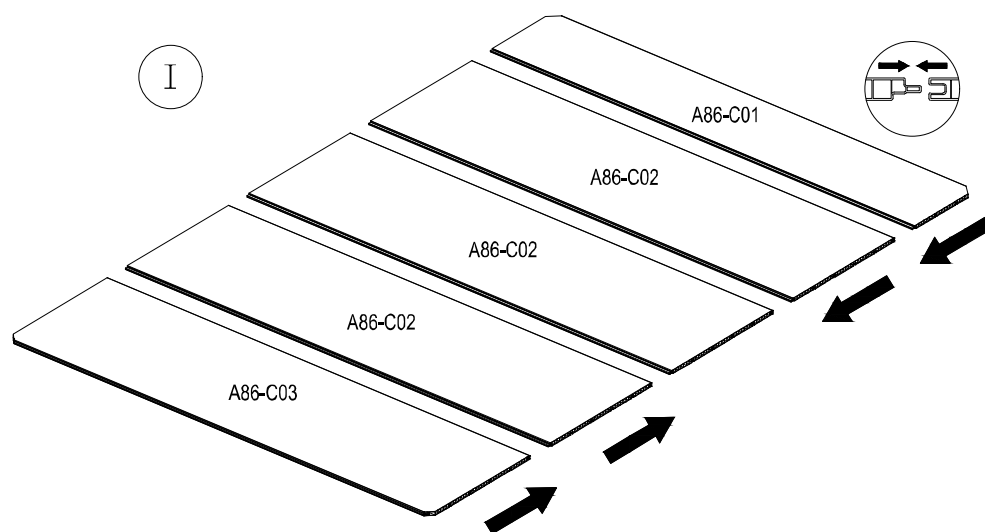


II

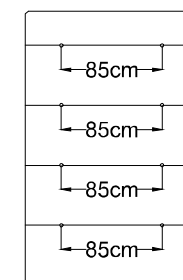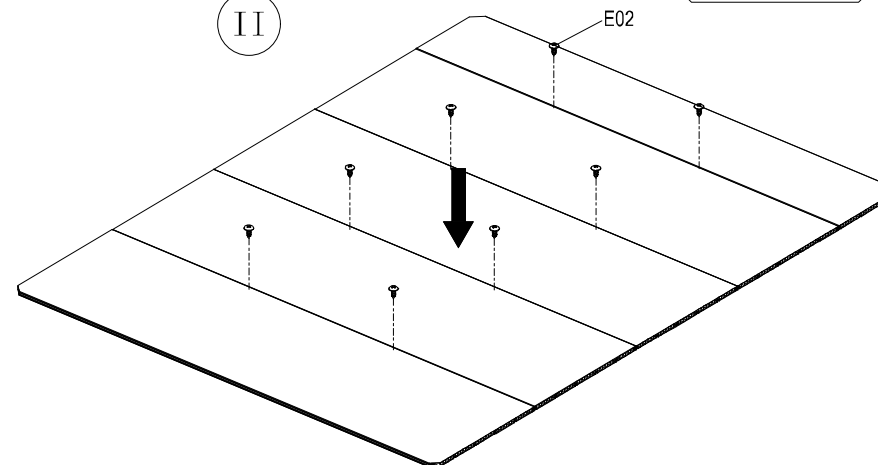



# B

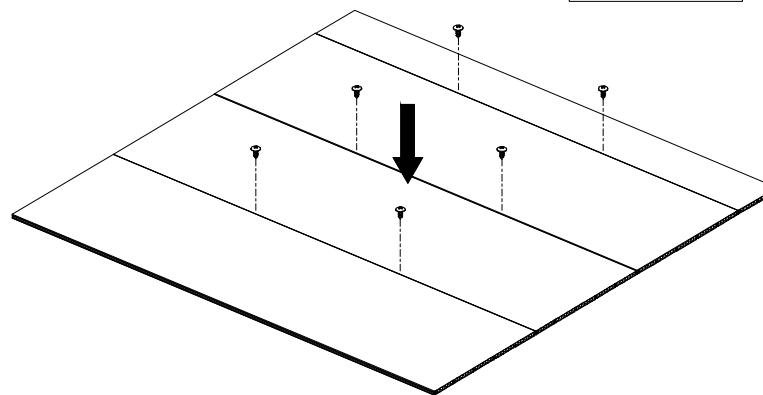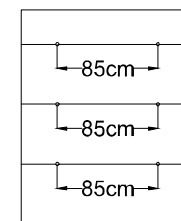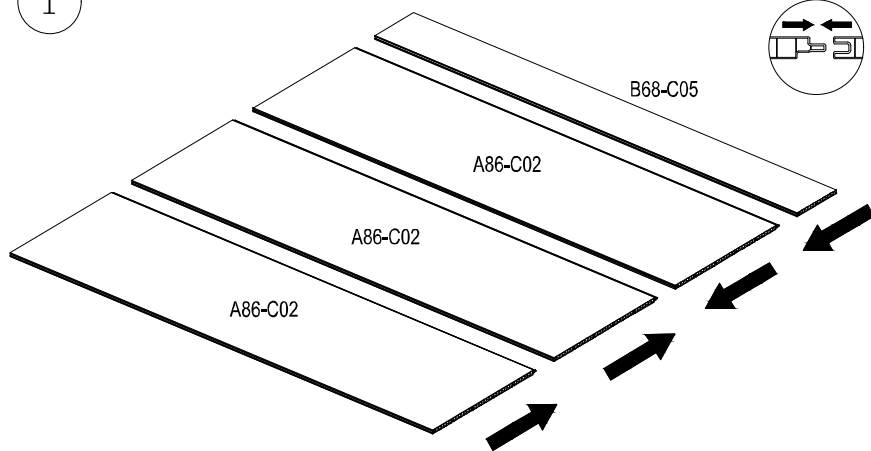
 $x^2$ 



B68-C07 x6




B68-C06 x2





(ST4.2x12)  
E02x12

## Pre-installed Back wall


C

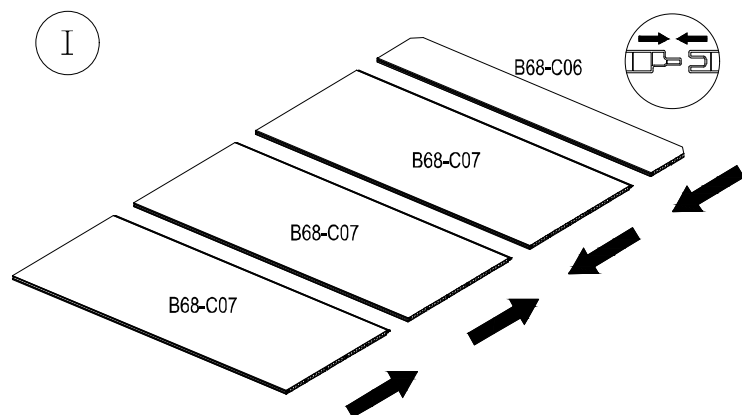

x2

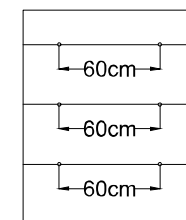

II

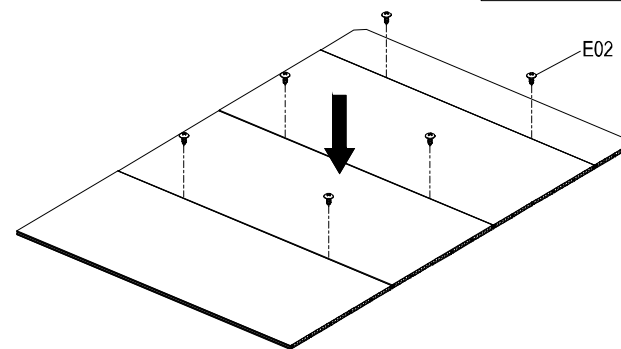

B68-C04 x4



B68-C03 x2

B68-C02 x2

(ST4.2x12)  
E02x8



## Pre-installed Front wall

### D

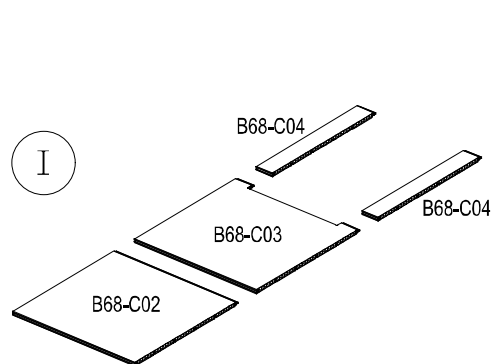


x2

II

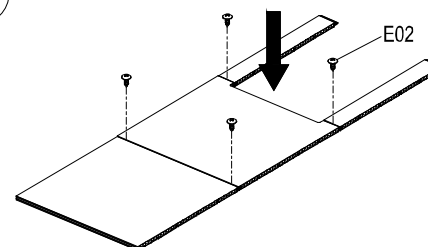

100%






A86-C13 x4



A86-C14 x4




A86-C12 x2






(ST4.2x12)  
E02x16


## Pre-installed Roof

E

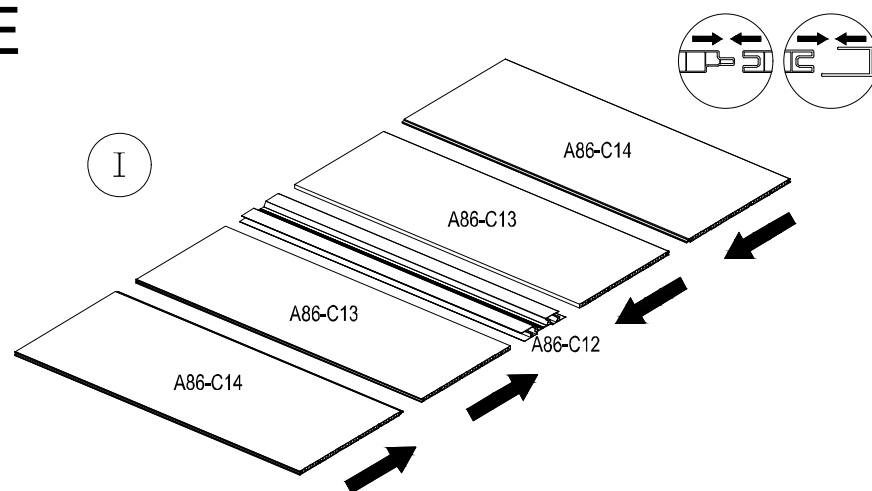




x2

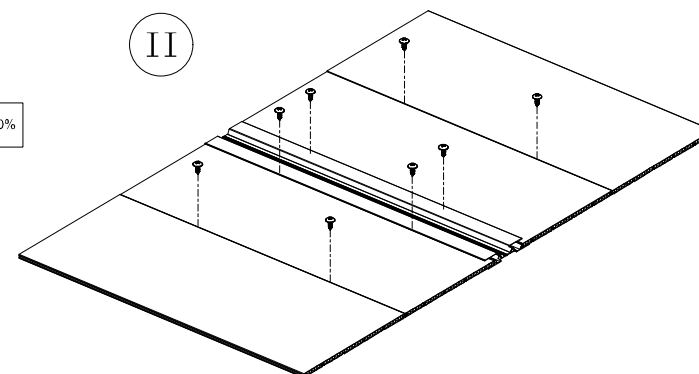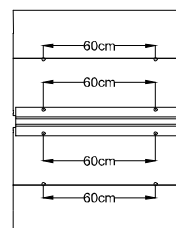

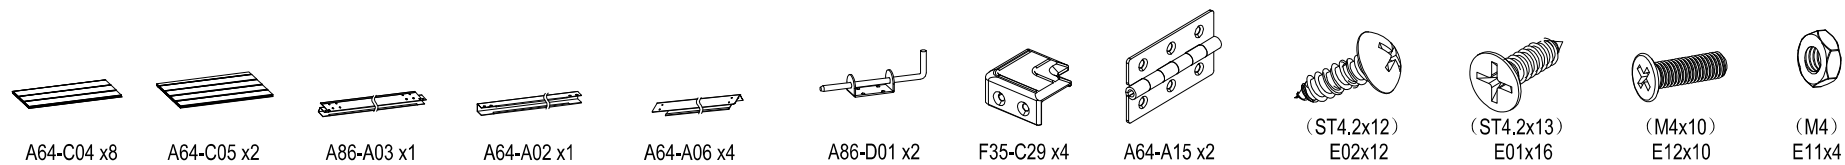

## Pre-installed Door

### F-1

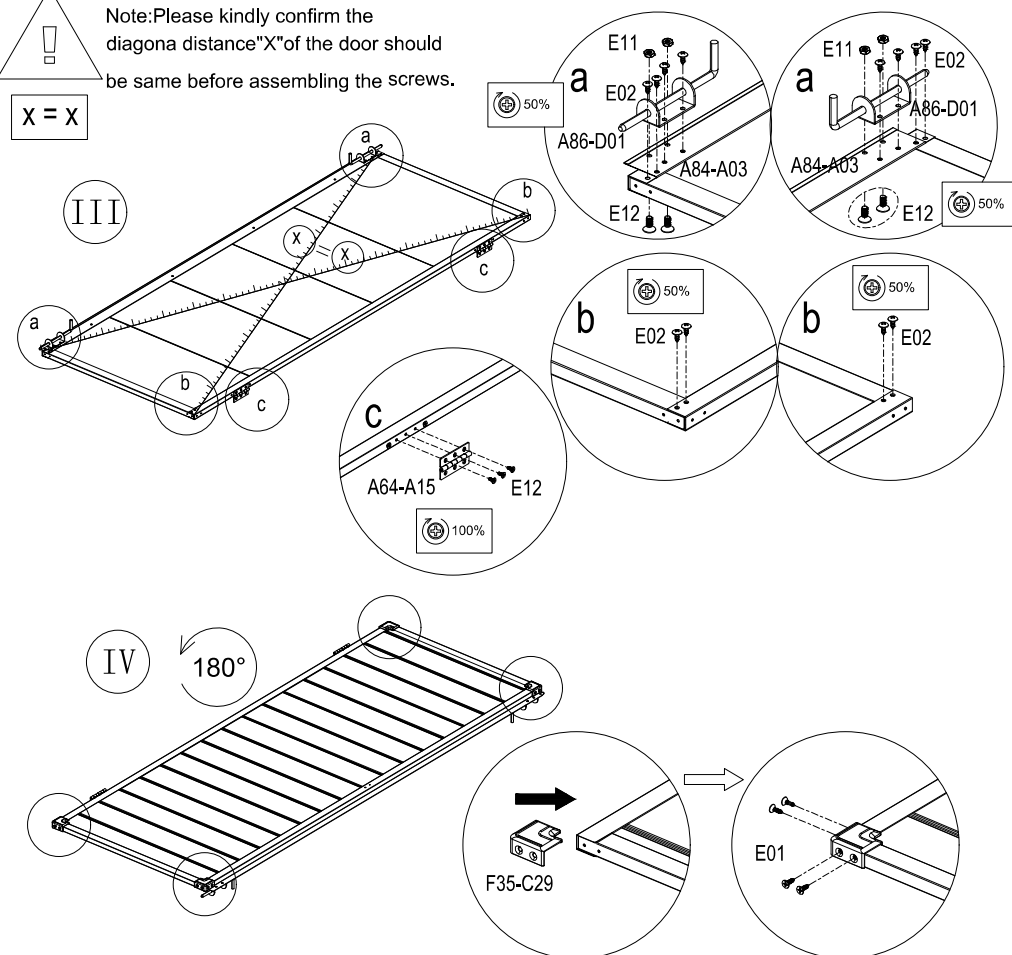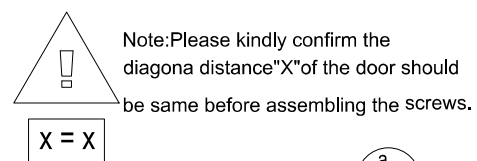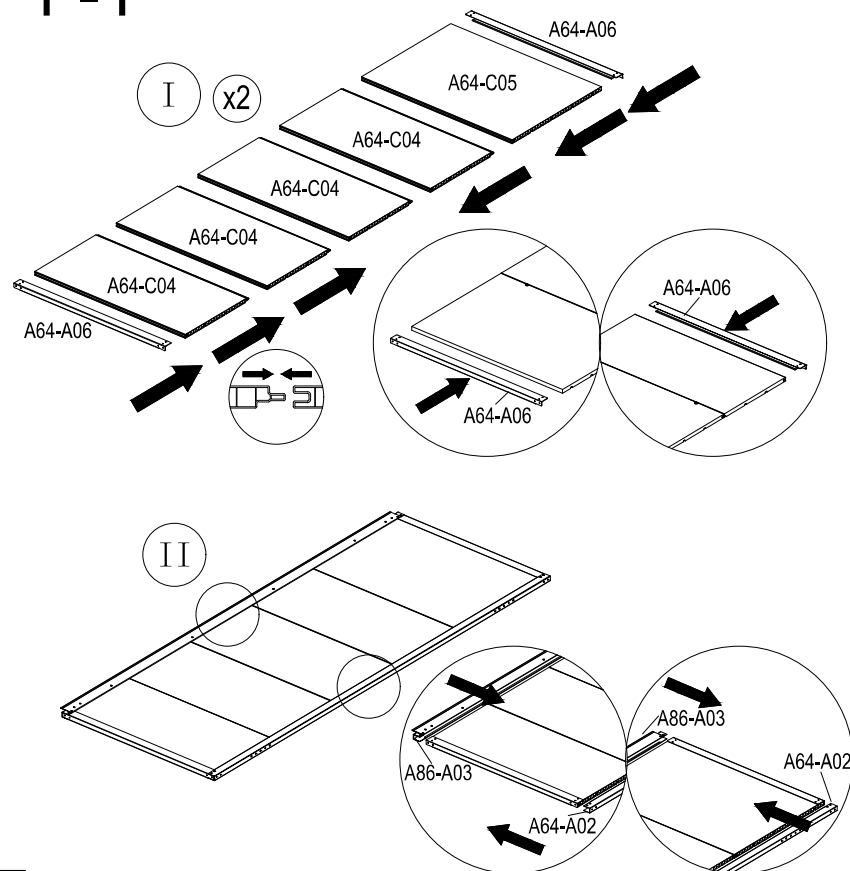




A64-A05 x1



A64-A02 x1




F35-C29 x4



A64-A15 x2



(ST4.2x12)  
E02x8





(ST4.2x13)  
E01x16




(M4x10)  
E12x6


## Pre-installed Door

### F-2

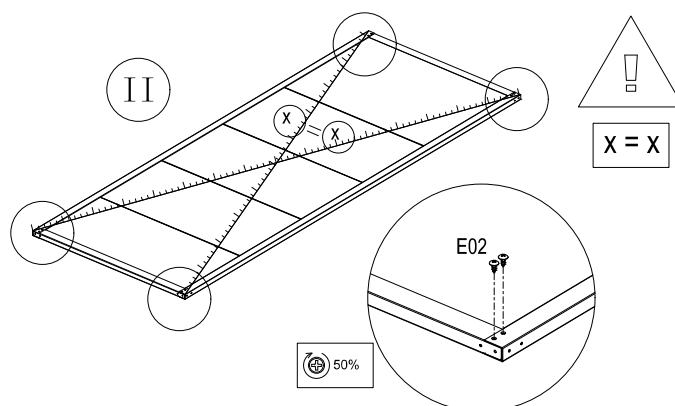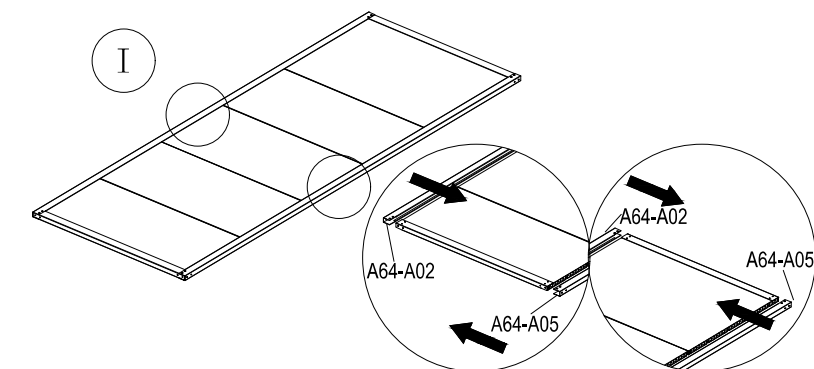


Note: Please kindly confirm the diagona distance "X" of the door should be same before assembling the screws.

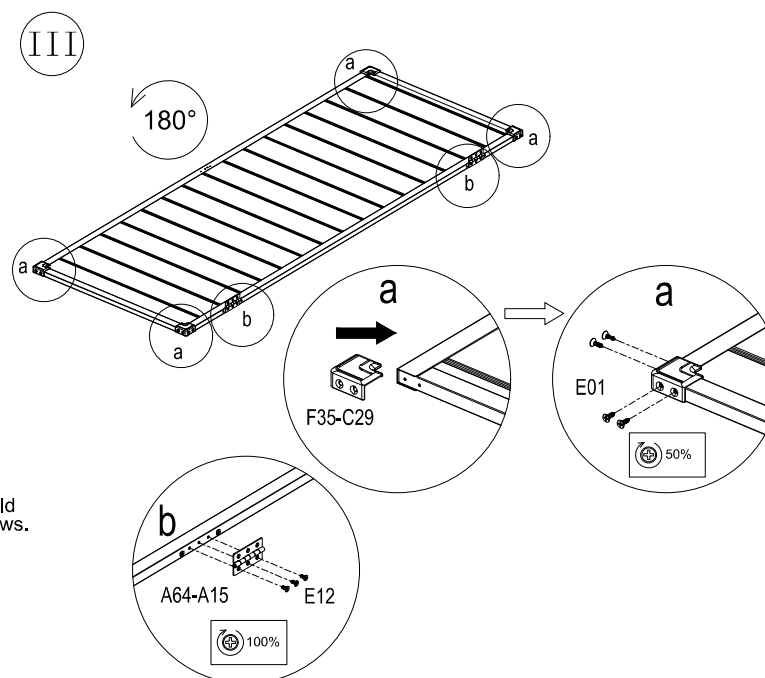




A86-C11 x2



A64-C32 x2




A64-C33 x2




(ST4.2x12)  
E02x8

## Pre-installed Triangle board

G

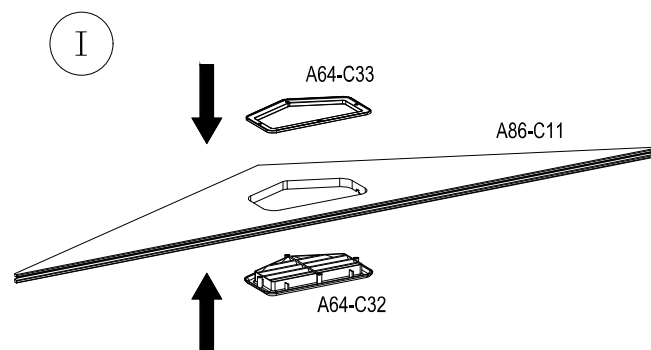

x2

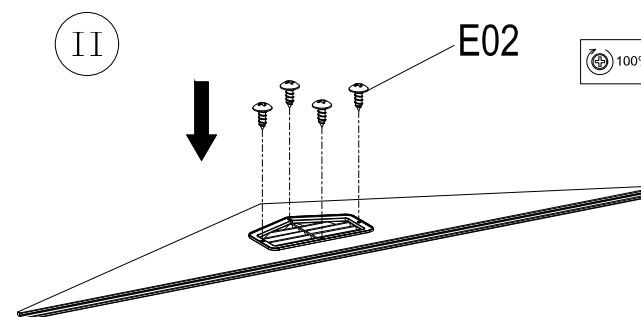





A86-A04 x2



A86-A05 x2



A64-A09 x2



A64-A10 x2



A64-A11 x4





(M6x40)  
E08x20





(M6x8.5)  
E09x20


## Pre-installed Roof supporting

# H

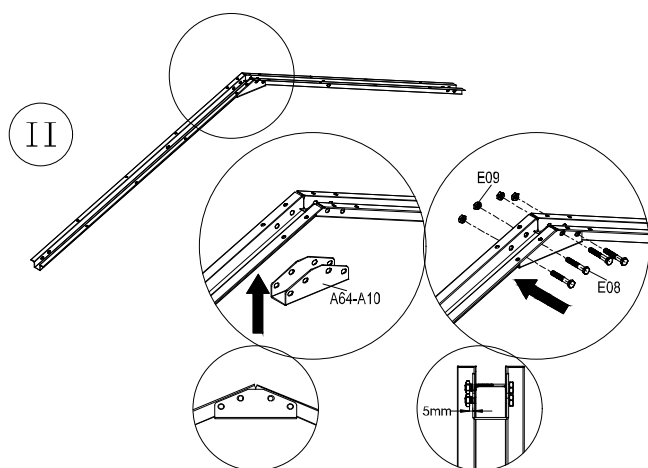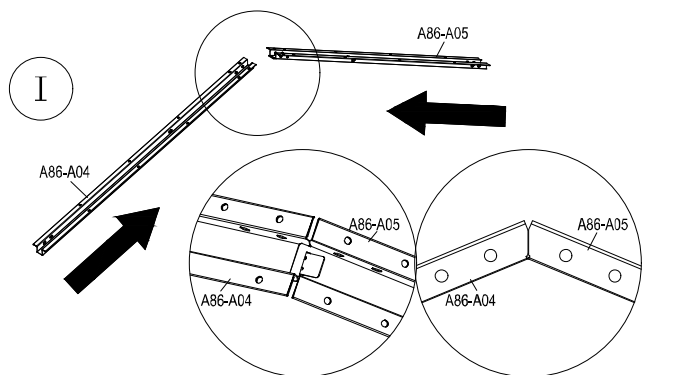

x2

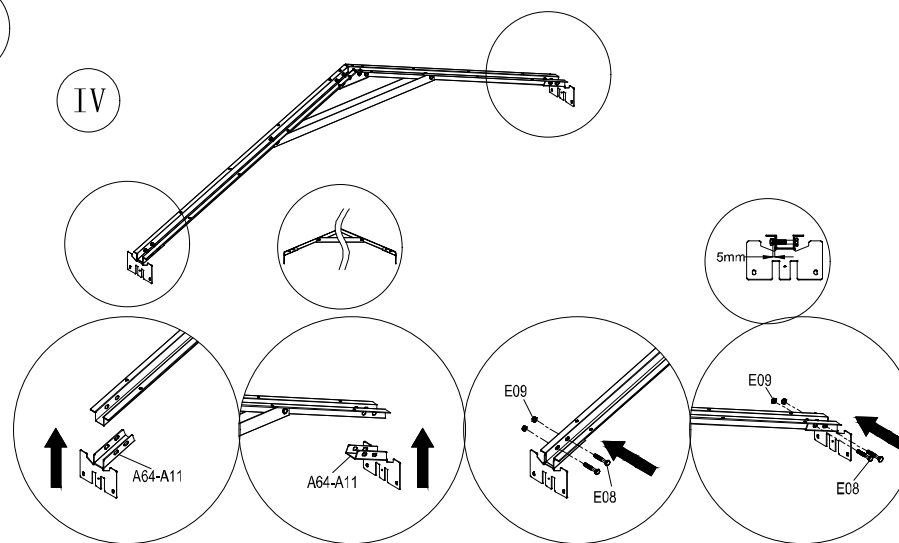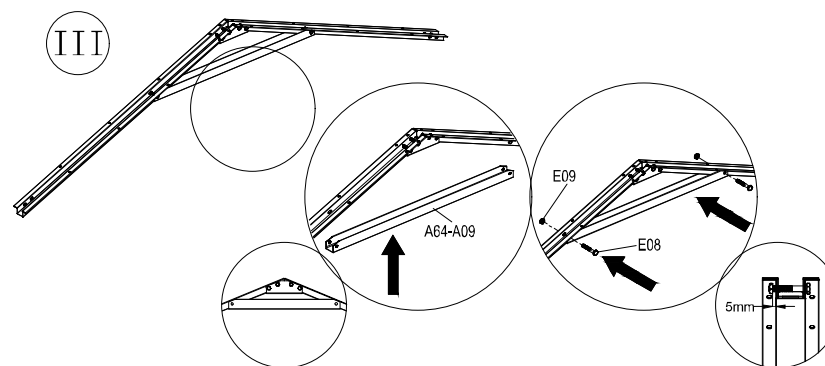

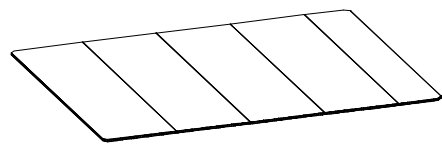

A



B68-C09 x2



B68-A05 x1







B68-C11 x2



A64-C30 x1




Please use rubber-knife to helping assembly.

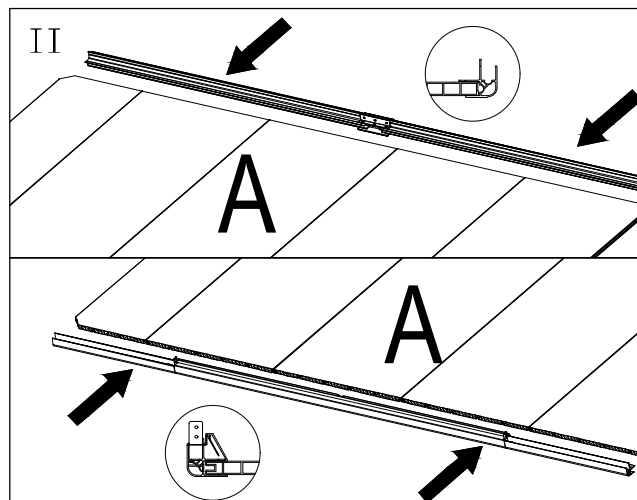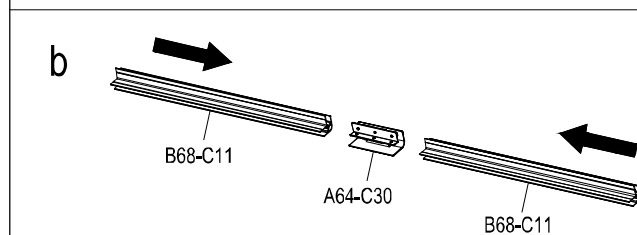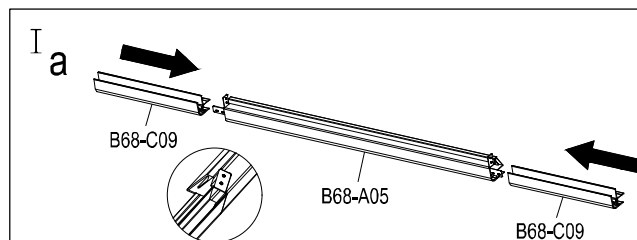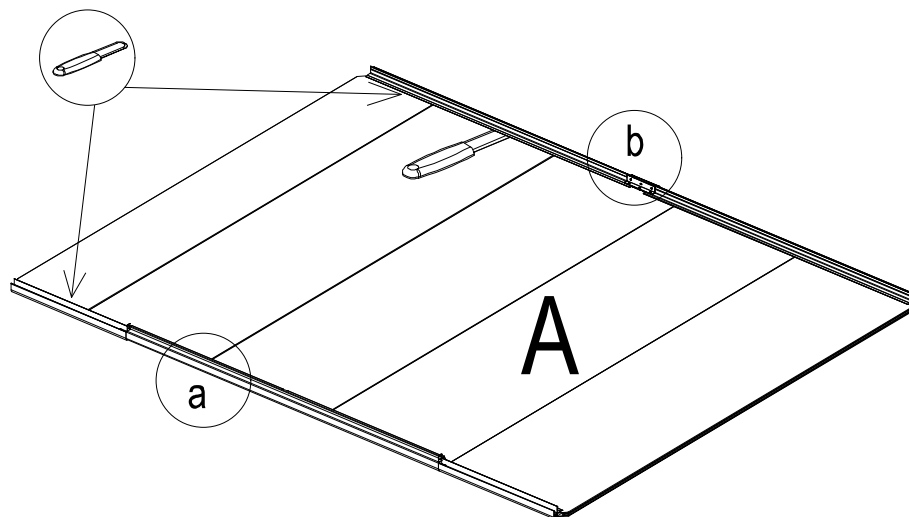





B68-C10 x2






F35-C27 x4




(ST4.2x12)  
E02x20




Please use rubber-knife to helping assembly.

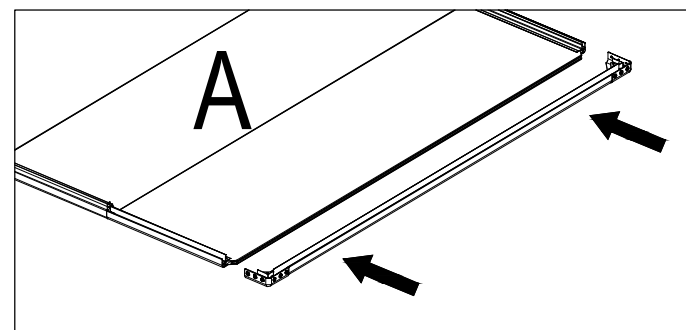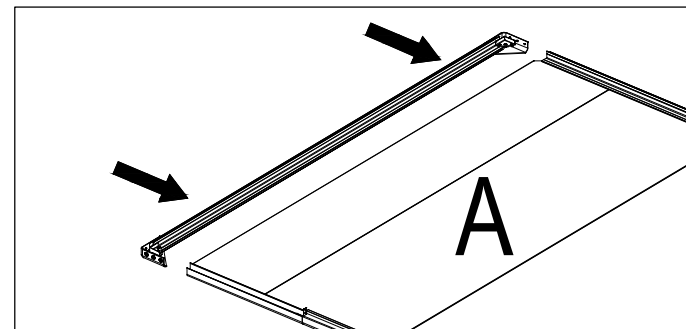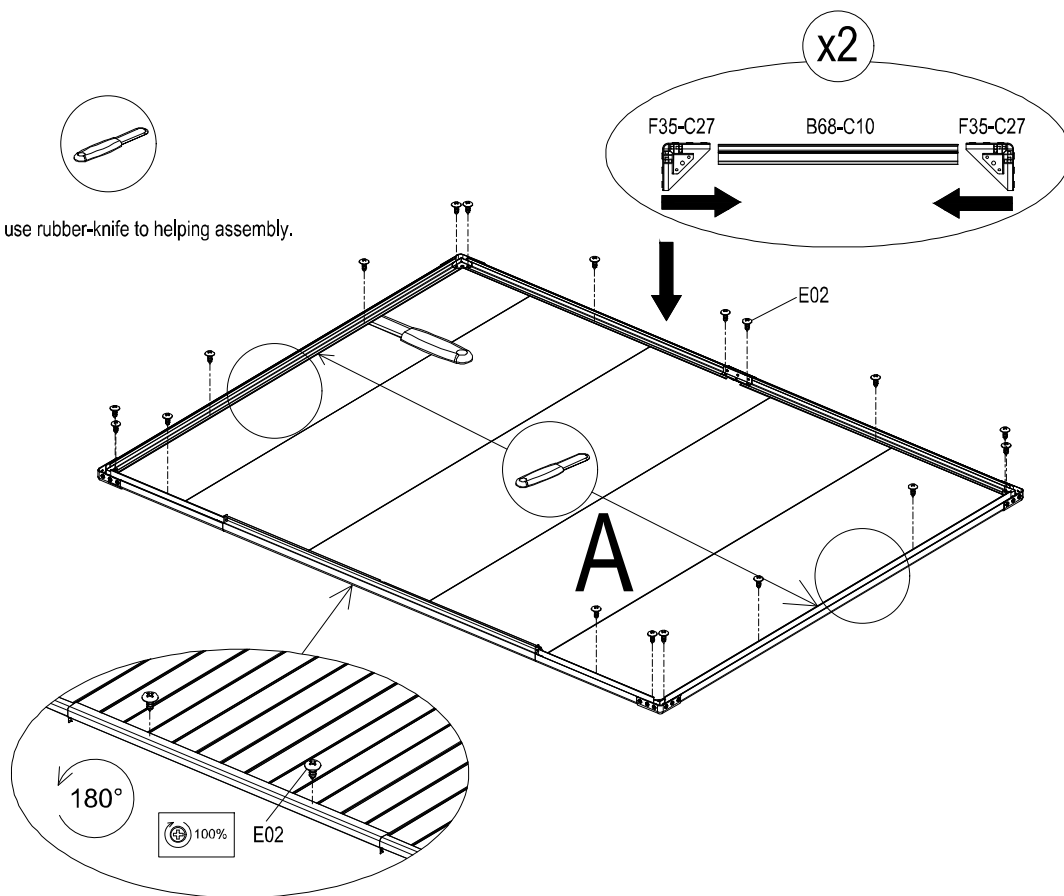

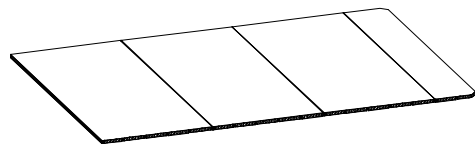




C x1

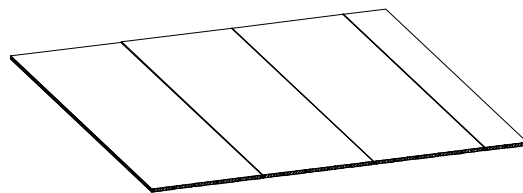


B x1




B68-C08 x1

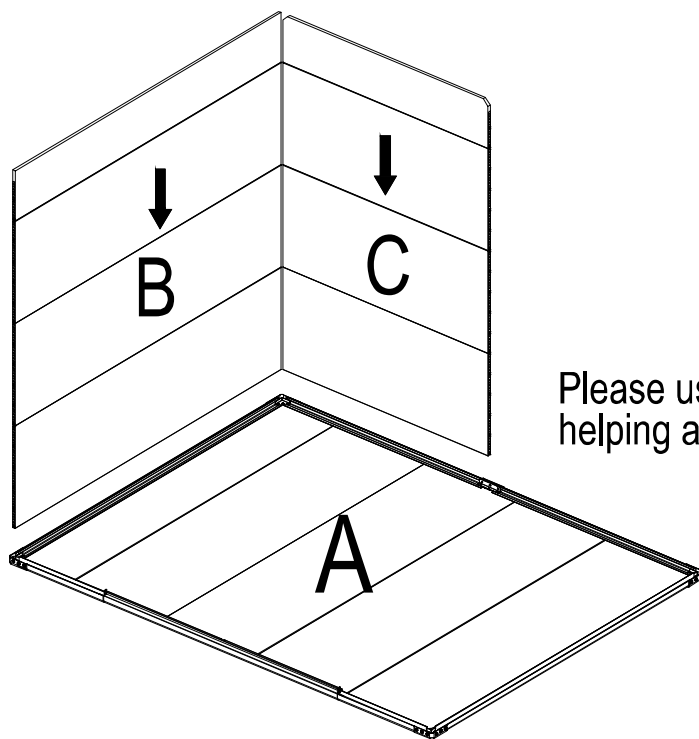

Please use rubber-knife to helping assembly.



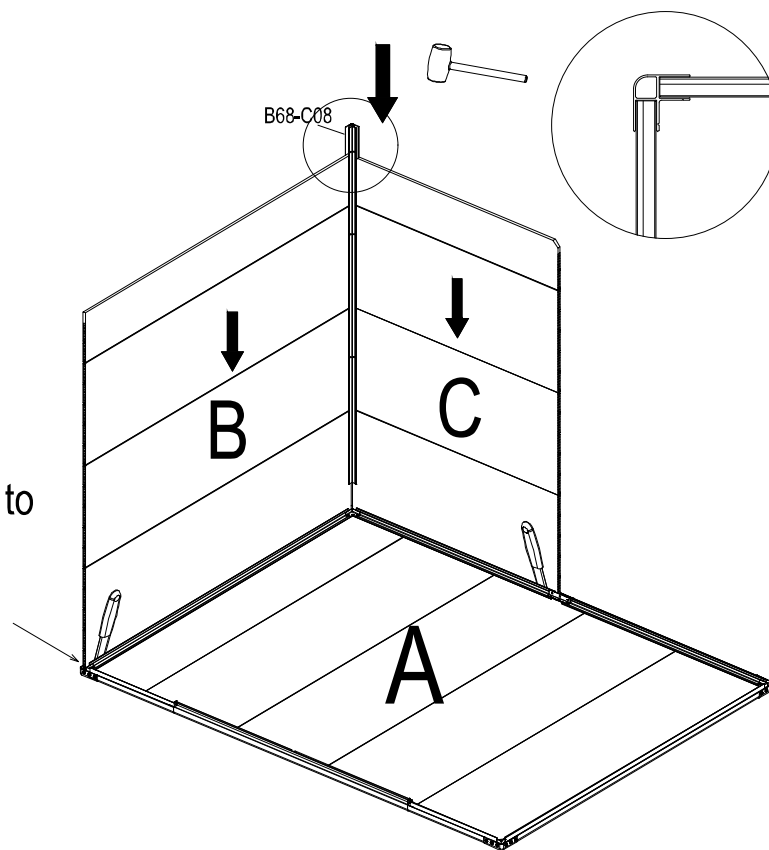


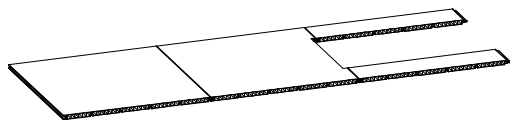


D x1




B68-C08 x1

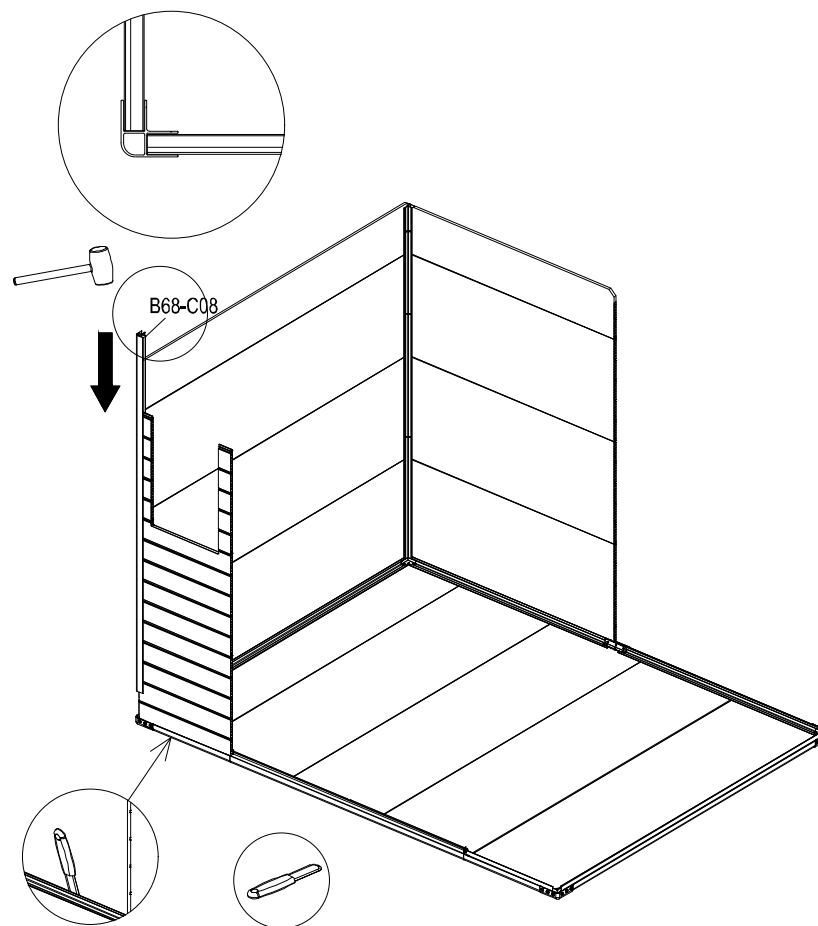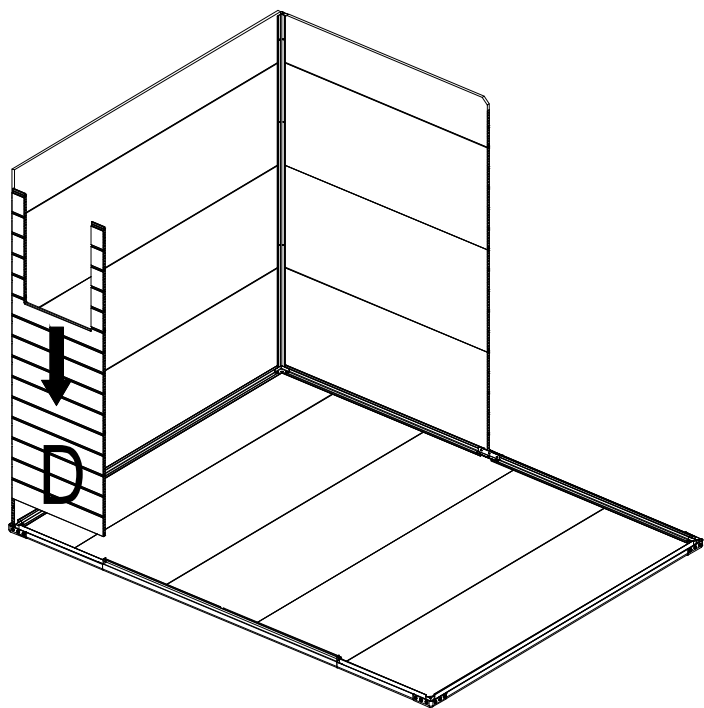


Please use rubber-knife to helping assembly.

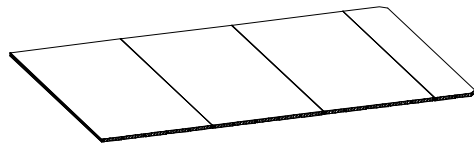




C x1

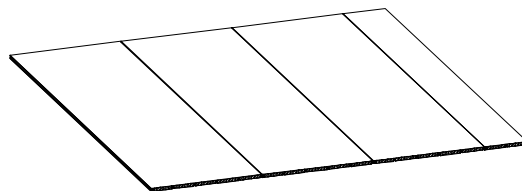


B x1



(ST4.2x12)  
E02x8

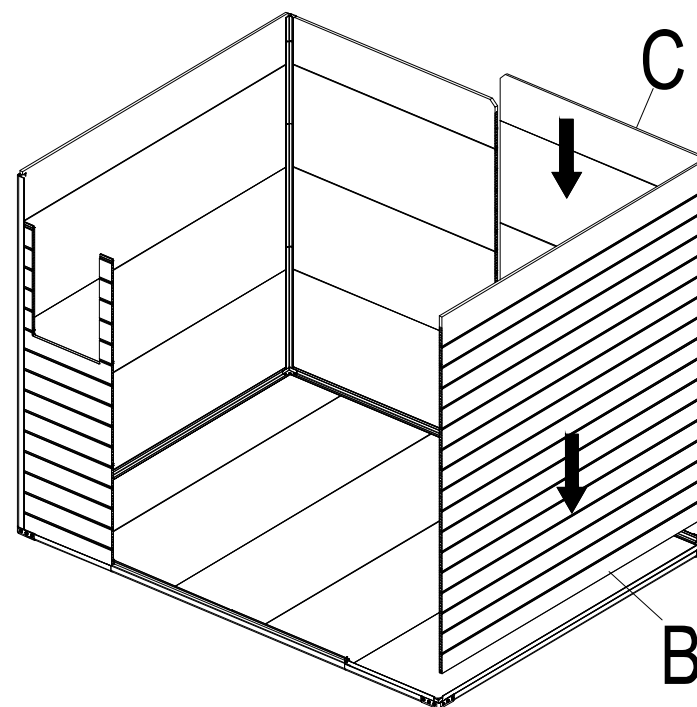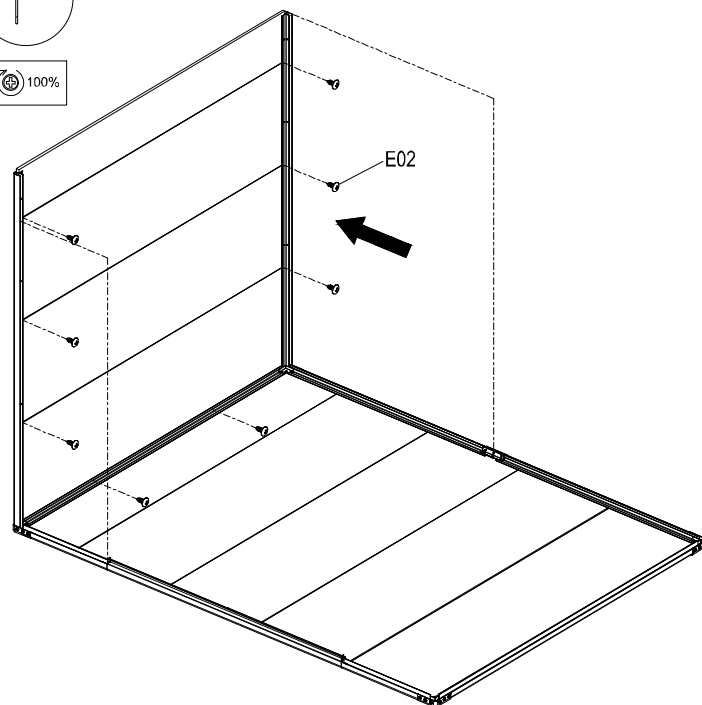


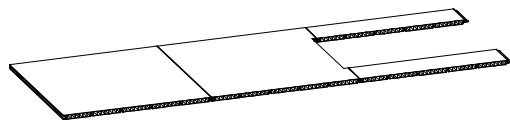

D x1



B68-C08 x1

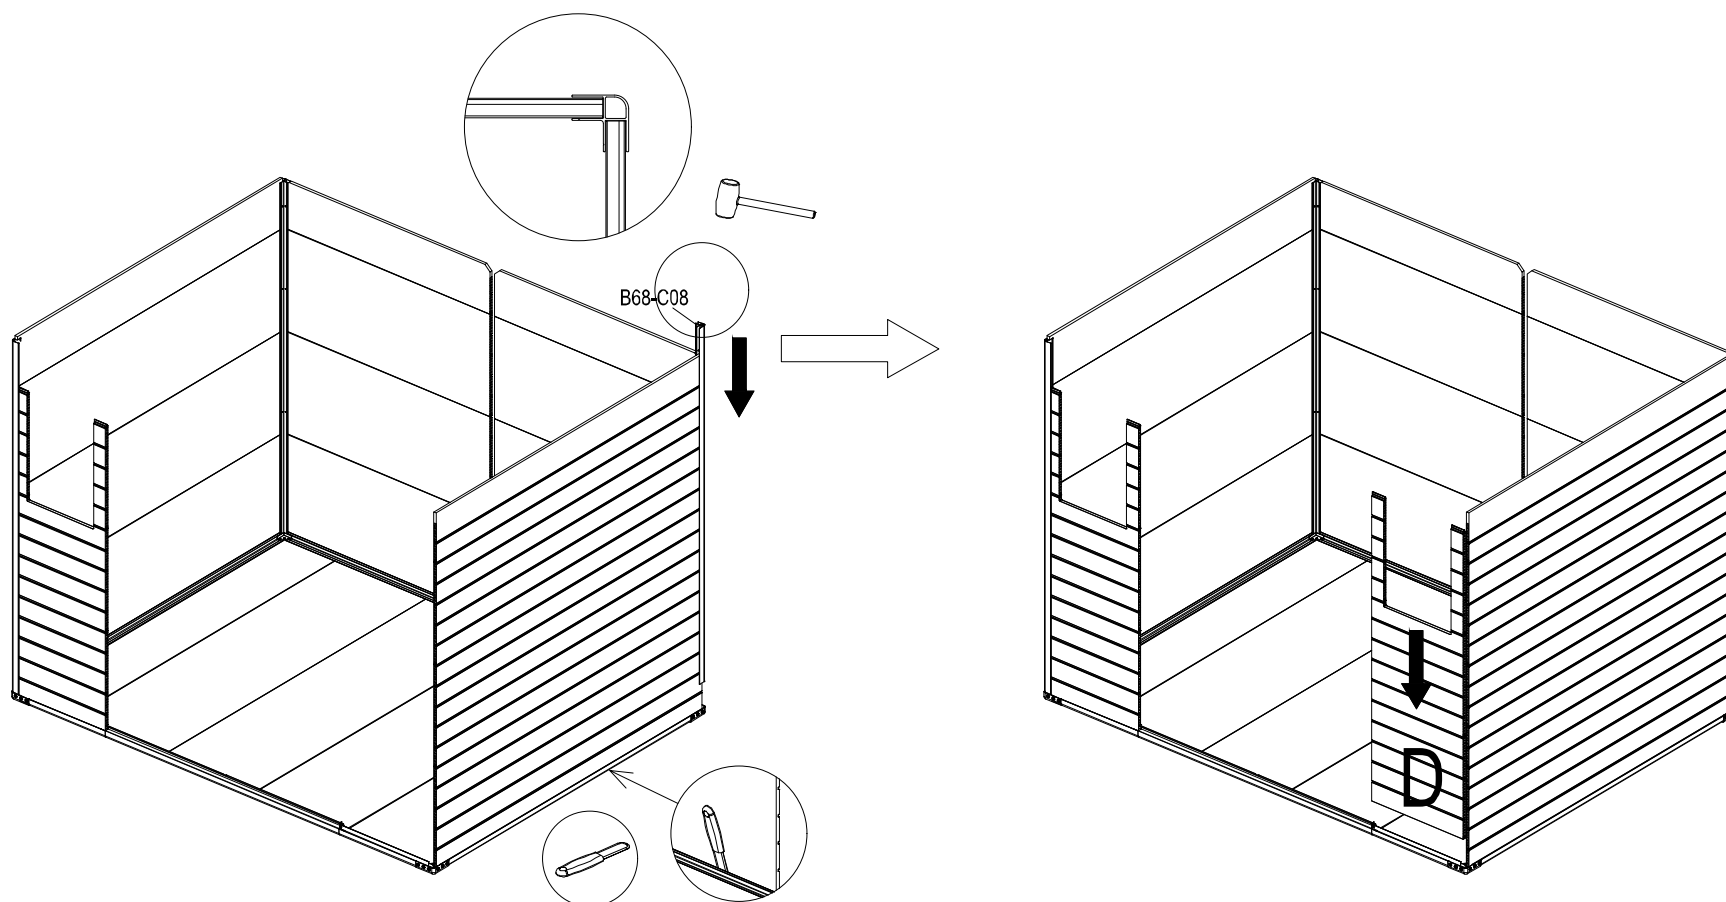




Please use rubber-knife to helping assembly.



B68-C08 x1




(ST4.2x12)  
E02x8

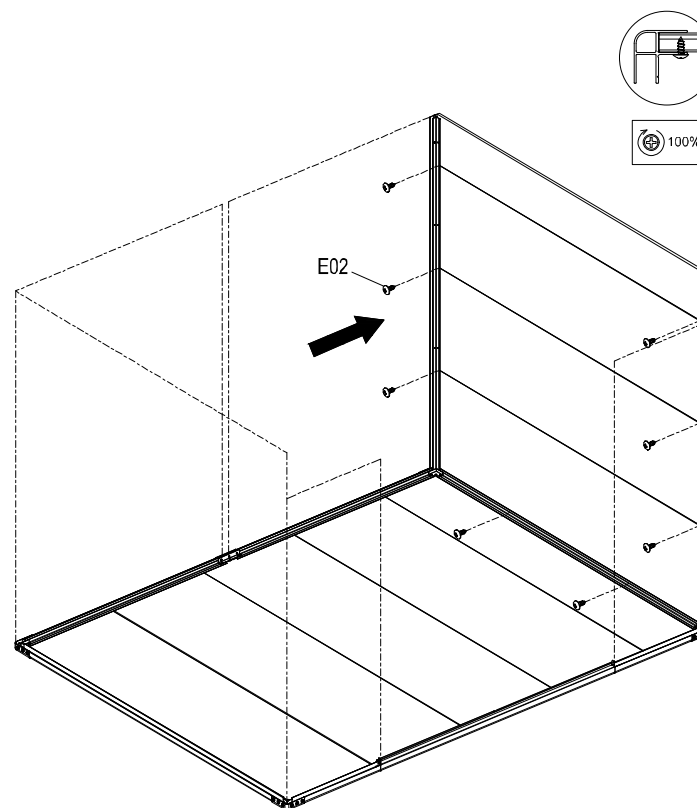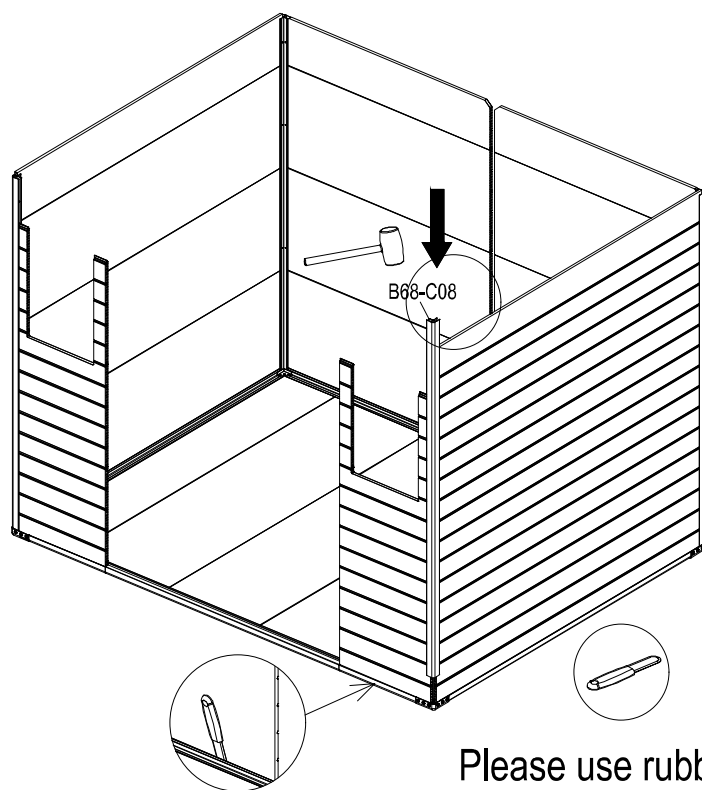

Please use rubber-knife to helping assembly.








B68-A04 x1





B68-C12 x1

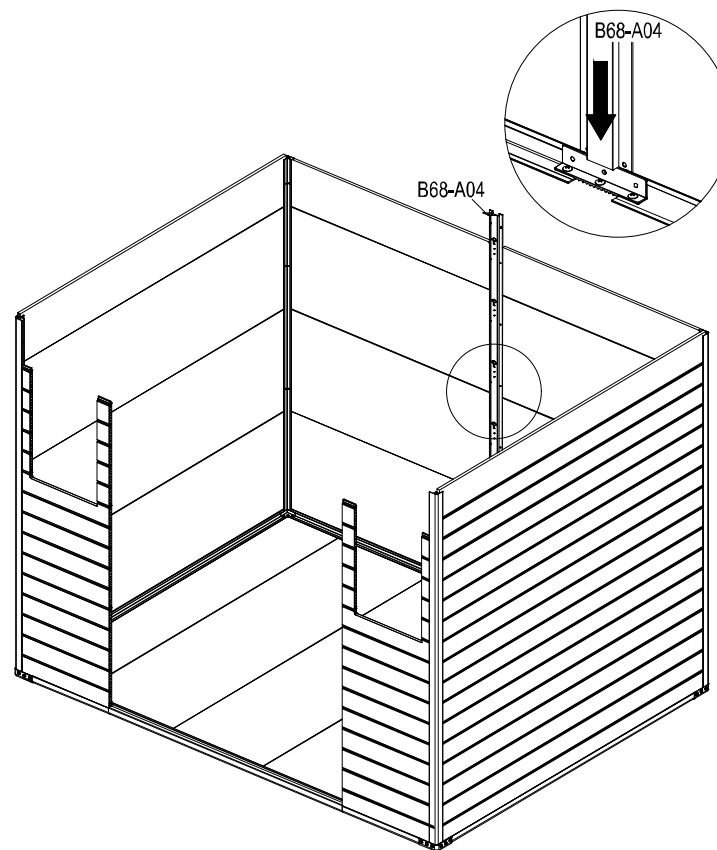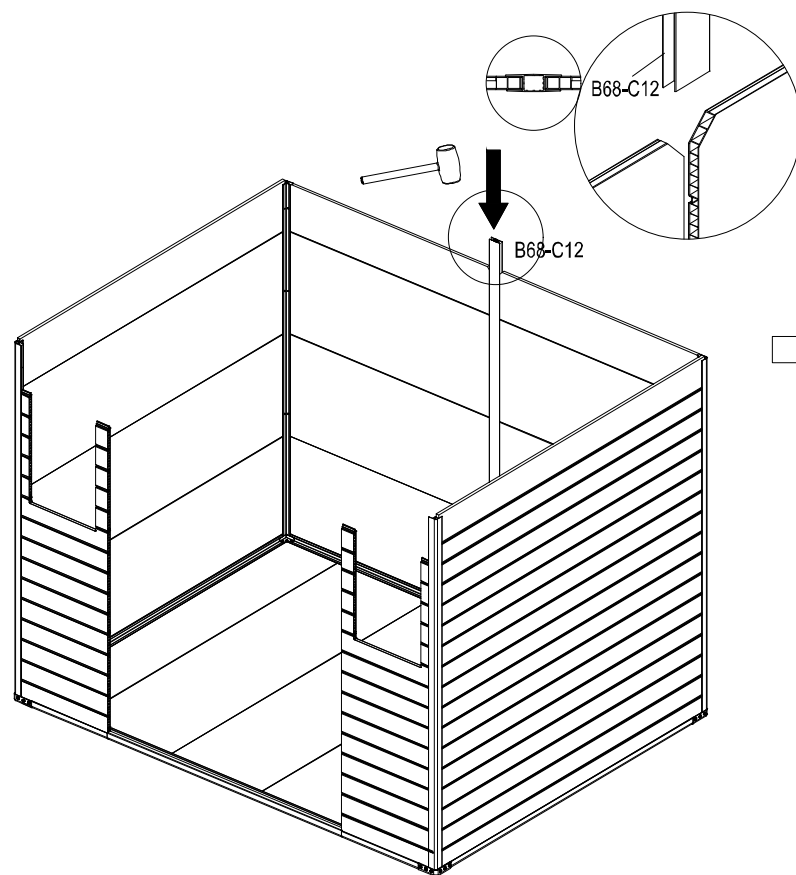



(ST4.2x12)  
E02x29

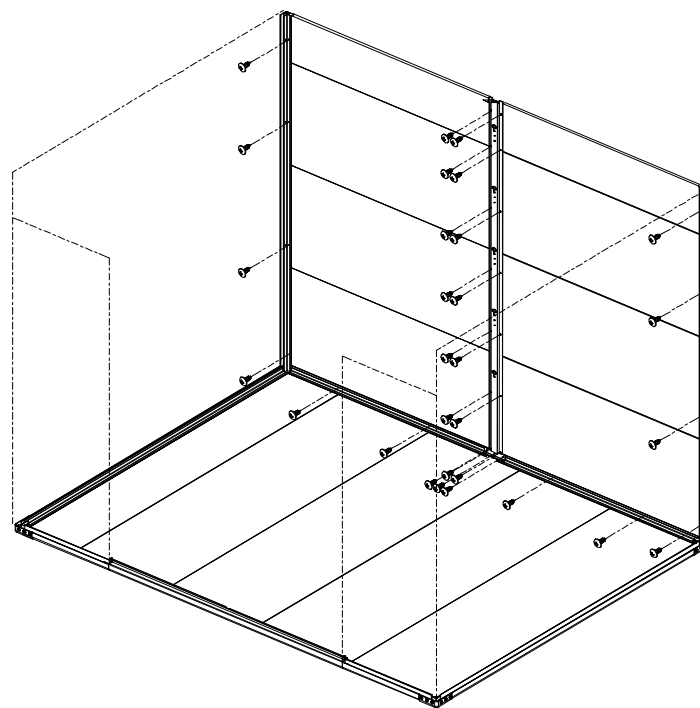







B68-A01 x1




B68-A02 x1



B68-A03 x1

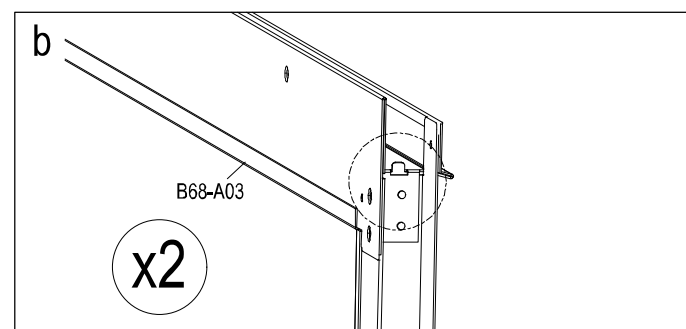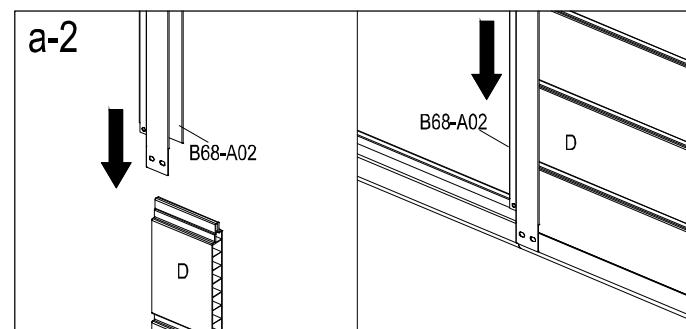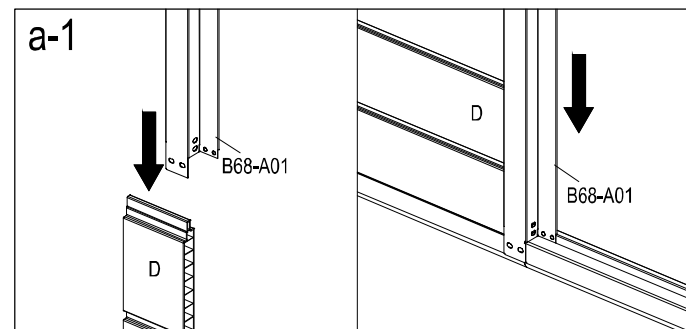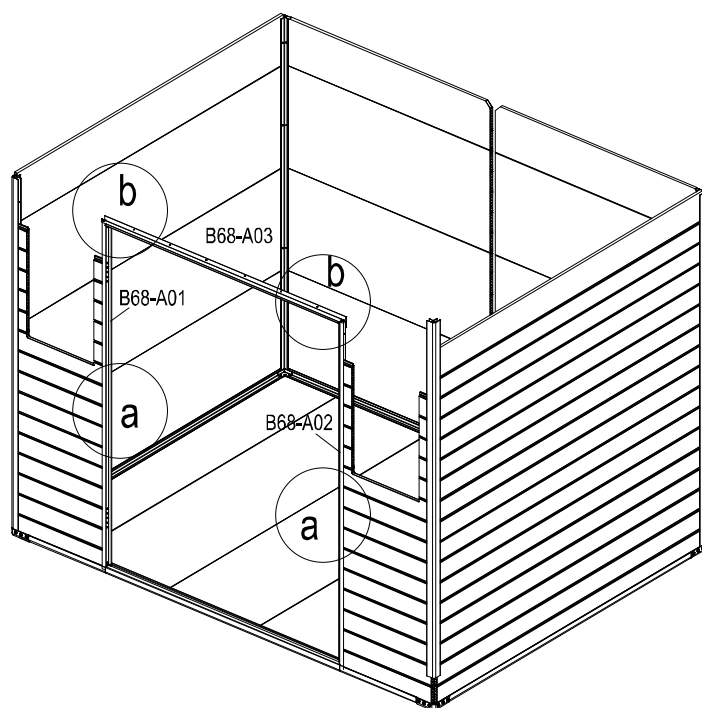








B68-C01L x1




B68-C01R x1




(ST4.2x12)  
E02x12

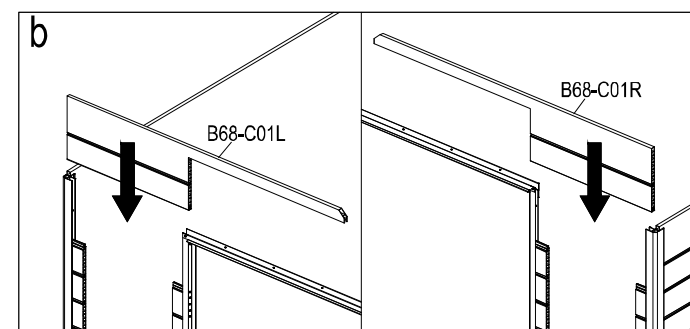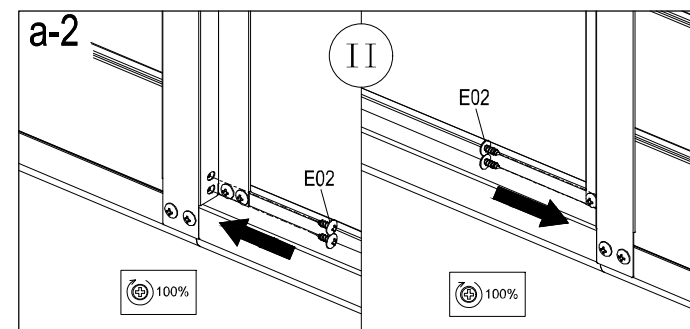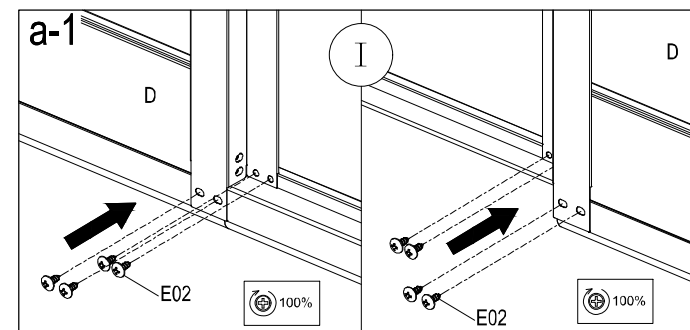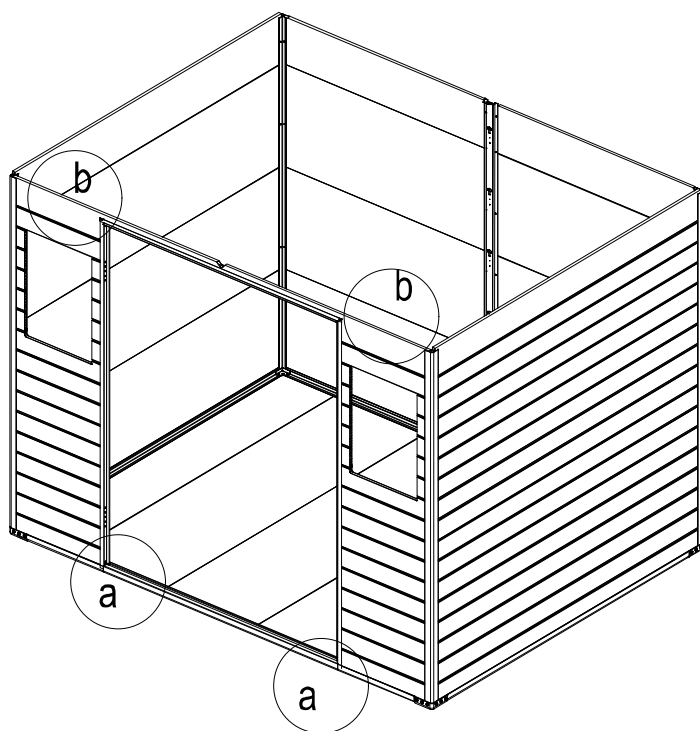




F35-C31 x2






F35-C33 x2




F35-C32 x2



(ST4.2x12)  
E02x36

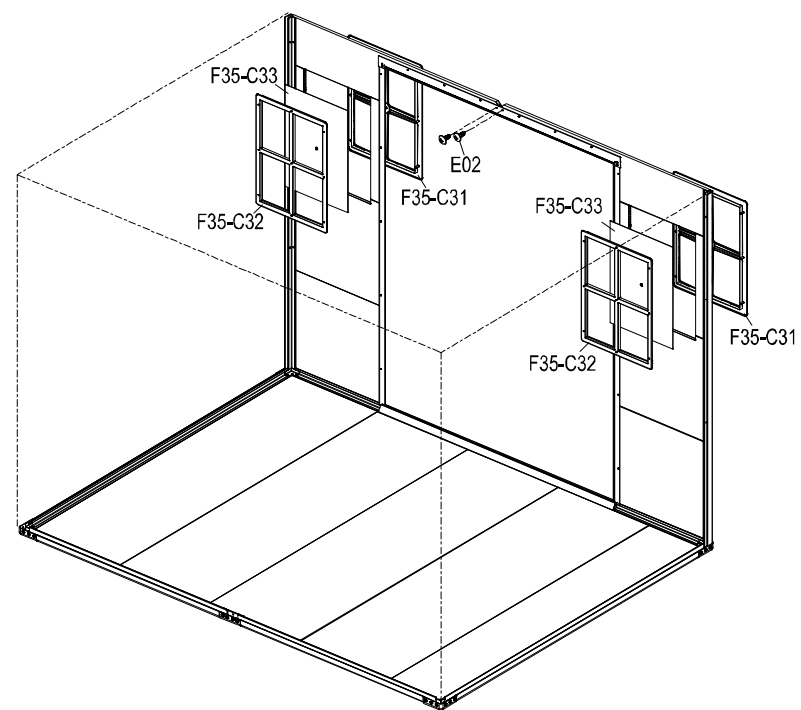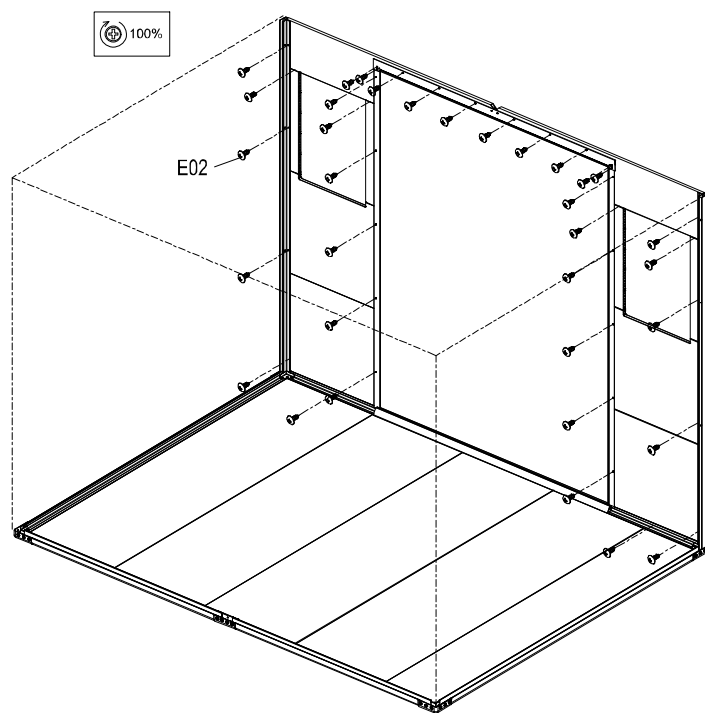





A86-A06 x2



A86-A07 x2




(ST4.2x12)  
E02x18

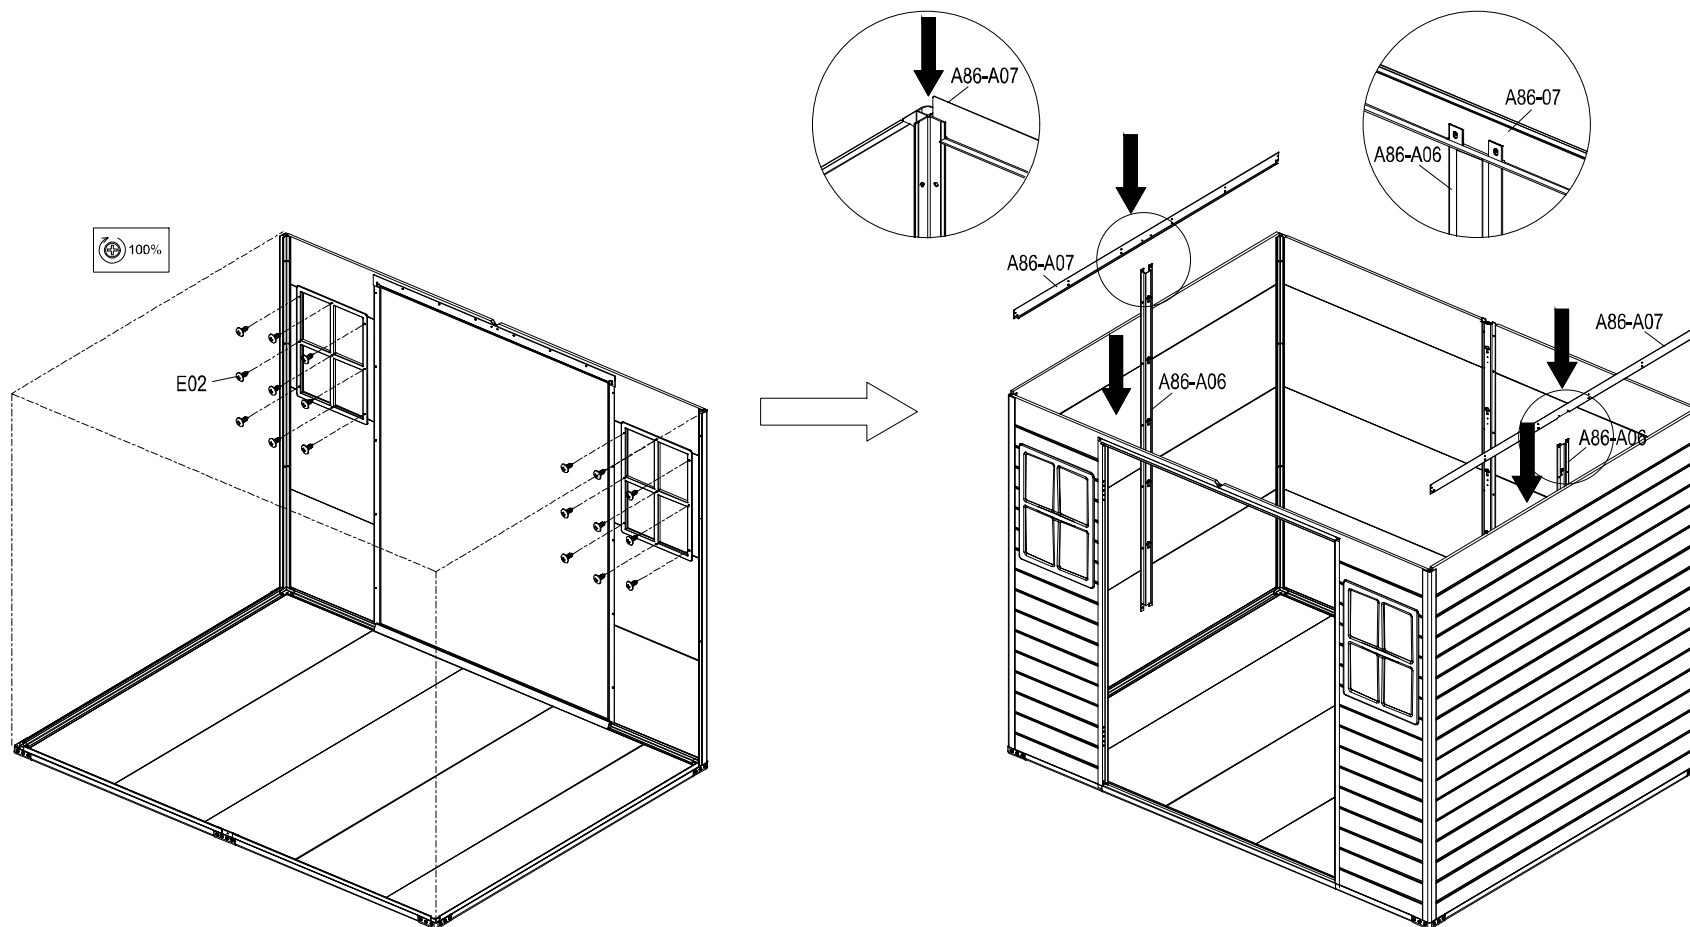



(ST4.2x12)  
E02x48

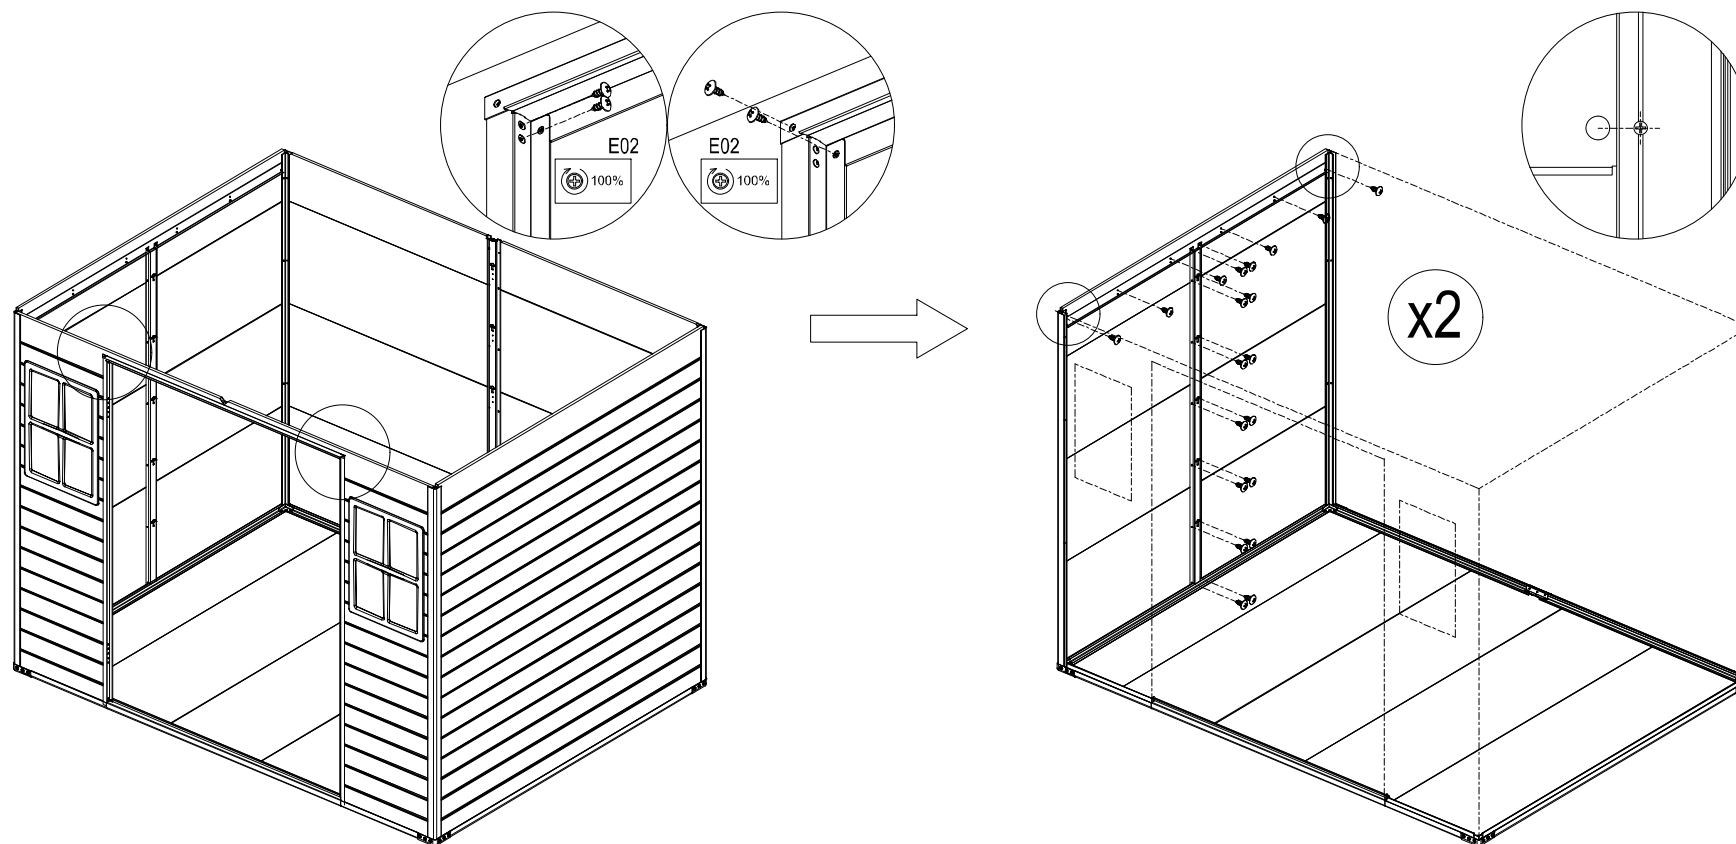





G x2





B68-C13 x2




(ST4.2x12)  
E02x8

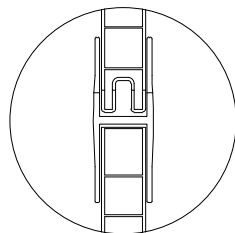


B68-C13

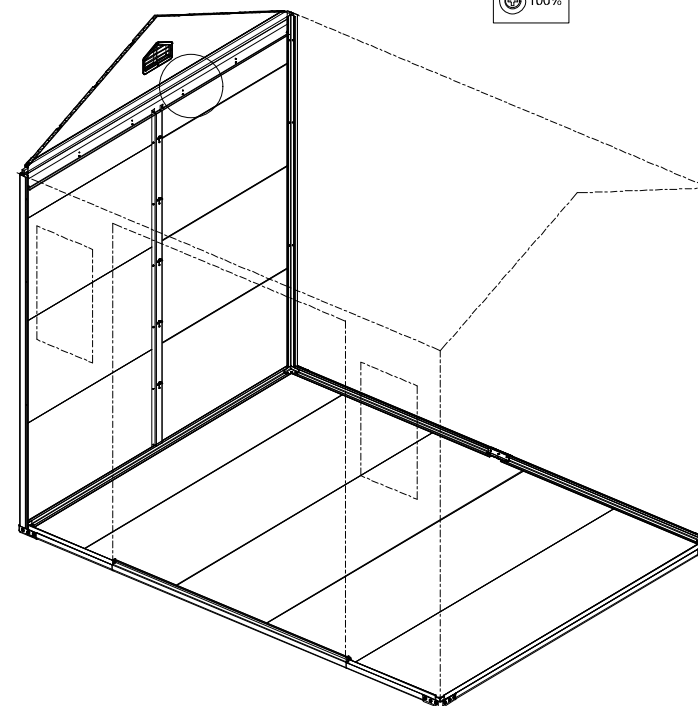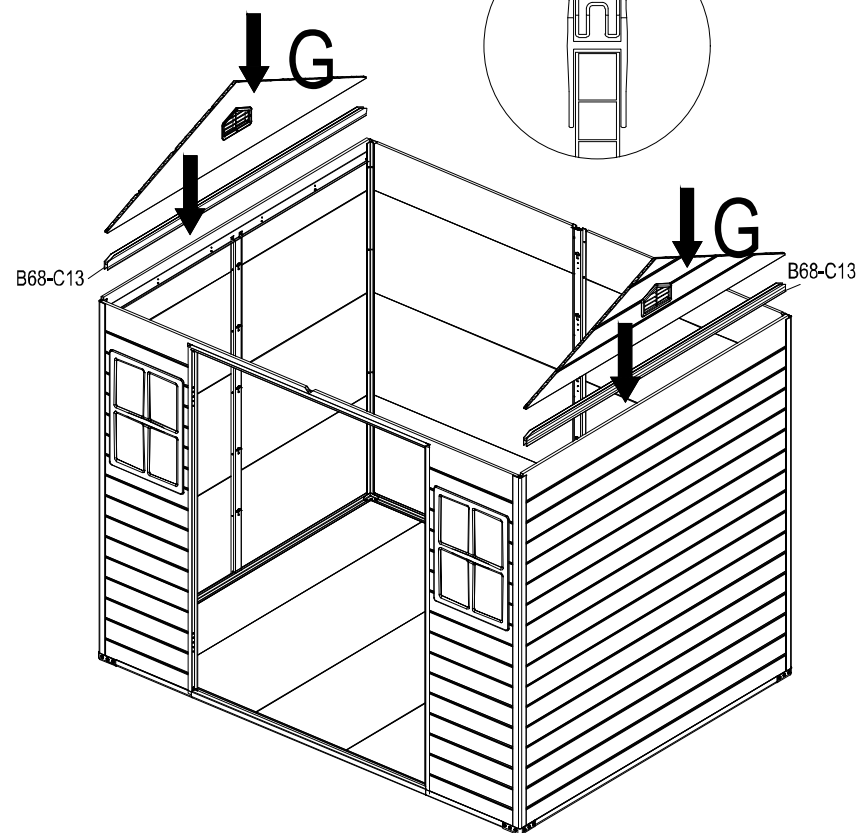








A64-A12 x4







(ST4.2x12)  
E02x8



B68-C12

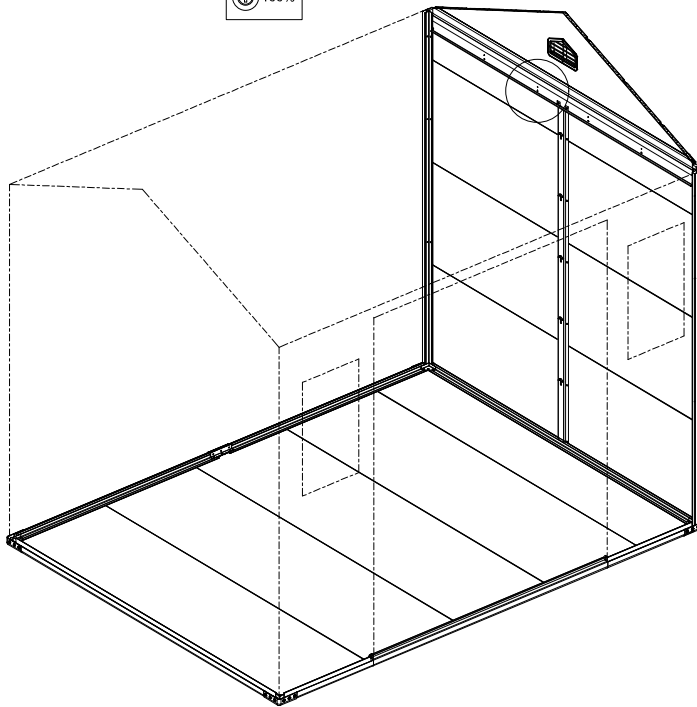

Note: You should assemble the front parts firstly, Please kindly confirm the distance of "K1" is same as the distance of "K"

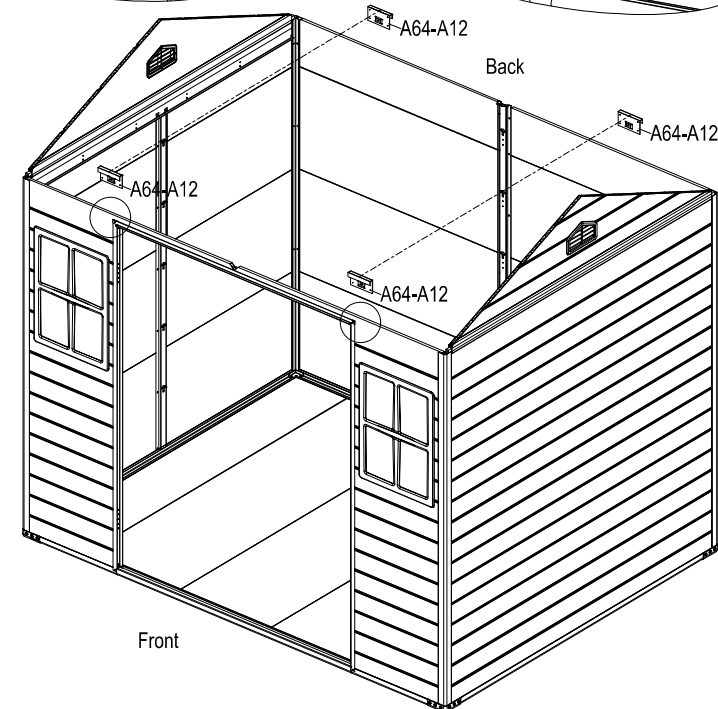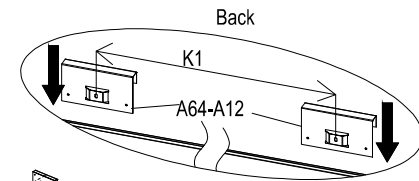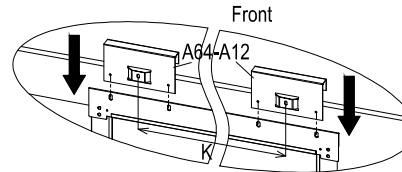









A86-C15 x4




A86-C16 x4



H x2

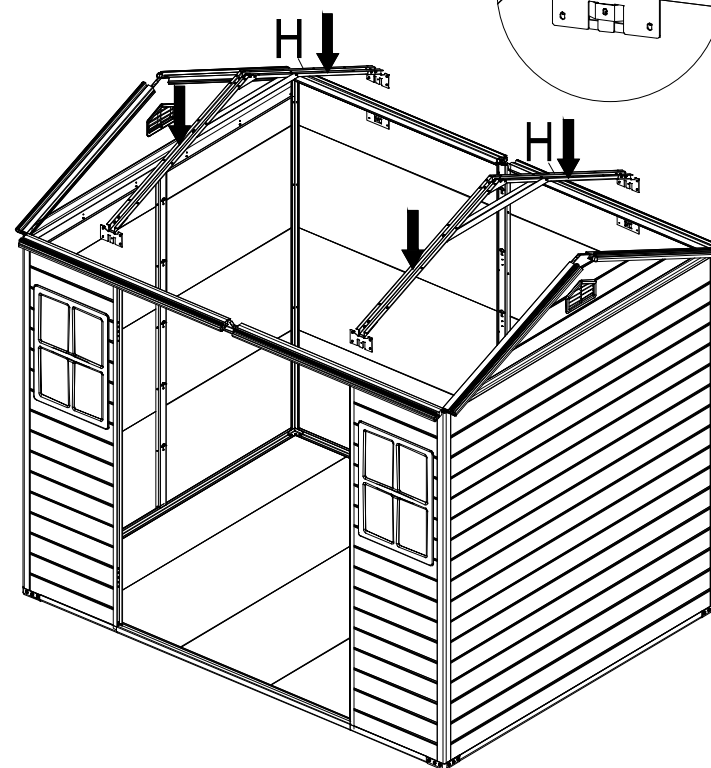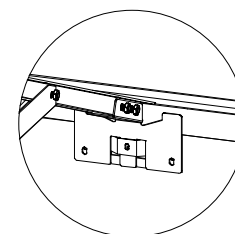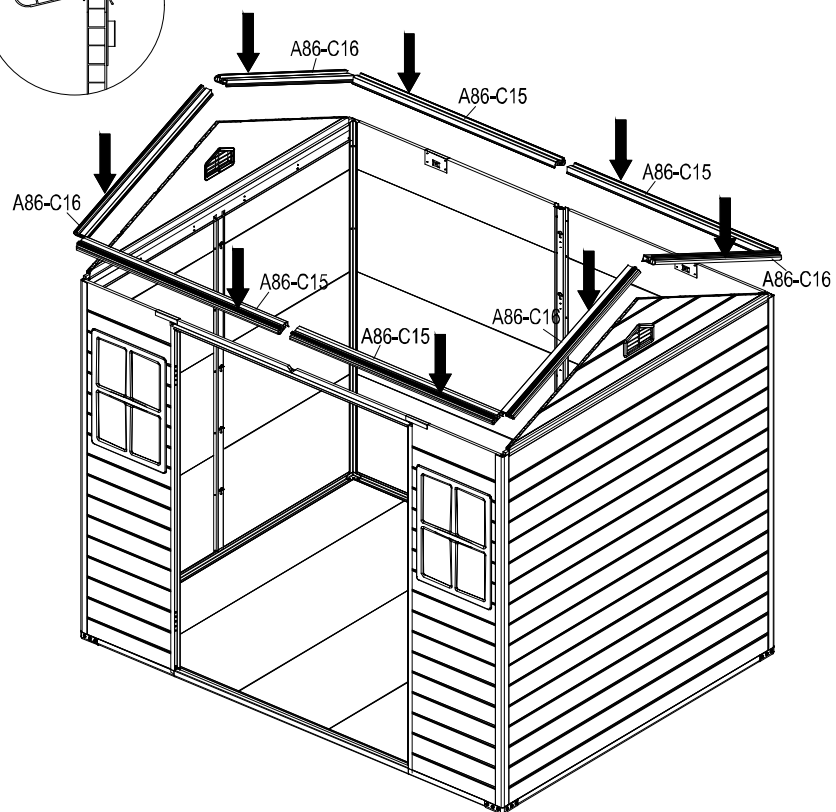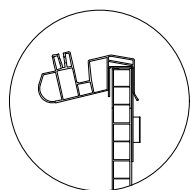


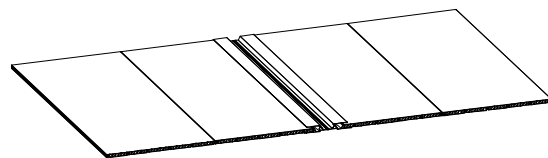

E x2




A86-C24 x2




(ST4.2x12)  
E02x12


I

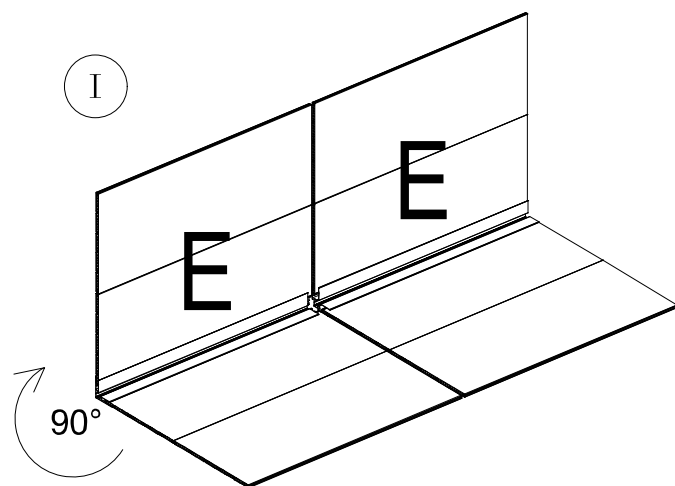


III

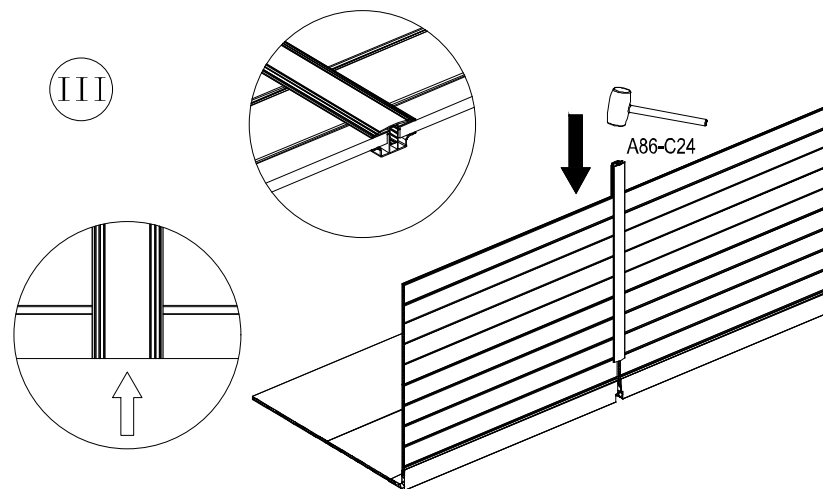


II

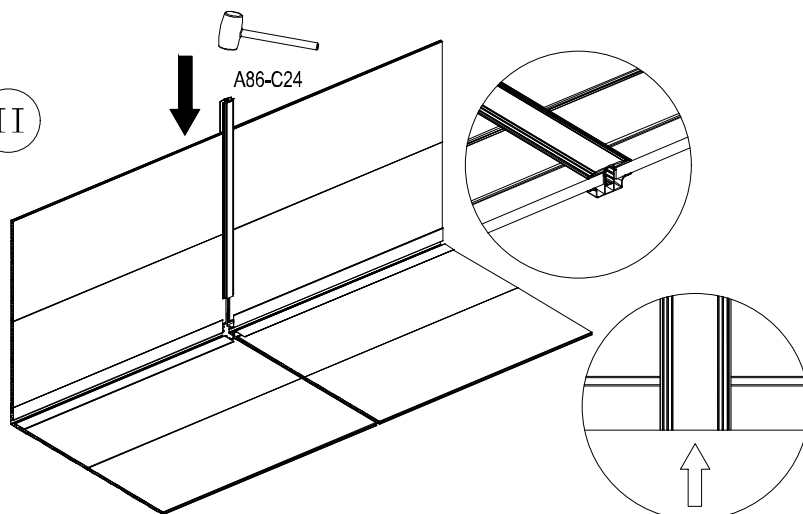

IV

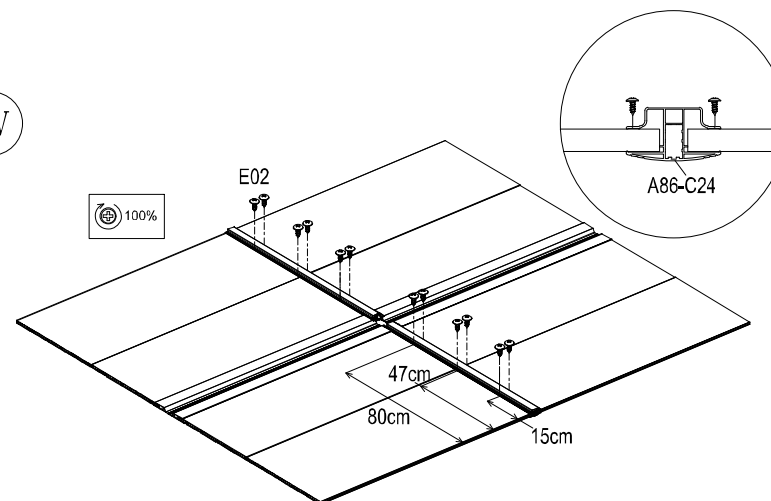



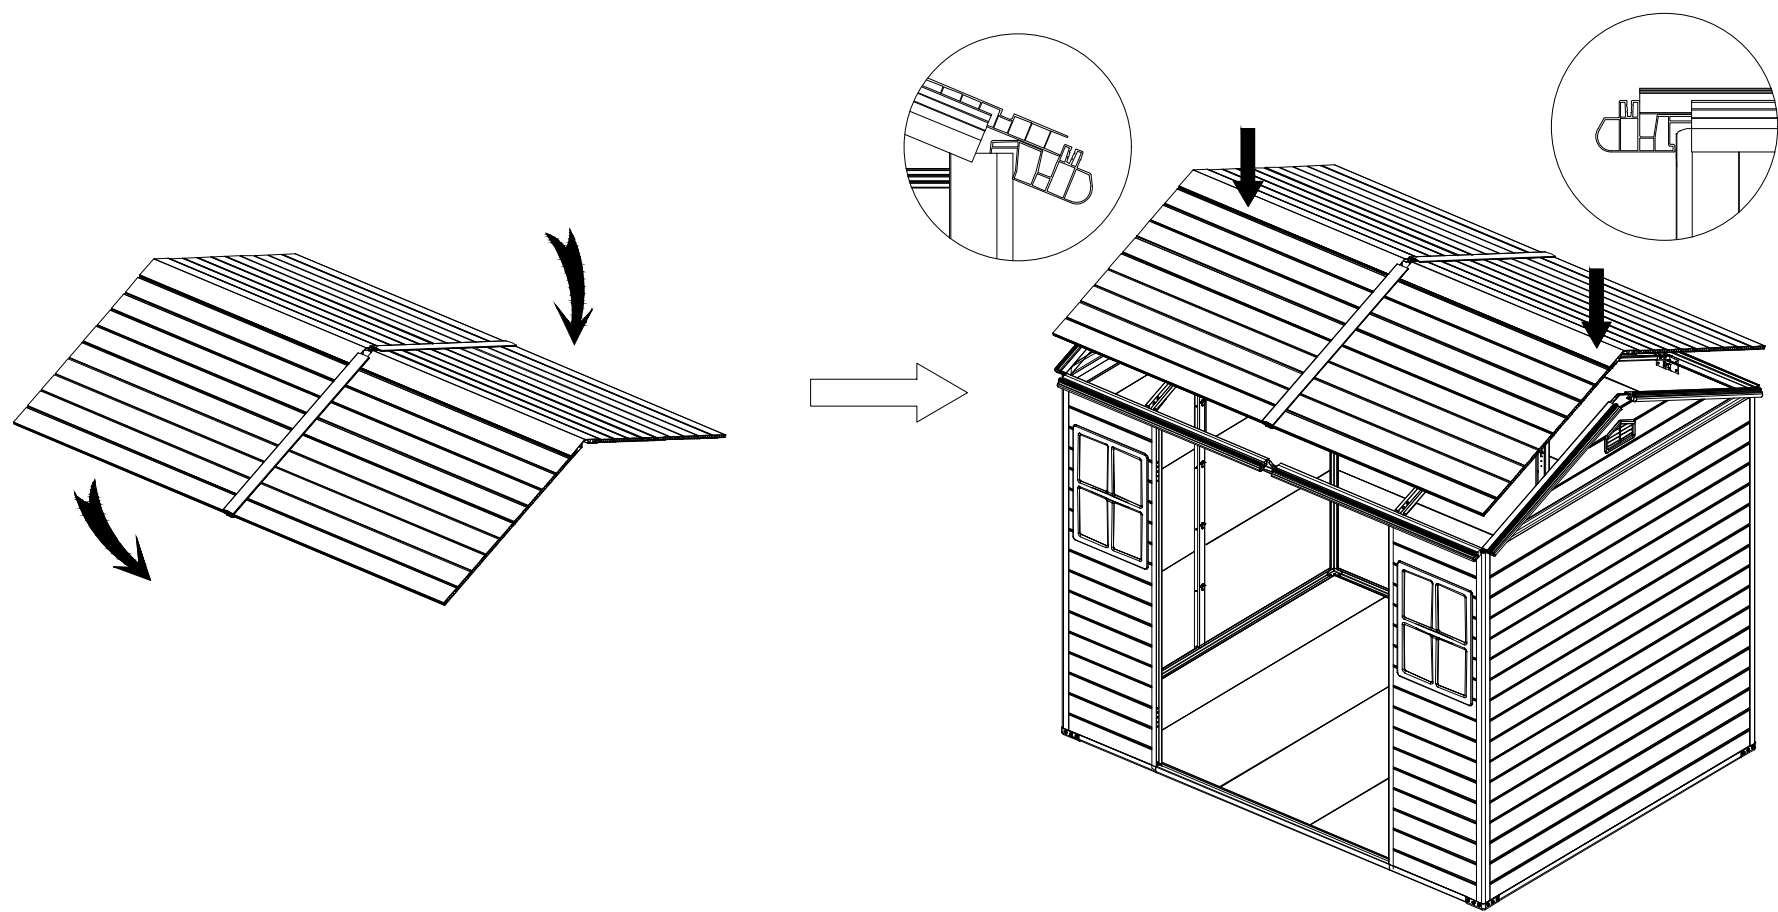




A86-C17 x4




A86-C18 x4

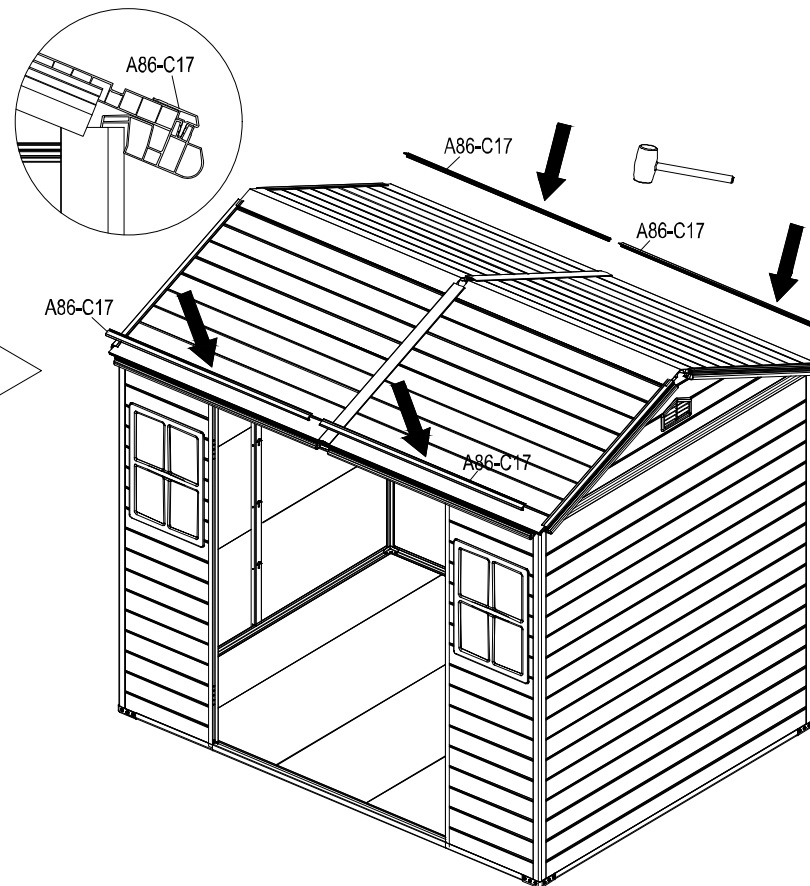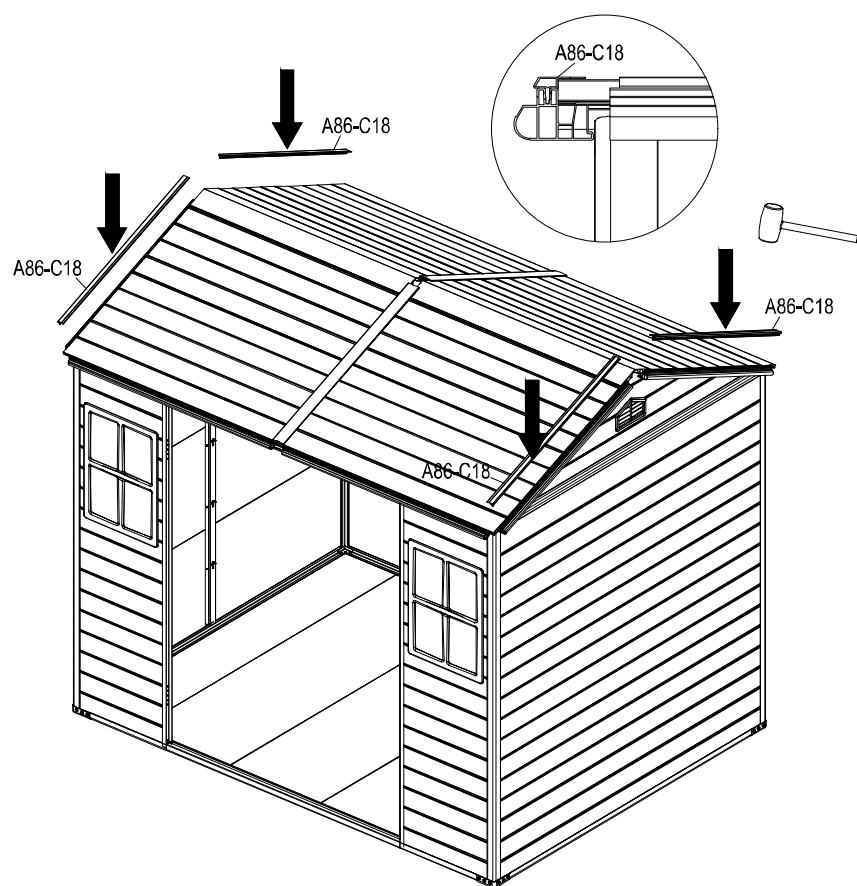




A64-C34 x1






A64-A13 x1




(ST4.2x55)  
E07x4







(ST4.2x12)  
E02x16

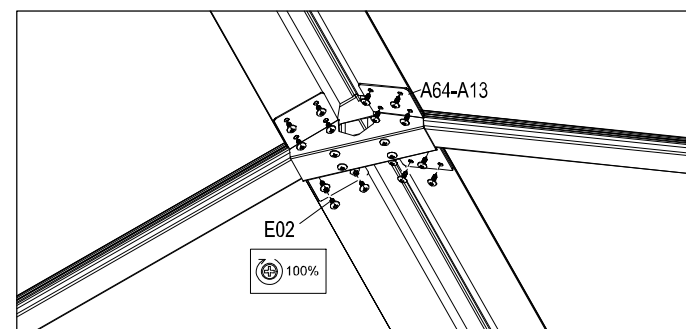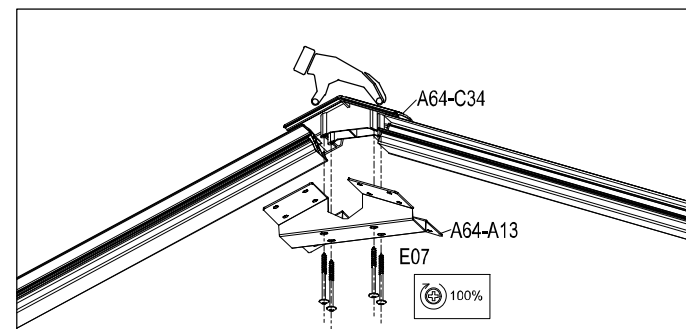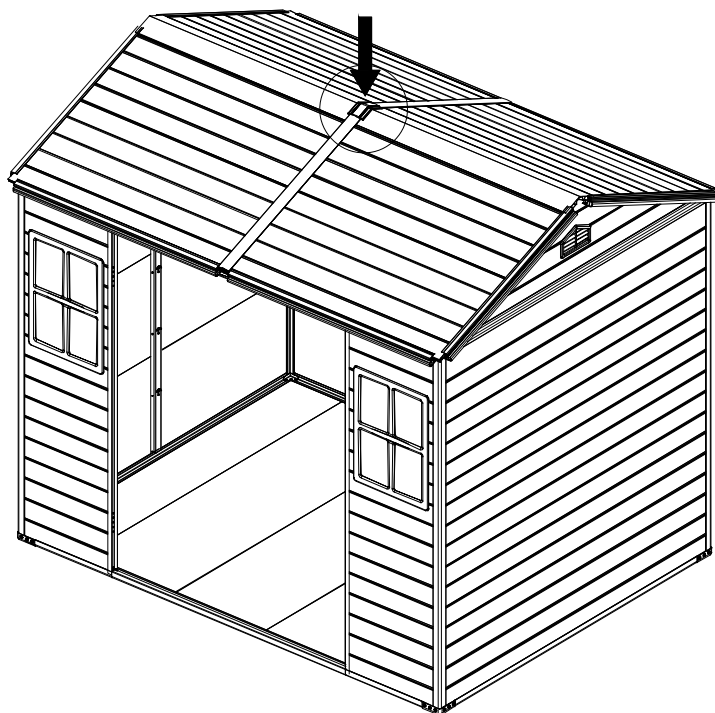




(ST4.2x12)  
E02x20

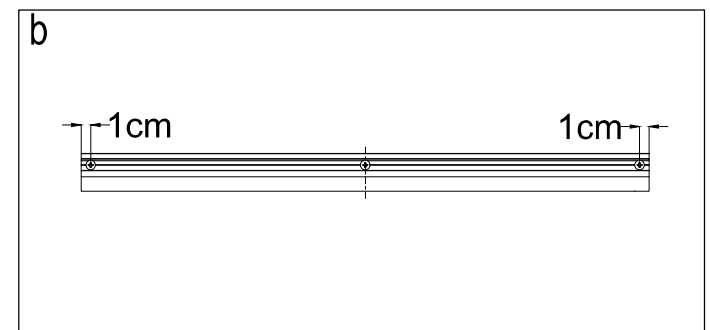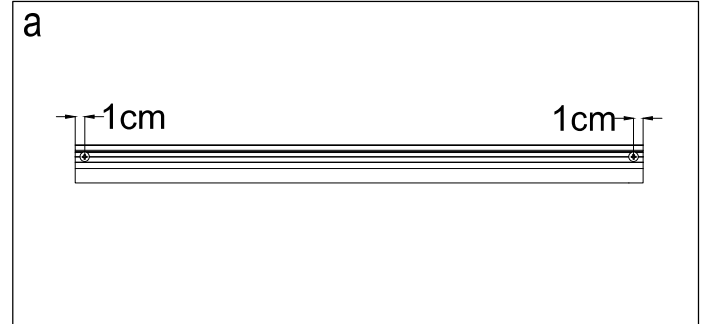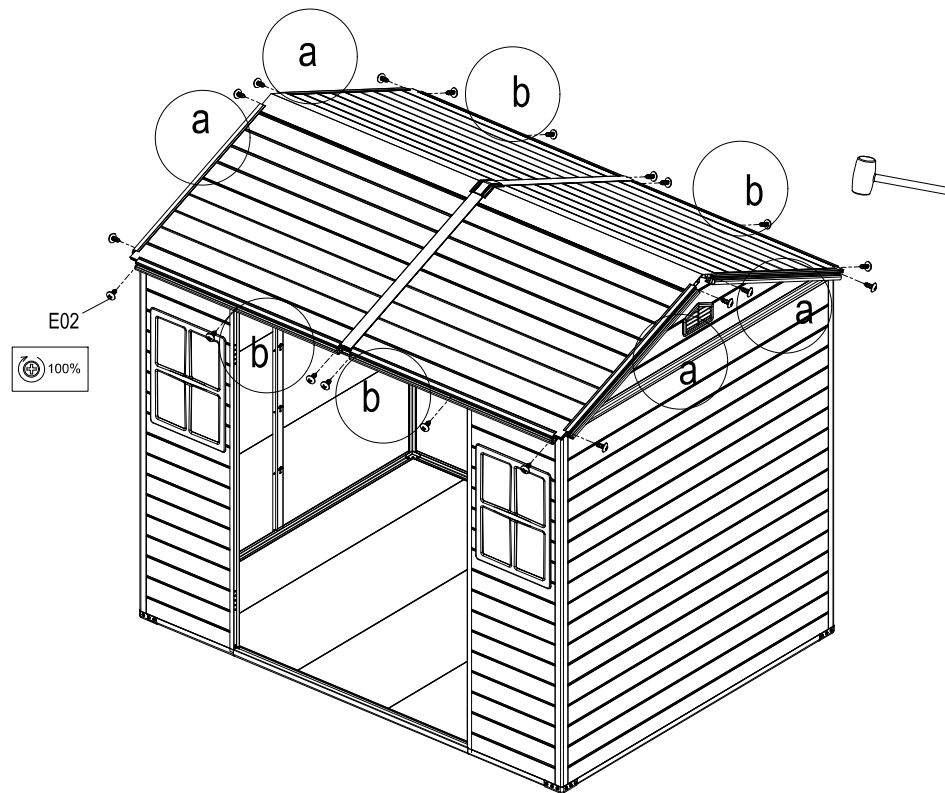





F35-C30 x4







A64-C31 x2



A64-C29 x2




(ST4.2x12)  
E02x32

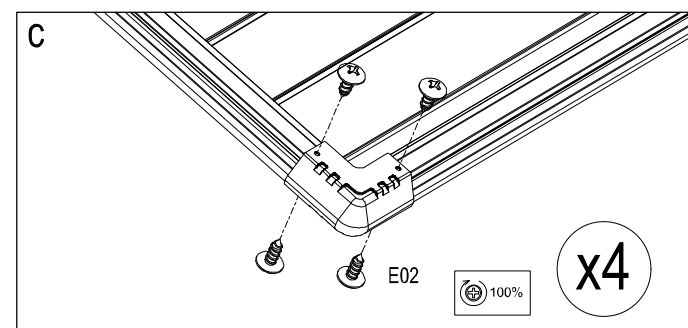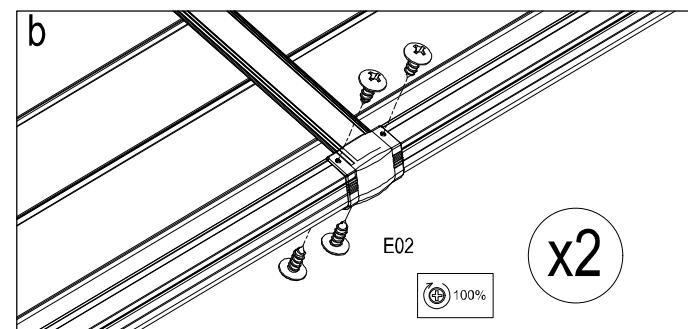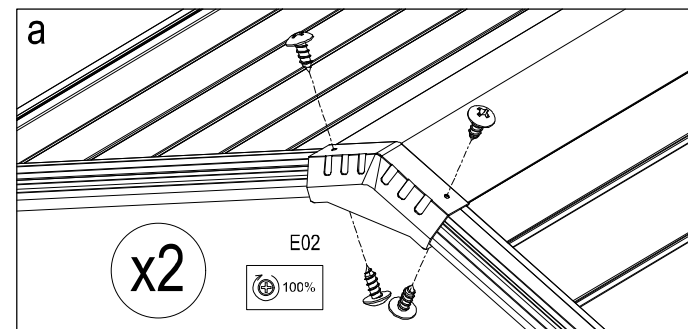
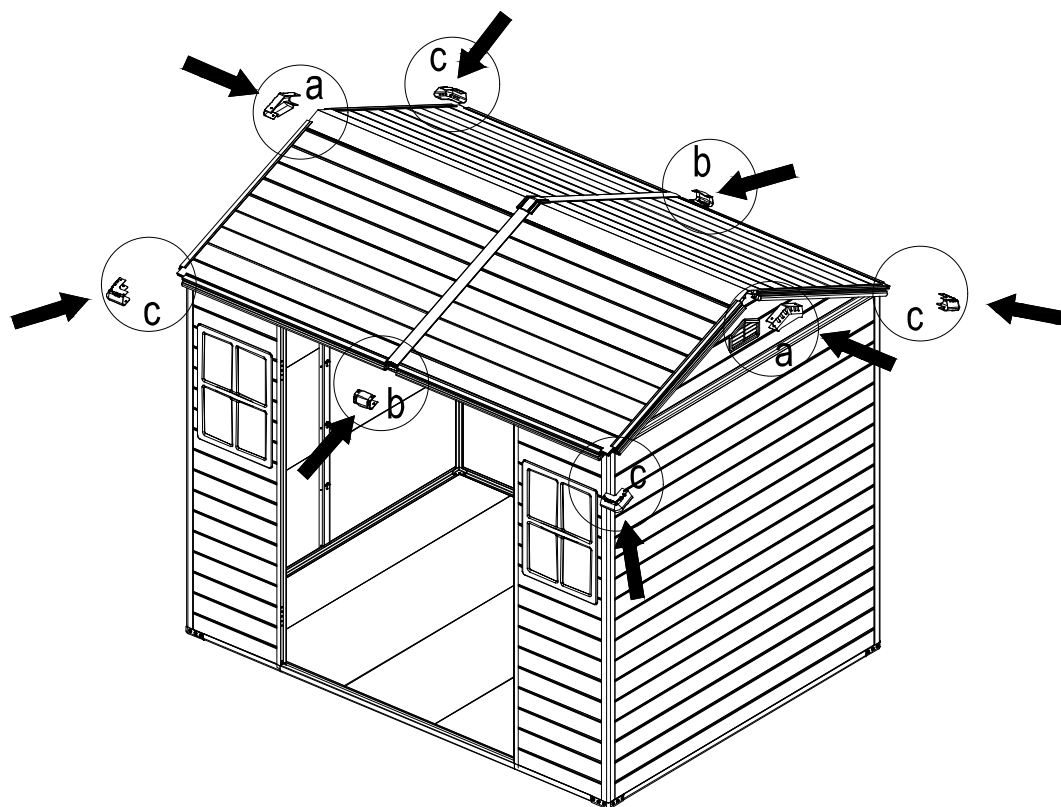





## Internal View




(ST4.2x12)  
E02x12

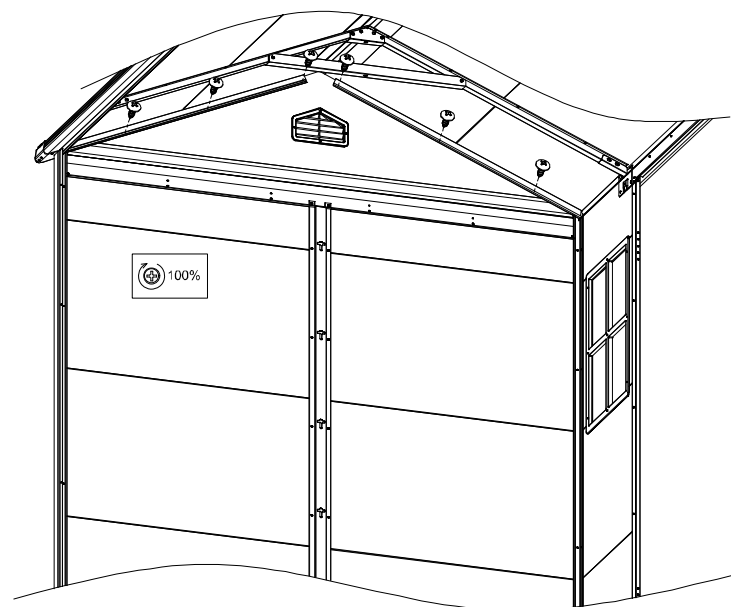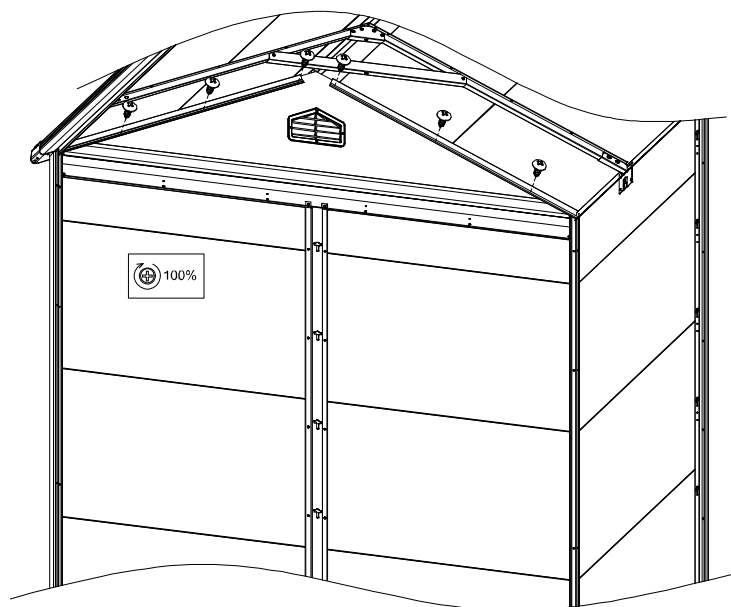

## Internal View






(ST4.2x12)  
E02x16

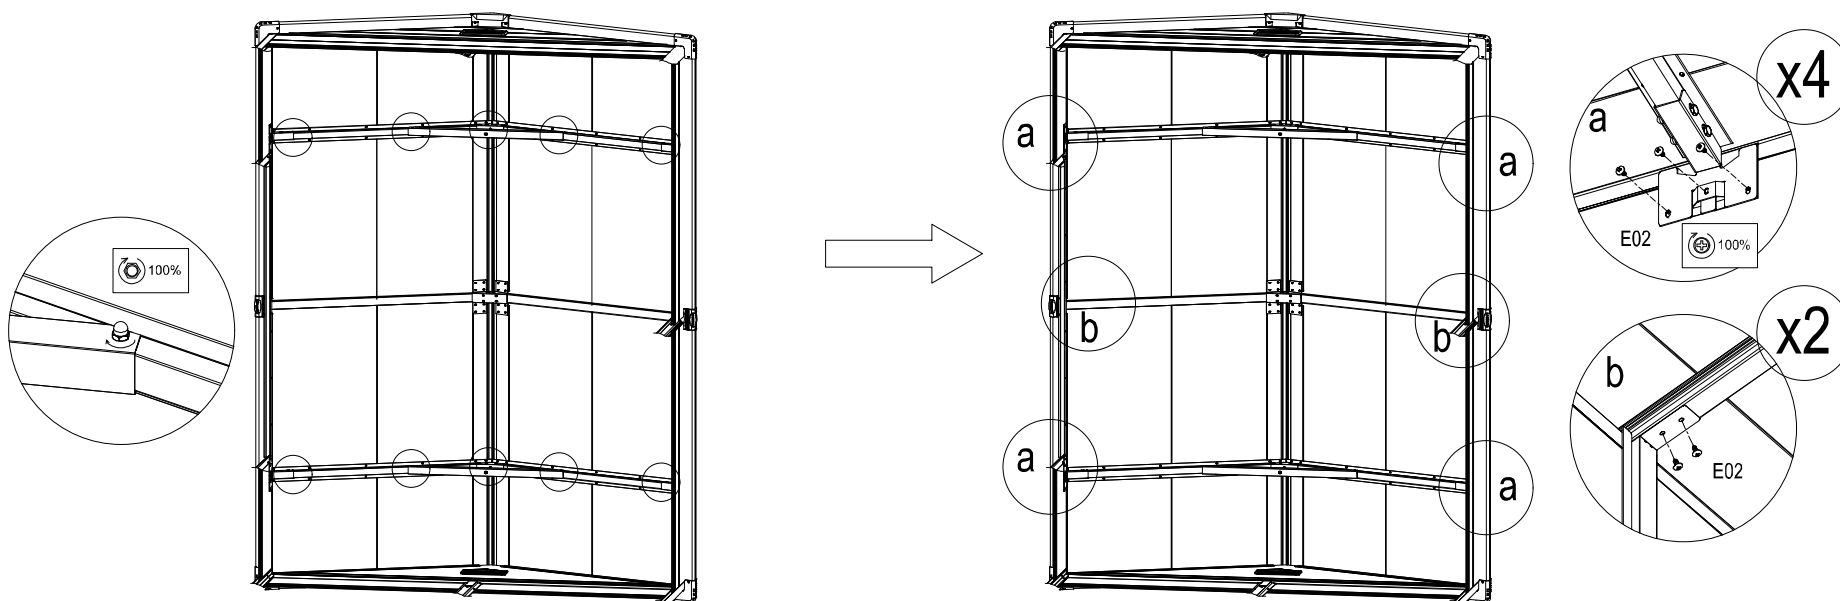


## Internal View







(ST4.2x12)  
E02x40

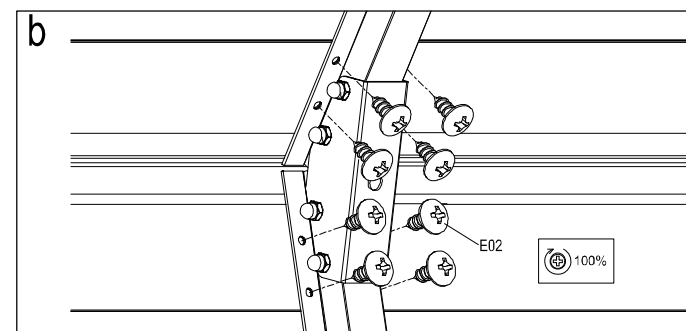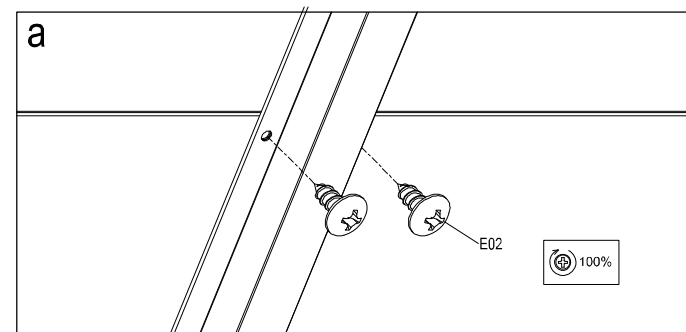
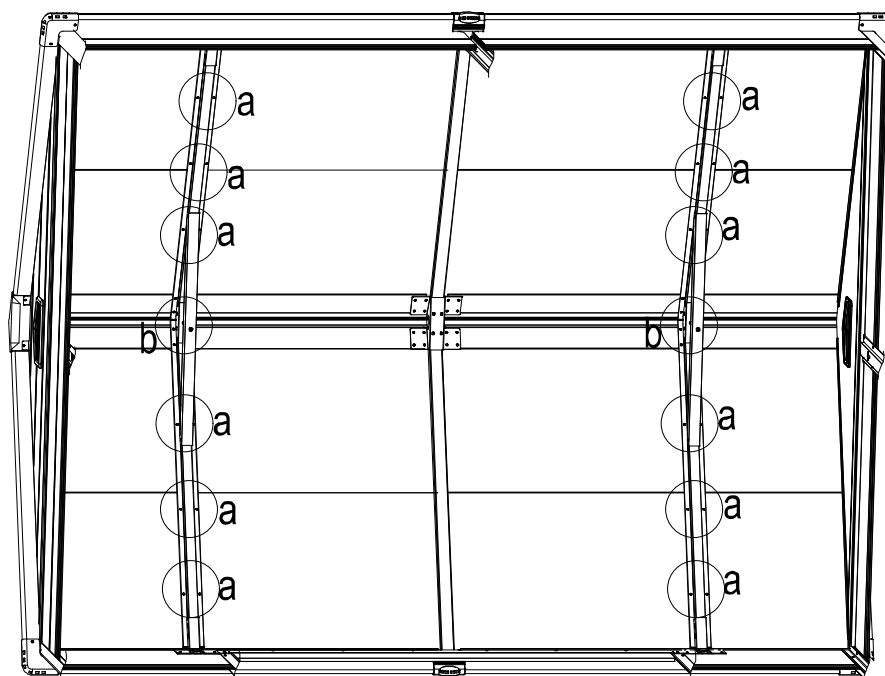


## Internal View




(ST4.2x12)  
E02x10

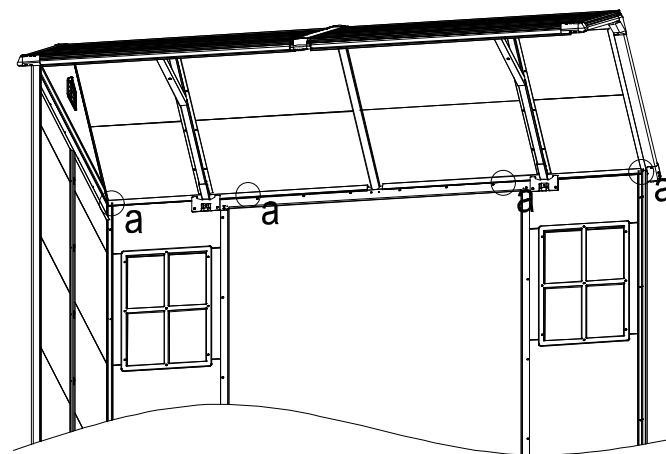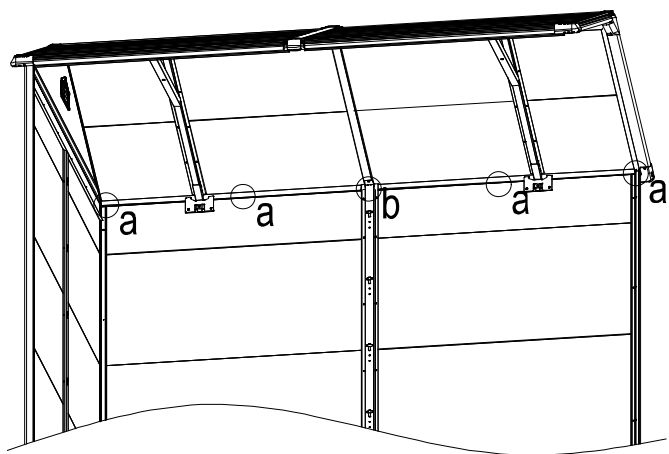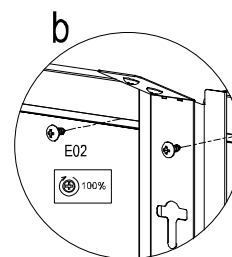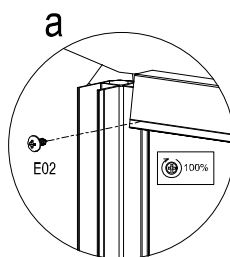


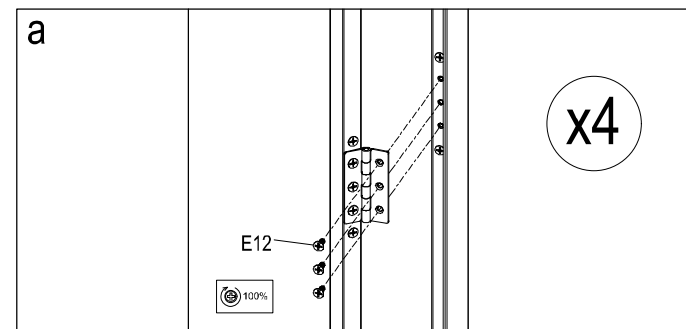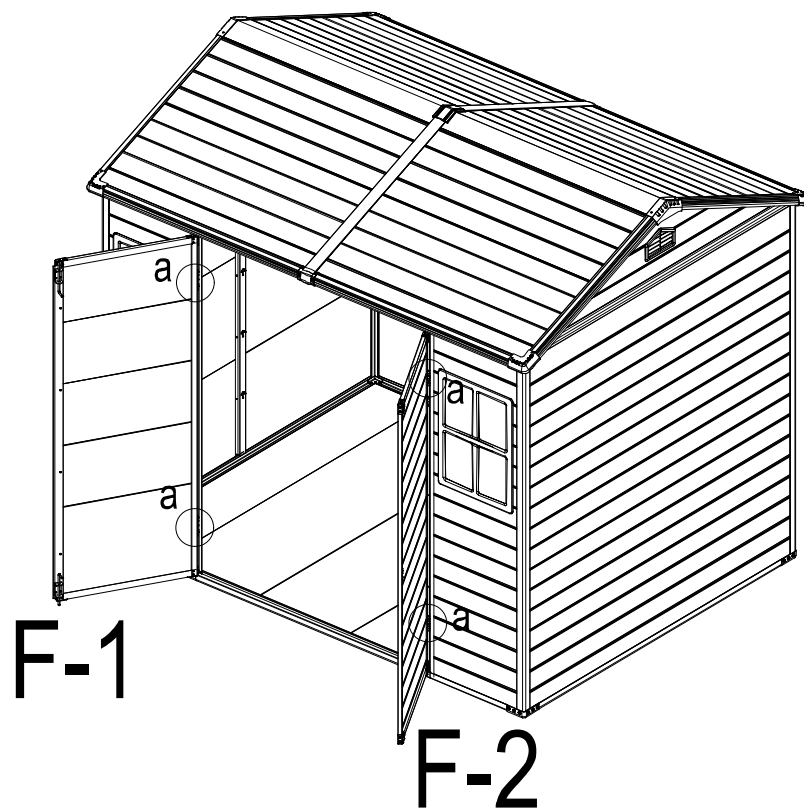




## ATTENTION!!


When the door is not vertical or parallel after installation, please make appropriate adjustments according to the following figure.

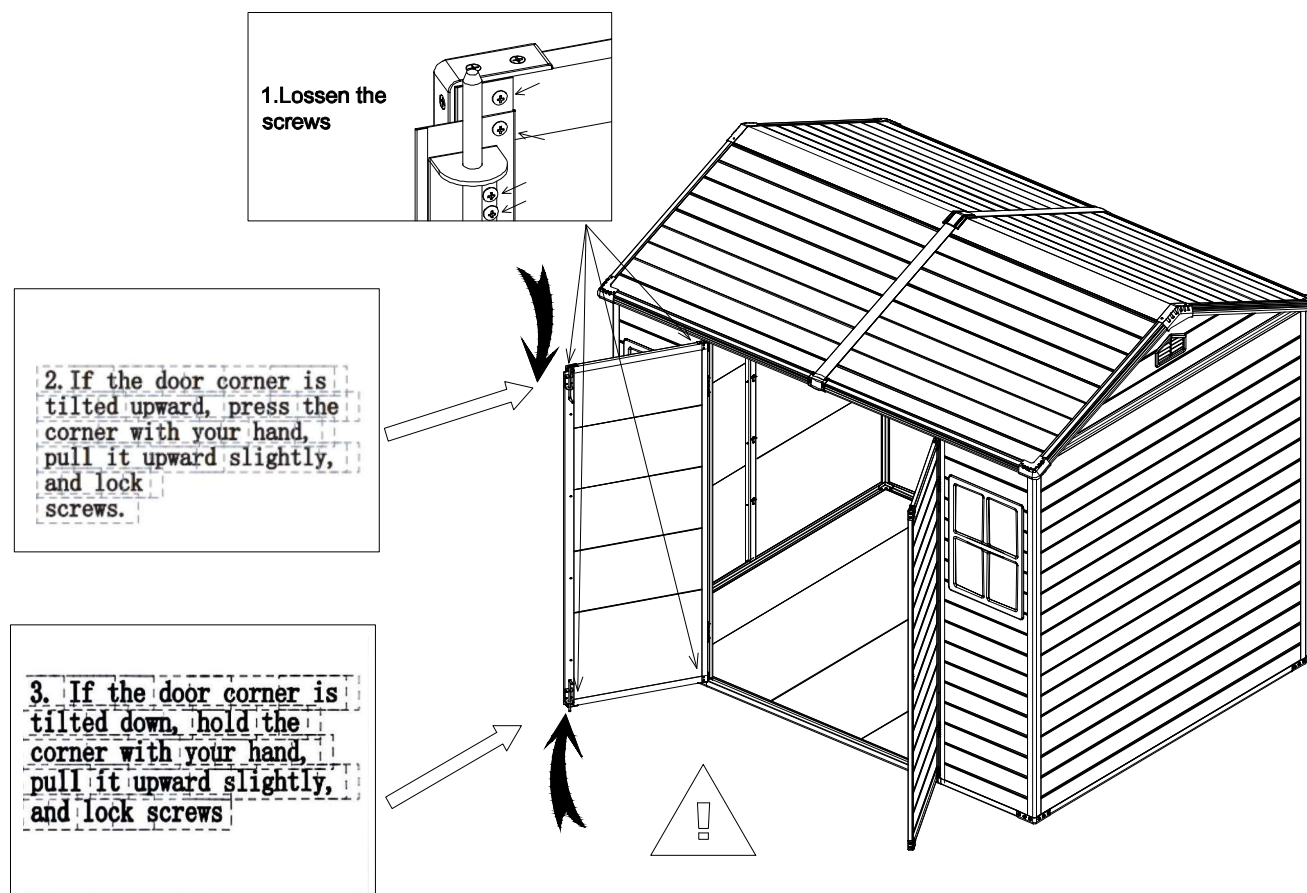





(ST4.8x19)  
E03x28

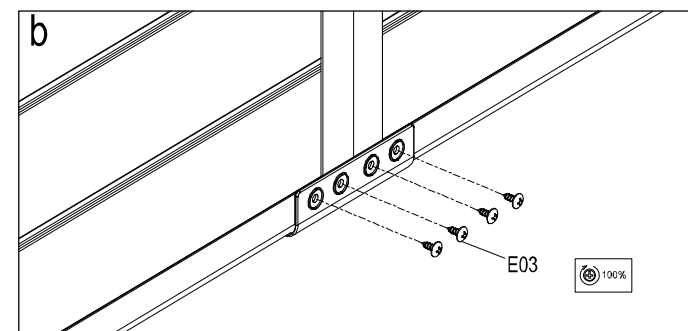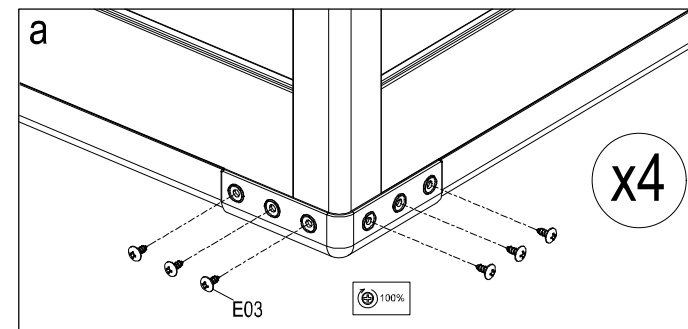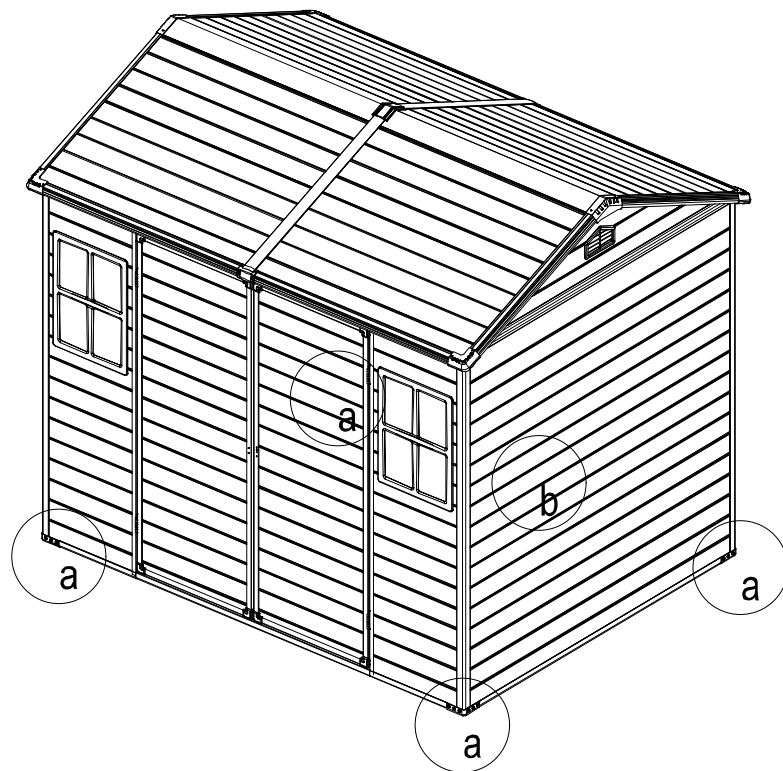





E04x5

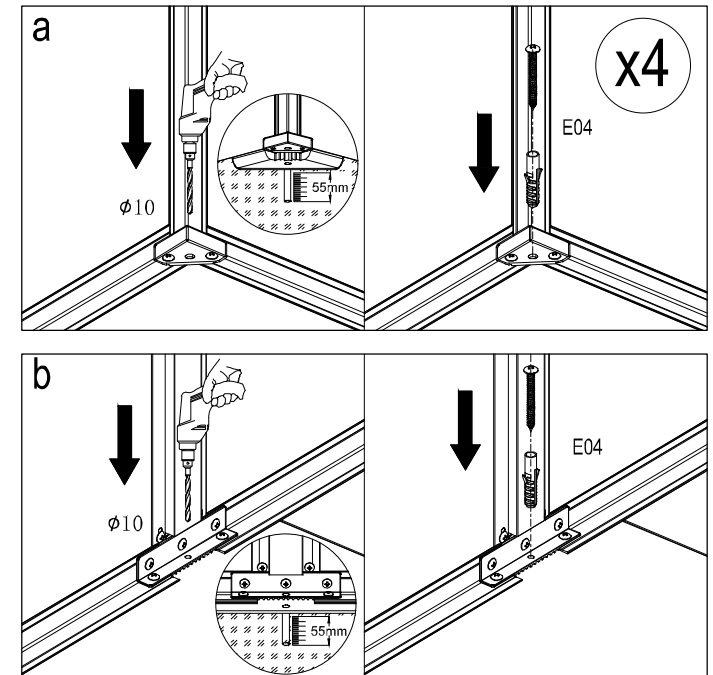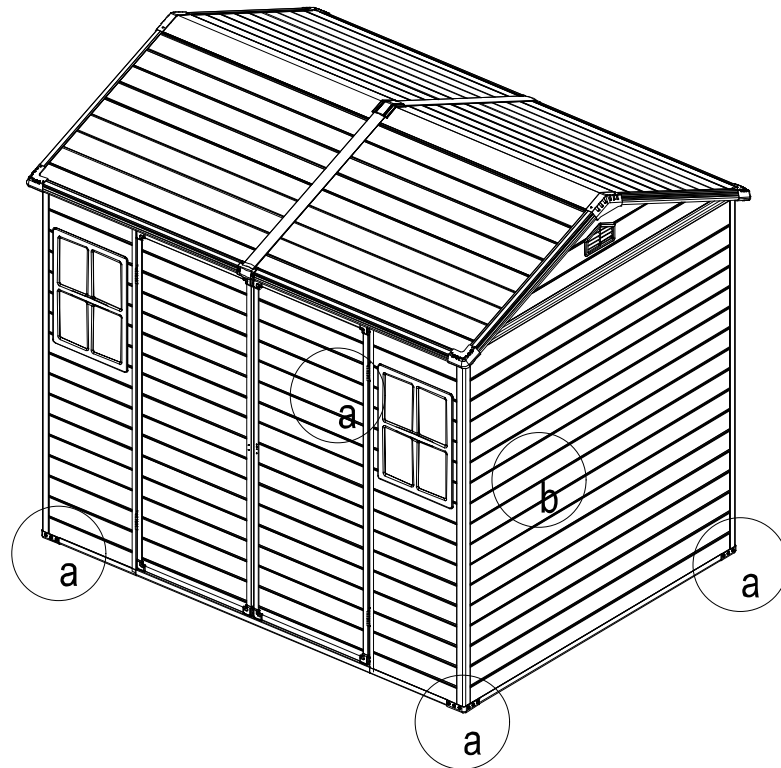



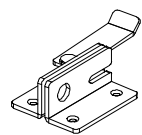

F35-D02x1



(ST4.2x13)  
E01x4

