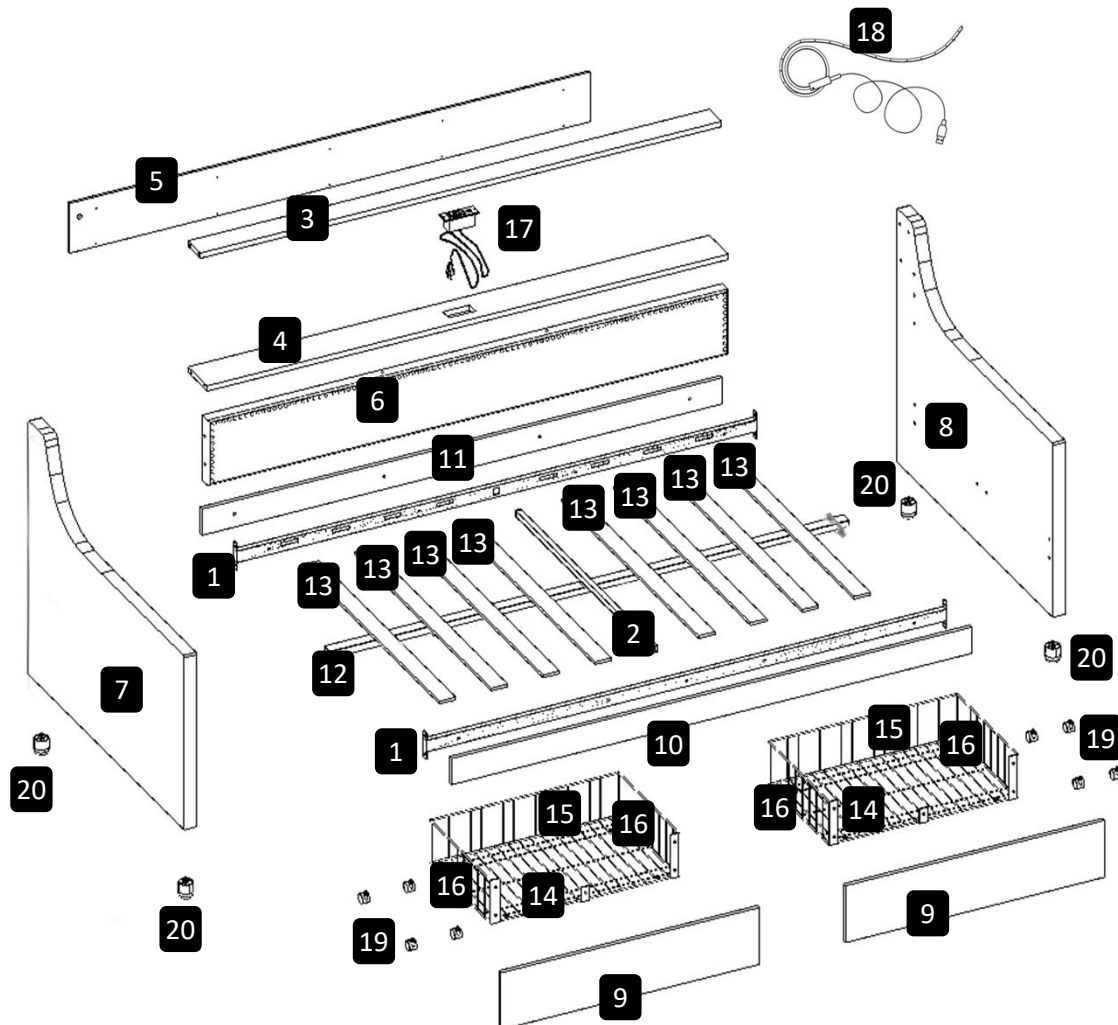
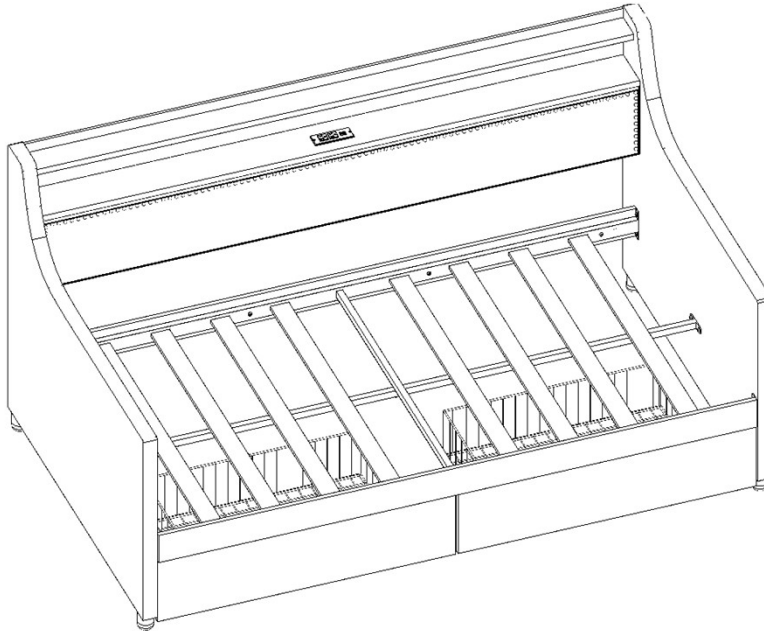


ASSEMBLY INSTRUCTION




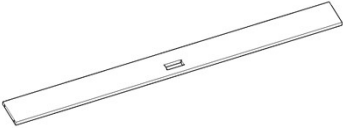

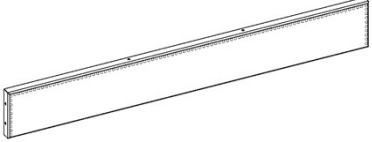
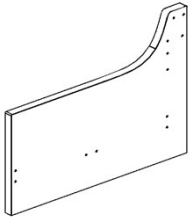
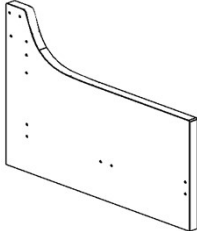
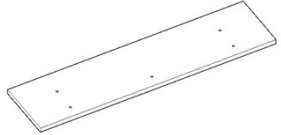
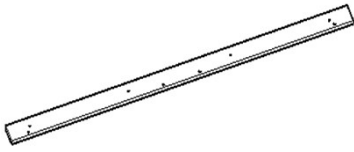
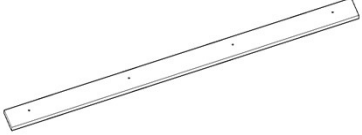




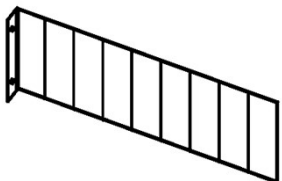
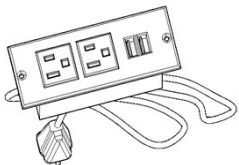
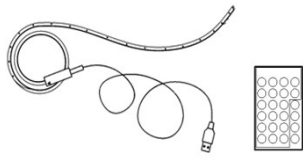
BW00090AAA / BW00090AAE / BW00090AAK

TIPS



1. This bed fit standard twin mattress 75" L x 39" W.
2. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
3. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
4. Do not use substitute part. Contact the manufacture or dealer for replacement part.



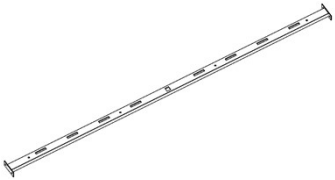













Part List

1		2		3	
Metal Slat Frame x2		Rail x1		Panel x1	
4		5		6	
Panel x1		Backboard x1		Headboard x1	
7		8		9	
Left Handrail x1		Right Handrail x1		Panels x2	
10		11		12	
Front Panel x1		Back Panel x1		Rail x1	
13		14		15	
Slats x8		Drawers Bottom Net x2		Side Net x2	
16		17		18	
Drawers Side Net x4		Socket X1		Lamp Strip Kit x1	

Part List


<div data-bbox="245 120 288 152">19</div>  <div data-bbox="331 412 464 443">Caster x8</div>	<div data-bbox="644 120 687 152">20</div>  <div data-bbox="699 412 895 443">Plastic Feet x4</div>
--	--

Hardware List




<div data-bbox="245 954 288 985">A</div>  <div data-bbox="252 1122 544 1153">Bolts(M6X10mm) X14</div>	<div data-bbox="644 954 687 985">B</div>  <div data-bbox="651 1122 943 1153">Bolts(M6X16mm) X26</div>	<div data-bbox="1043 954 1086 985">C</div>  <div data-bbox="1059 1122 1335 1153">Bolts(M6X30mm) X8</div>
<div data-bbox="245 1169 288 1200">D</div>  <div data-bbox="261 1330 537 1361">Bolts(M6X35mm) X5</div>	<div data-bbox="644 1169 687 1200">E</div>  <div data-bbox="708 1330 888 1361">Angle iron x2</div>	<div data-bbox="1043 1169 1086 1200">F</div>  <div data-bbox="1107 1330 1287 1361">Angle iron x6</div>
<div data-bbox="245 1384 288 1415">G</div>  <div data-bbox="309 1541 480 1572">Allen Key X1</div>	<div data-bbox="644 1384 687 1415">H</div>  <div data-bbox="699 1541 895 1572">Flat Gasket X4</div>	<div data-bbox="1043 1384 1086 1415">I</div>  <div data-bbox="1038 1541 1353 1572">Screws (M3X12mm) X9</div>
<div data-bbox="245 1588 288 1619">J</div>  <div data-bbox="229 1749 564 1780">Screws (M4X25mm) X10</div>	<div data-bbox="644 1588 687 1619">K</div>  <div data-bbox="639 1749 954 1780">P-Shaped Iron Sheet x3</div>	<div data-bbox="1043 1588 1086 1619">L</div>  <div data-bbox="1107 1749 1287 1780">Iron Sheet x4</div>
<div data-bbox="245 1796 288 1827">M</div>  <div data-bbox="325 1957 469 1989">Clasp X22</div>	<div data-bbox="644 1796 687 1827">N</div>  <div data-bbox="703 1957 890 1989">Foam Pad X8</div>	


Step1

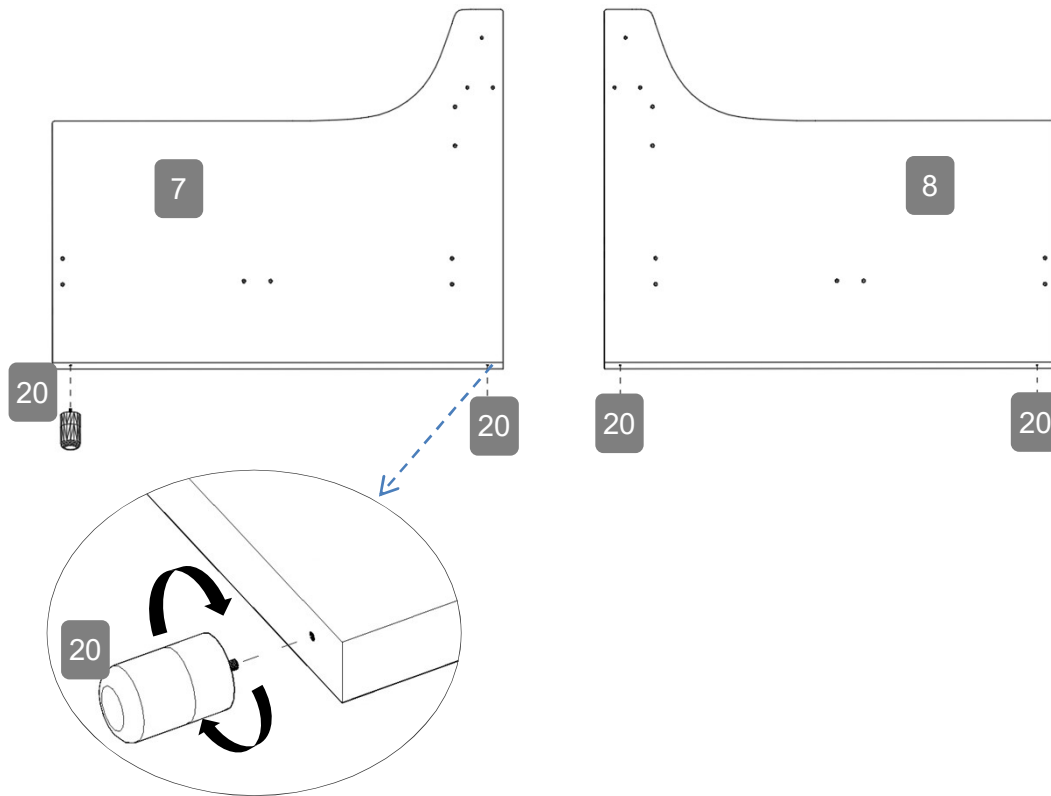Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.



Step2

B	D	H
		
Bolts(M6X16mm) X8	Bolts(M6X35mm) X4	Flat Gasket X4

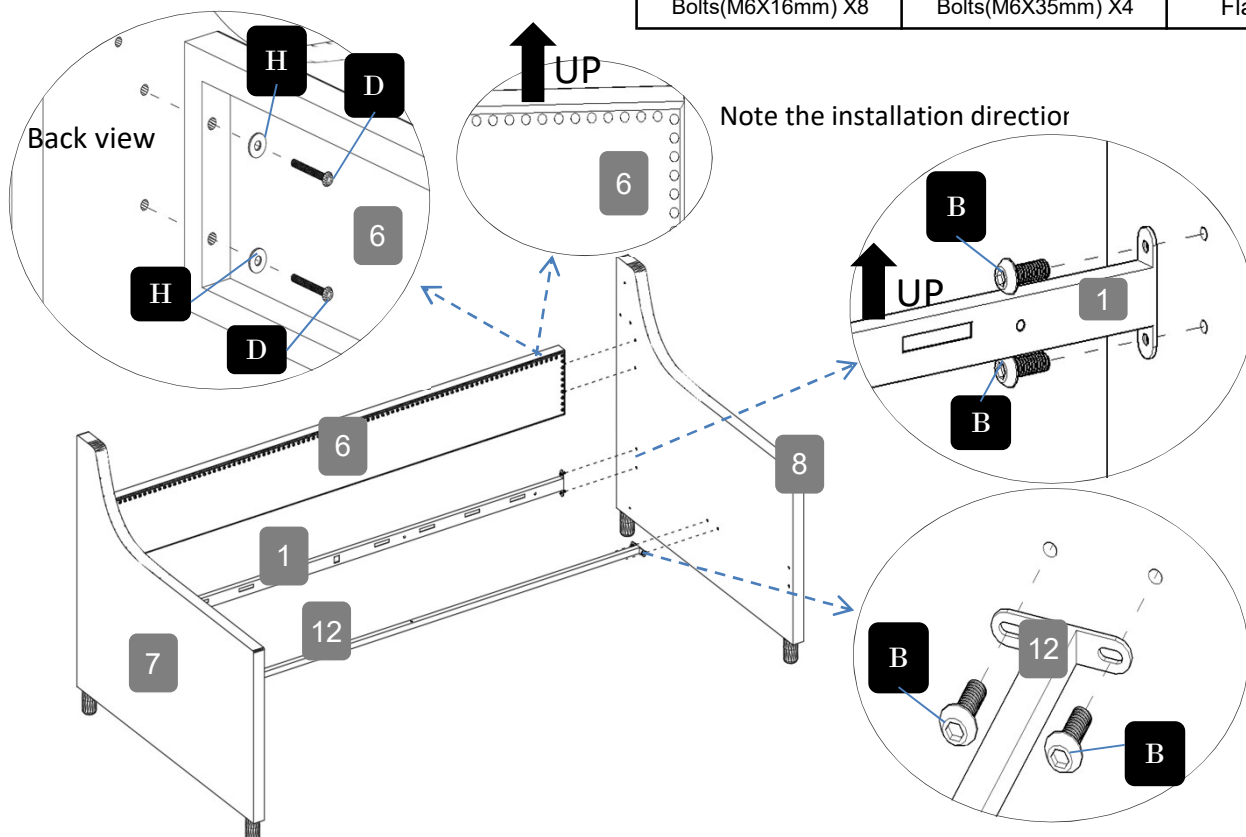

Step3

B



Bolts(M6X16mm) X2

F



Angle iron x2

I




Screws (M3X12mm) X3

K




P-Shaped Iron Sheet x3

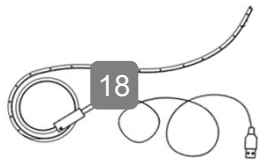

18

Paste the LED strip into the light slot

3




Assembly Tools Required(Not Included)

Watch the direction. There are screw holes on the edge of the board



2

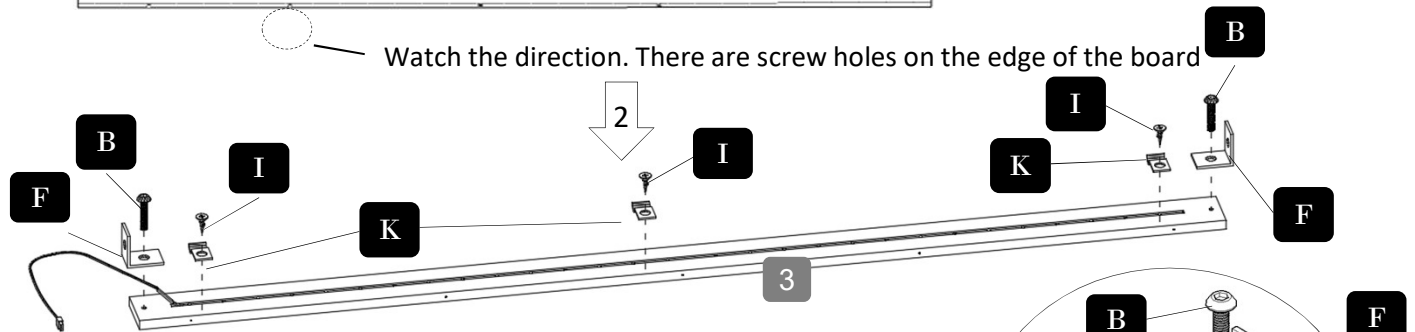

Be careful not to install on the LED

Step4

B



Bolts(M6X16mm) X4

F







Angle iron x4

I



Screws (M3X12mm) X2

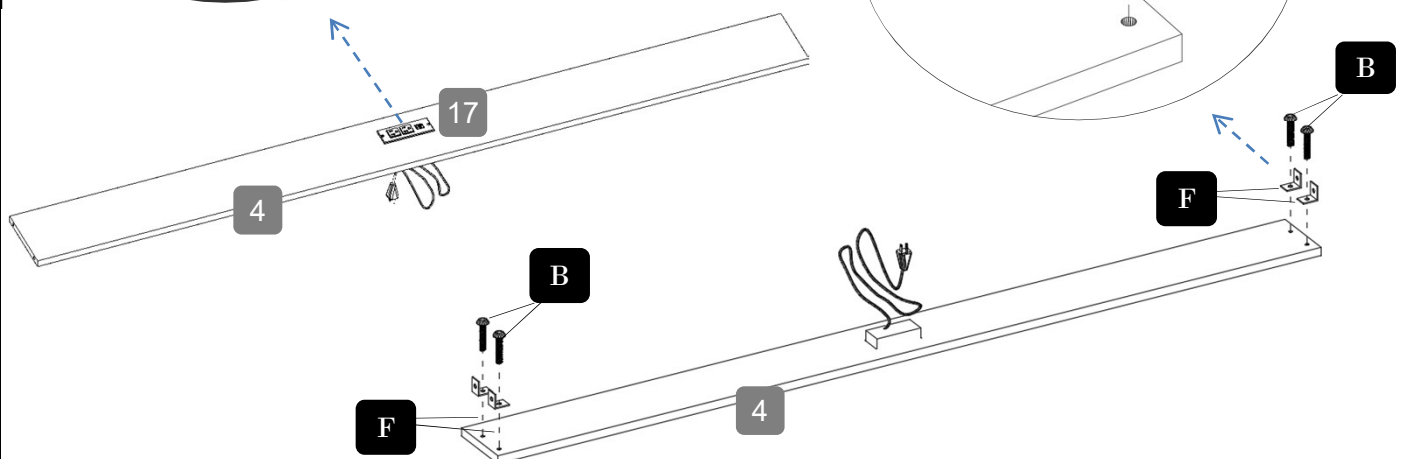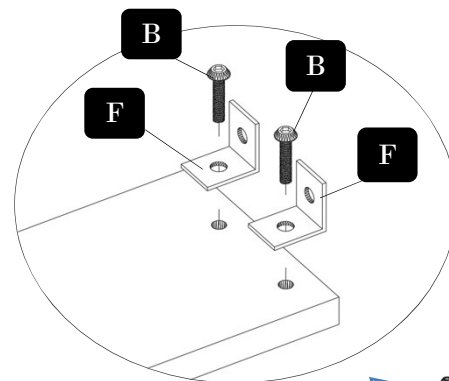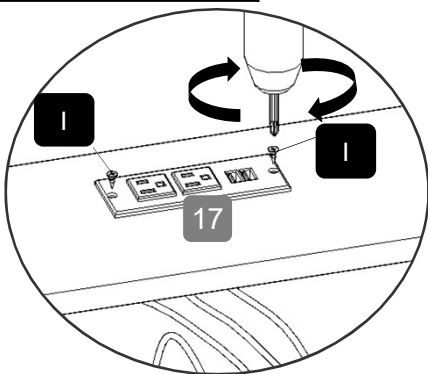

Assembly Tools Required(Not Included)

Page 5 of 10

Step5

B



Bolts(M6X16mm) X6

E




Angle iron x2

I



Screws (M3X12mm) X4

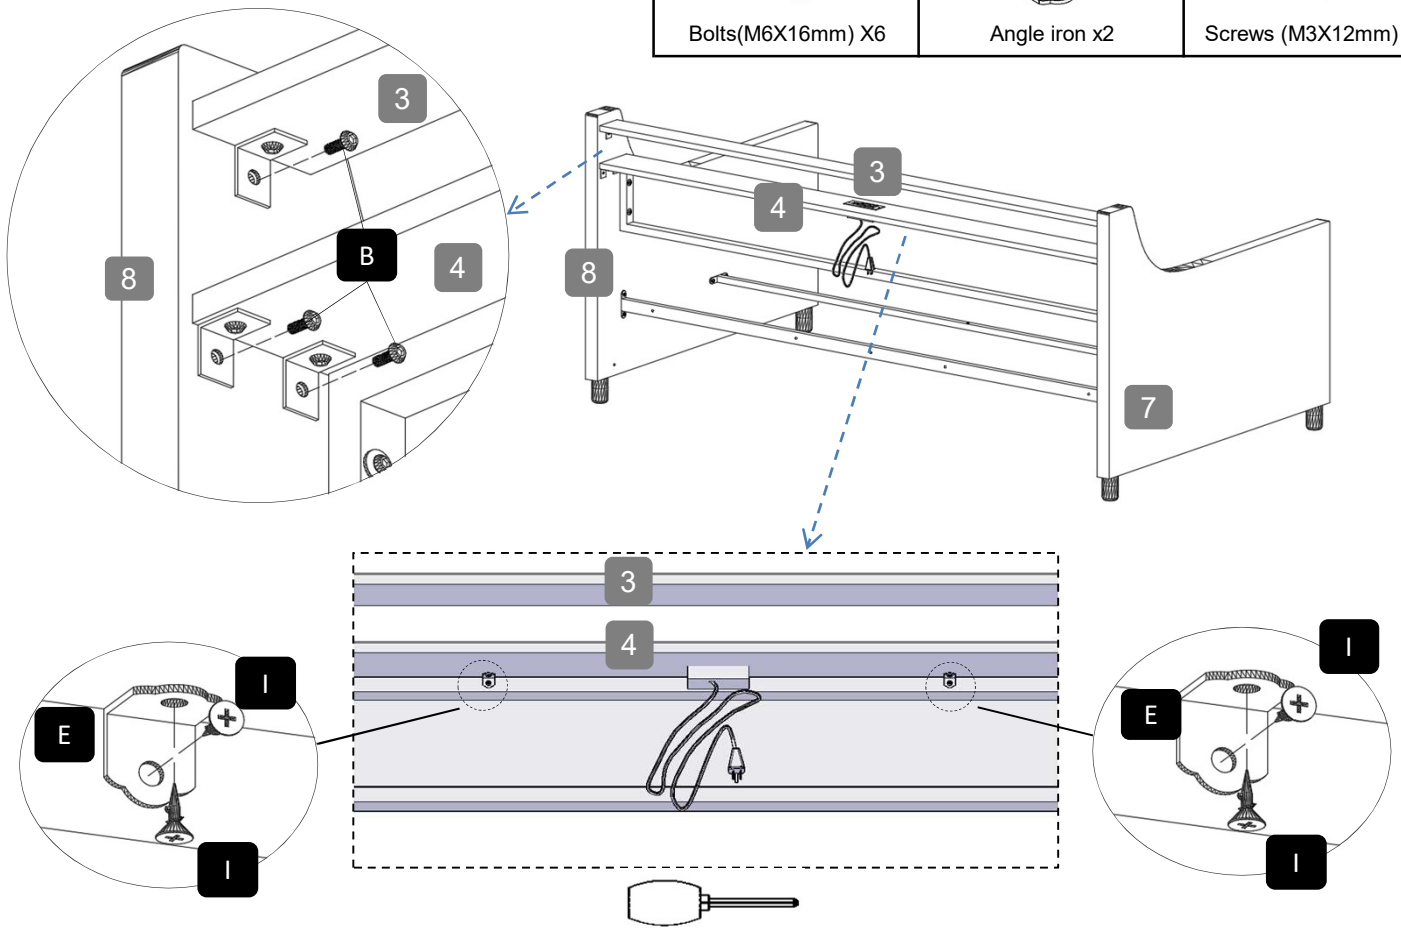


Assembly Tools Required(Not Included)

Step6

J



Screws (M4X25mm) X10

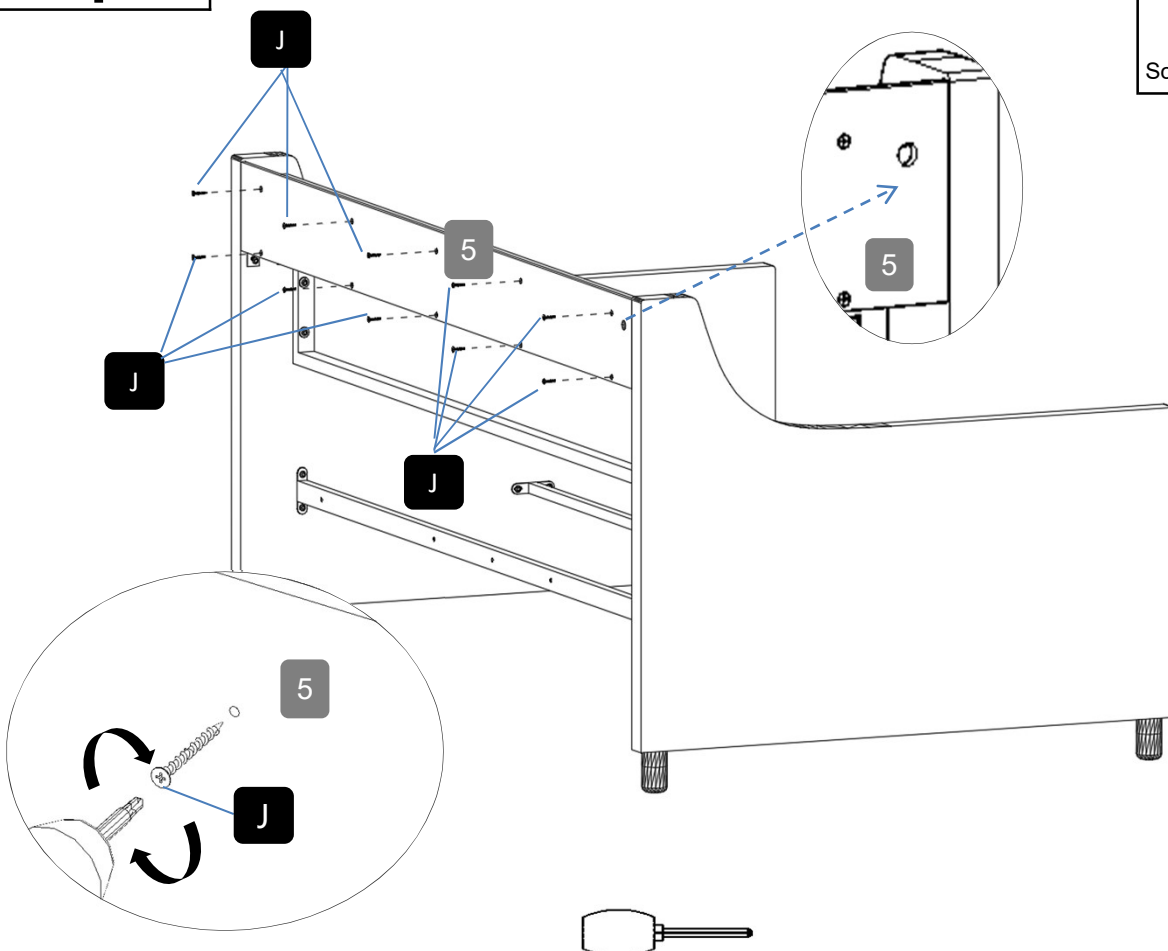

Step7

B




Bolts(M6X16mm) X1

D



Bolts(M6X35mm) X1

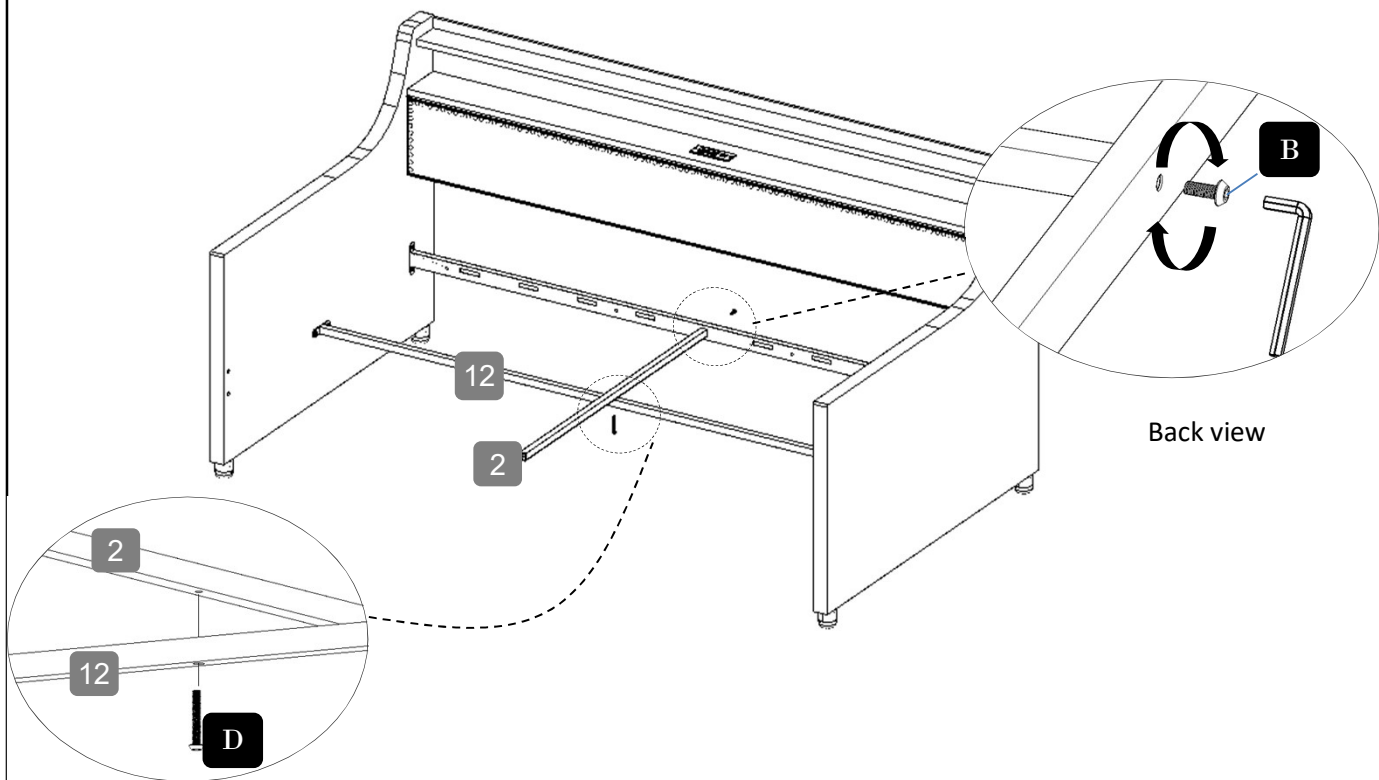

Back view

Bottom view


Step8

N



Foam Pad X8

Paste foam pad where the bed slats touch the r



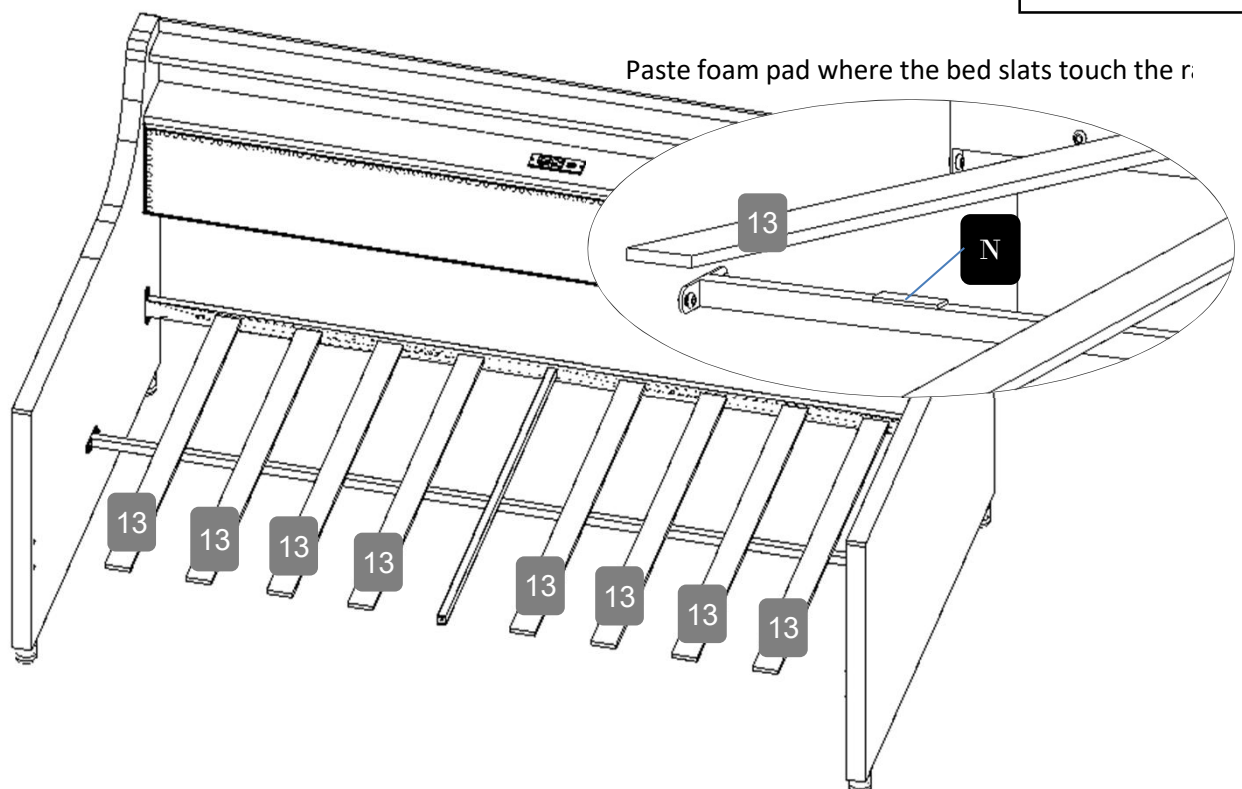


Step9



B



Bolts(M6X16mm) X5

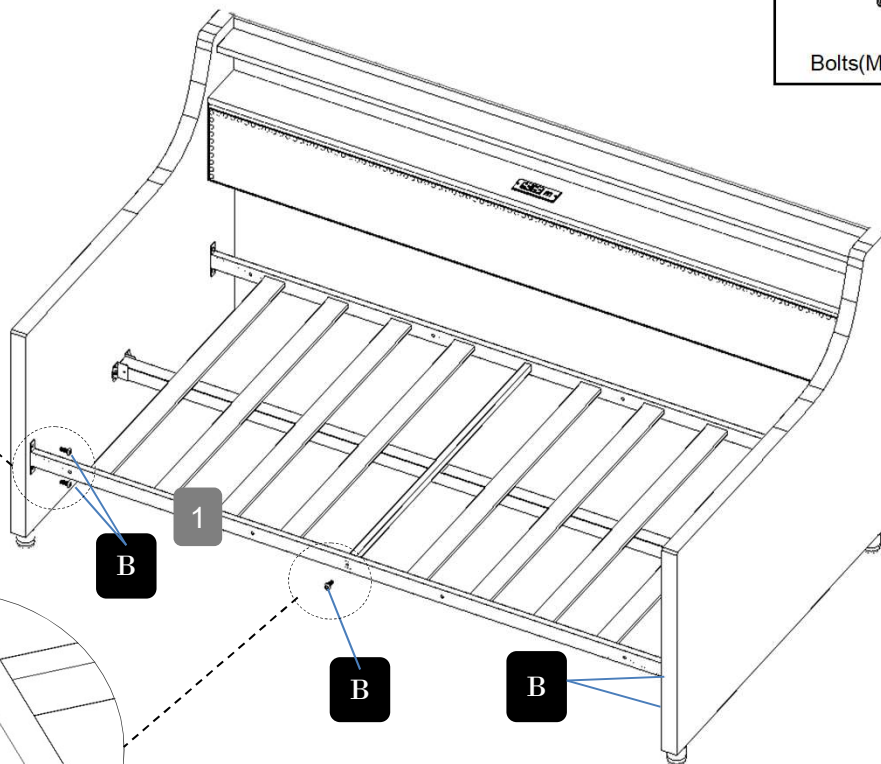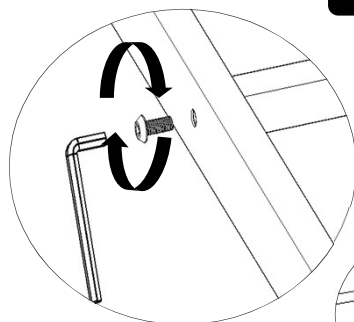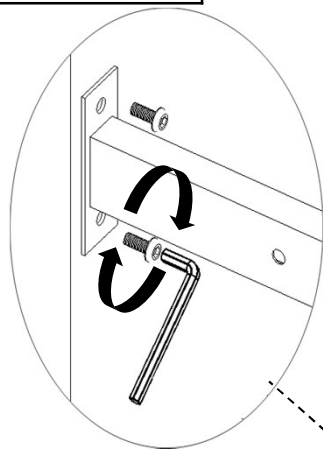

Note the installation direction of metal slat frame NO.1

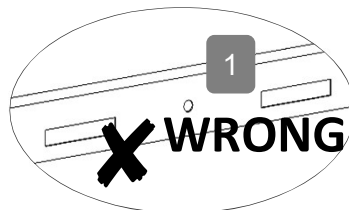
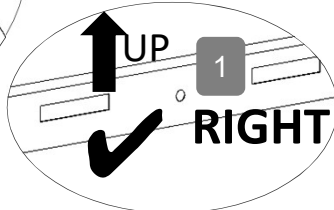


Step10


C




Bolts(M6X30mm) X8

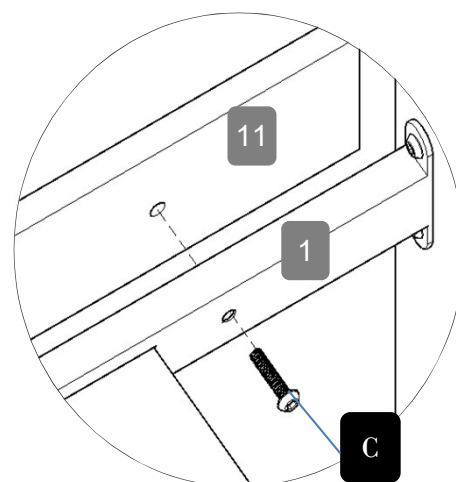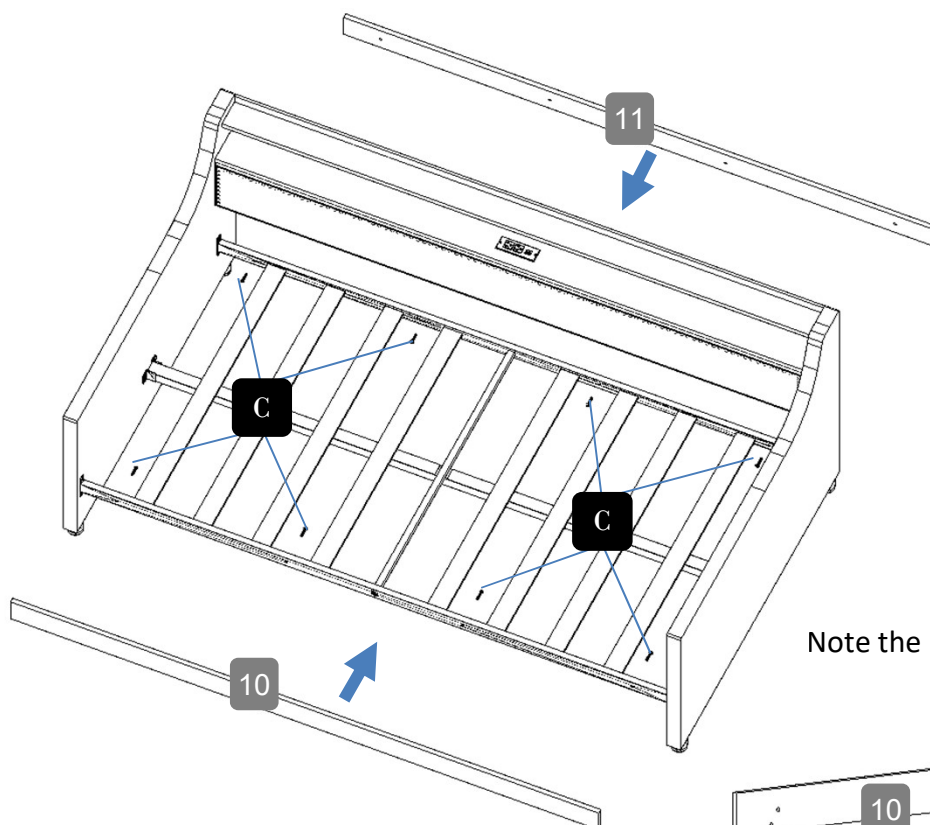

Note the installation direction of panel NO.10

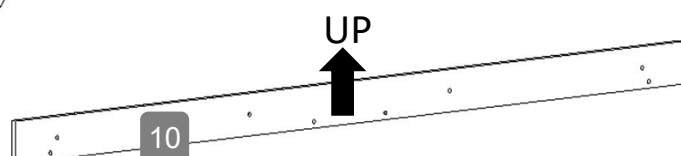

Step11

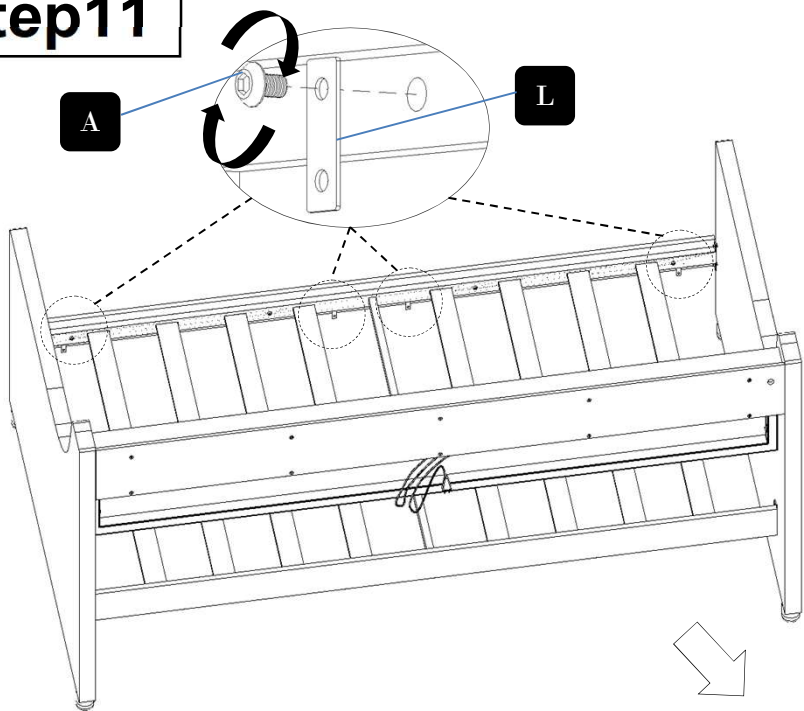


A




Bolts(M6X10mm) X4

L




Iron Sheet x4

After this step, you can lock the other bolts tight

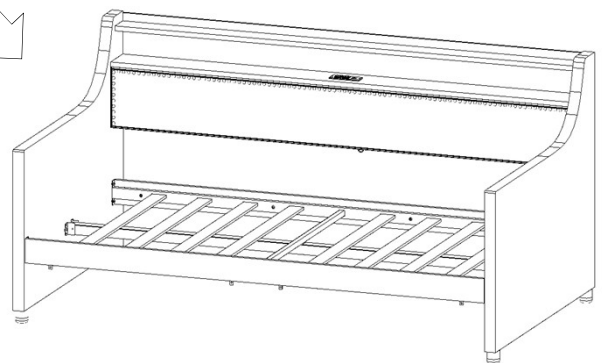

Step12

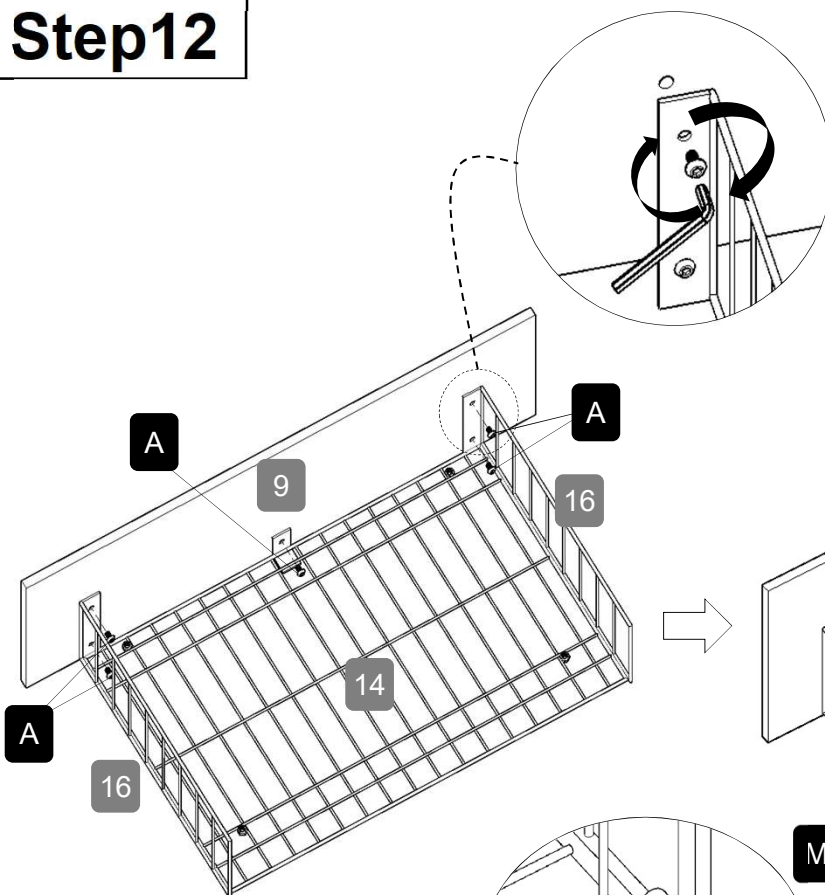

A




Bolts(M6X10mm) X5


M




Clasp X11

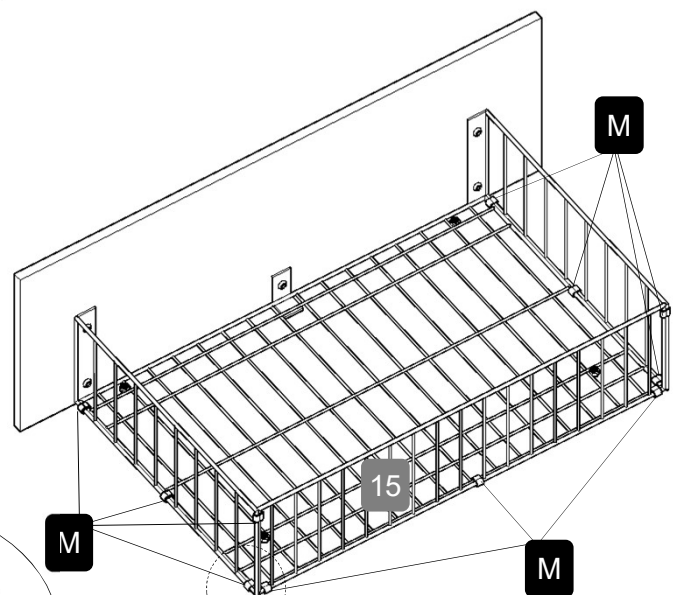

Step13

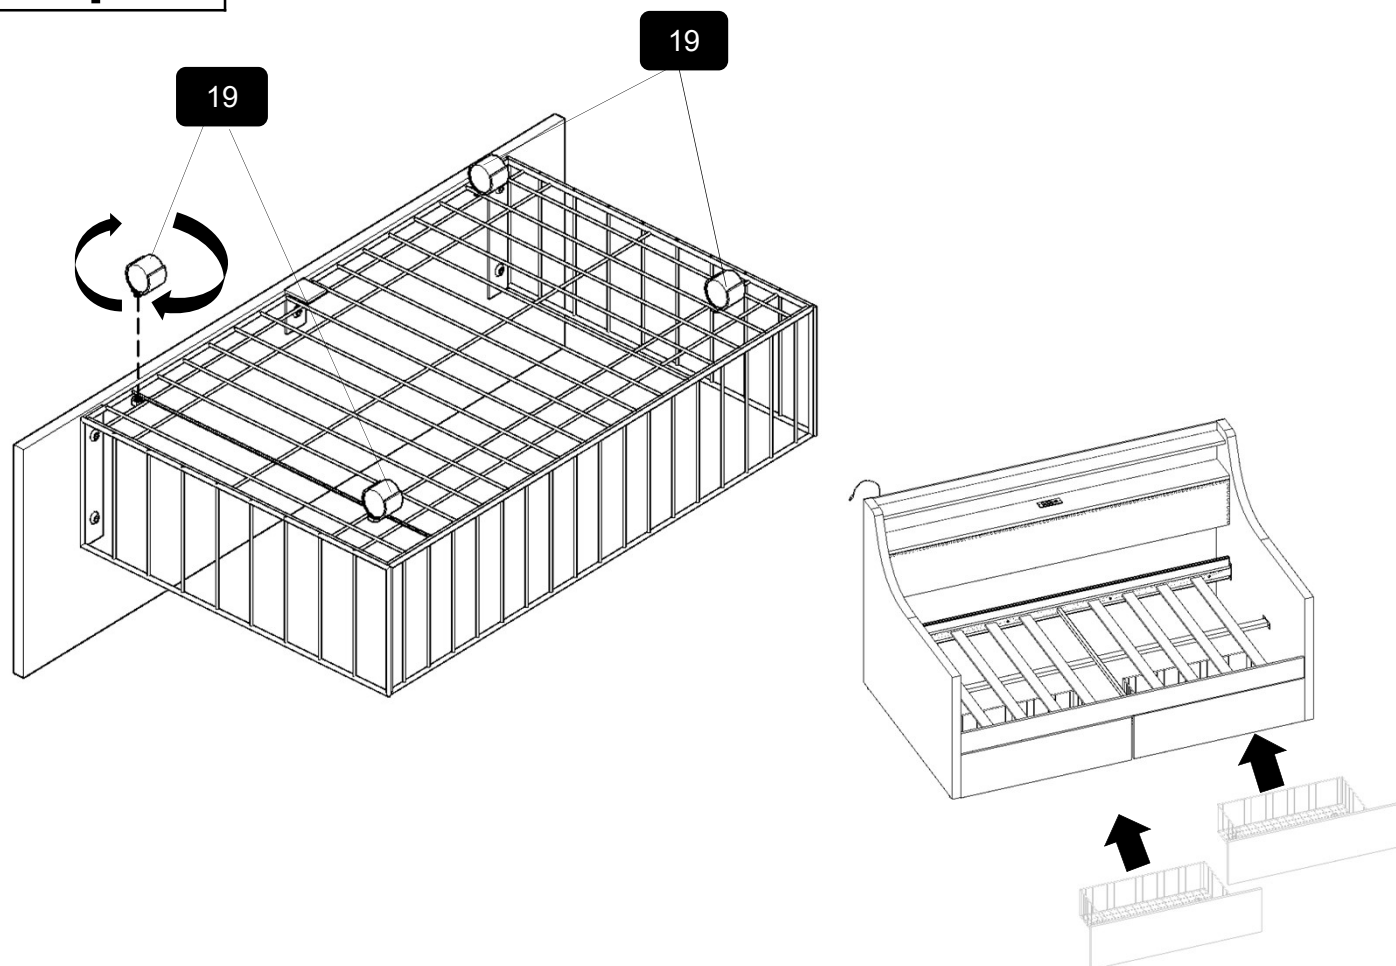

Step14

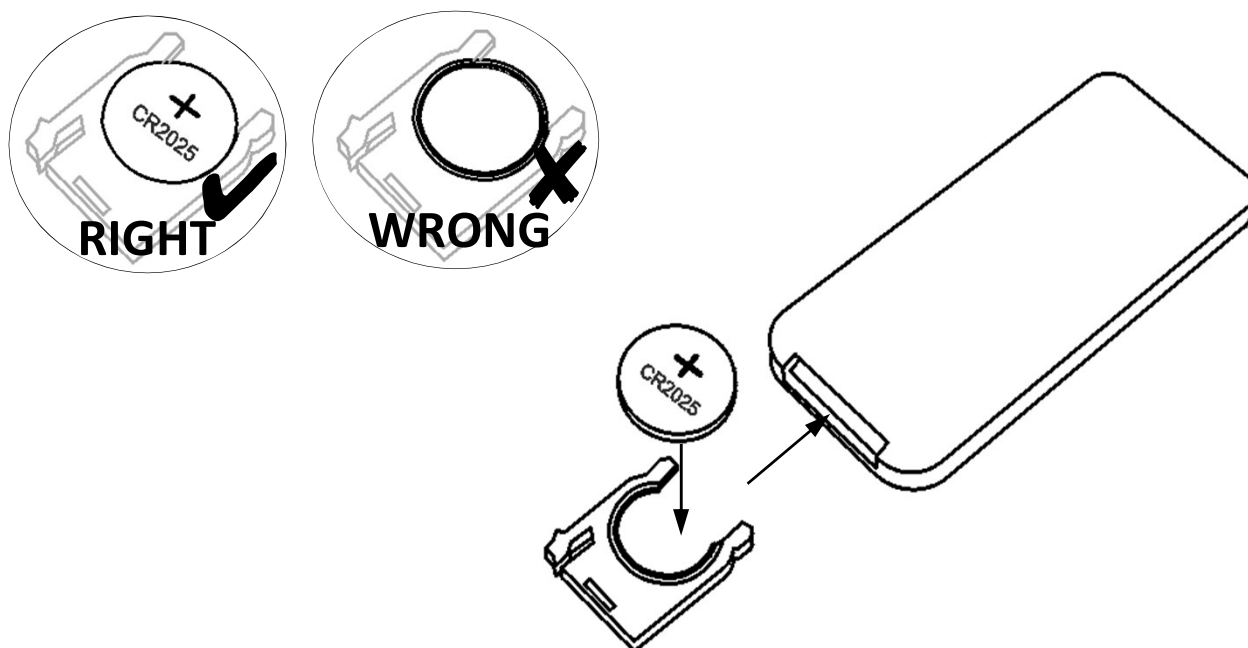

Remote control does not contain batteries, please buy your own a CR2025 button battery installed into the remote control