

# ASSEMBLY INSTRUCTIONS

## MODEL : WM1996-DT21

### IMPORTANT NOTE :


- \* PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- \* BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.

### HARDWARE LIST

A	JCBB M8 x 40mm + S/W 5/16" + F/W 5/16" x 22mm	6PCS
B	JCBC M6 x 40mm + S/W M6 + F/W M6 x 13mm	4PCS
C	ALLEN KEY M4 (Ball Shape)	1PC
D	ALLEN KEY M5	1PC
E	WOOD DOWEL M10 x 40mm	6PCS


### PART LIST

1	TABLE TOP	1PC
2	TABLE LEG CENTER	2PCS
3	TABLE LEG SIDE	2PCS

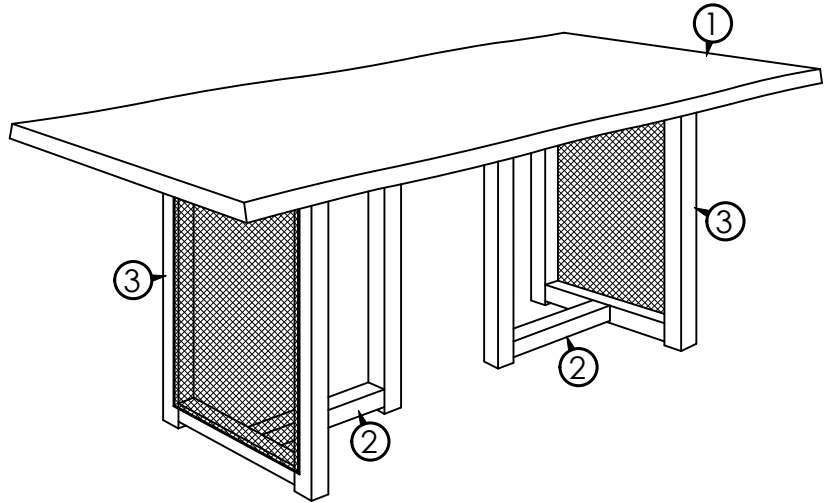


COMPLETED TABLE ASSEMBLY.

### STEP 1

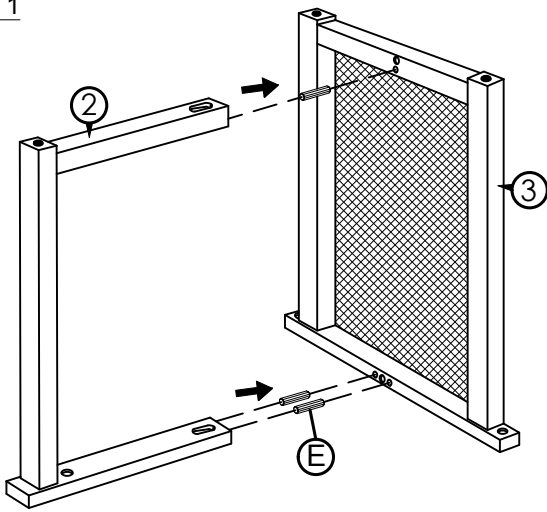

X2


### STEP 2

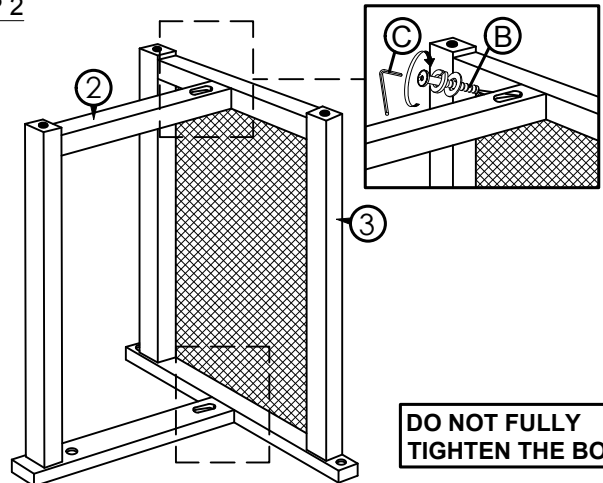

DO NOT FULLY TIGHTEN THE BOLT


X2

### STEP 3

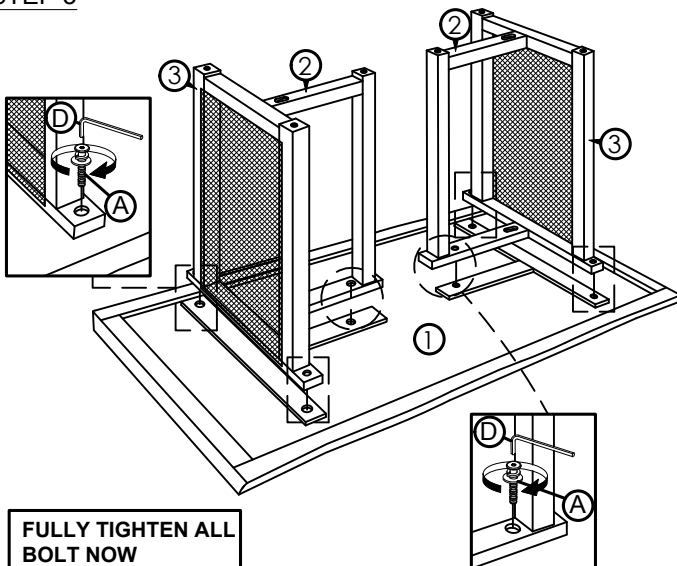

FULLY TIGHTEN ALL BOLT NOW

### STEP 4

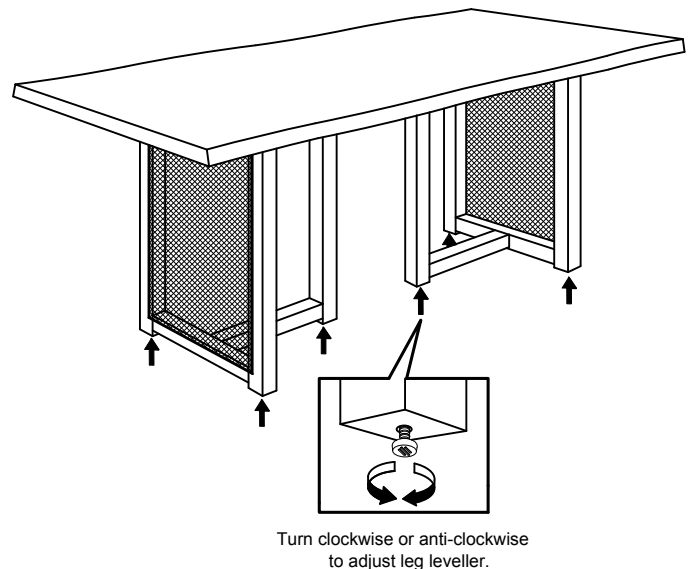

Turn clockwise or anti-clockwise to adjust leg leveller.