



ASSEMBLY INSTRUCTIONS

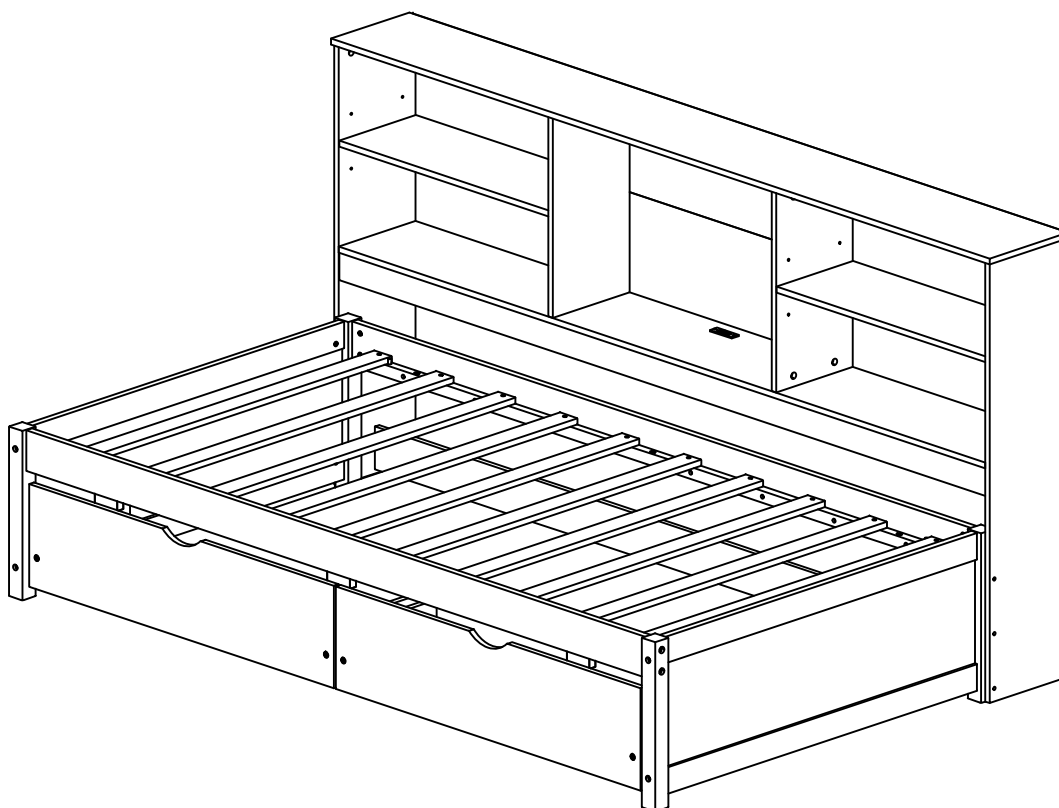


YX7113-1 + YX7113-2

ASSEMBLY INSTRUCTIONS

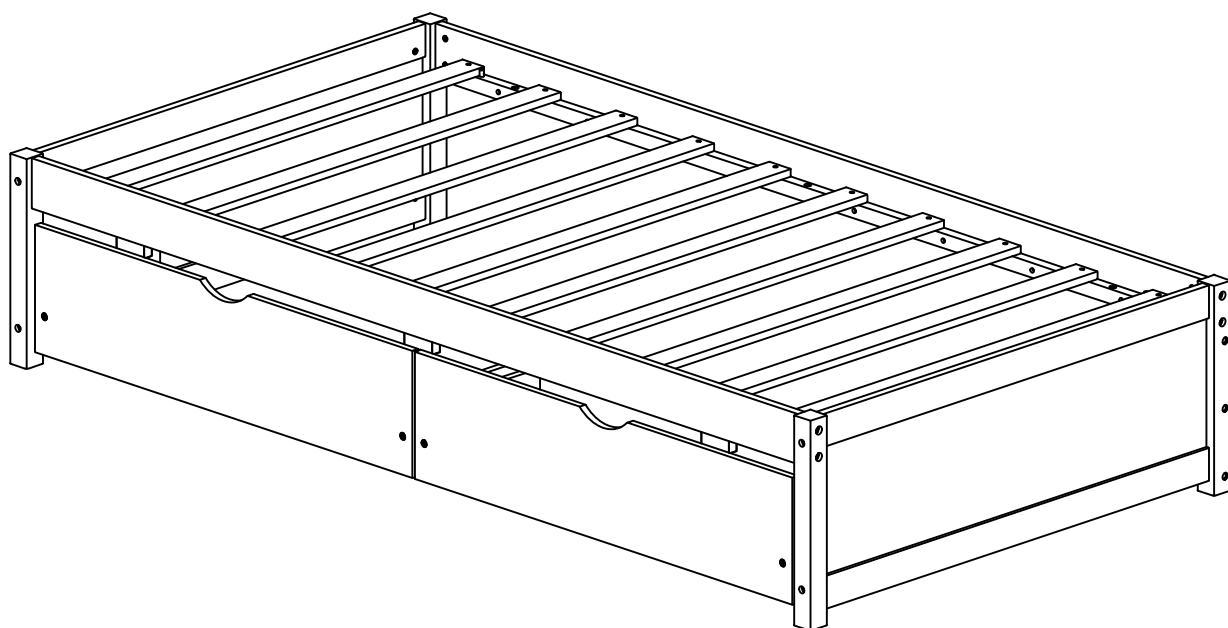




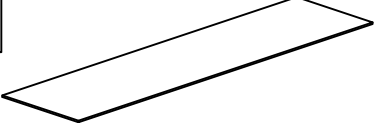





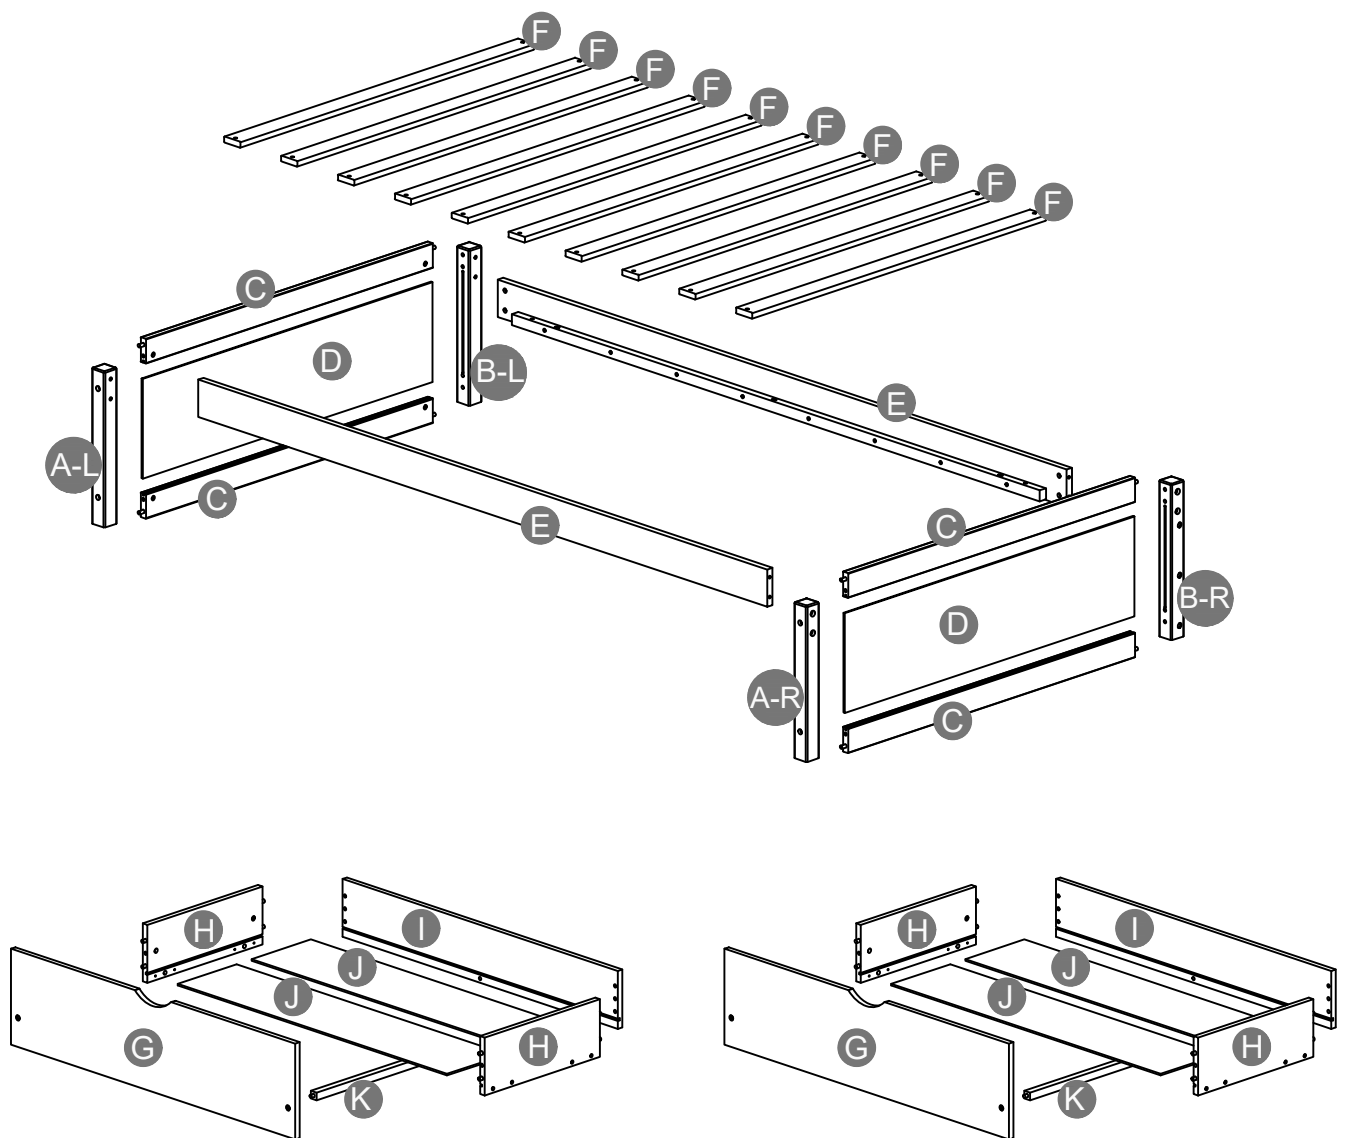



YX7113-2






Detail View









Part List

A-L  Leg Frame 1-1pc	A-R  Leg Frame 2 -1pc	B-L  Leg Frame 1 -1pc
B-R  Leg Frame 2 -1pc	C  Horizontal bar HB/FB-4pcs	D  Headboard/Footboard panel-2pcs
E  Side rail-2pcs	F  Slat-10pcs	G  Front panel of drawer - 2pcs
H  Side panel of drawer - 4pcs	I  Back panel of drawer - 2pcs	J  Bottom panel of drawer-4pcs
K  Crossprece-2pcs		



Hardware list of Bed

1	(Spare Hardware-2pcs)  (Ø12)1/4"*70mm	2	(Spare Hardware-2pcs)  1/4"*15mm	3	(Spare Hardware-2pcs)  Ø4*25mm
Hex-Head bolts (18pcs)		Horizontal-Hole bolts(18pcs)		Wood screws (22pcs)	
4	 Ø8*25mm	5	 (1/4")4*60mm		
Wood dowel (4pcs)		Allen key (1pc)			



Hardware list of 2 Drawers

6	(Spare Hardware-1pc)  (Ø12)1/4"*55mm	7	(Spare Hardware-1pc)  1/4"*12mm	8	(Spare Hardware-2pcs)  Ø4*25mm
Hex-Head bolts (12pcs)		Horizontal-Hole bolts(9pcs)		Wood screws (18 pcs)	
9	 Ø8*25mm	10	(Spare Hardware-1pc)  Ø10*20mm	11	 (1/4")4*60mm
Wood dowel (3pcs)		Wood dowel (9pcs)		Allen key (1pc)	

Hardware list



12	 100*53*19mm	13	 70*38*19mm
Wheels (8pcs)		Stopper (3pcs)	



ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

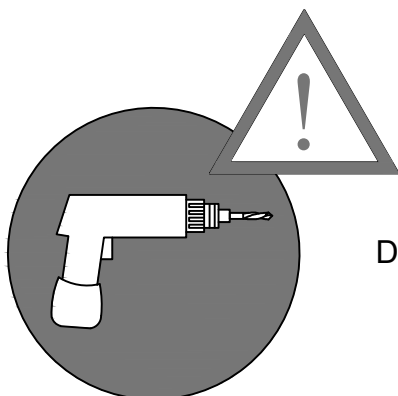


DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !

STEP 1:


1	2
 (Ø12)1/4"*70mm	
4pcs	4pcs

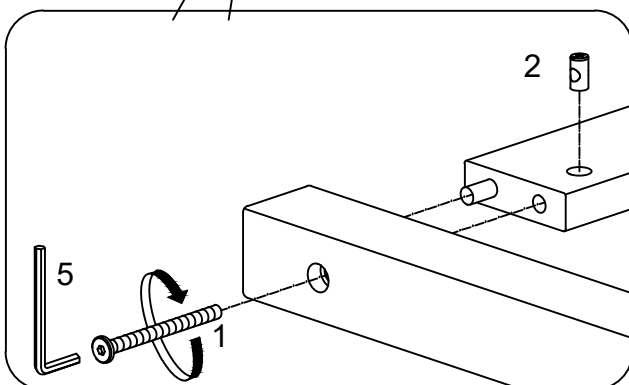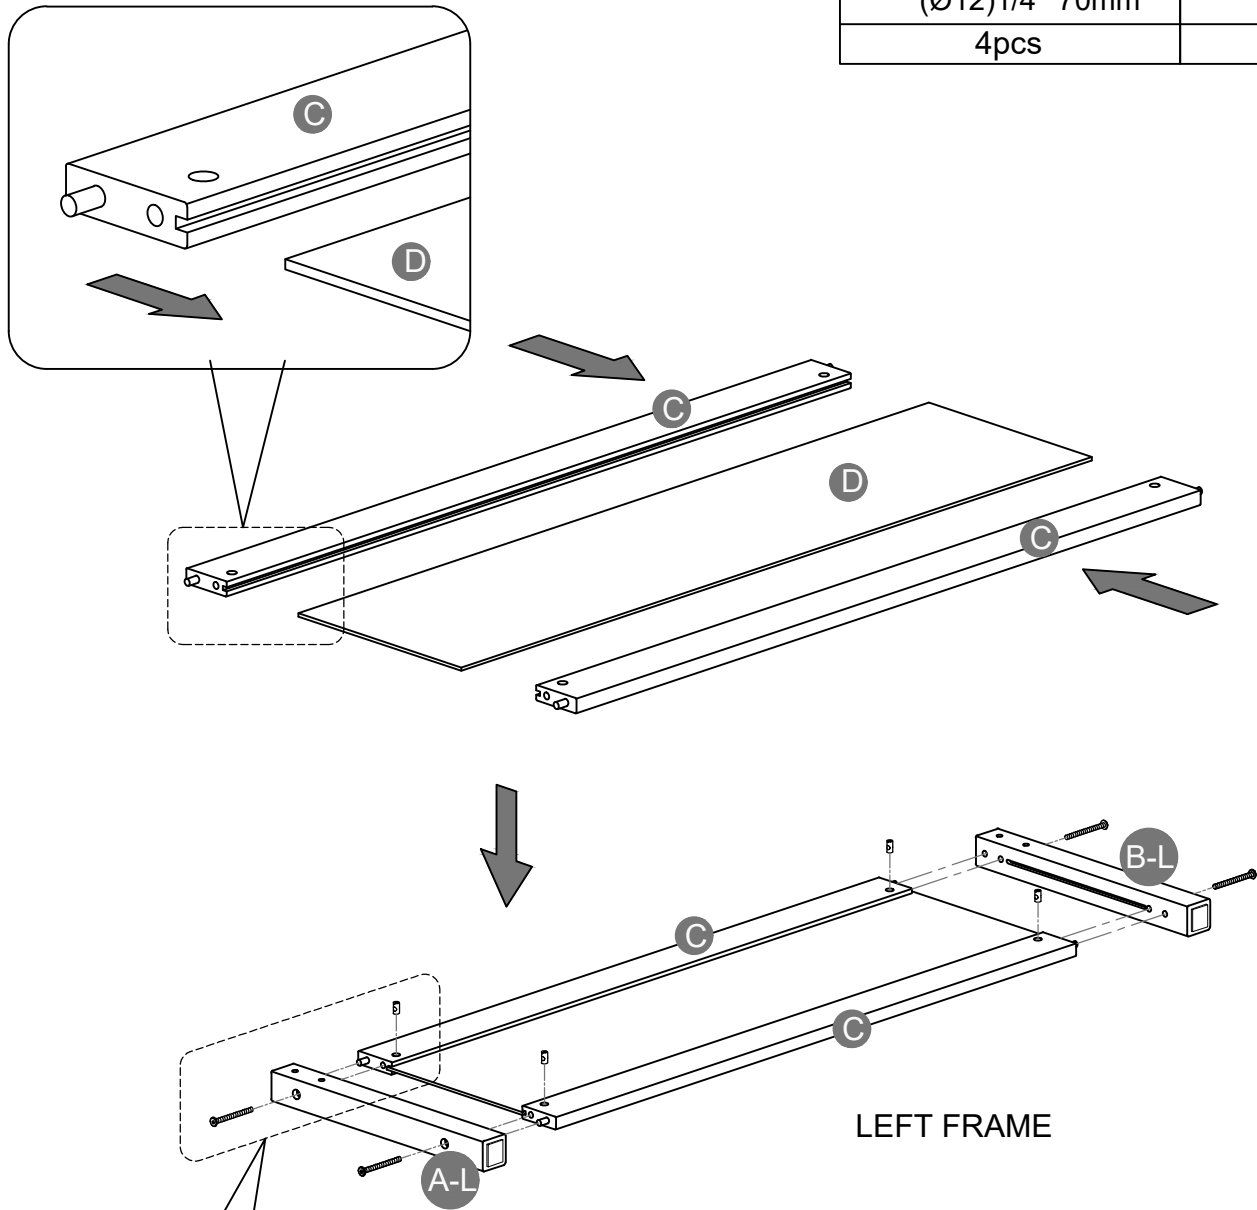



Note: Part 2 will face up with the "x" mark on it, otherwise it cannot be tightened

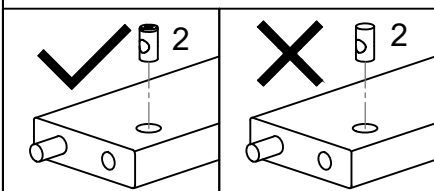


Make sure bars A-L, B-L, C are connected together on the same side (front-front, back-back)

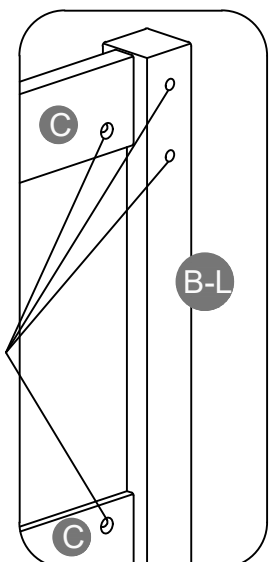


STEP 2:


1	2
 (Ø12)1/4"*70mm	
4pcs	4pcs

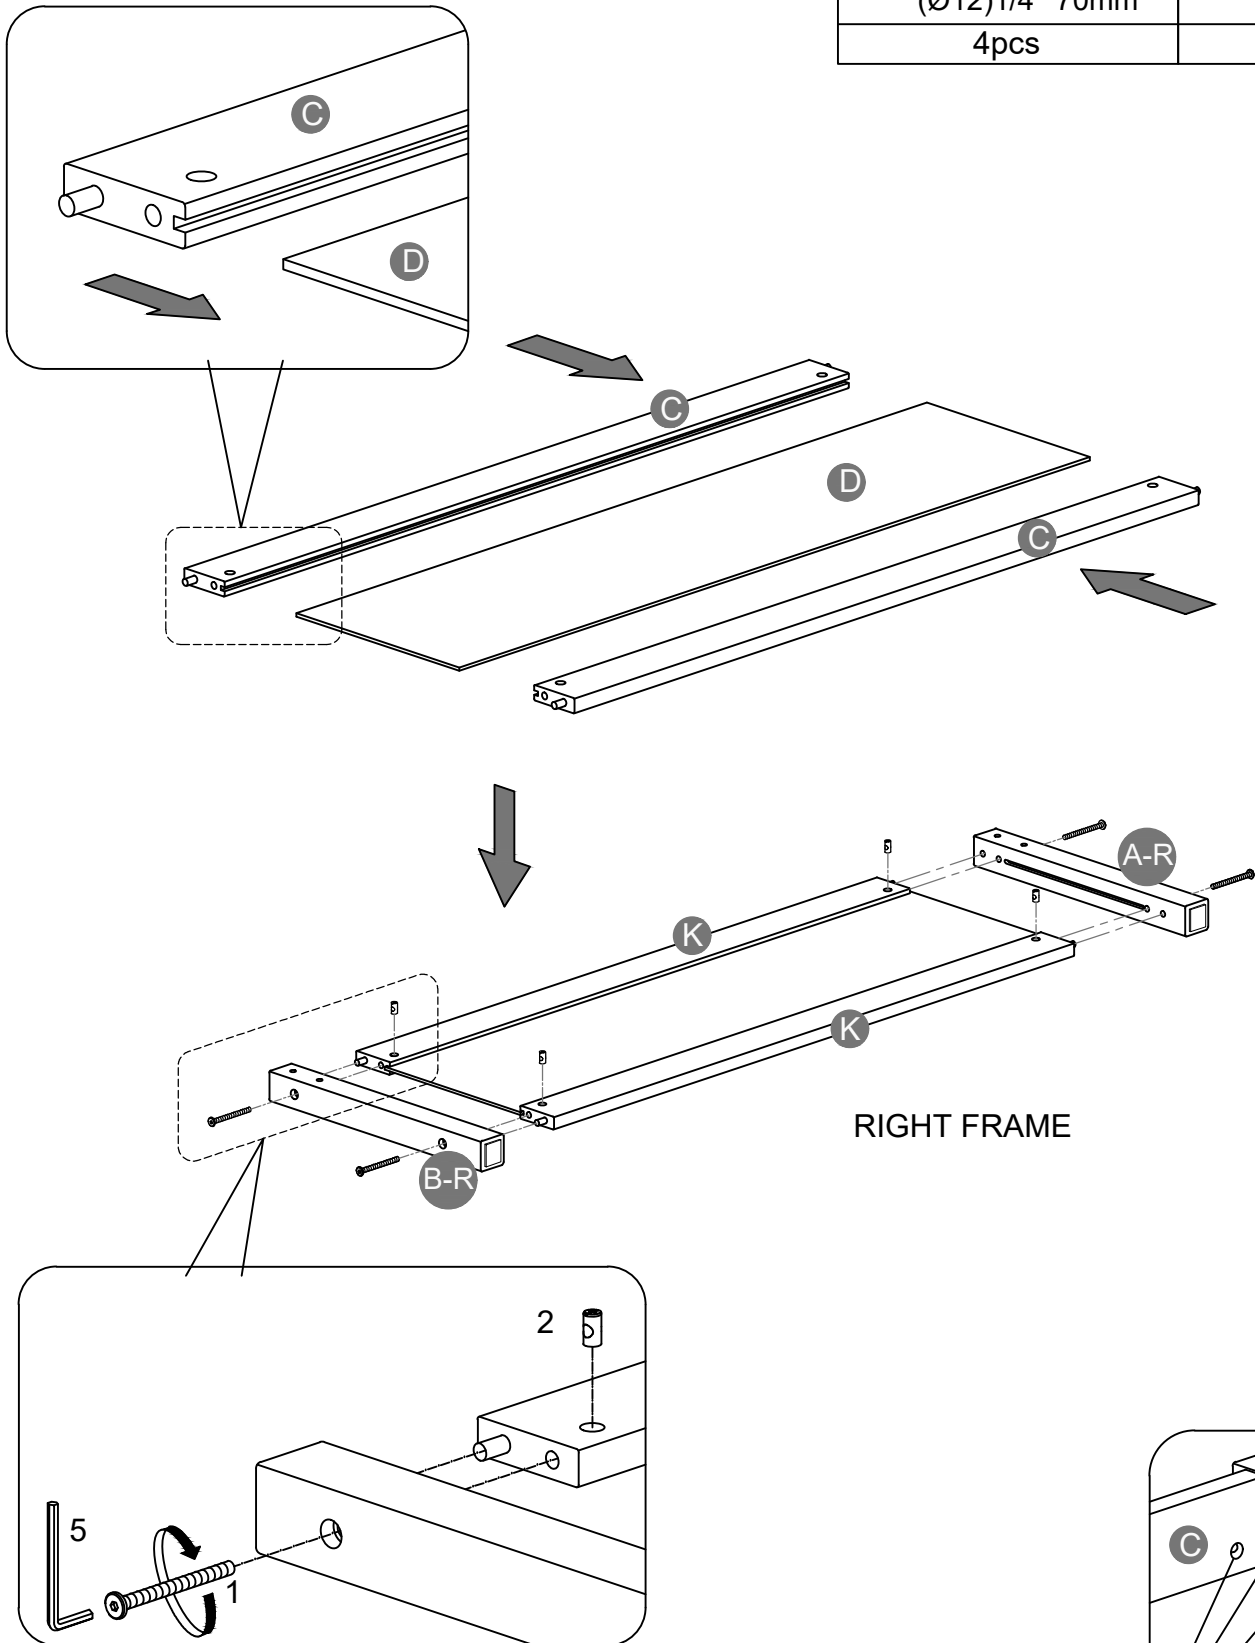

Note: Part 2 will face up with the "x" mark on it, otherwise it cannot be tightened

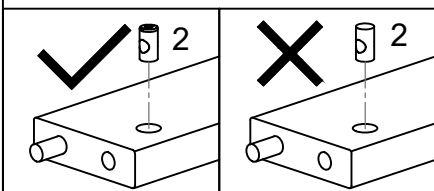

Make sure bars A-R, B-R, C are connected together on the same side (front-front, back-back)

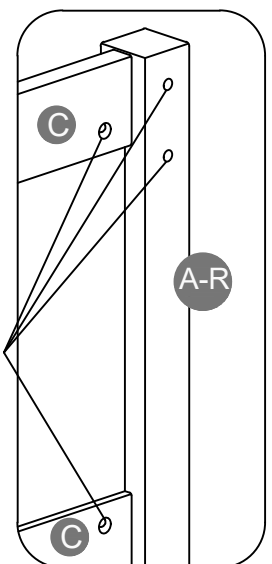

STEP 3:



1

(Ø12)1/4"*70mm
8pcs

2




8pcs

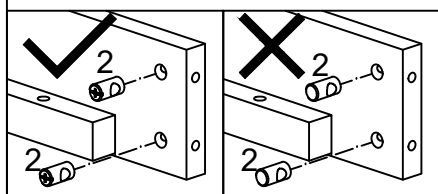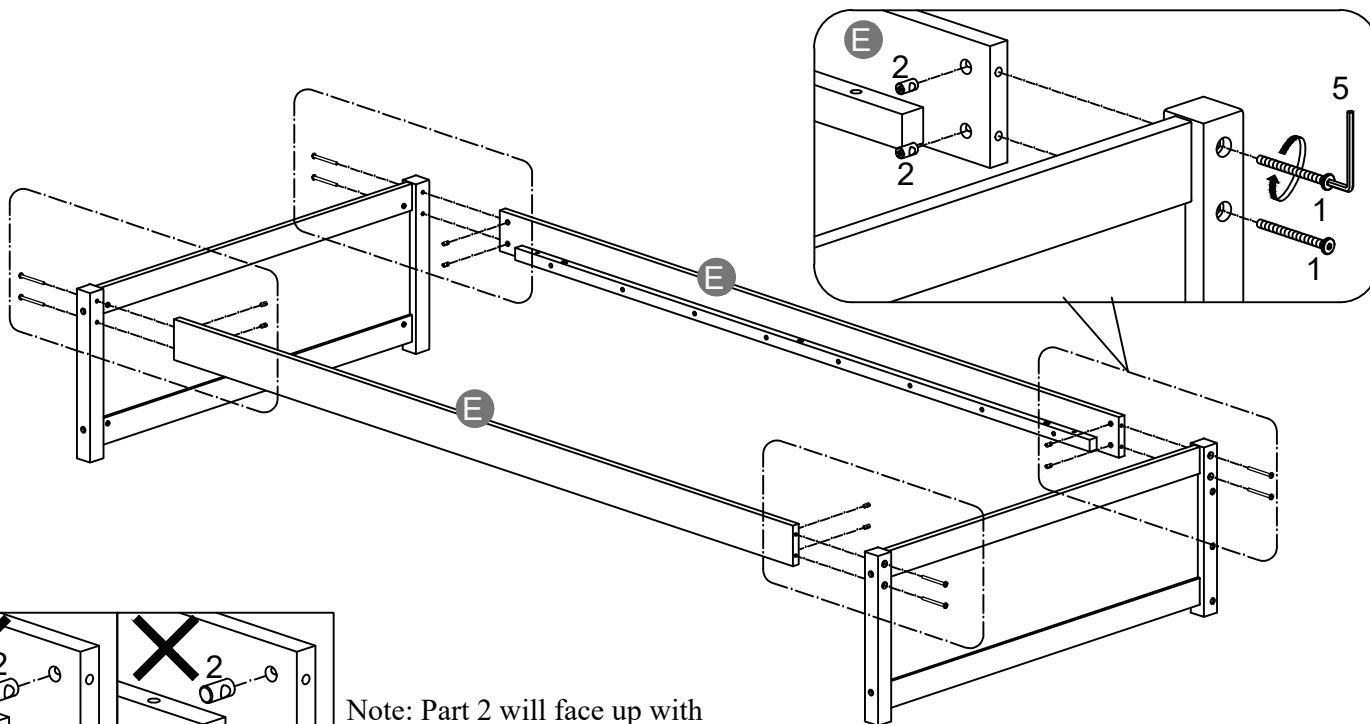

Note: Part 2 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 4:

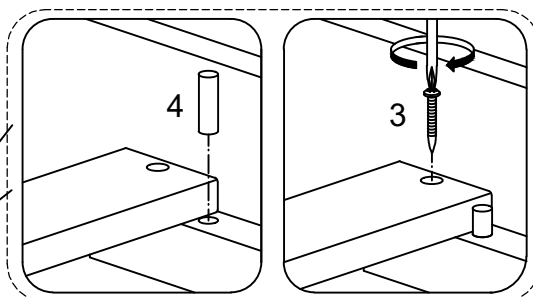


3






20 pcs

4





4pcs

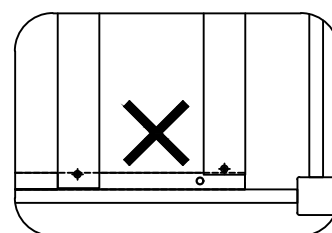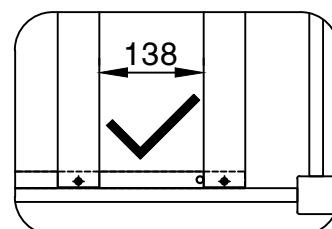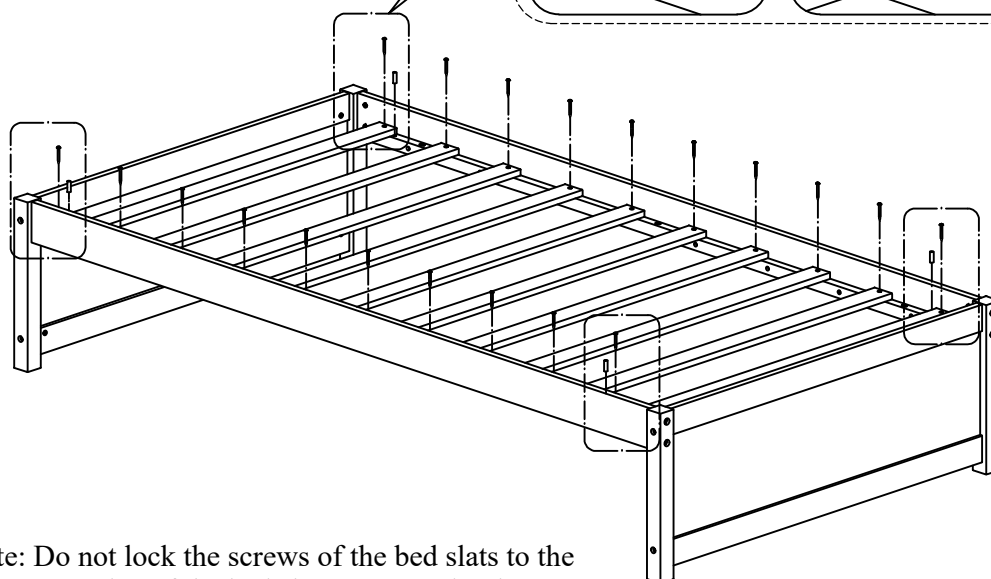

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

STEP 5:

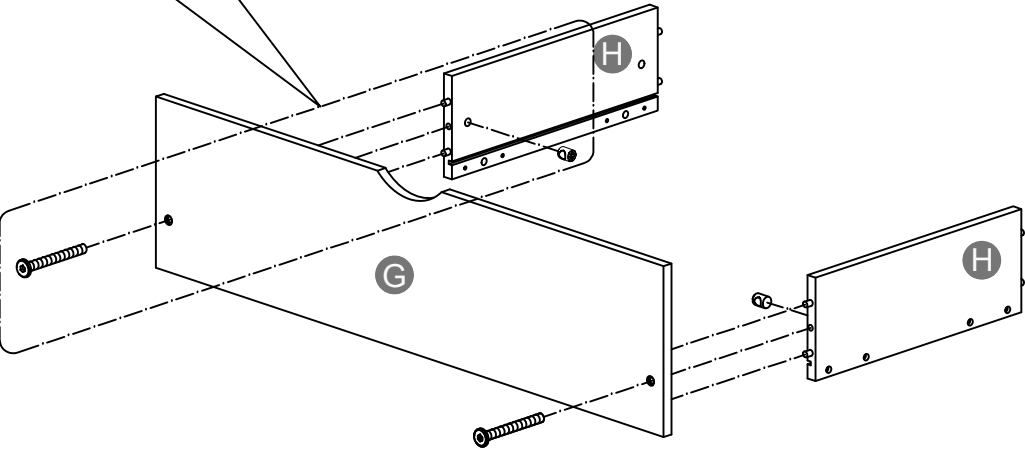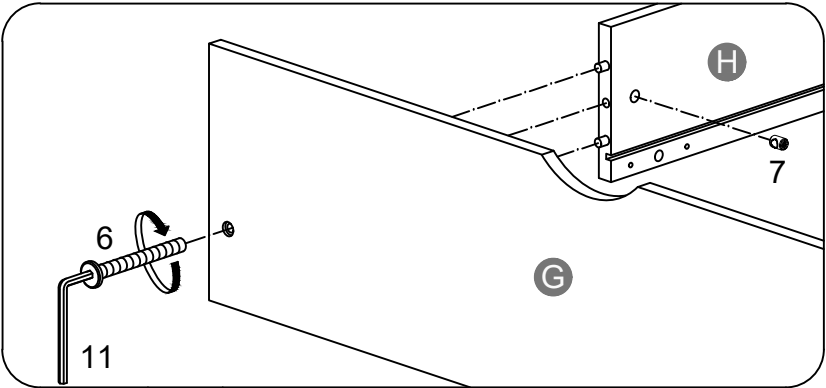

6

(Ø12)1/4"*55mm


4pcs

7






4pcs



Note:Part 7 will face up with the "*" mark on it, otherwise it cannot be tightened

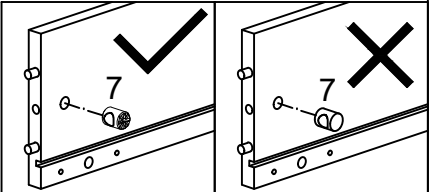


STEP 6:

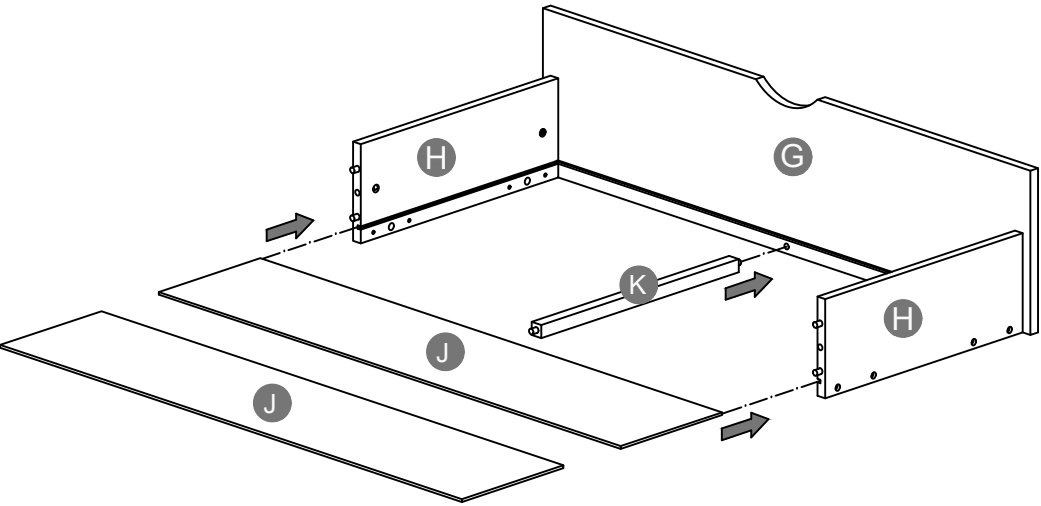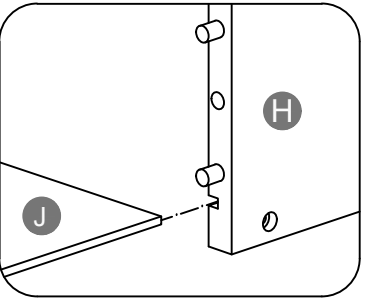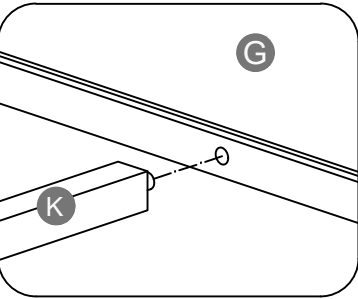


STEP 7:


6	 (Ø12)1/4"*55mm	7	
4pcs		4pcs	

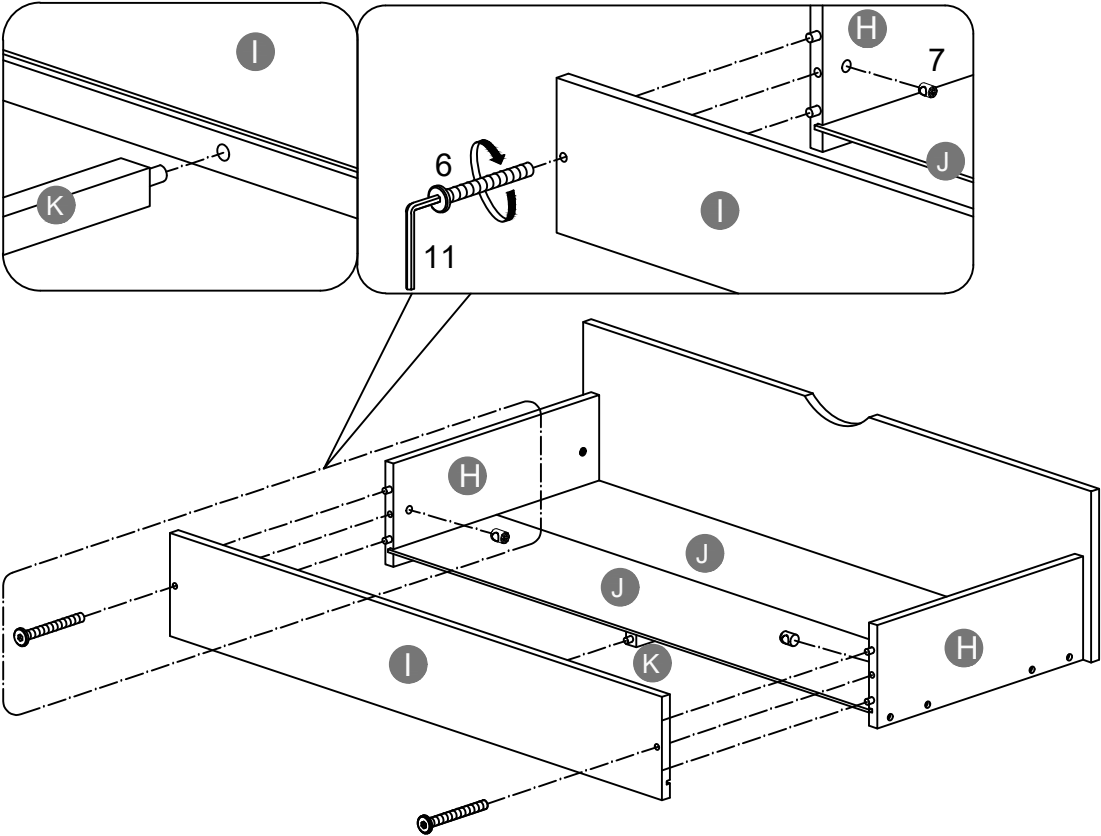





Note: Part 7 will face up with the "*" mark on it, otherwise it cannot be tightened

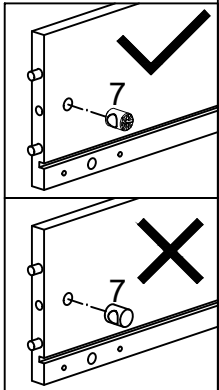




STEP 8:

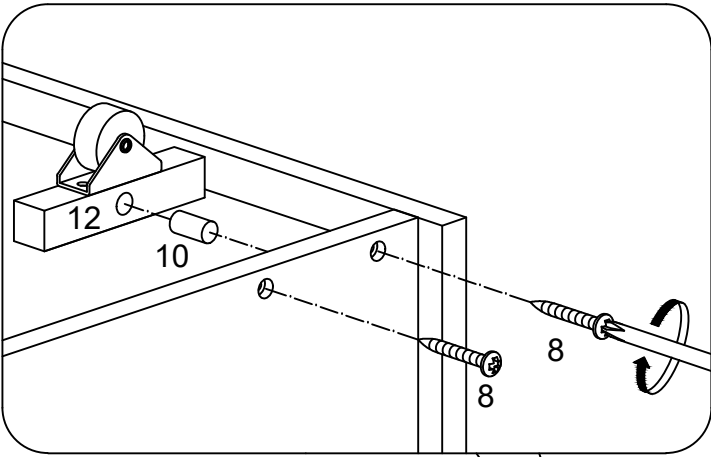


8	
16 pcs	
10	
8pcs	
12	
8pcs	

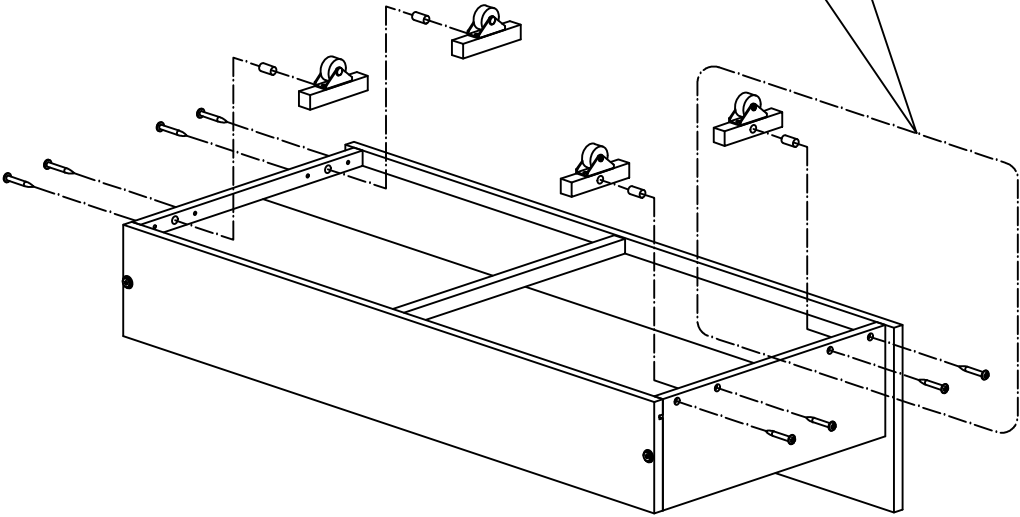

STEP 9:

6	 (Ø12)1/4"*55mm	9	 3pcs	13	 3pcs
----------	---	----------	---	-----------	---

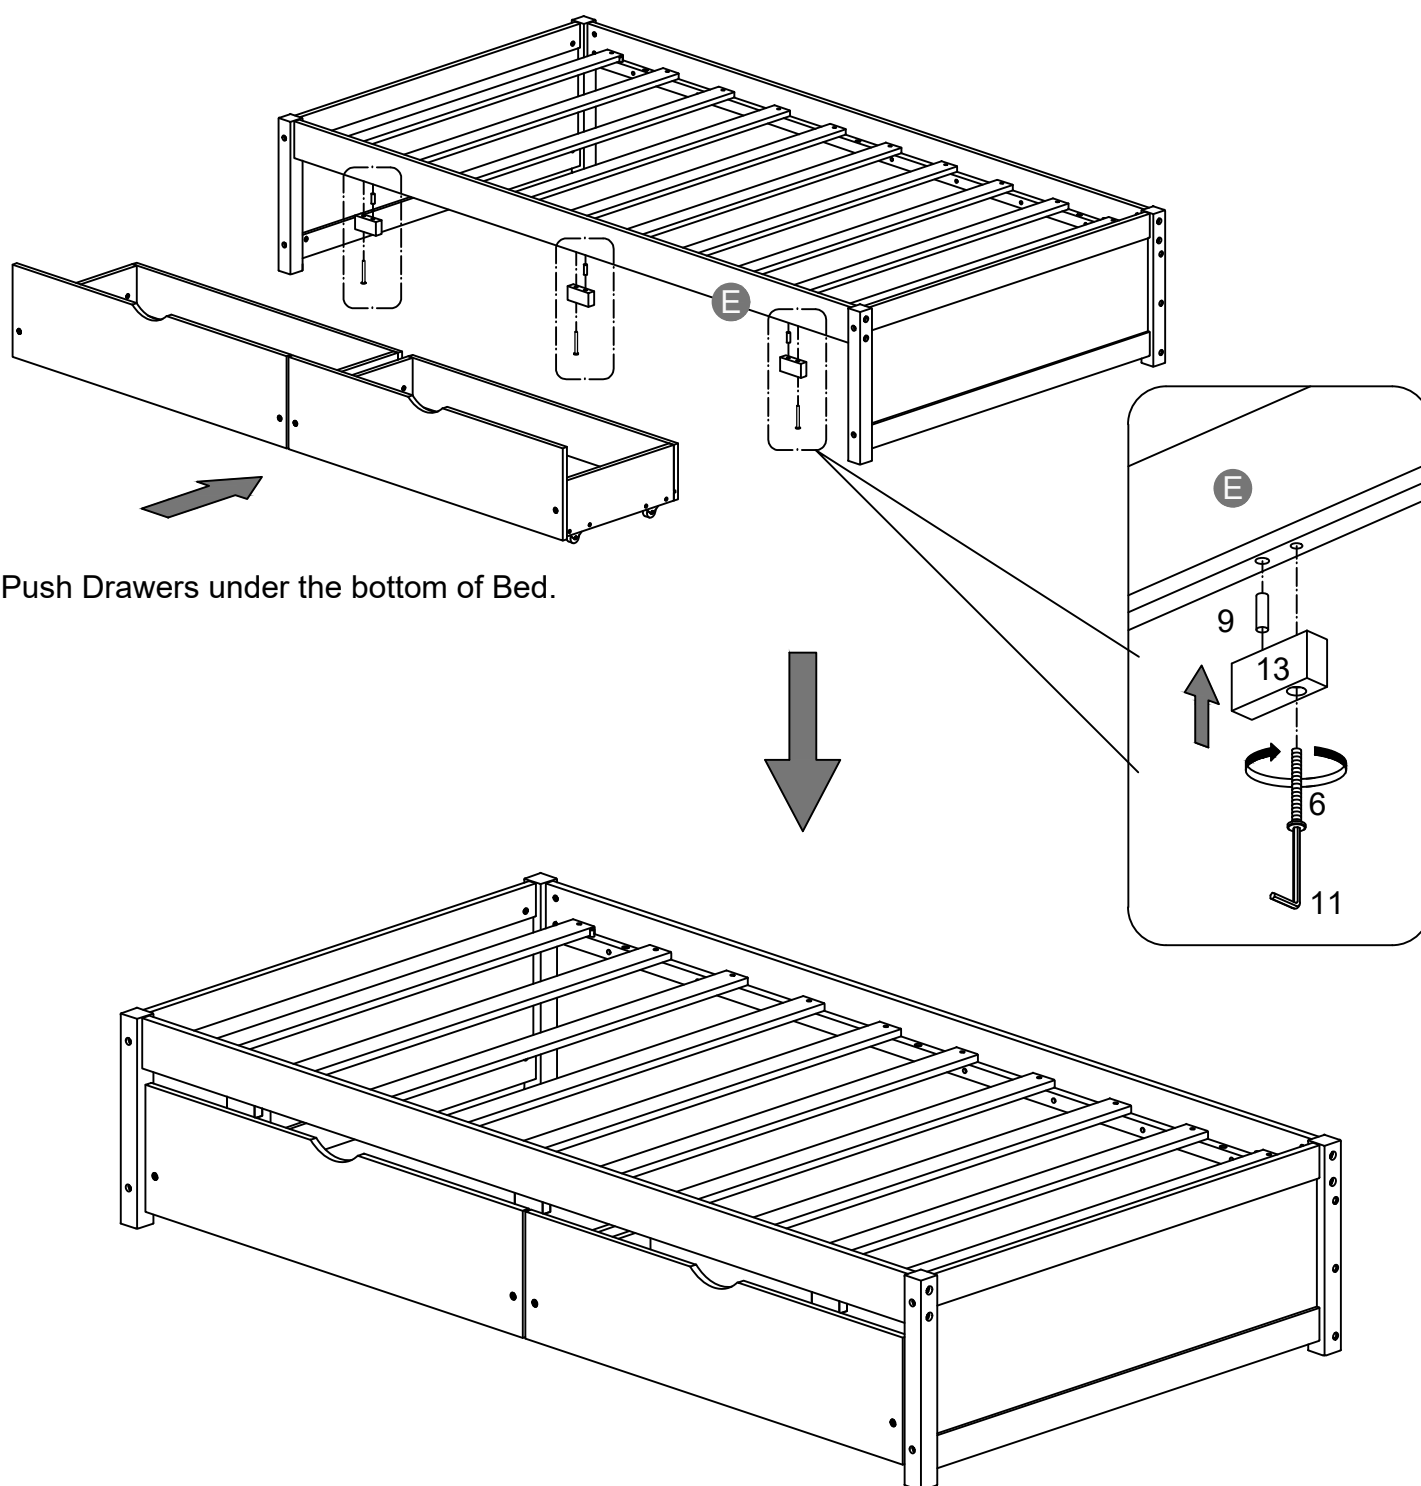

Make sure to tighten all the screws and bolt of the bed.

STEP 10:

1



YX7113-1



(Ø17)1/4"×32mm

6pcs

(YX7113-1) + (YX7113-2)

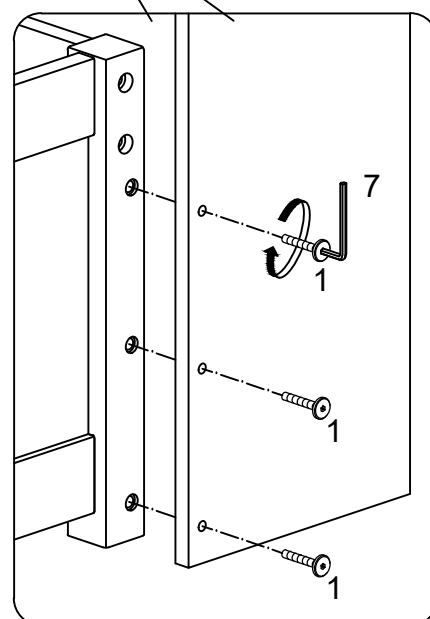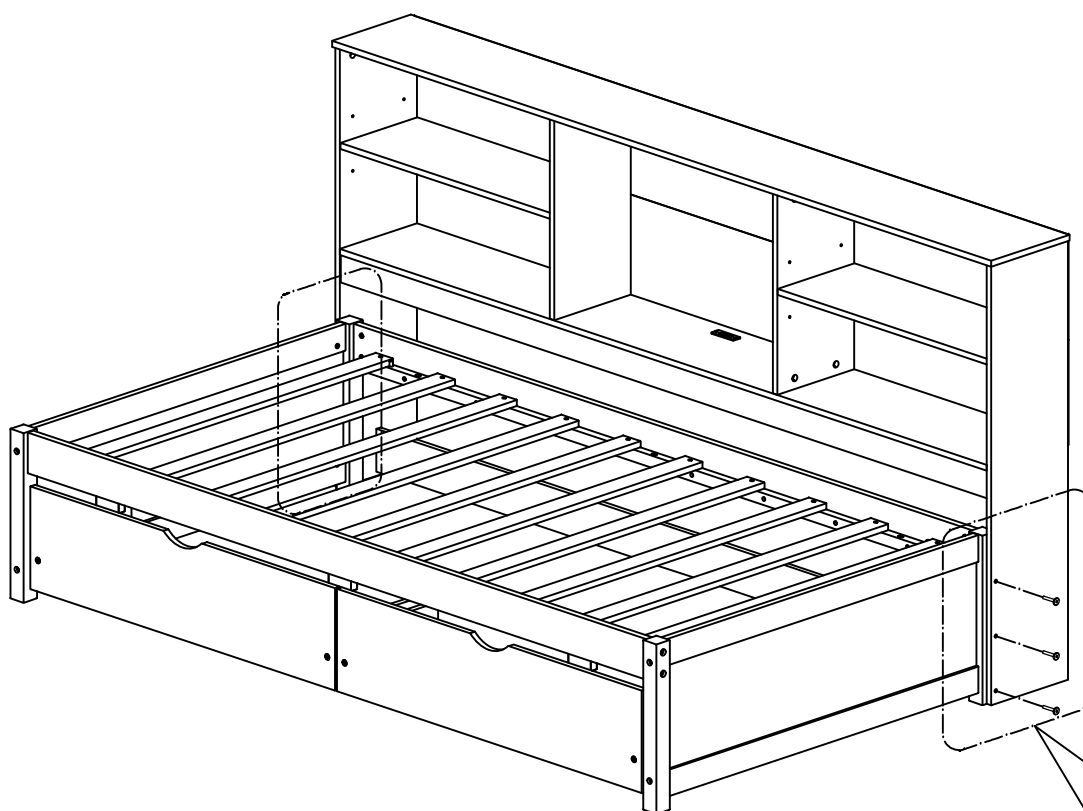

Make sure to tighten all the bolt of the bed.