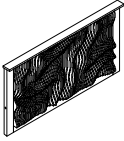







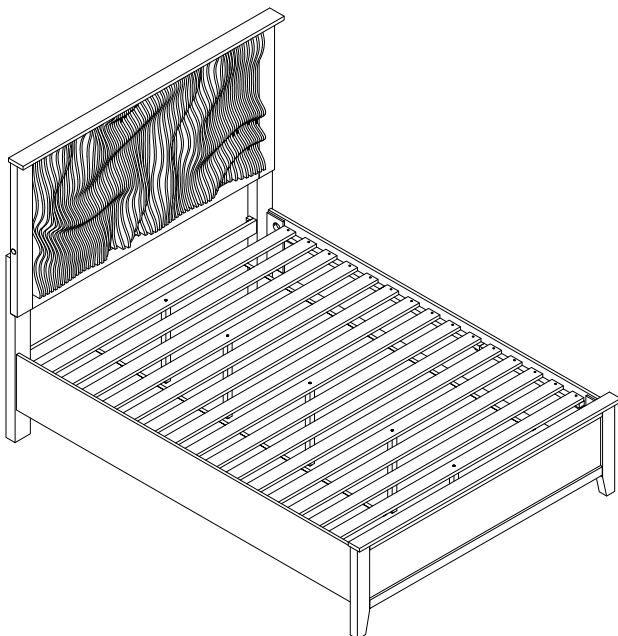


ASSEMBLY INSTRUCTIONS

PARAMETRIC QUEEN HEADBOARD WITH LED LIGHT

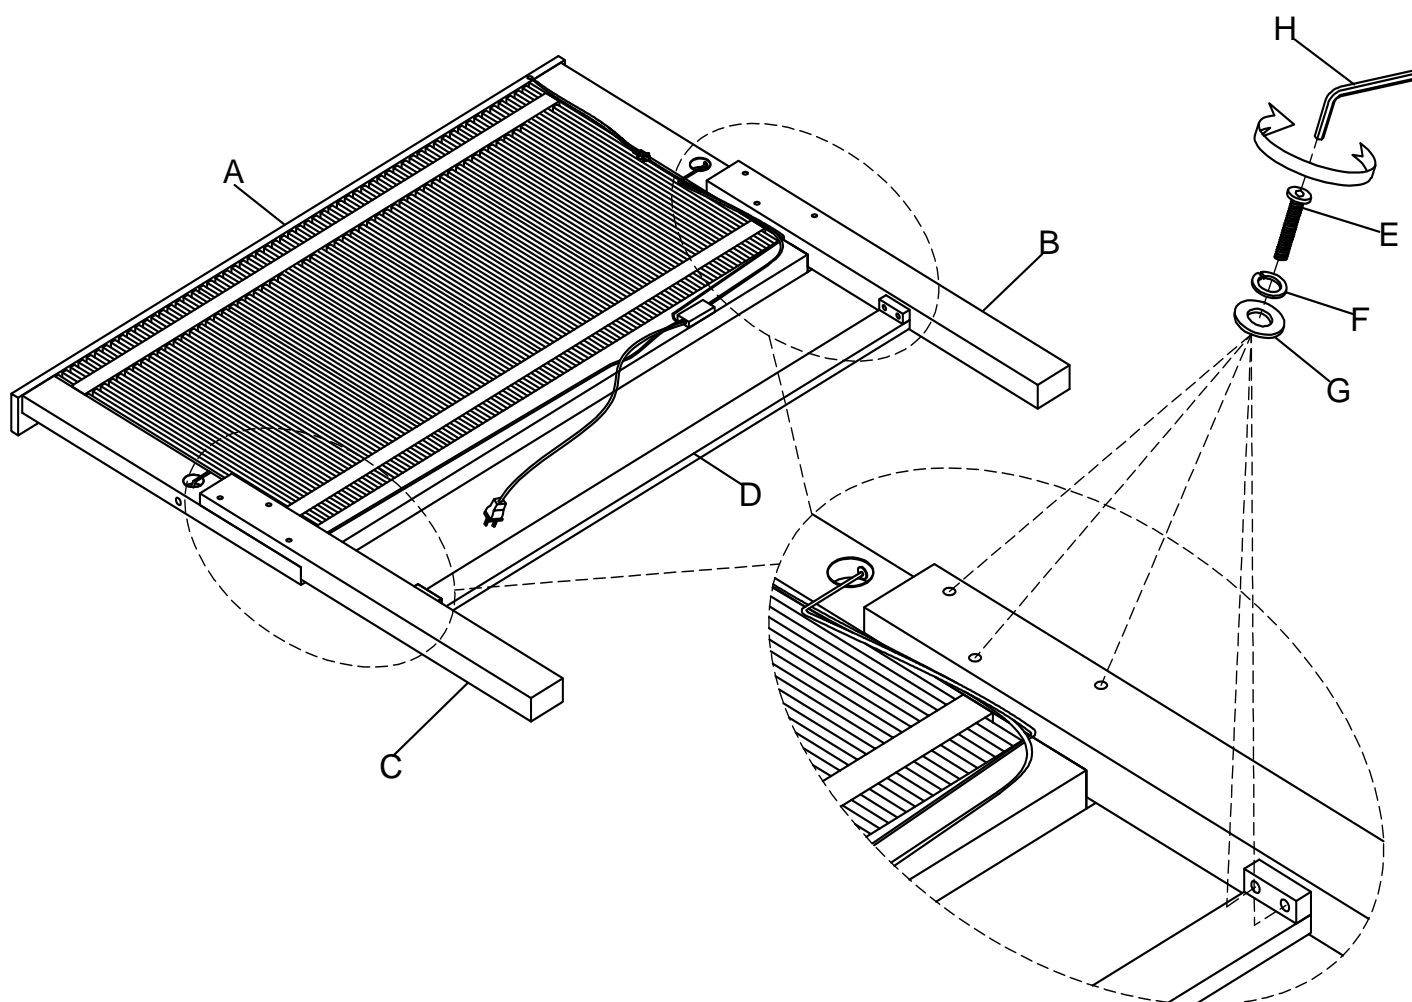
A Headboard Panel	B LSF Headboard Leg	C RSF Headboard Leg	D Stretcher
			
1PC E Bolt 5/16" x 50mm	1PC F Lock Washer 5/16" x 10mm	1PC G Flat Washer 5/16" x 19mm	1PC H L-Allen Key 4mm
			
10PCS	10PCS	10PCS	1PC



This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1

Attach LSF & RSF Headboard Leg (B & C) and Stretcher (D) to Headboard Panel (A) using Bolt (E), Lock Washer (F) and Flat Washer (G) with L-Allen Key (H).




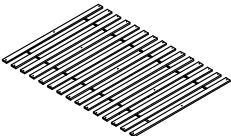








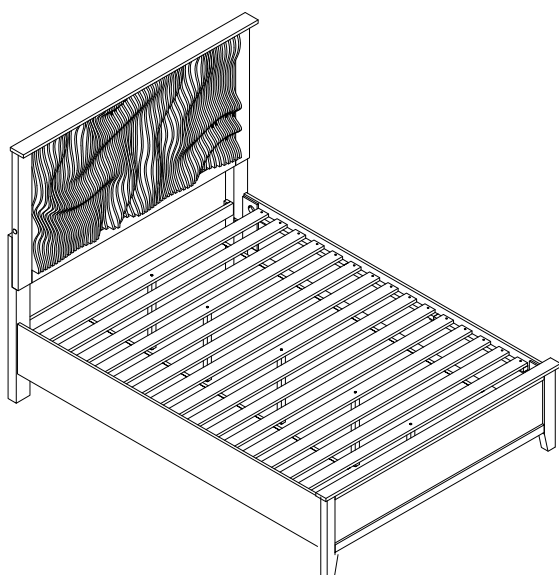
Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTIONS

PARAMETRIC QUEEN FOOTBOARD & SLATS & SUPPORT LEGS PARAMETRIC QUEEN/EASTERN KING SIDE RAILS

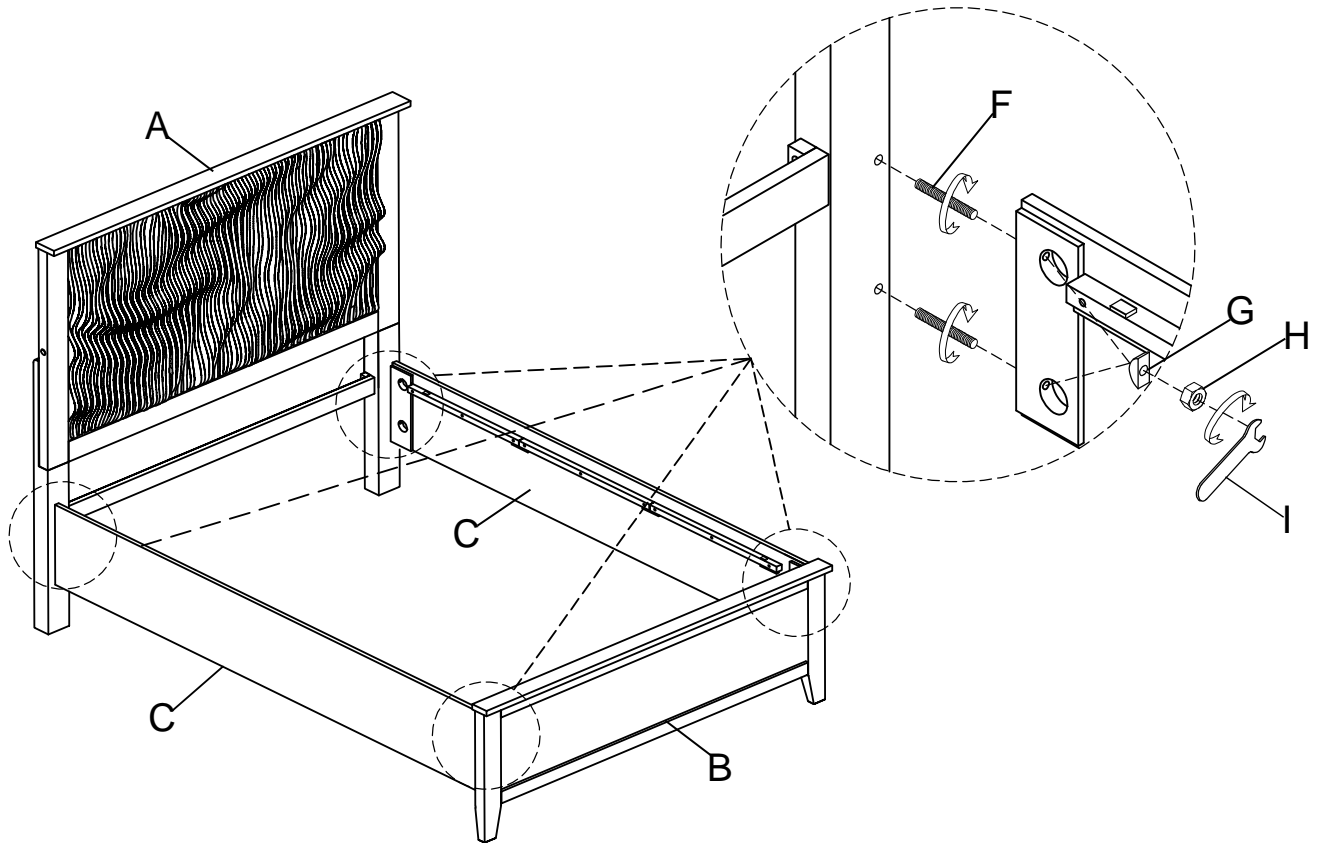
A Headboard (In the other carton)	B Footboard	C Side Rail	D Slat
			
1PC	1PC	2PCS	1SET (15PCS)
E Center Support Leg	F Threaded Rod 5/16" x 90mm	G Half Moon Nut 28 x 14 x 7mm	H Hexagon Nut 5/16" x 12 x 5mm
			
5PCS	8PCS	8PCS	8PCS
I Wrench 12mm	J Wood Screw Ø8 x 30mm		
			
1PC	30PCS		



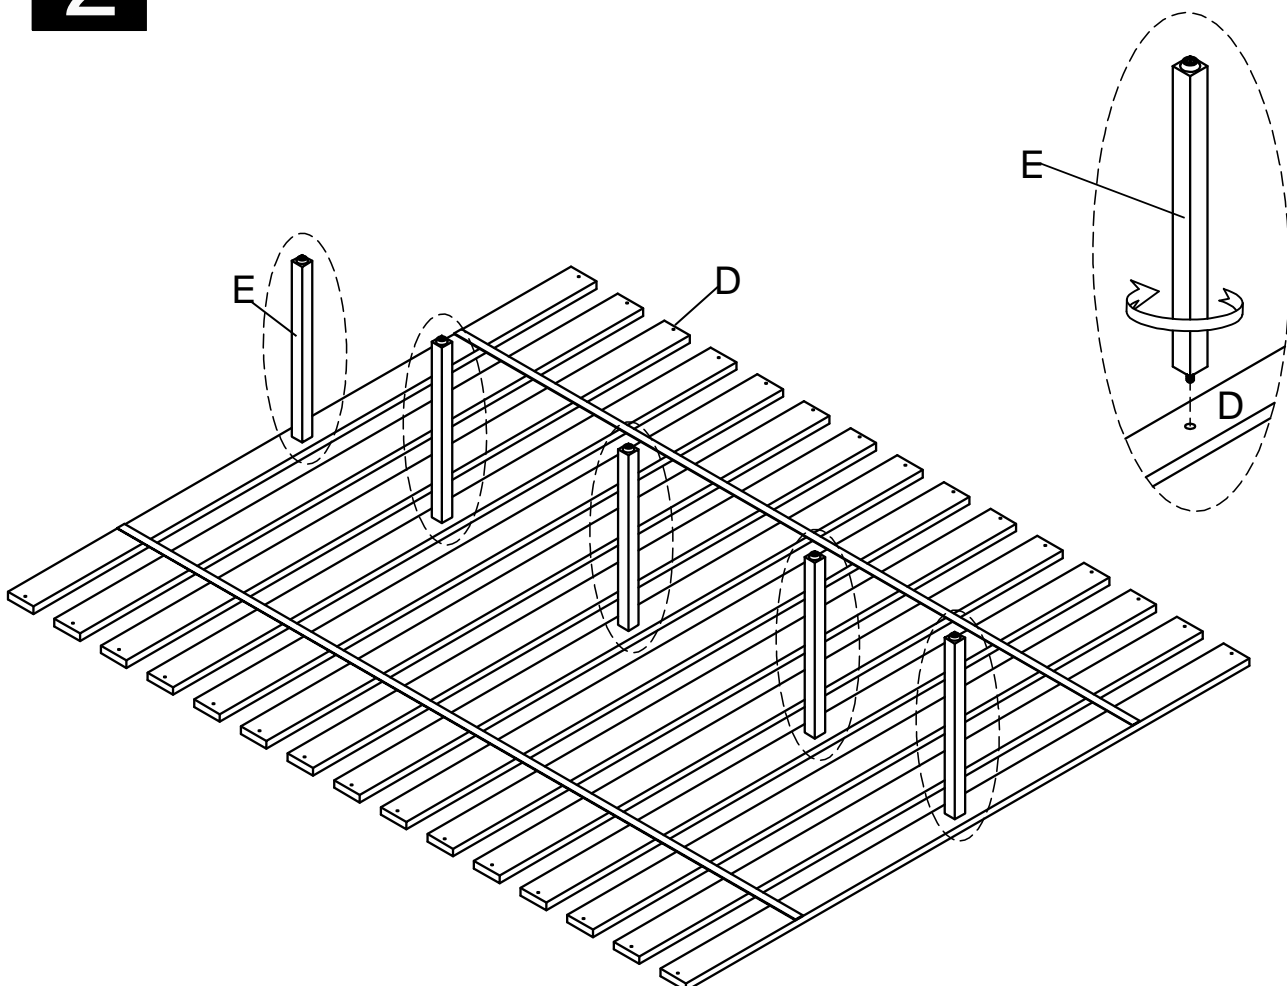
This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1

Turn Threaded Rod (F) into Headboard (A) and Footboard (B). Then, attach Side Rail (C) to Headboard (A) and Footboard (B) using Threaded Rod (F), Half Moon Nut (G) and Hexagon Nut (H) with Wrench (I).

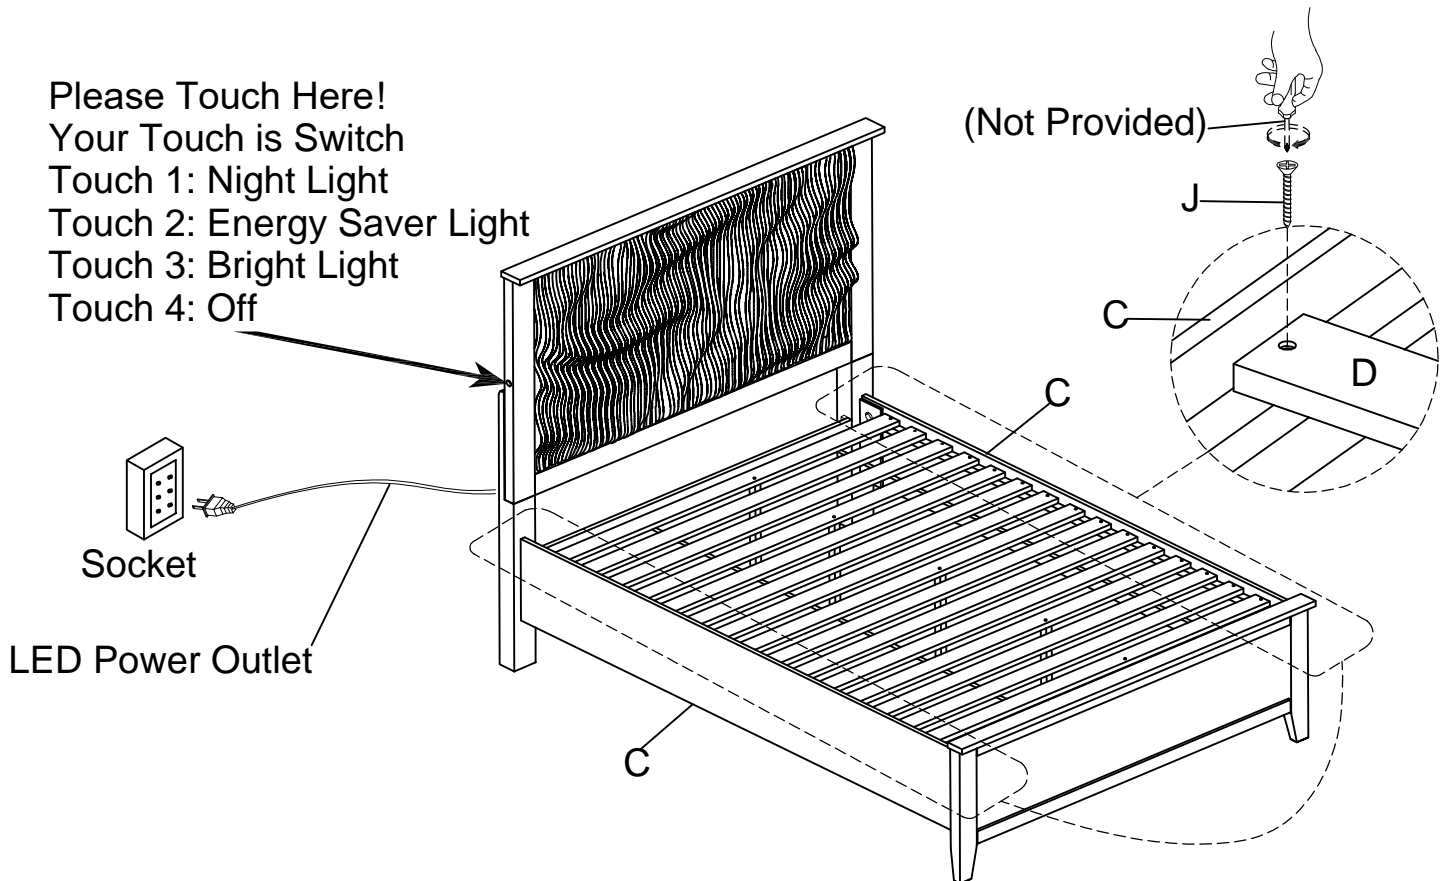
**2**

Turn Center Support Leg (E) into Slat (D).



3

Attach Slat (D) to Side Rail (C) using Wood Screw (J) with a screwdriver (not provided).



Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.