
Assembly Instructions

Caution: You must read this before you proceed.

Care & Maintenance







Do not put hot items directly on furniture surface.



• Do not clean furniture with harsh cleansers or polish.



Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



 Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside . For indoor use only.



Not for commercial use. For residential use only.



 Stains may be removed with mild soap solution and damp cloth.



• Children should not climb or jump on the furniture.



 Dust and pick-up spills using a clean, non-colored, lint-free cloth.

WARNING!!


Furniture Tipping Risk.

Serious risk of severe or fatal crush injuries can occur from furniture tipping over if not secured.

Children like to climb on furniture and Unsecured furniture can pose a serious danger.

Please follow all instructions and install the tip-over restraints provided.

Queen Size Bed

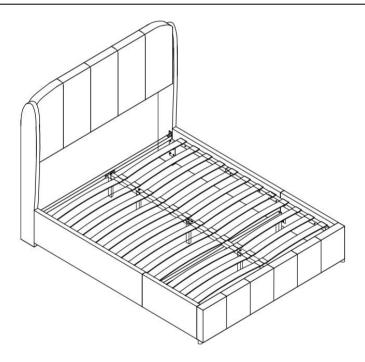

NOTE: This Bed is NOT a TOY.

Keep your child / children at bay during the assembly process.

The BED is HEAVY.

To prevent injury to yourself or damage to the product a minimum of two adults are required whenever moving or lifting the product.


Parts List				
No.	Picture	Description	Qty	
1		Headboard	1	
2		Footboard	1	
3		Side wings-Left	1	
4		Side wings-Right	1	
(5)		Side rails-Right &Front	1	
6		Side rails-Right &Rear	1	
Ø		Side rails-Left&Rear	1	
8		Side rails-Left&Front	1	
9		Cross Slat With Mounting Position	1	
100		Cross Slat Without Mounting Position	1	
11)	The state of the s	Side bars-Front	2	
(12)	SECTION AND ADDRESS OF THE PARTY OF THE PART	Side bars-Rear	2	
(3)		Middle bars	2	
(14)	\Diamond	Plastic caps-End	24	
(15)		Slats	24	
16)		Plastic caps-Middle	12	

(I)	Back of Fabric	1
-----	----------------	---

Hardware				
No.	Picture	Description	Qty	
А	(a) Jump	Bolts(M8*18mm)	38	
В		Bolts(M8*40mm)	10	
С		Bolts(M8*45mm)	18	
D		Metal Brackets	2	
E		Coner Brackets	2	
F		Metal Brackets	2	
G		Nut	3	
Н	©	Washer	4	
I		Metal Brackets	2	
J		Middle feet(24cm)	2	
К		Middle feet-U shape(24cm)	1	
L		Support feet-Front(24cm)	1	
М		Support feet-Side(16.5cm)	2	
N	*	Plastic Feet(5*6cm)	2	
0		Spanner	1	
Р		Allen Wrench	1	

Assembly Preparation

Before Beginning Assembly:

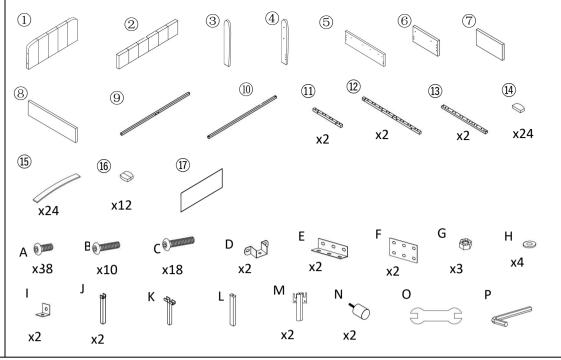



Read instructions, cover to cover-



Have 2 or 3 adults on hand for assembly-



· Do not assemble on flooring or carpet-




Assemble on a clean non-marring surface (packing foam)-




Save all packaging until finished-

Assembly Steps

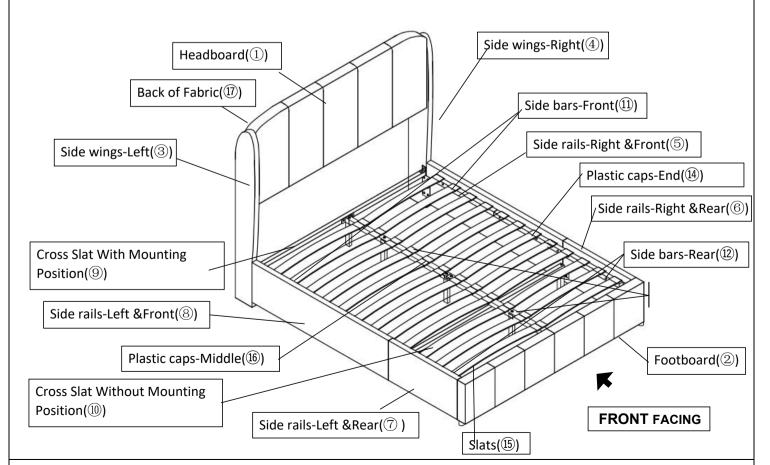

This Bed has multiple parts and may require up to 60 minutes to assemble. To give you an overview of the Bed parts, the above picture is to help you put the various Bed parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


Page 6 0F 14

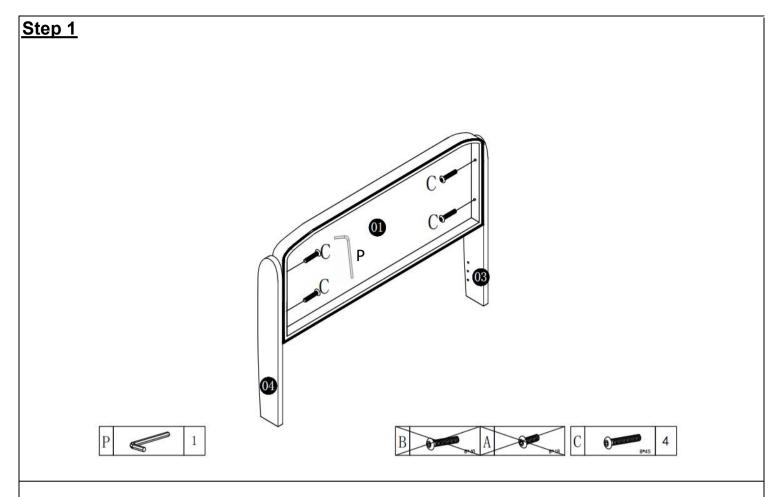

First attach the Side wings-Right (4) and Side wings-Left (3) to the Headboard (1) using Bolts (C) and Allen Wrench (P)

Please note that the shapes of Bolts (A) and (B) and (C) are similar. Please install according to the instructions and distinguish them!

Step 2

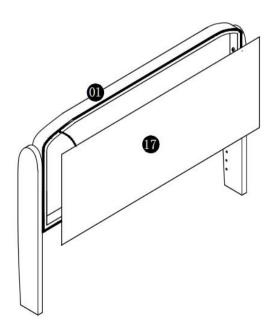


Attach Back of Fabric (10) to the back velcro of Headboard (10)

Step 3

N 🗞 2


Fix the Plastic feet(N) to the Footboard(②).

Step 4

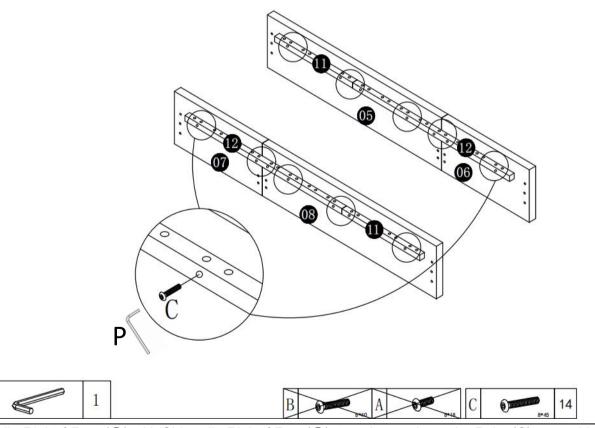

First put the Side rails-Right &Front(⑤) with Side rails-Right &Rear(⑥) together,and use the Bolts (C) assemble the Side bars-Front(①) to the Side rails-Right &Front(⑤), and use the Bolts (C) assemble the Side bars-Rear(②) to the Side rails-Right &Rear(⑥).


Second put the Side rails-Left &Rear(\bigcirc) with the Side rails-Left &Front(\bigcirc) together,and use the Bolts (C) assemble the Side bars-Rear(\bigcirc) to the Side rails-Left &Rear(\bigcirc), and use the Bolts (C) assemble the Side bars-Front(\bigcirc) to the Side rails-Left &Front(\bigcirc).

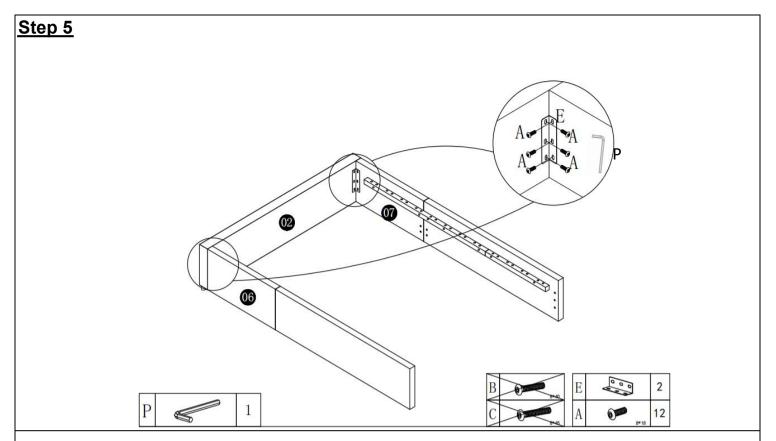

First put Side rails-Left&Rear(\bigcirc) together with the left side of Footboard(\bigcirc). The Footboard(\bigcirc) and Side rails-Left &Rear(\bigcirc) are assembled using Bolts(A) and Coner Brackets(E).


Second place Side rails-Right&Rear(⑥) with the right side of Footboard(②) and connect the two sections using Bolts(A) and Coner Brackets(E).

Please note that the shapes of Bolts (A) and (B) and (C) are similar. Please install according to the instructions and distinguish them!

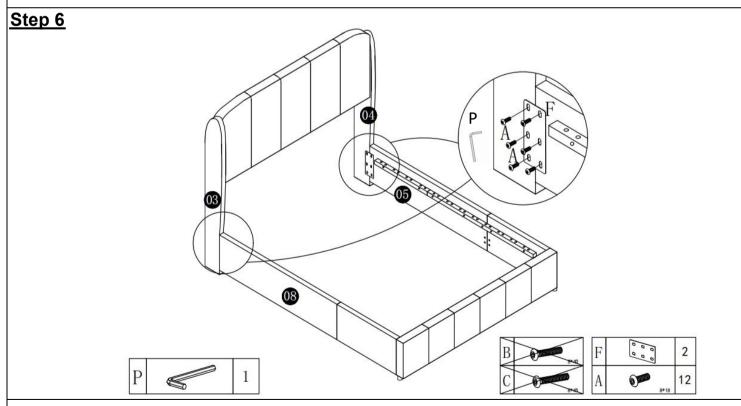


First put Side wings-Right(④) and Side rails-Right &Front(⑤) together, then assemble them using Bolts(A) and Metal Brackets(F).

Second put Side wings-Left(③) and Side rails-Left &Front(⑥)together, then assemble them using Bolts(A) and Metal Brackets(F).

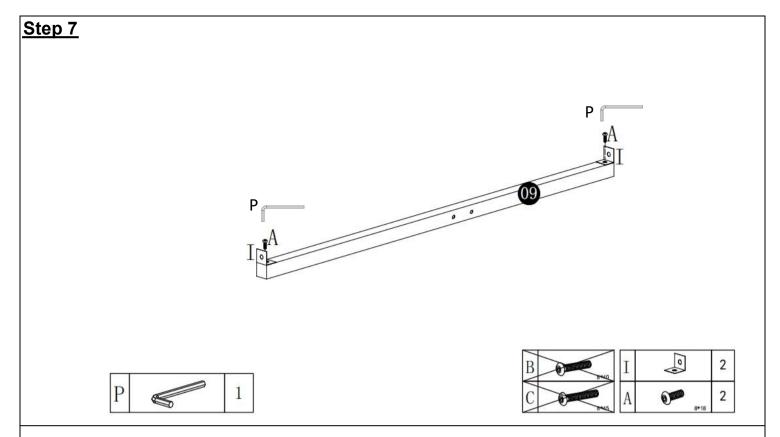

Attach the Metal Brackets(I) into the Cross Slat With Mounting Position(⑨) using Allen Wrench(P) and Bolts(A) Up.

Please note that the shapes of Bolts (A) and (B) and (C) are similar. Please install according to the instructions and distinguish them!

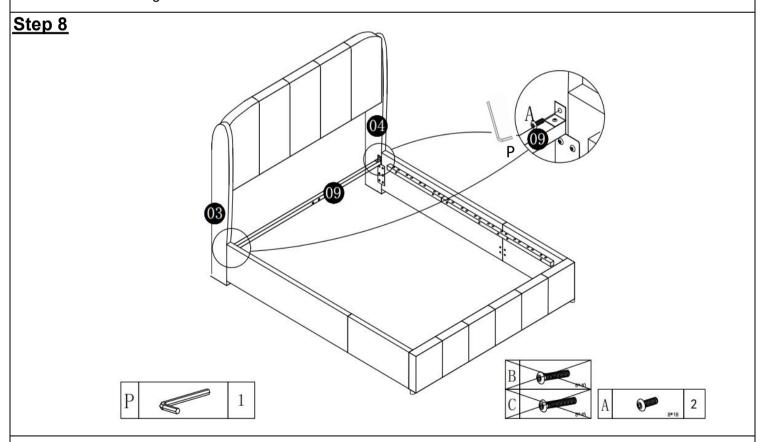


First, Assemble the Metal Brackets(I) and Metal Side wings-Right(4) together using Allen Wrench(P) and Bolts(A).

Second, Assemble the Metal Brackets(I) and Side wings-Left(③)together using Allen Wrench(P) and Bolts(A).

P 1


Assemble the Support feet-Side(16.5cm)(M) into the Cross Slat Without Mounting Position(⑩) using Allen Wrench(P) and Bolts(A) Up.

Please note that the shapes of Bolts (A) and (B) and (C) are similar. Please install according to the instructions and distinguish them!

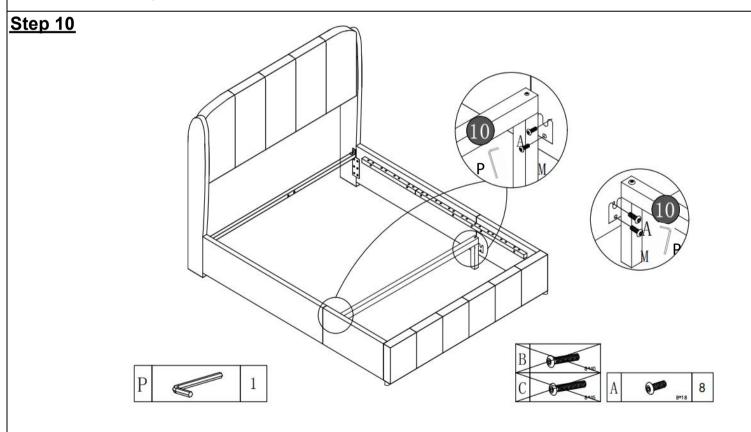

First, Assemble the Support feet-Side(16.5cm)(M) and Right rails together using Allen Wrench(P) and Bolts(A).

Second, Assemble the Support feet-Side(16.5cm)(M) and Left rails together using Allen Wrench(P) and Bolts(A).

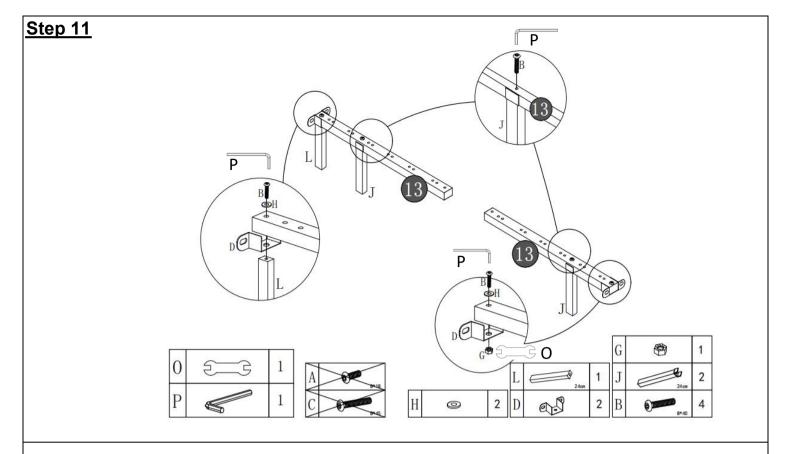


First, Using the Allen Wrench(P) to make the Bolts(B) and Washer(H) and Metal Brackets(D) to assemble the Middle bars(③) and Support feet Front(24cm)(L) together.


Second, Using the Allen Wrench(P) and Spanner(O) to make the Bolts(B) Bolts(B), and Washer(H) and Nut(G) to assemble the Middle bars(③) and Metal Brackets(D) together.

Third,using Allen Wrench(P) and Bolts(B) to make the Middle feet(24cm)(J) assemble to the Middle bars(3), as shown above, and Please repeat this step.

Please note that the shapes of Bolts (A) and (B) and (C) are similar. Please install according to the instructions and distinguish them!

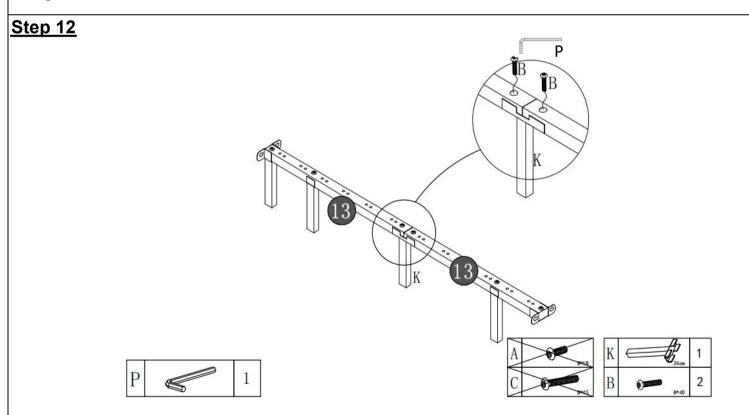


Using the Allen Wrench(P) and Bolts(B) to connect Middle feet-U shape(24cm)(K) to the 2 Middle bars(③). Please note that the shapes of Bolts (A) and (B) and (C) are similar. Please install according to the instructions and distinguish them!

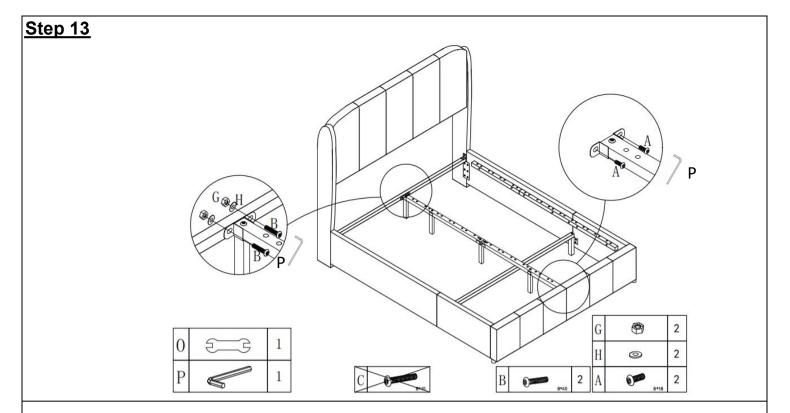

First, Find the tools Allen Wrench(P) and Spanner(O) and use the Bolts(B) to assemble the Metal Brackets(D) into the Cross Slat With Mounting Position(③).

Second, the Metal Brackets(D) and Footboard (②) are assembled using the Allen wrench (P) and with Bolts (A). Please note that the shapes of Bolts (A) and (B) and (C) are similar. Please install according to the instructions and distinguish them!

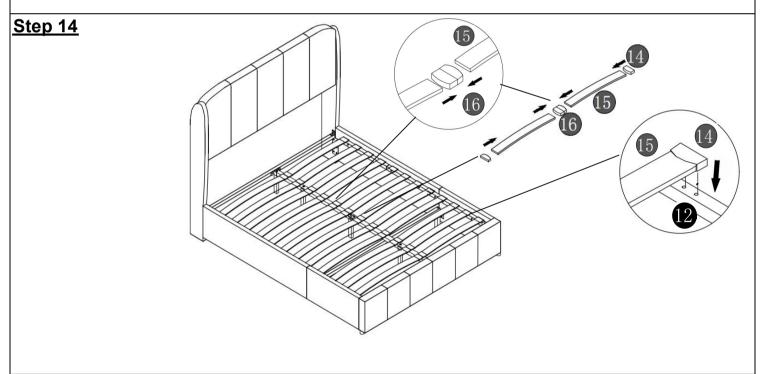

Assemble Plastic caps-End(4) on the edge of Slats(5). Plastic caps-Middle(6) is used to connect the Slats(5) on both sides together. Then lay the Slats flat over the holes in the Side rails.

Your Bed is ready for use.

Note: After assembly and before using the bed, inspect to make sure all parts are properly connected and securely fastened.

/\ WARNING

Serious or fatal crushing injuries can occur from tipping furniture. To help prevent tip-over: ALWAYS secure this furniture to the wall using a Safety Restraint Device. See product instructions for more ways to help prevent furniture tip-over.