
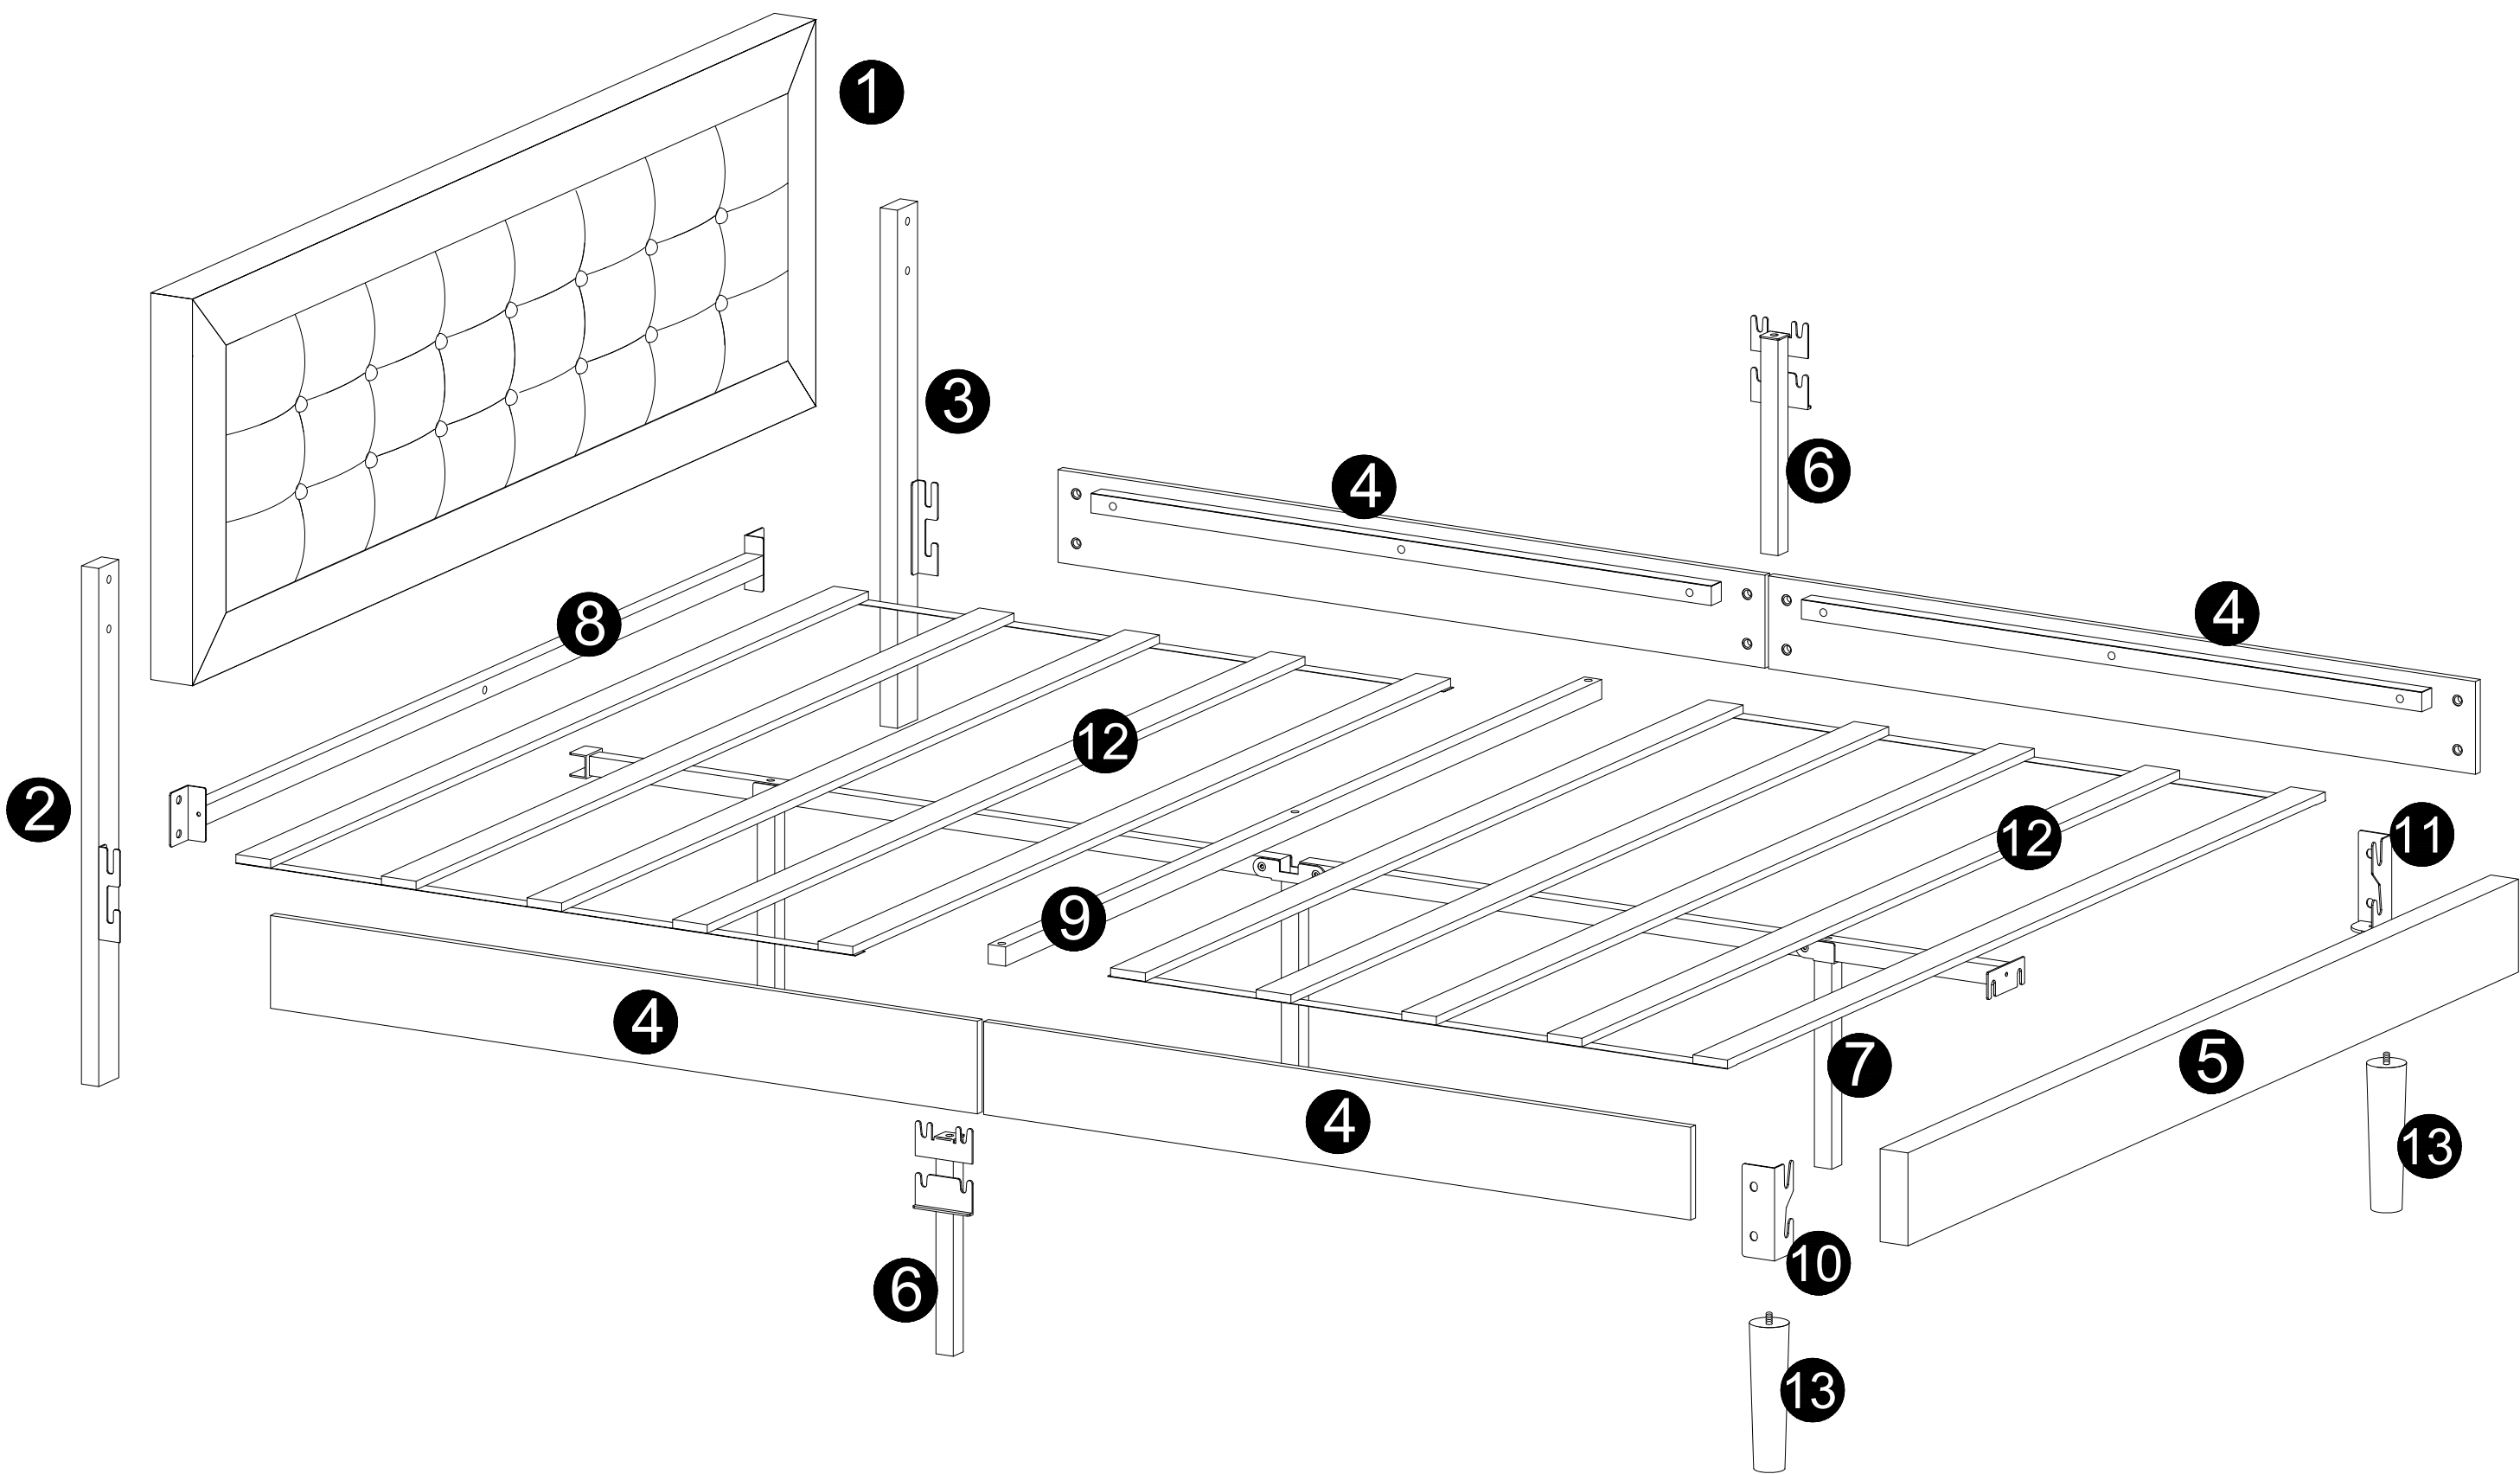
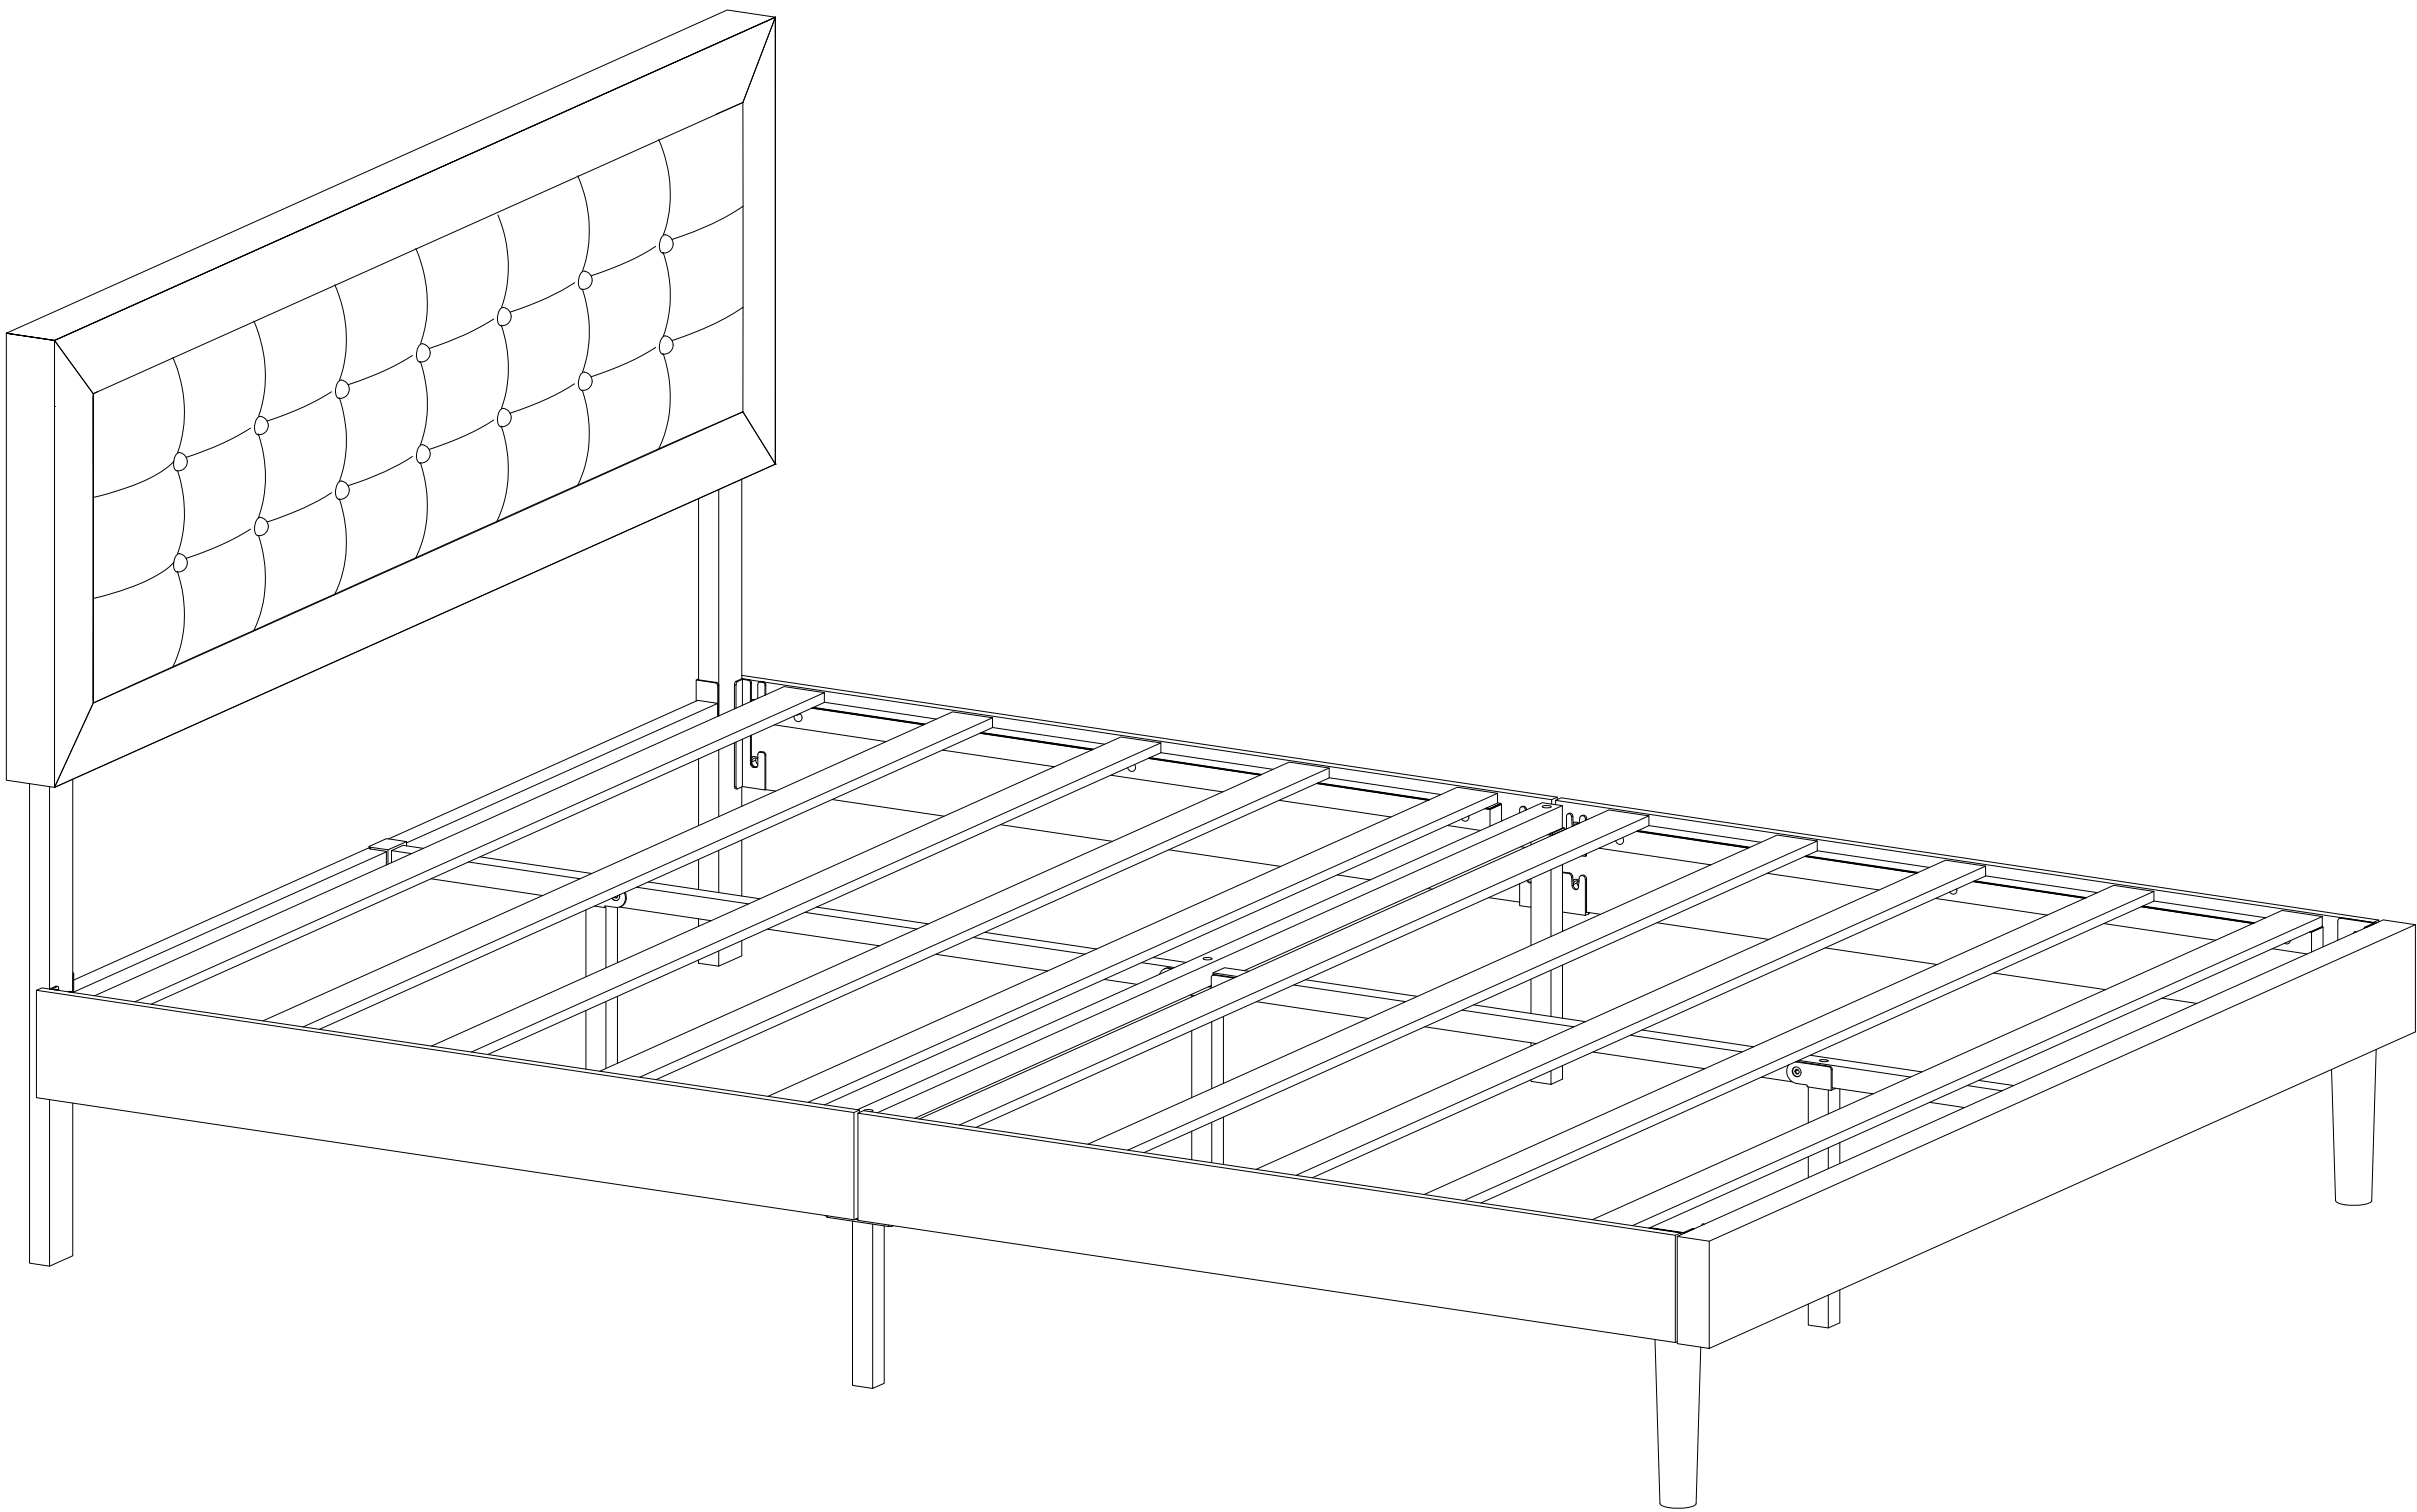
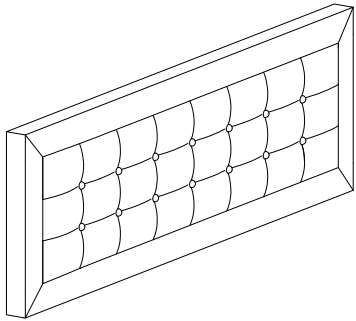


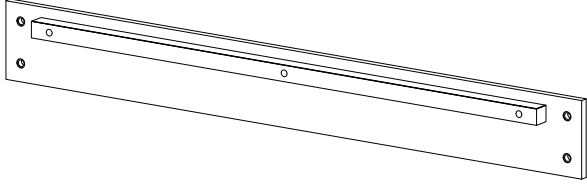
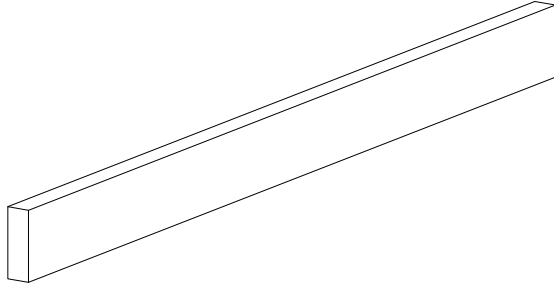

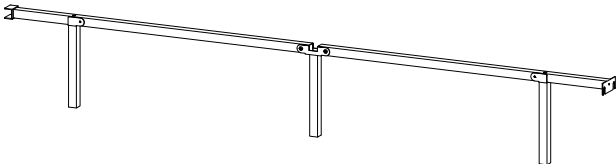
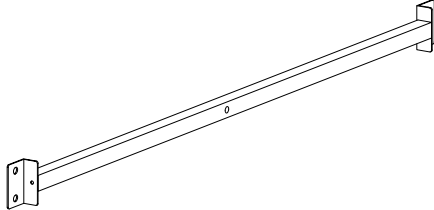
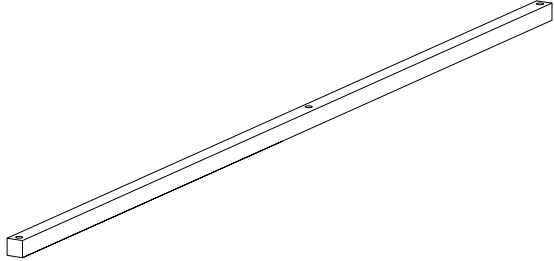


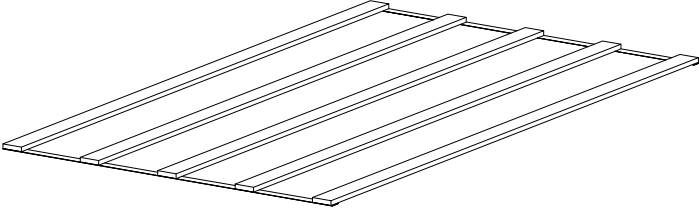









Installation Manual

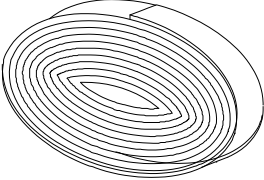

 ① × 1pc	 ② × 1pc	 ③ × 1pc	 ④ × 4pcs
 ⑤ × 1pc	 ⑥ × 2pcs	 ⑦ × 1pc	 ⑧ × 1pc
 ⑨ × 1pc	 ⑩ × 1pc	 ⑪ × 1pc	 ⑫ × 2pcs
 ⑬ × 2pcs			


 M8×45mm A ×2pcs	 M8×40mm B ×6pcs	 M8×15mm C ×20pcs	 M6×35mm D ×2pcs	 M8×25mm E ×6pcs
 F 5mm×1pc	 G×1pc			

1




M8×40mm

B × 4pcs

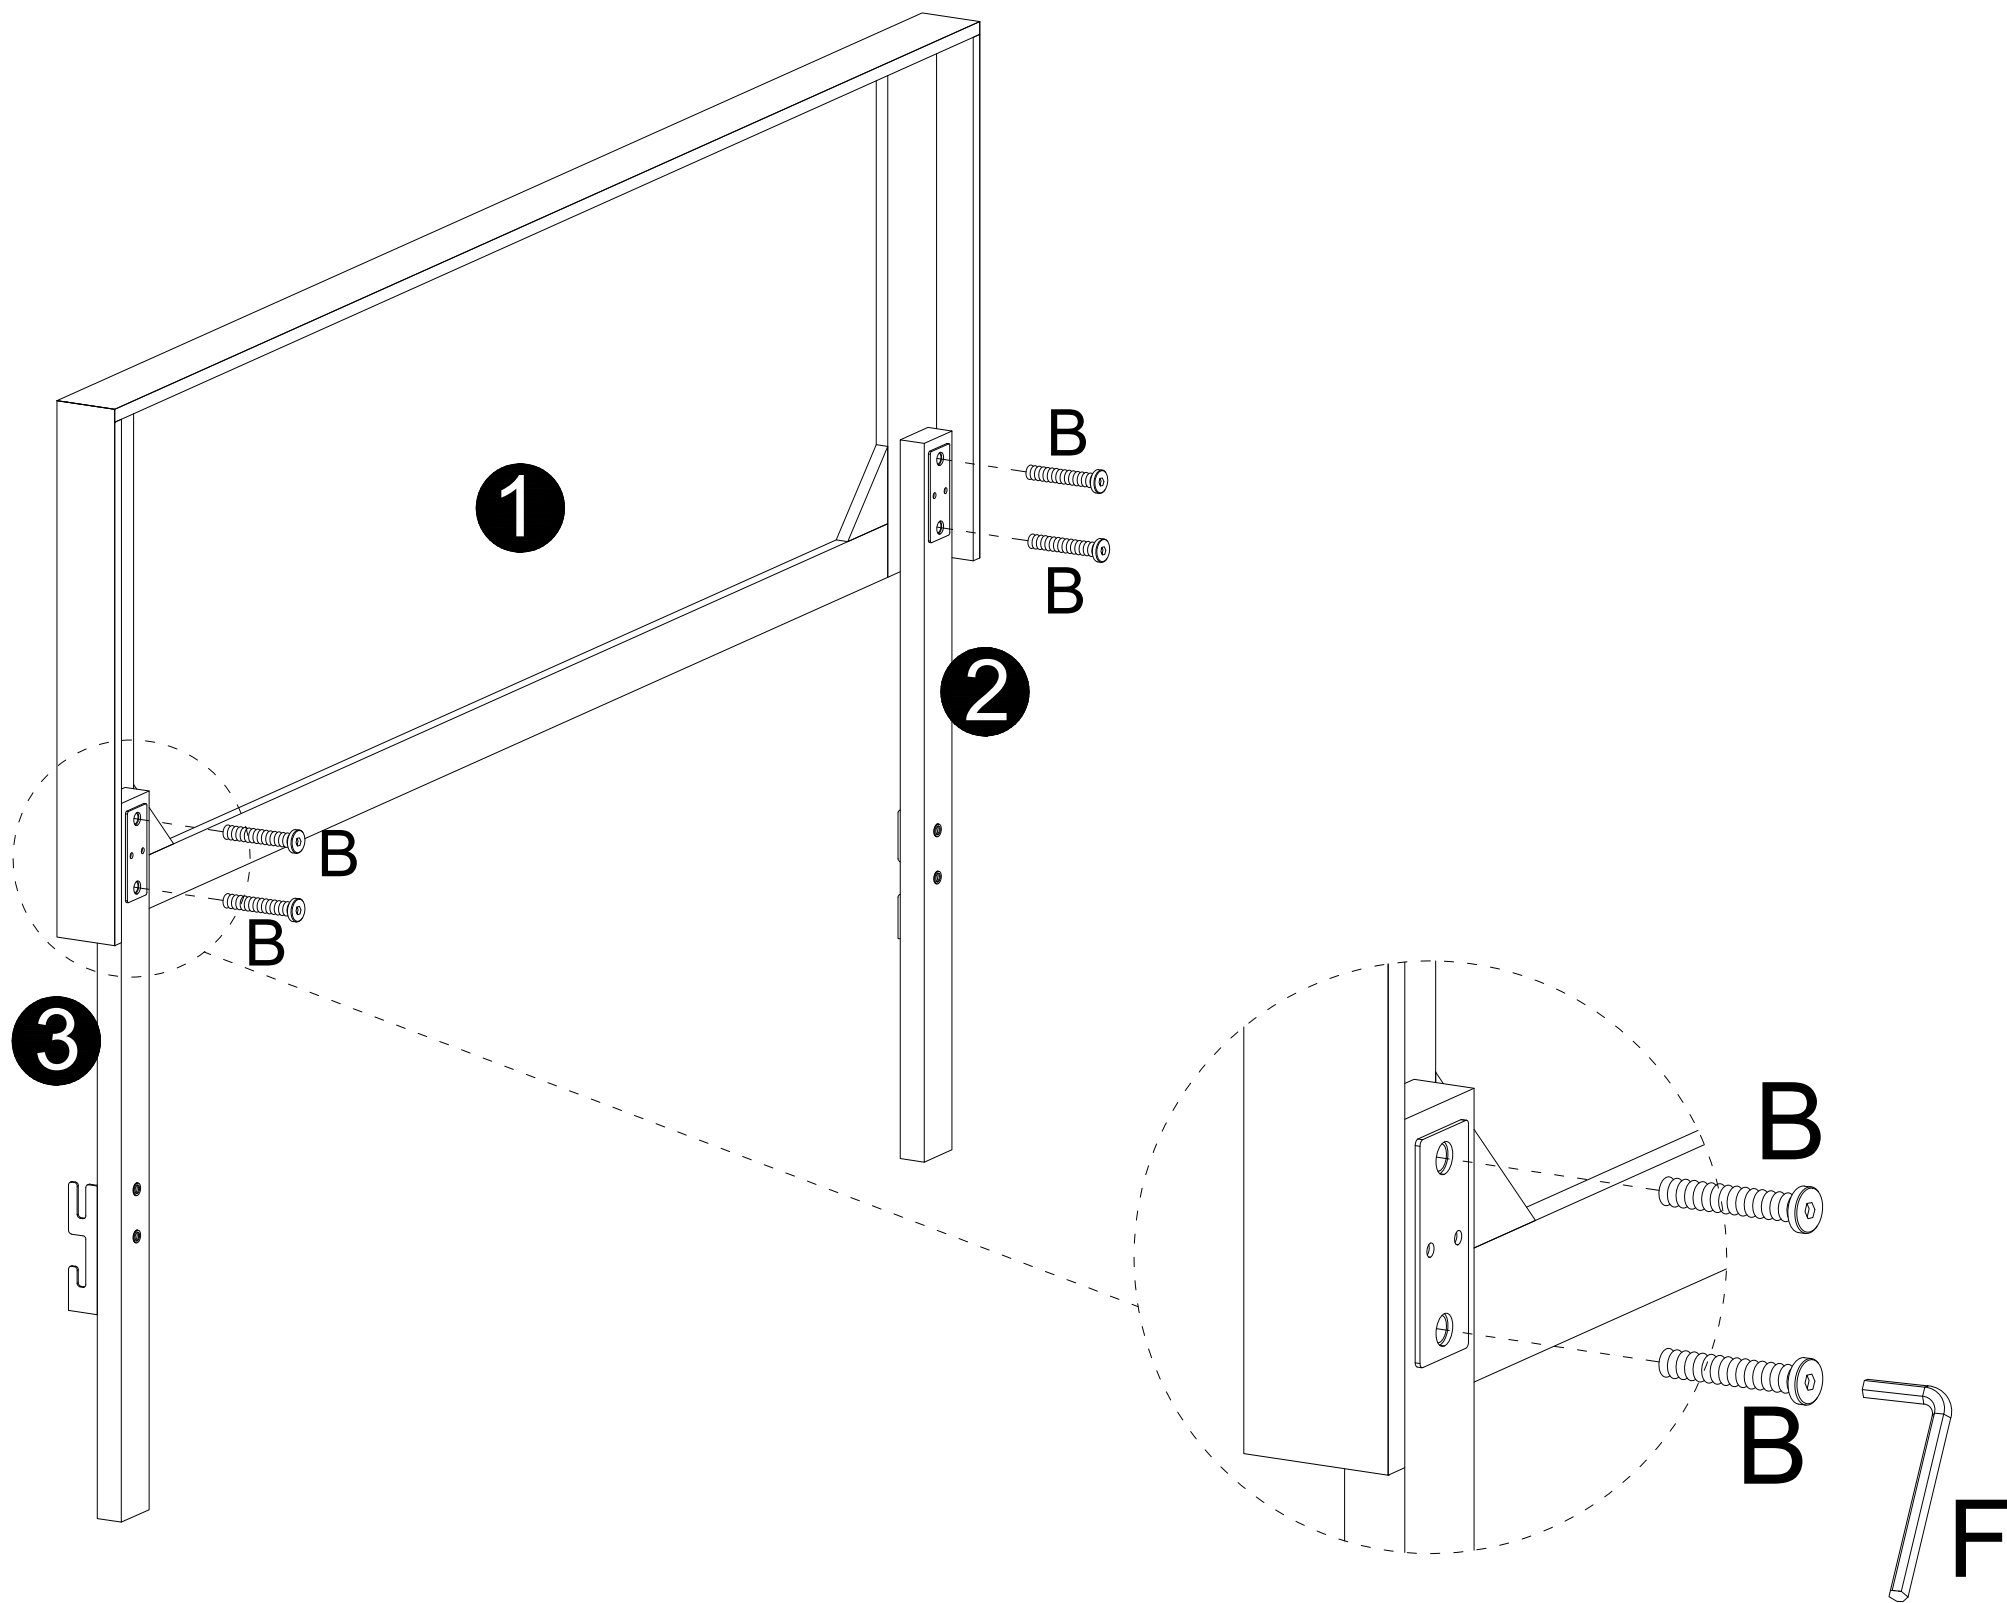


2





M8×15mm

C × 4pcs

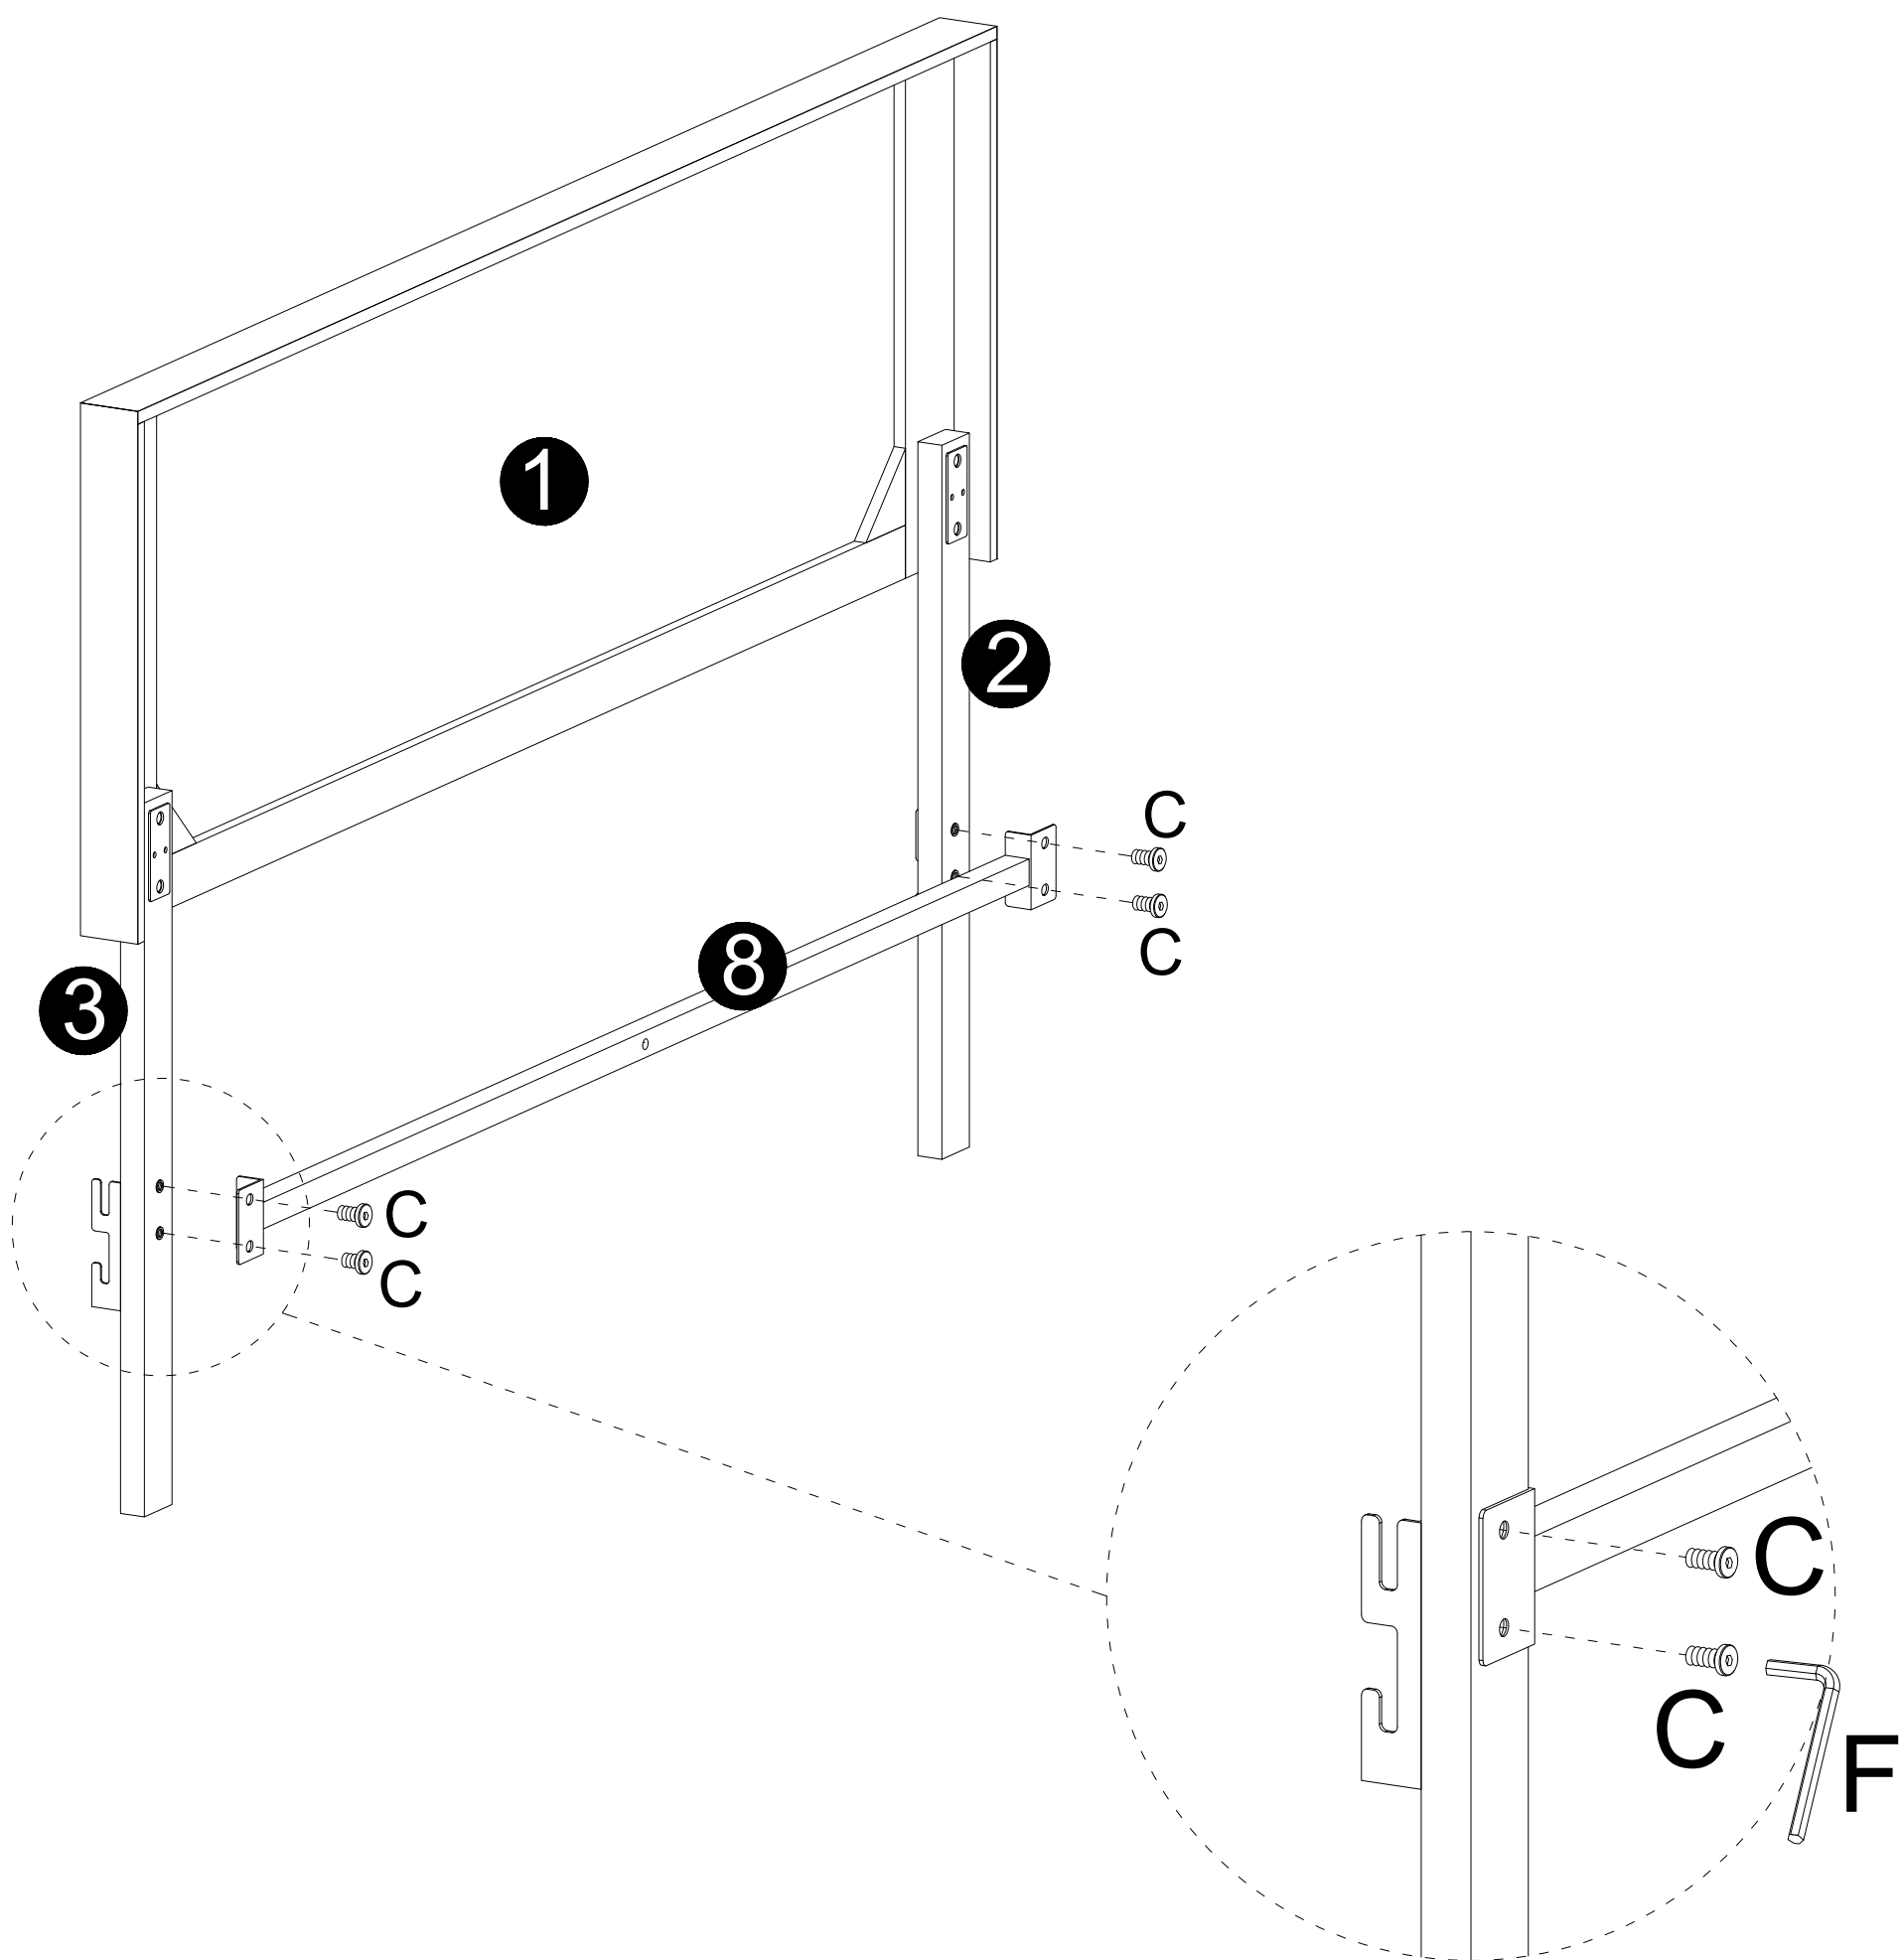



3

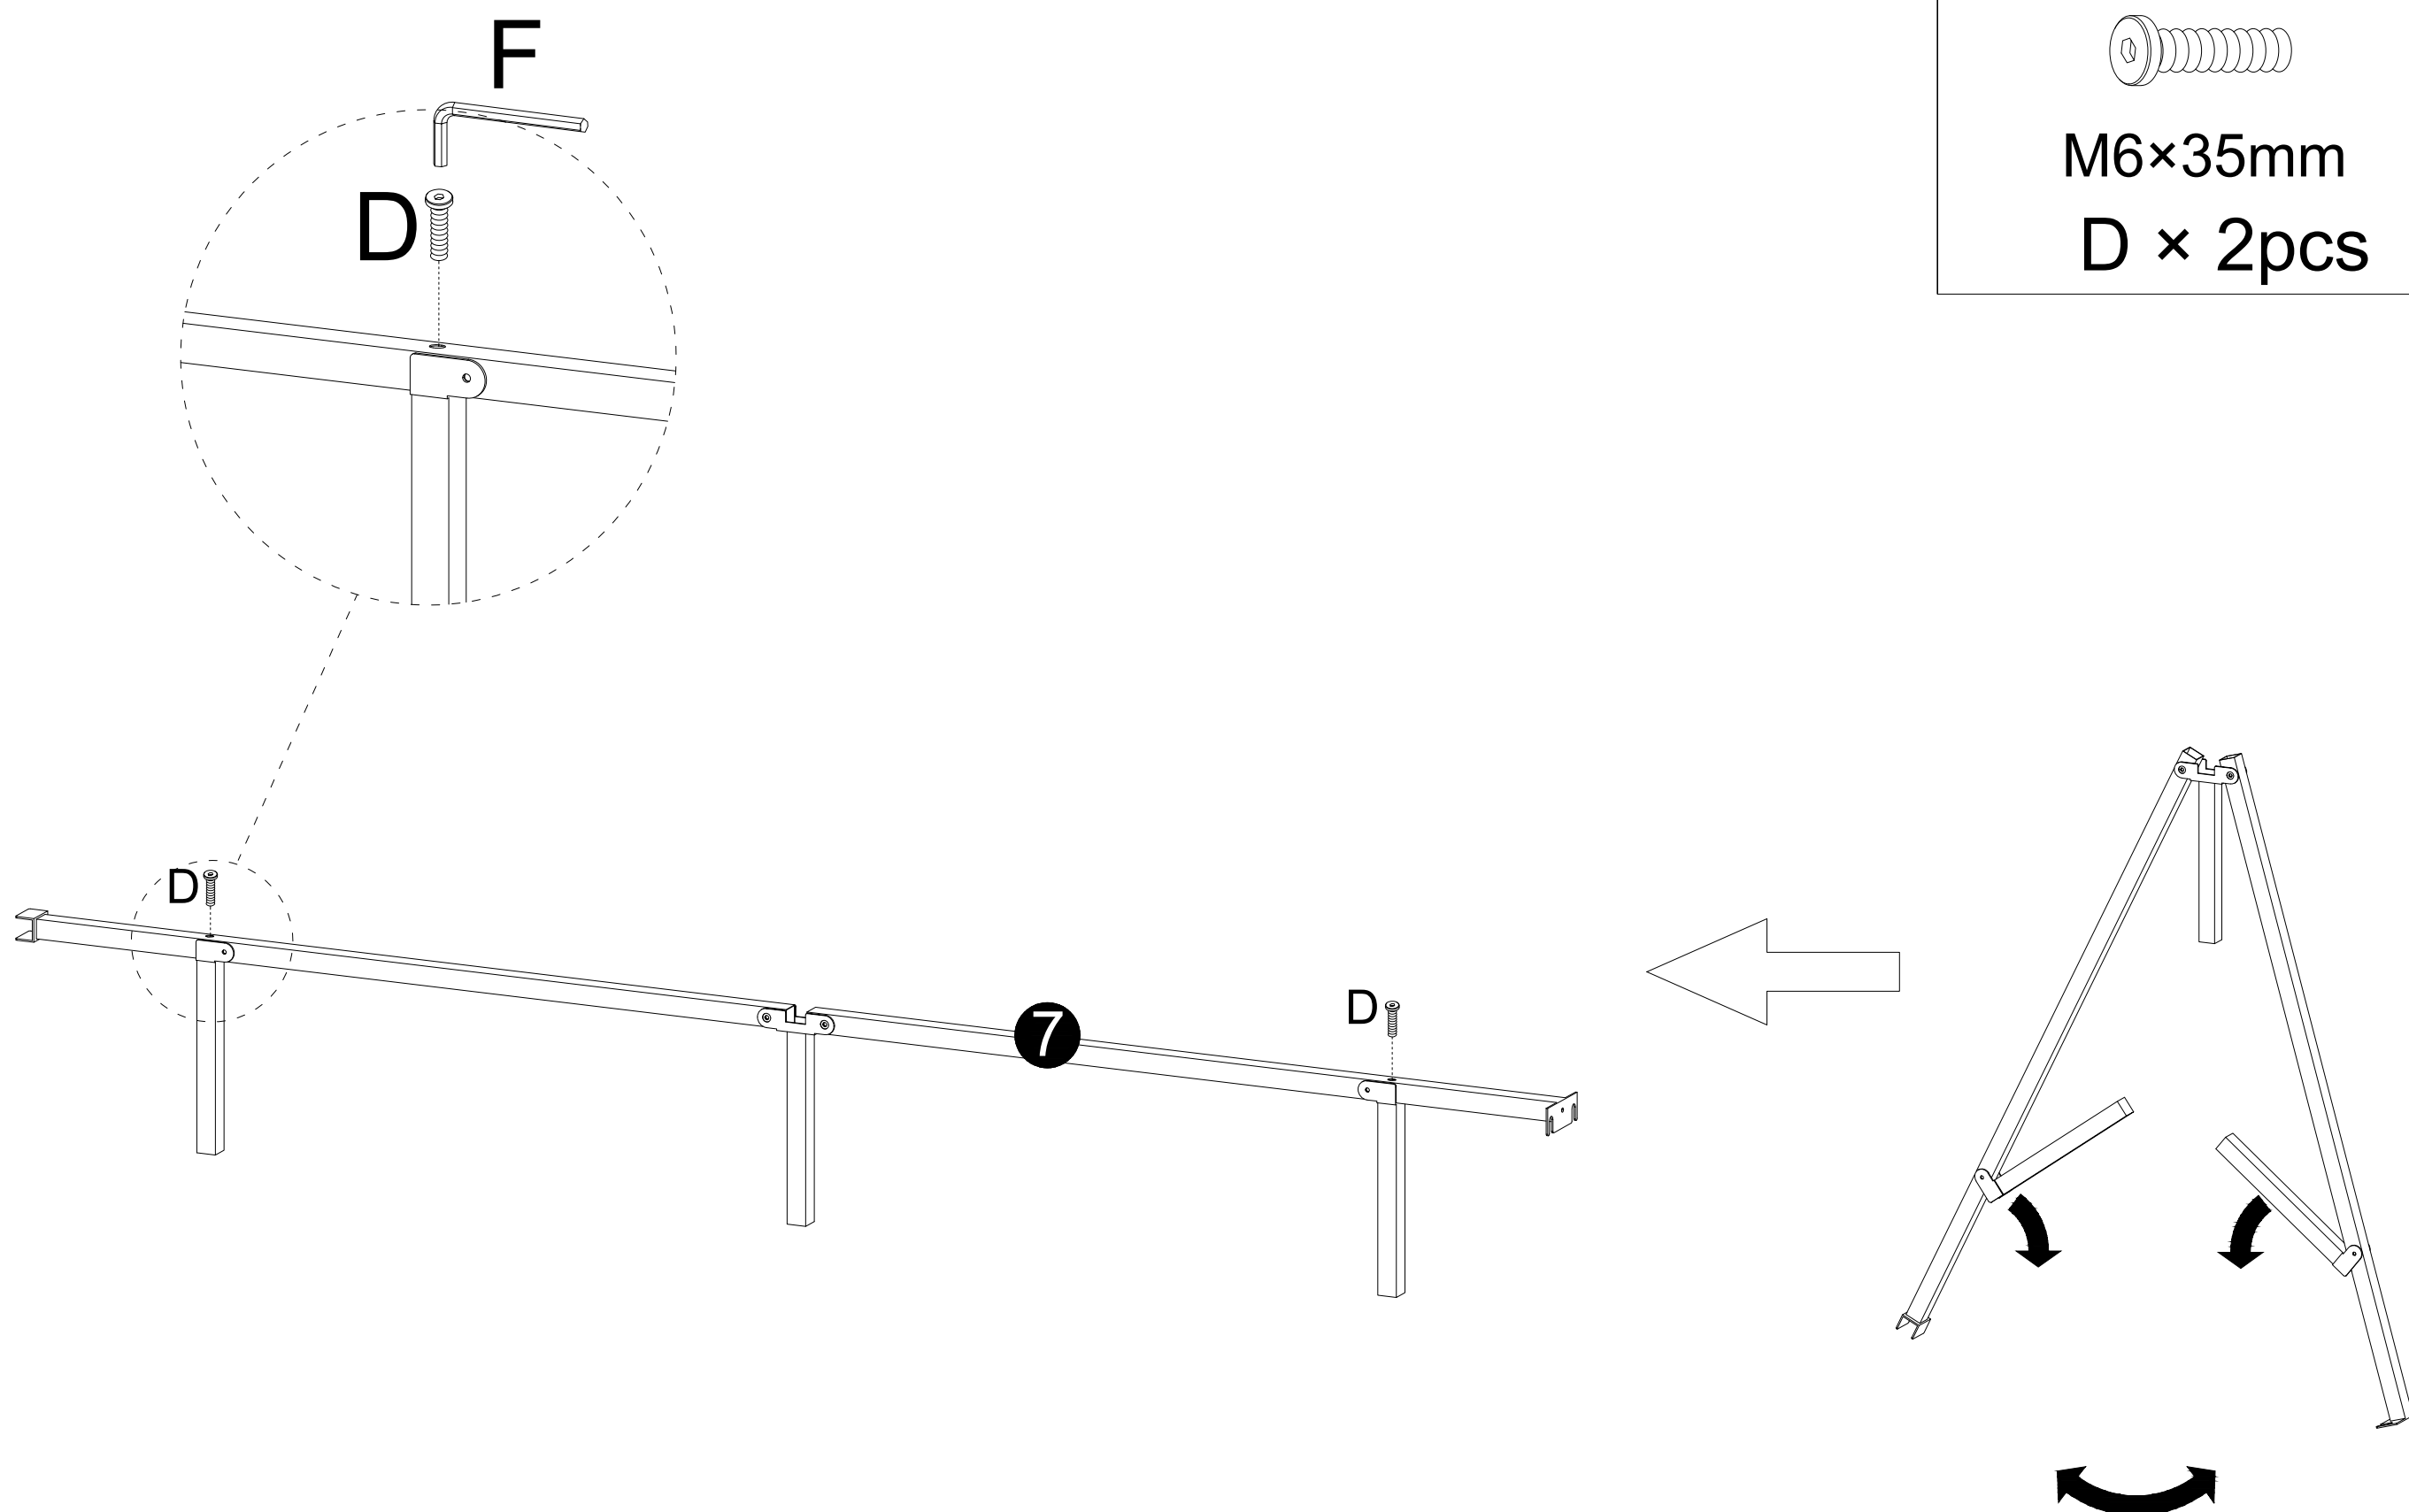

M6×35mm

D × 2pcs


4

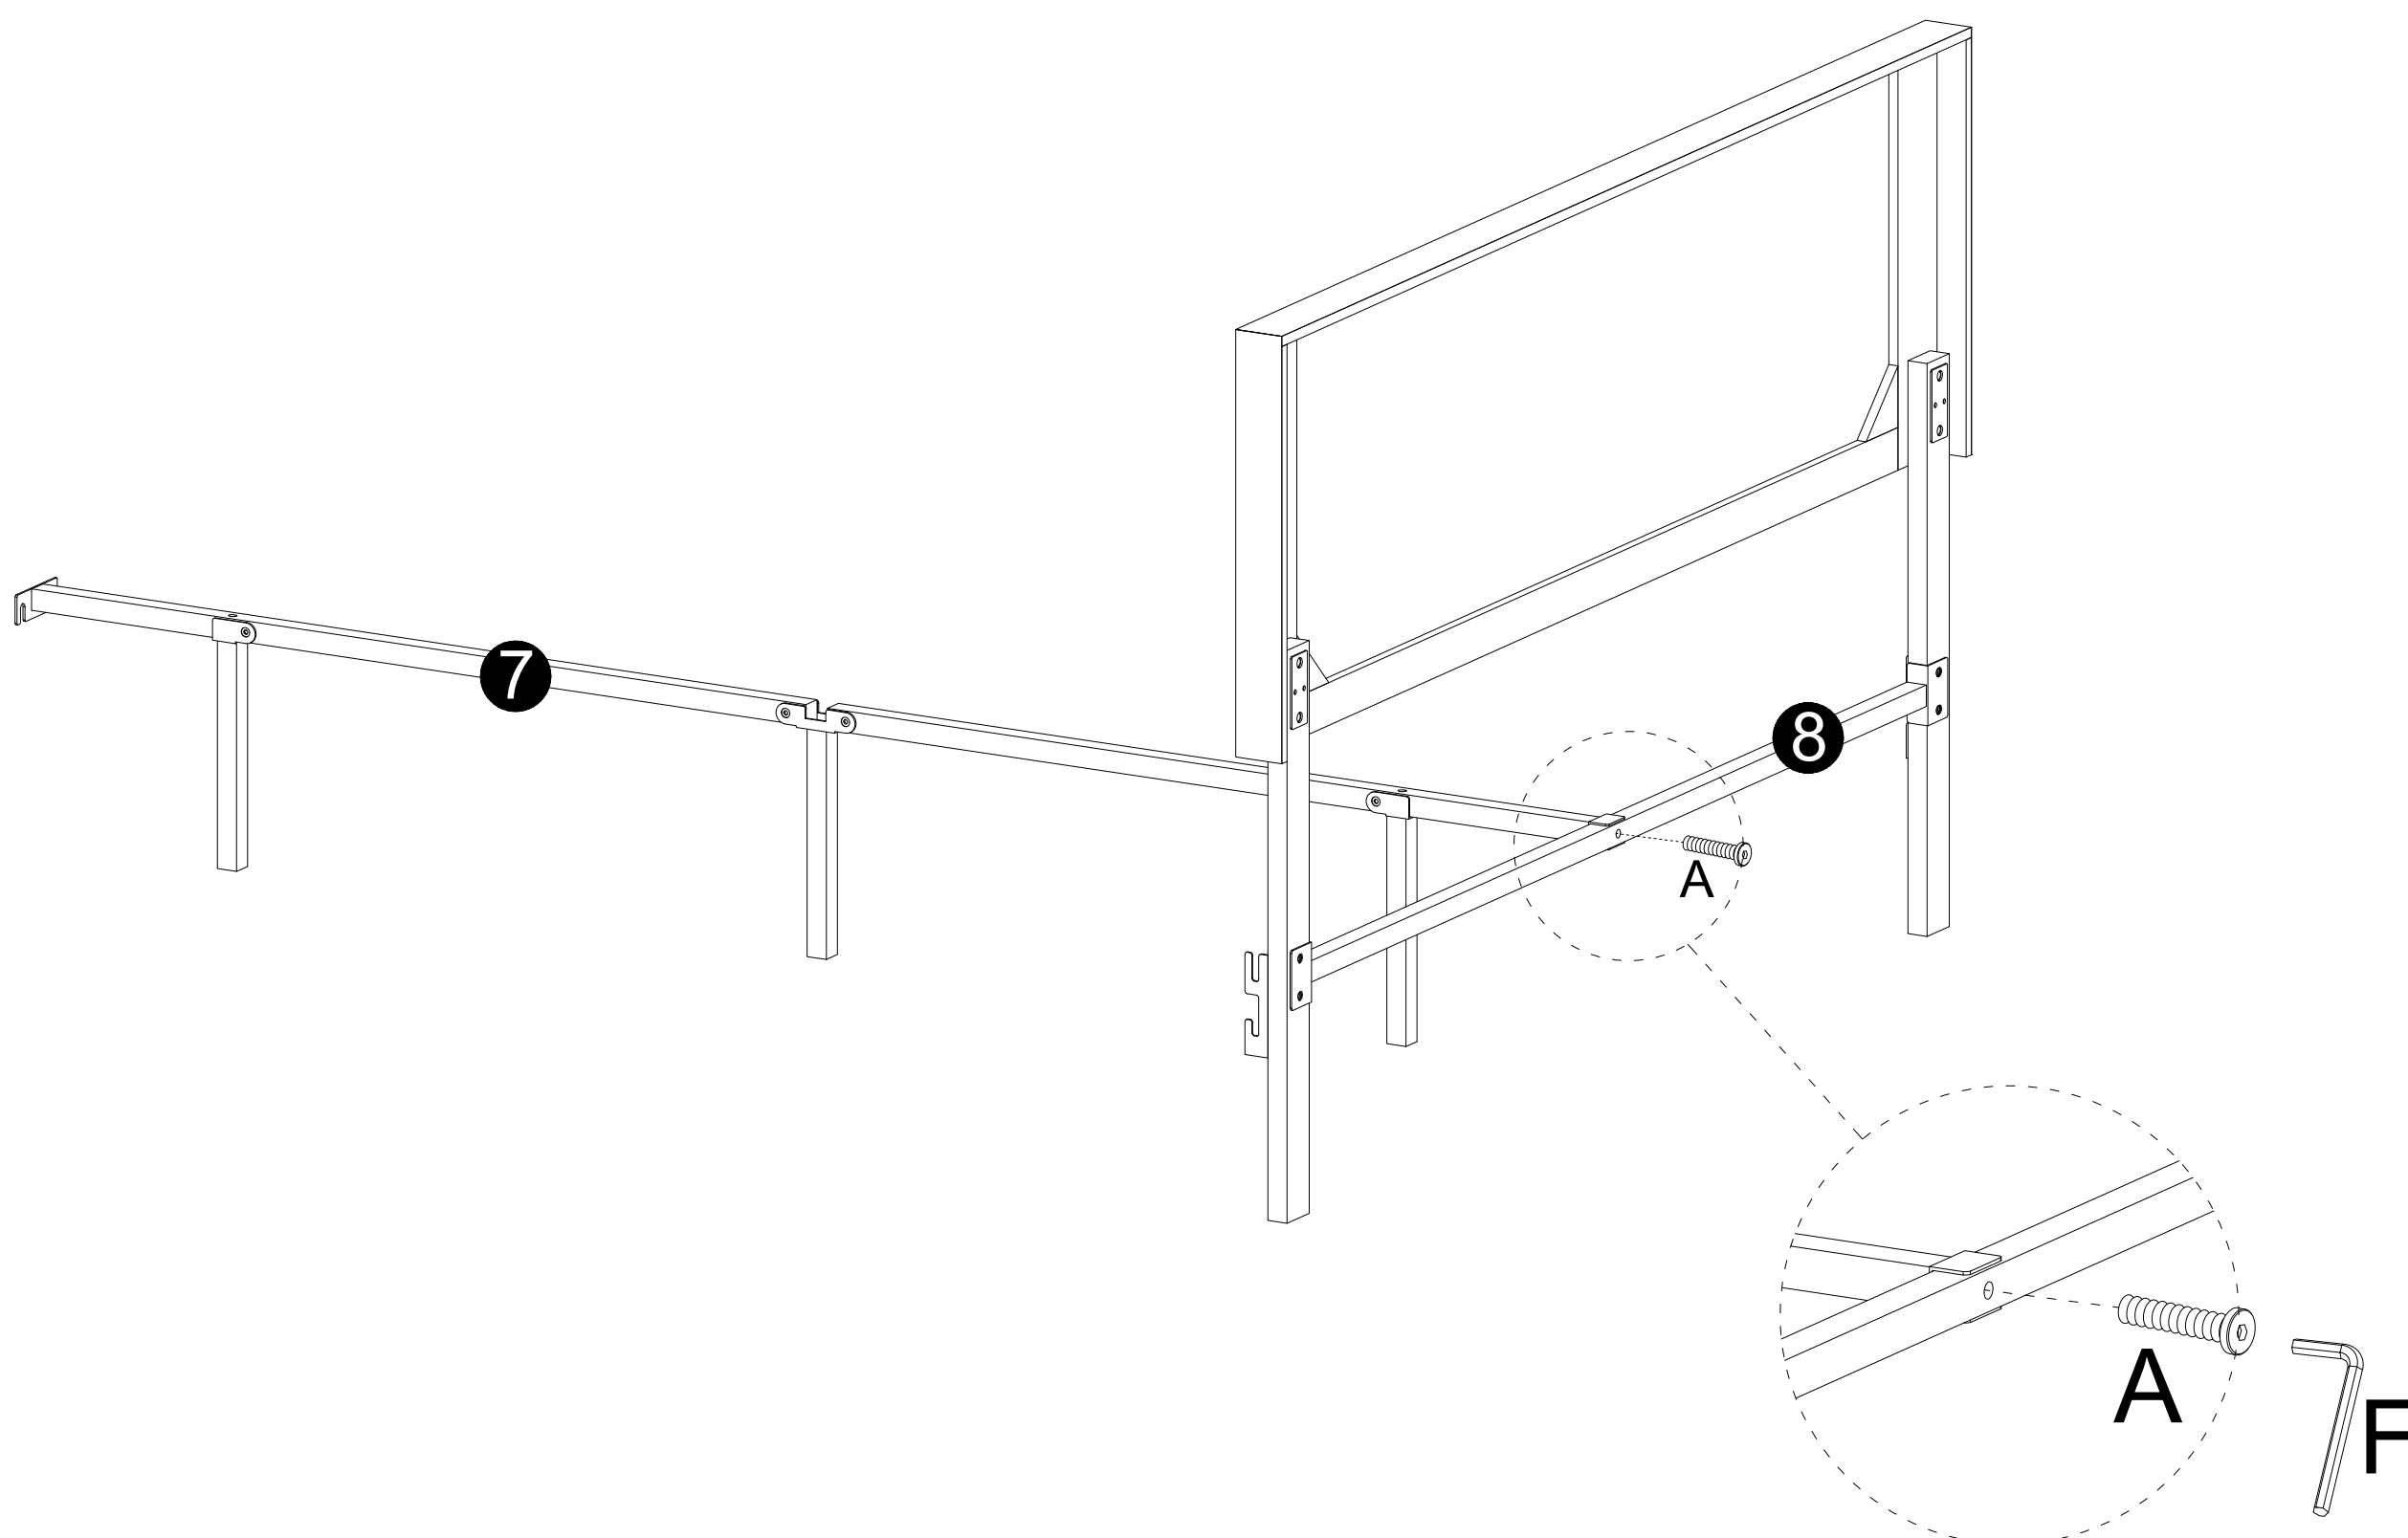

M8×45mm


A × 1pc

5




M8×45mm

A × 1pc




M8×40mm

B × 2pcs

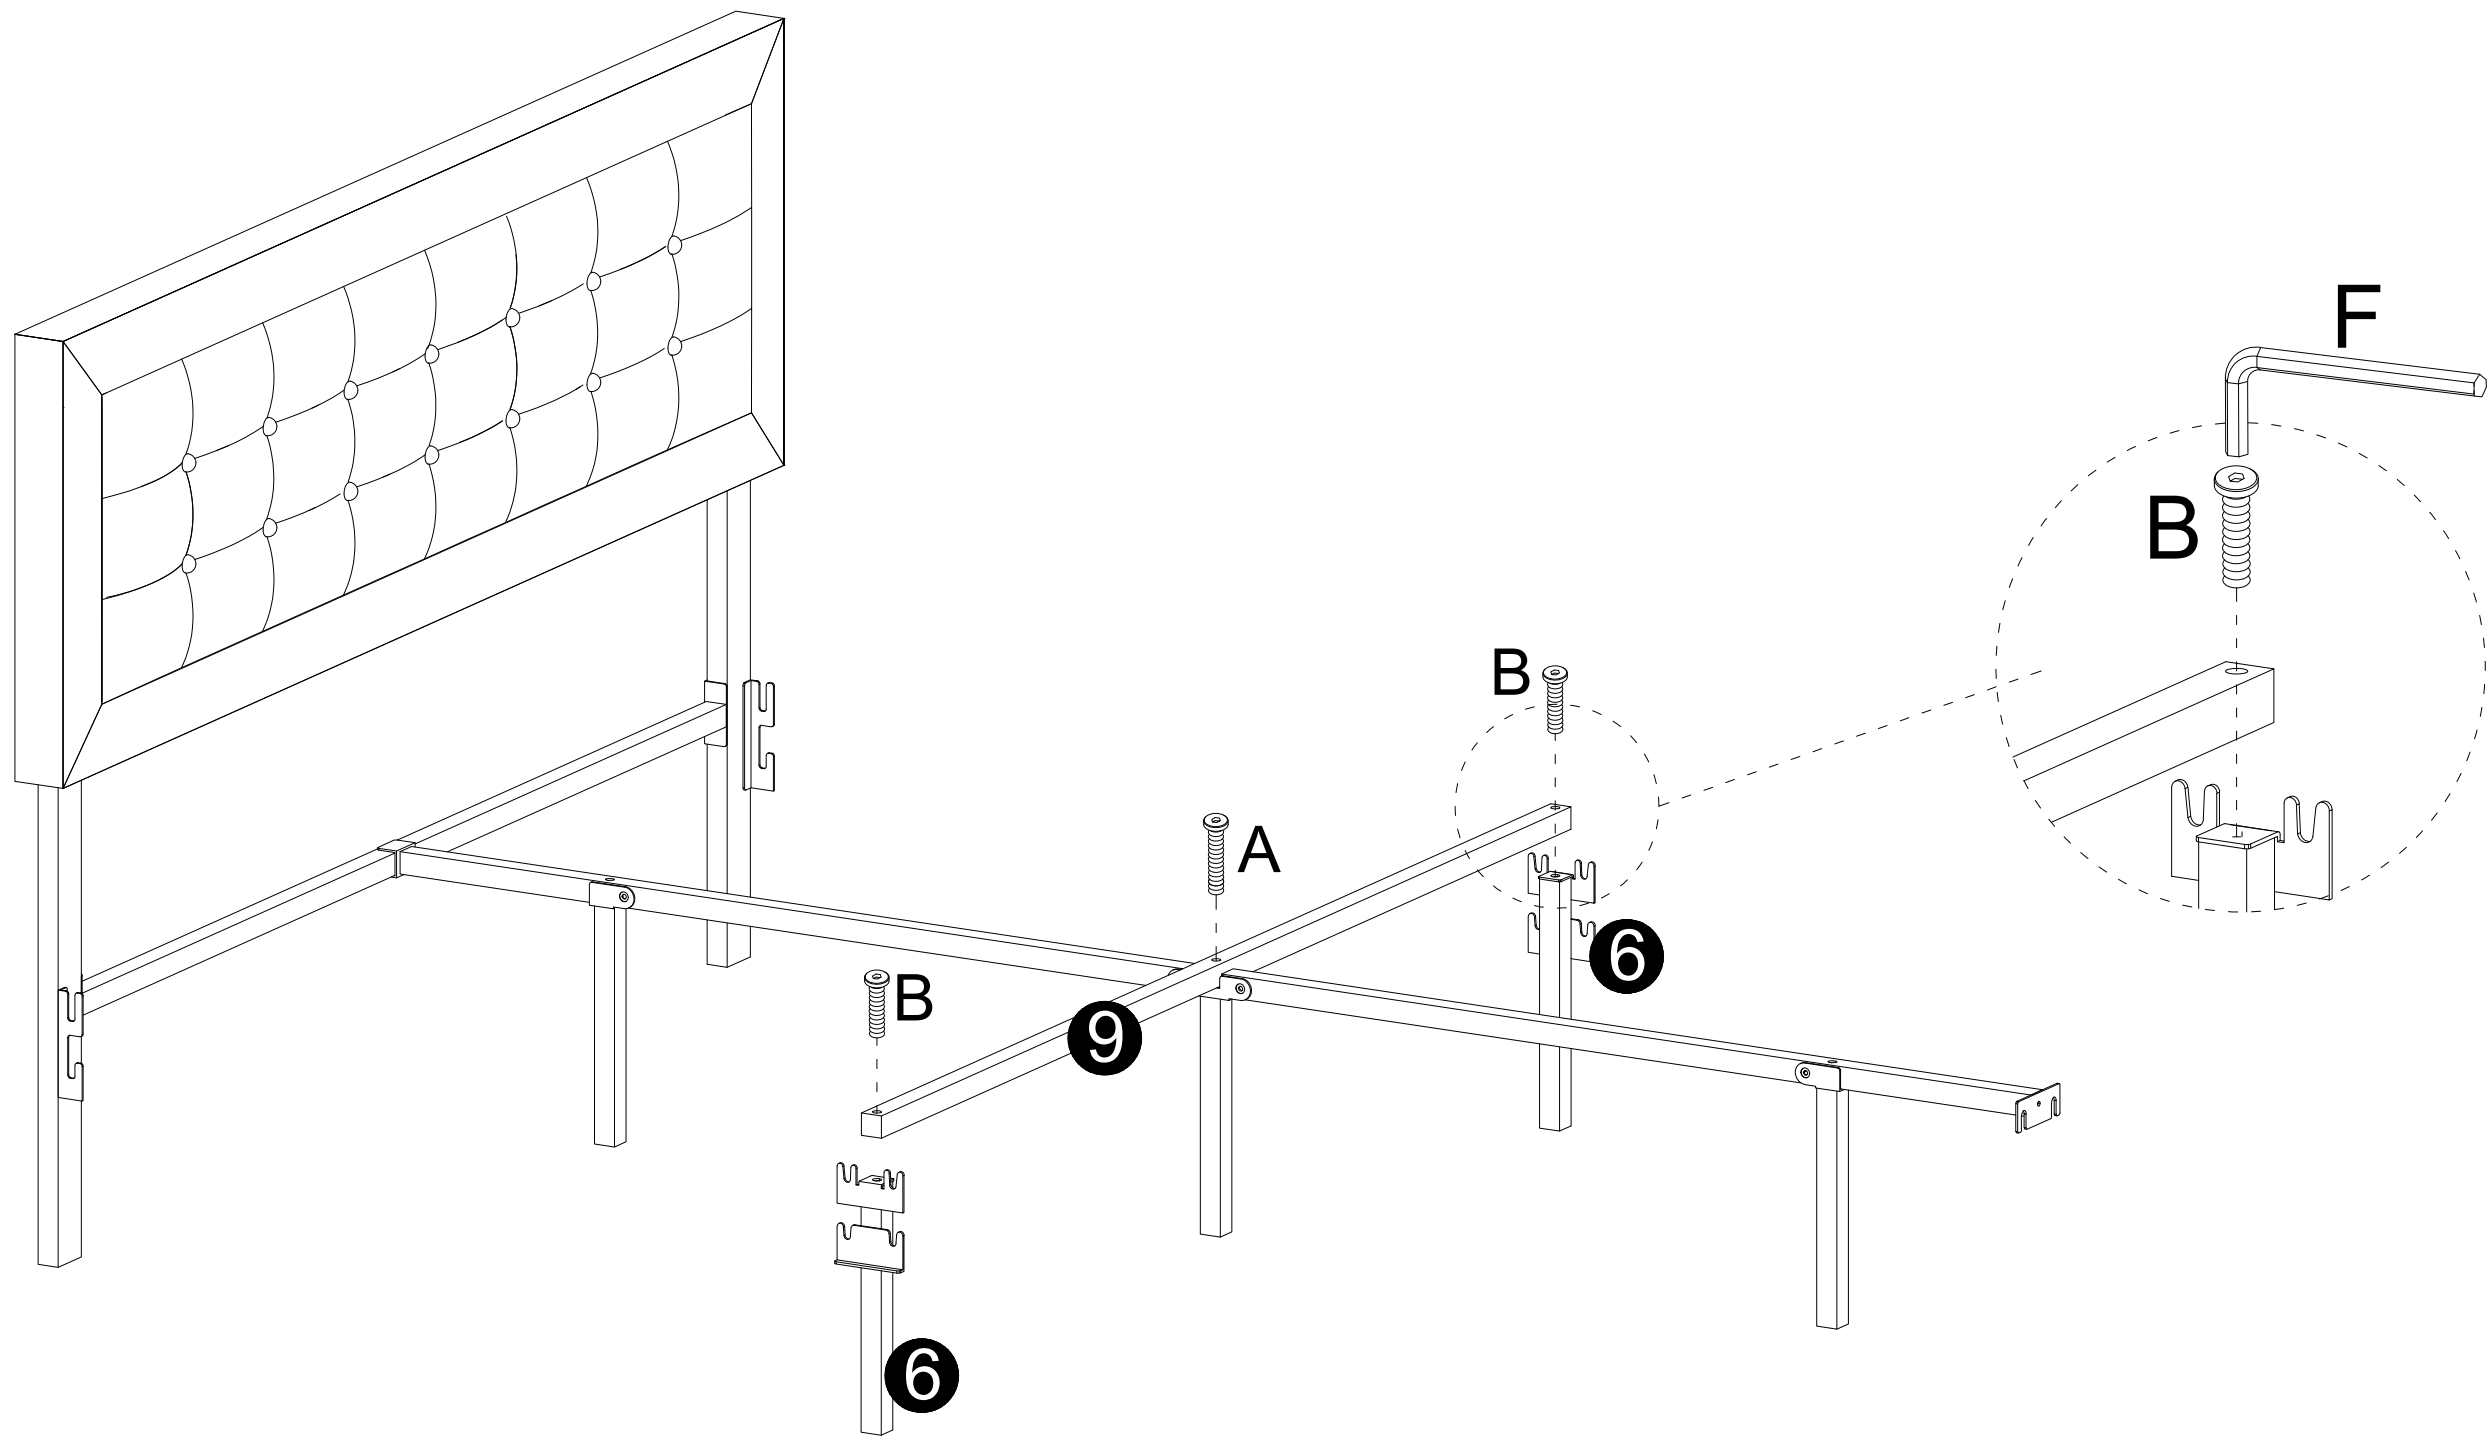


6





M8×15mm



C × 8pcs

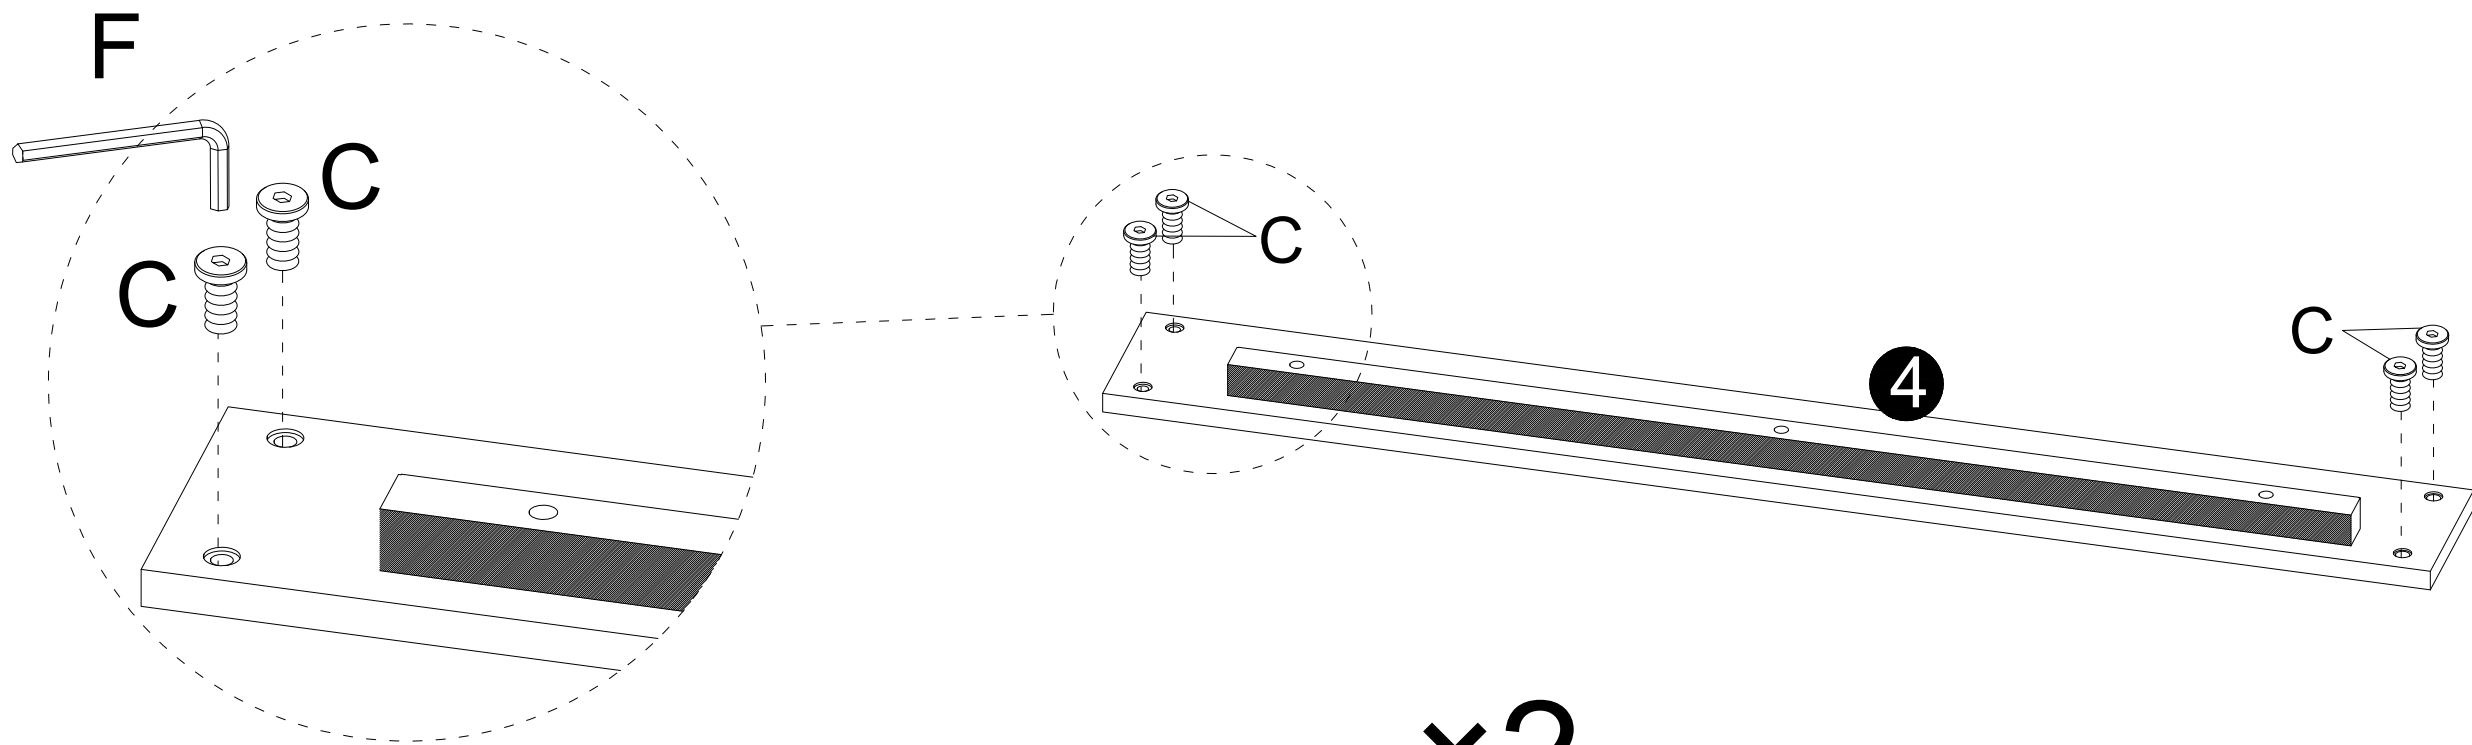

×2

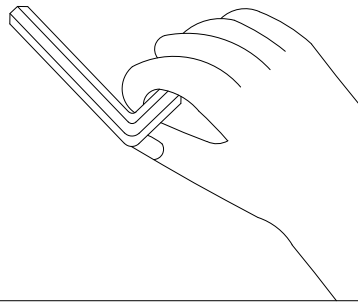
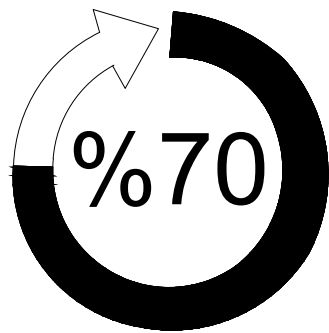


7

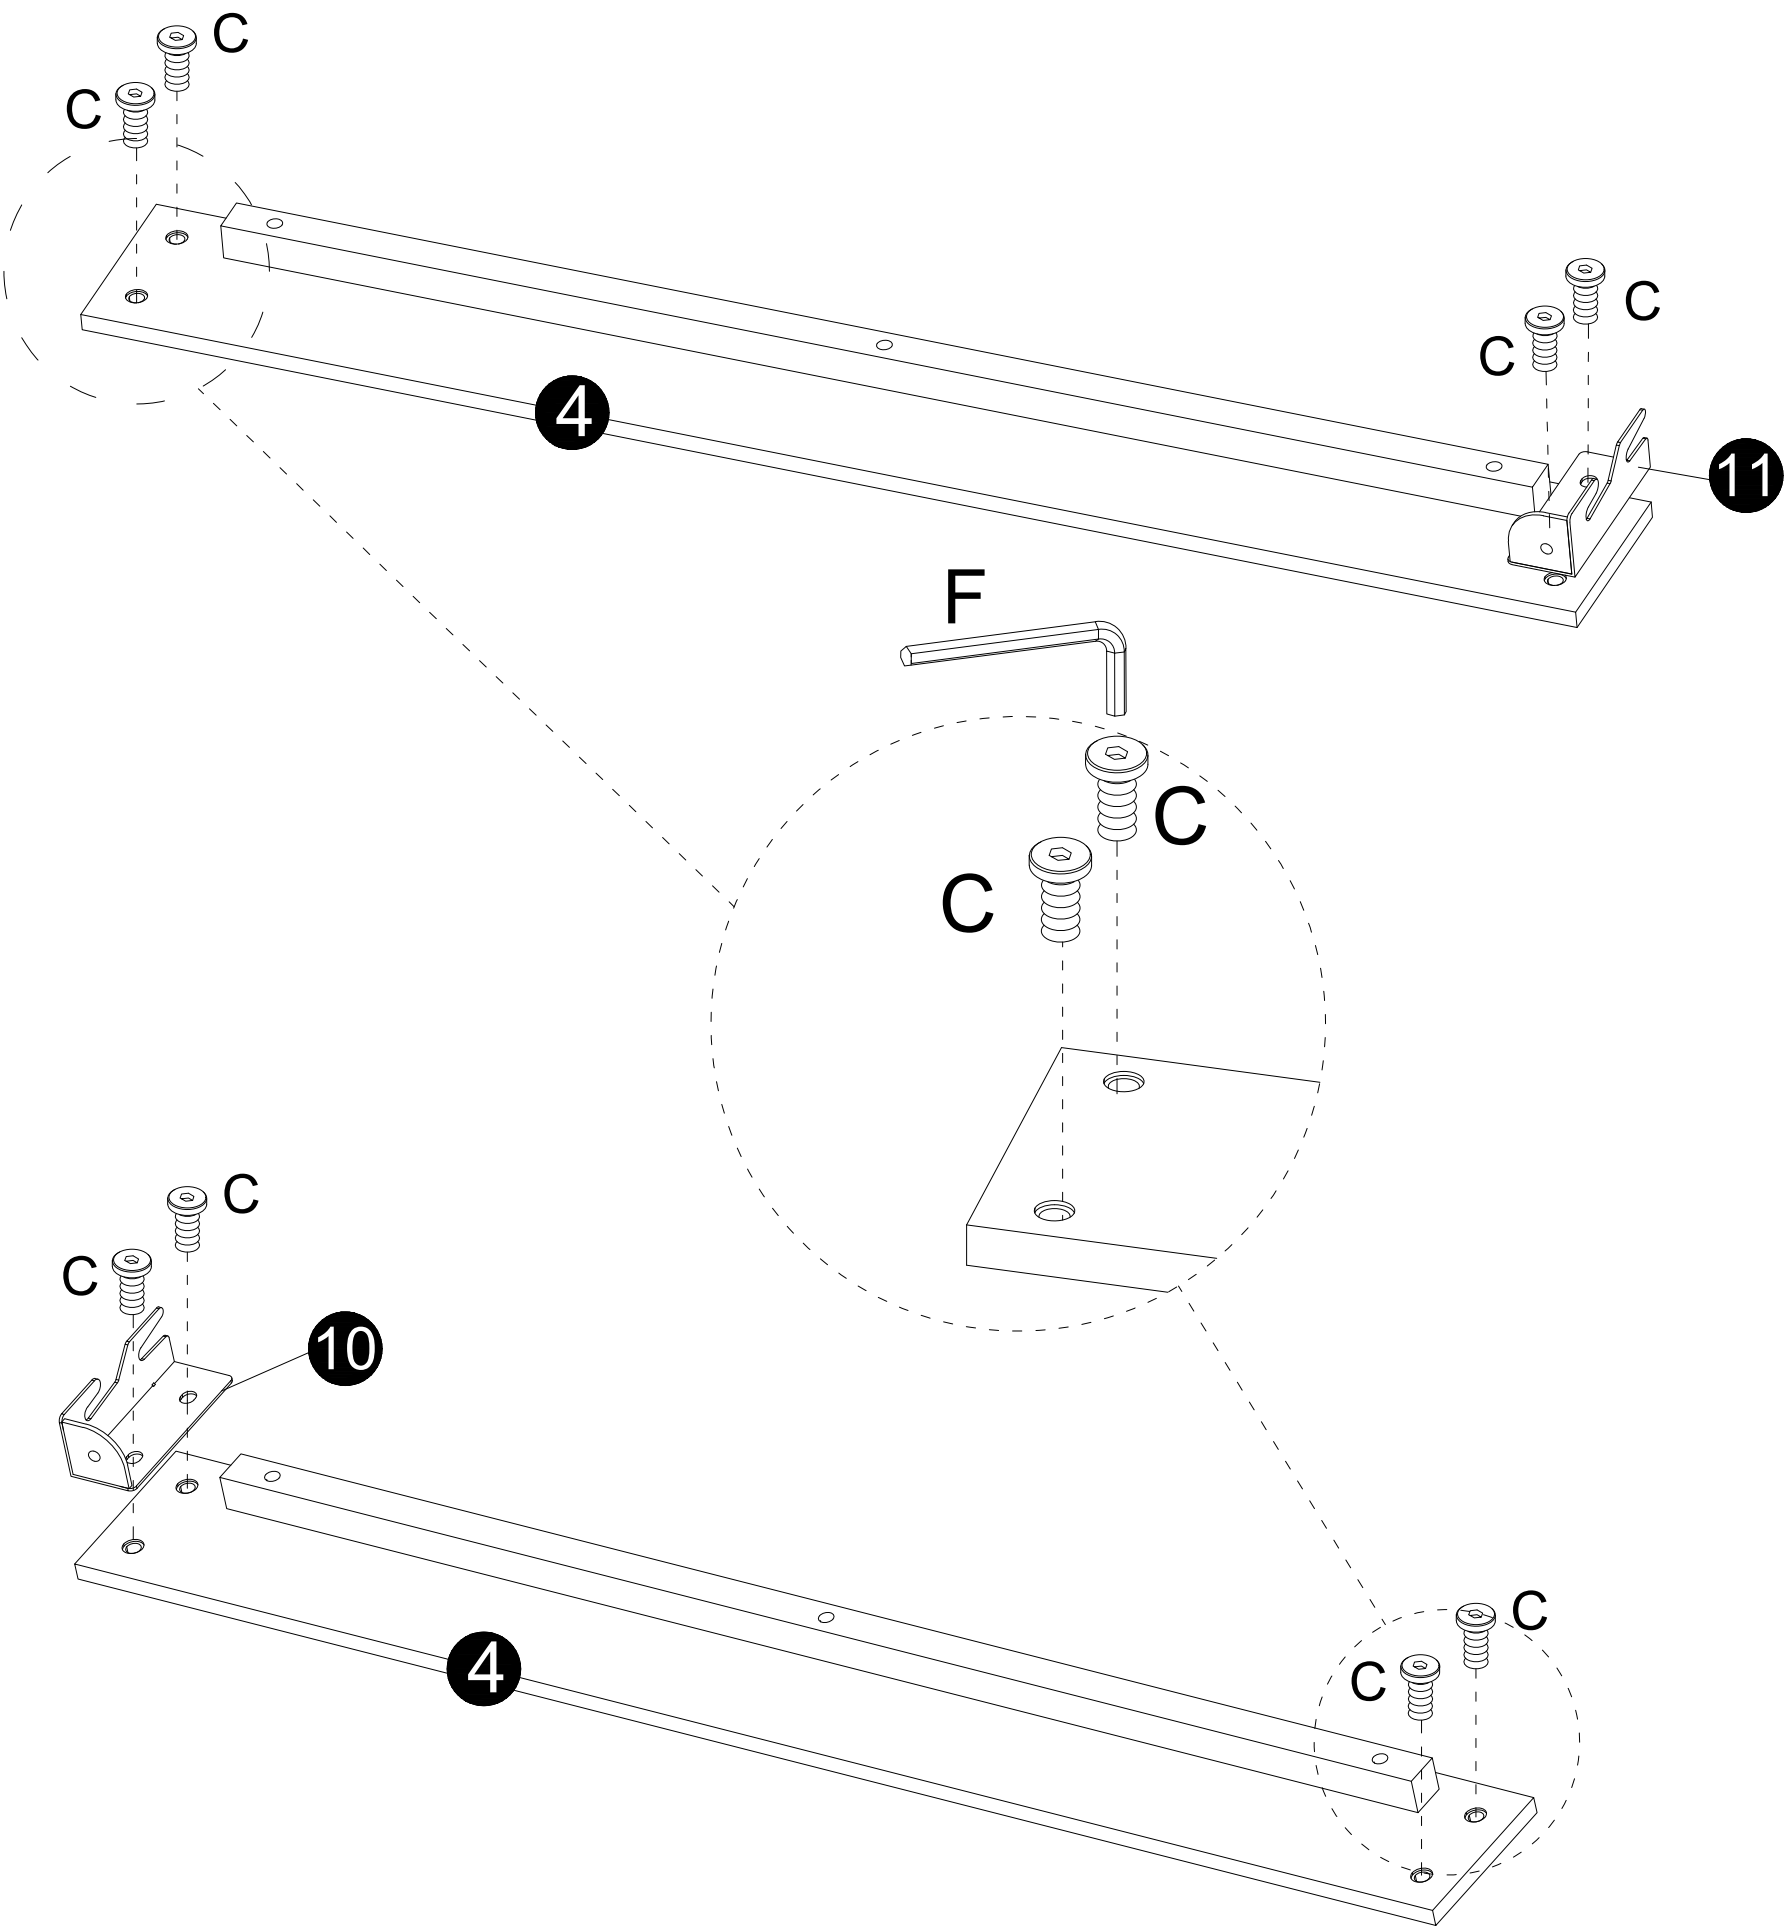


M8×15mm


C × 8pcs

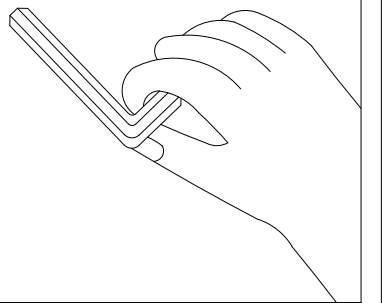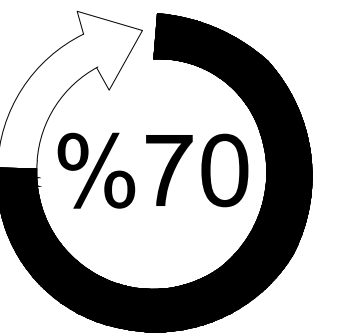

8


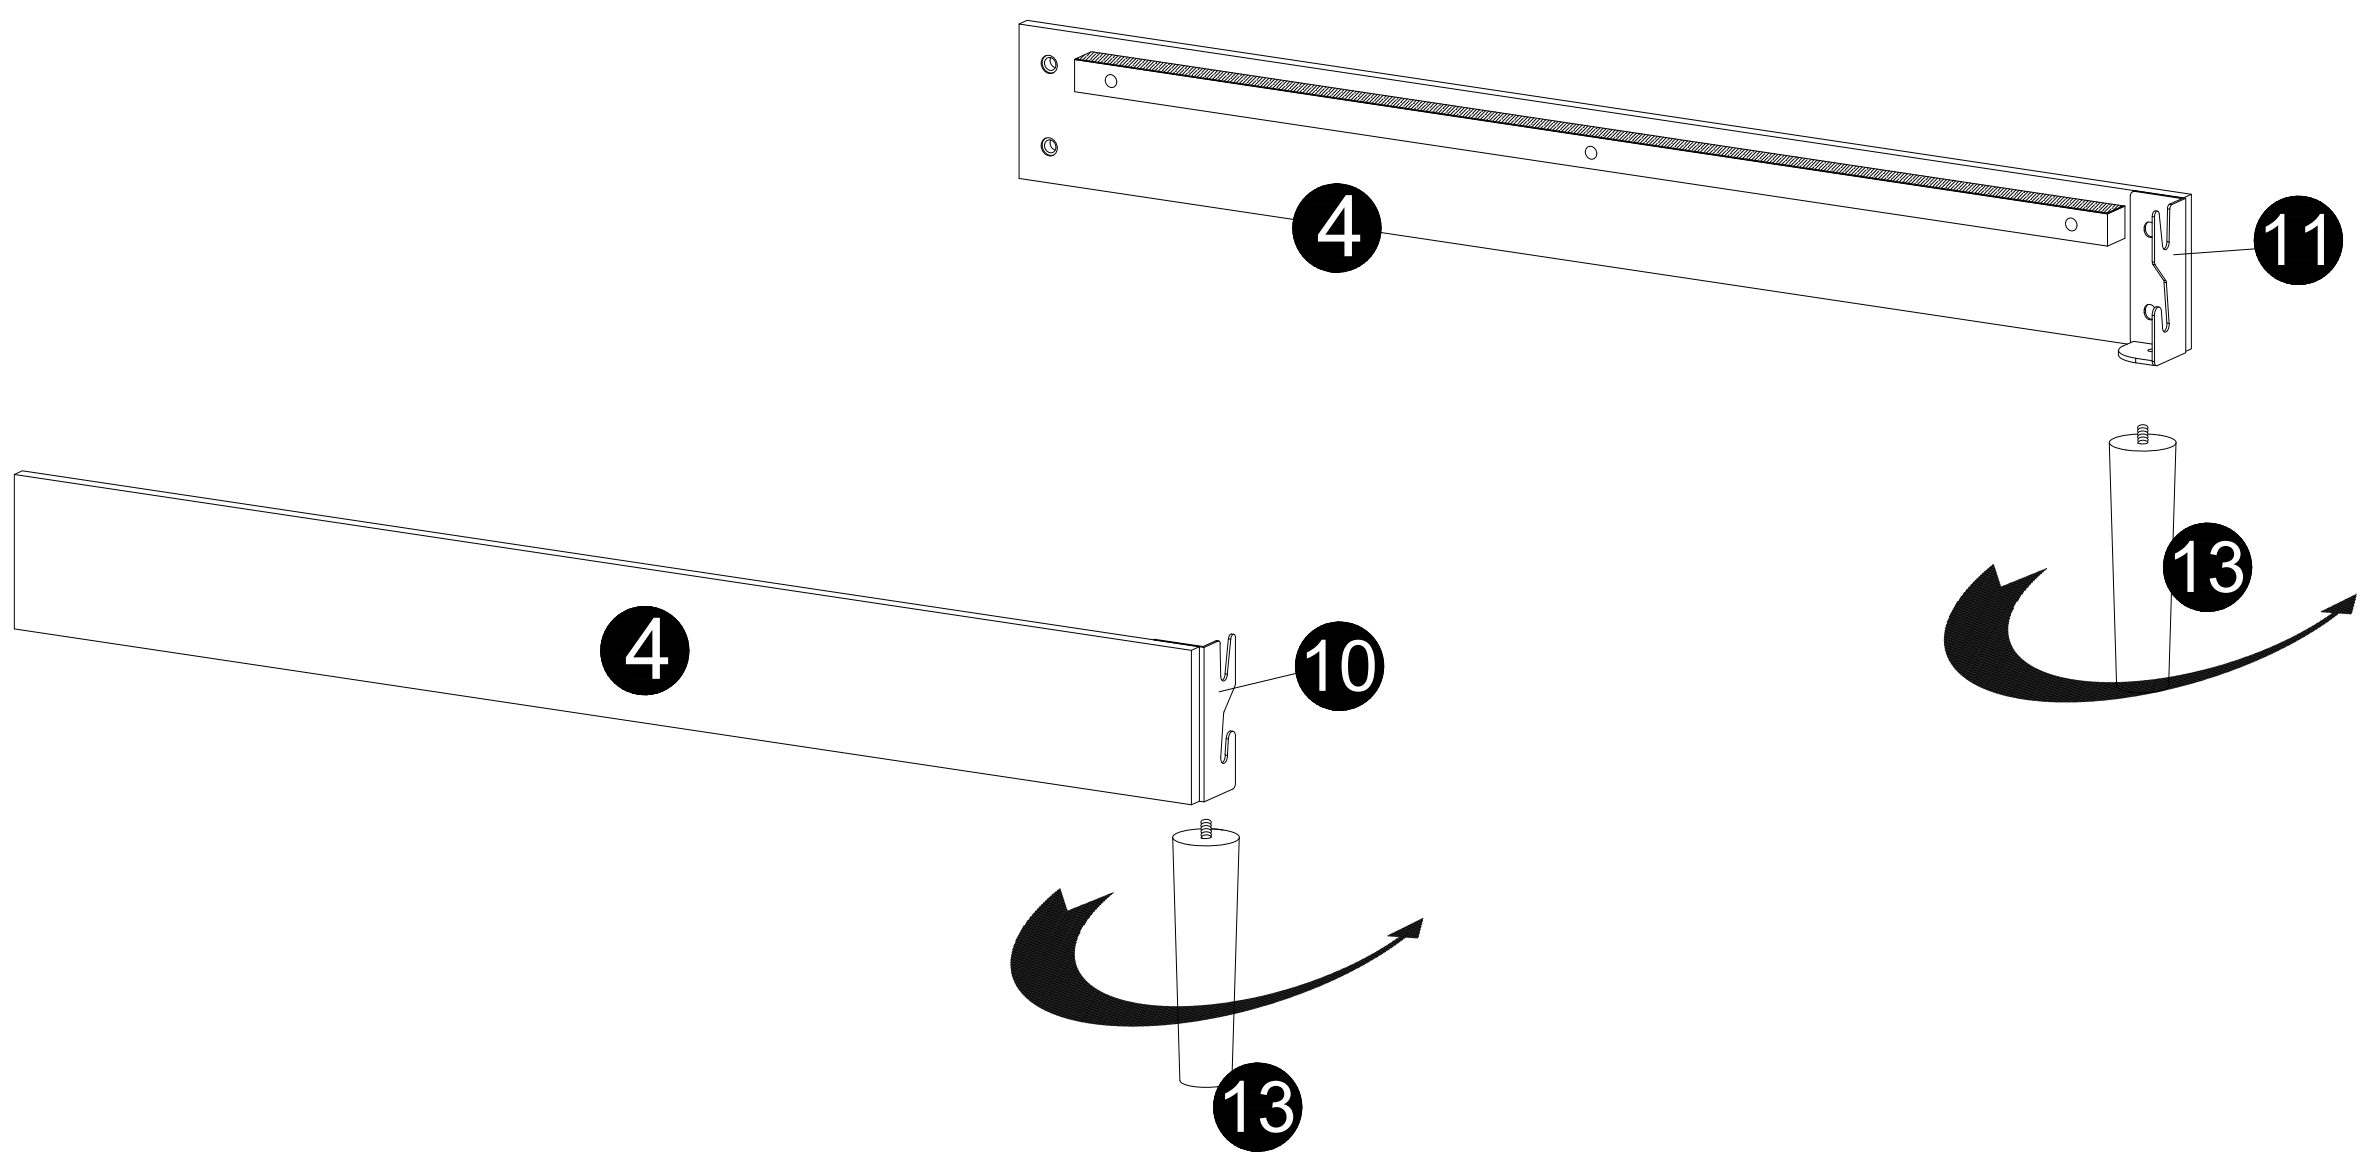


9

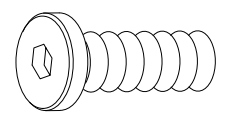

M8×25mm




E × 4pcs

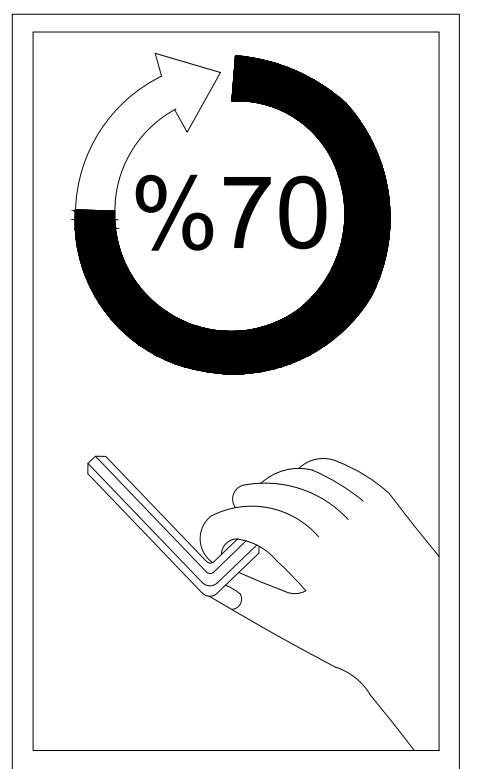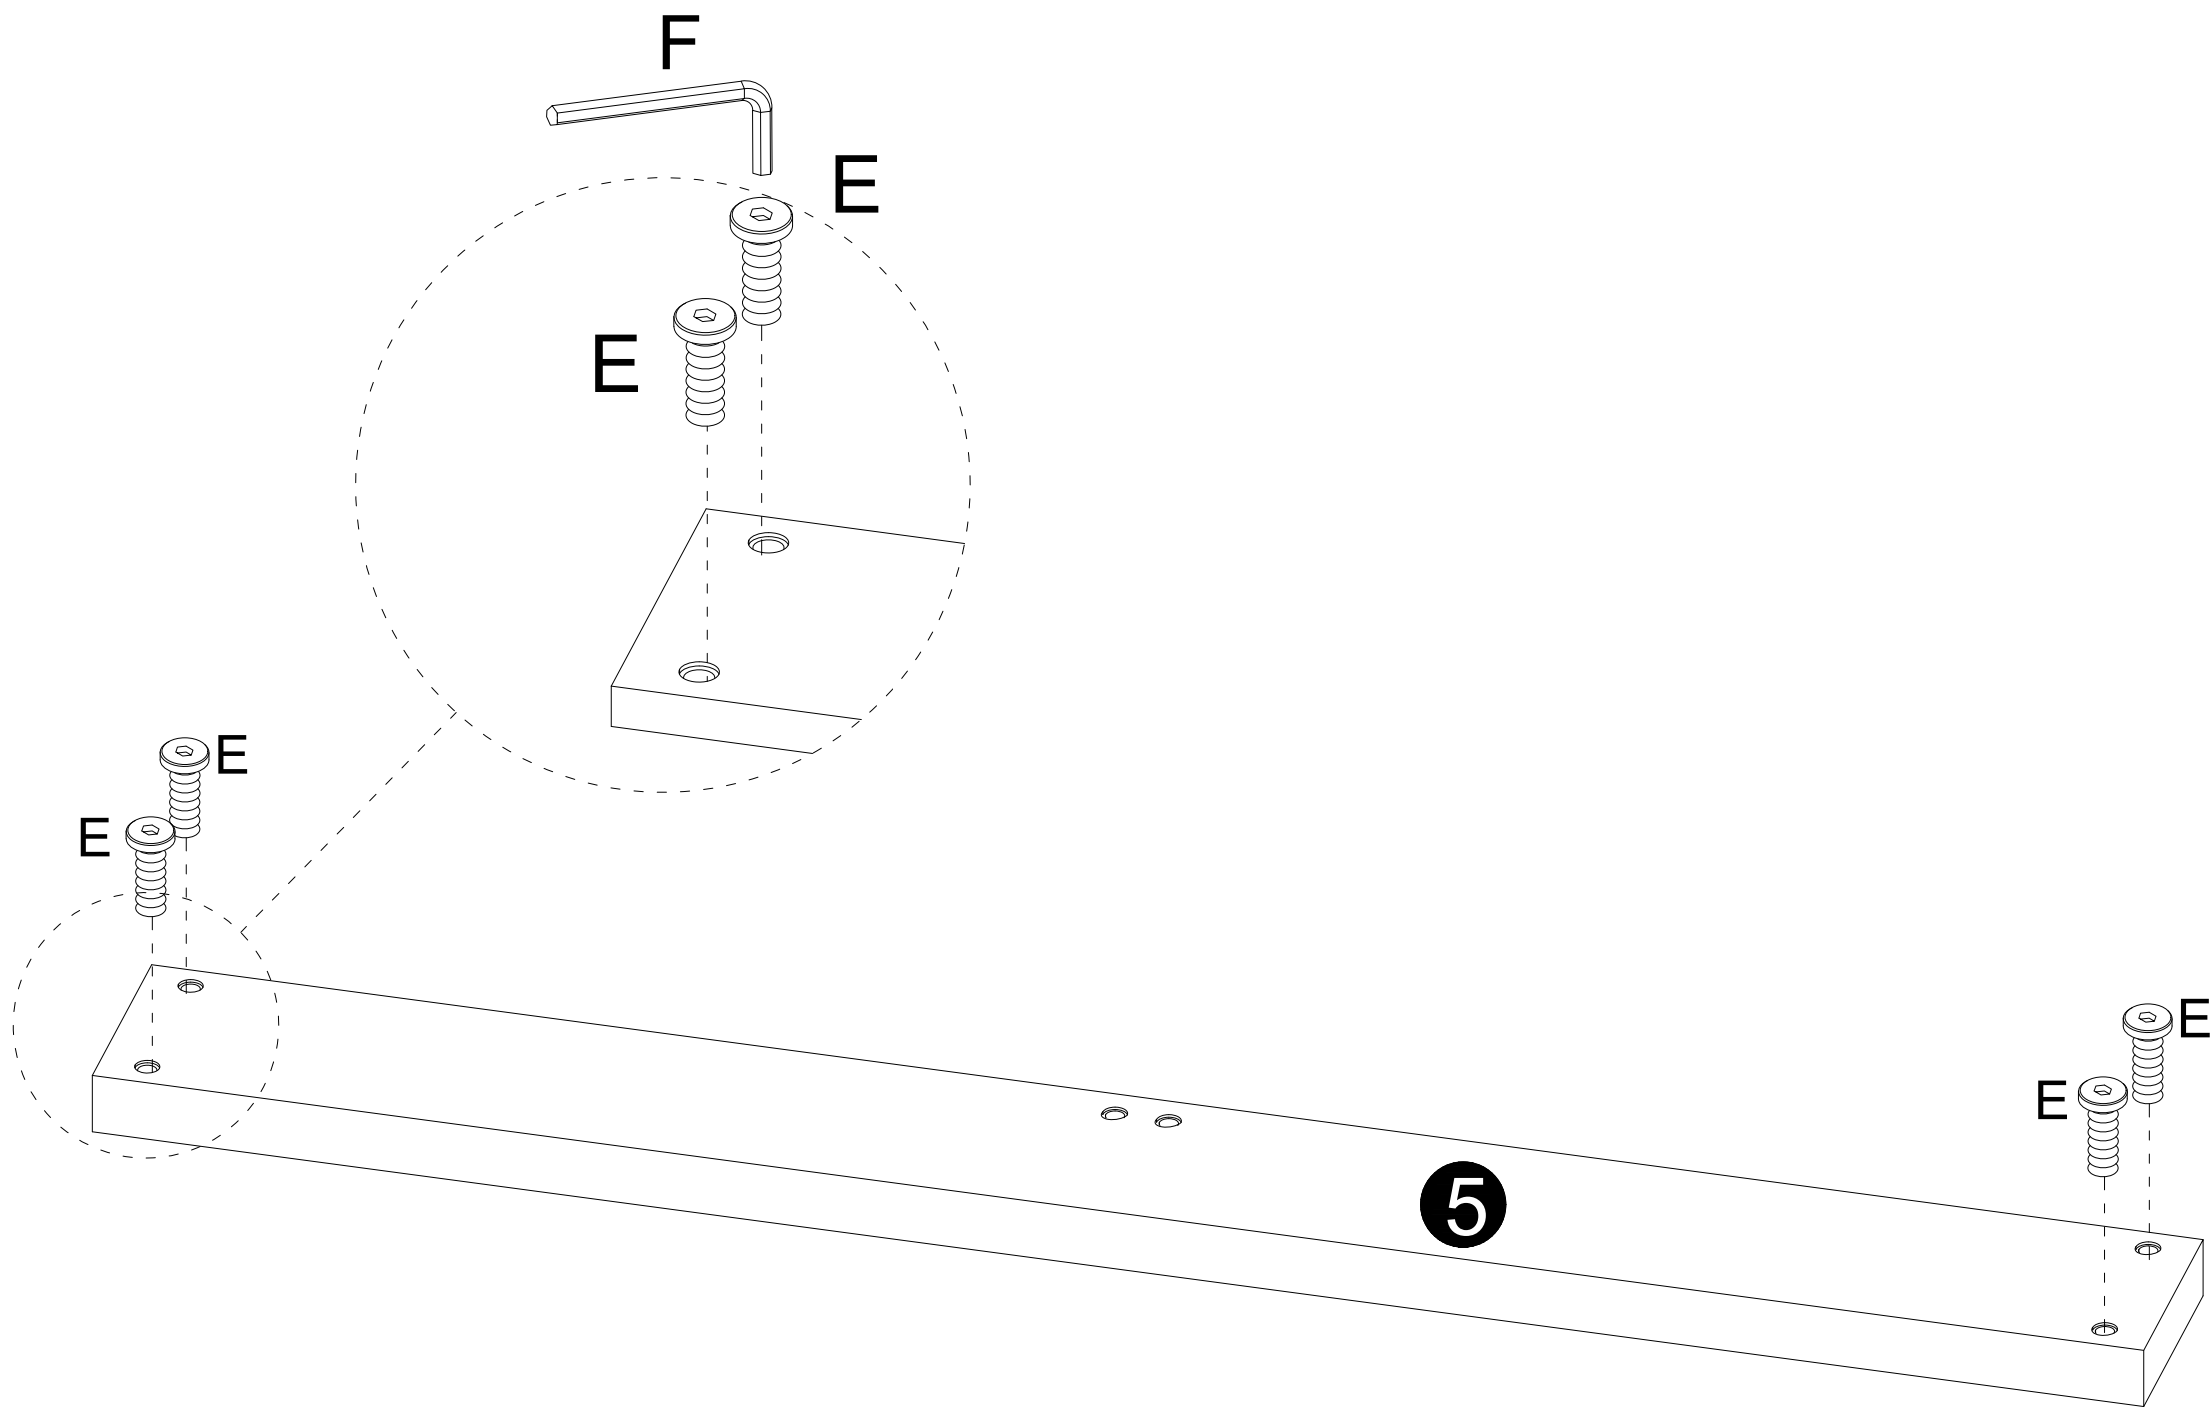


10

Step 1


Step 2

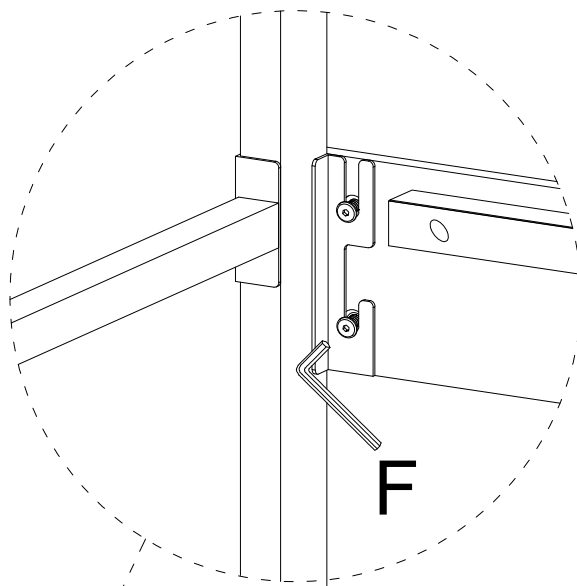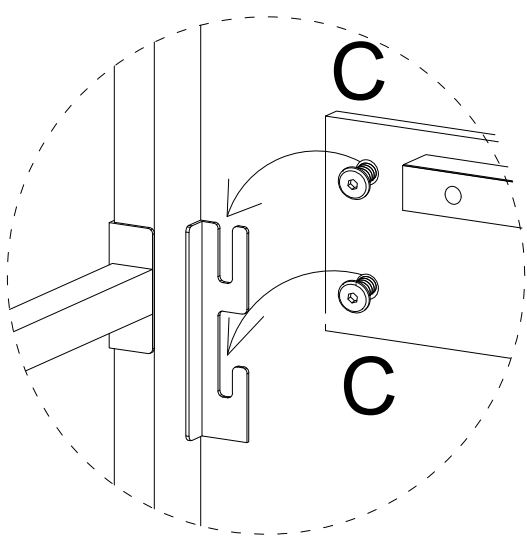

Step 1

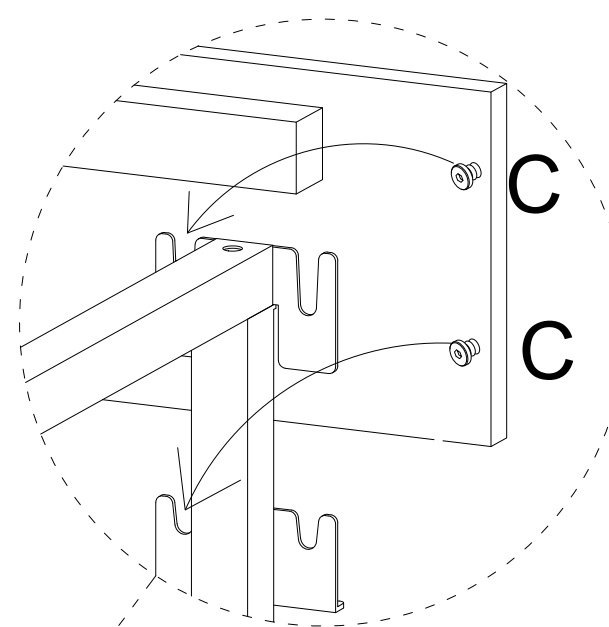


Step 2

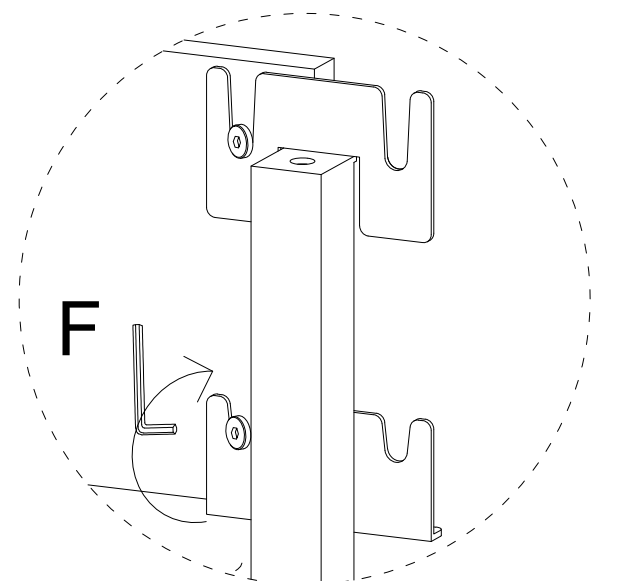


Release screws, put part together, then tight screws

11

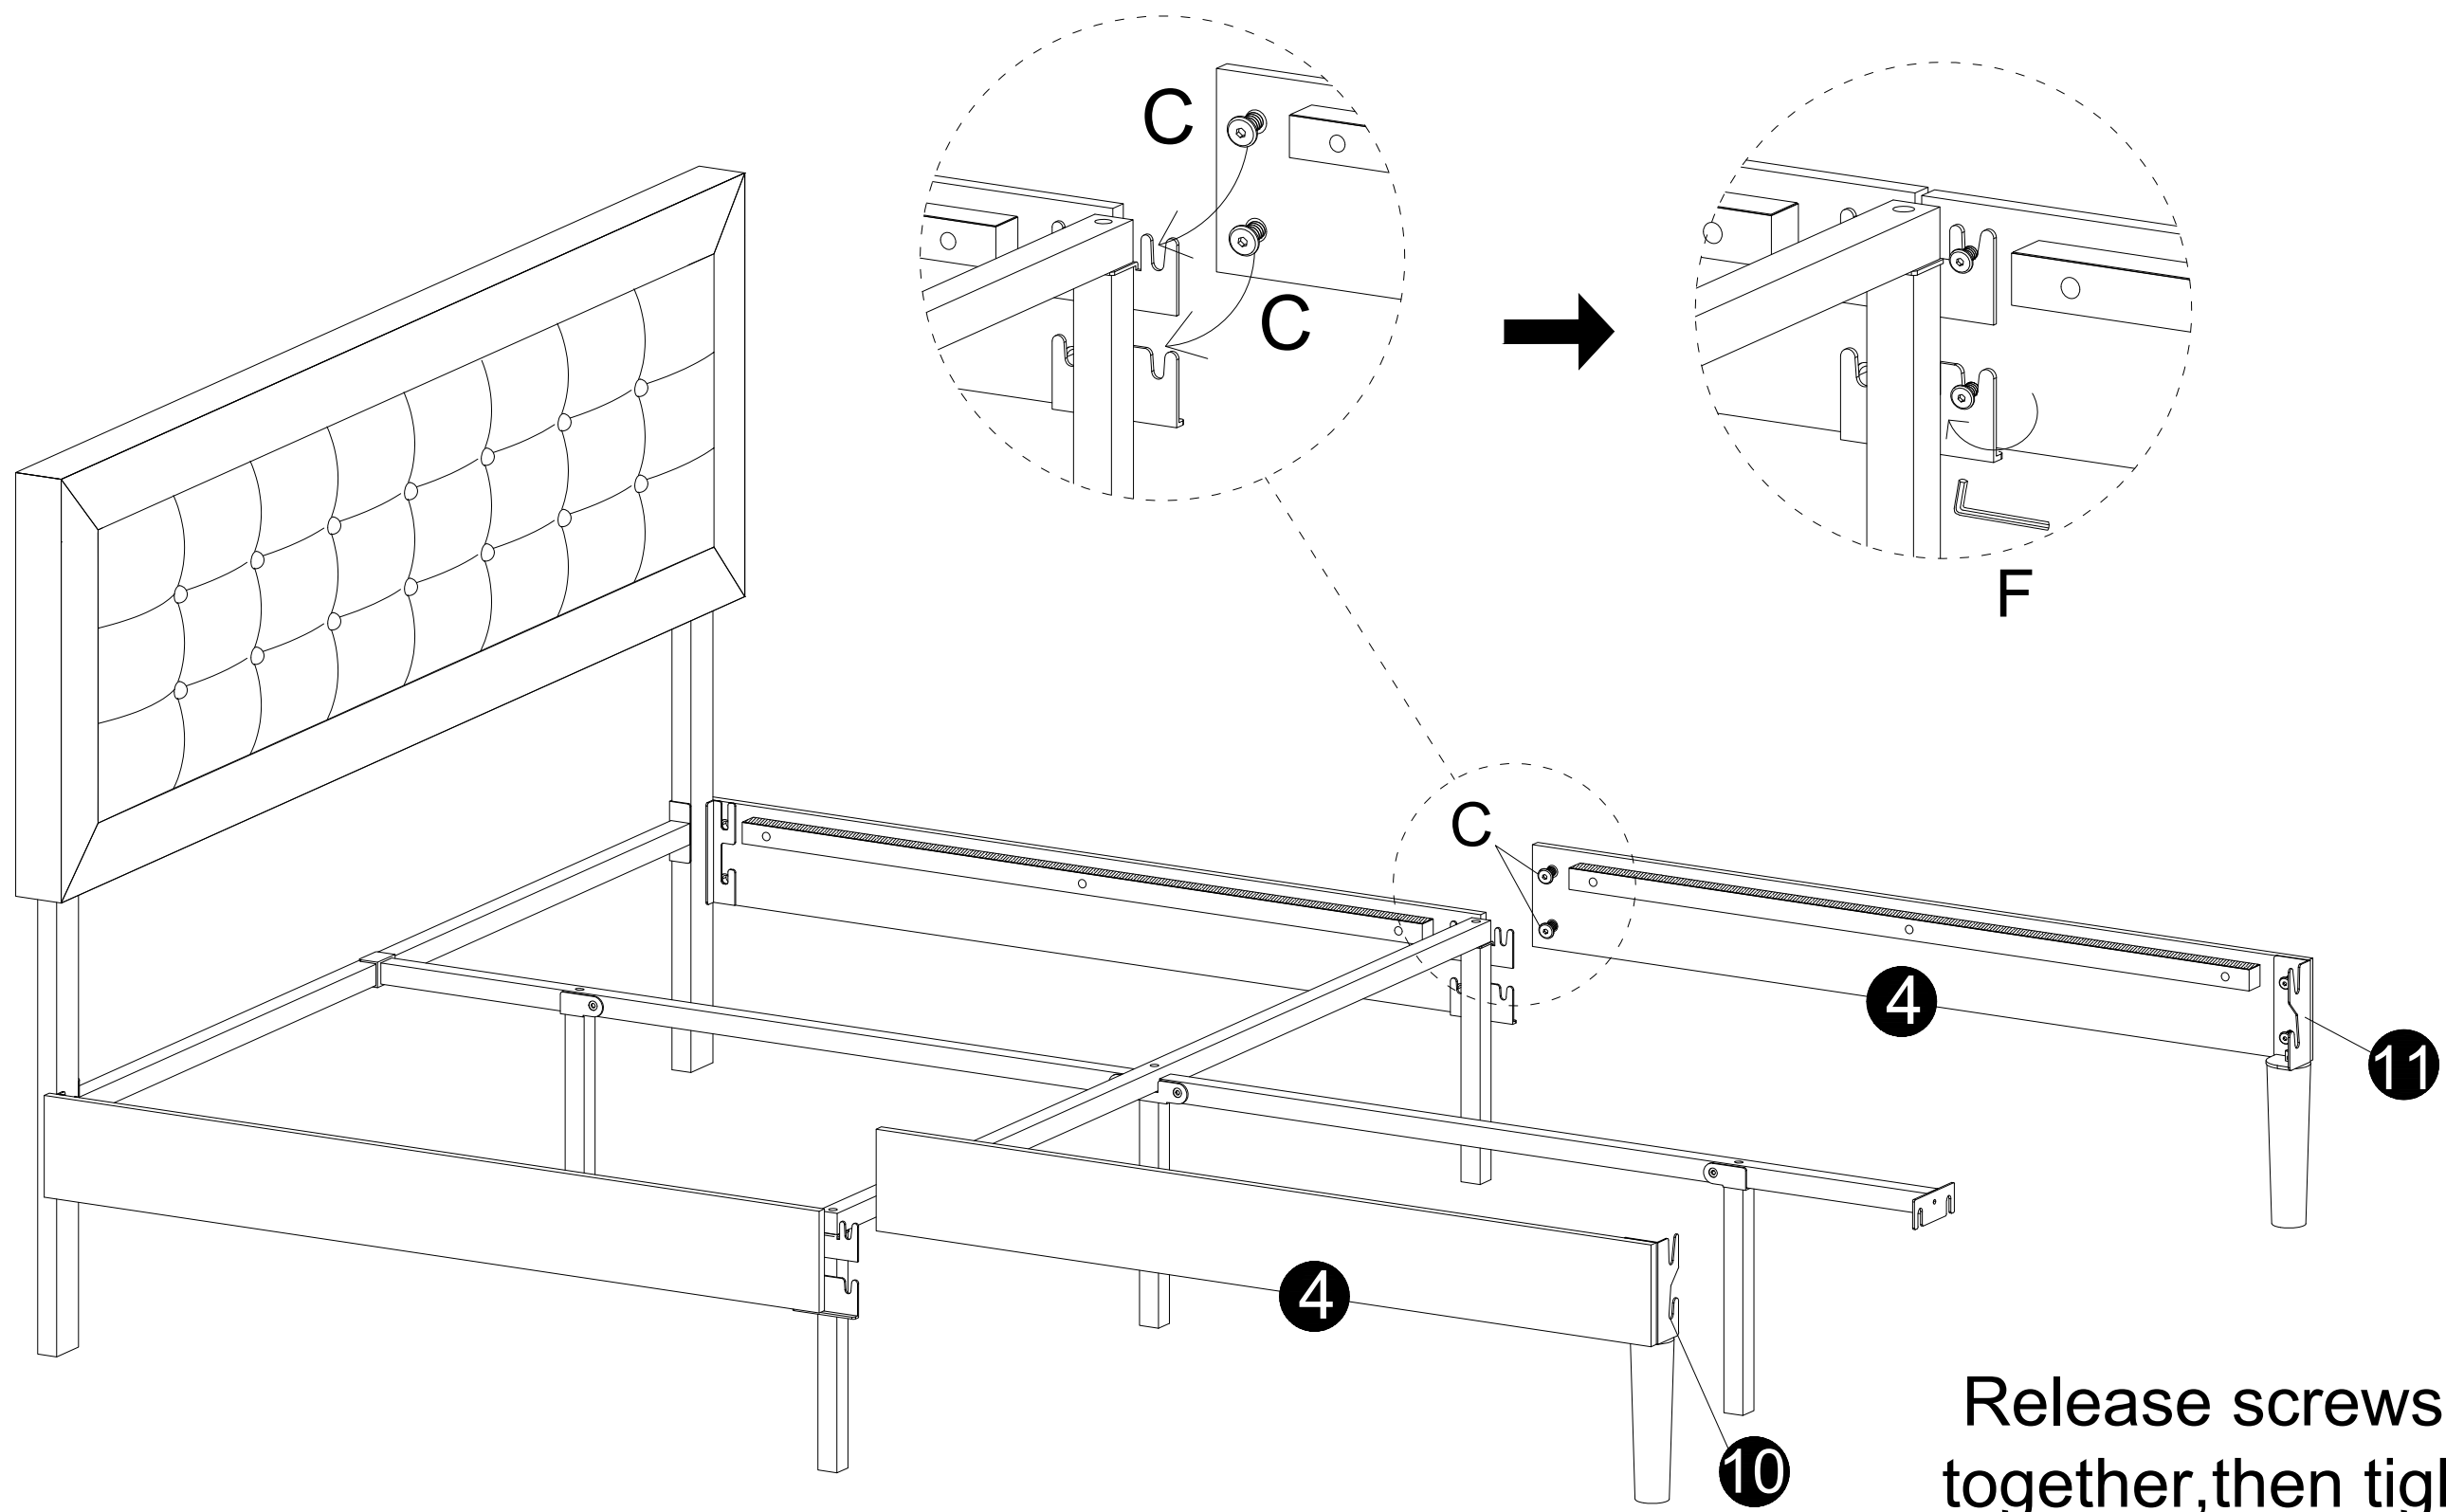


Release screws, put part together, then tight screws

12

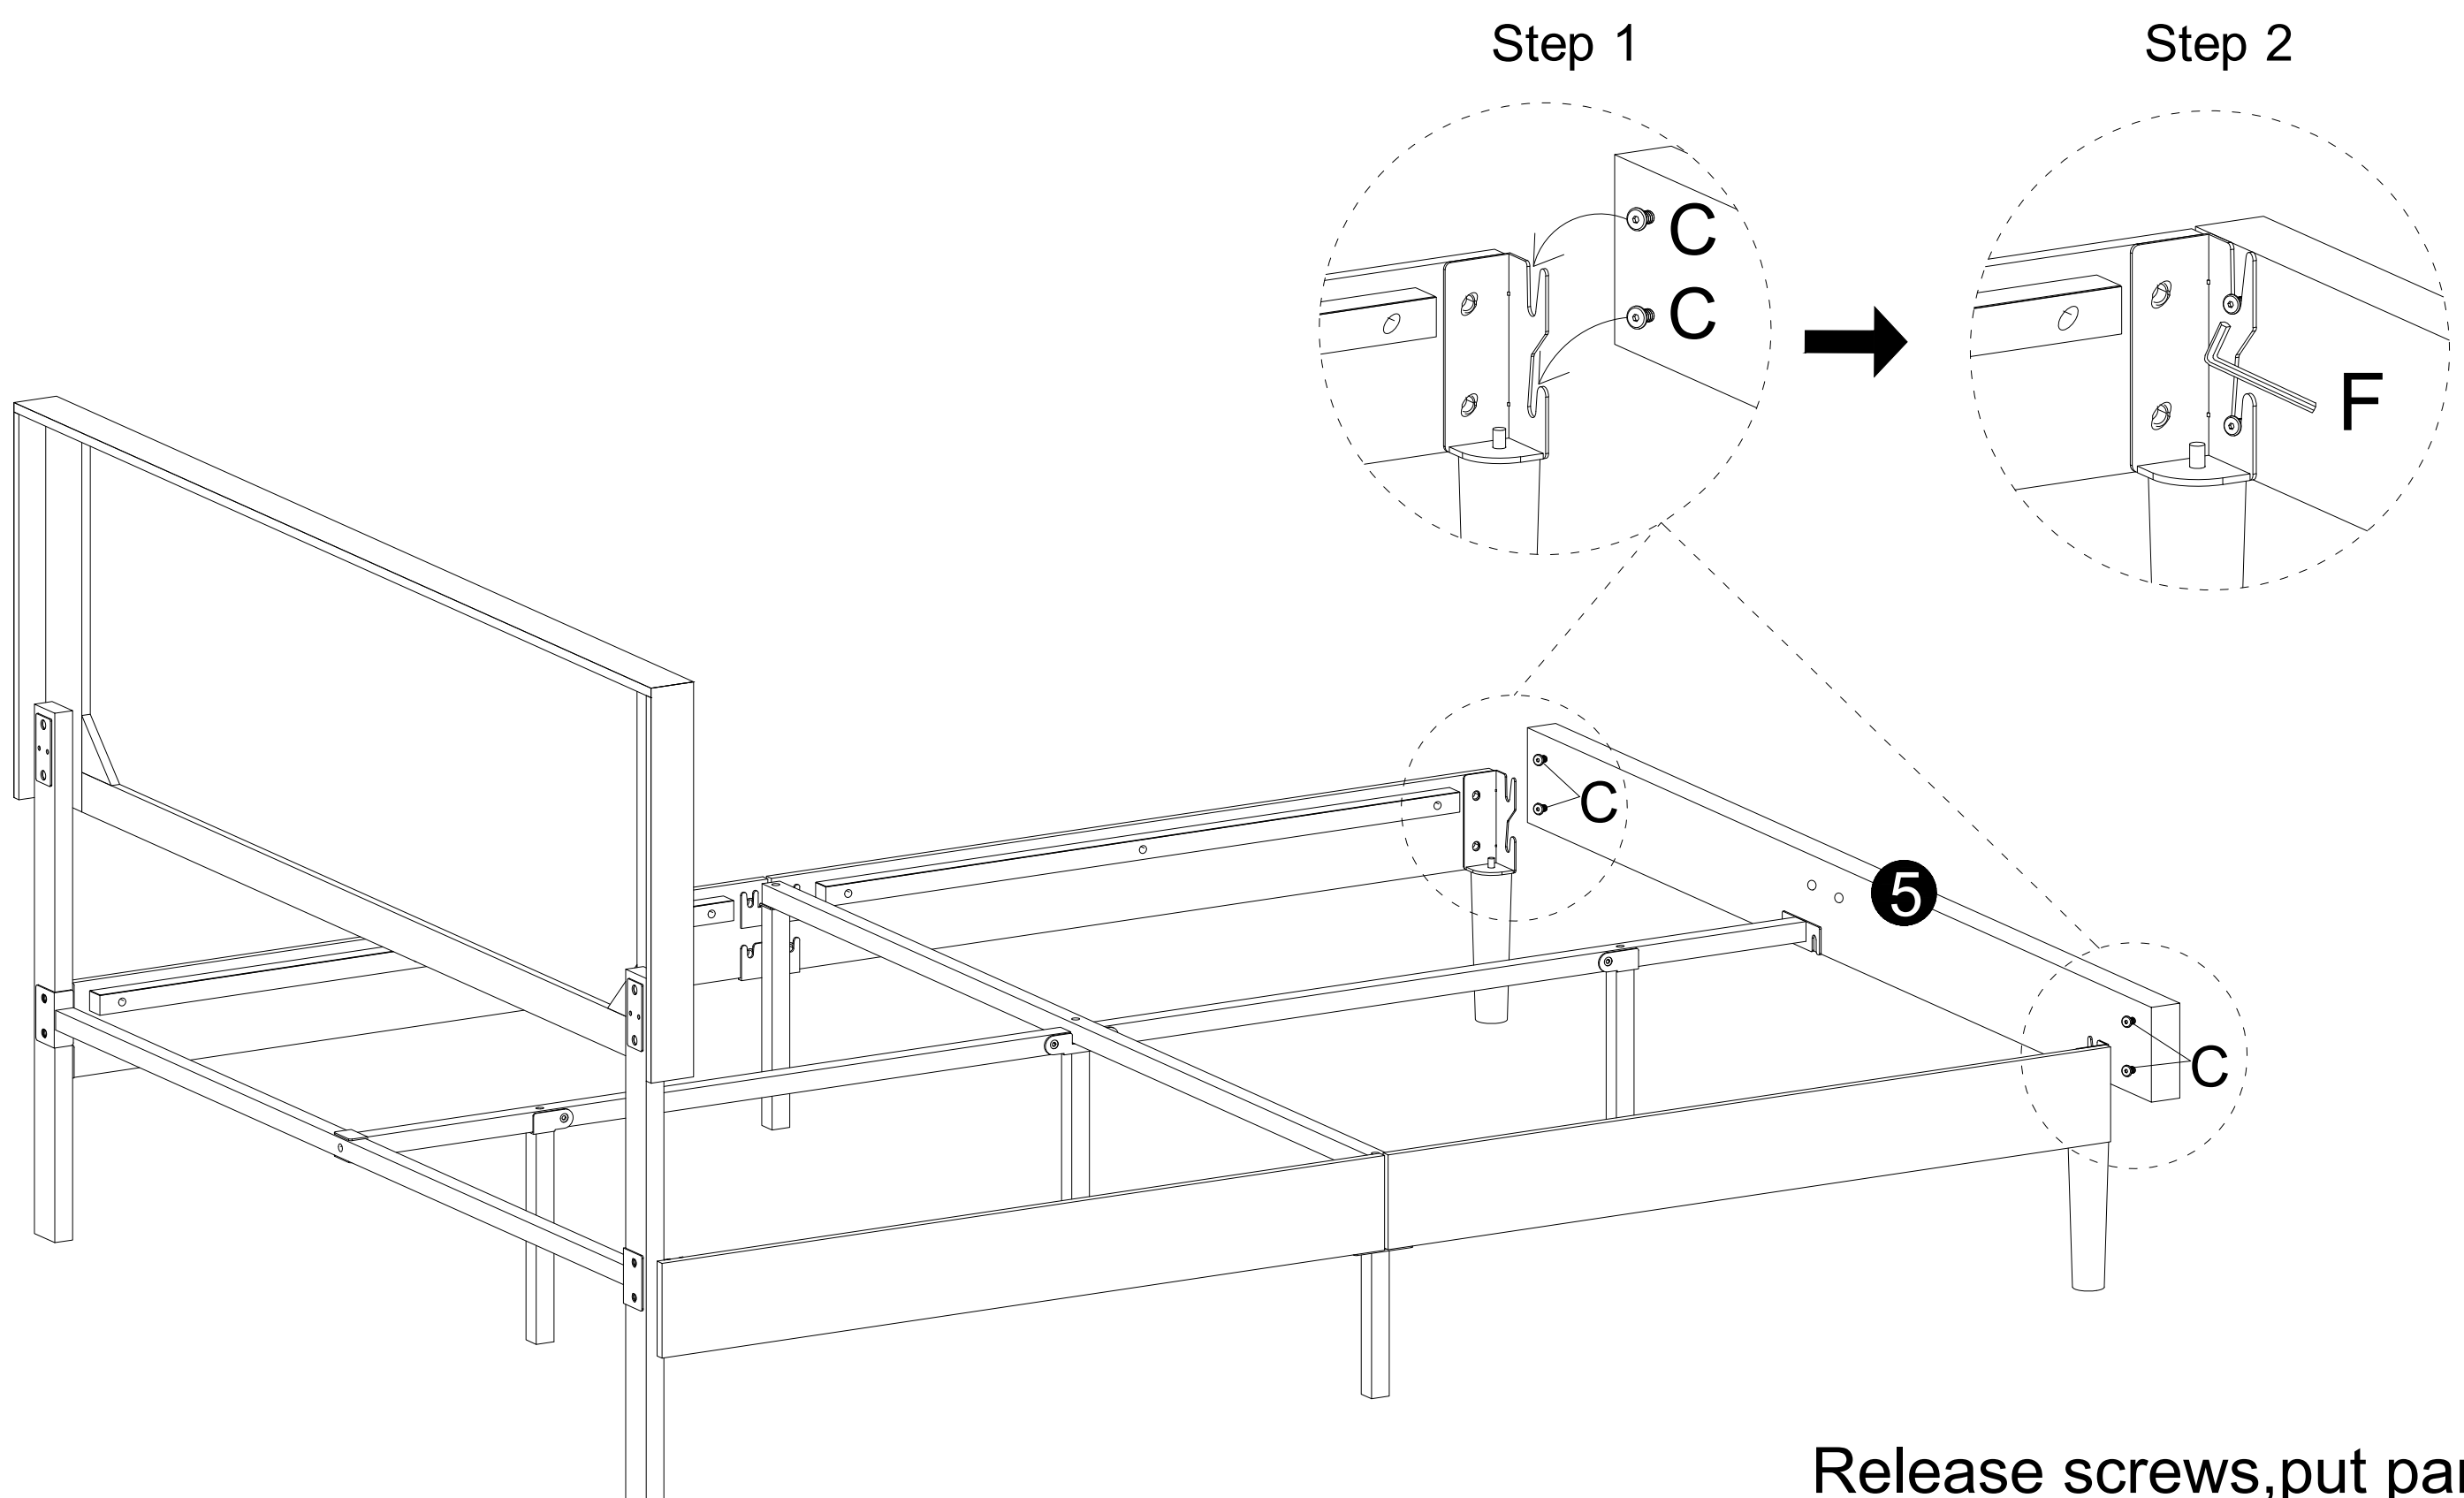


Release screws, put part together, then tight screws

13

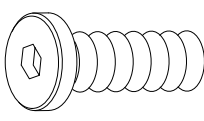

M8×25mm


E × 2pcs

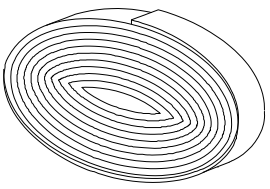


G × 1pcs

step2.To prevent friction noise,
unroll part G and fit it on part 7 ,the
lenght of part G can cut as you will.

step1.Tighten screw E

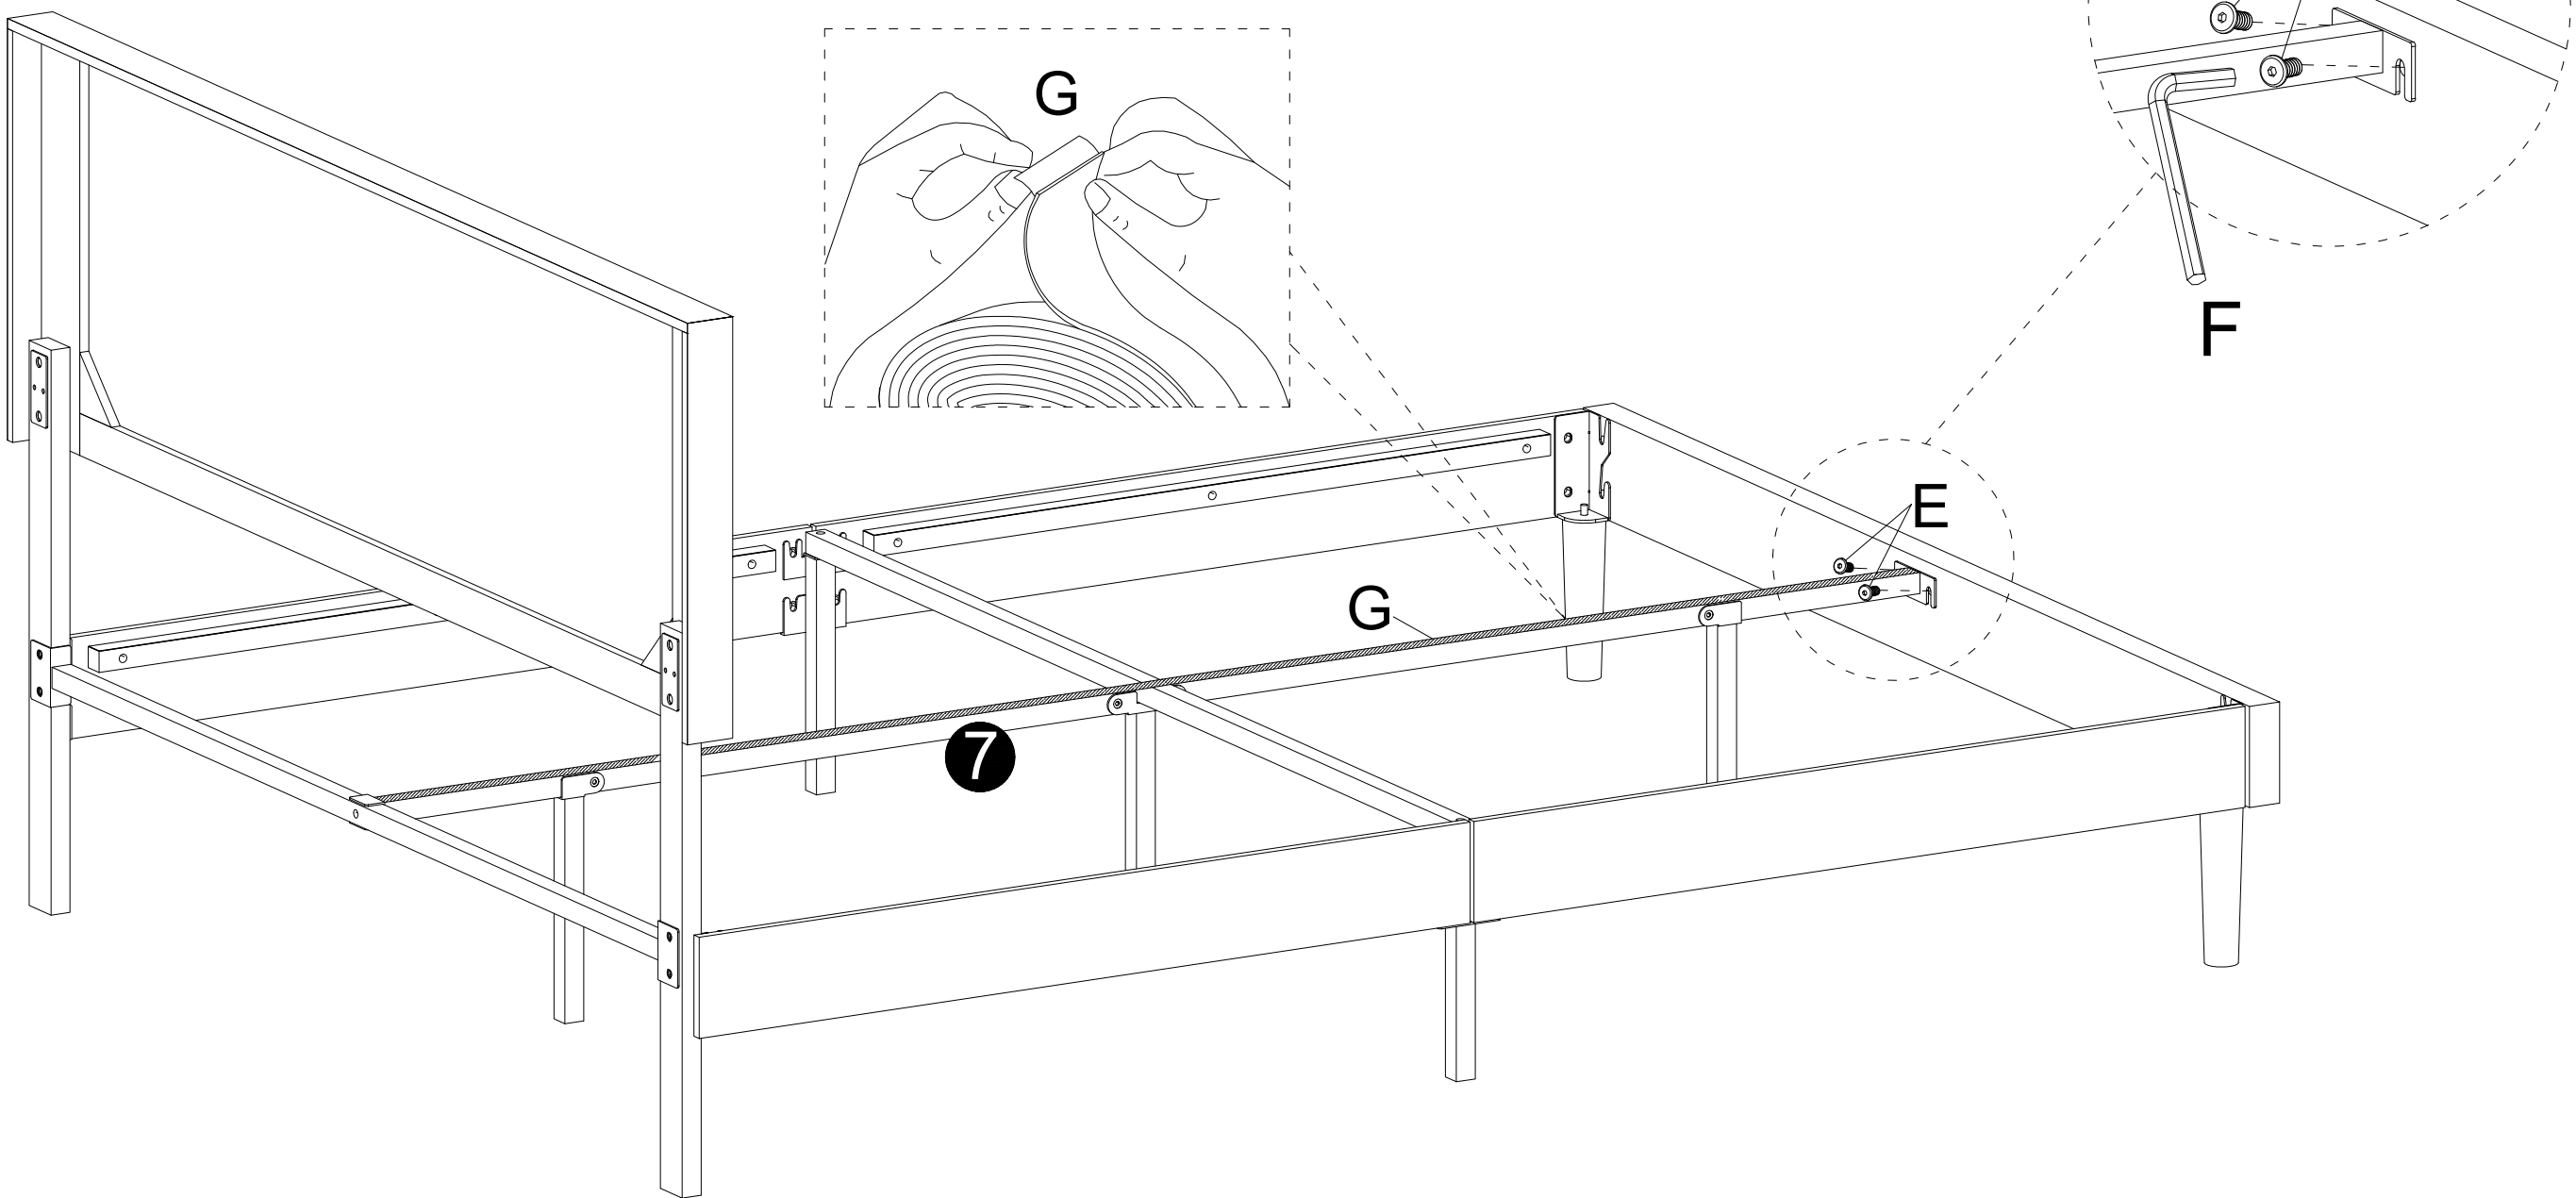

14

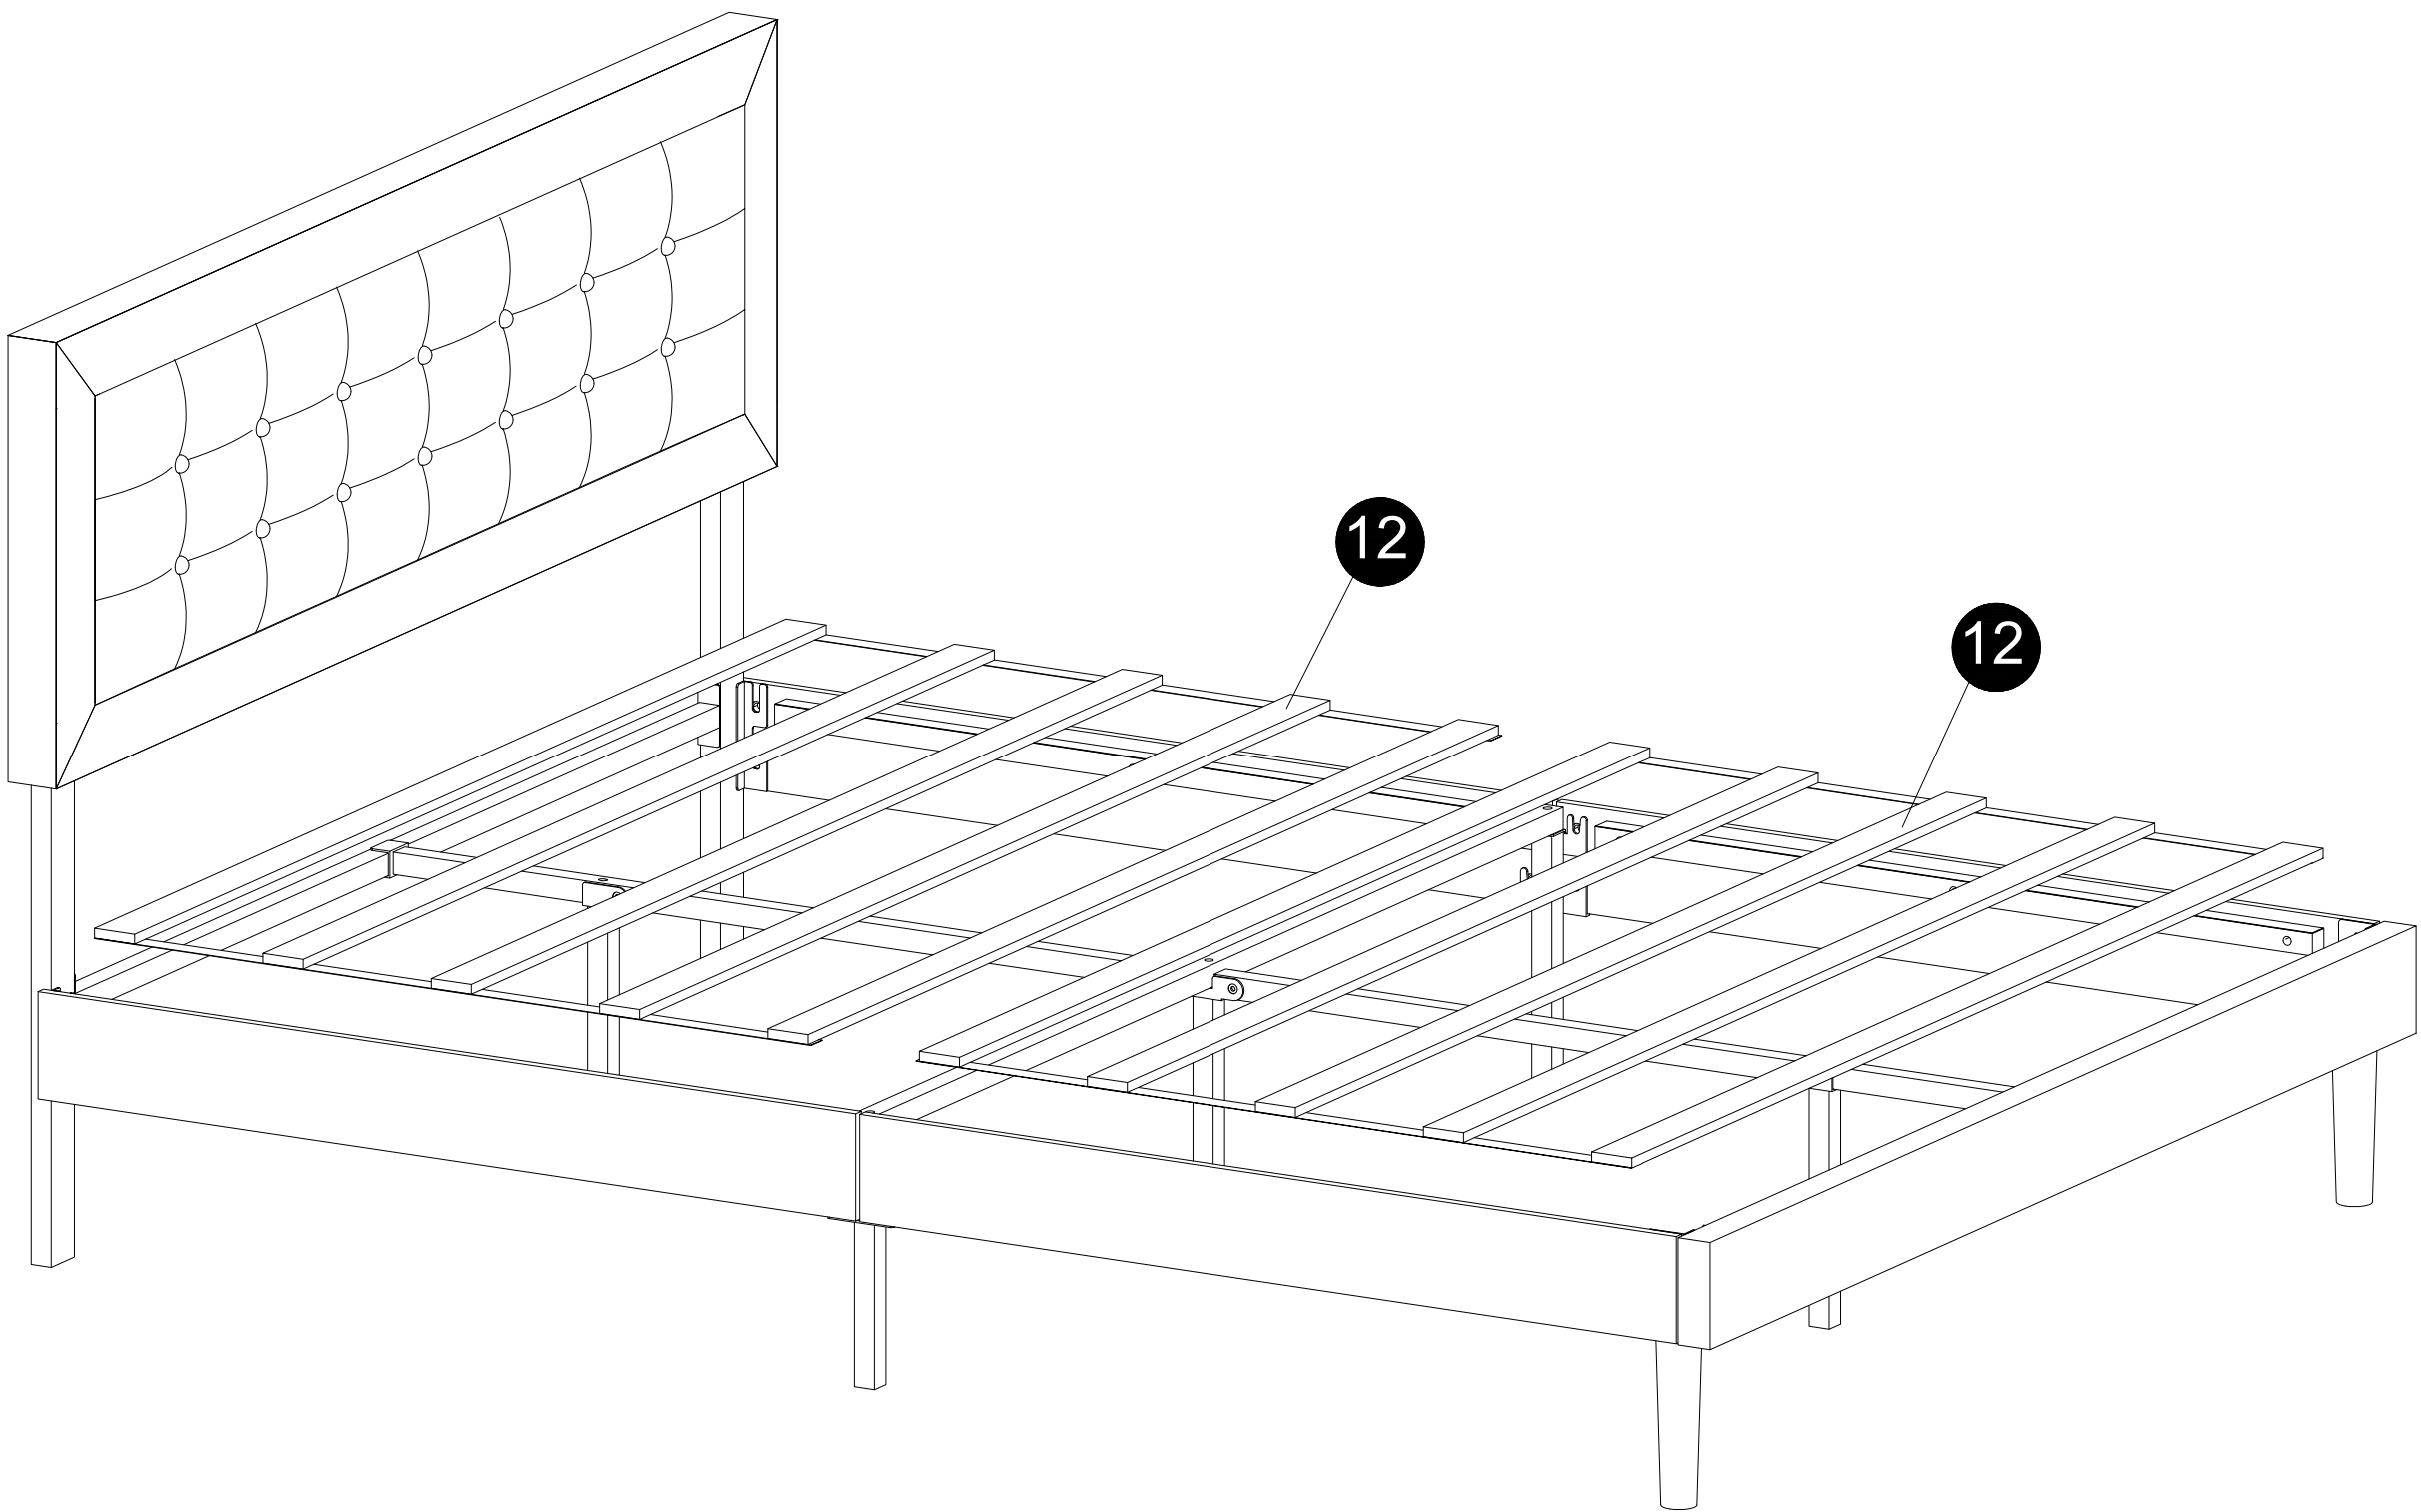

15

