



YH1008-F&Q&CK

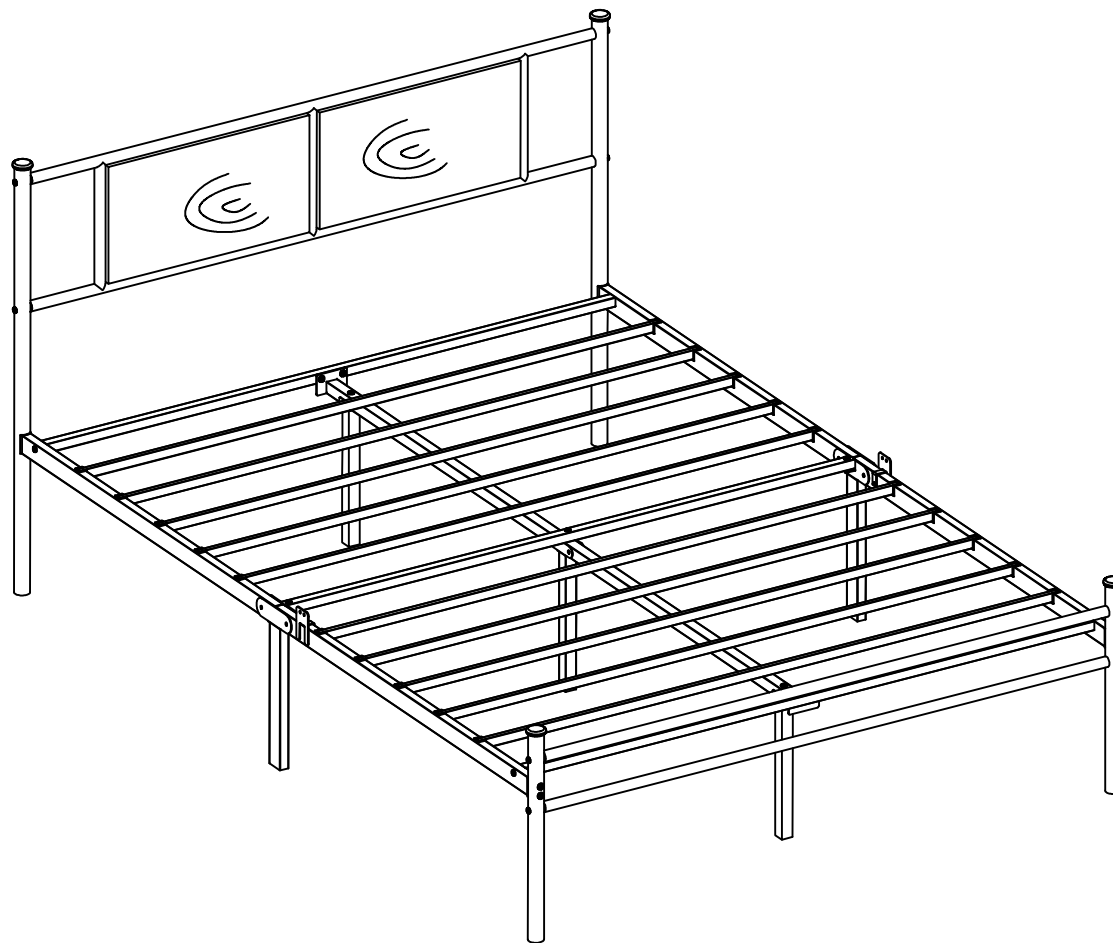









Attention: Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other. If the screws are tightened initially, subsequent hole positions may be misaligned.

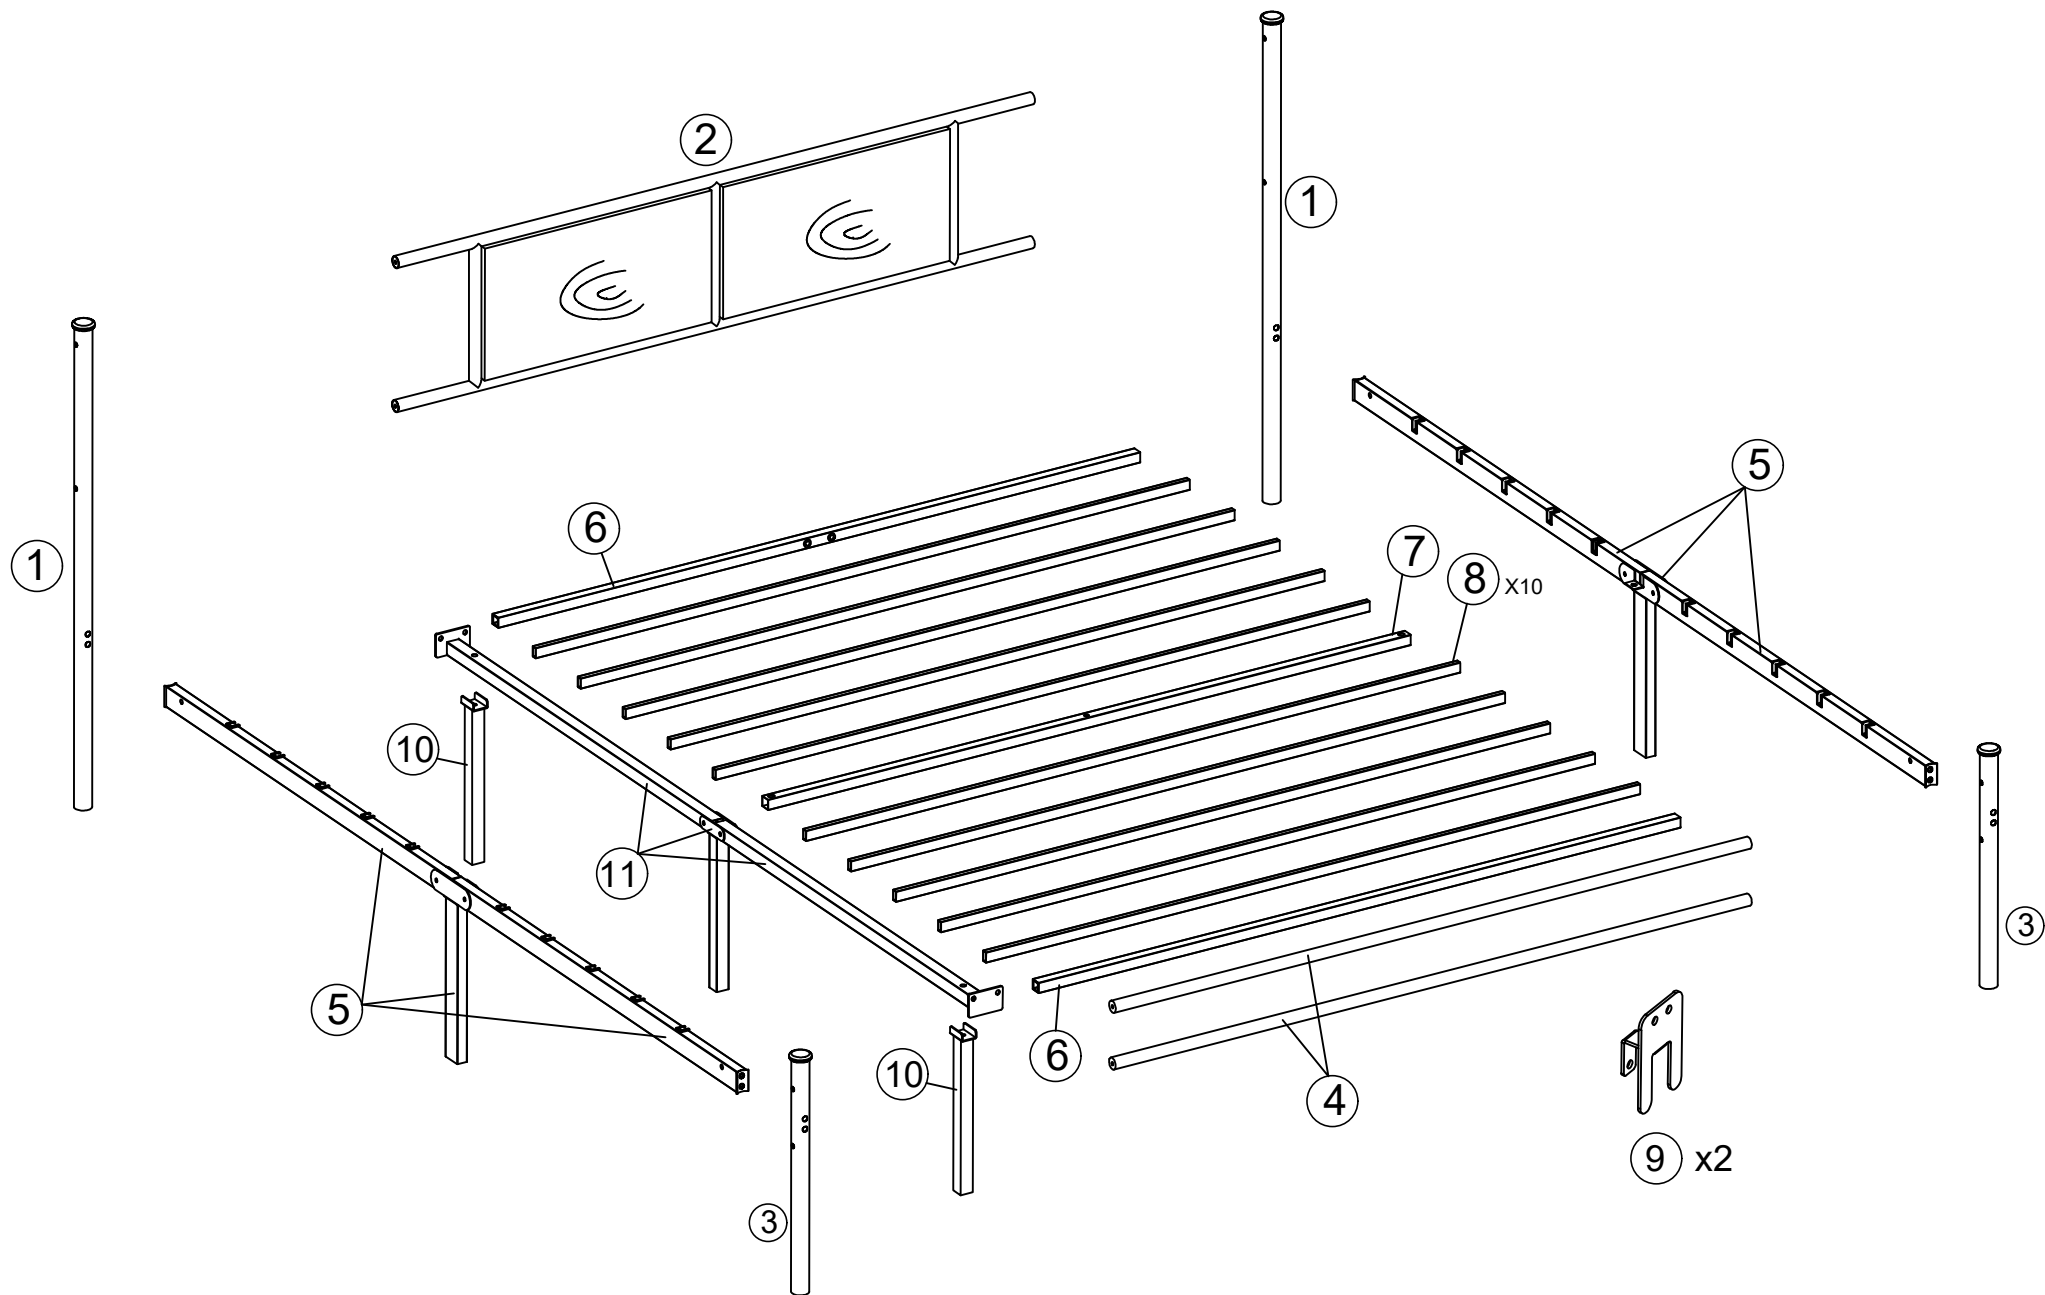

Hardware arts


- 
M6X35
Ⓐ 6PCS
- 
M6X45
Ⓑ 8PCS
- 
M6X55
Ⓒ 1PC
- 
M8X15
Ⓓ 4PCS
- 
M8X45
Ⓔ 10PCS
- 
4#
Ⓕ 2PC

Part list

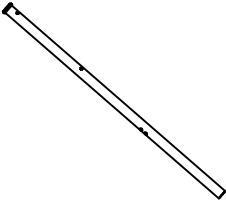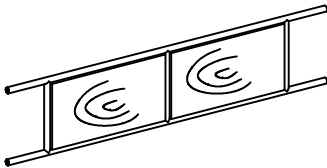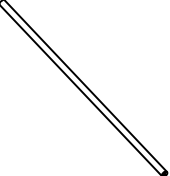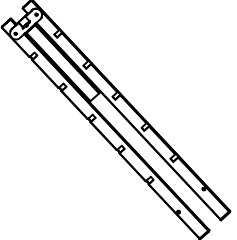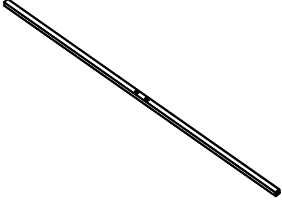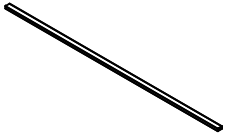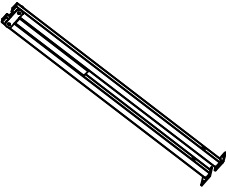- 
① 2PCS
- 
② 1PC
- 
③ 2PCS
- 
④ 2PCS
- 
⑤ 2PCS
- 
⑥ 2PCS
- 
⑦ 1PC
- 
⑧ 10PCS
- 
⑨ 2PCS
- 
⑩ 2PCS
- 
⑪ 1PC


Step:1

	M6X45	B	4PCS
	4#	F	1PC

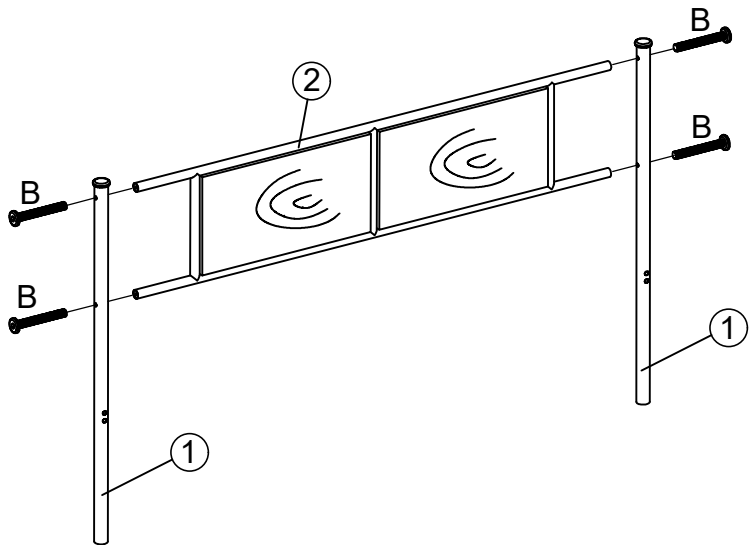


Step:2

	M6X45	B	4PCS
	4#	F	1PC

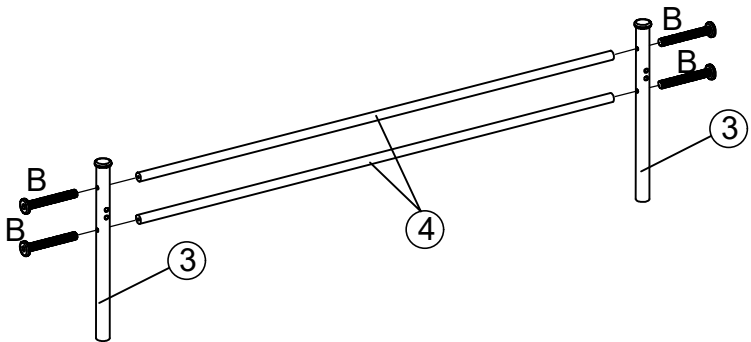


Step:3

	M8X45	E	8PCS
	4#	F	1PC

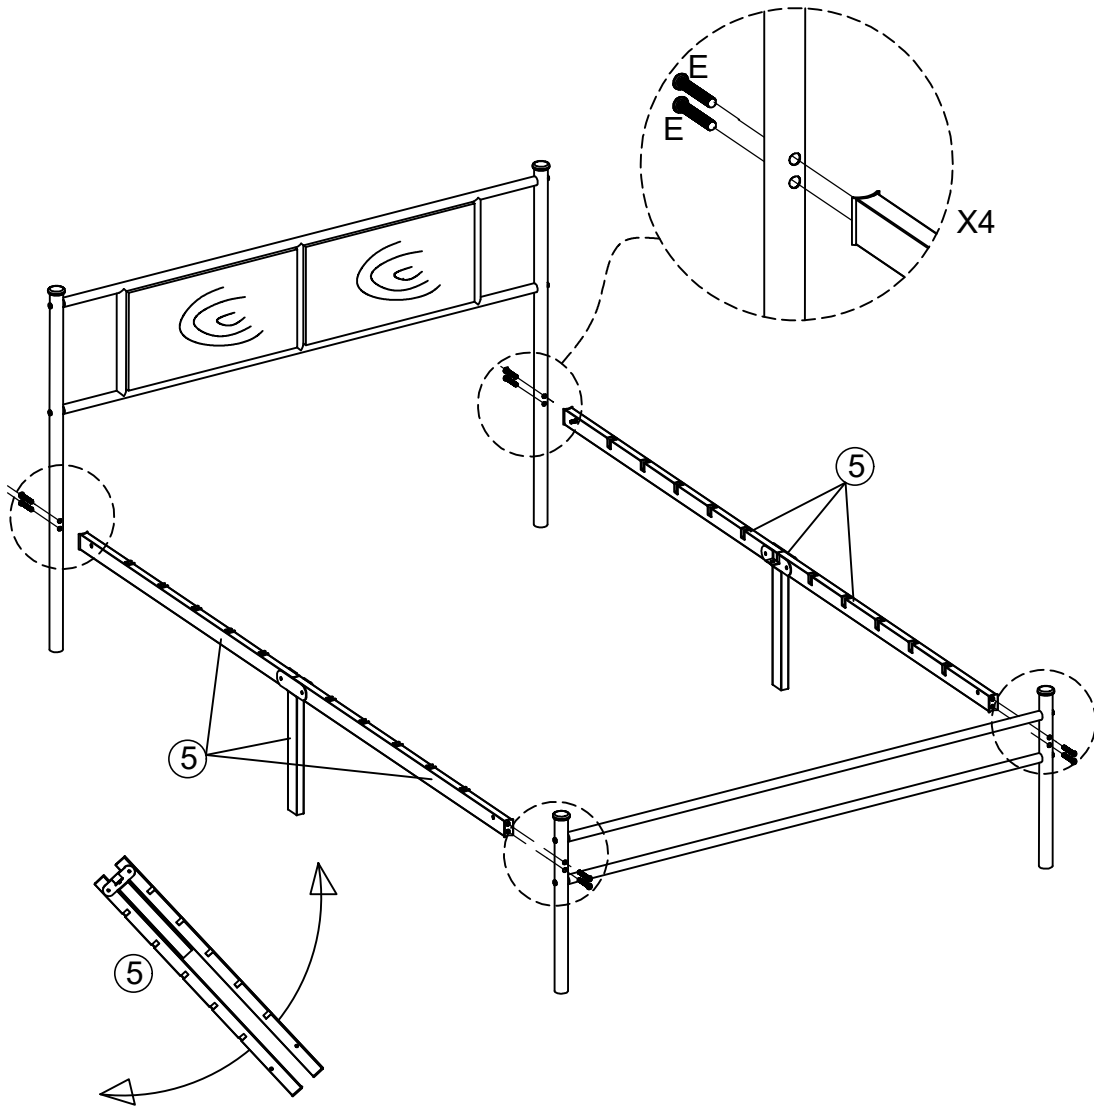



Step:4

	M6X35	A	6PCS
	4#	F	1PC

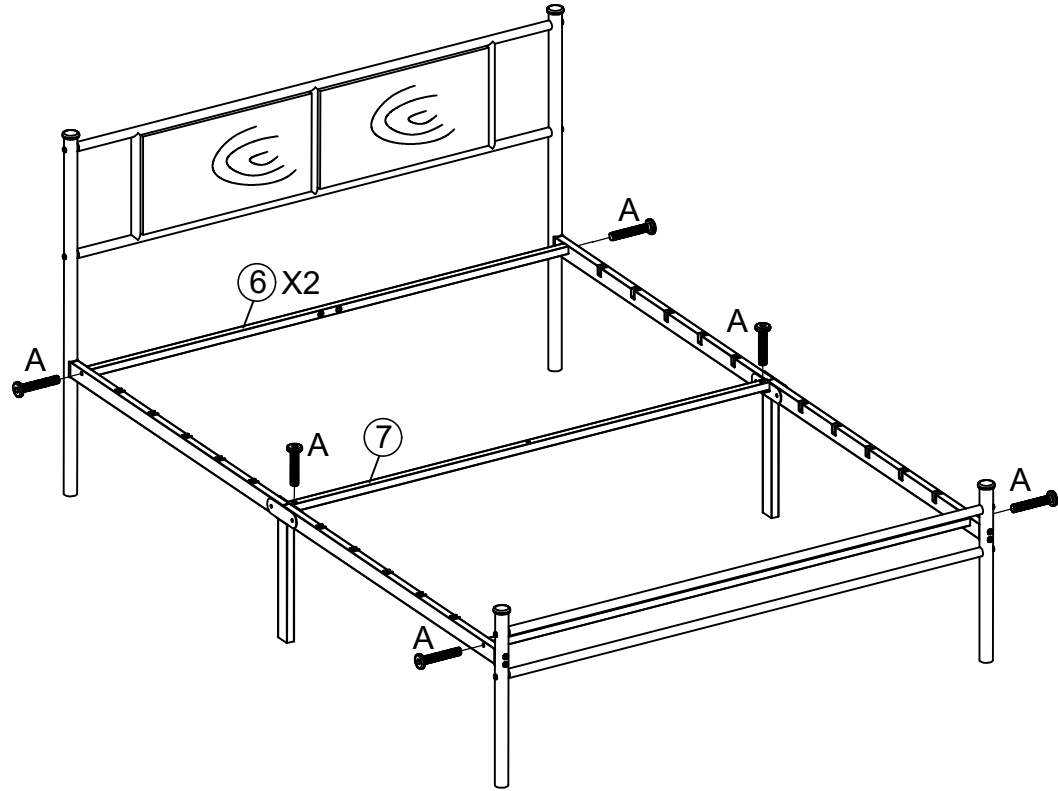


Step:5

	M8X45	E	2PCS
	M8X15	D	4PCS
	M6X55	C	1PC
	4#	F	1PC

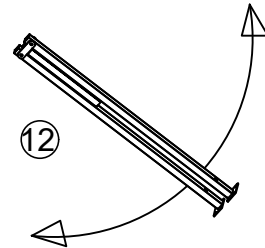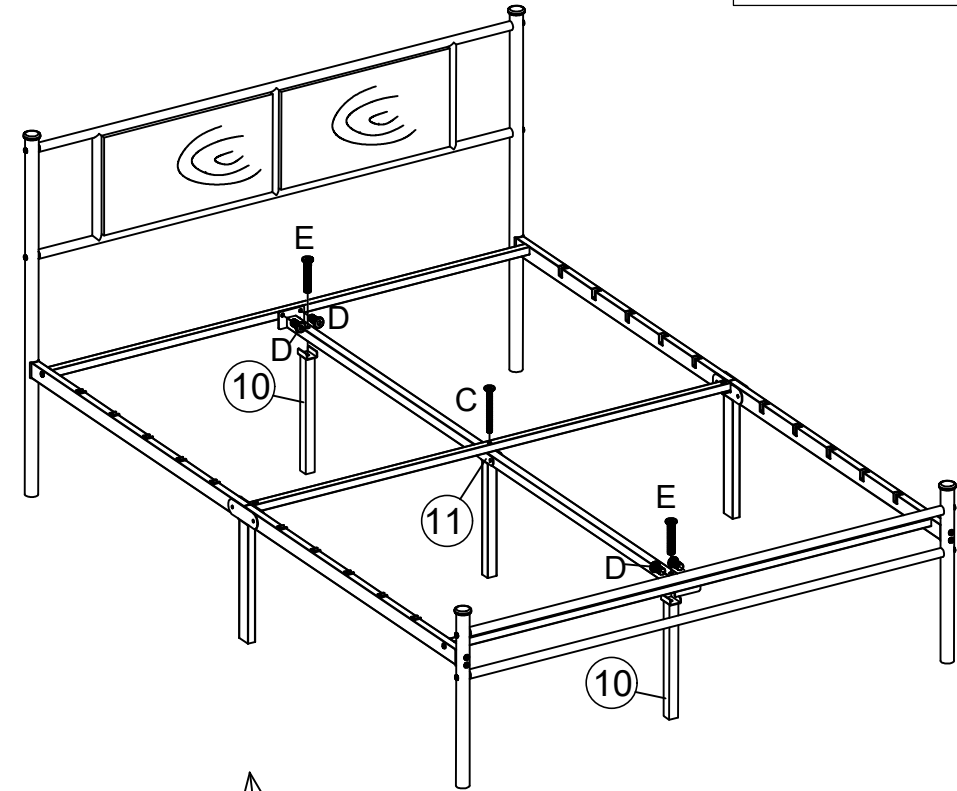

Step:6

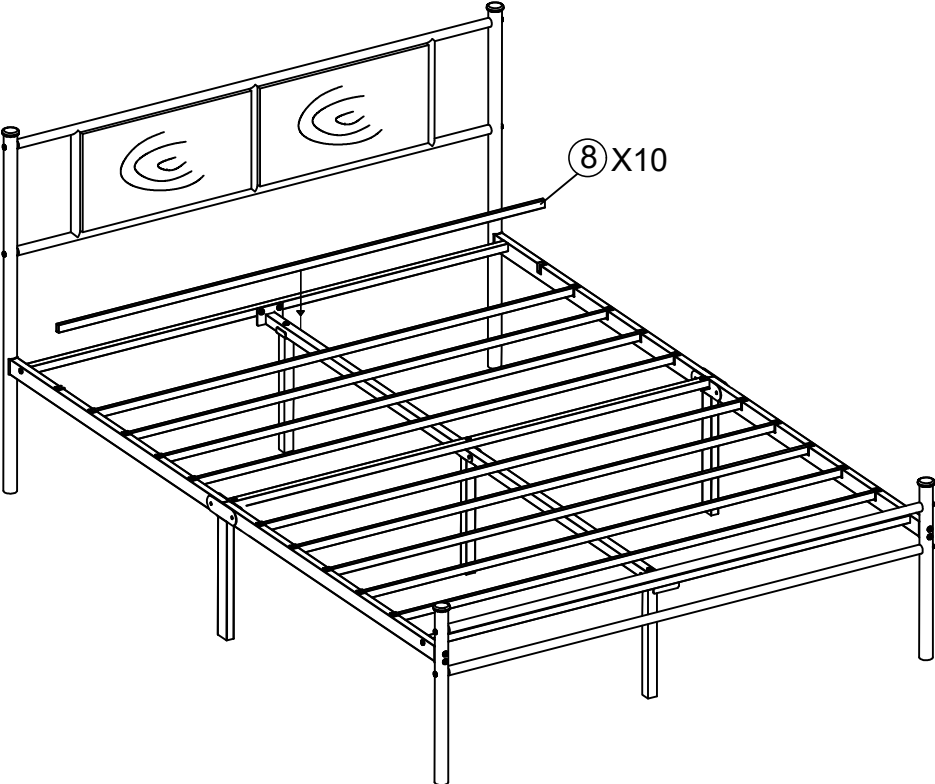

Step:7

