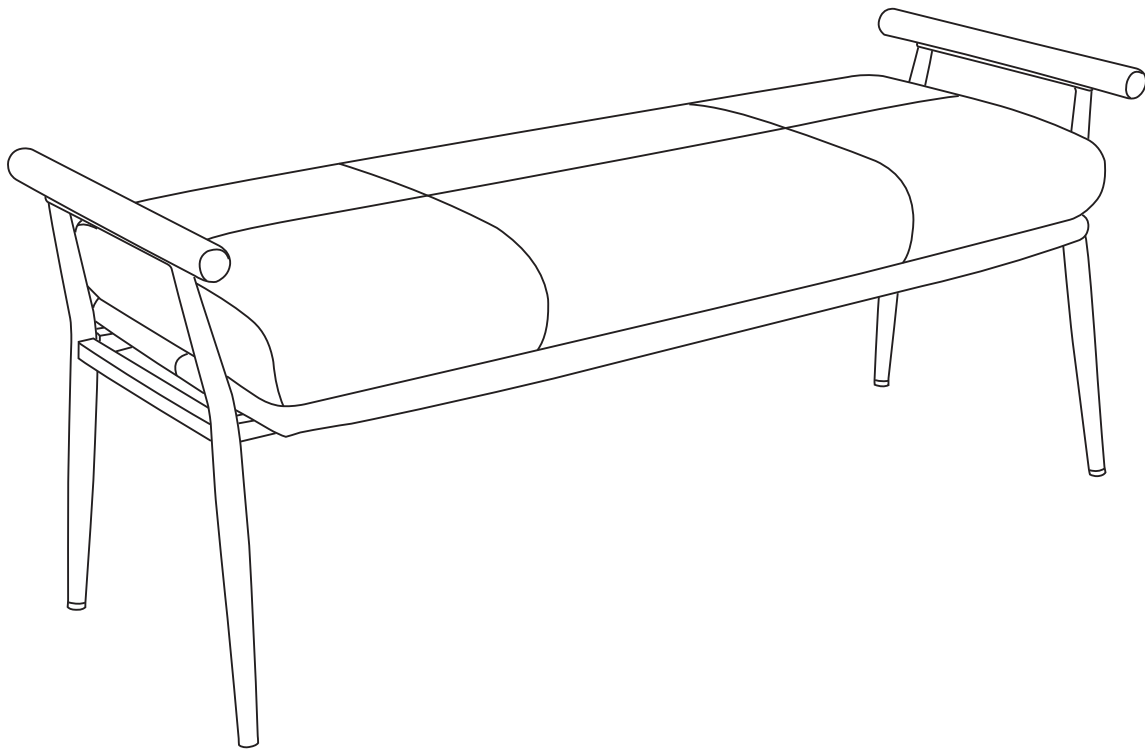


ASSEMBLY INSTRUCTION

BENCH



Please carefully unpack and identify each component before beginning assembly. Before you begin, please refer to parts list to make sure that you have all parts. Please take care when assembling the unit and always place the parts on a clean, soft surface. If you require assistance with assembly or parts, please call 888-357-7263.


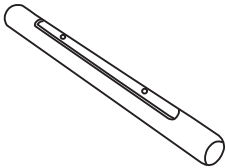
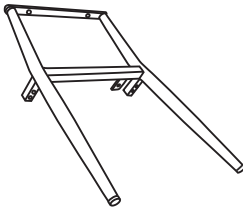
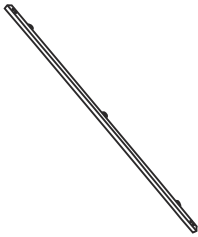
Get social with us and discover more about our products, tips and exclusive discounts!







PRE-ASSEMBLY PREPARATION

- **CAUTION:** Assembly will require at least 2 adults. DO NOT use power tools. Please inspect all items BEFORE assembly. If for any reason you need to return this item, please kindly return it in it's original packaging.
- **WARNING!**
 1. DO NOT let any sharp objects touch or rub the surface of the product.
 2. When assembling, do not let children play around the working area.
 3. DO NOT tighten all bolts and screws completely until the entire unit has been assembled and set up.
 4. DO NOT USE if this product become damaged, and/or components are broken or missing.
- **CARE AND CLEANING:** DO NOT scratch or chip the finish. DO NOT use abrasive chemicals for cleaning. Clean with mild soap on a soft rag. Rinse and dry thoroughly.
- **MAINTENANCE:** Please periodically check all fittings and re-tighten as necessary.

PARTS LIST


Seat Cushion (A)  Qty: 1	Side Arm Rest (B)  Qty: 2	Side Frame (C)  Qty: 2	Seat Support Rail (D)  Qty: 2
---	--	--	--

HARDWARE LIST

ALLEN BOLT (E) M6X12mm  Qty: 8	ALLEN BOLT (F) M6X16mm  Qty: 4	ALLEN BOLT (G) M6X20mm  Qty: 10	ALLEN WRENCH (H)  Qty: 1
--	--	--	---

STEP-BY-STEP ASSEMBLY

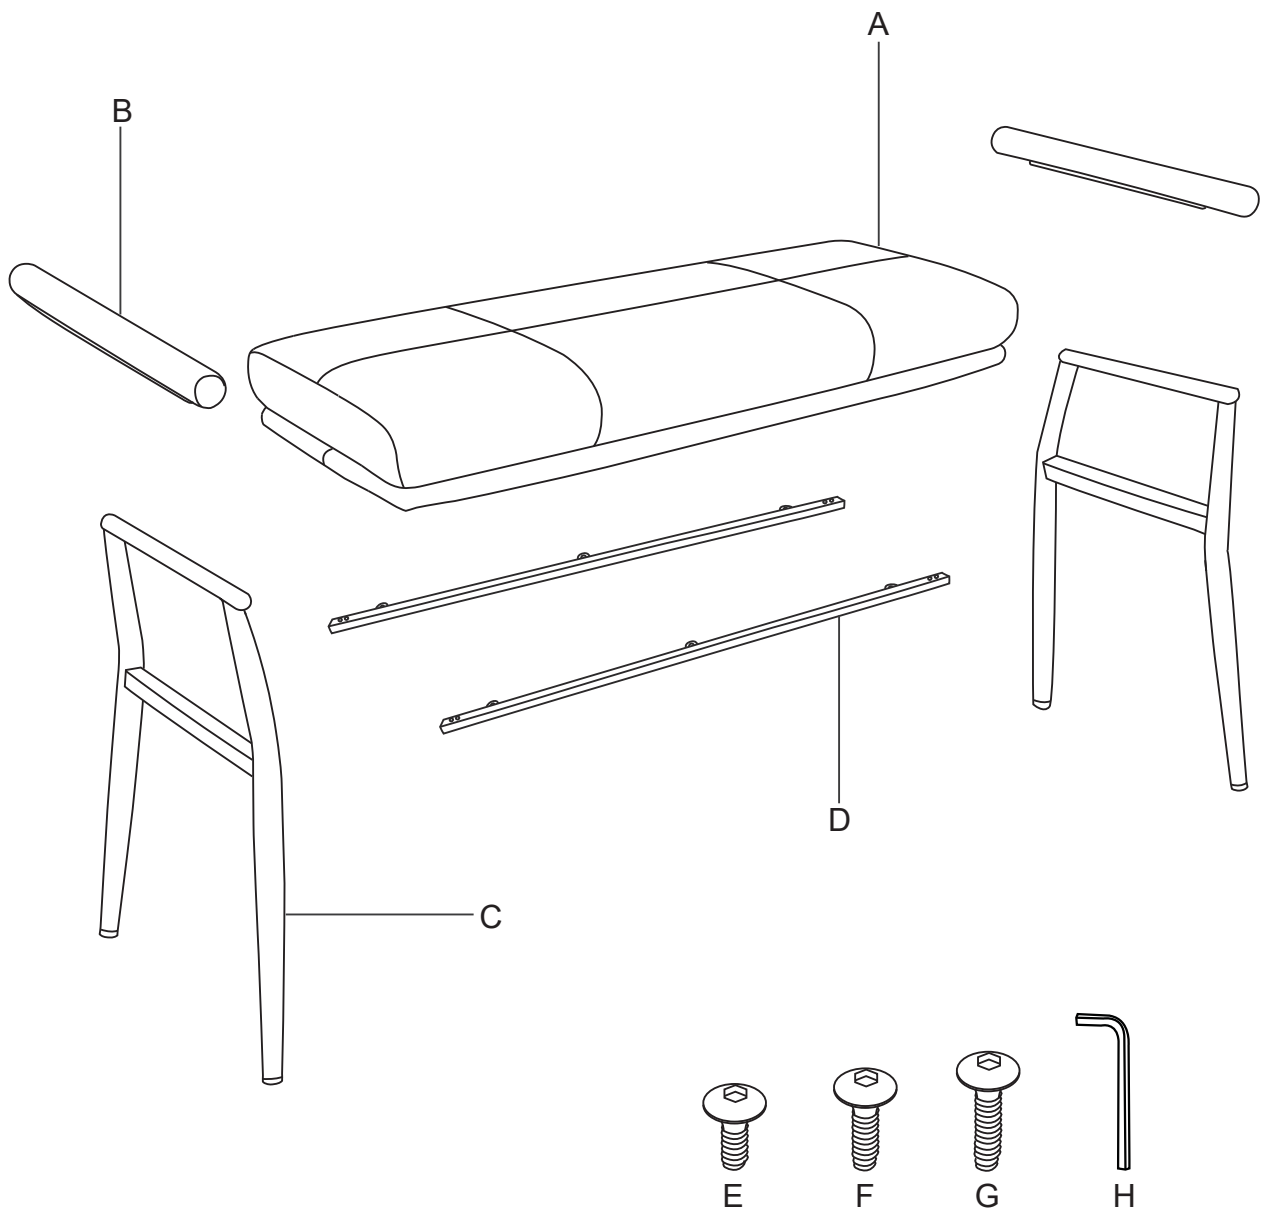
PLEASE CAREFULLY UNPACK AND IDENTIFY EACH COMPONENT BEFORE BEGINNING ASSEMBLY. BEFORE YOU BEGIN, PLEASE REFER TO PARTS LIST TO MAKE SURE THAT YOU HAVE ALL PARTS.



STEP 1


Connect the Side Arm Rest (B) to the Side Frame (C) by using Allen Bolt (F) and Allen Wrench (H) as shown in below diagram.

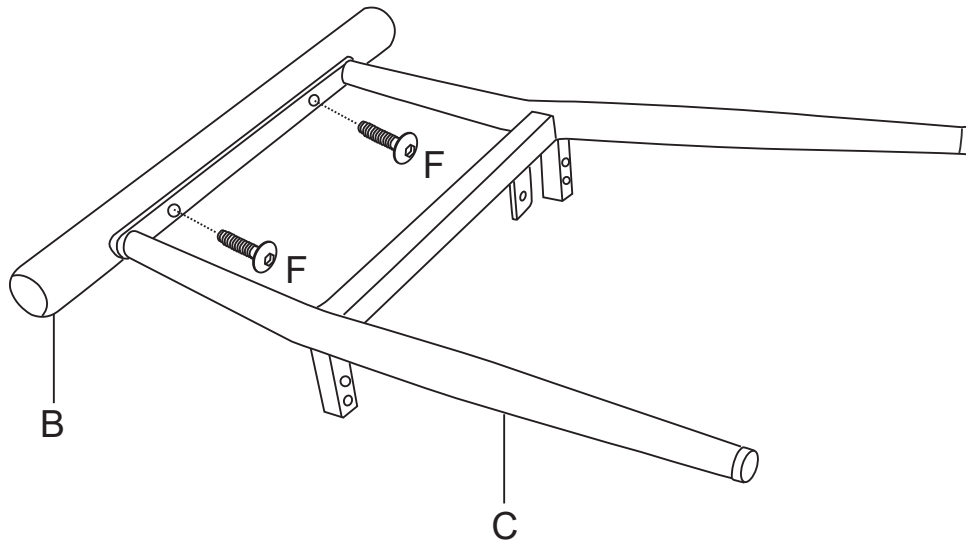The armrests are universal.

**STEP 2**

Insert the Side Frame (C) into the Seat Support Rail (D) as shown in below diagram.

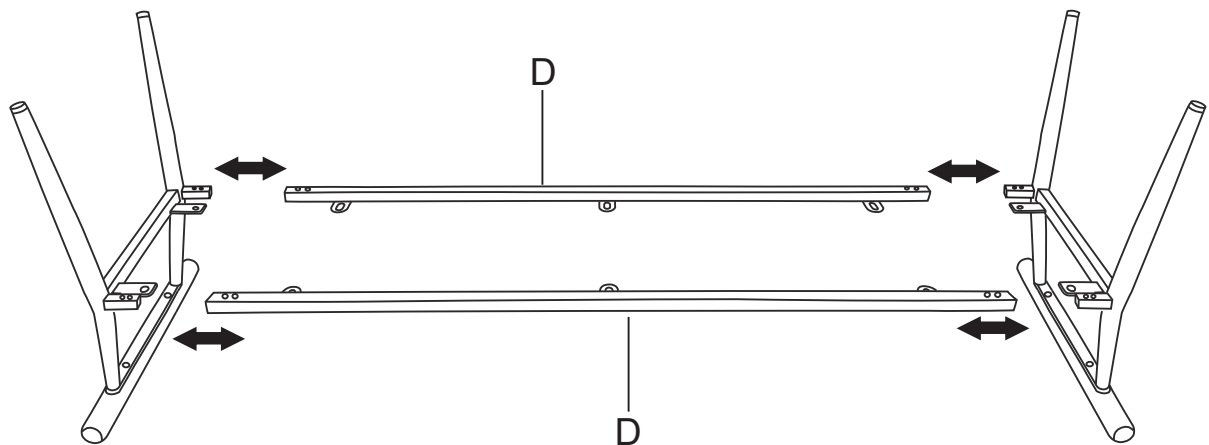
Please pay attention to the orientation of the holes on the Seat Support Rail to avoid rework.



STEP 3

Secure the Side Frame (C) to the Seat Support Rail (D) by using Allen Bolt (E) and Allen Wrench (H) as shown in below diagram.

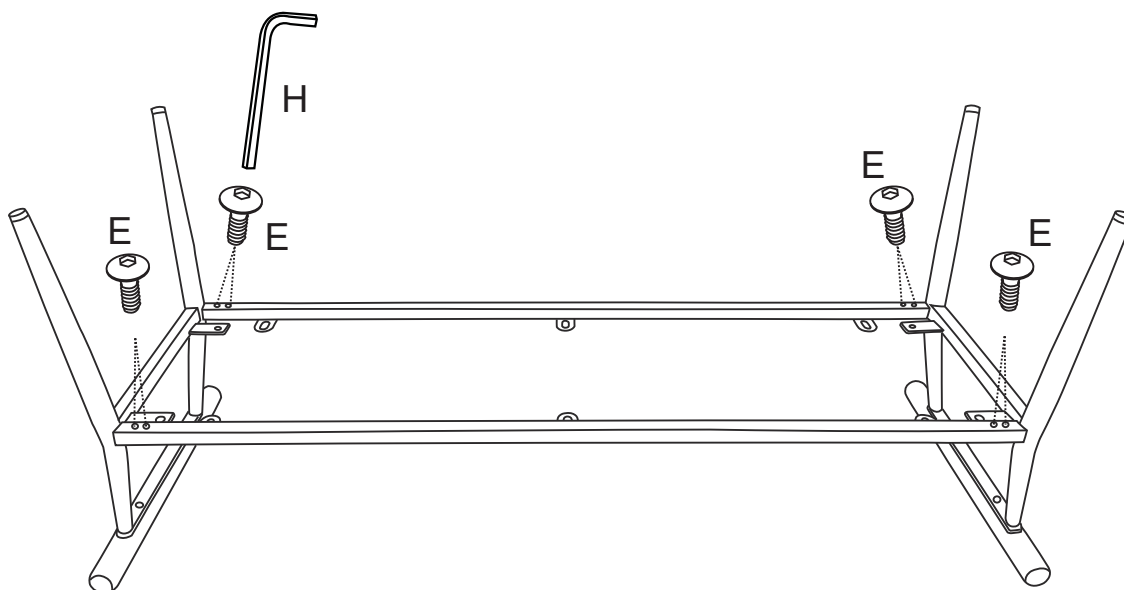
Please 80% tighten the bolts.



STEP 4

Connect the Side Frame (C) to the Seat Cushion (A) by using Allen Bolt (G) and Allen Wrench (H) as shown in below diagram.

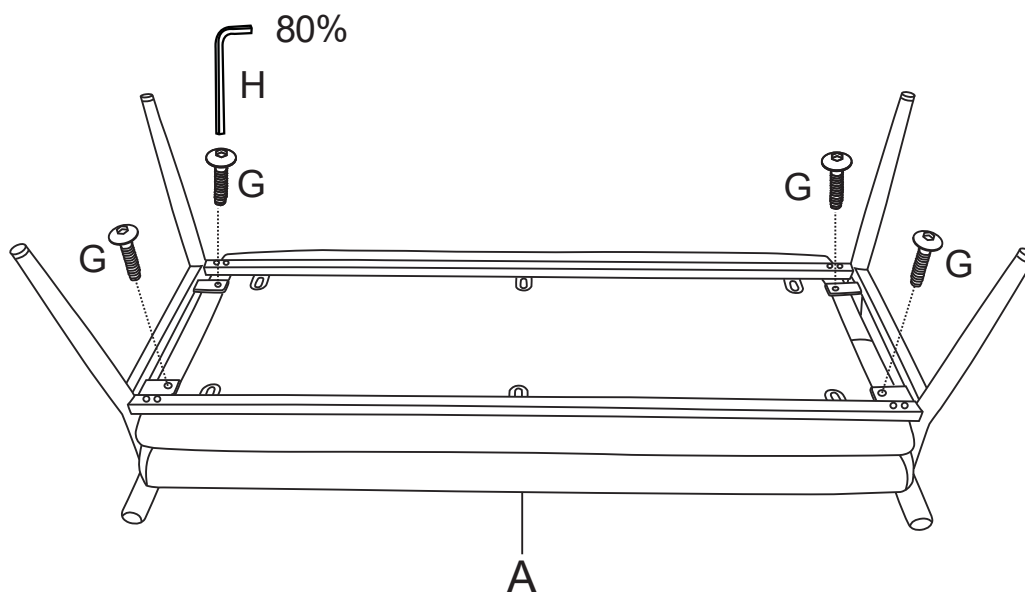
Please 80% tighten the bolts.



STEP 5


Connect the Seat Support Rail (D) to the Seat Cushion (A) by using Allen Bolt (G) and Allen Wrench (H) as shown in below diagram.

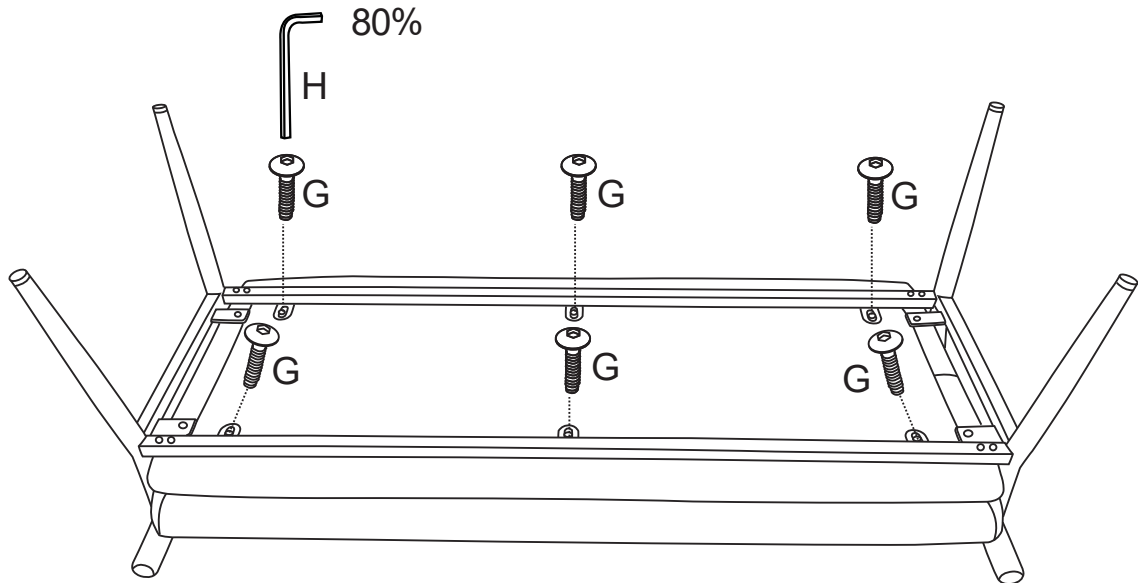Please 80% tighten the bolts.

**STEP 6**

Please 100% tighten all Allen Bolts (E,G) completely by using Allen Wrench (H) . After initial assembly, the product may acclimate to its new environment.

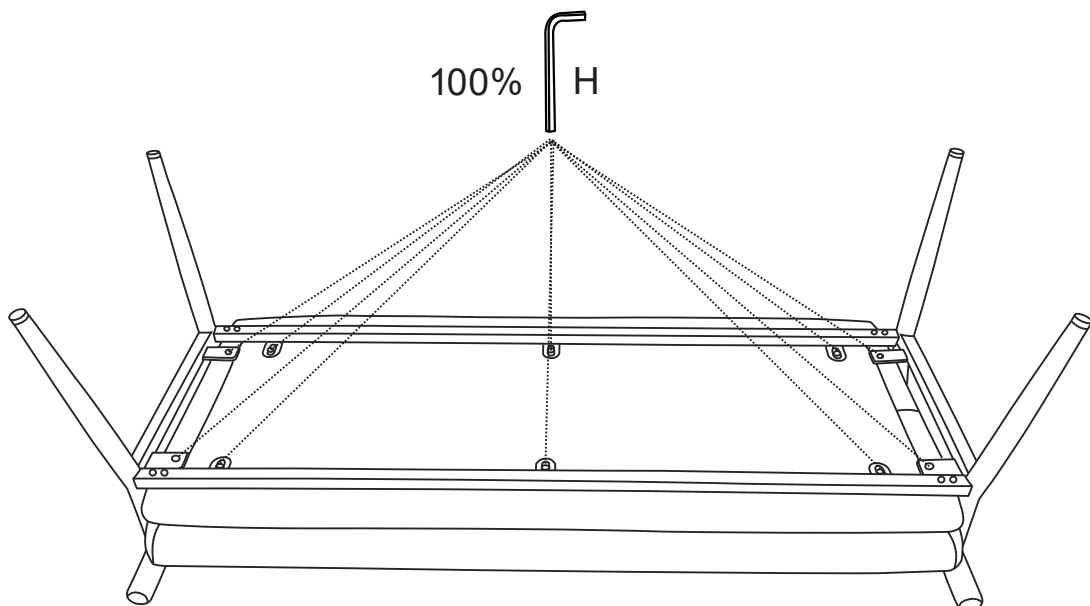Please ensure all screws are still securely tightened.



glit⁺zhome[®]

Glitzhome ,LLC.

Toll free 888-357-7263

customerservice@glitzhome.com