






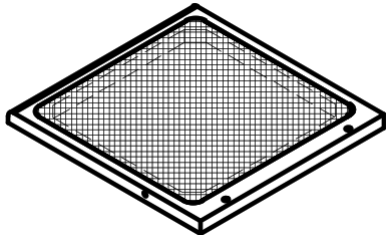
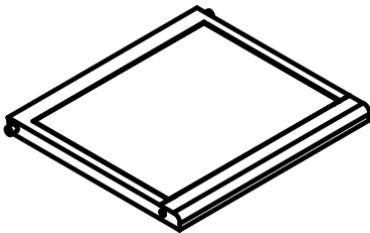
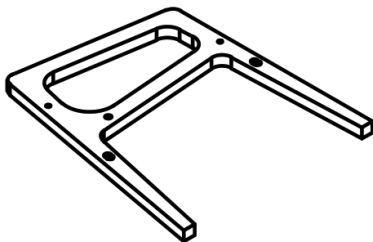
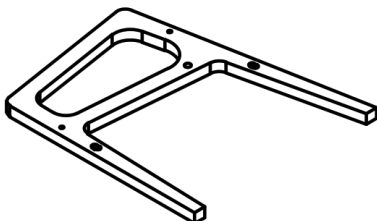
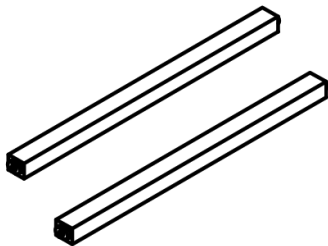
ASSEMBLY INSTRUCTIONS

1270015


HARDWARE

| | | | | |
|---|---|--|---|---|
| Ax10  M6 x 45 mm | Bx10  Ø13 x 1 mm | Cx1  4 mm | Dx4  Ø12 x 38 mm | Ex10  Ø13 x 7 mm |
|---|---|--|---|---|

PARTS


| | | |
|---|--|---|
| 1x1  | 2x1  | |
| 3x1  | 4x1  | 5x2  |

(1)

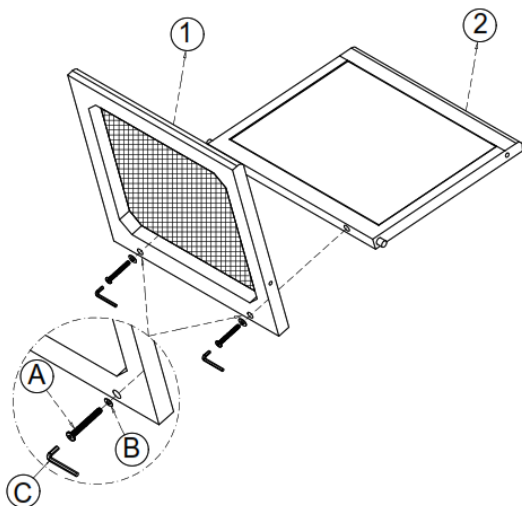


- Prepare the Backrest (1) and Seat (2), align the two holes then insert the Bolt (A) and Flat washer (B) then tighten with the Allen key (C).
- Do the same thing on the other hole.

(2)

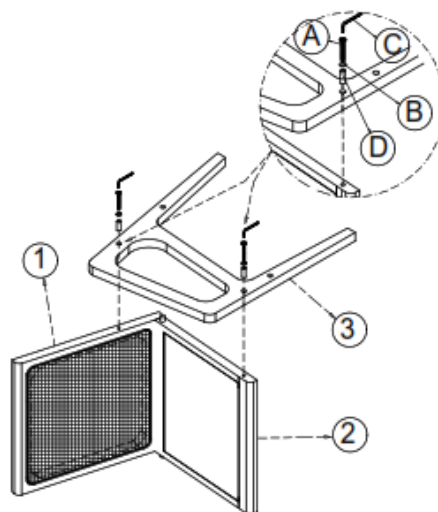


- Prepare the Left leg (3) and align it with the left side hole from assembly step 1.
- Insert the Bolt (A) and Flat washer (B) and Sleeve (D) into the holes provided then tighten with the Allen key (C).
- Do the same thing on the other hole.

(3)

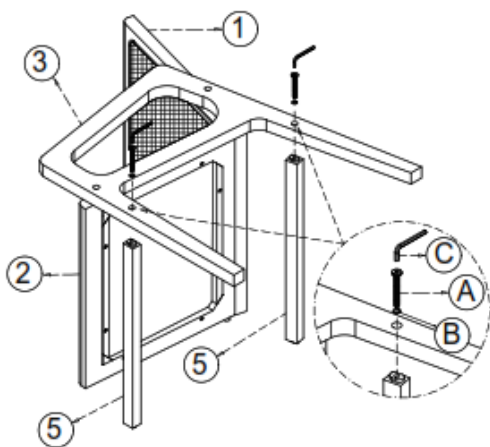


- Prepare the Crossbar (5), then align it with the bottom center bolt hole on the Left leg (3).
- Insert the Bolt (A) and Flat Washer (B) into the holes of the Left Leg (3) and Crossbar (5) then tighten with the Allen Key (C).
- Do the same thing on the other hole.

(4)

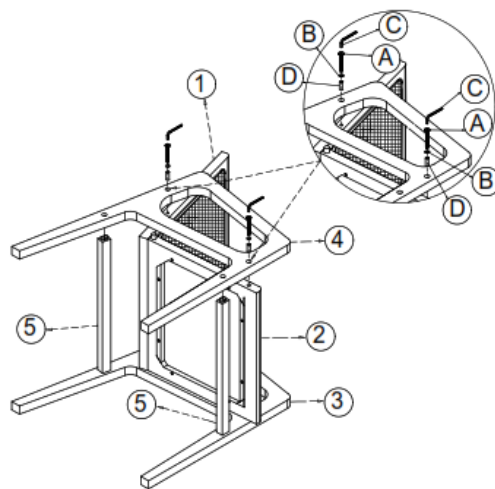


- Prepare the Right Leg (4) then install and align it with the available hole.
- Insert the Bolt (A) and Flat washer (B) and Sleeve (D) into the holes provided then tighten with the Allen key (C).
- Do the same thing on the other hole.

(5)

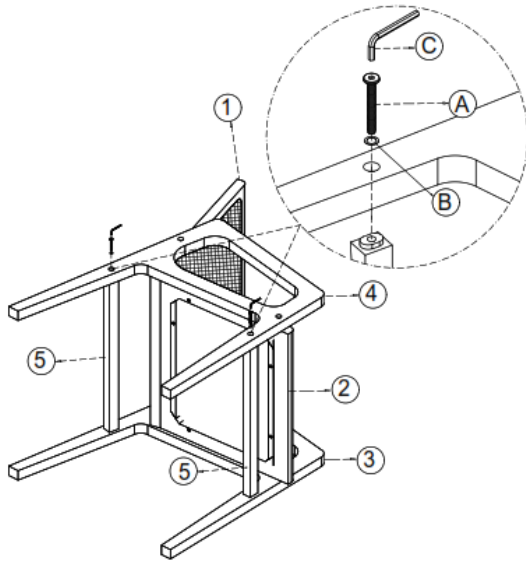


- Insert the Bolt (A) and Flat Washer (B) into the holes provided then tighten with the Allen Key (C).
- Do the same thing on the other hole.

(6)

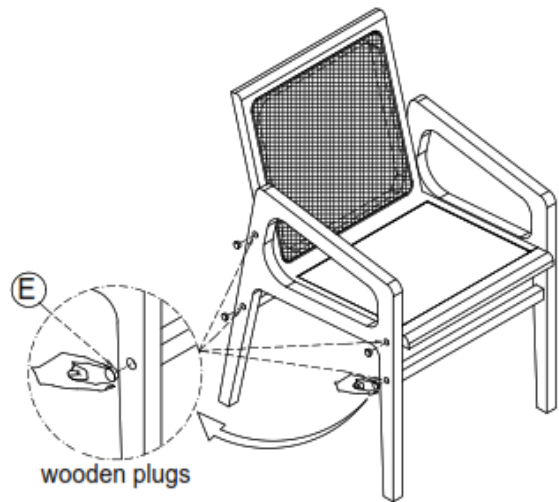

- Place the item in the position as shown in the picture then insert the wooden plug (E) into each hole resulting from the assembly step by step.
- Make sure all holes are tightly closed with Wooden plugs (E).

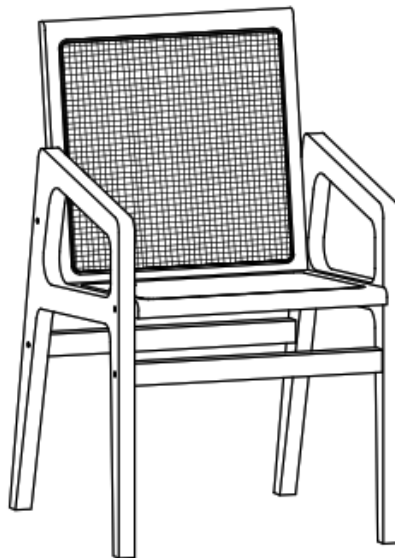

- Completed