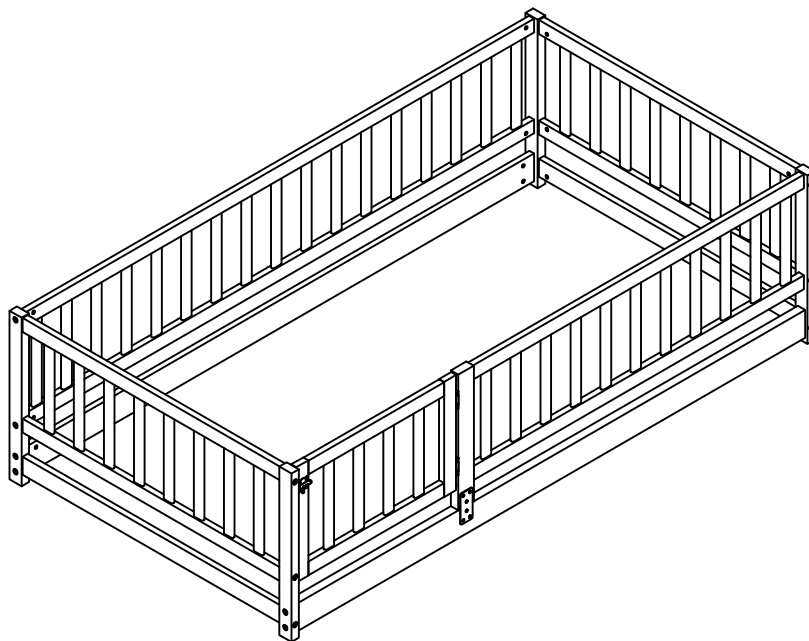



ASSEMBLY INSTRUCTIONS

TWIN FLOOR BED - NO SLATS














BEDT090B08/BEDT090B77





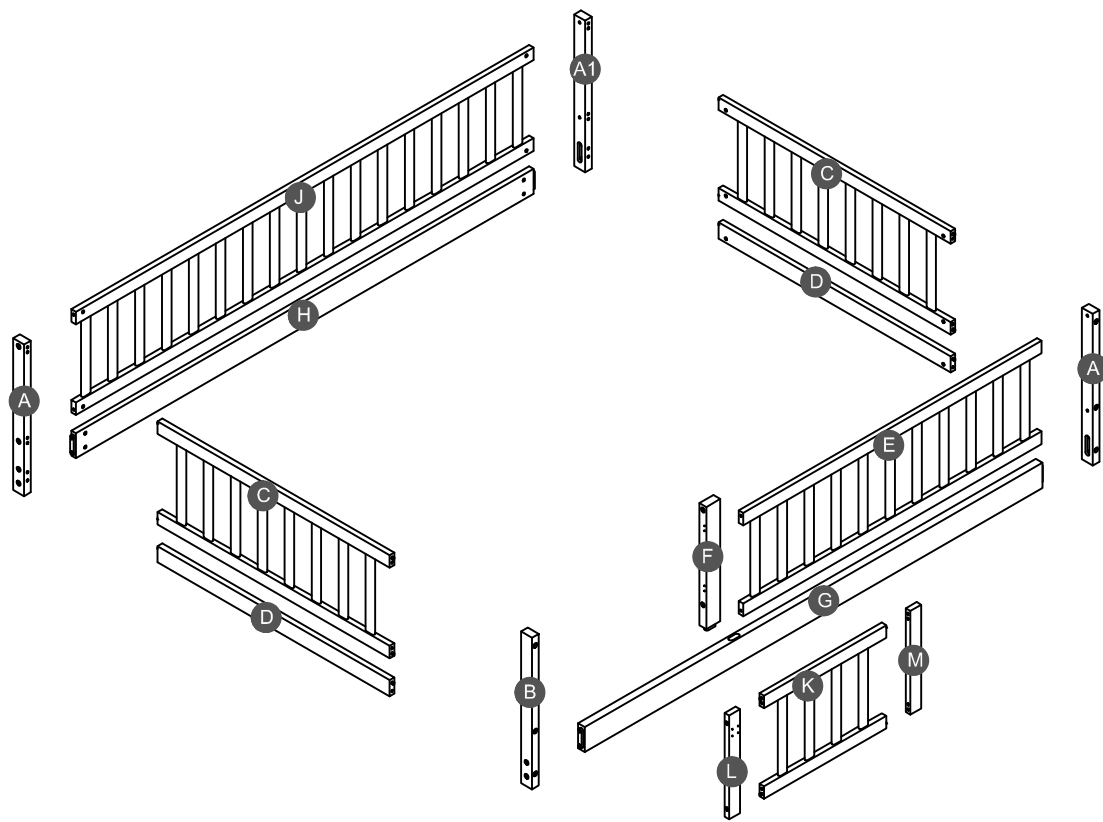
Detail View




Part List

A  Leg (Left Back/Right front) - 2pcs	A1  Leg (Right Back) - 1pc	B  Leg (Left front) - 1pc
C  Frame HB/FB - 2pcs	D  Lower horizontal bar HB/FB - 2pcs	E  Short guard rail (Front) - 1pc
F  Vertical bar (Front) - 1pc	G  Side rail (Front) - 1pc	H  Side rail (Back) - 1pc
J  Long guard rail (Back) - 1pc	K  Door frame - 1pc	L  Vertical rail of door (Left) - 1pc
M  Vertical rail of door (Right) - 1pc		

Hardware List

1  (Ø15)1/4"*100mm Hex-Head bolts (2pcs)	2  (Ø15)1/4"*80mm Hex-Head bolts (26pcs)	3  (Ø12)1/4"*70mm Hex-Head bolts (4pcs)
4  1/4"*15 (9.5mm) Horizontal-Hole bolts (32pcs)	5  (1/4")4.5*58mm Allen key (1pc)	6  55*27.5*7mm(180°) Hinges (2pcs)
7  60*38*10mm Lock (1pc)	8  100*44*1.5mm Metal bracket (1pc)	9  100*44*1.5mm Metal bracket (1pc)
10  Ø3.5*15mm Wood screws (24pcs)		


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

2		4	
12PCS		12PCS	

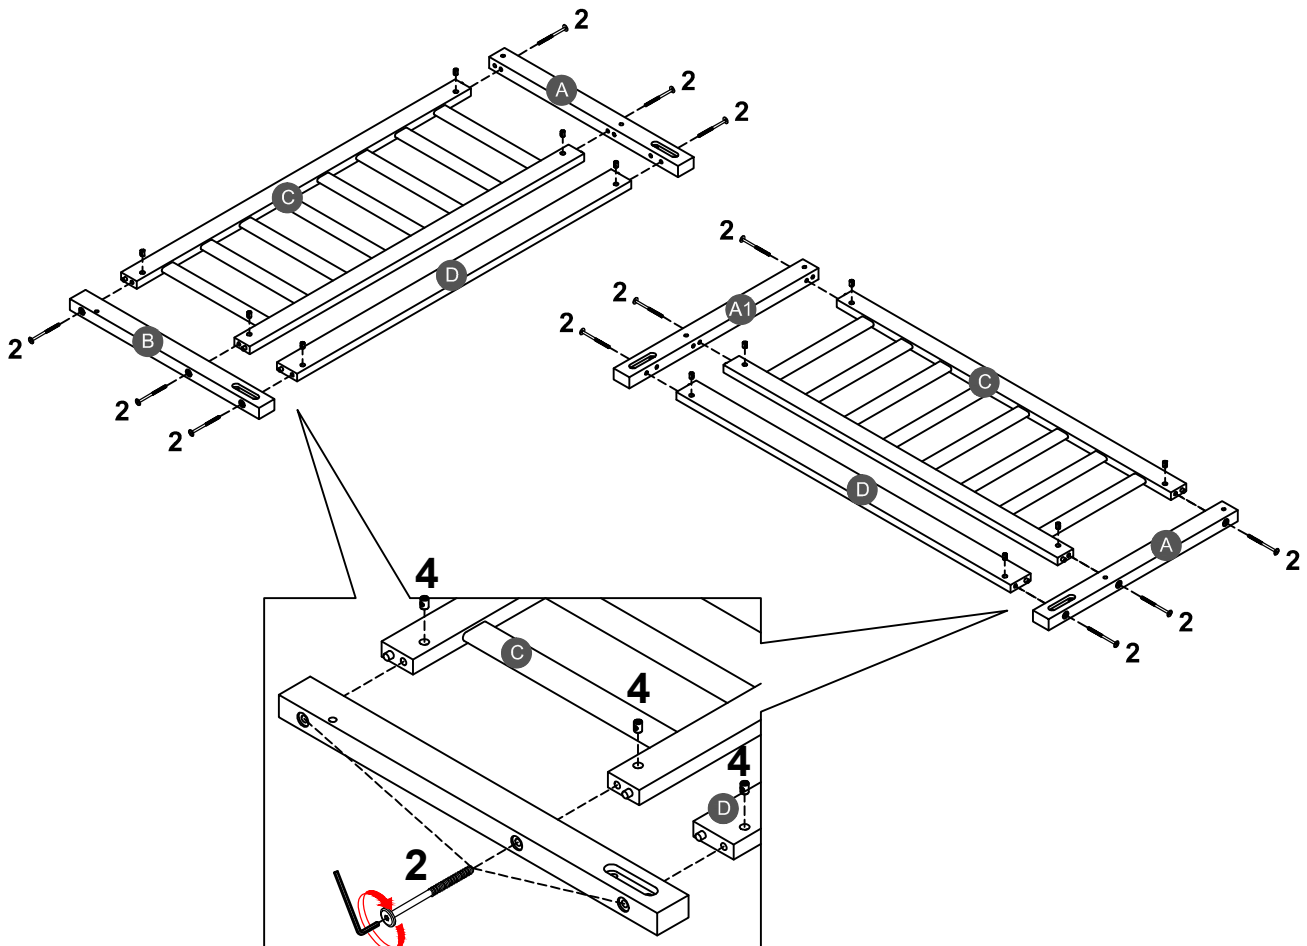


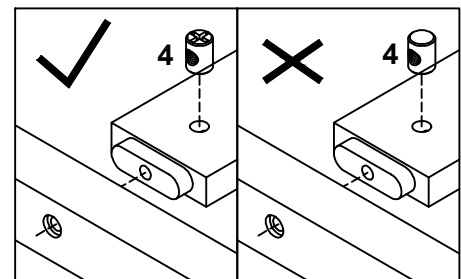Note: Part 4 will face up with the "x" mark on it, otherwise it cannot be tightened




STEP 2:


1		4	
2PCS		2PCS	

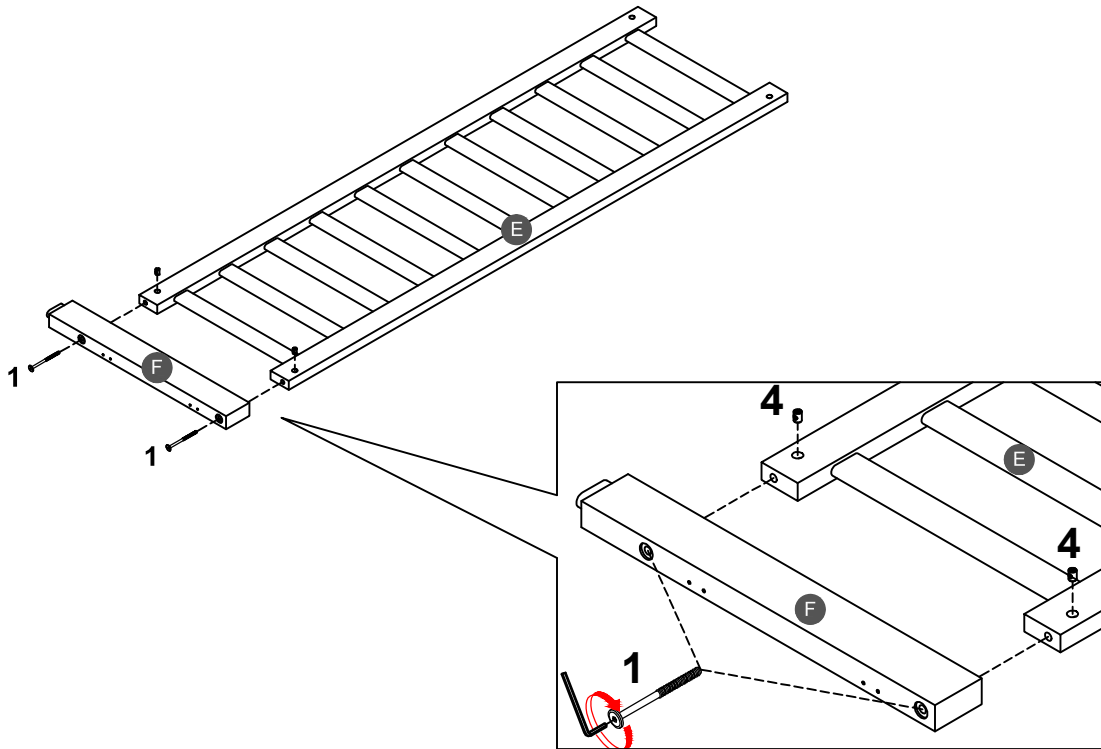


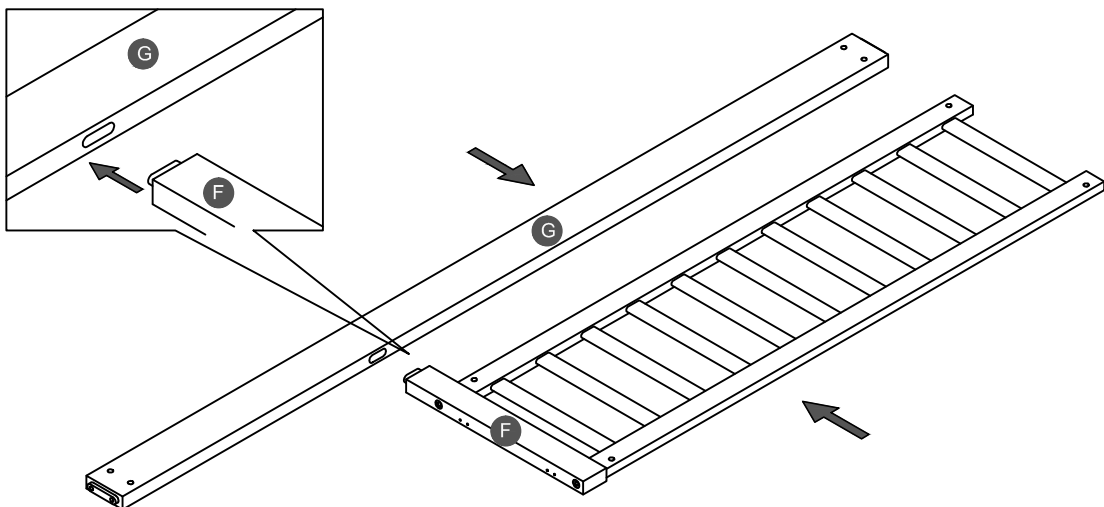
STEP 3:



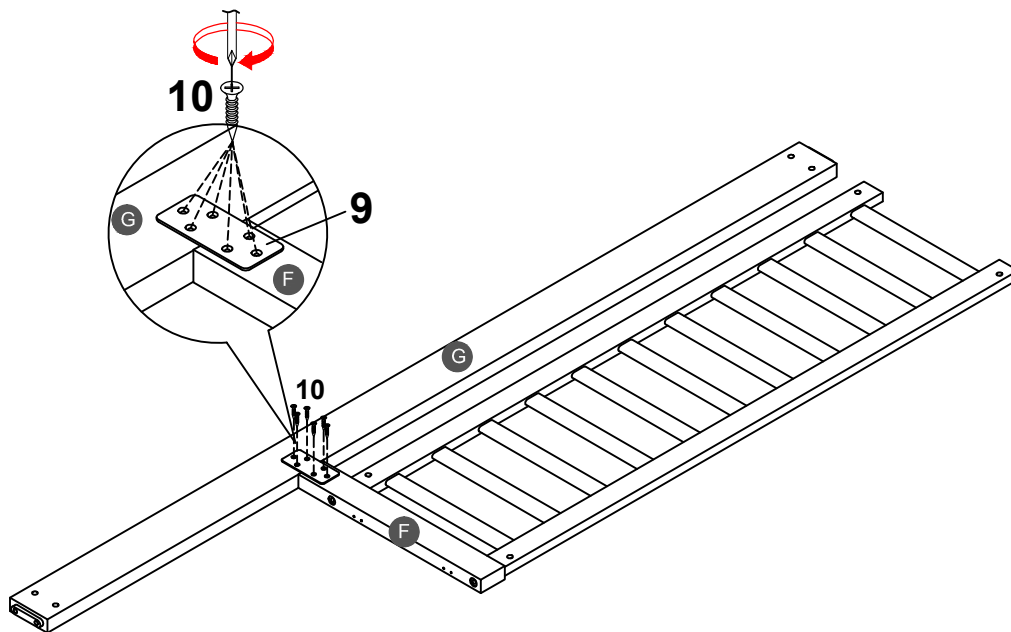STEP 4:


**9****1PC****10****6PCS**

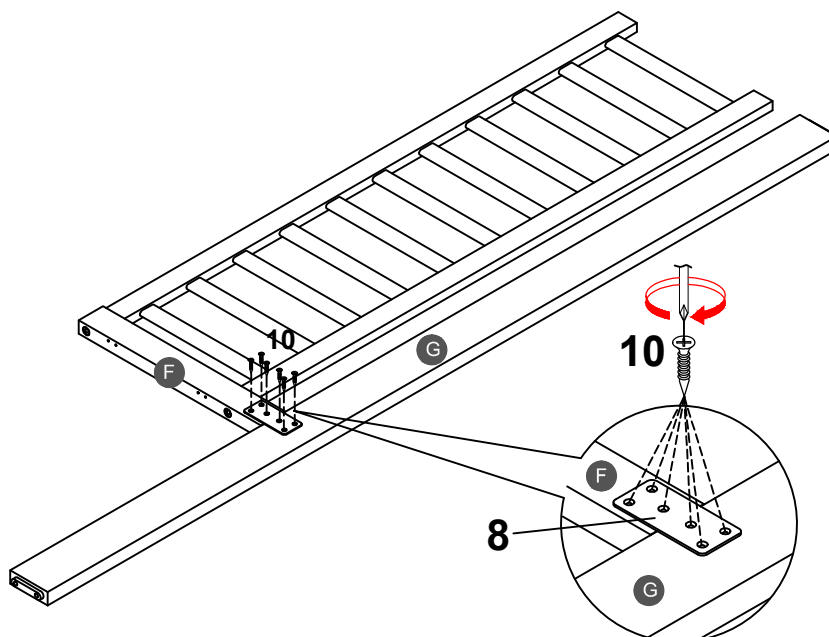STEP 5:


**8****1PC****10****6PCS**

STEP 6:

2		4	
14PCS		14PCS	

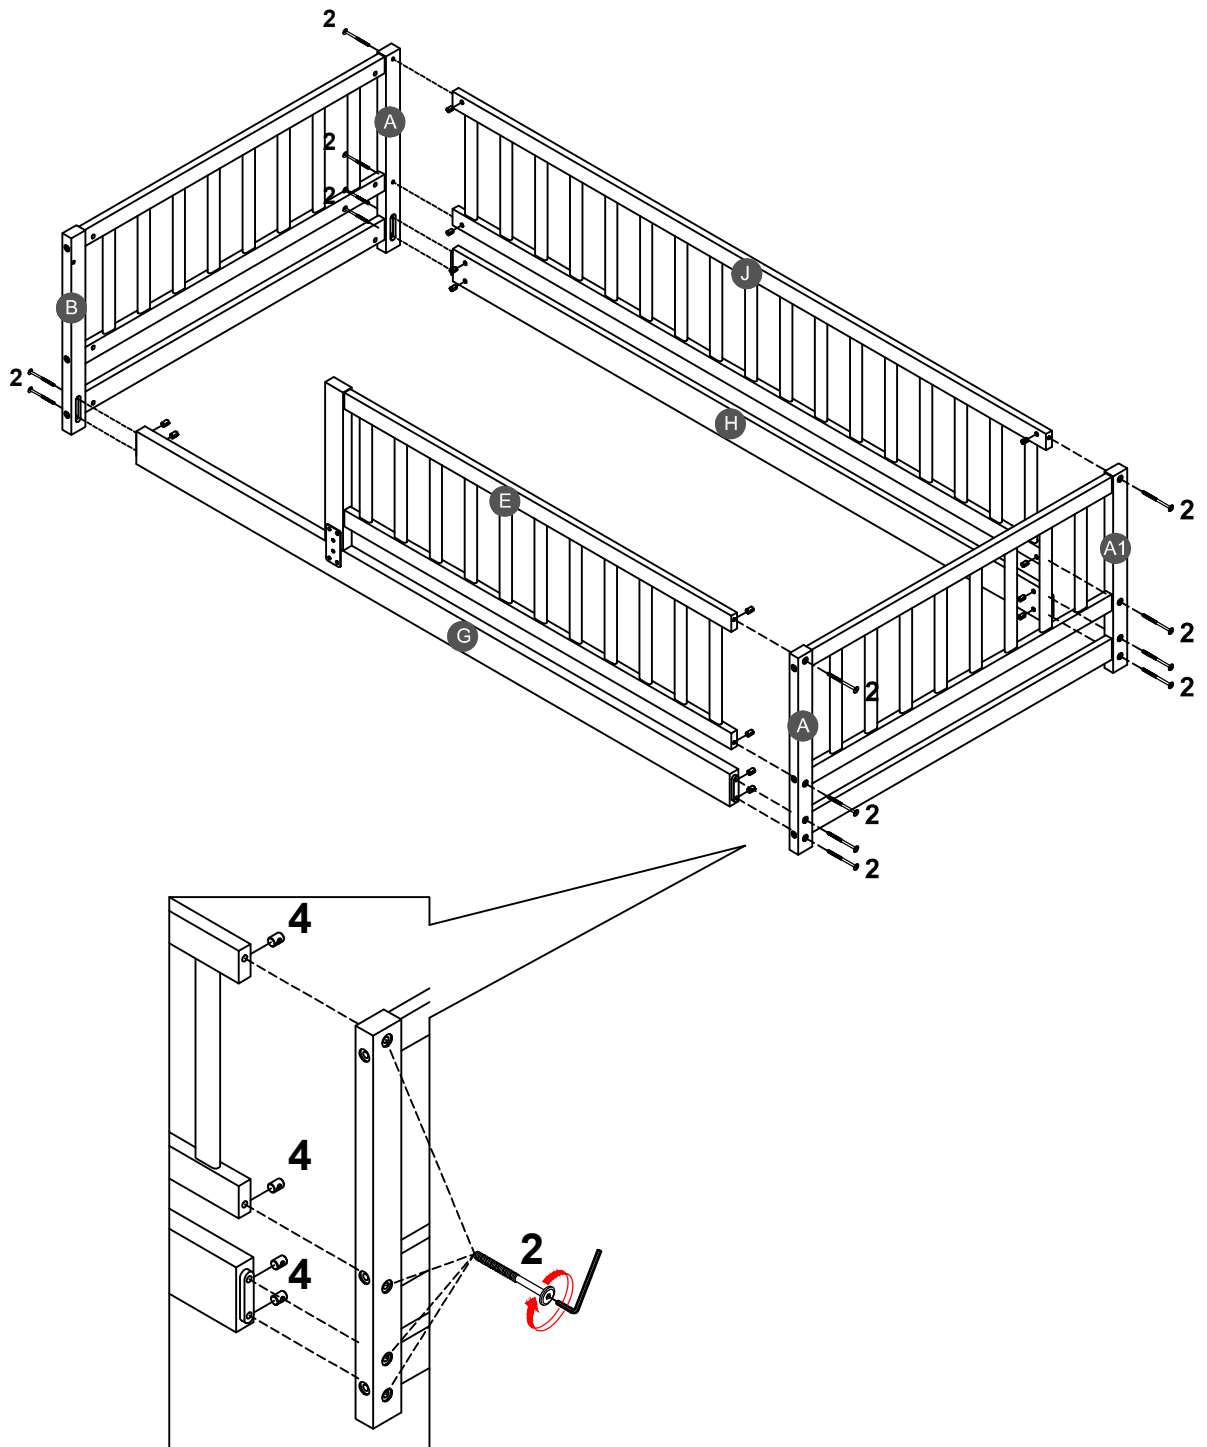


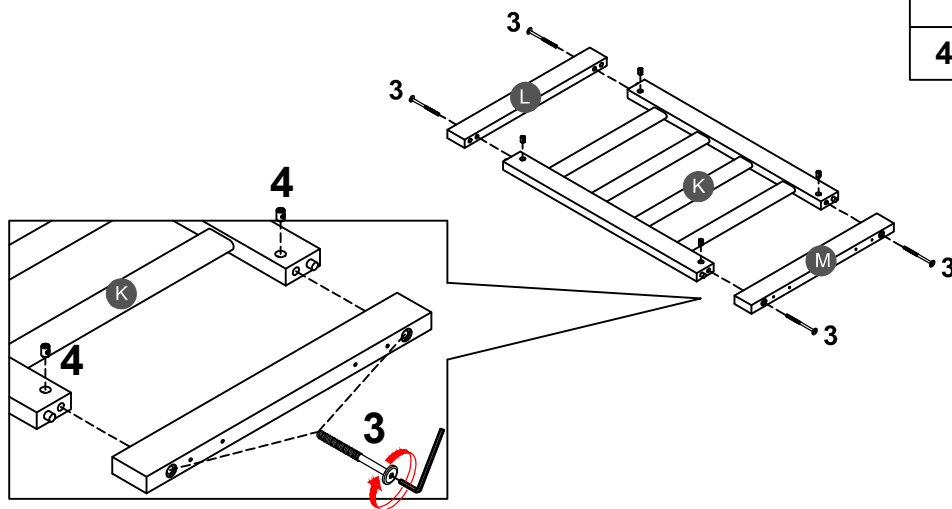STEP 7:




3		4	
4PCS		4PCS	

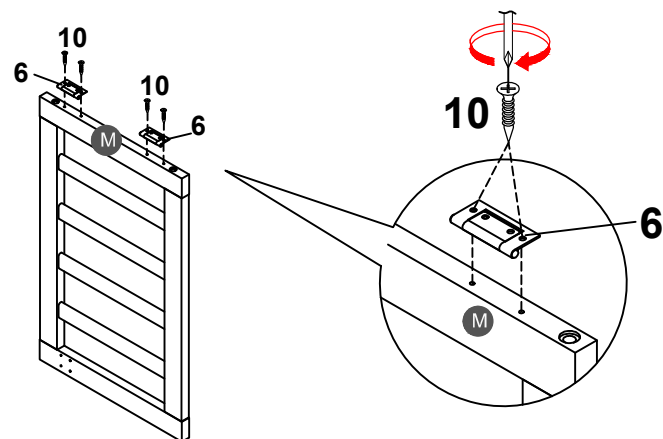
STEP 8:




6		10	
2PCS		4PCS	

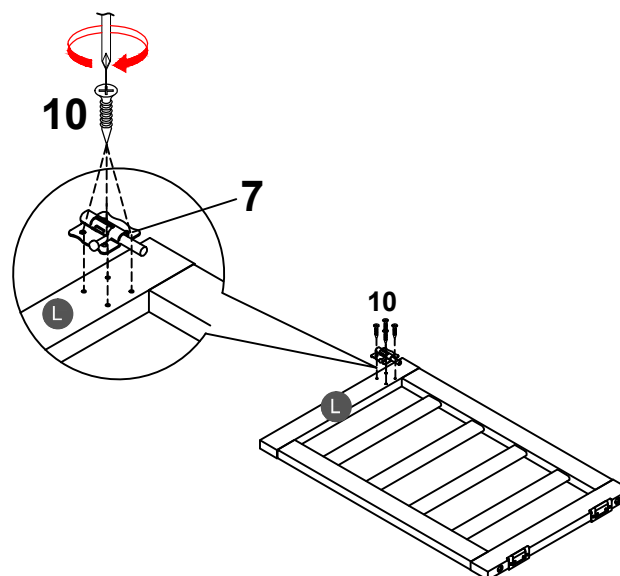STEP 9:



7		10	
1PC		4PCS	

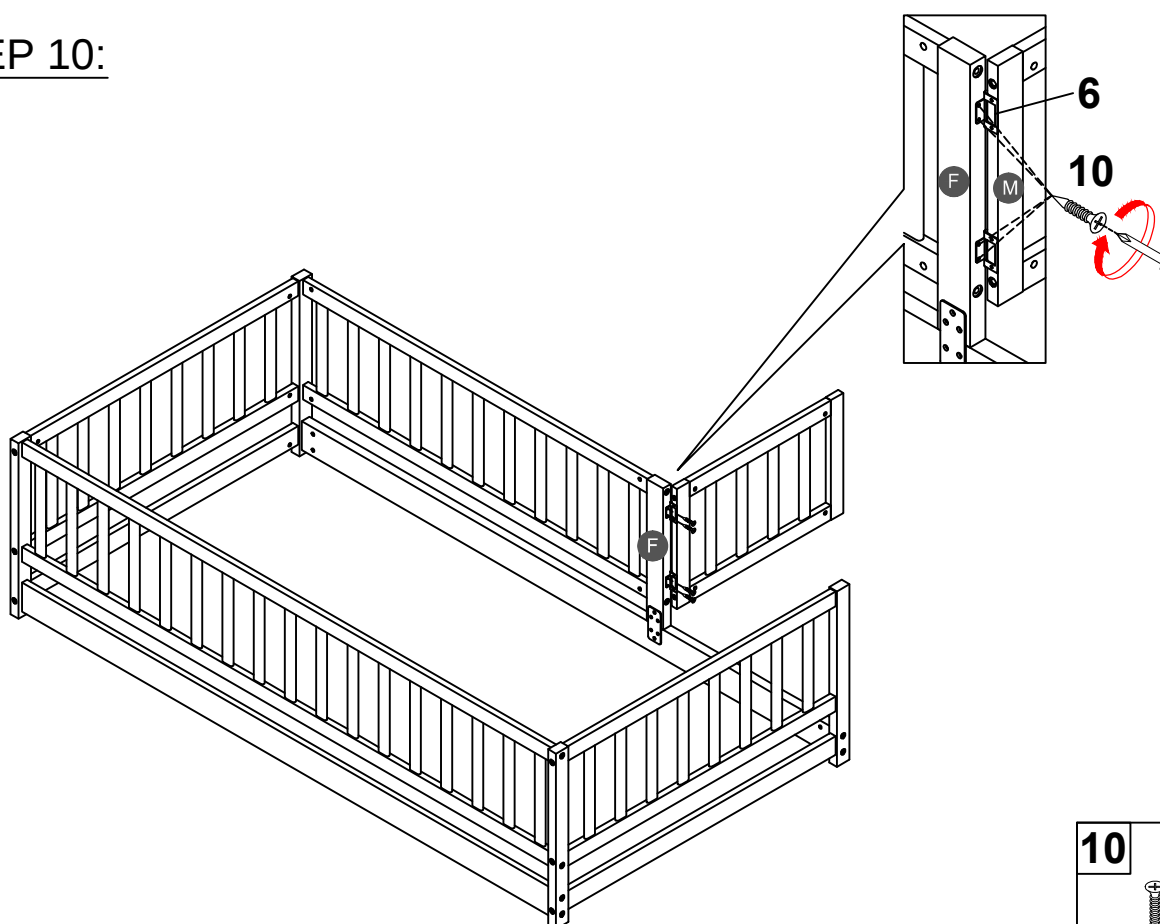STEP 10:



10



4PCS

STEP 11:

