
ASSEMBLY INSTRUCTION N723P243195 N723P243197

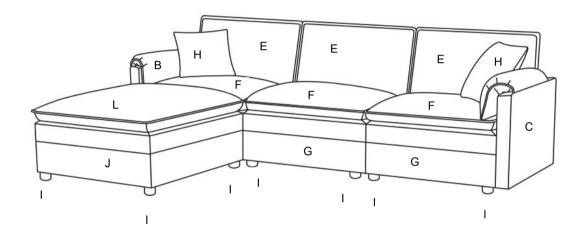

Return &warranty policy:

- -we strive to offer the highest quality products, and we also try our best to satisfy each and every customer that orders from us with replacement parts or service as needed.
- -If the item is damaged or defective, please take photos as evidence for replacements and refunds.
- -please do not return to store, contact the seller if you have any troubles with this product.

				HARDW	/ARE	LIST			
NO	NO DESCRIPTION		SKETCH	QTY	NO	DESCRIPTION	SKETCH	QTY	
1	Plastic Wasl	Plastic Washer		18PCS	6	Spring Washer(M8)	20PCS	
2	Bolt(M8*40M	1M)	•	14PCS	7	Nut(M8)	6	11PCS	
3	Bolt(M8*80M	1M)	•	4PCS	8	Allen Wrench(S	55)	2PCS	
4	Double End Bolt(M8*70M		•	7PCS	9	Socket Spanne	er 🎳	1PC	
⑤ Flat Washer(M8)		M8)	0	28PCS					
PARTS LIST									
NO	DESCRIPTION		SKETCH	QTY	NO	DESCRIPTION	SKETCH	QTY	
Α	Backrest			3PCS	G	Seat Frame		3PCS	
В	Left Armrest		P	1PC	Н	Pillow		2PCS	
С	Right Armrest			1PC	ı	Leg	\Diamond	16PCS	
D	Back and Seat Cushion Package			3PCS	J	Ottoman Seat Frame		1PC	
E	Back Cushion after decompression from(D)			3PCS	к	Ottoman Seat Cushion Package		1PC	
F	Seat Cushion after decompression from(D)	_		3PCS	L	Ottoman Seat Cushion after decompression from(K)		1PC	

	HARDWARE LIST N723P243195							
NO	DESCRIPTION	SKETCH	QTY	NO	DESCRIPTION	SKETCH	QTY	
1)	Plastic Washer		9PCS	6	Spring Washer(M8)	o o	15PCS	
2	Bolt(M8*40MM)	•	9PCS	7	Nut(M8)		9PCS	
3	Bolt(M8*80MM)	•	2PCS	8	Allen Wrench(S5)	/	1PC	
4	Double Ended Bolt(M8*70MM)	`	7PCS	9	Socket Spanner	8	1PC	
(5)	Flat Washer(M8)	0	19PCS					

PARTS LIST N723P243195


NO	DESCRIPTION	SKETCH	QTY
А	Backrest		2
В	Left Armrest		1
С	Right Armrest		1
D	Back and Seat Cushion Package		2
Е	Back Cushion after decompression from(D)		2
F	Seat Cushion after decompression from(D)		2
G	Seat Frame		2
Н	Pillow		2
I	Leg	\triangleright	8

	HARDWARE LIST N723P243197							
NO	DESCRIPTION	SKETCH	QTY	NO	DESCRIPTION	SKETCH	QTY	
1)	Plastic Washer		9PCS	6	Spring Washer(M8)	၁	5PCS	
2	Bolt(M8*40MM)	∞	5PCS	7	Nut(M8)		2PCS	
3	Bolt(M8*80MM)	•	2PCS	8	Allen Wrench(S5)		1PC	
(5)	Flat Washer(M8)	0	9PCS					


PARTS LIST N723P243197

			1
NO	DESCRIPTION	SKETCH	QTY
Α	Backrest		1
D	Back and Seat Cushion Package		1
Е	Back Cushion after decompression from(D)		1
F	Seat Cushion after decompression from(D)		1
G	Seat Frame		1
J	Ottoman Seat Frame		1
K	Ottoman Seat Cushion Package		1
L	Ottoman Seat Cushion after decompression from(K)		1
I	Leg	\Diamond	8
ĺ			




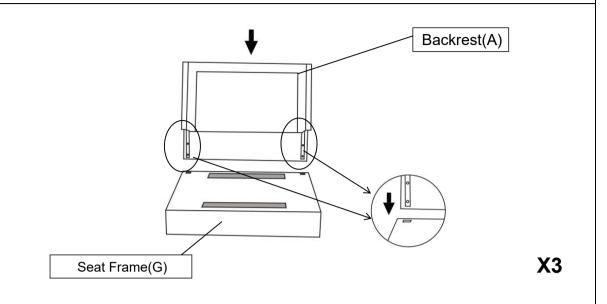


DIAGRAEM 2 Install the Backrest(A) to Seat Frame(G) using Bolts(②) ,Flat Washers(⑤) ,Sping Washers (⑥) with Allen Wrench(⑧),turning clockwise until tight.

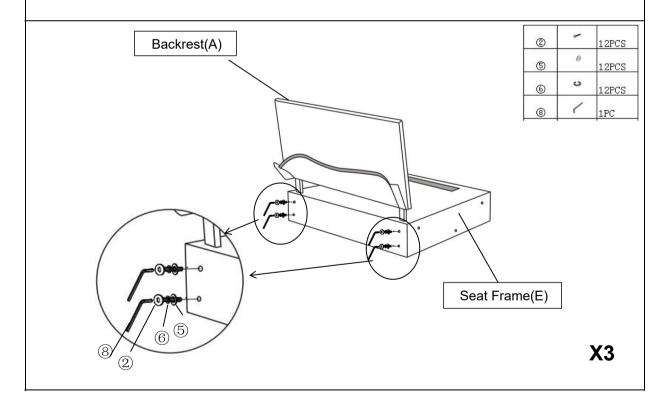


DIAGRAEM 3 Attach the magic tape to the back of the Seat Frame(G). Assemble the remaining seats according to the above steps.

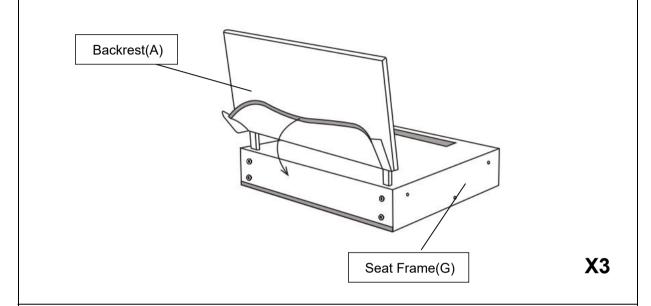

DIAGRAEM 4 Insert the Double Ended Bolts(M8*70MM) (④) into the hole of the Left Armrest (B) and turning clockwise until tight.

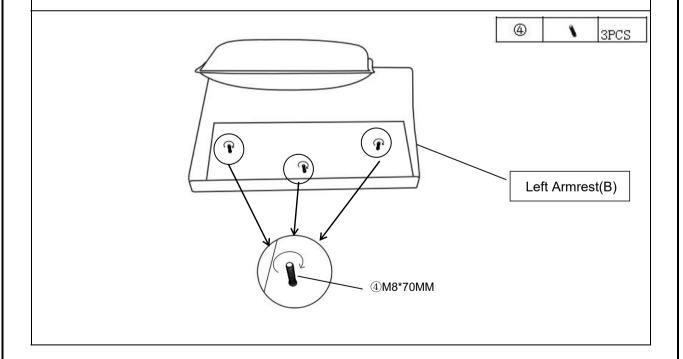



DIAGRAEM 5 Attach the Seat Frame(G) to the Left Armrest(B) using Nuts $(\fill \cite{Theorem})$, Flat Washers($\fill \cite{Theorem}$) and Spring Washers($\fill \cite{Theorem}$) with Socket Spanner($\fill \cite{Theorem}$), turning clockwise until tight.

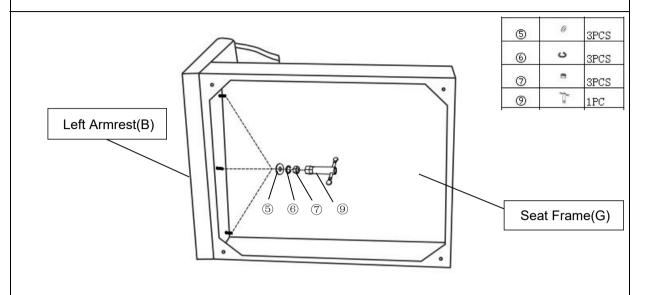


DIAGRAEM 6 Place the Plastic Washers(①) on the legs(I) .Then attach the legs(I) to the sofa.

Note: The use of Plastic Washer(1) are OPTIONAL and are especially useful to help alleviate slight wobbleness. Some Legs may need more than one Plastic Washer(1) while some Legs may not need any.

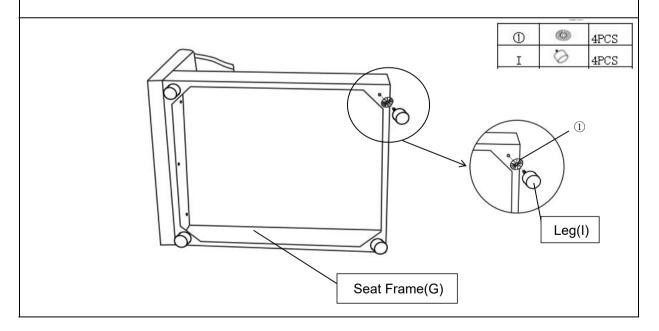


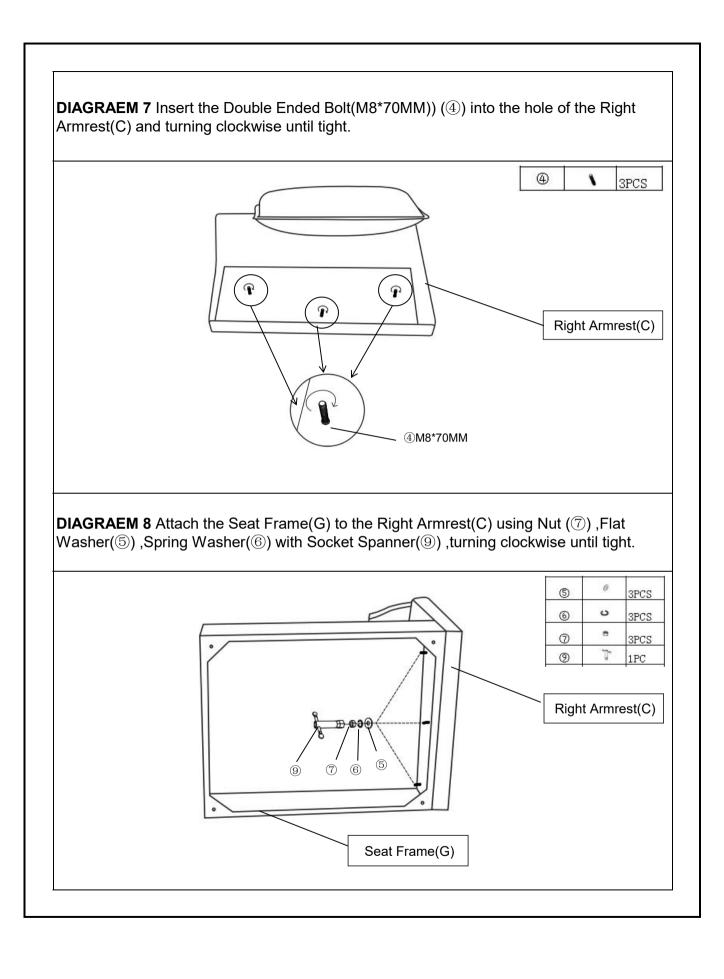


DIAGRAEM 9 Repeat the Step 6 to install the 4pcs Legs(I) to Seat Frame(G).

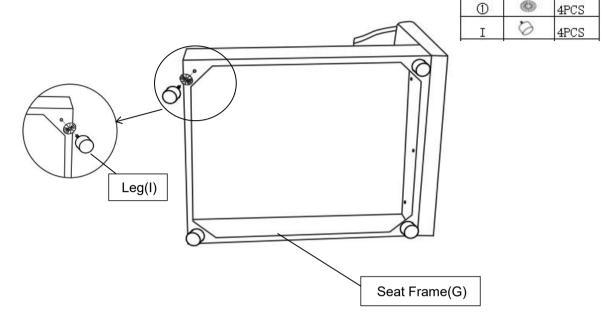


DIAGRAEM 10 Repeat the Step 6 to install the 4pcs Legs(I) to Seat Frame(G).

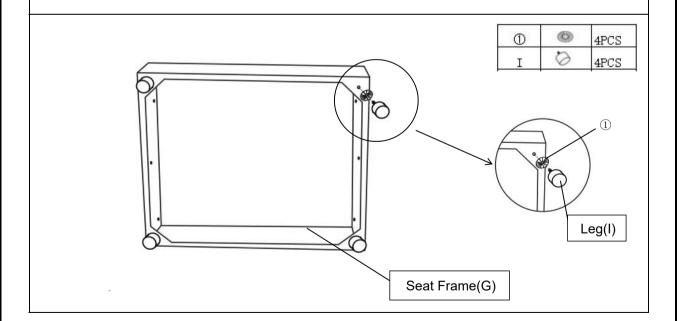

DIAGRAEM 11 Connect all of the fully assembled Seat Frames one by one using the Bolts(③) ,Flat Washers(⑤) with Allen Wrench(⑧),the other side using Nuts (⑦),Flat Washers(⑤) with Socket Spanner(⑨) as picture showned,turning clockwise until tight.

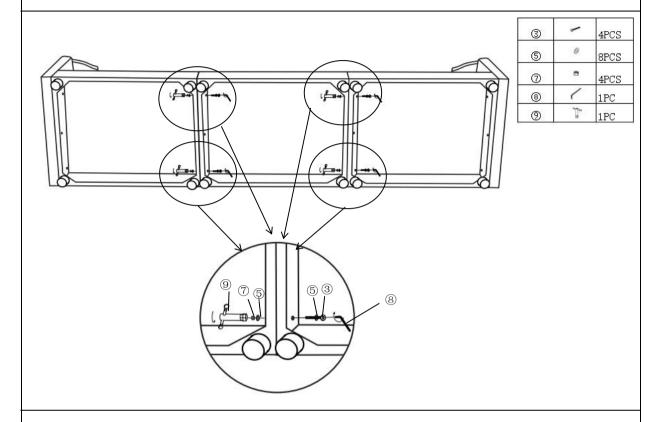


DIAGRAEM 12 Cut the Back and Seat Cushion Package (D), then take out 3 pcs Back Cushions (E) and 3 pcs Seat Cushions (F). Full decompression may take up to 72 hours.

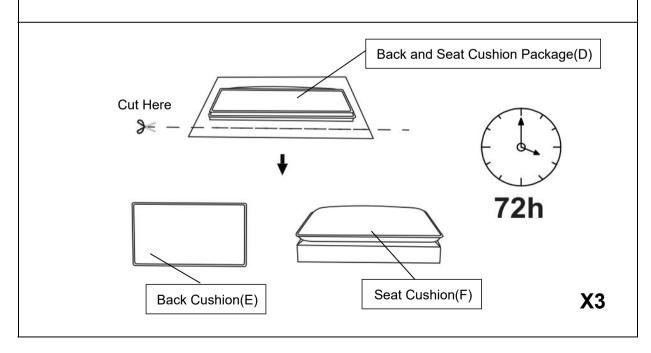


DIAGRAEM 13 Put the 3pcs Seat Cushions(F) and 3pcs Back Cushions(E) on the Sofa. Seat Cushion(F) Back Cushion(E) DIAGRAEM 14 Put the 2 pcs Pillows(H) on the Sofa. Pillow(H)

DIAGRAEM 15 Repeat the Step 6 to install the 4pcs Legs(I) to Ottoman Seat Frame(J).

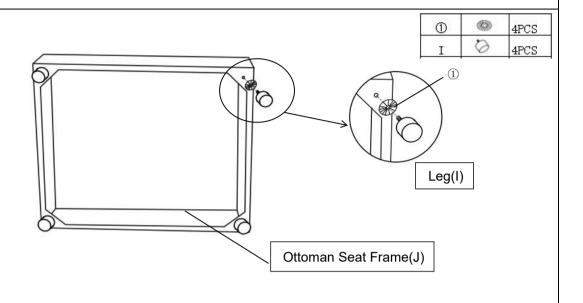

DIAGRAEM 16 Open the Ottoman Seat Cushion Package (K), then take out Ottoman Seat Cushion (L) .Full decompression may take up to 72 hours.

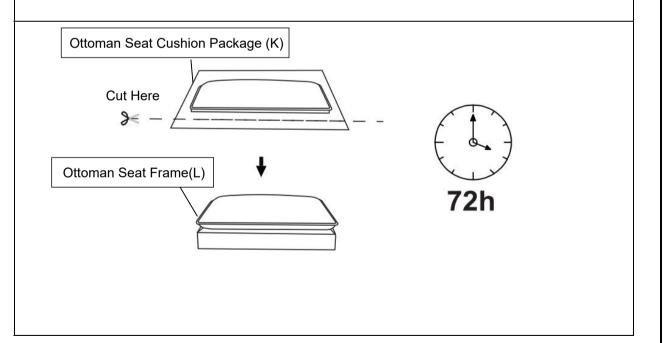

DIAGRAEM 17 Put the Ottoman Seat Cushion (L) on the Ottoman Seat Frame(J). Your Ottoman is ready for use.


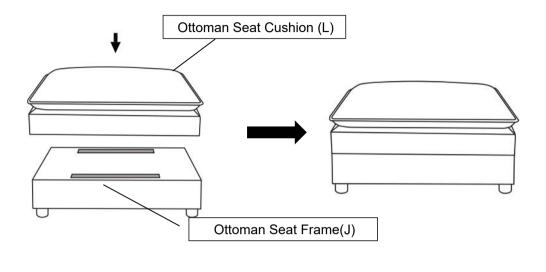


DIAGRAM 18 Your Sectional Sofa is ready for use. Your Sectional Sofa can only be used on a flat, level surface.

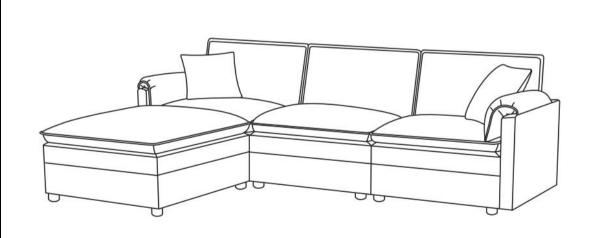

Complete