



# ASSEMBLY INSTRUCTIONS

## Twin Low Loft Bed with Cabinet, 4-Drawer Chest and Desk

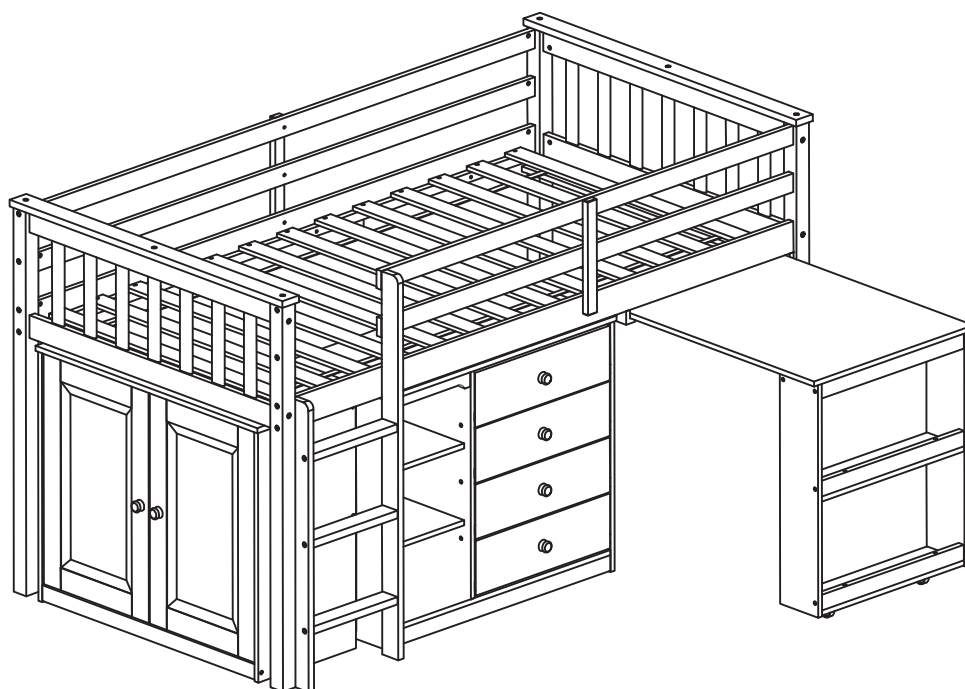

**MK 70087**

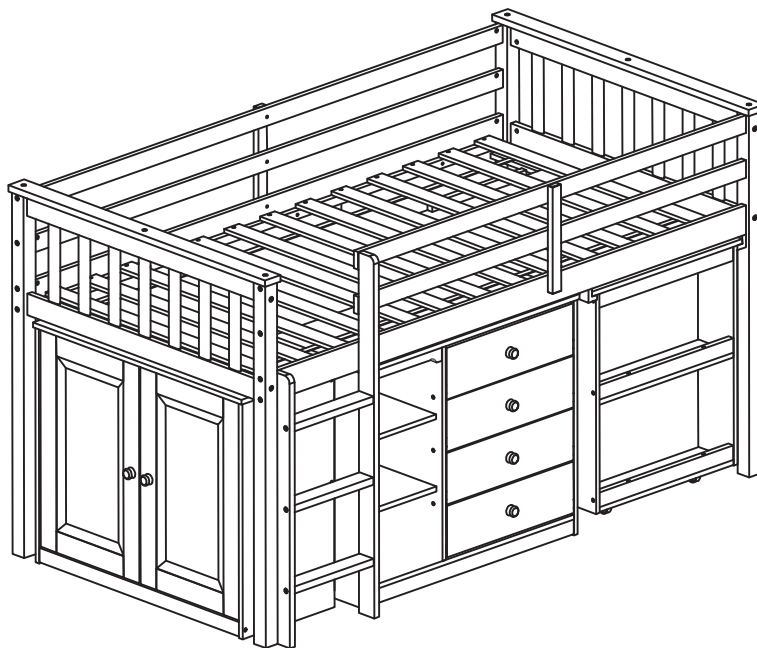

# **SAFETY WARNING**



1. This bed is designed for use only mattress (es) meeting the following specifications on the upper bunk, and lower bunk:


## Up bed (Bunk bed and tribed included)

Bed type	Length	With	Thickness
Twin Standard	74"-75"	38 1/2"	6" max

2. Replacement parts, including additional guardrails, maybe obtained from any of our dealers of GigaCloud Technology, (USA) / 108-118 BREA CANYON RD, BUILDING 12, WALNUT, CA 91789.
3. Follow the information on the warnings appearing on the upper bunk bed end structure and on the carton. Do not remove warning label from bed.
4. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
5. Surface of mattress must be at least 5" (127mm) below the upper edge of guardrails.
6. Do not allow children under 6 years of age to use the upper bunk.
7. Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
8. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
9. Always use the ladder for entering and leaving the upper bunk.
10. Do not use substitute part. Contact the manufacture or dealer for replacement part.
11. Use of a night light may provide added safety precaution for a child using the upper bunk.
12. Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
13. The use of water or sleep flotation mattresses is prohibited.
14. **STRANGULATION HAZARD** - Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hook, belts and jump ropes.
15. Keep these instruction for future reference.








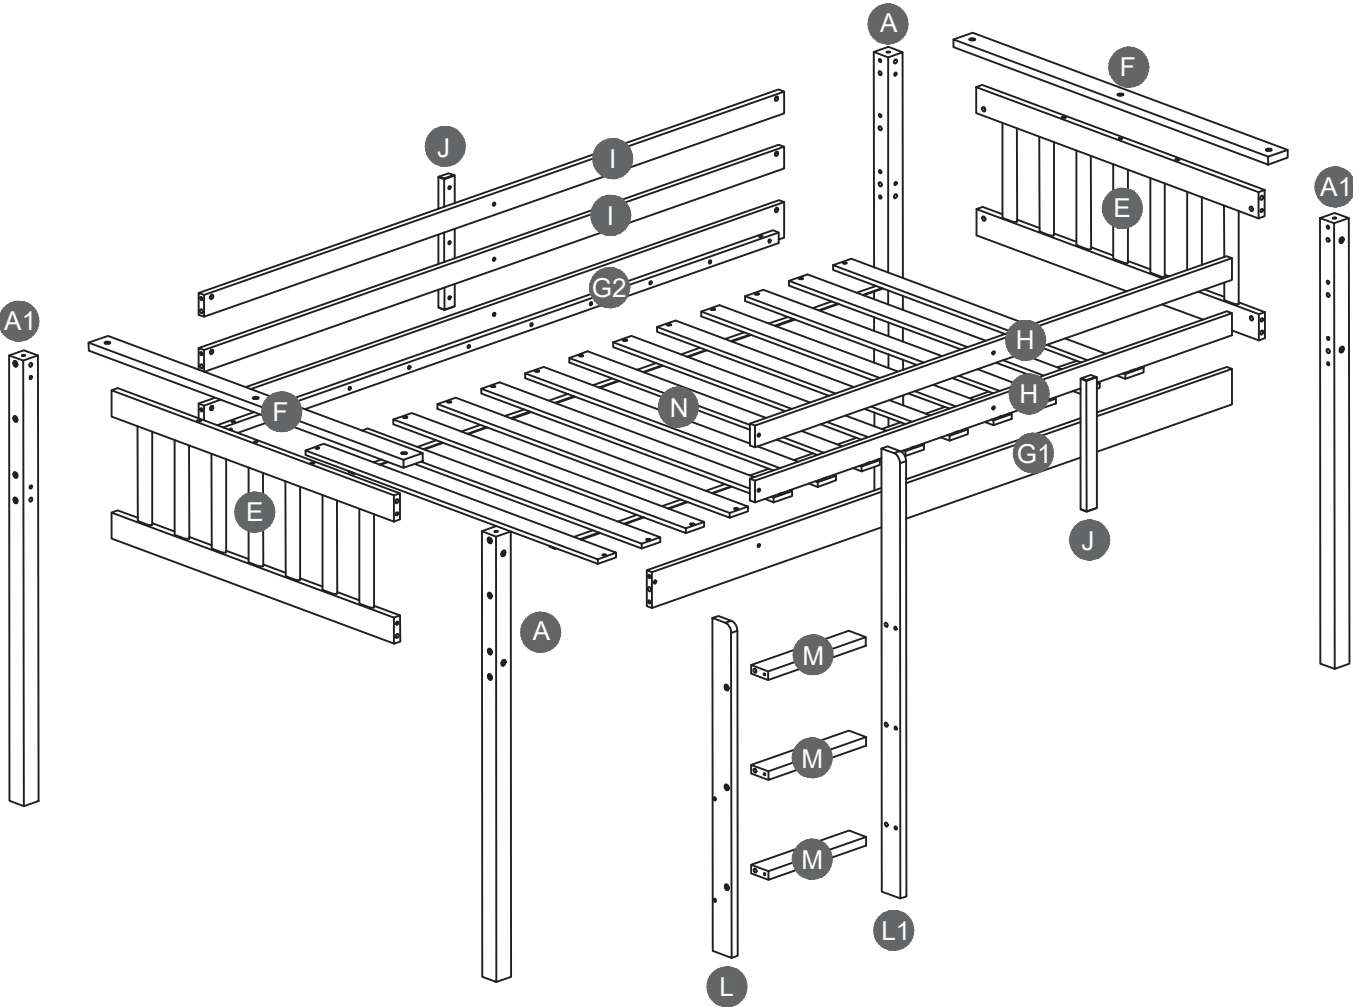




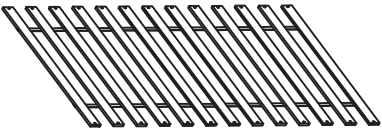
# Detail View

## Bed





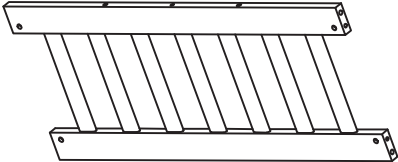







## Part List (Bed)


### Hardware List MK 70087 (1/3)

<b>A</b>  <p>Leg - 2pcs</p>	<b>A1</b>  <p>Leg - 2pcs</p>
<b>E</b>  <p>Hb. Fb. Panel - 2pcs</p>	<b>F</b>  <p>Hb. Fb. Top Panel - 2pcs</p>
<b>G1</b>  <p>Side Rail (Front) - 1pc</p>	<b>G2</b>  <p>Side Rail (Back) - 1pc</p>
<b>H</b>  <p>Guardrail Upper (Front) - 2pcs</p>	<b>I</b>  <p>Guardrail Upper (Back) - 2pcs</p>
<b>J</b>  <p>Guardrail Spindle - 2pcs</p>	<b>L</b>  <p>Ladder Rail (Left) - 1pc</p>
<b>L1</b>  <p>Ladder Rail (Right) - 1pc</p>	<b>M</b>  <p>Ladder Step - 3pcs</p>
<b>N</b>  <p>Bed Slats - 1 Set</p>	

# Hardware List (Bed)


<b>1</b>  M6 x 90mm JCBC (22pcs)	<b>2</b>  M6 x 50mm JCBC-W (10pcs)	<b>3</b>  M6 x 15mm Barrel Nut (22pcs)
<b>4</b>  M10 x 30mm Wood Dowel (28pcs)	<b>5</b>  M4 x 38mm CSK Screw (2pcs)	<b>6</b>  M4 x 25mm CSK Screw (22pcs)
<b>7</b>  M6 x 30mm JCBC (6pcs)	<b>8</b>  M6 x 30mm JCBC-W (10pcs)	<b>9</b>  Sticker Cap (12pcs)
<b>10</b>  M4 Allen Key (1pc)		

## ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )




**PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !**



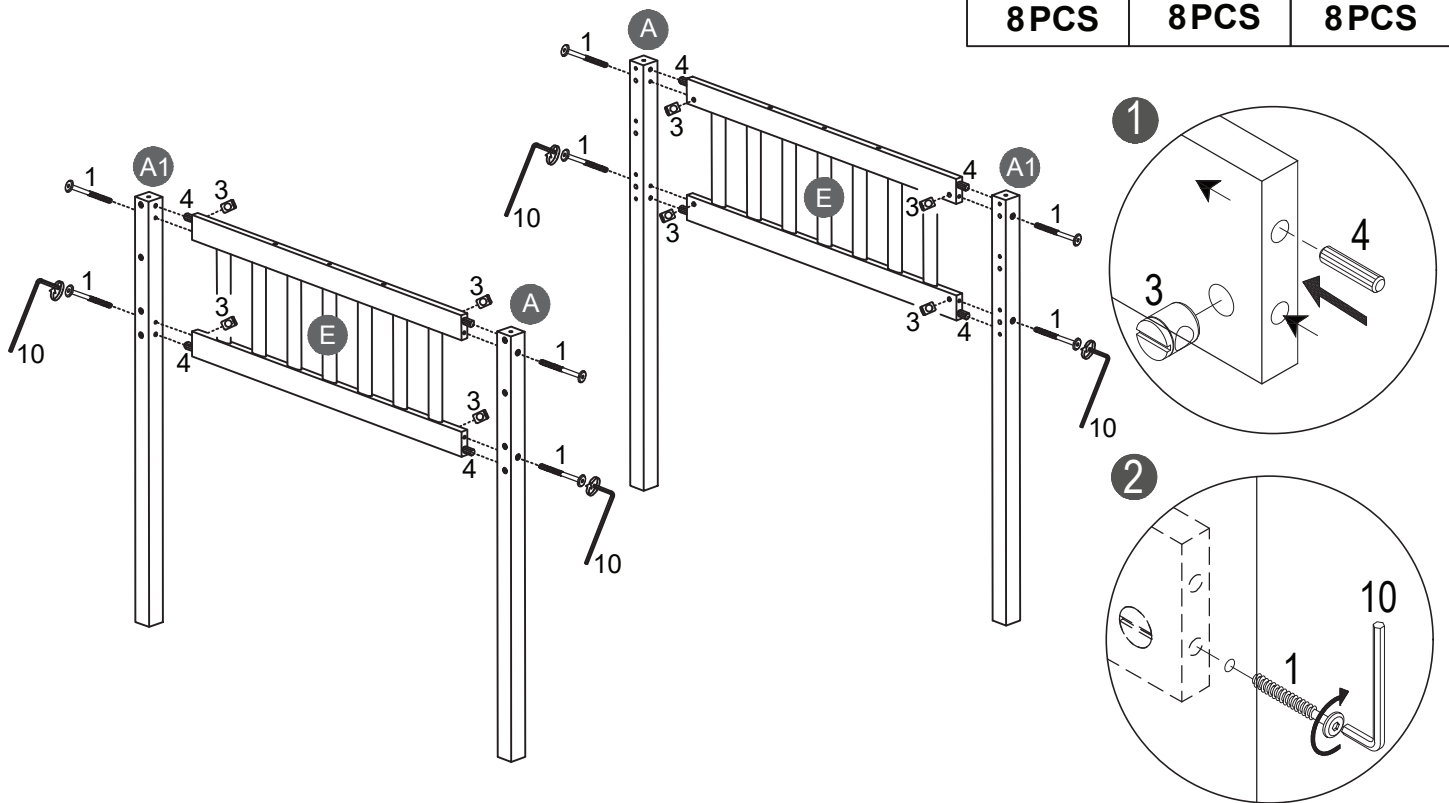

## STEP 1:


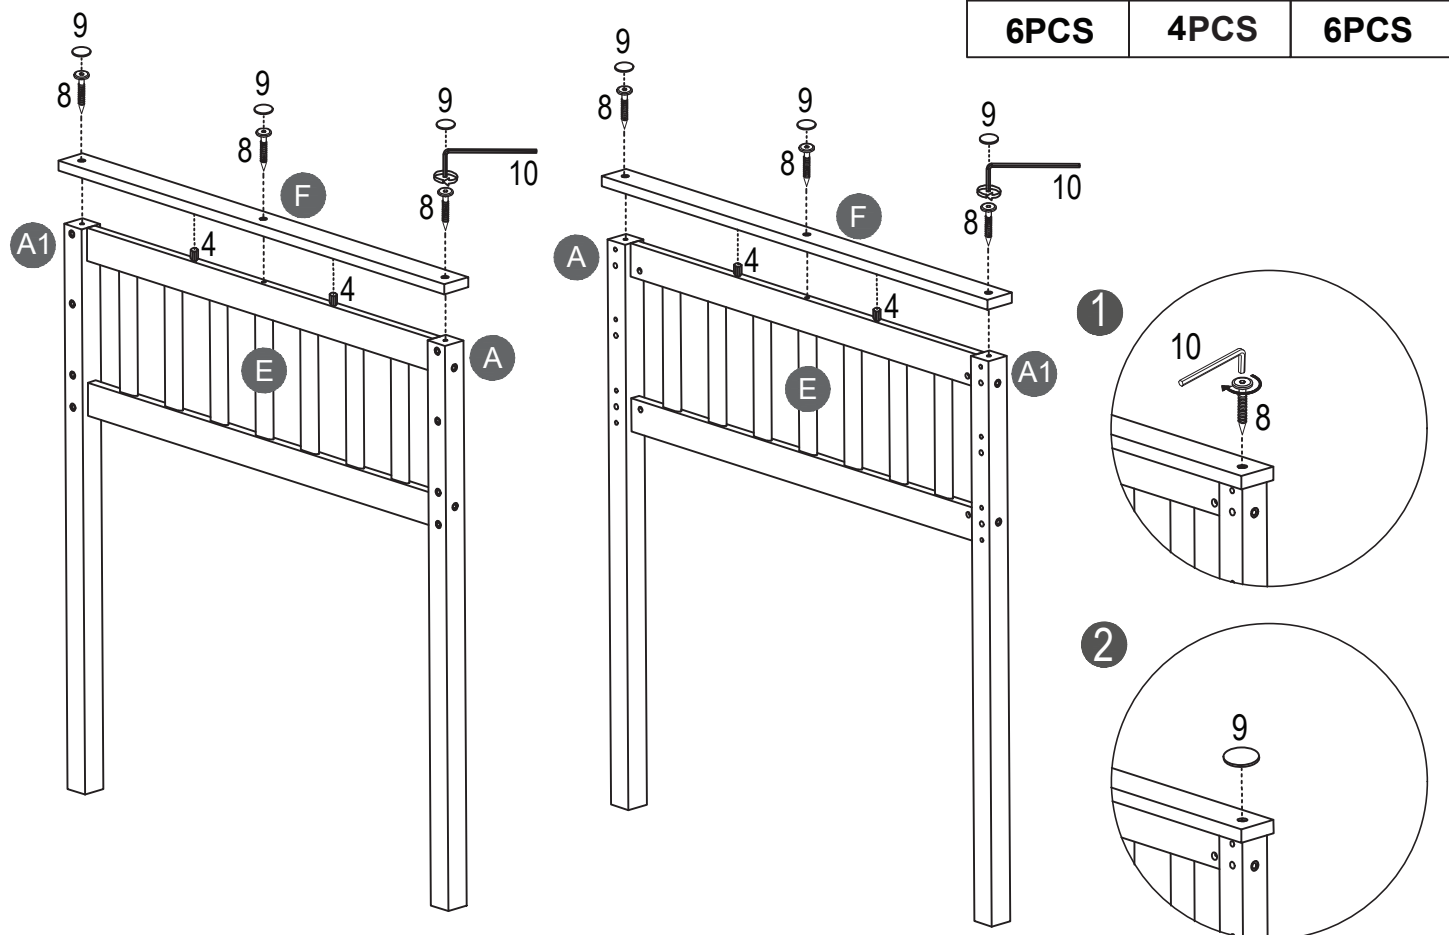


## STEP 2:





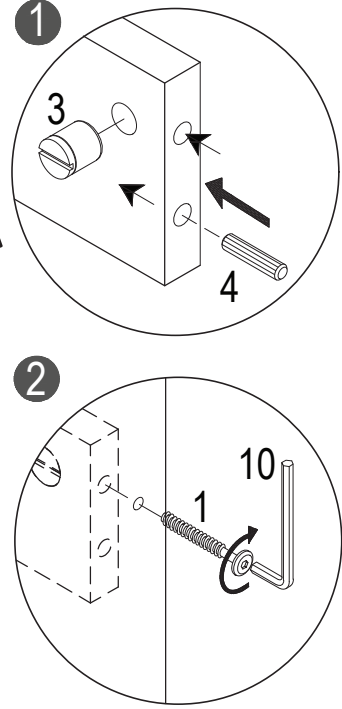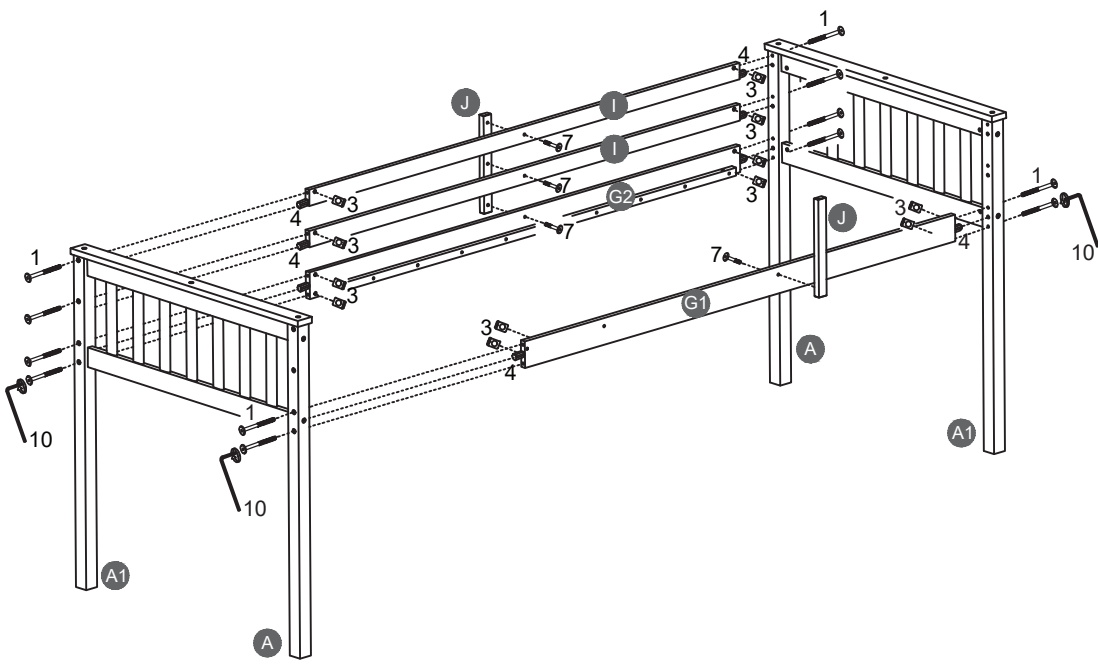



**STEP 3:**

<b>1</b>		<b>3</b>		<b>4</b>		<b>7</b>	
<b>12PCS</b>		<b>12PCS</b>		<b>8PCS</b>		<b>4PCS</b>	




**STEP 4:**


<b>1</b>		<b>3</b>		<b>4</b>		<b>7</b>	
<b>2PCS</b>		<b>2PCS</b>		<b>2PCS</b>		<b>2PCS</b>	

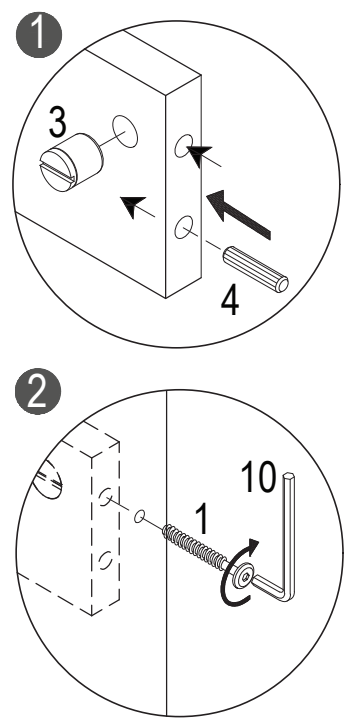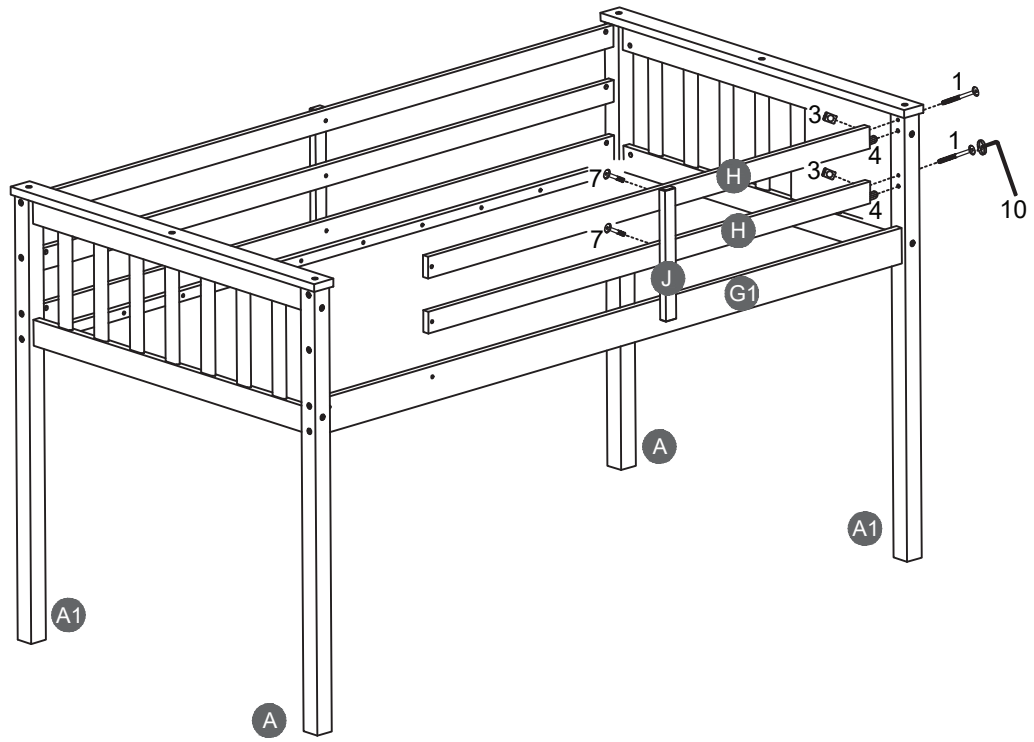


# STEP 5:

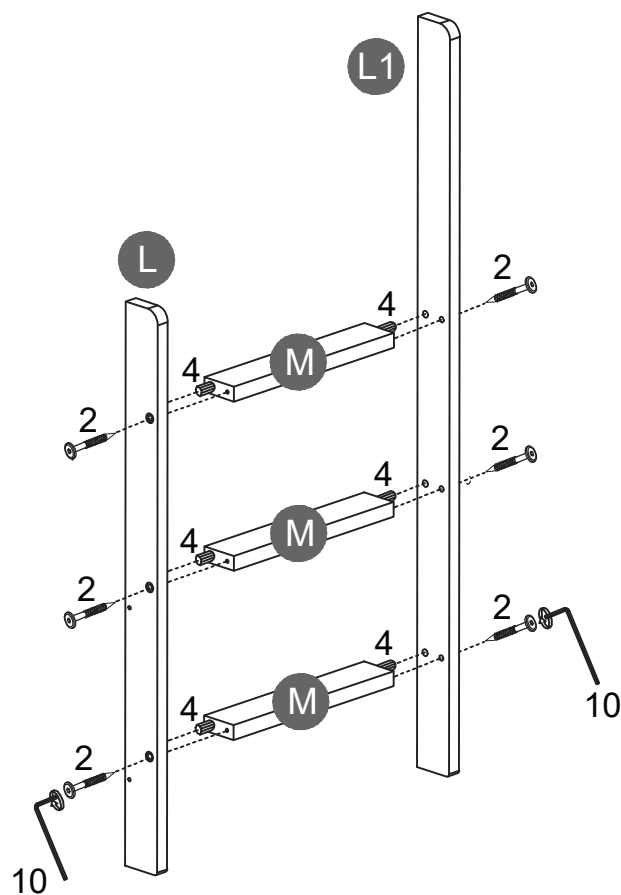



<b>2</b>		<b>4</b>	
<b>6PCS</b>		<b>6PCS</b>	

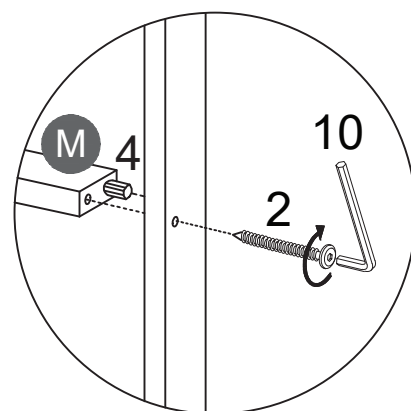

# STEP 6:

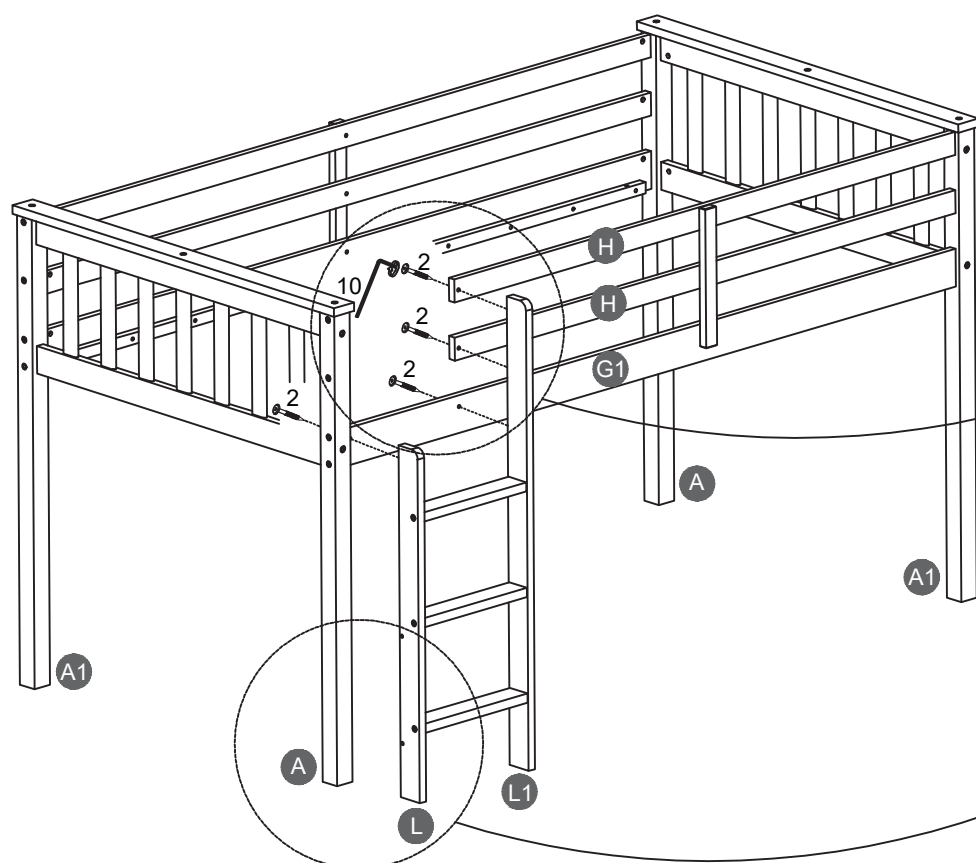

<b>2</b>		<b>5</b>	
<b>4PCS</b>		<b>2PCS</b>	

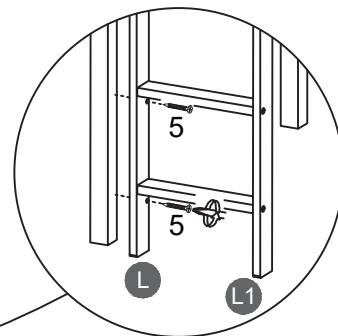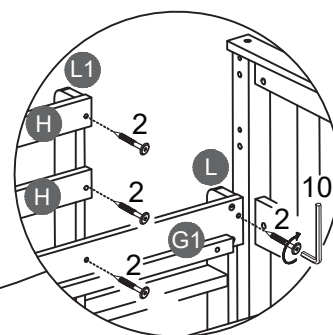




## STEP 7:

9



6PCS

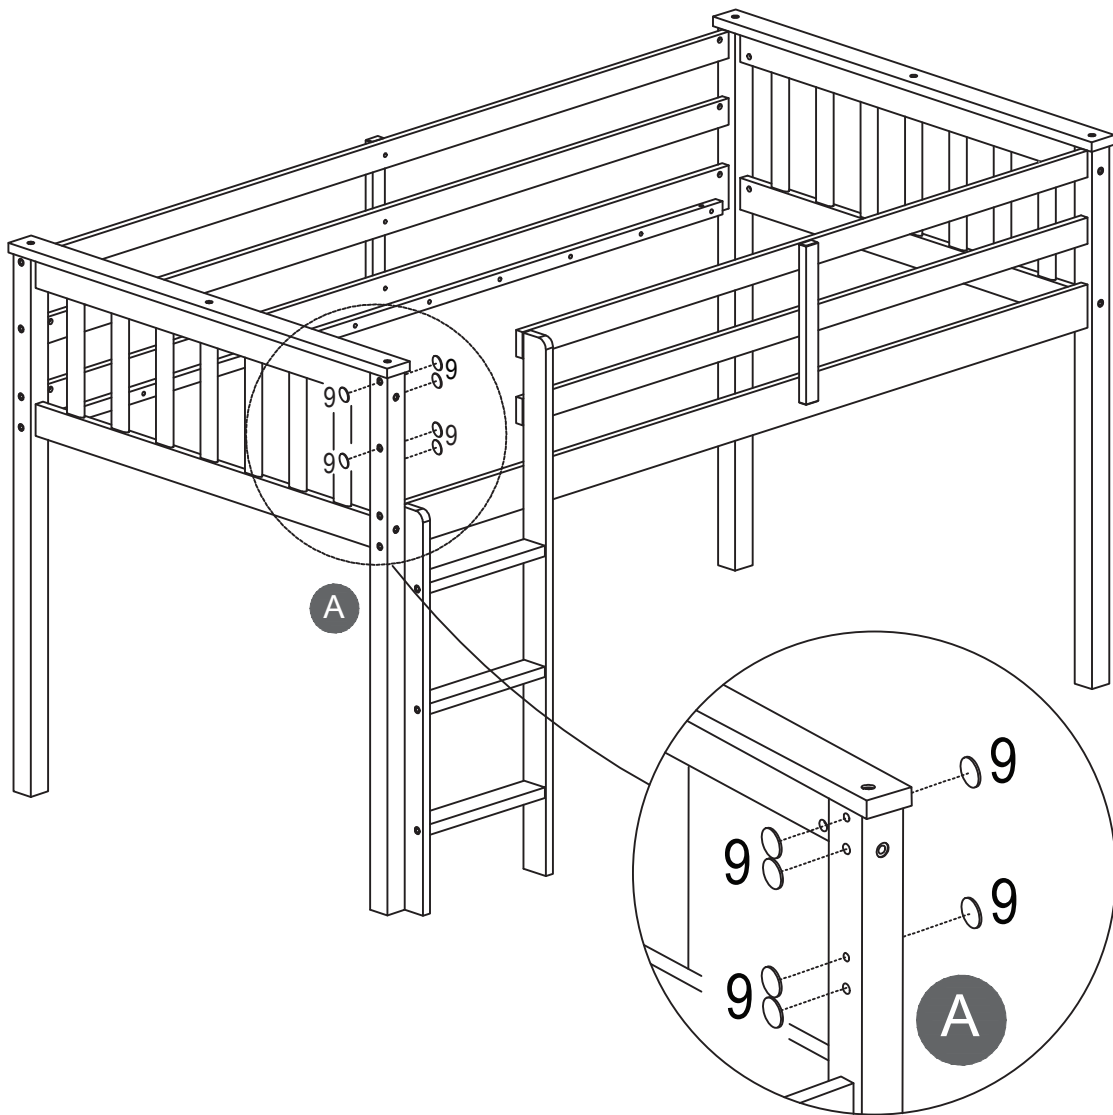


### REMARKS:

Attach the Bed Slats after the Desk assembly.

# ASSEMBLY INSTRUCTIONS


(4-DRAWER CHEST)

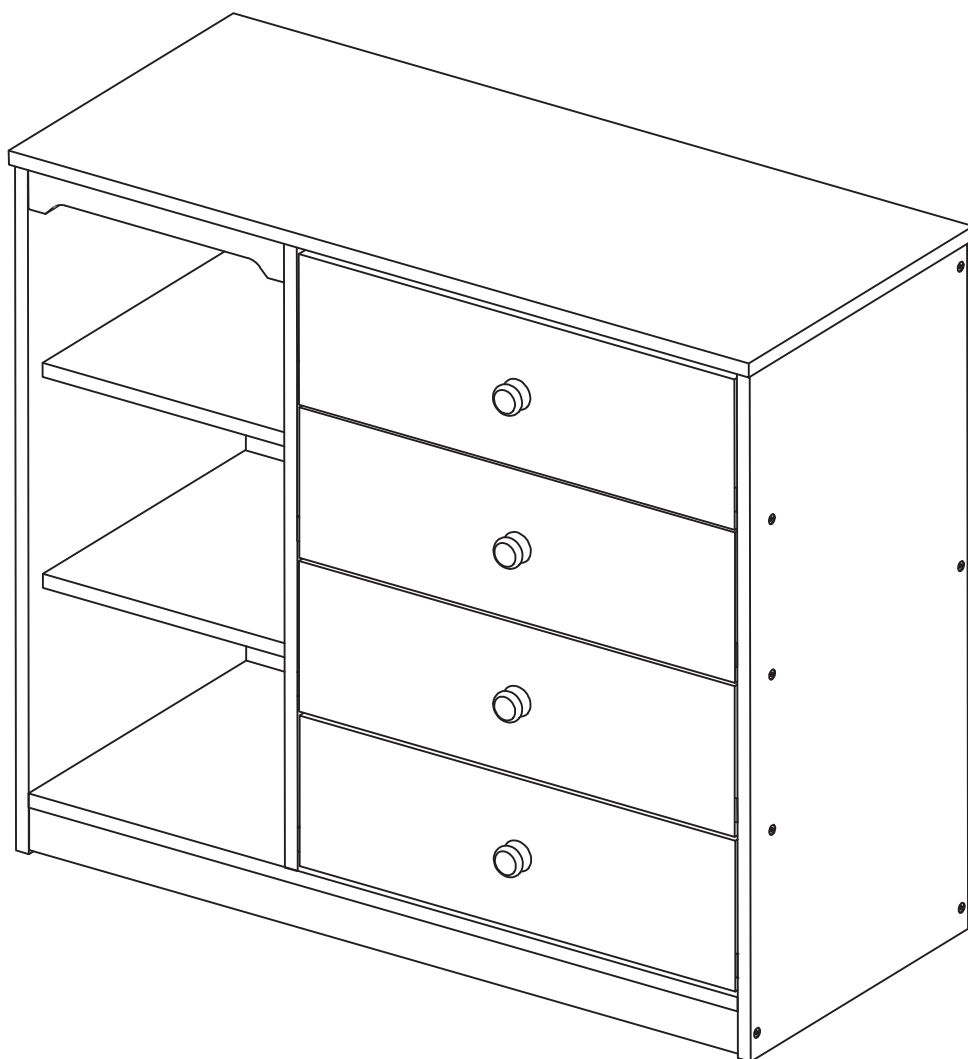

**MK 70087**


















## Detail View
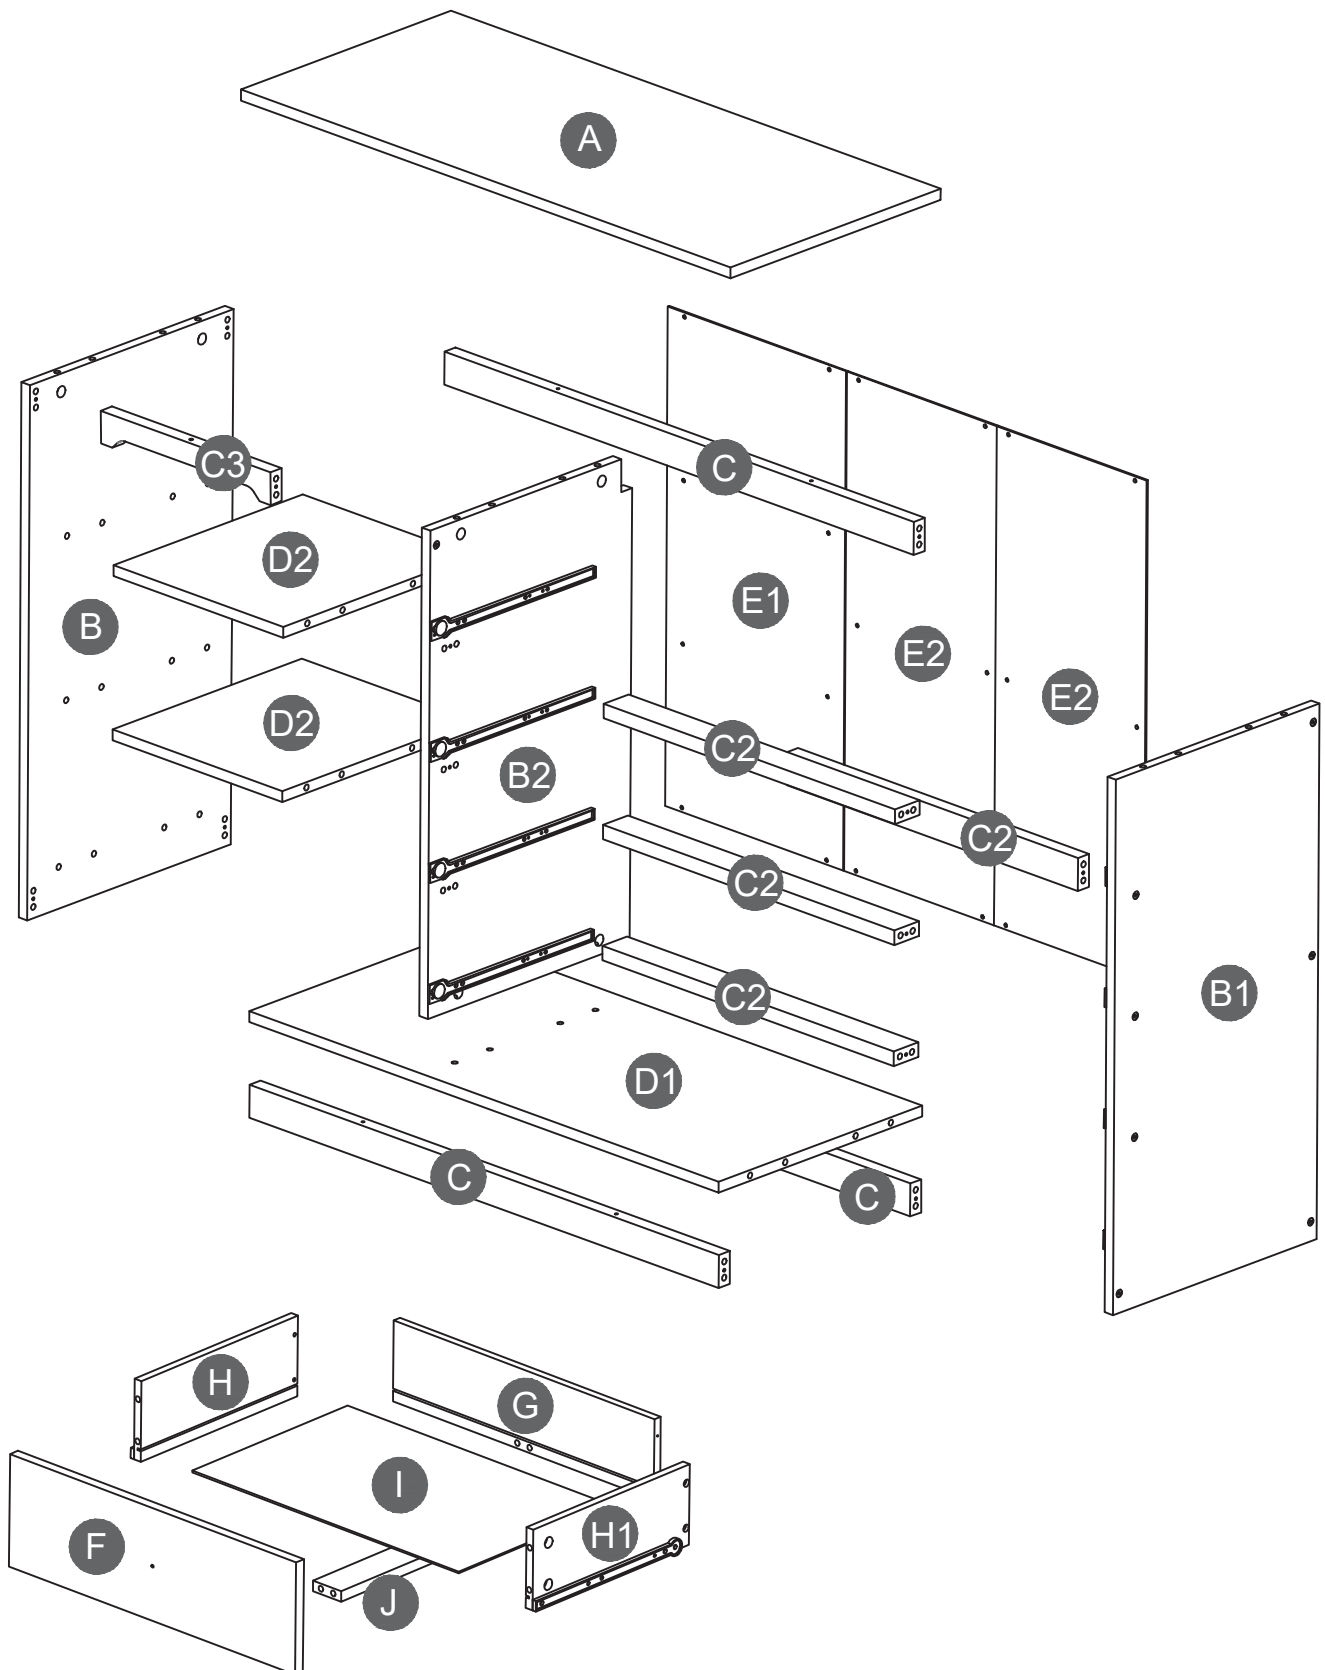
### 4-Drawer Chest





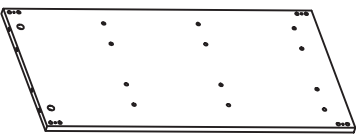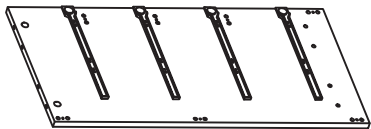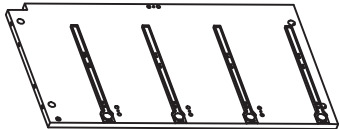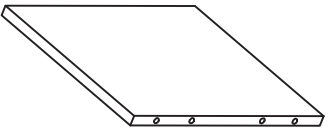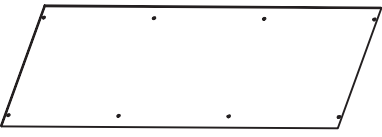








## Part List (4-Drawer Chest)


## Hardware List MK 70087 (2/3)

<b>A</b>  <p>Top Panel - 1pc</p>	<b>B</b>  <p>Side Panel (Left) - 1pc</p>
<b>B1</b>  <p>Side Panel (Right) - 1pc</p>	<b>B2</b>  <p>Mid. Panel - 1pc</p>
<b>C</b>  <p>Support Rail (Top &amp; Bottom) - 3pcs</p>	<b>C2</b>  <p>Support Rail (Right) - 4pcs</p>
<b>C3</b>  <p>Support Rail (Left) - 1pc</p>	<b>D1</b>  <p>Bottom Panel - 1pc</p>
<b>D2</b>  <p>Shelf Panel (Left) - 2pcs</p>	<b>E1</b>  <p>Back Panel (Left) - 1pc</p>
<b>E2</b>  <p>Back Panel (Right) - 2pcs</p>	<b>F</b>  <p>Drawer Front Panel - 4pcs</p>
<b>G</b>  <p>Drawer Back Panel - 4pcs</p>	<b>H</b>  <p>Drawer Side Panel (Left) - 4pcs</p>
<b>H1</b>  <p>Drawer Side Panel (Right) - 4pcs</p>	<b>I</b>  <p>Drawer Bottom Panel - 4pcs</p>
<b>J</b>  <p>Drawer Bottom Support - 4pcs</p>	

# Hardware List (4-Drawer Chest)

<b>1</b>	 M8 x 30mm Wood Dowel (52pcs)	<b>2</b>	 M4 x 32mm CSK Screw (23pcs)	<b>3</b>	 Connecting Bolt (36pcs)
<b>4</b>	 Minifix Housing (Long) (20pcs)	<b>5</b>	 M6 x 25mm Wood Dowel (16pcs)	<b>6</b>	 M4 x 25mm CSK Screw (16pcs)
<b>7</b>	 M3.5 x 16mm Pan Head Screw (20pcs)	<b>8</b>	 Minifix Housing (Short) (16pcs)	<b>9</b>	 Sticker Cap (16pcs)
<b>10</b>	 M4 x 25mm Handle Screw (4pcs)	<b>11</b>	 Handle (4pcs)		

## ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )




**PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !**

## STEP 1:

1



52PCS

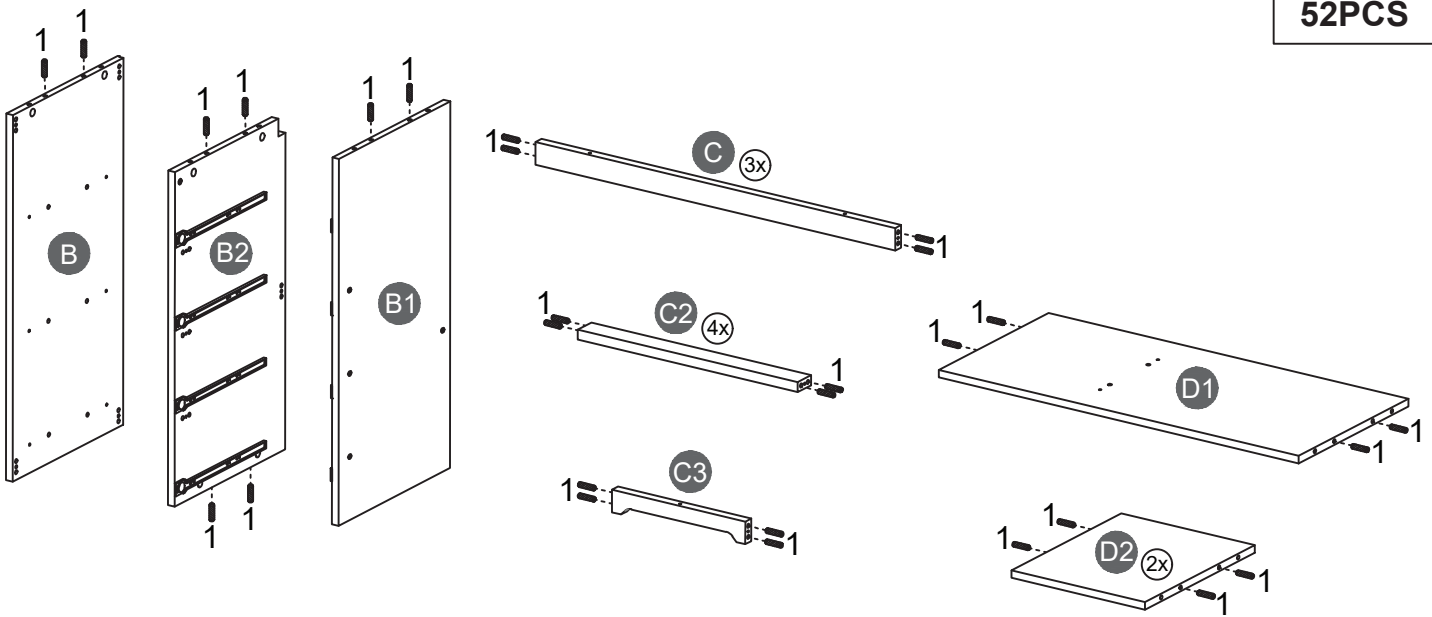


## STEP 2:

3



20PCS

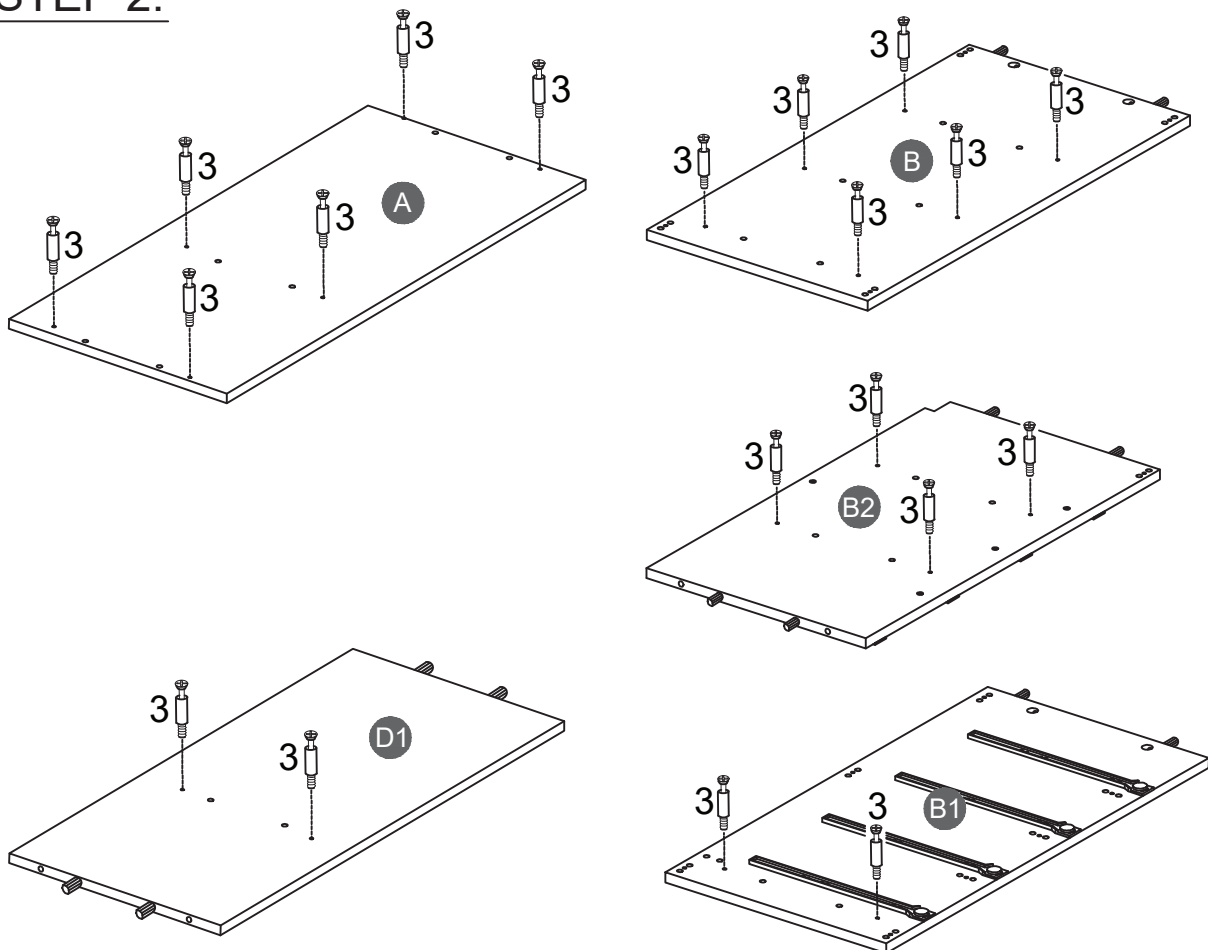


STEP 3:

4



2PCS

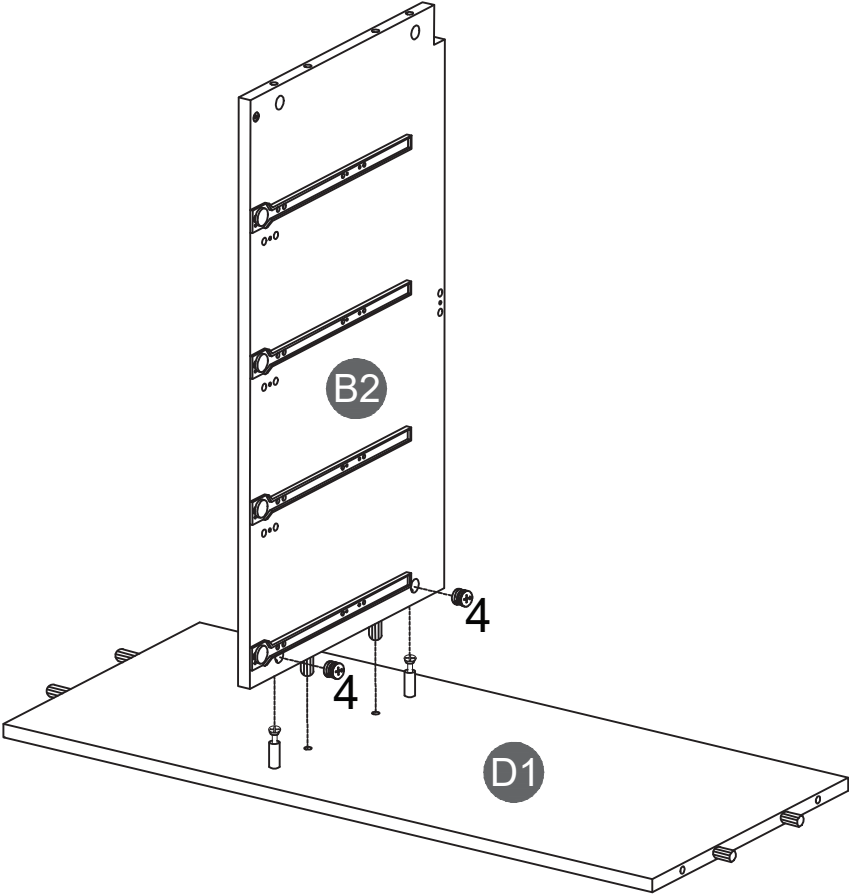


STEP 4:

4



10PCS

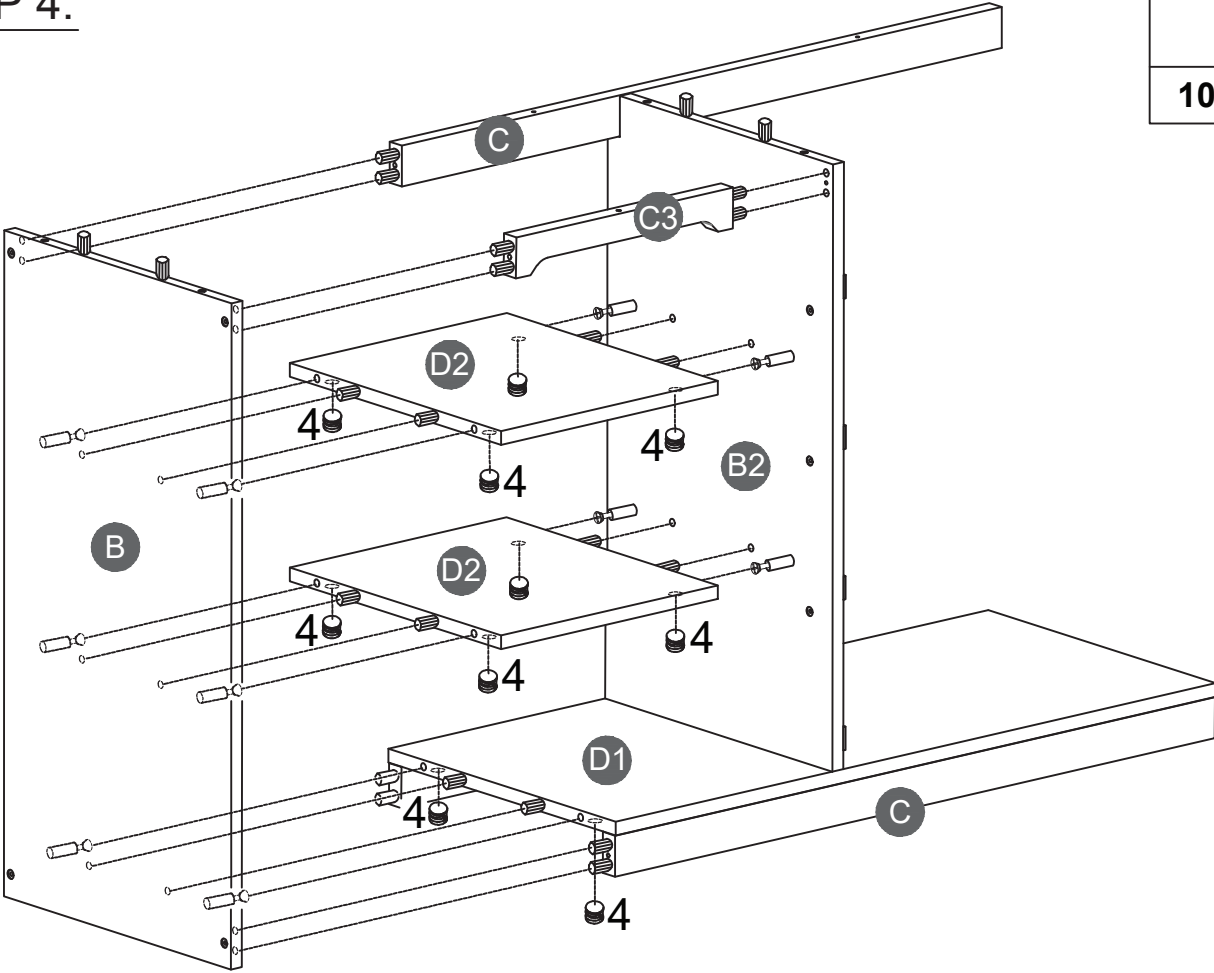


**STEP 5:**

**4**



**2PCS**

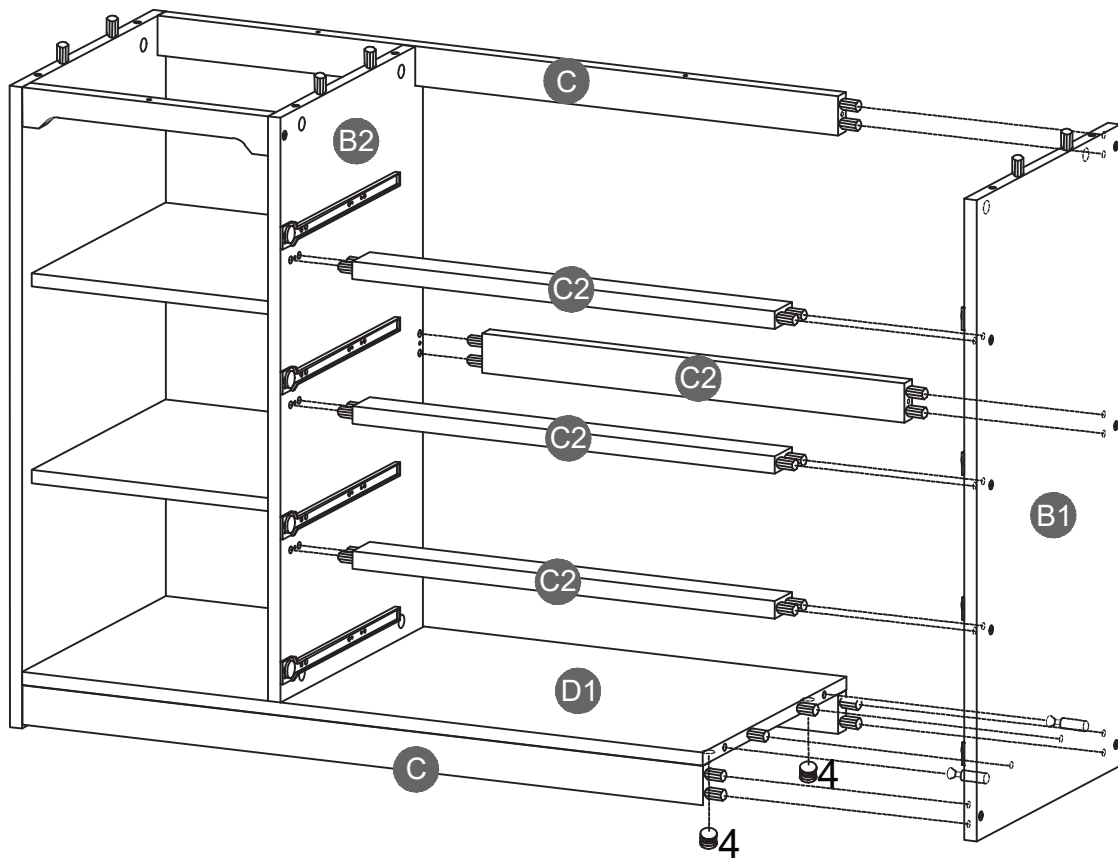

**STEP 6:**

**2**




**16PCS**


**9**




**16PCS**

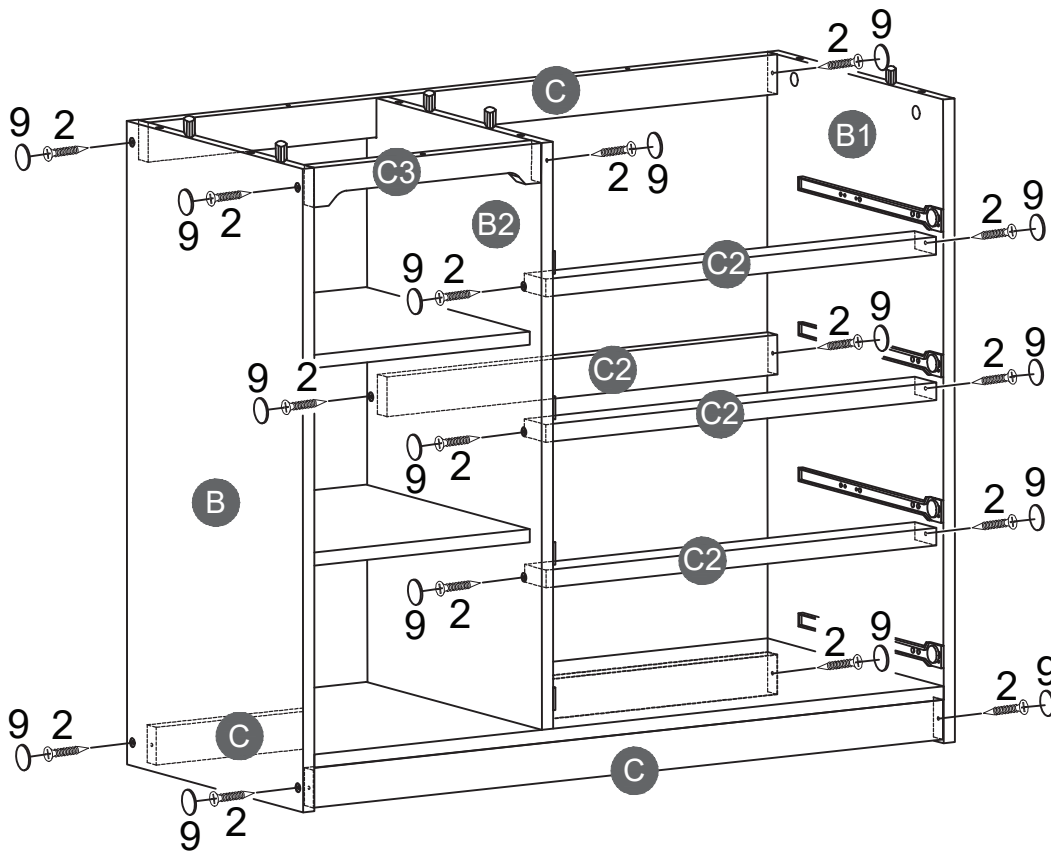

**1**



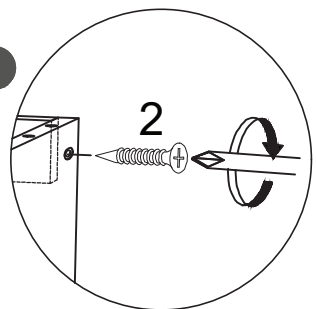



**2**

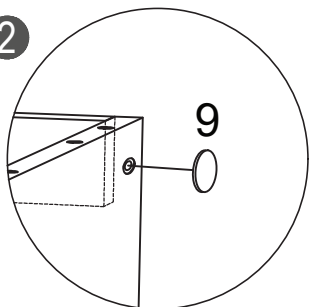




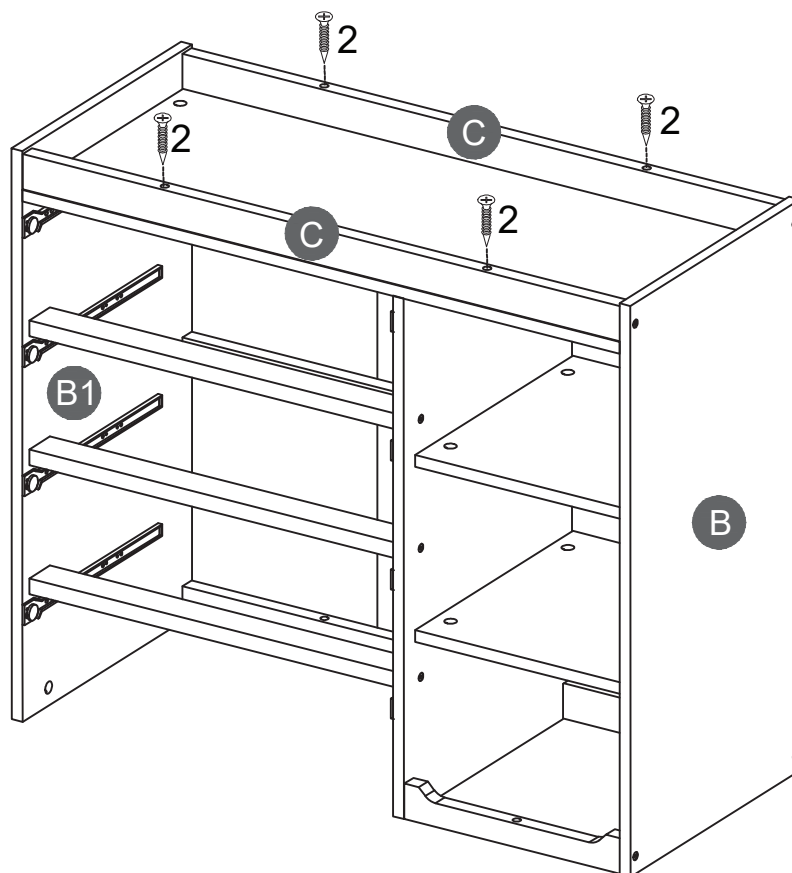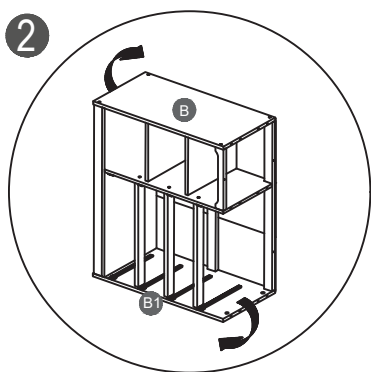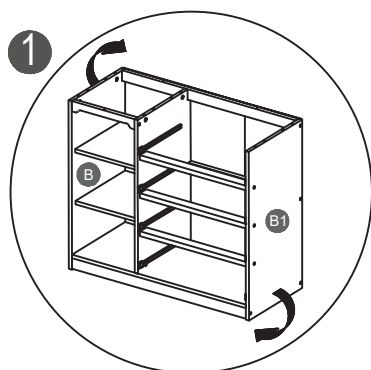

## STEP 7:




2	
4PCS	

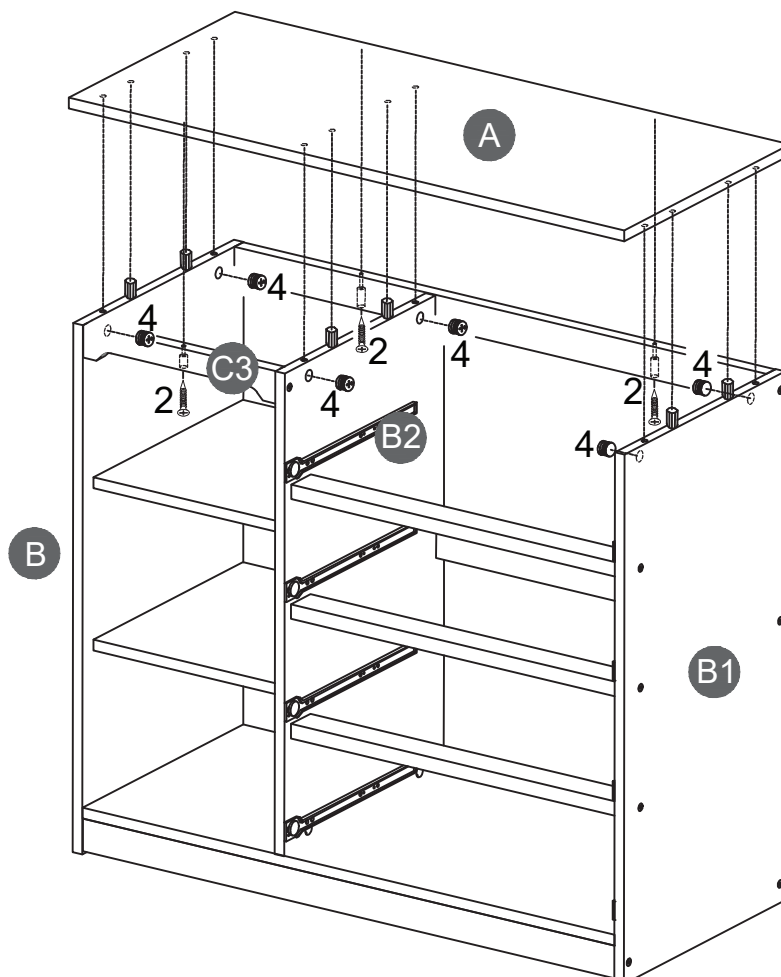
## STEP 8:






2		4	
3PCS		6PCS	


STEP 9:
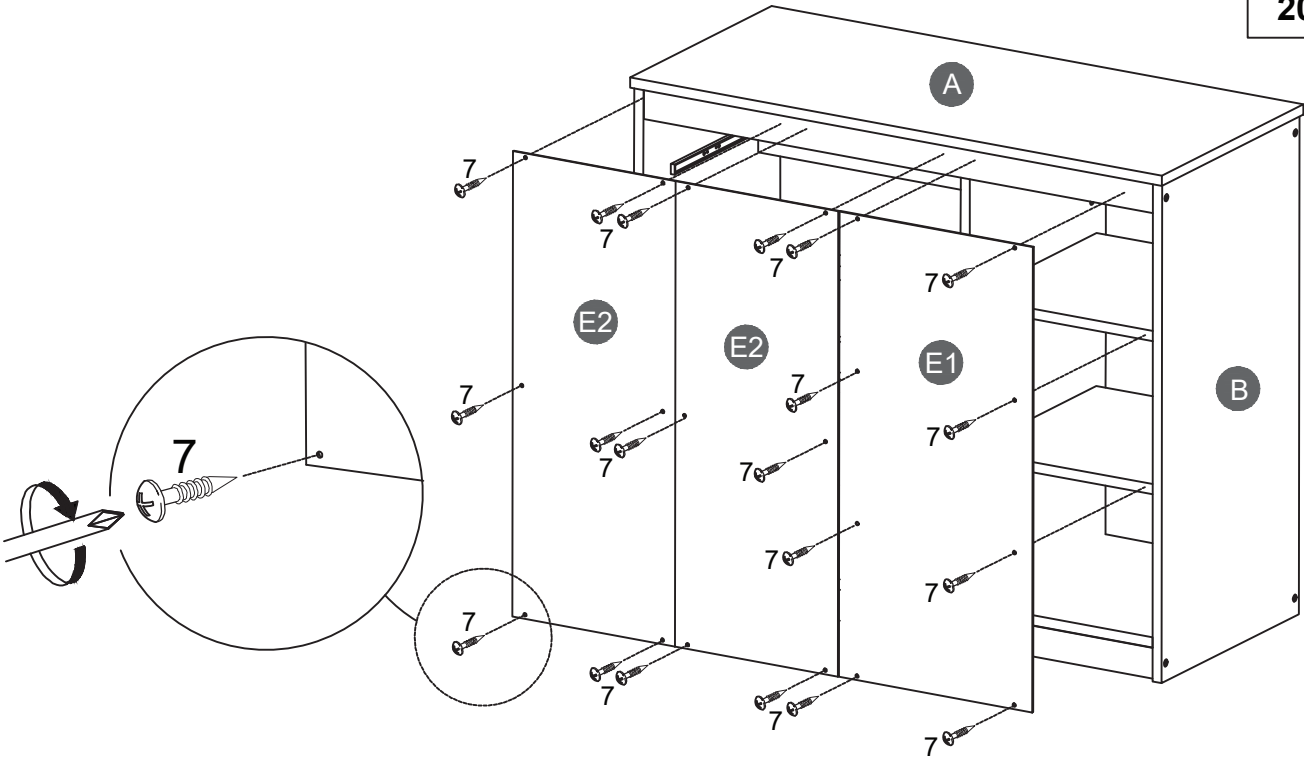
<b>7</b>

<b>20PCS</b>




STEP 10:
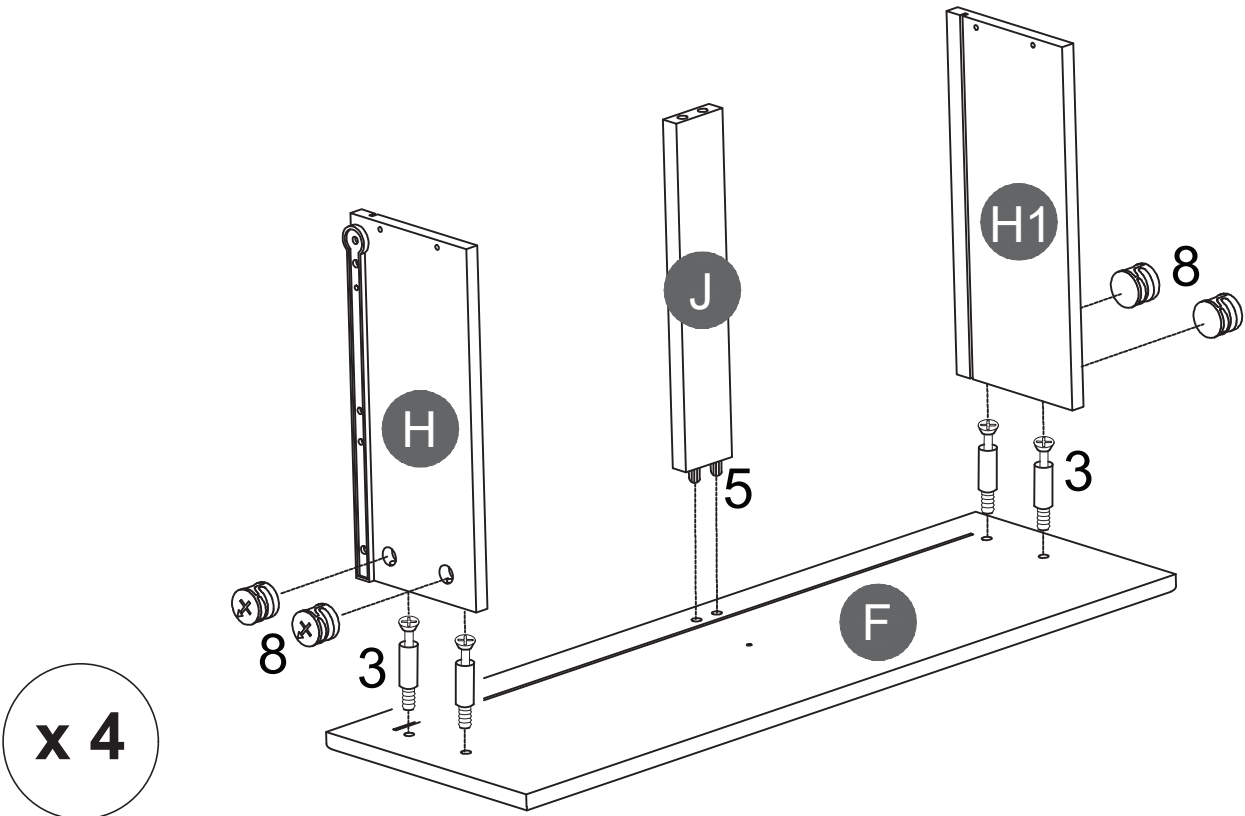
<b>3</b>		<b>5</b>		<b>8</b>	
<b>16PCS</b>		<b>8PCS</b>		<b>16PCS</b>	




**x 4**

STEP 11:

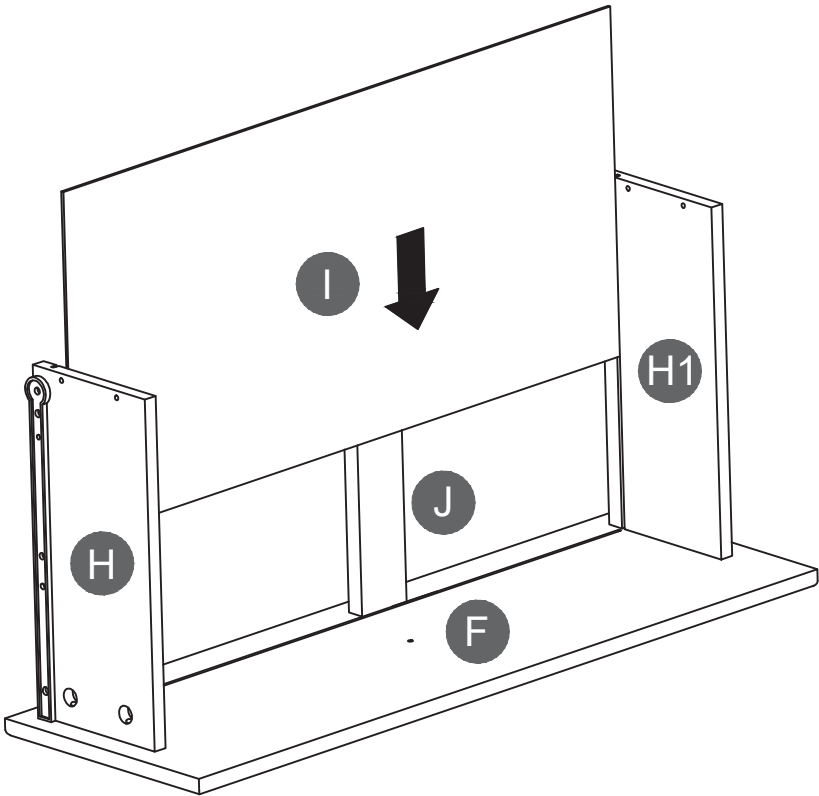

**x 4**

STEP 12:

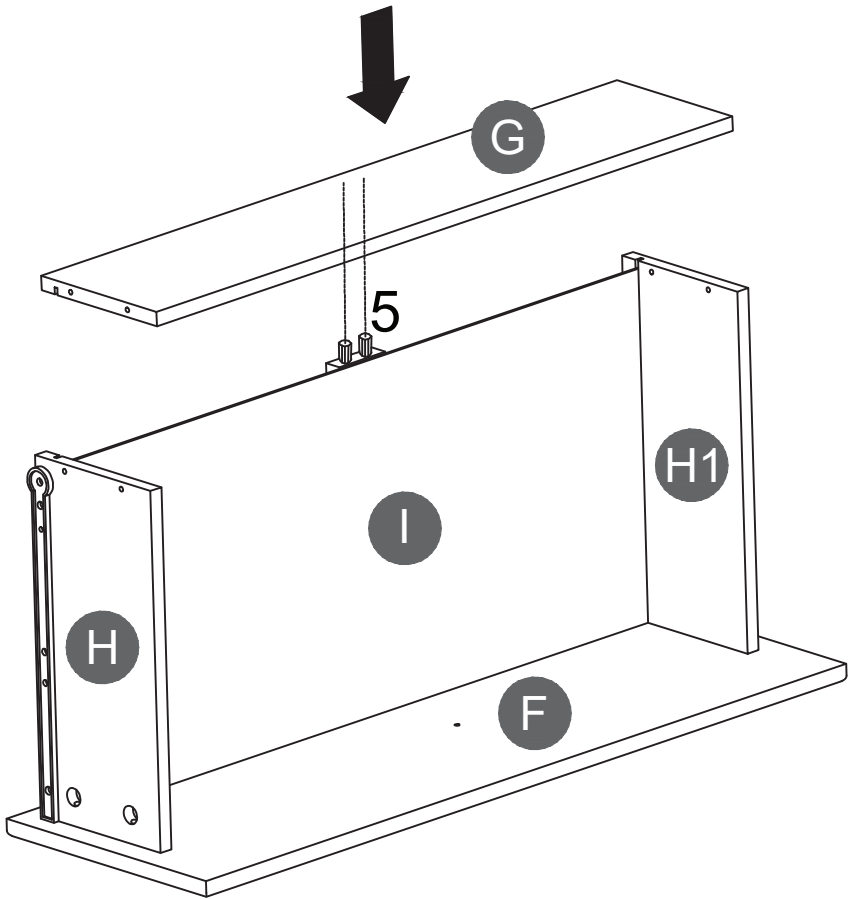




**5**




**8PCS**

**x 4**



## STEP 13:

<b>6</b>		<b>10</b>		<b>11</b>	
<b>16PCS</b>		<b>4PCS</b>		<b>4PCS</b>	

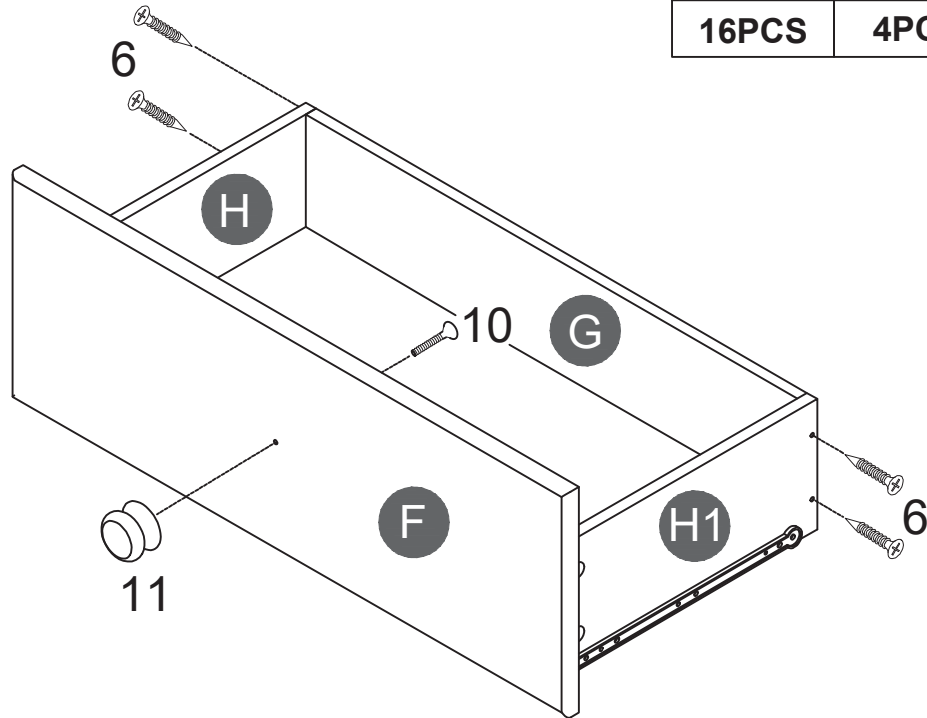


**x 4**

## STEP 14:

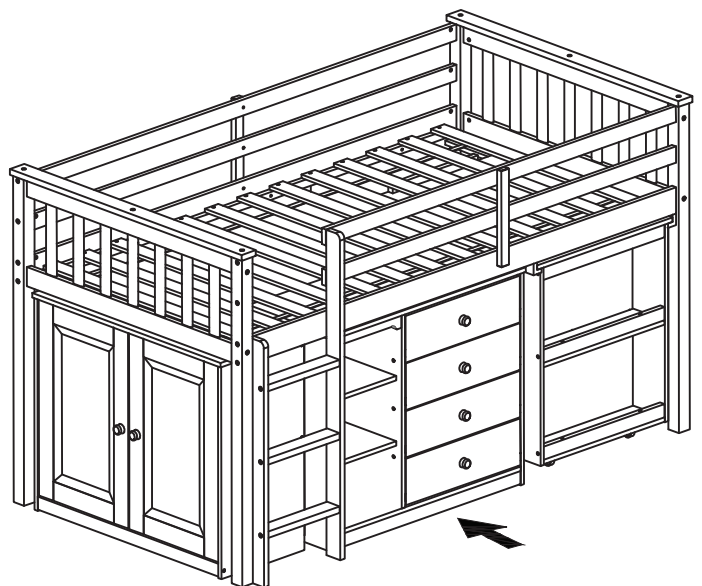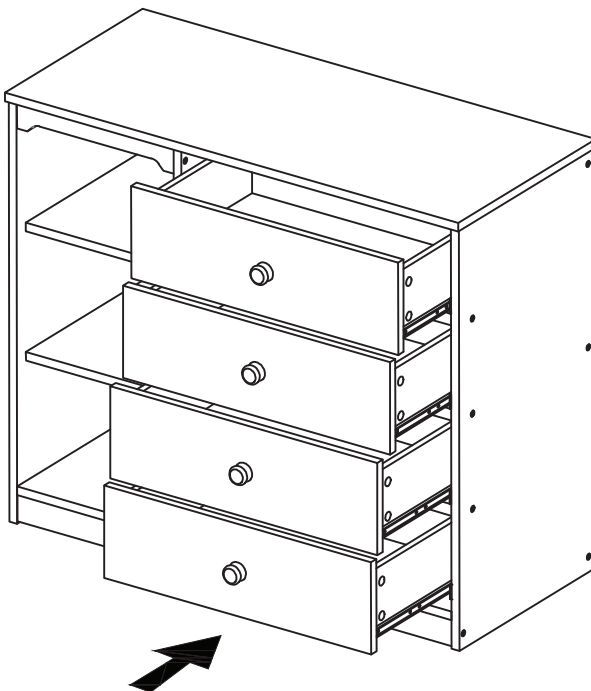

# ASSEMBLY INSTRUCTIONS


(DESK)

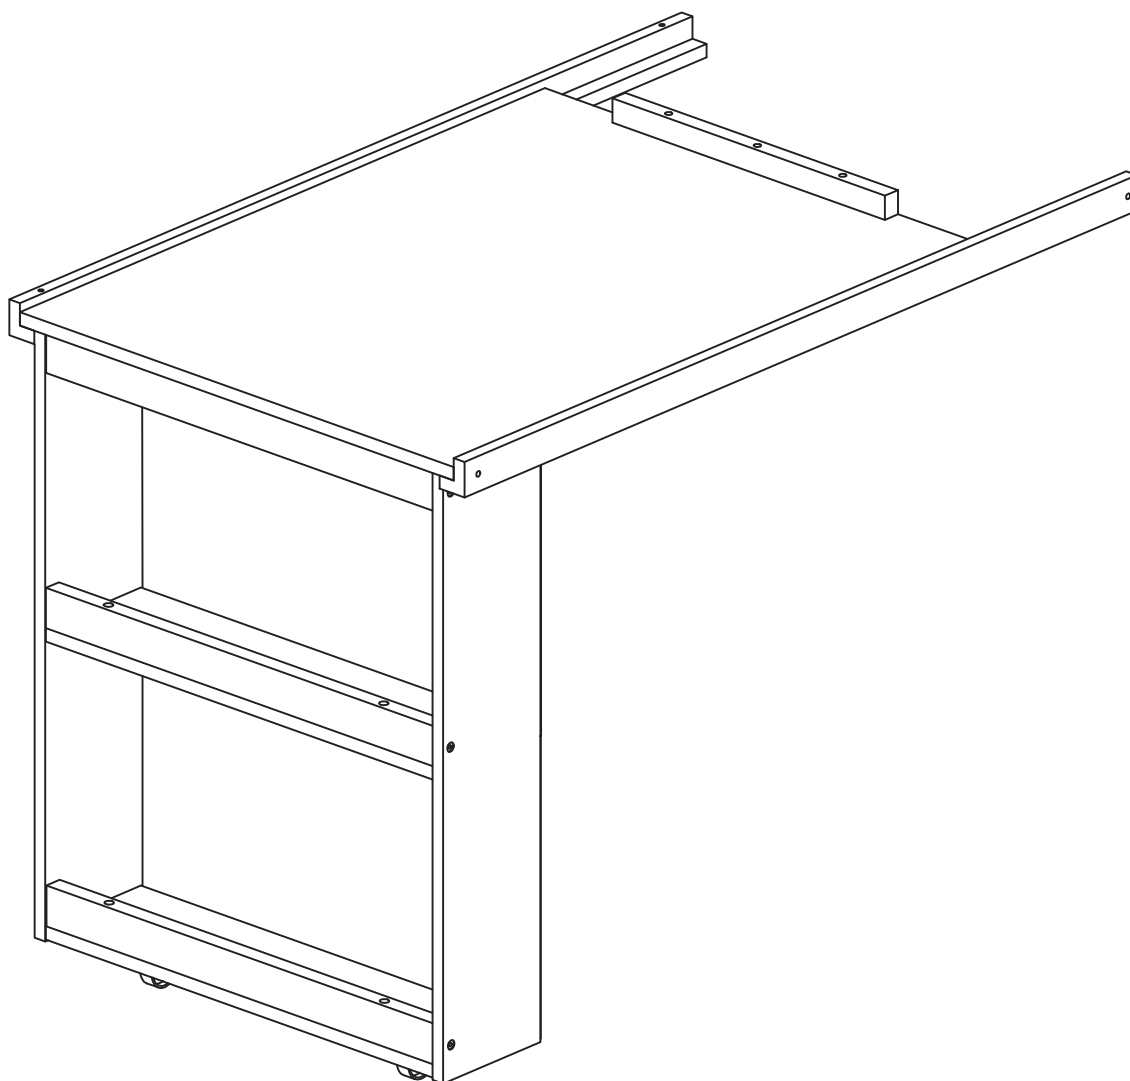

**MK 70087**




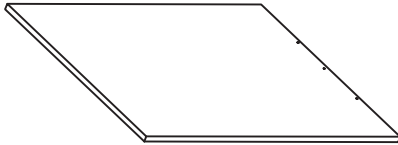




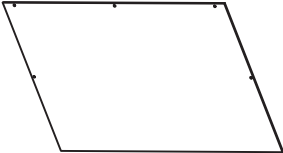
Detail View

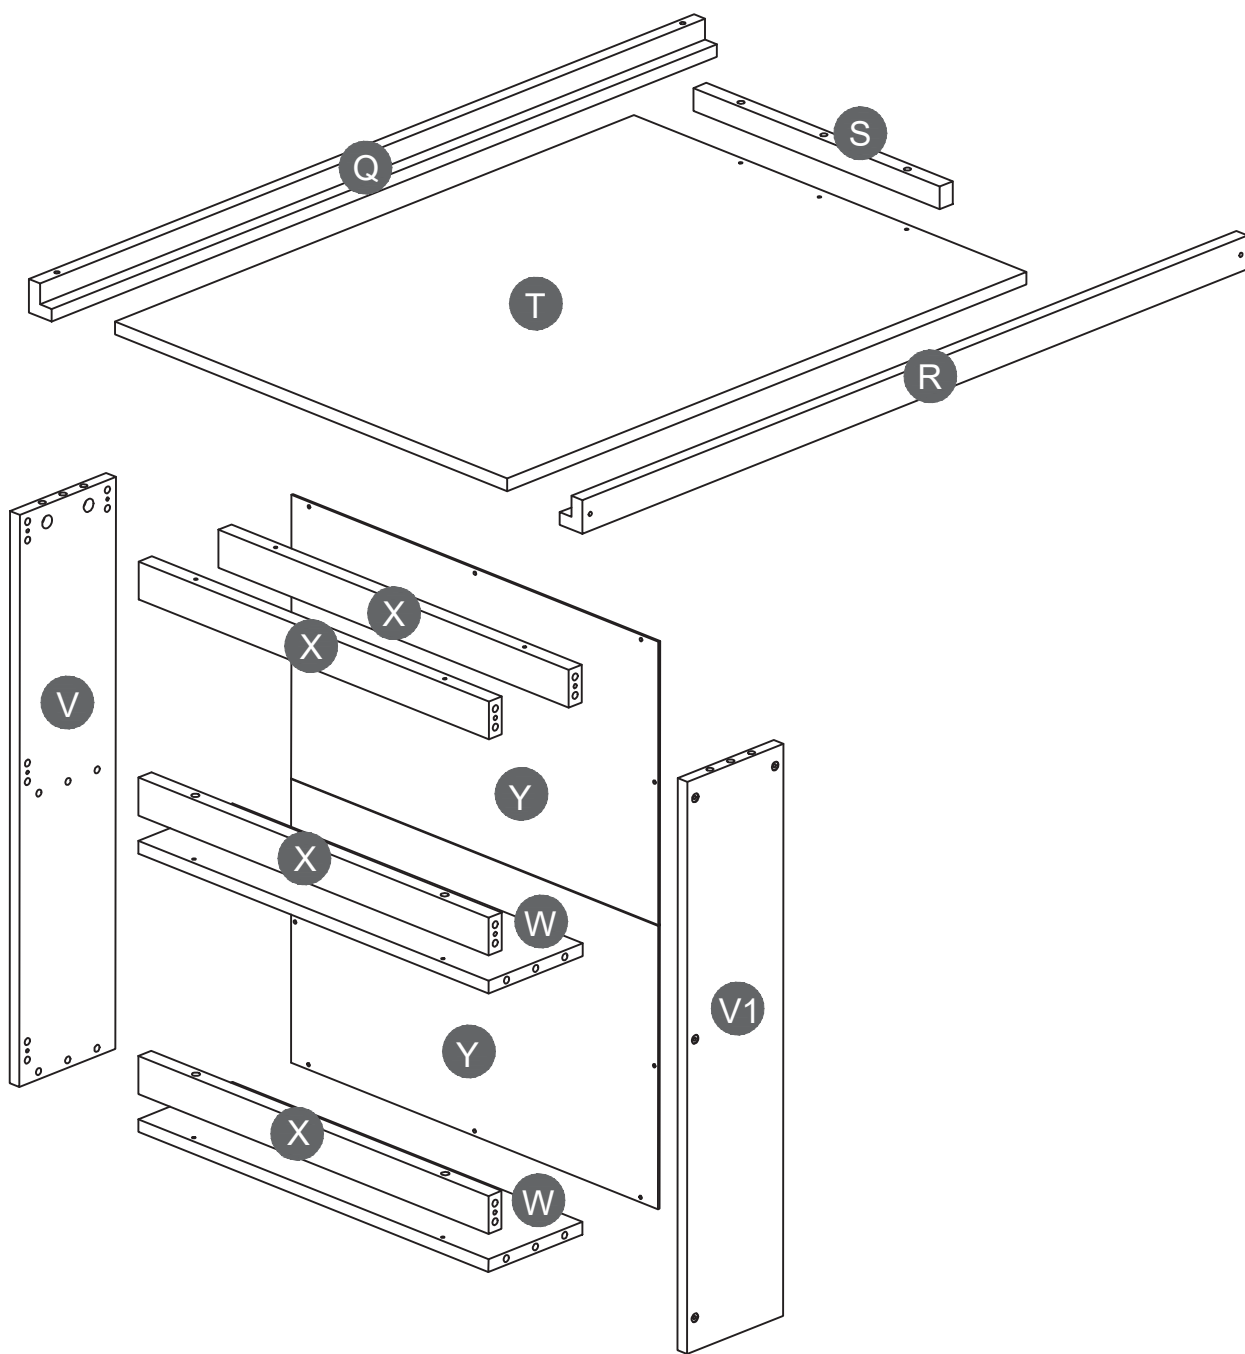Desk












# Part List (Desk)


## Hardware List MK 70087 (2/3)

<div>Q</div> <div></div> <div>Desk Rail (Left) - 1pc</div>	<div>R</div> <div></div> <div>Desk Rail (Right) - 1pc</div>
<div>S</div> <div></div> <div>Desk Stopper - 1pc</div>	<div>T</div> <div></div> <div>Top Panel - 1pc</div>
<div>V</div> <div></div> <div>Side Panel (Left) - 1pc</div>	<div>V1</div> <div></div> <div>Side Panel (Right) - 1pc</div>
<div>W</div> <div></div> <div>Shelf &amp; Bottom Panel - 2pcs</div>	<div>X</div> <div></div> <div>Support Rail - 4pcs</div>
<div>Y</div> <div></div> <div>Back Panel - 2pcs</div>	

# Hardware List (Desk)

<b>1</b>	 M8 x 30mm Wood Dowel (24pcs)	<b>2</b>	 M4 x 32mm CSK Screw (19pcs)	<b>3</b>	 Connecting Bolt (12pcs)
<b>4</b>	 Minifix Housing (Long) (12pcs)	<b>5</b>	 Back Panel Metal Plate (3pcs)	<b>6</b>	 M4 x 38mm CSK Screw (4pcs)
<b>7</b>	 M3.5 x 16mm Pan Head Screw (21pcs)	<b>8</b>	 Caster (2pcs)	<b>9</b>	 Sticker Cap (8pcs)


## ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )




**PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !**






STEP 1:

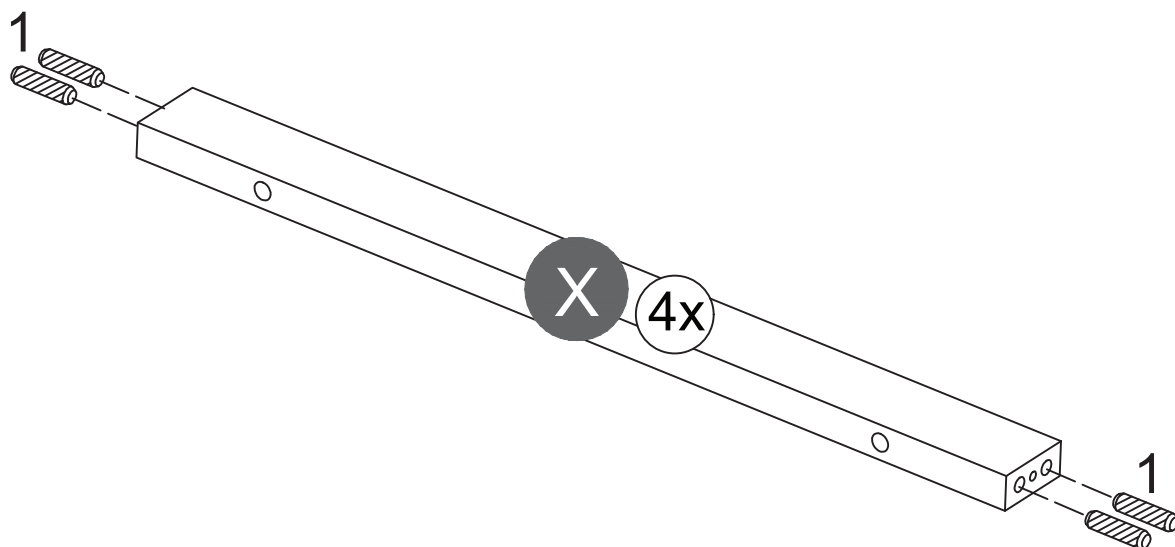1	
16PCS	






STEP 2:

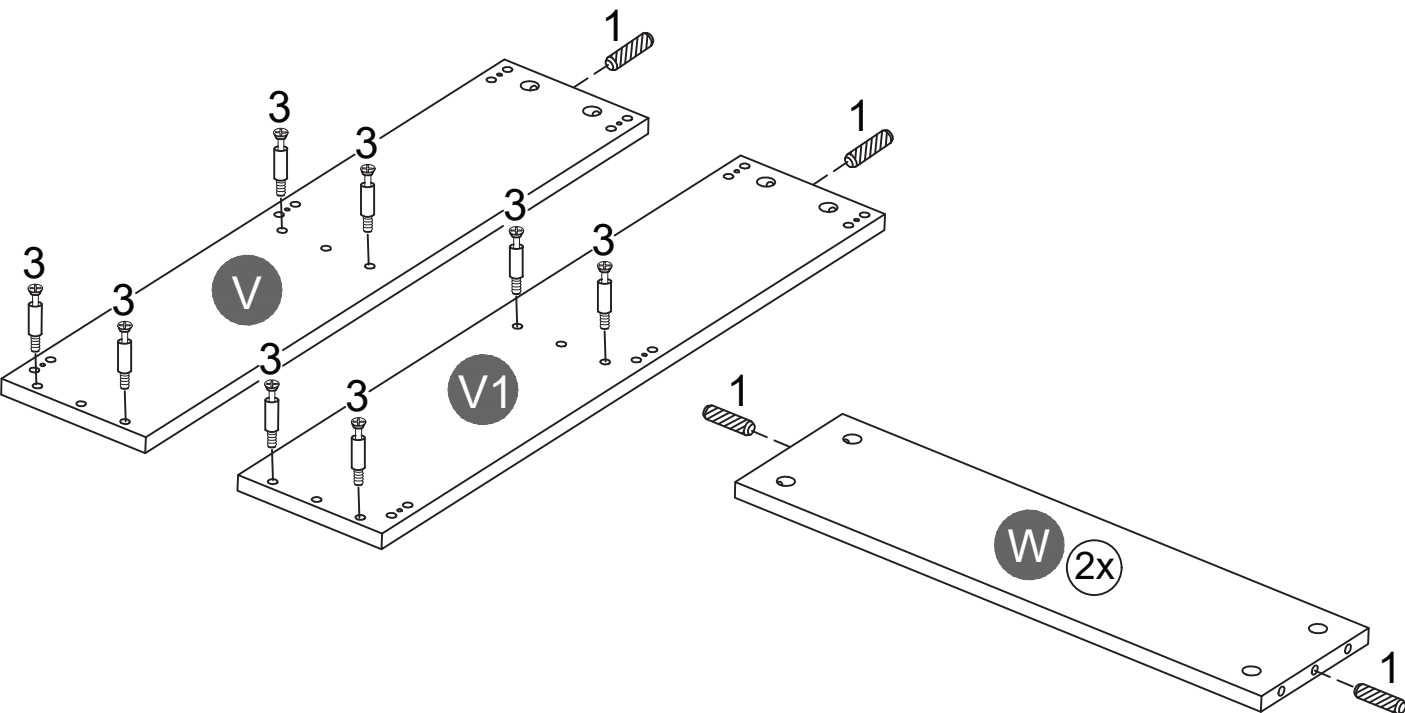1		3	
6PCS		8PCS	




STEP 3:

7		8	
8PCS		2PCS	

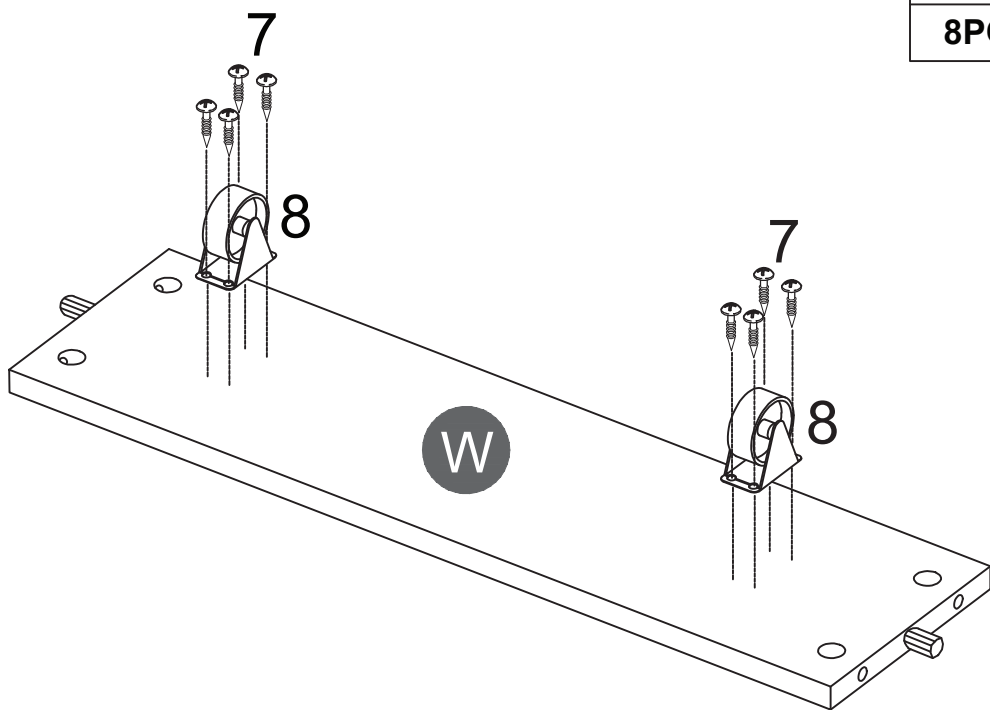





STEP 4:



4	
8PCS	

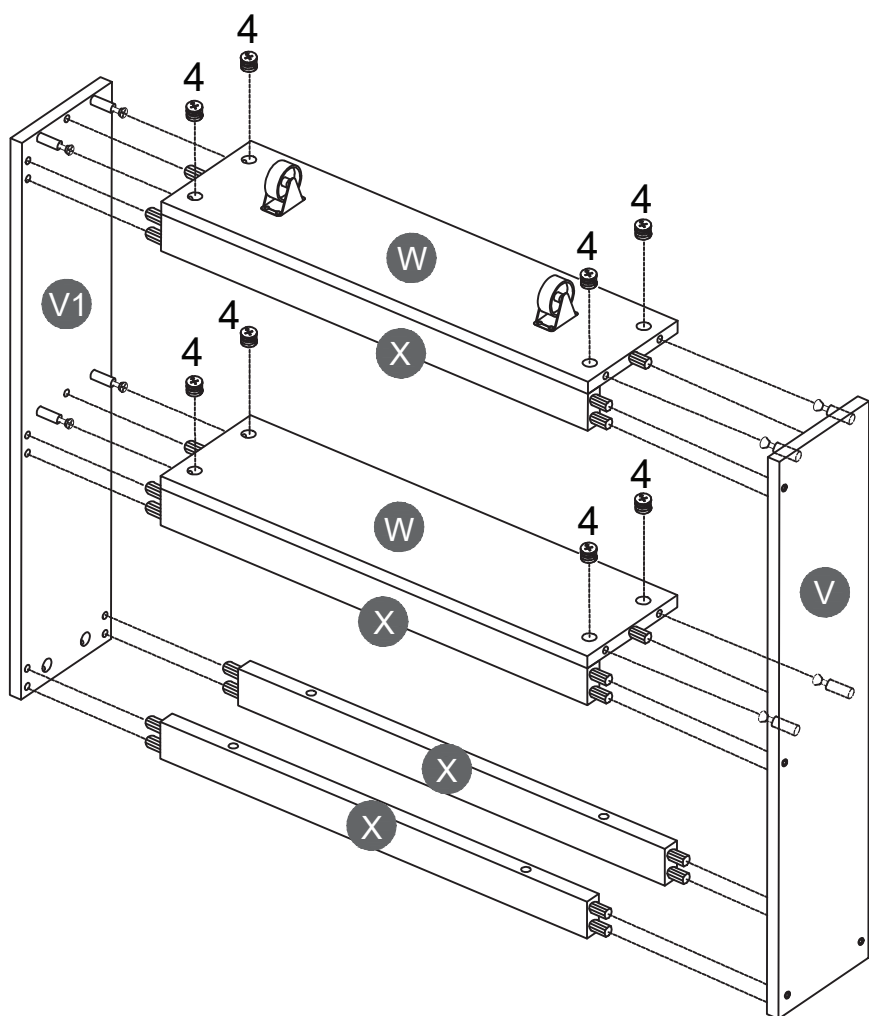


STEP 5:

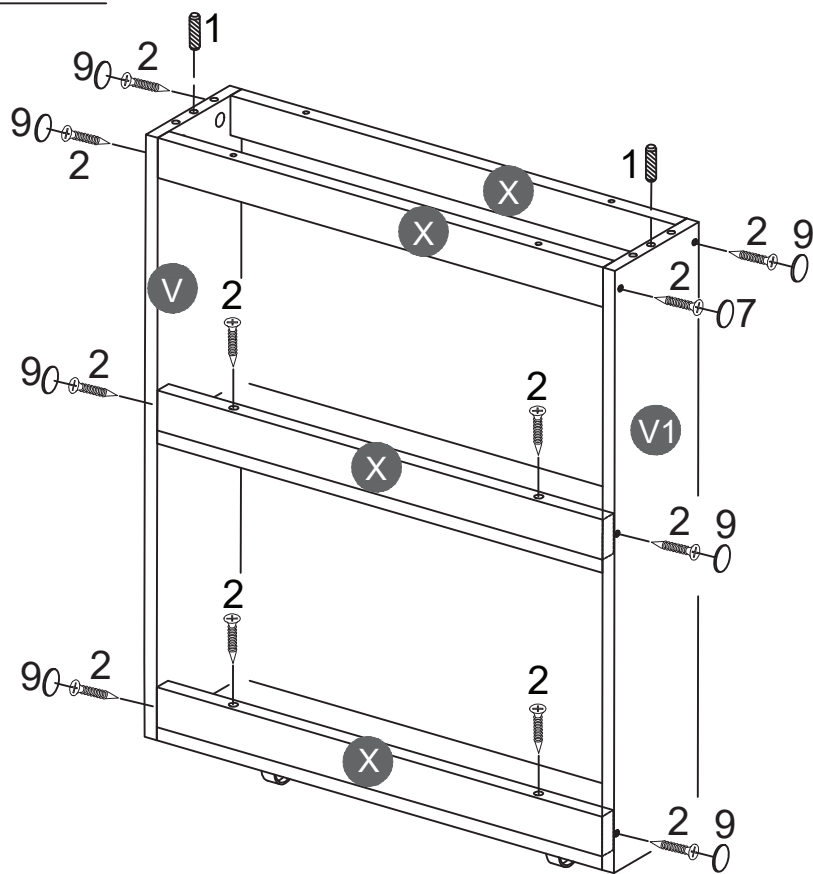


<b>1</b>		<b>2</b>		<b>9</b>	
<b>2PCS</b>		<b>12PCS</b>		<b>8PCS</b>	

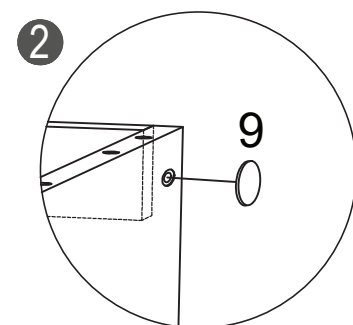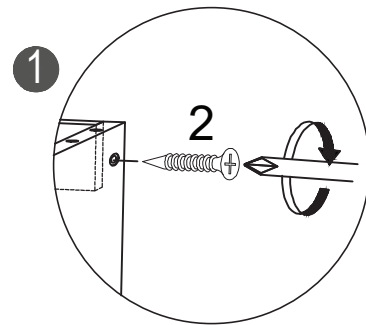


STEP 6:

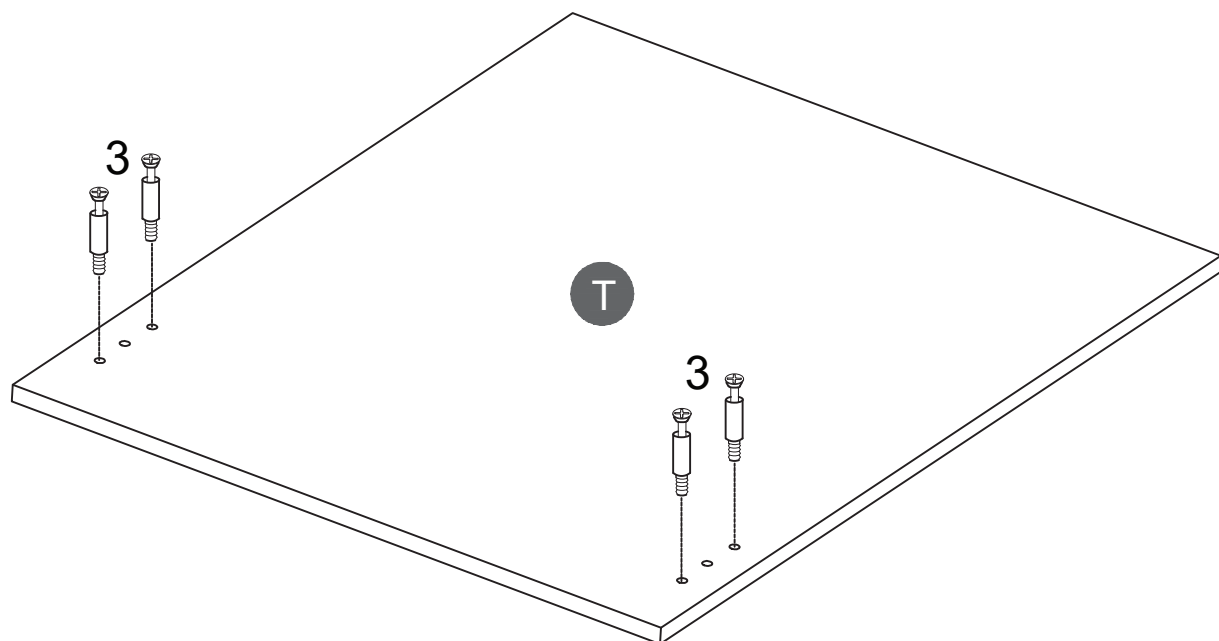


<b>3</b>	
<b>4PCS</b>	


# STEP 7:

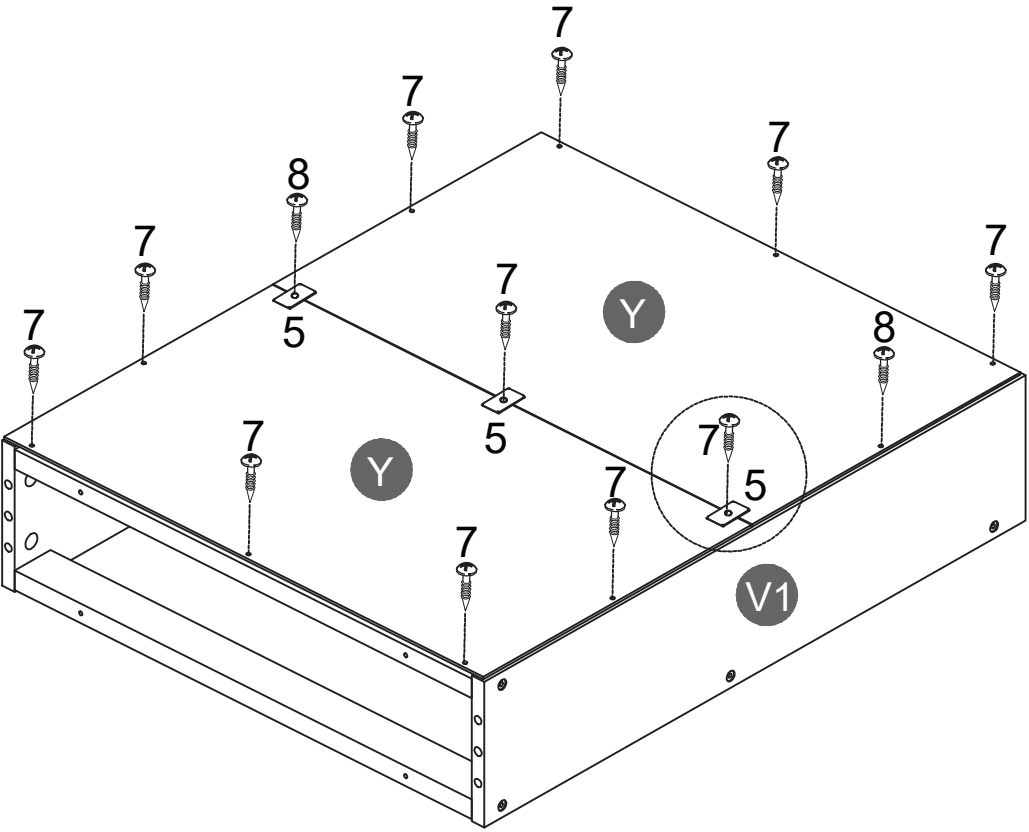

5		7	
3PCS		13PCS	

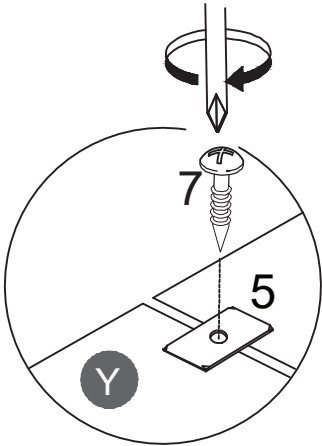

# STEP 8:

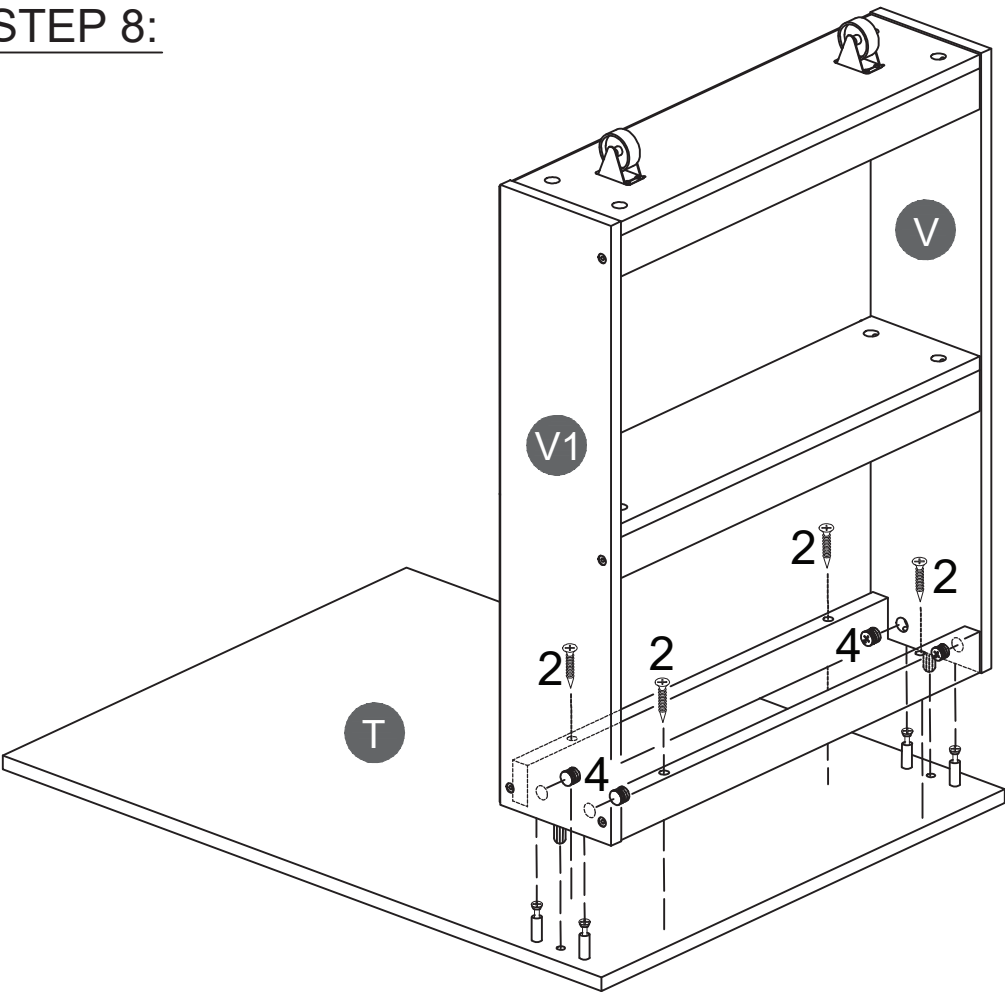

2		4	
4PCS		4PCS	

## STEP 9:

6




4PCS

### REMARKS:

CSK Screw

M4 x 38mm

**\*BE CAREFUL!**

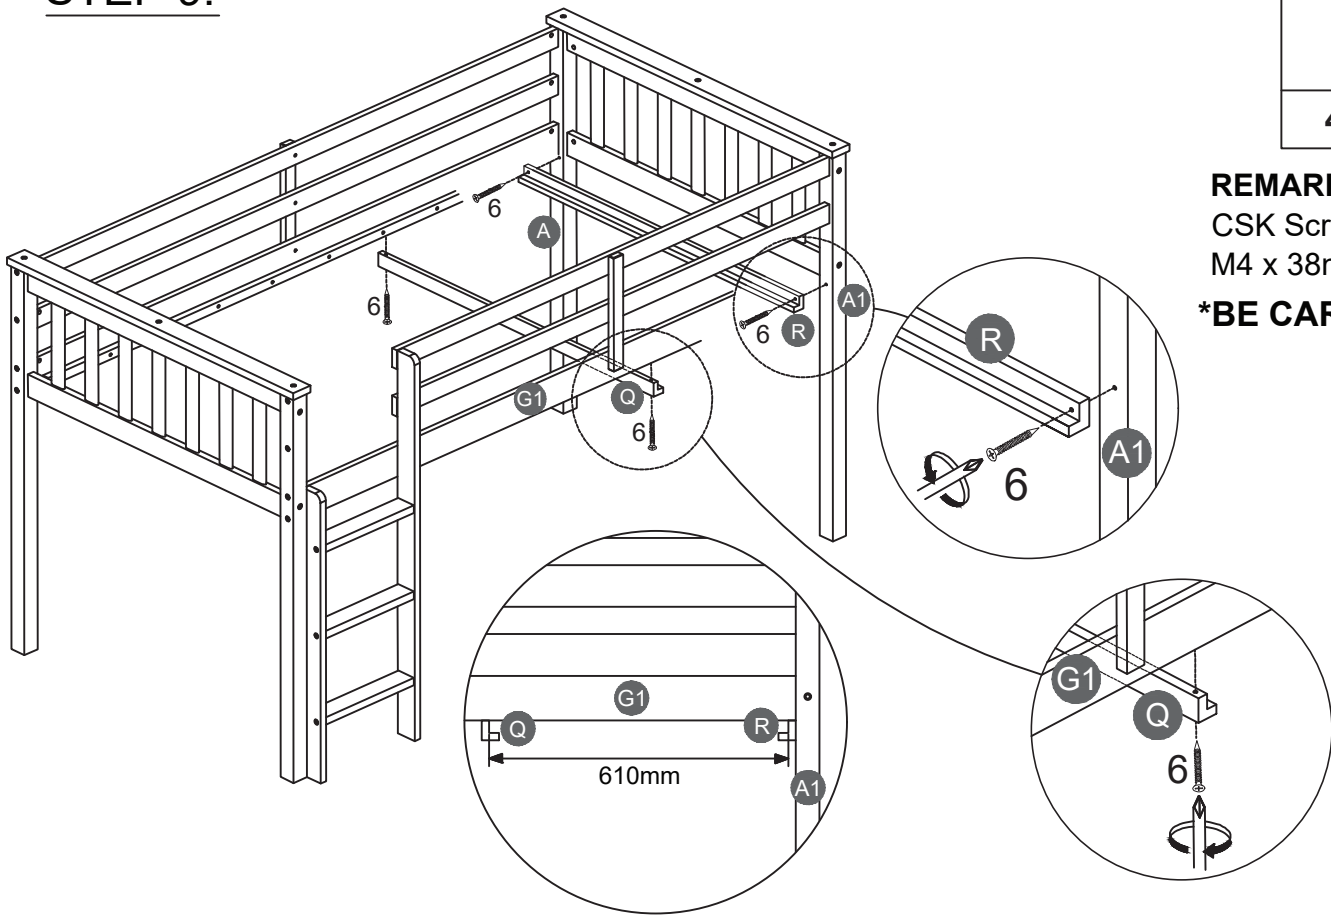


## STEP 10:


2



3PCS

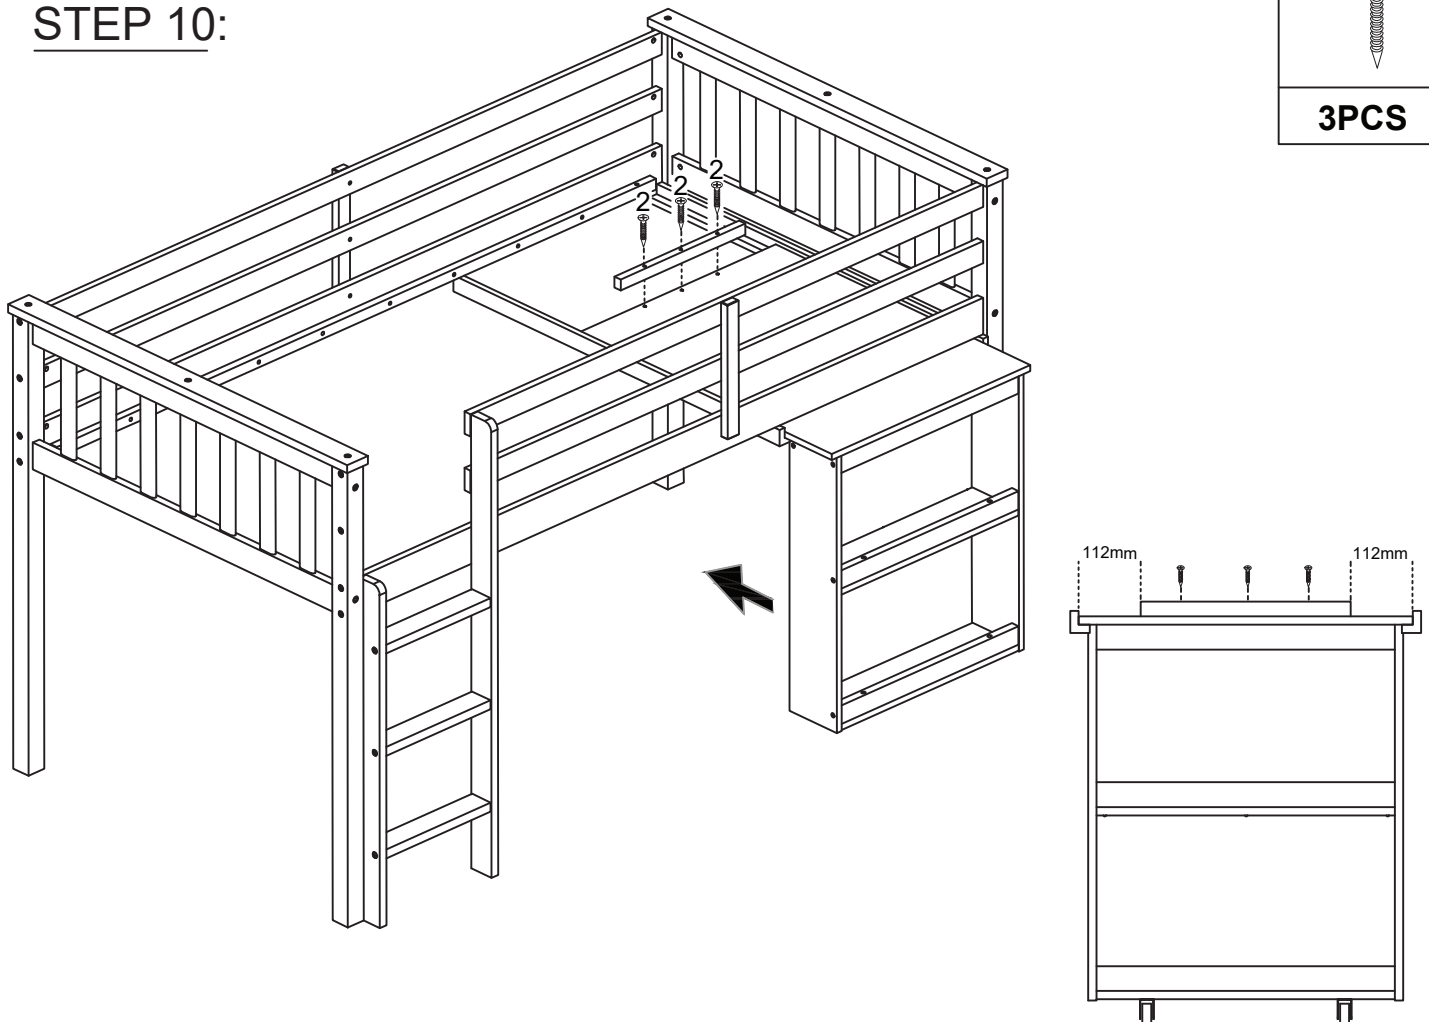

## STEP 11:

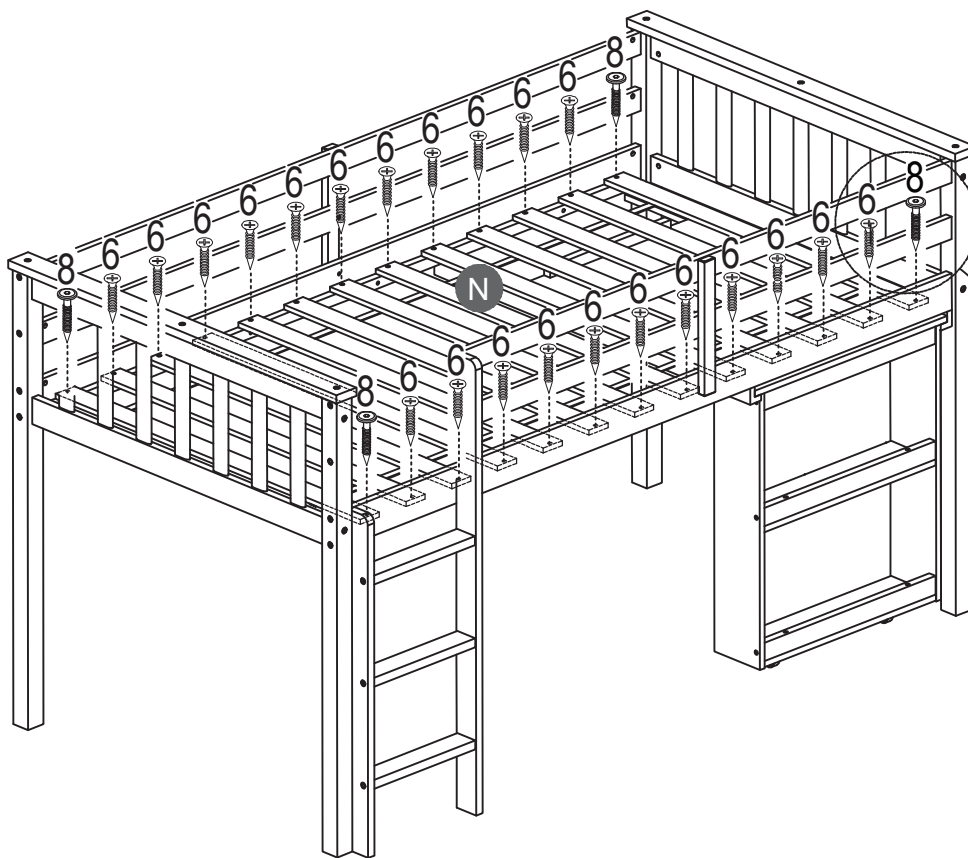

6



22PCS

8




4PCS


### REMARKS:

Get the  
CSK Screw M4 x 25mm (6)  
and JCBC-W M6 x 30mm (8)  
from the Bed Hardware (1/3).

**\*BE CAREFUL!**

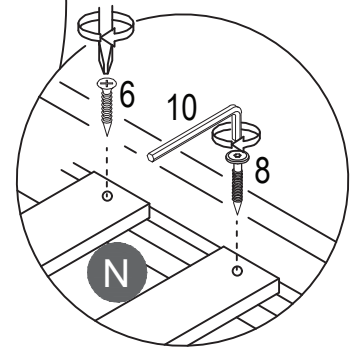


## STEP 12:

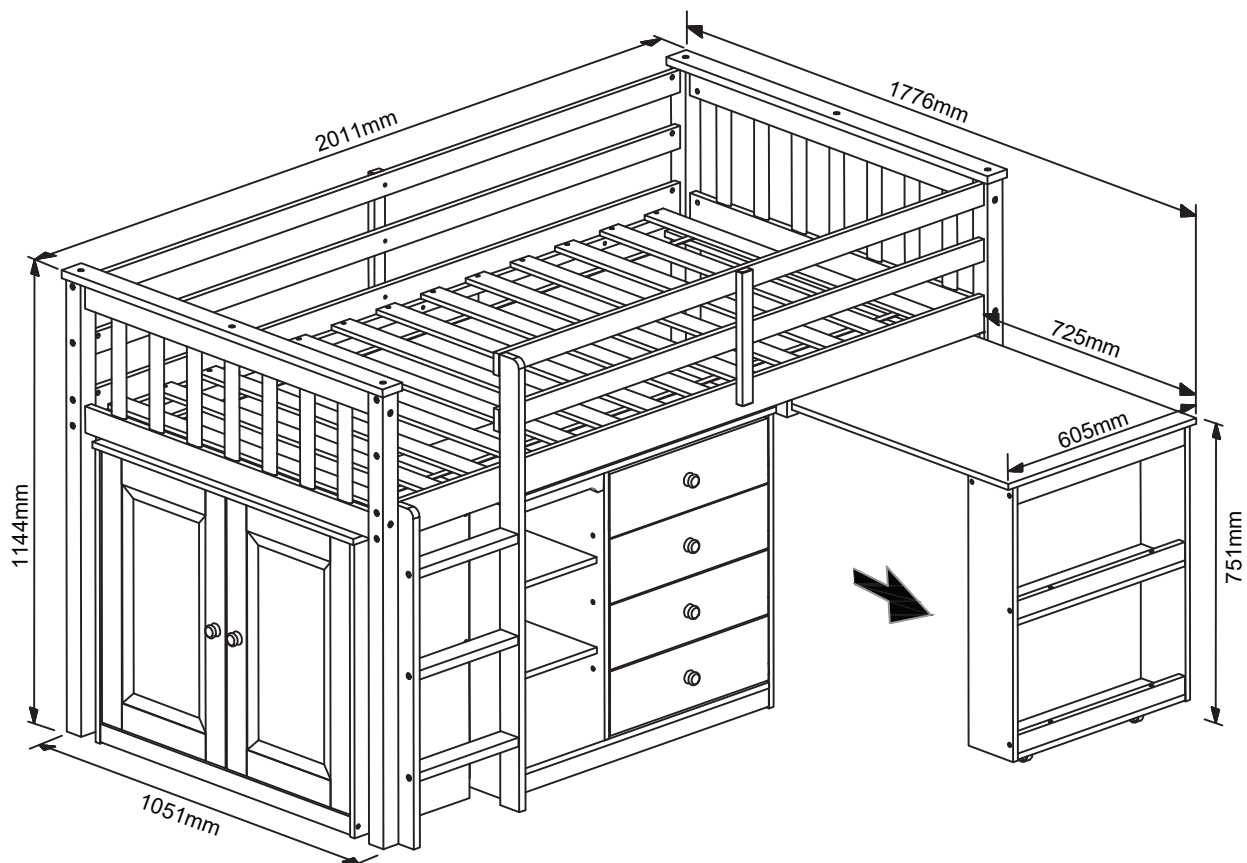

# ASSEMBLY INSTRUCTIONS


(CABINET)

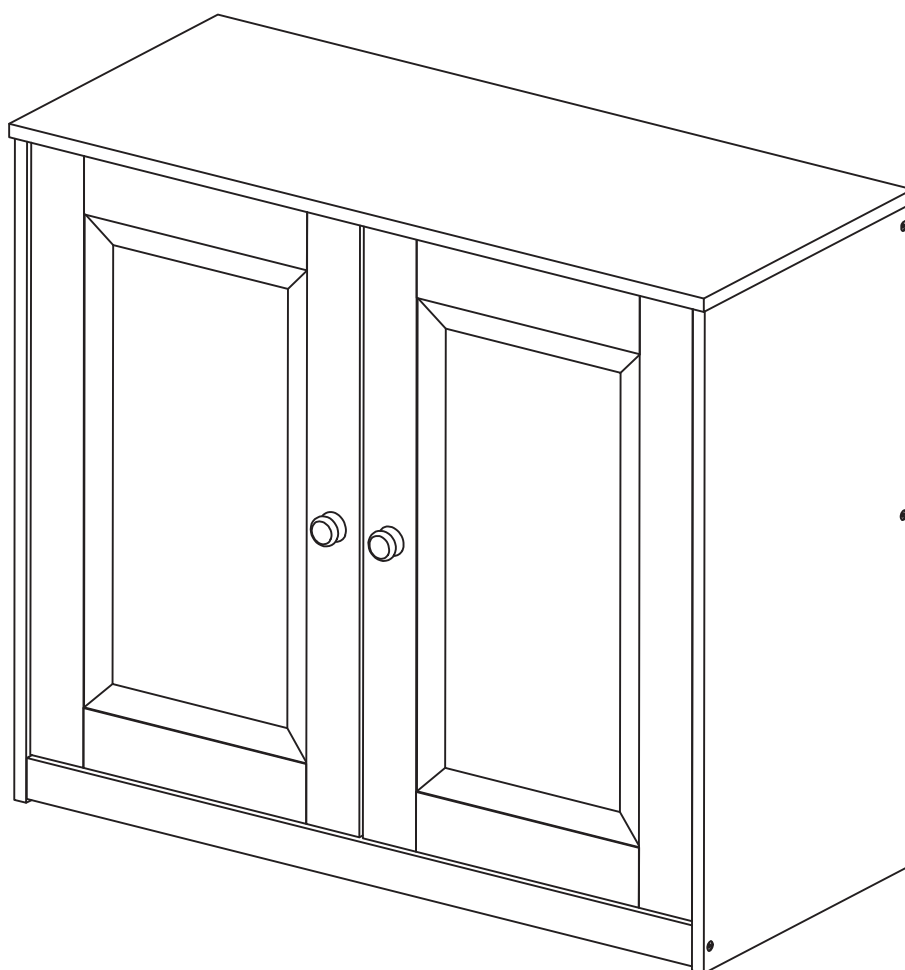

**MK 70087**

Detail View








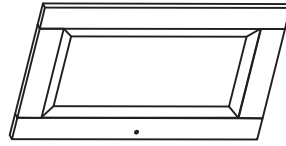
CABINET

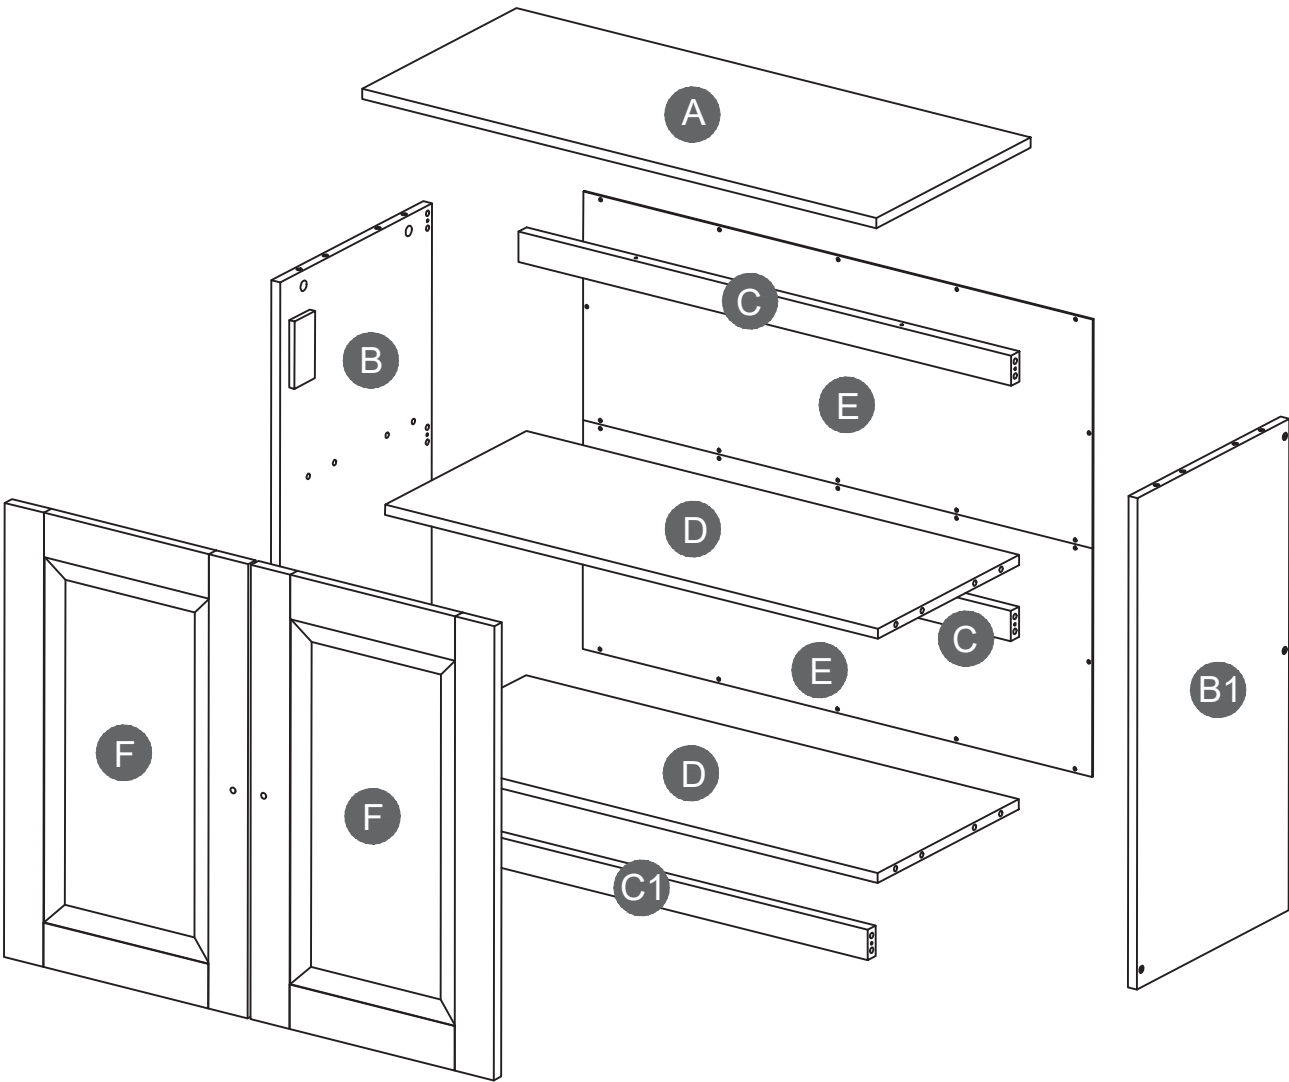













## Part List (Cabinet)


### Hardware List MK 70087 (3/3)

<b>A</b>  Top Panel - 1pc	<b>B</b>  Side Panel (Left) - 1pc
<b>B1</b>  Side Panel (Right) - 1pc	<b>C</b>  Support Rail - 2pcs
<b>C1</b>  Support Rail - 1pc	<b>D</b>  Shelf Panel - 2pcs
<b>E</b>  Back Panel - 2pcs	<b>F</b>  Door Panel - 2pcs

# Hardware List (Cabinet)

1	 M8 x 30mm Wood Dowel (24pcs)	2	 M4 x 32mm CSK Screw (10pcs)	3	 Connecting Bolt (12pcs)
4	 Minifix Housing (Long) (12pcs)	5	 M3.5 x 16mm Pan Head Screw (24pcs)	6	 M4 x 16mm CSK Screw (24pcs)
7	 Hinges (4pcs)	8	 Sticker Cap (6pcs)	9	 M4 x 25mm Handle Screw (2pcs)
10	 Handle (2pcs)				

## ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )




**PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !**

## STEP 1:

1



20PCS

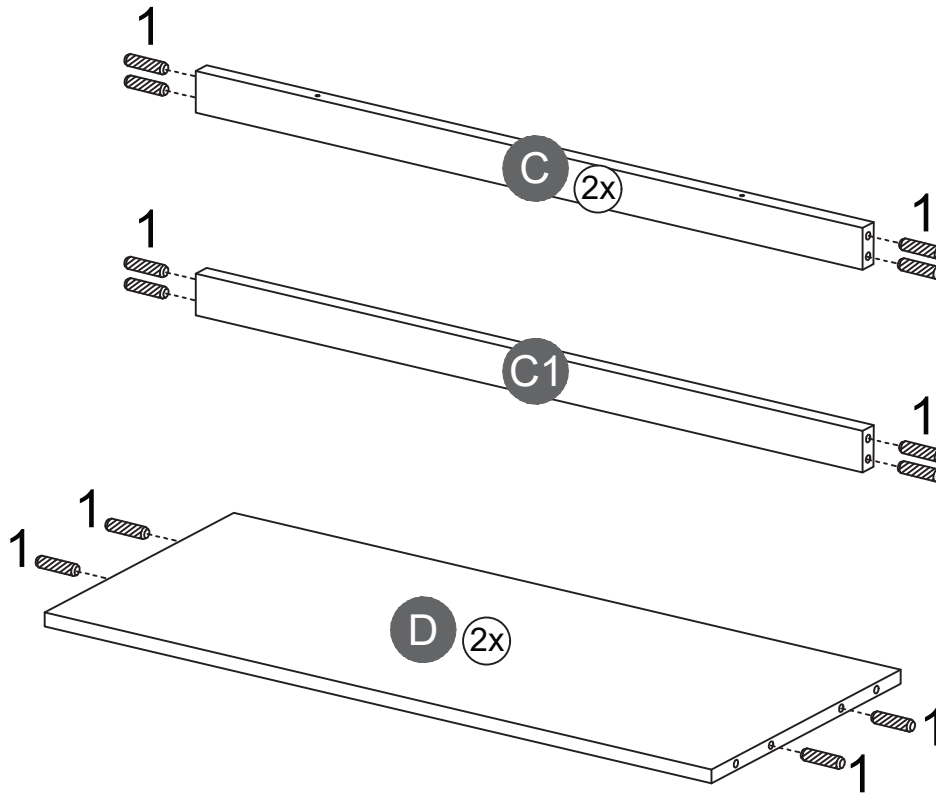


## STEP 2:


3



12PCS

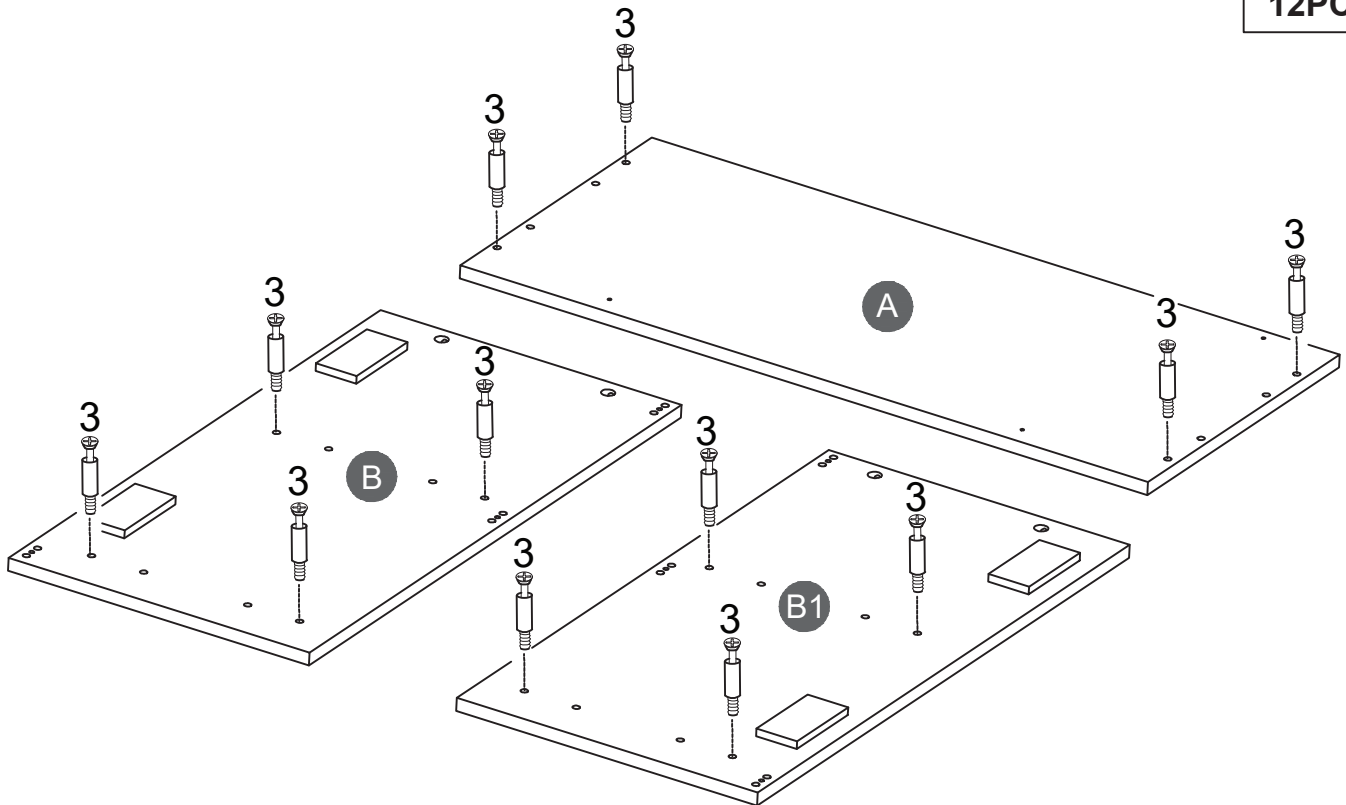

## STEP 3:

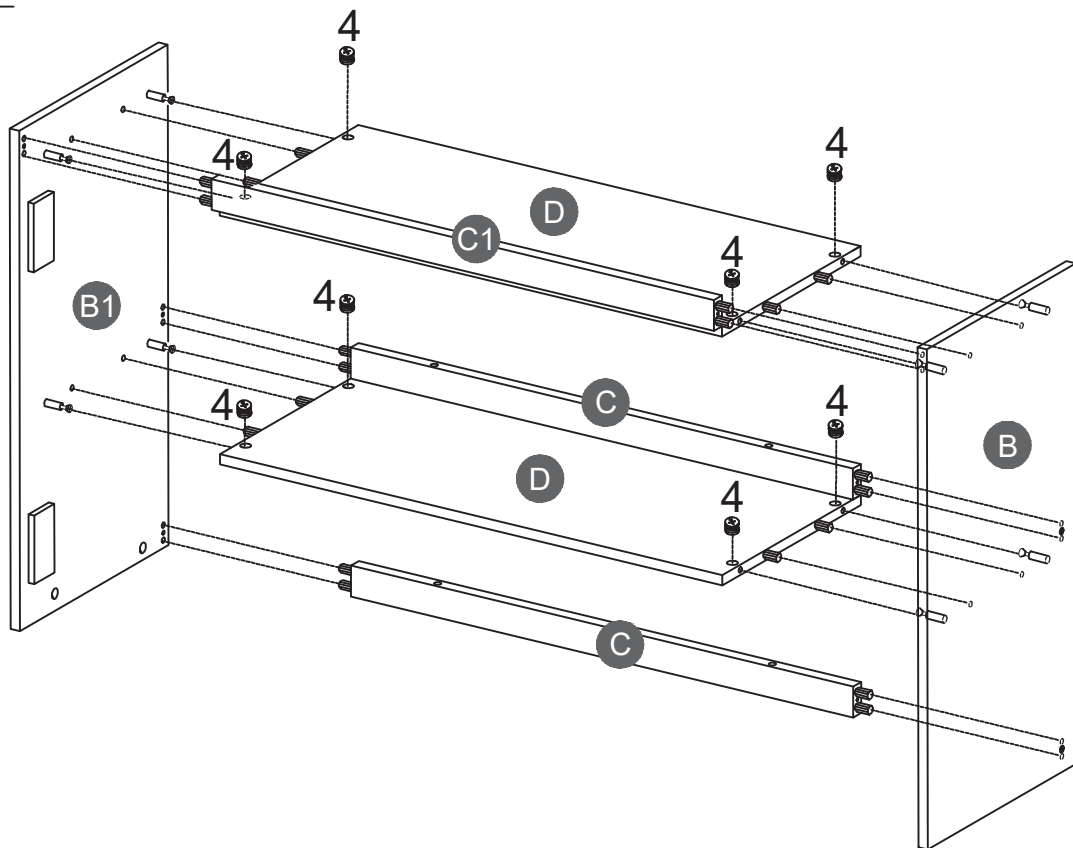


4



8PCS

## STEP 4:

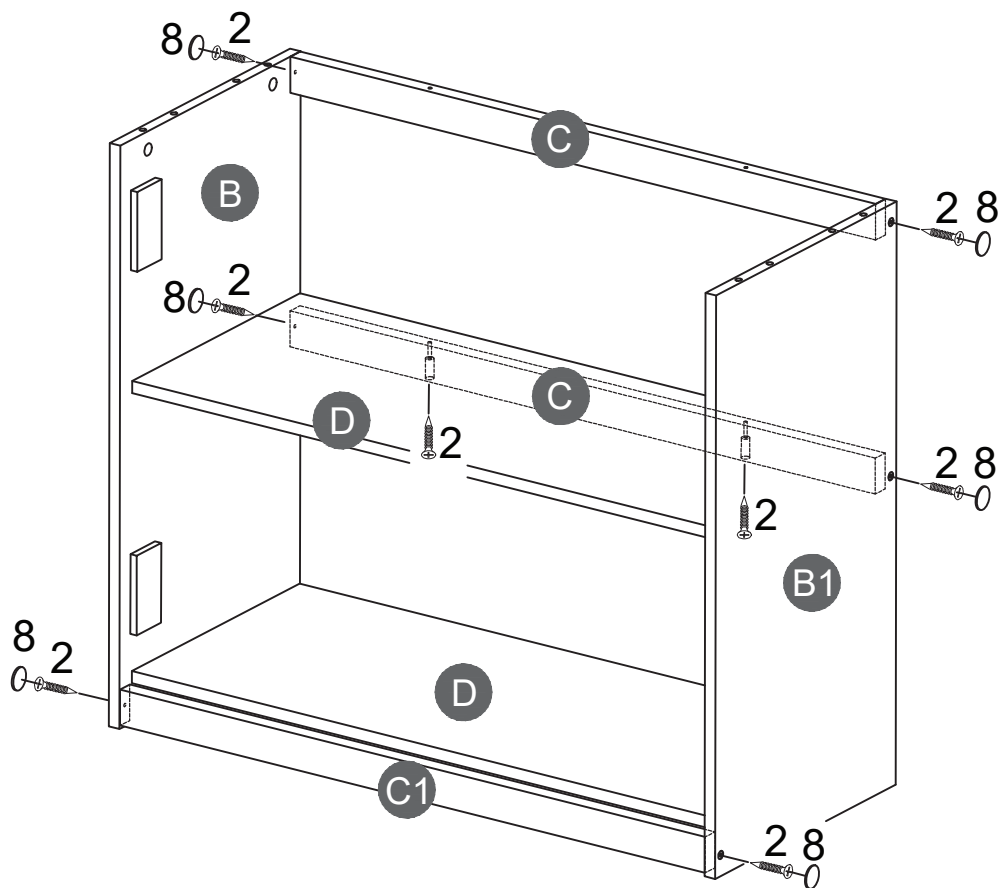

2




8PCS


8



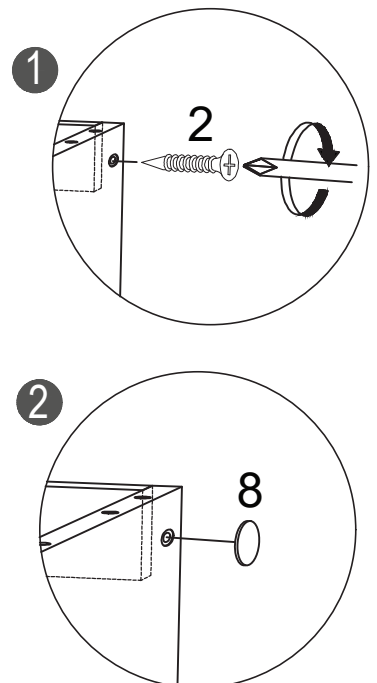

6PCS

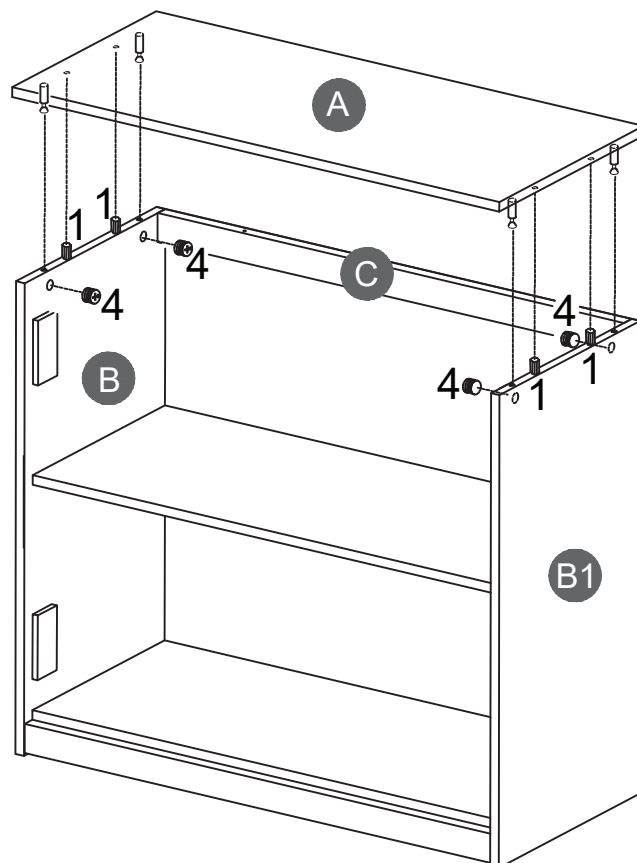



STEP 5:



1		4	
4PCS		4PCS	

STEP 6:

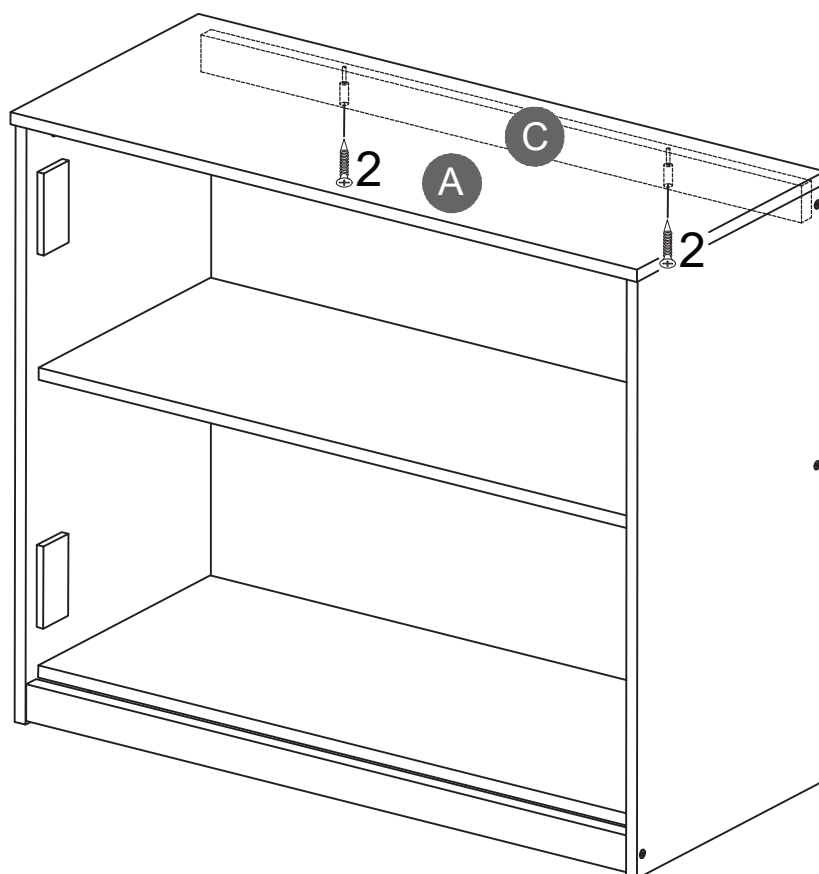


2	
2PCS	

## STEP 7:

5



24PCS

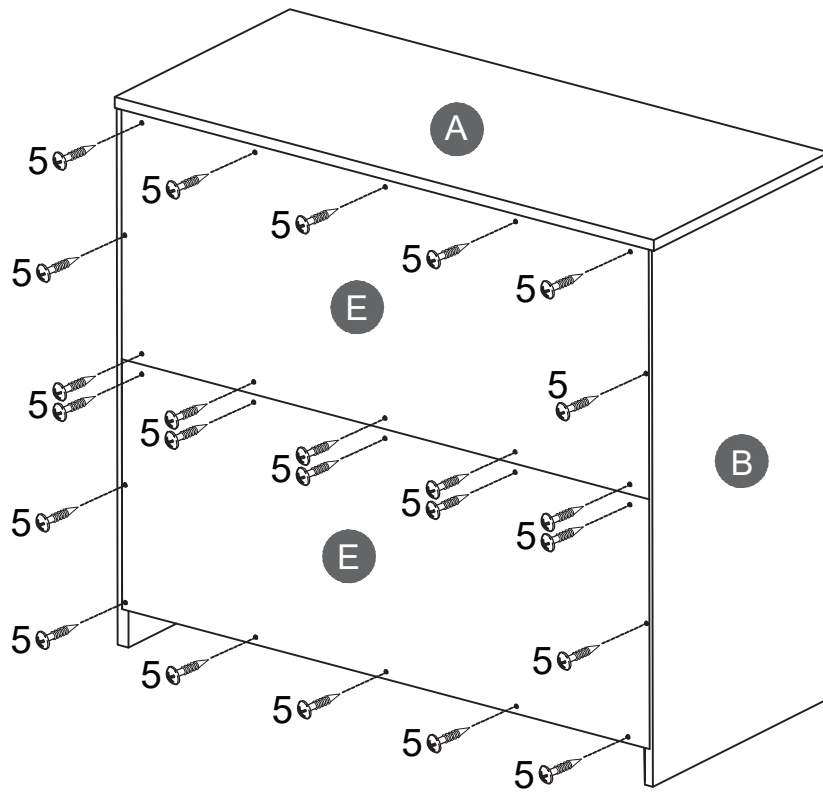


## STEP 8:

6



24PCS

7



4PCS

9





2PCS

10



2PCS

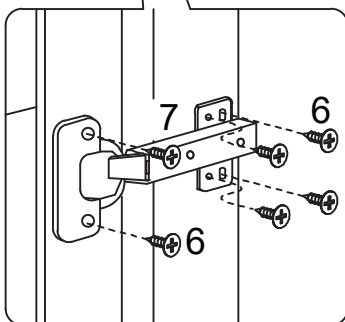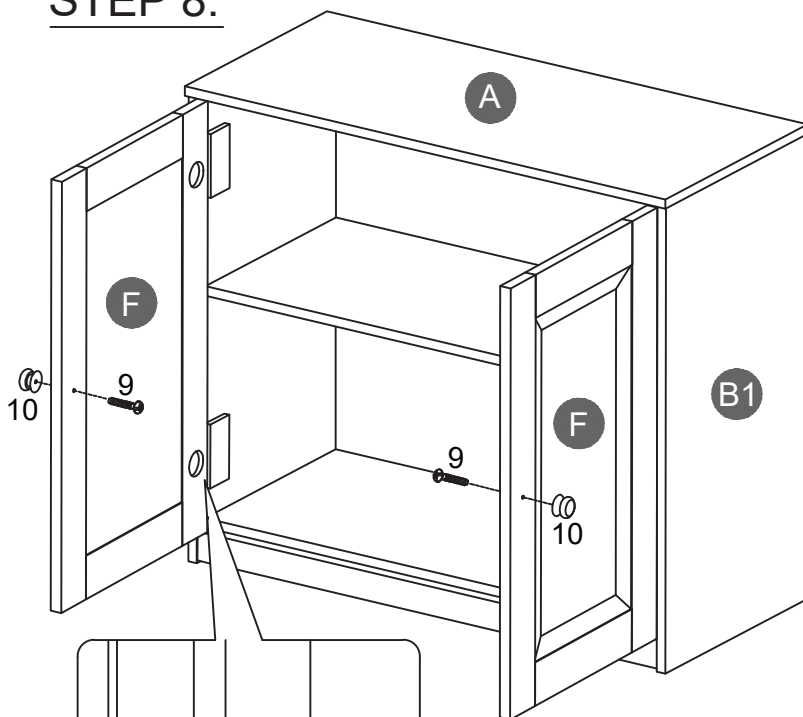

x 4

