
Bathroom Cabinet

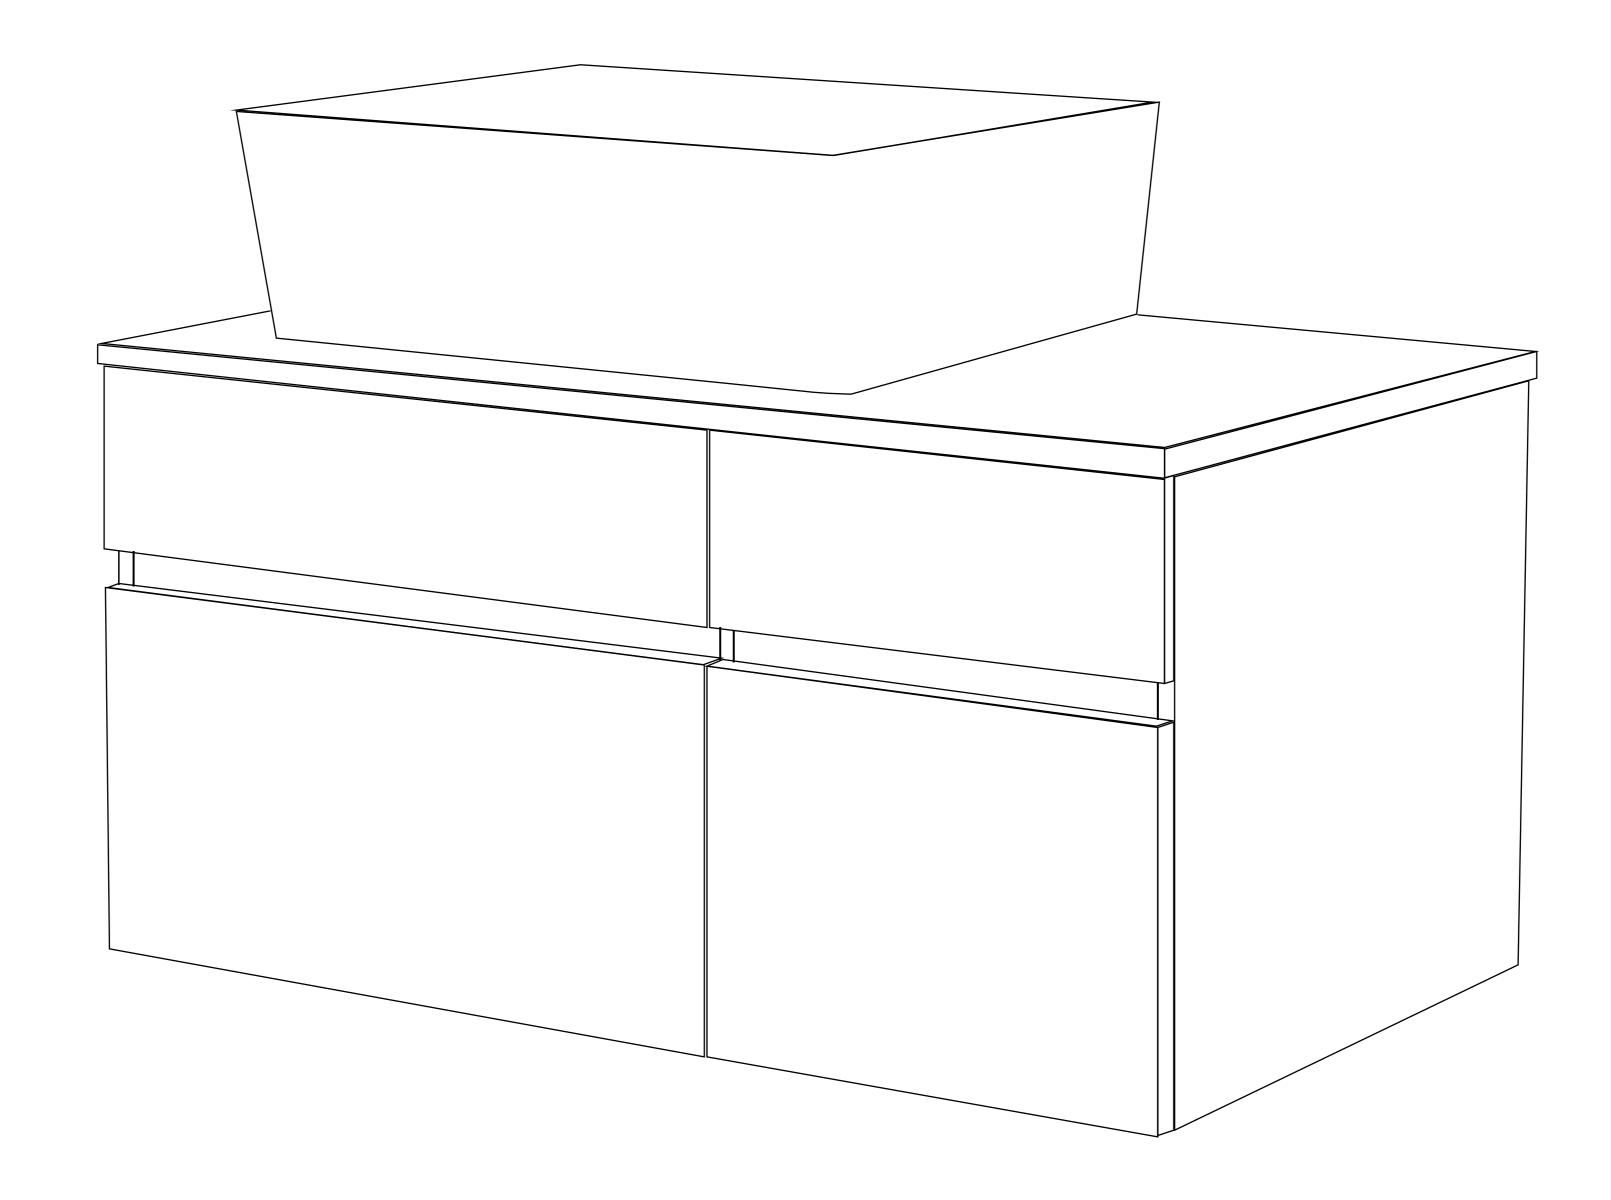





L800*W380*H530mm


Installation Instructions


Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.

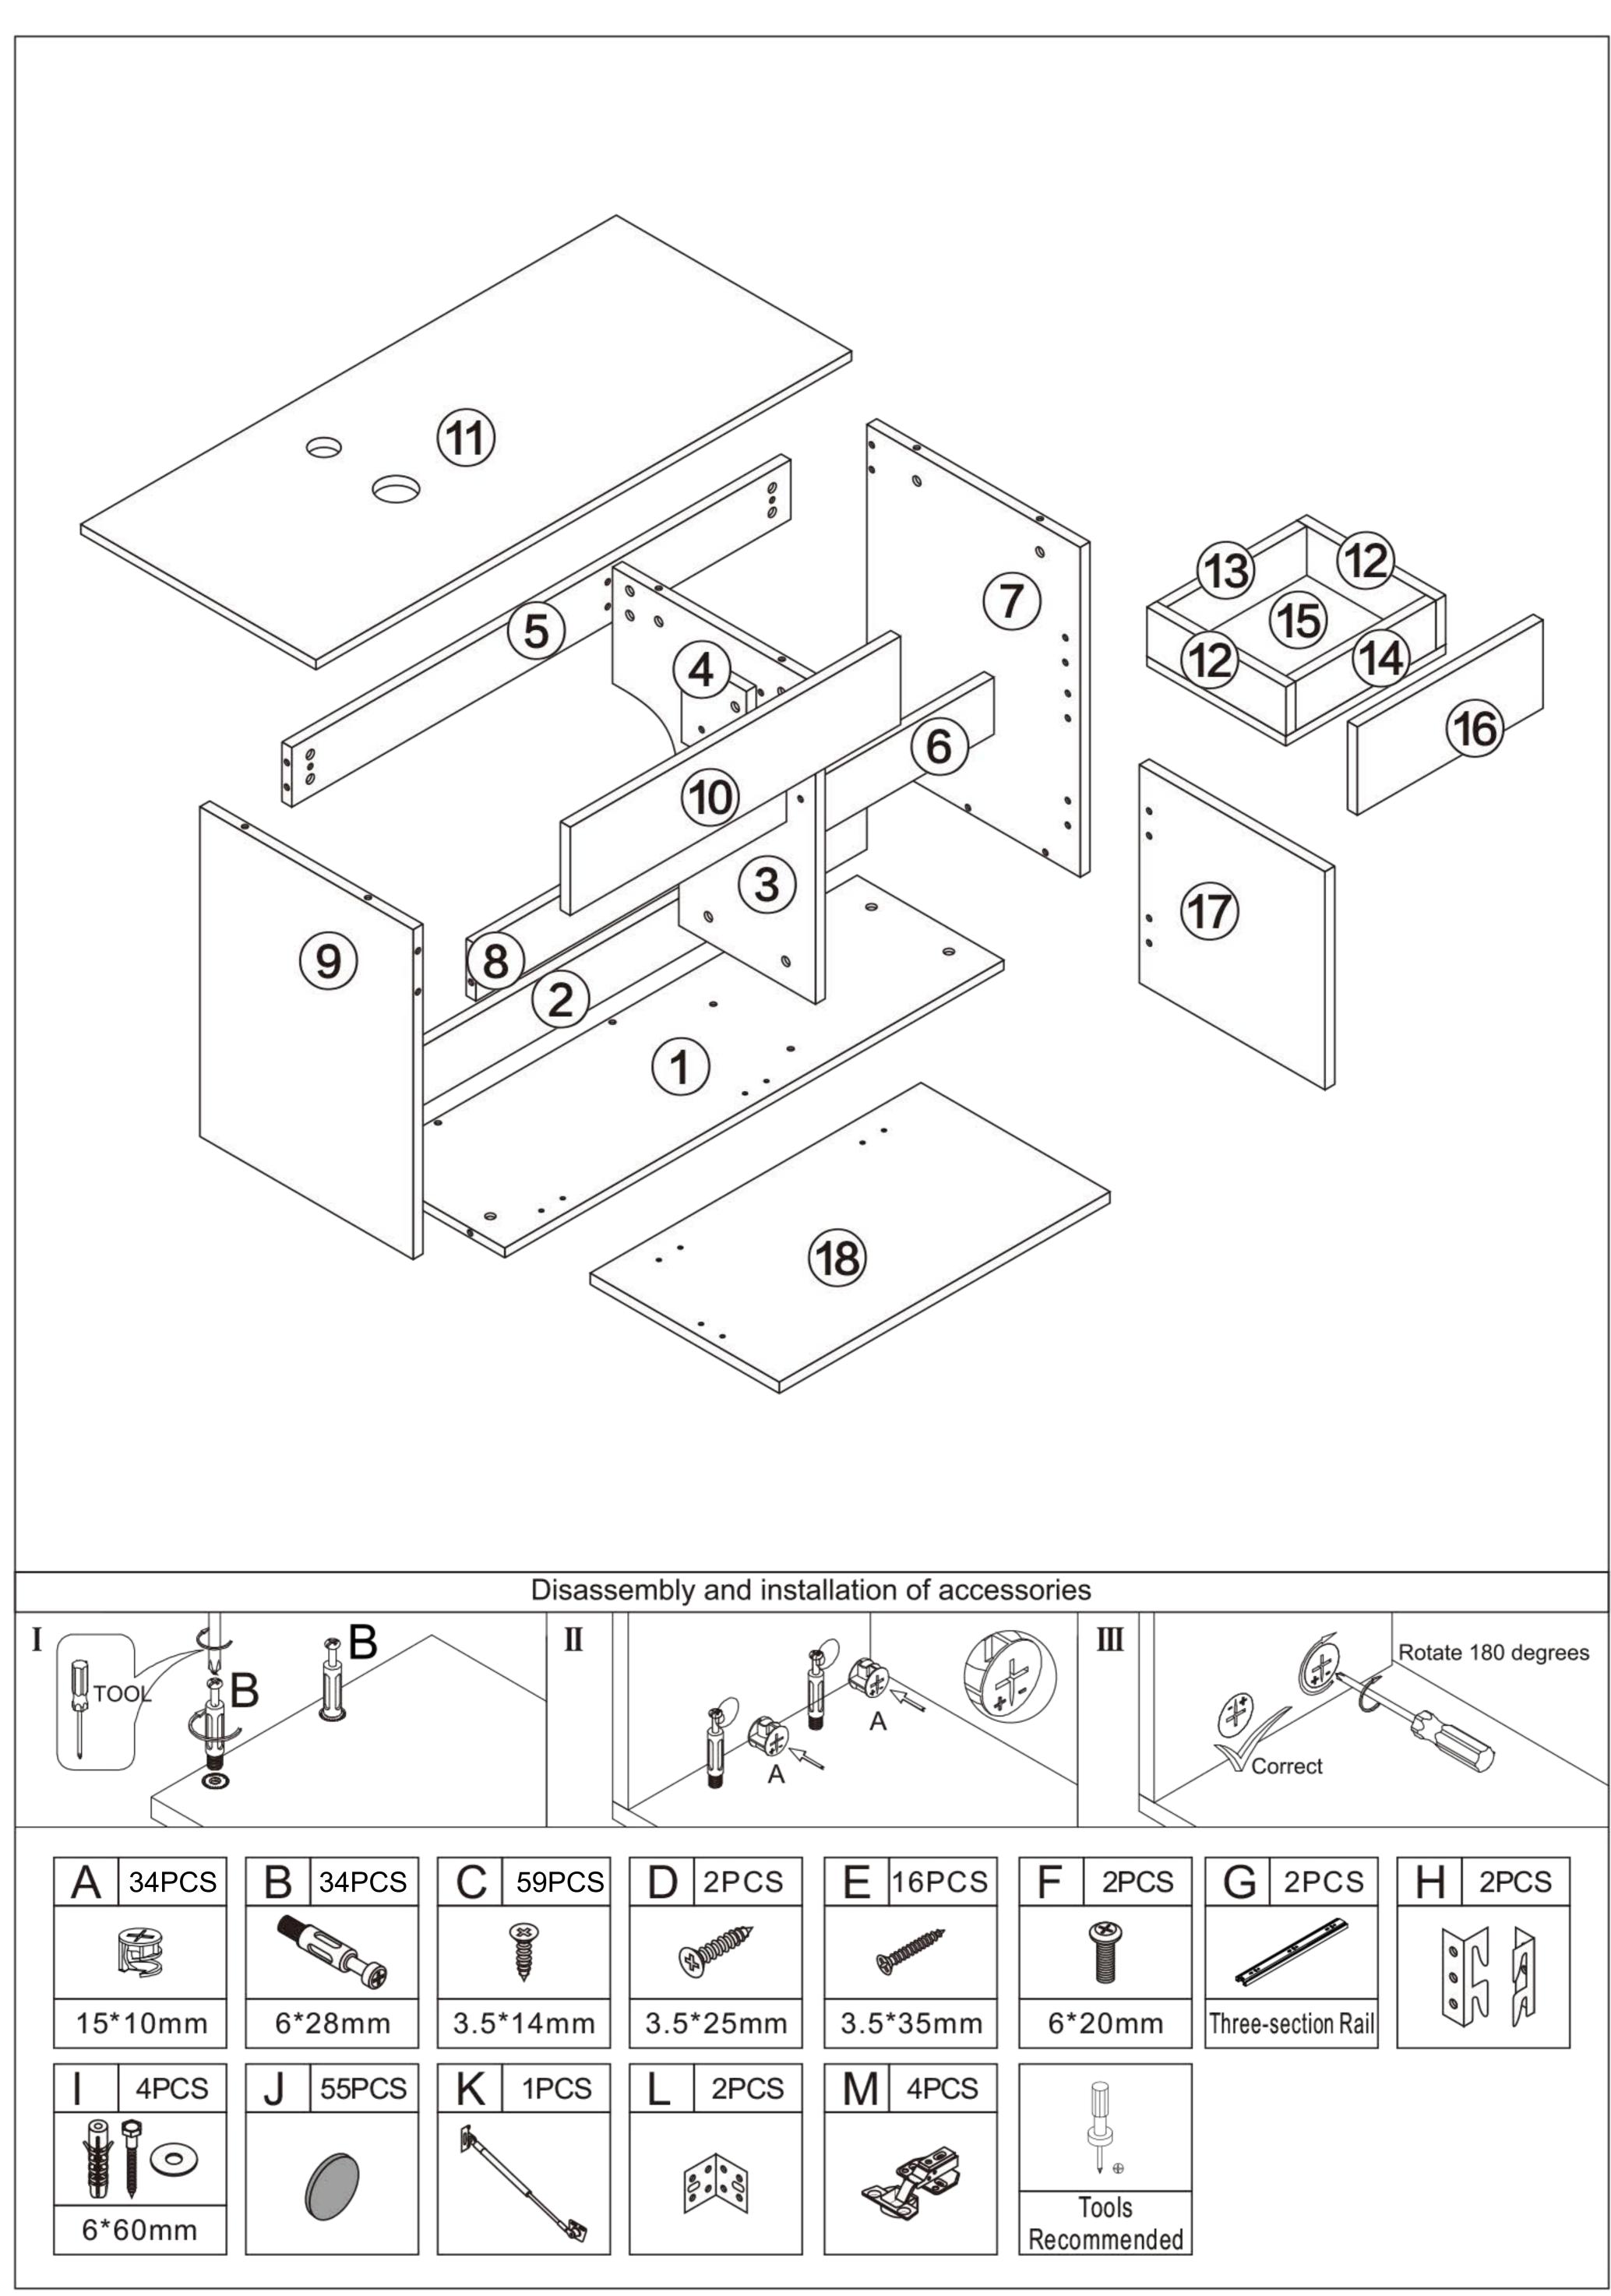



1 Pages

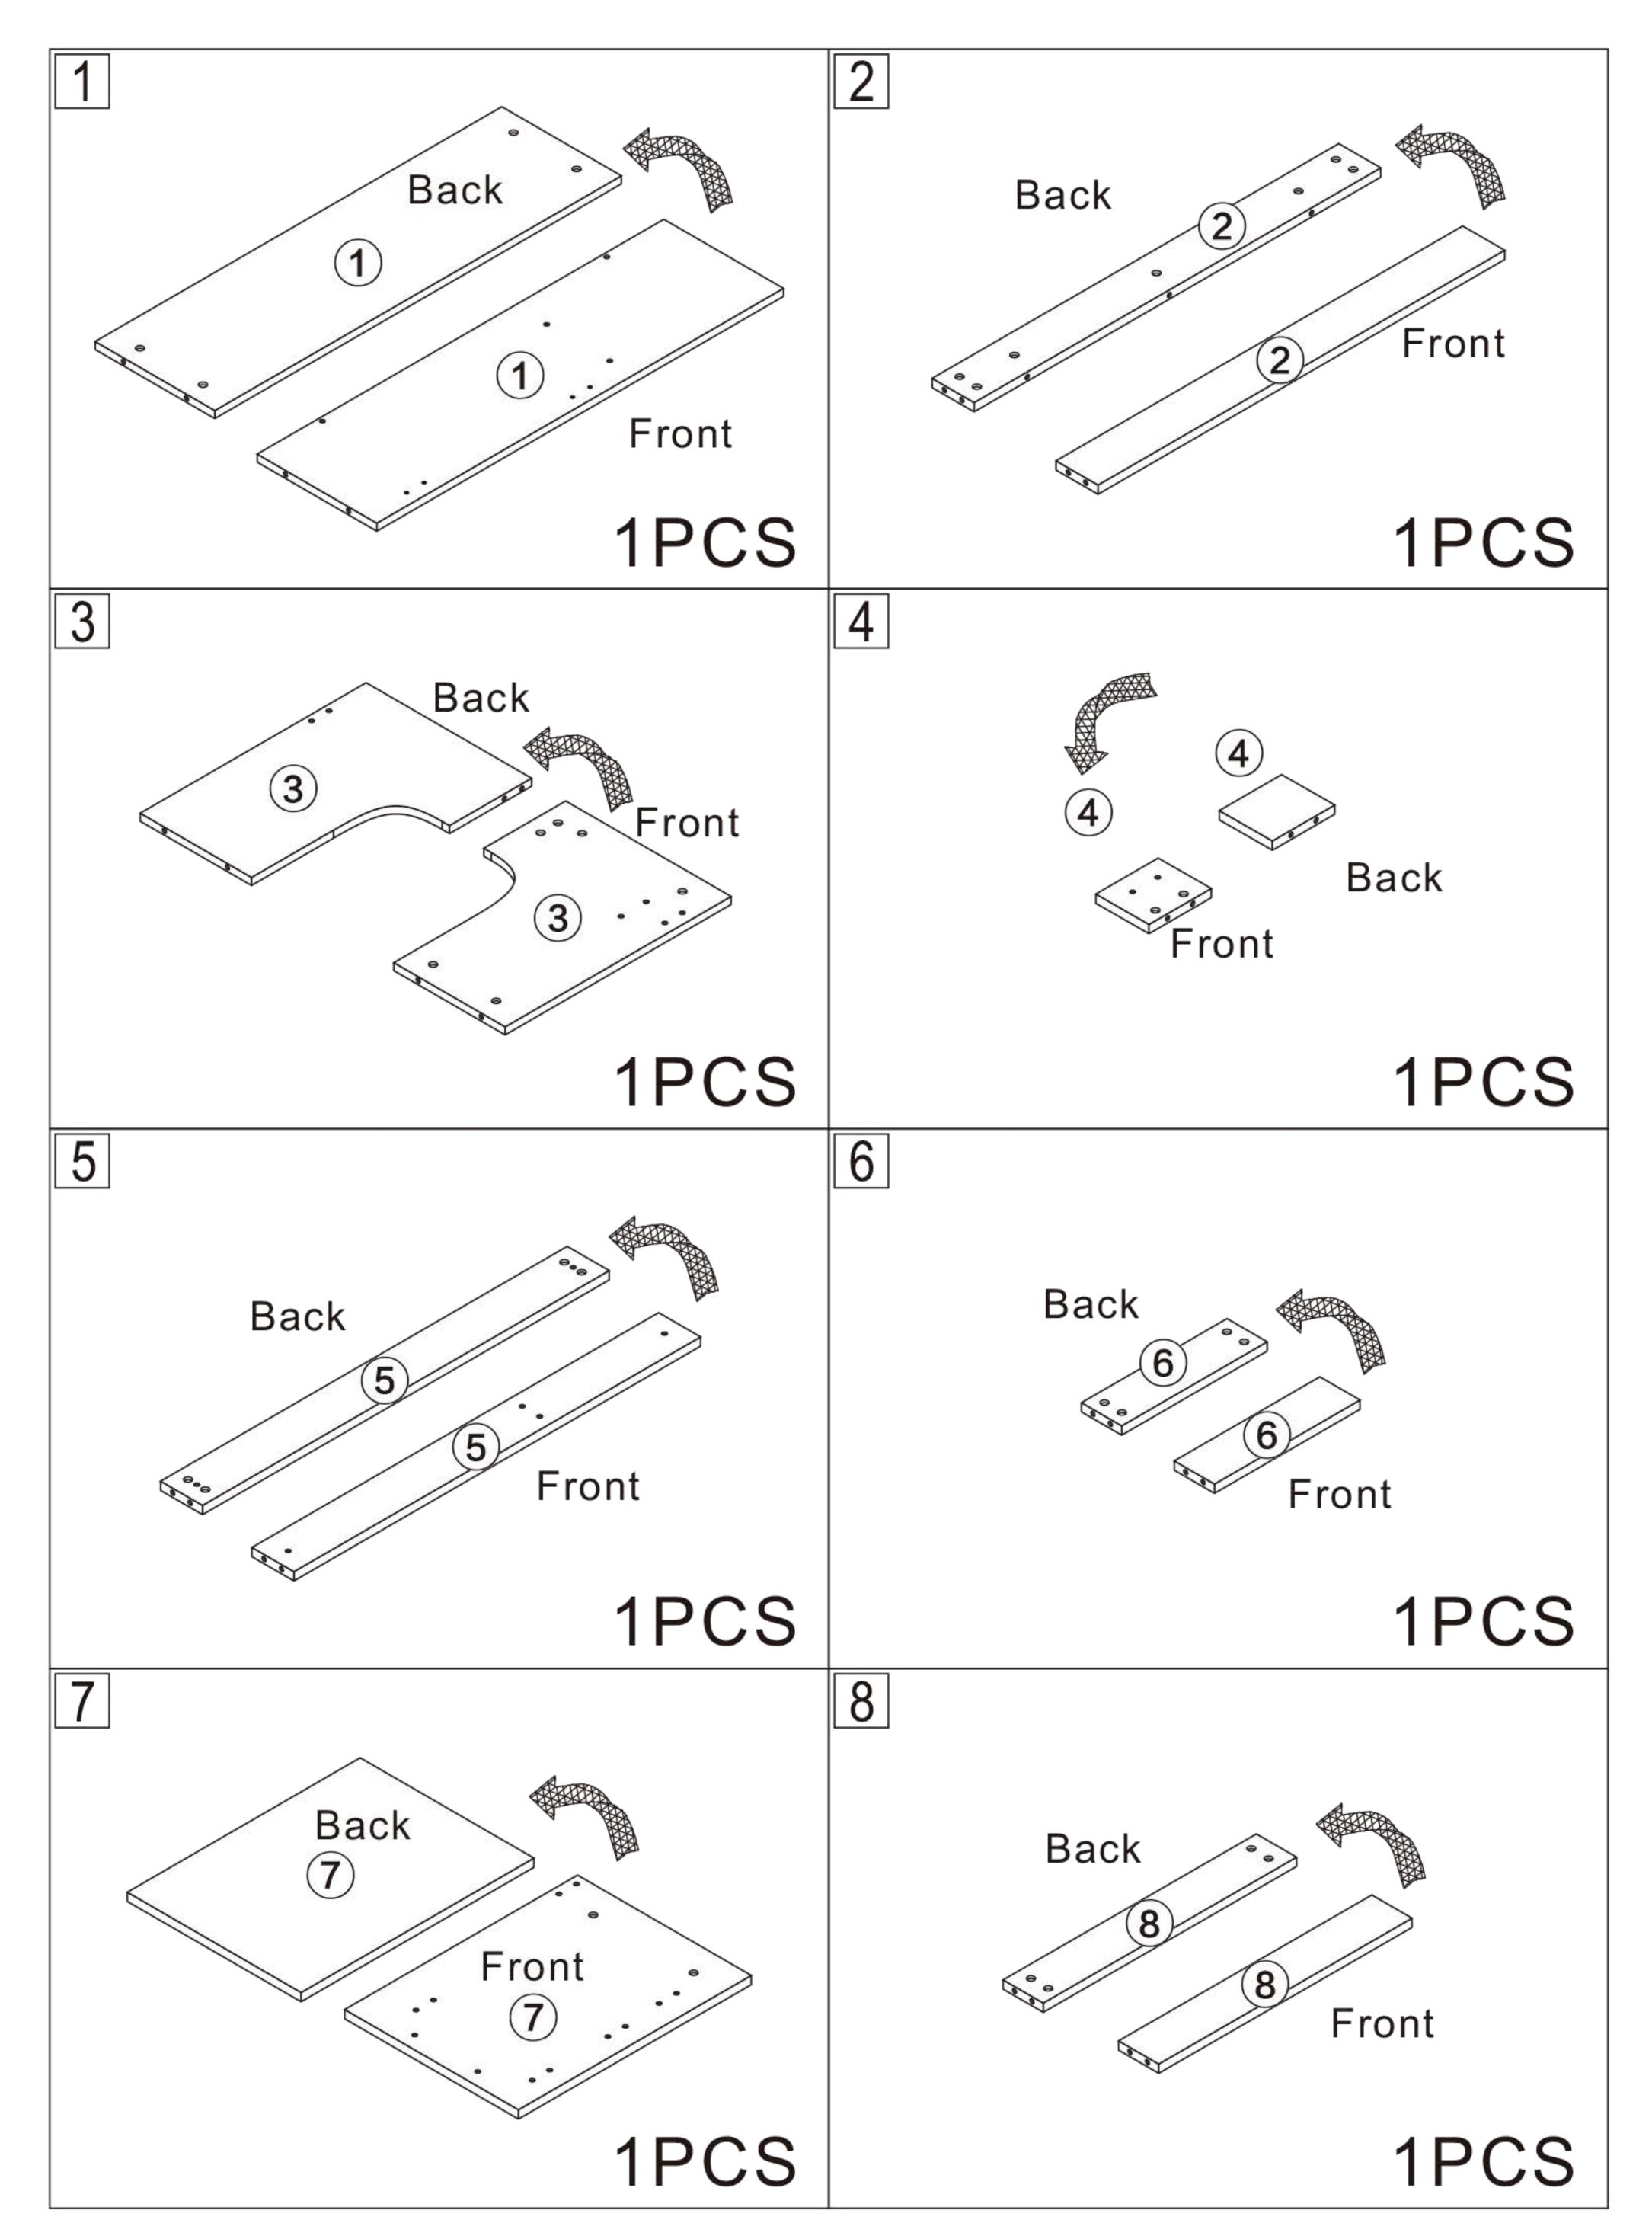


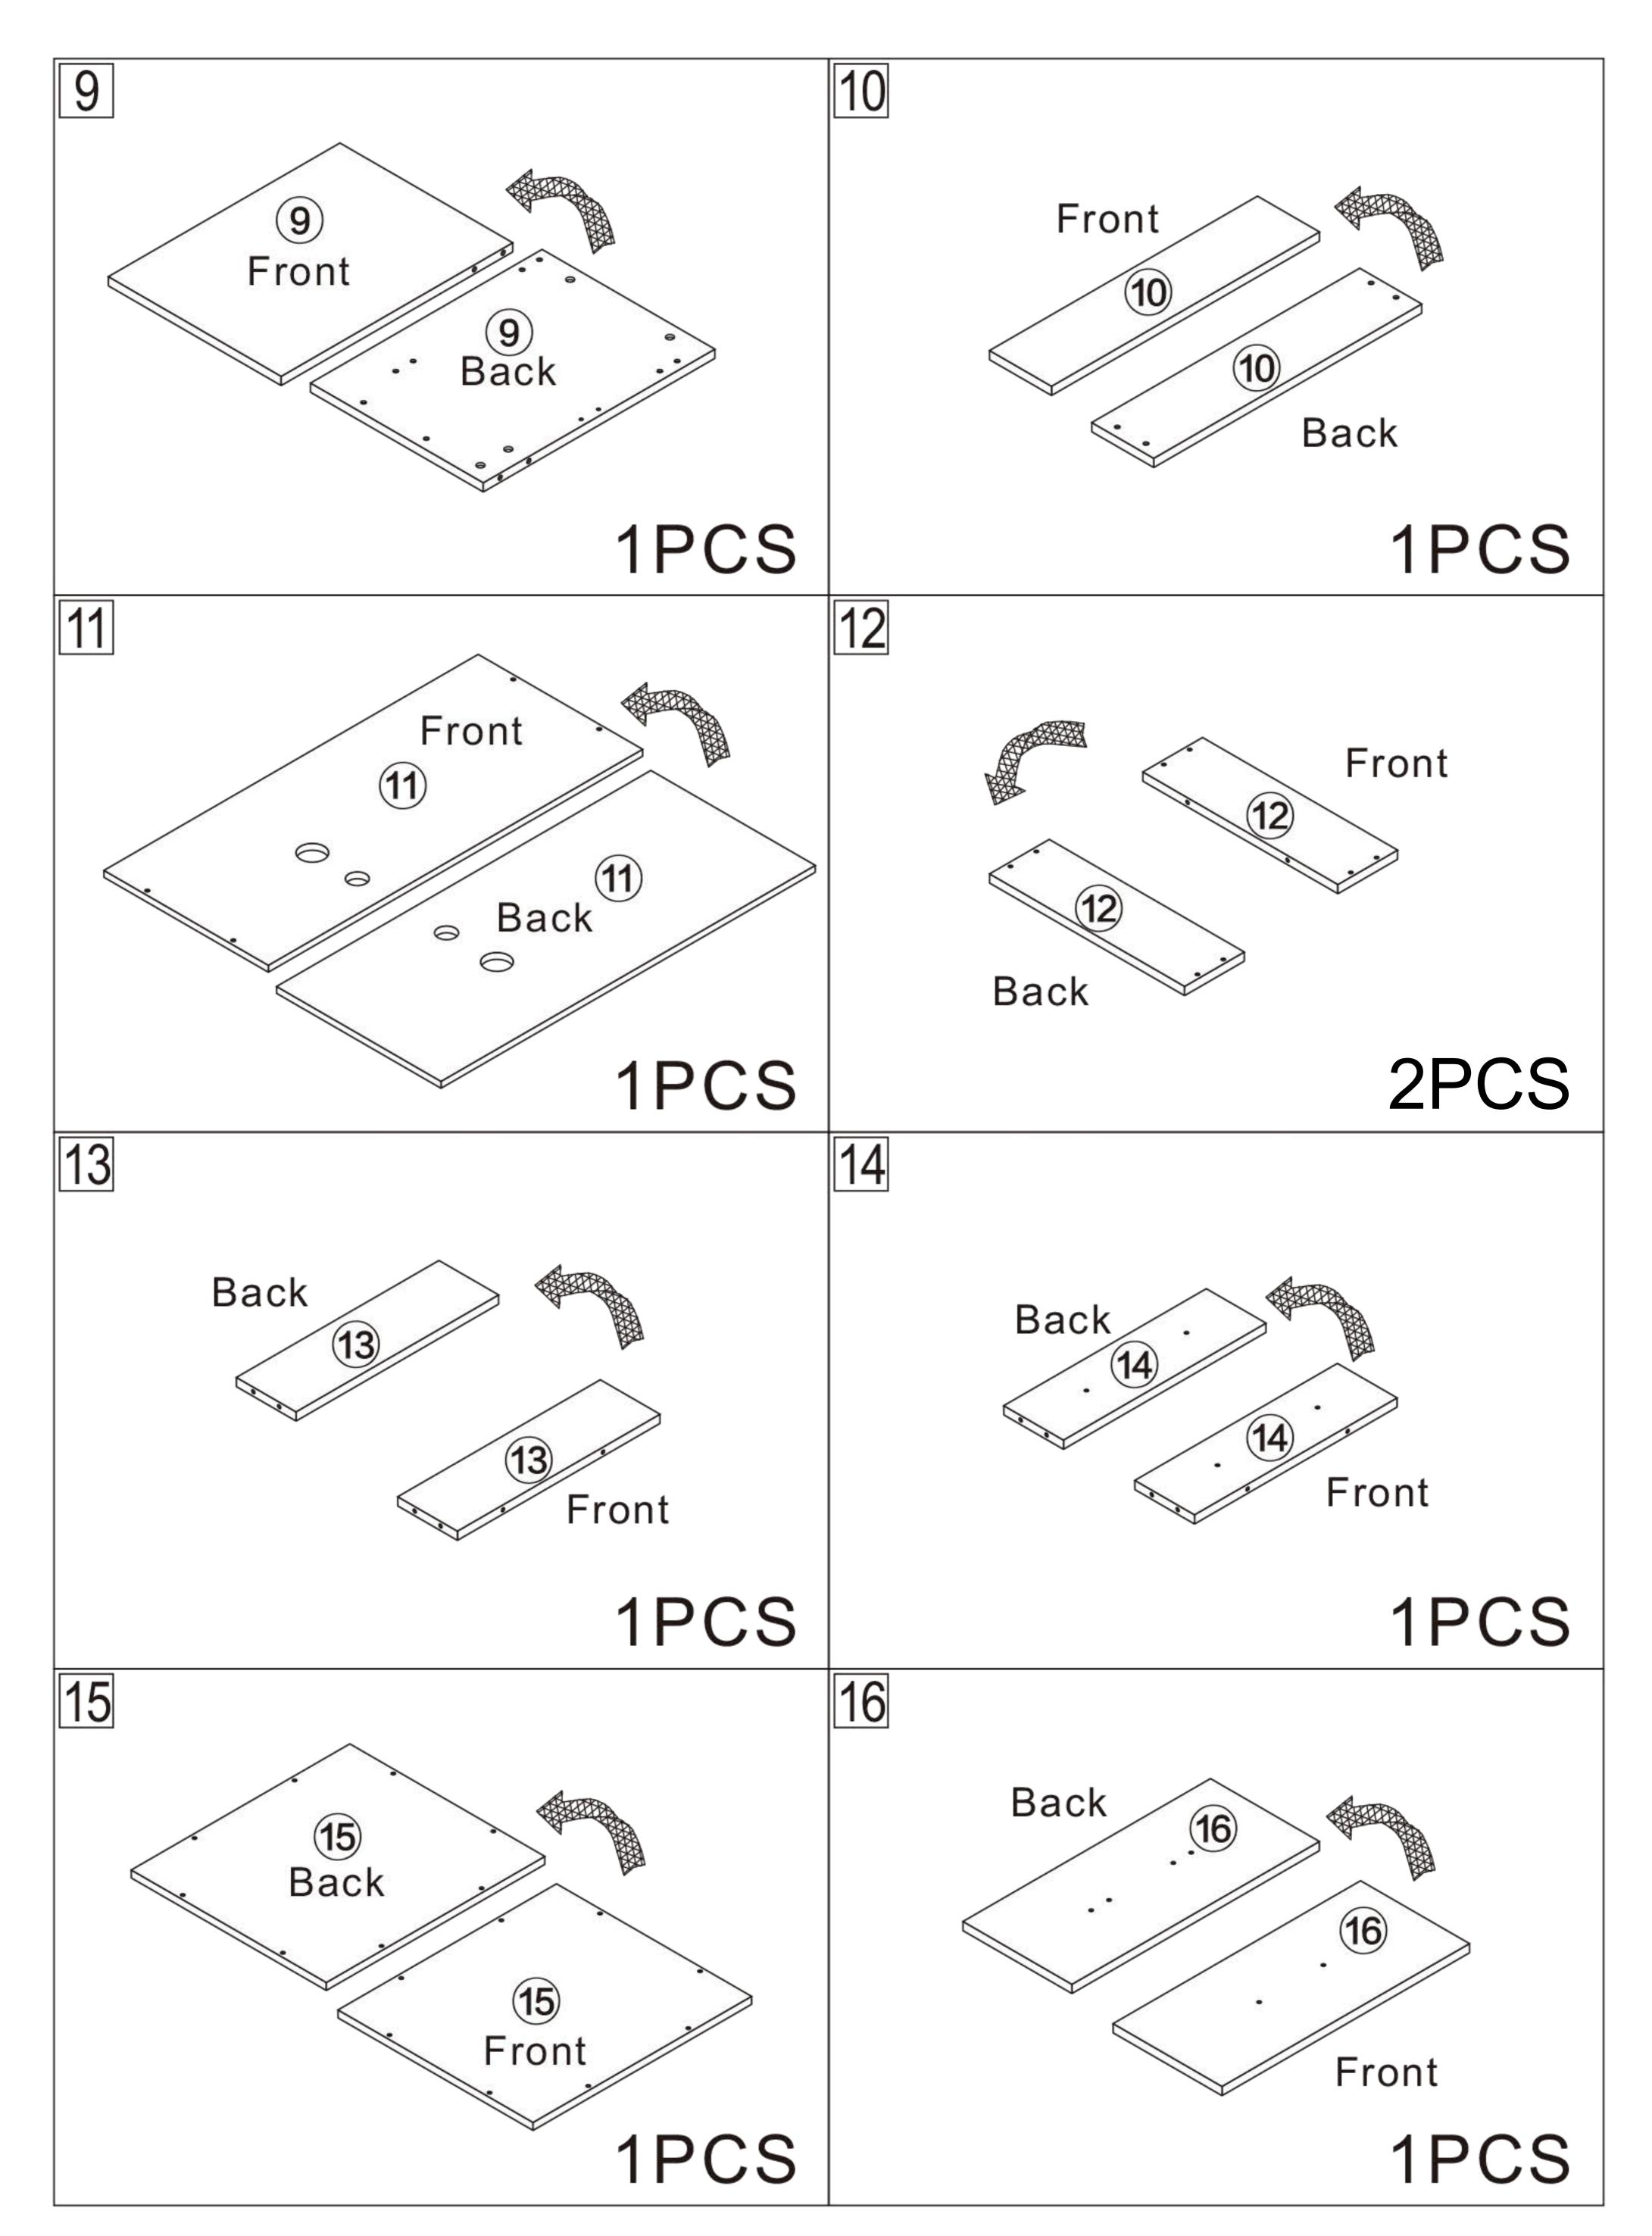


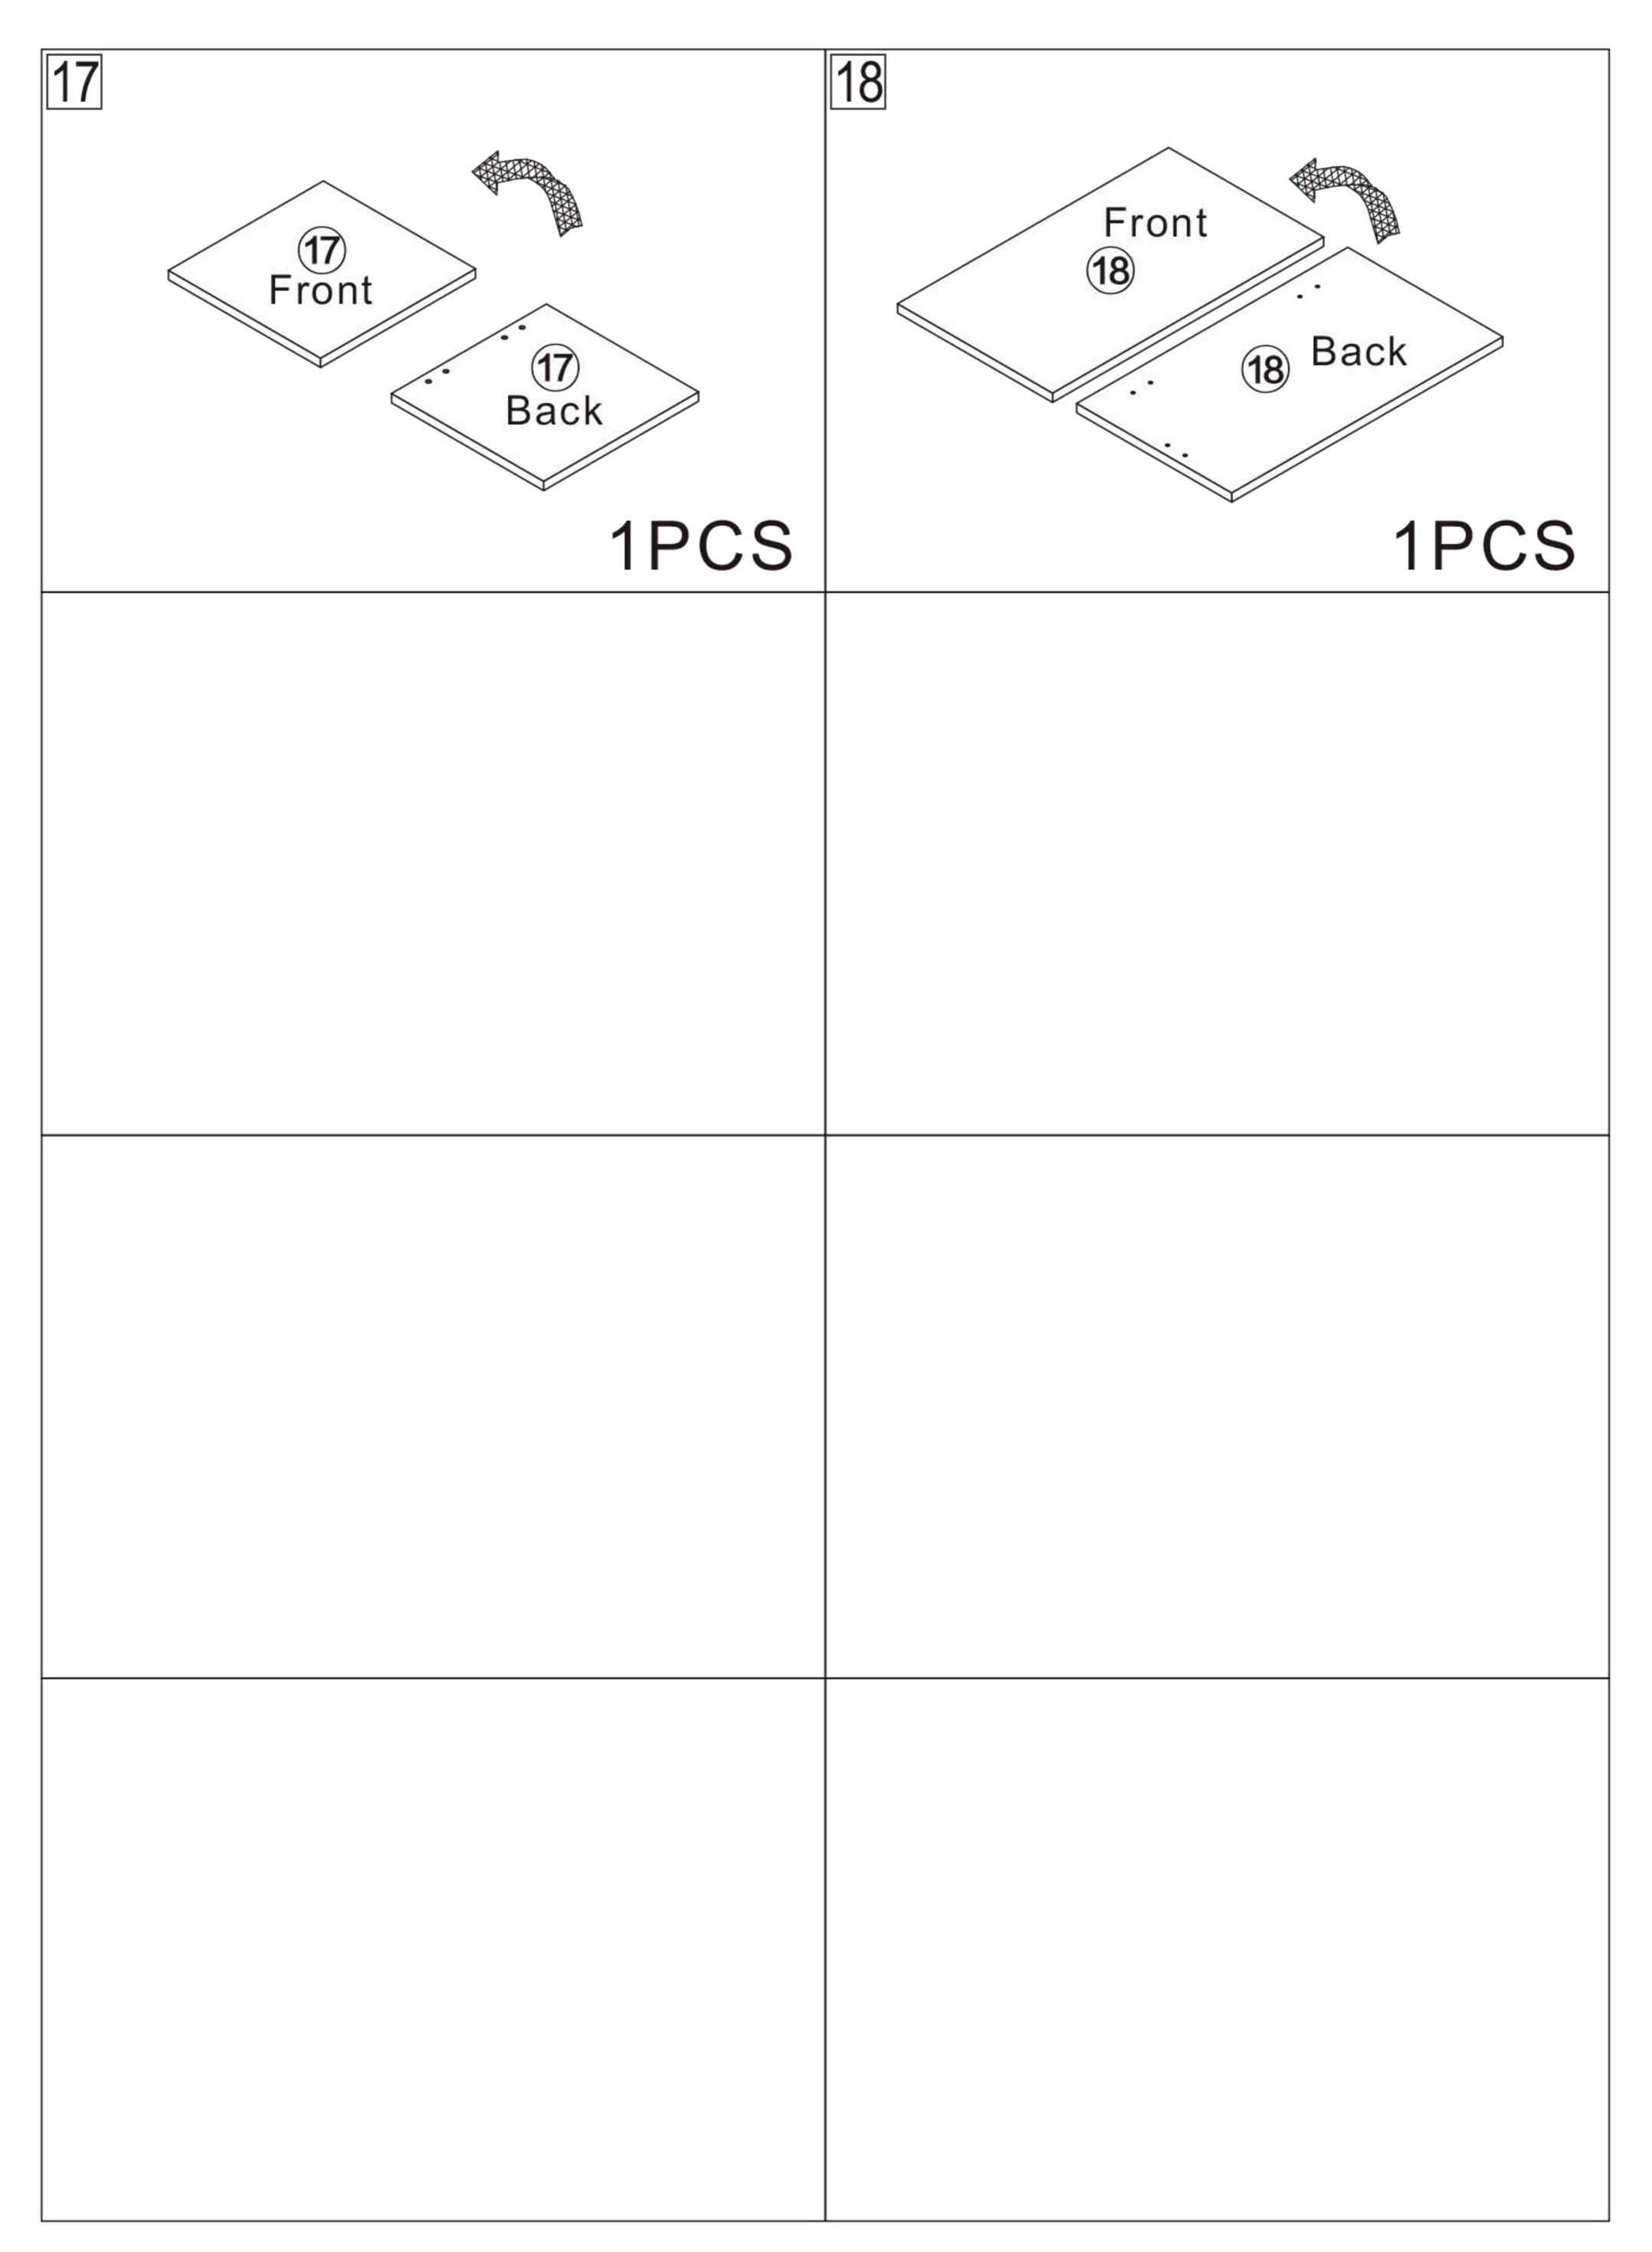


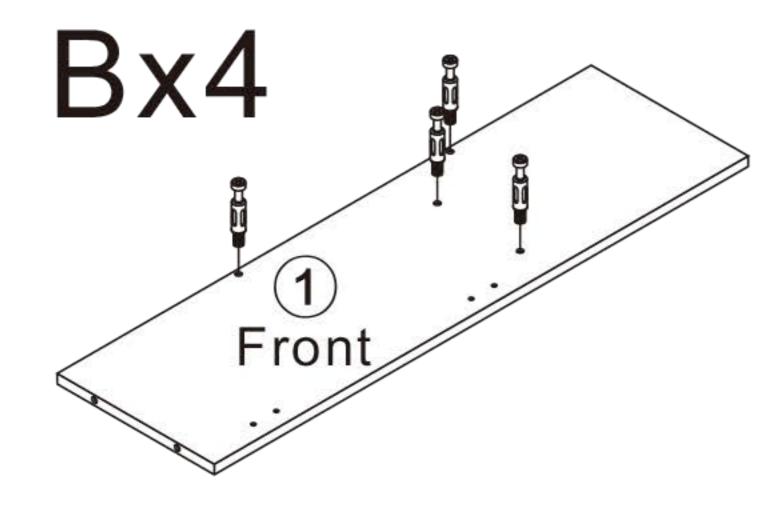


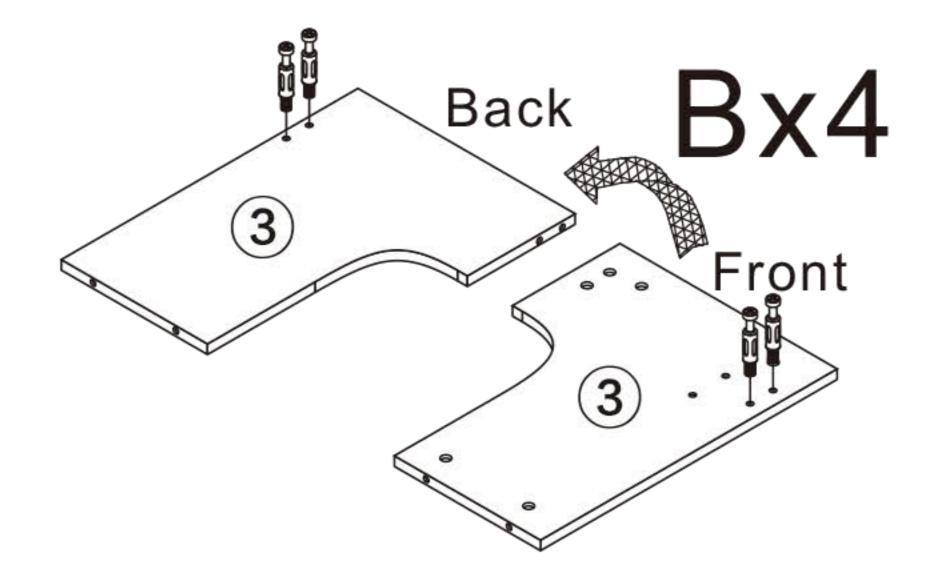


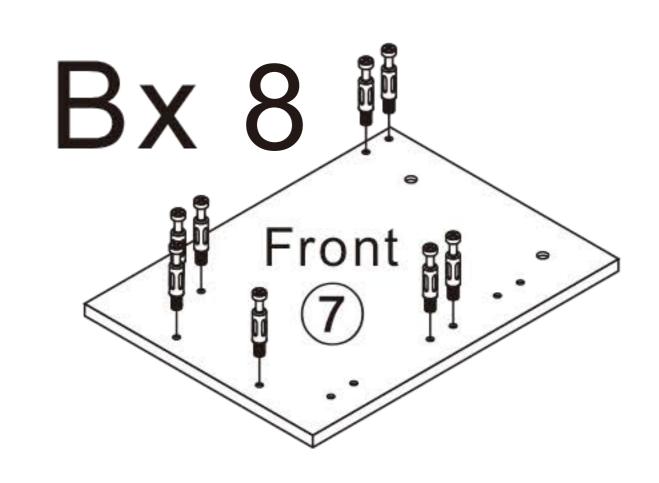


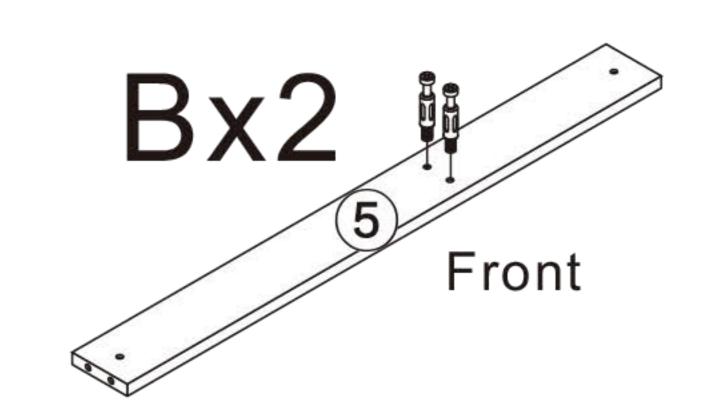


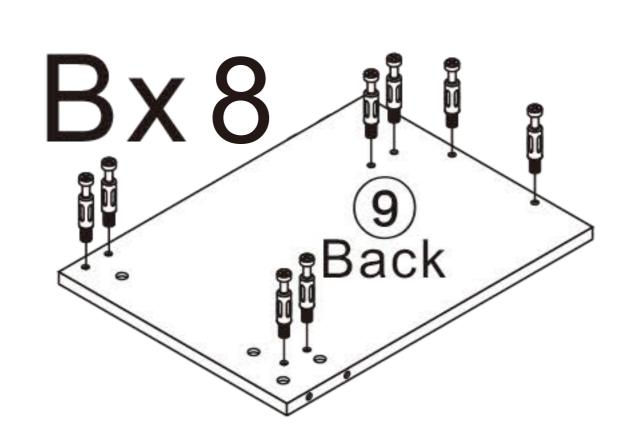


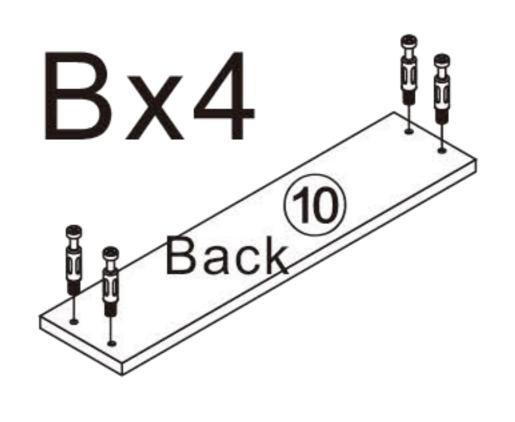


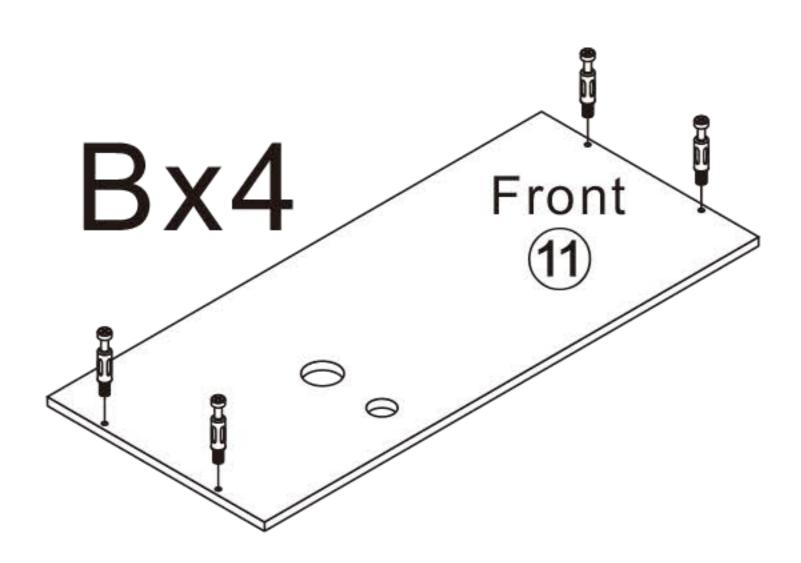


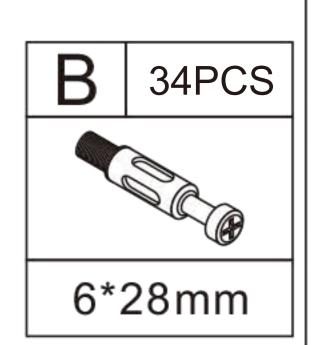

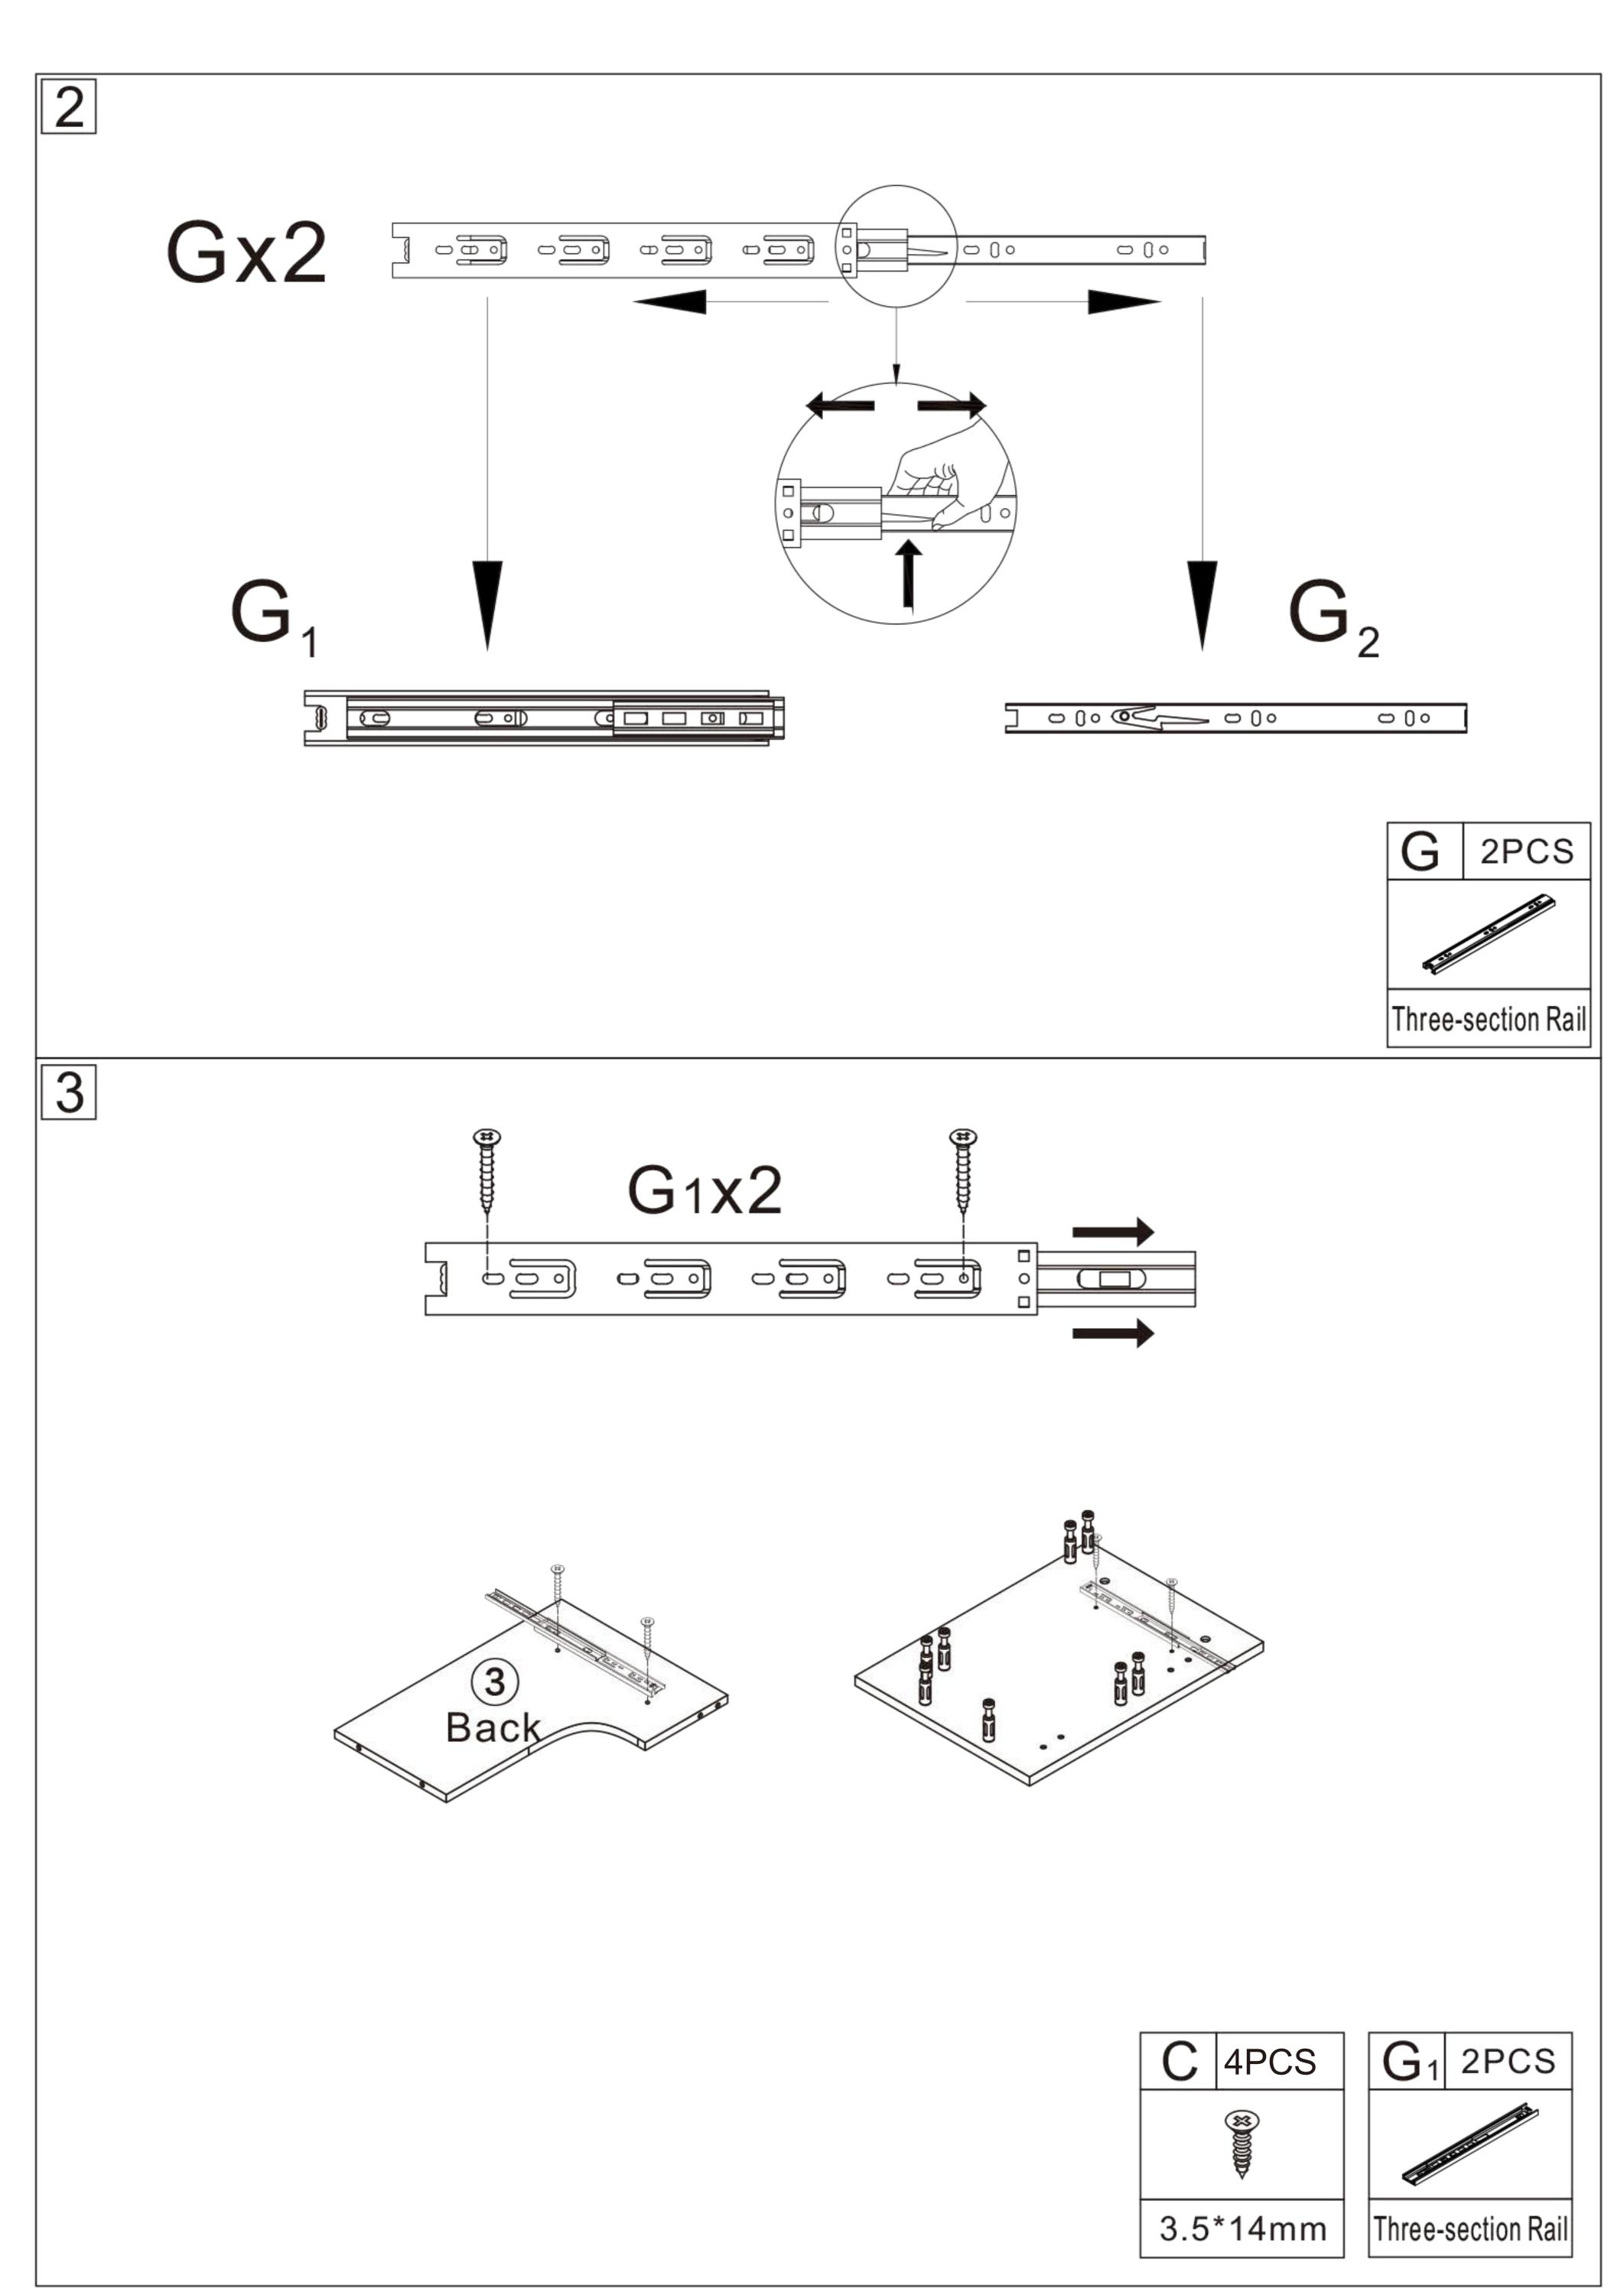


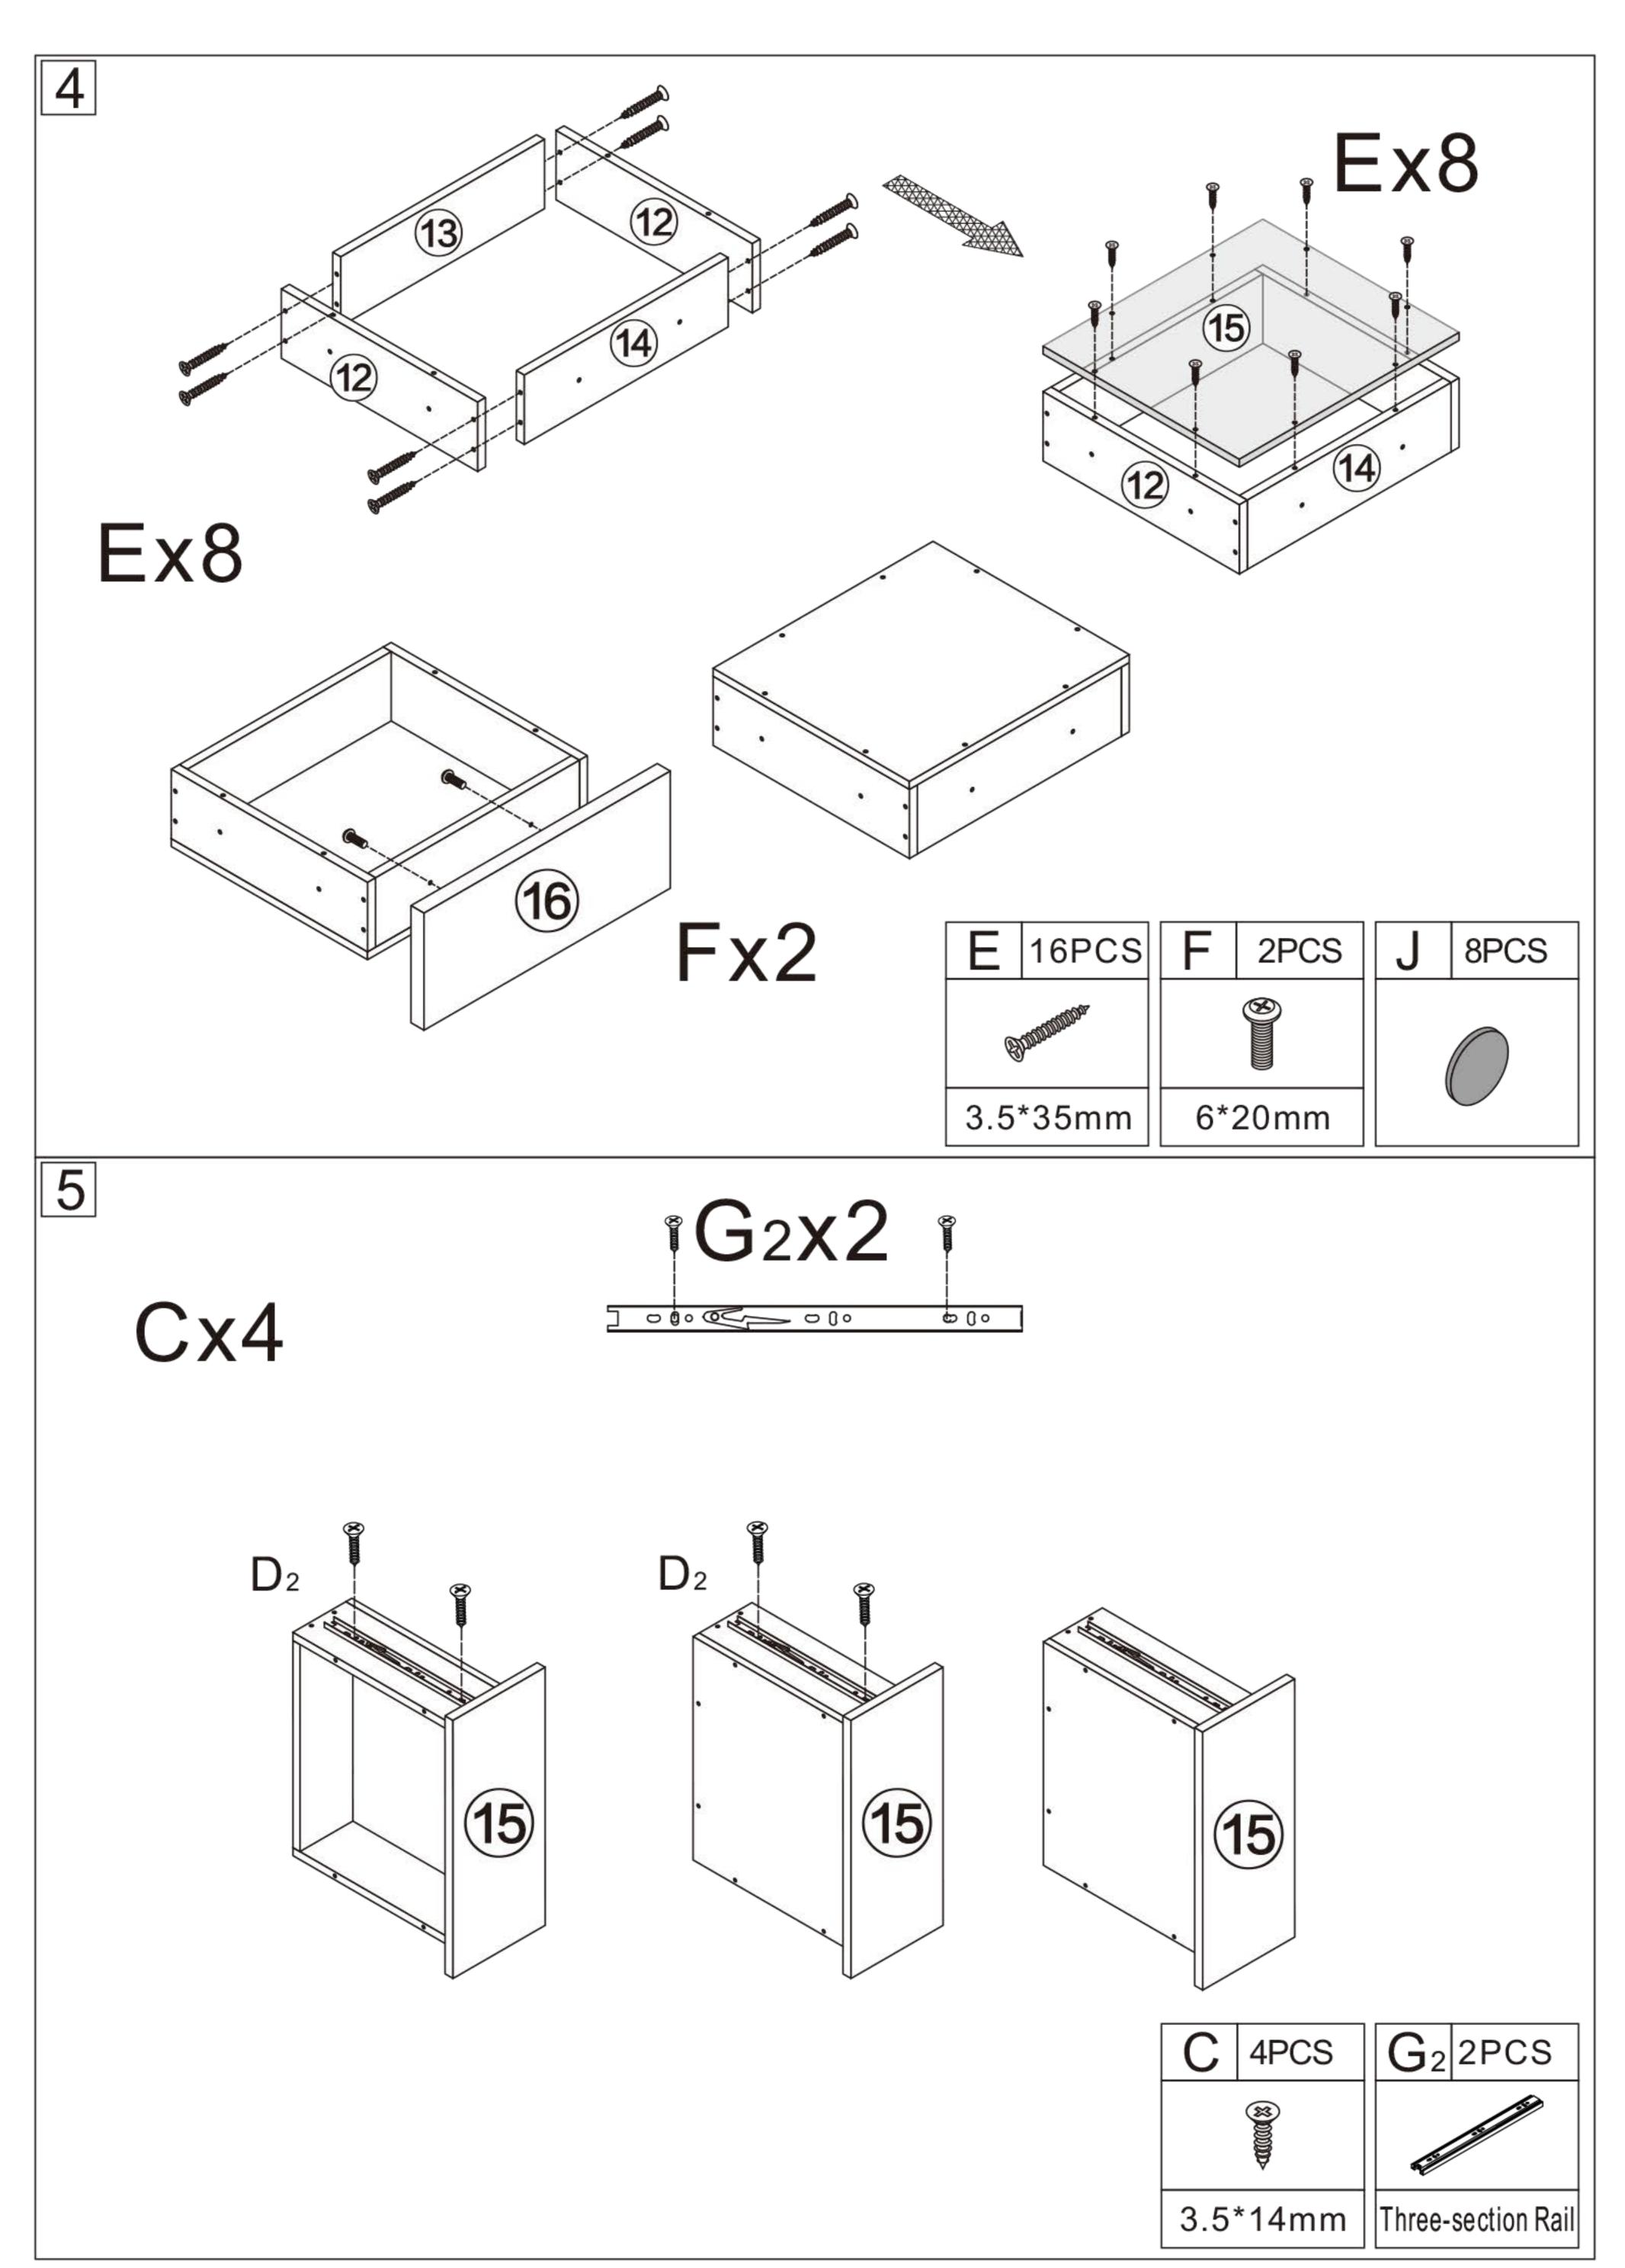

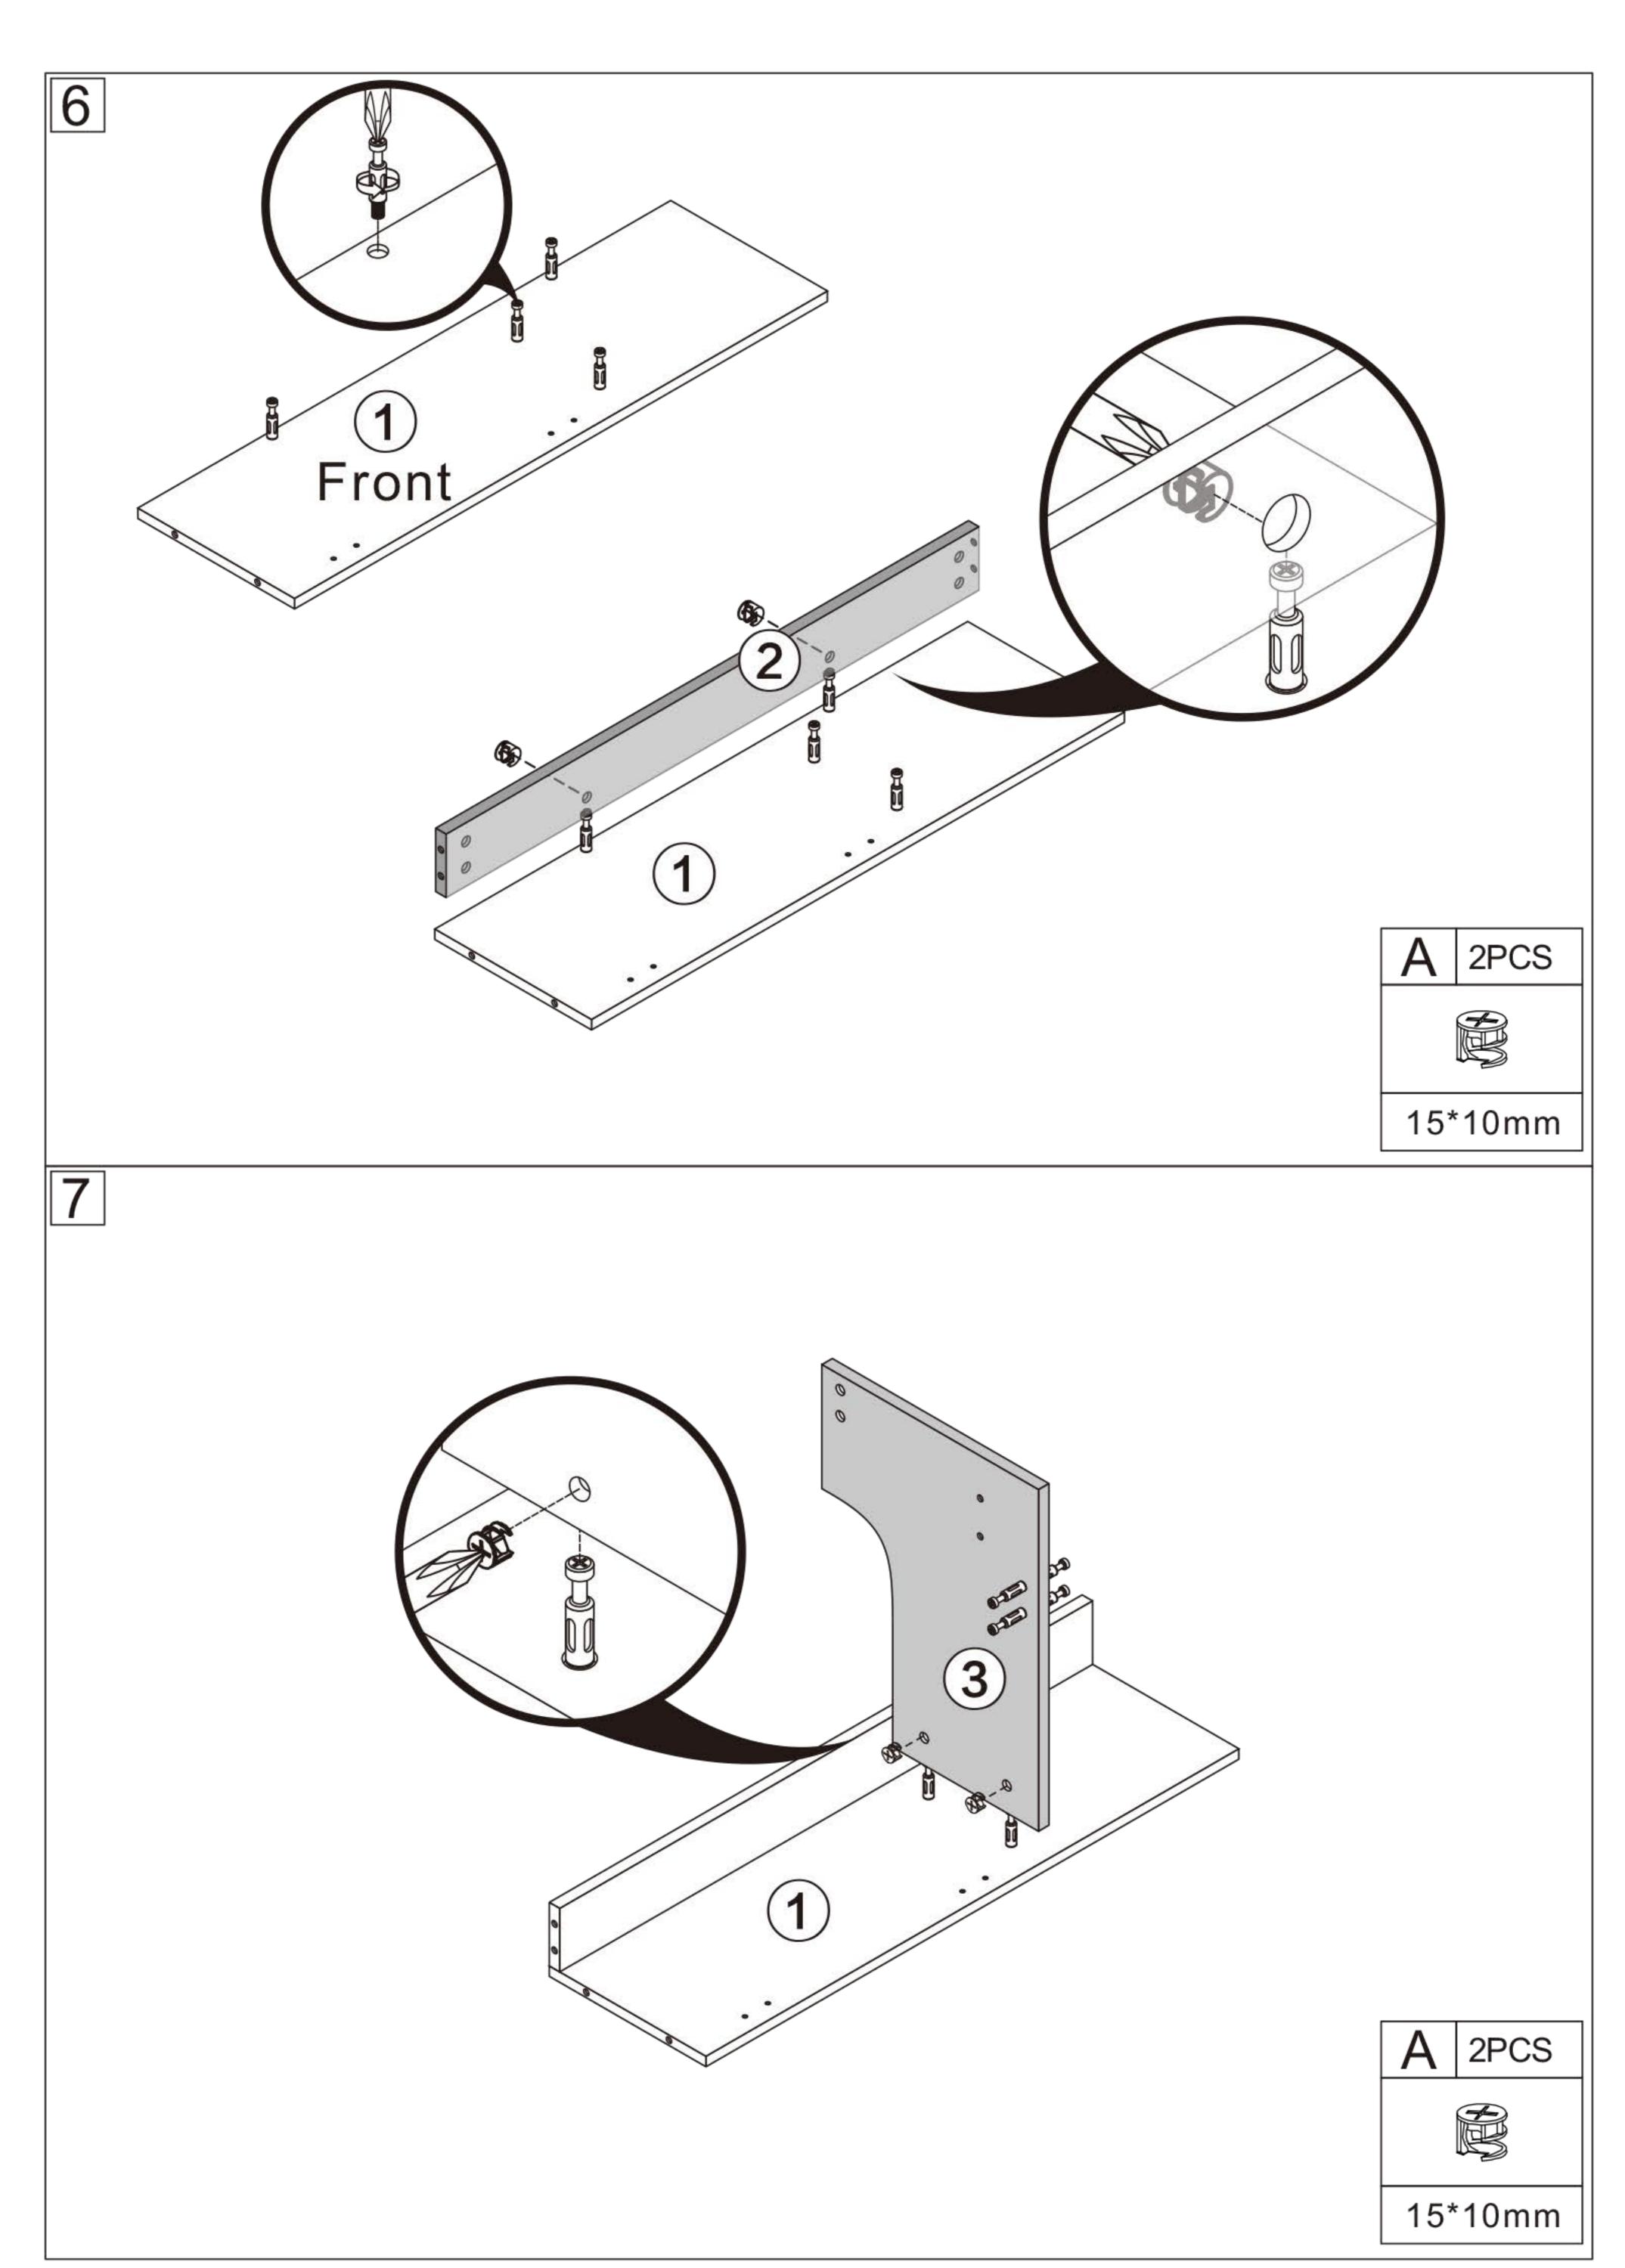


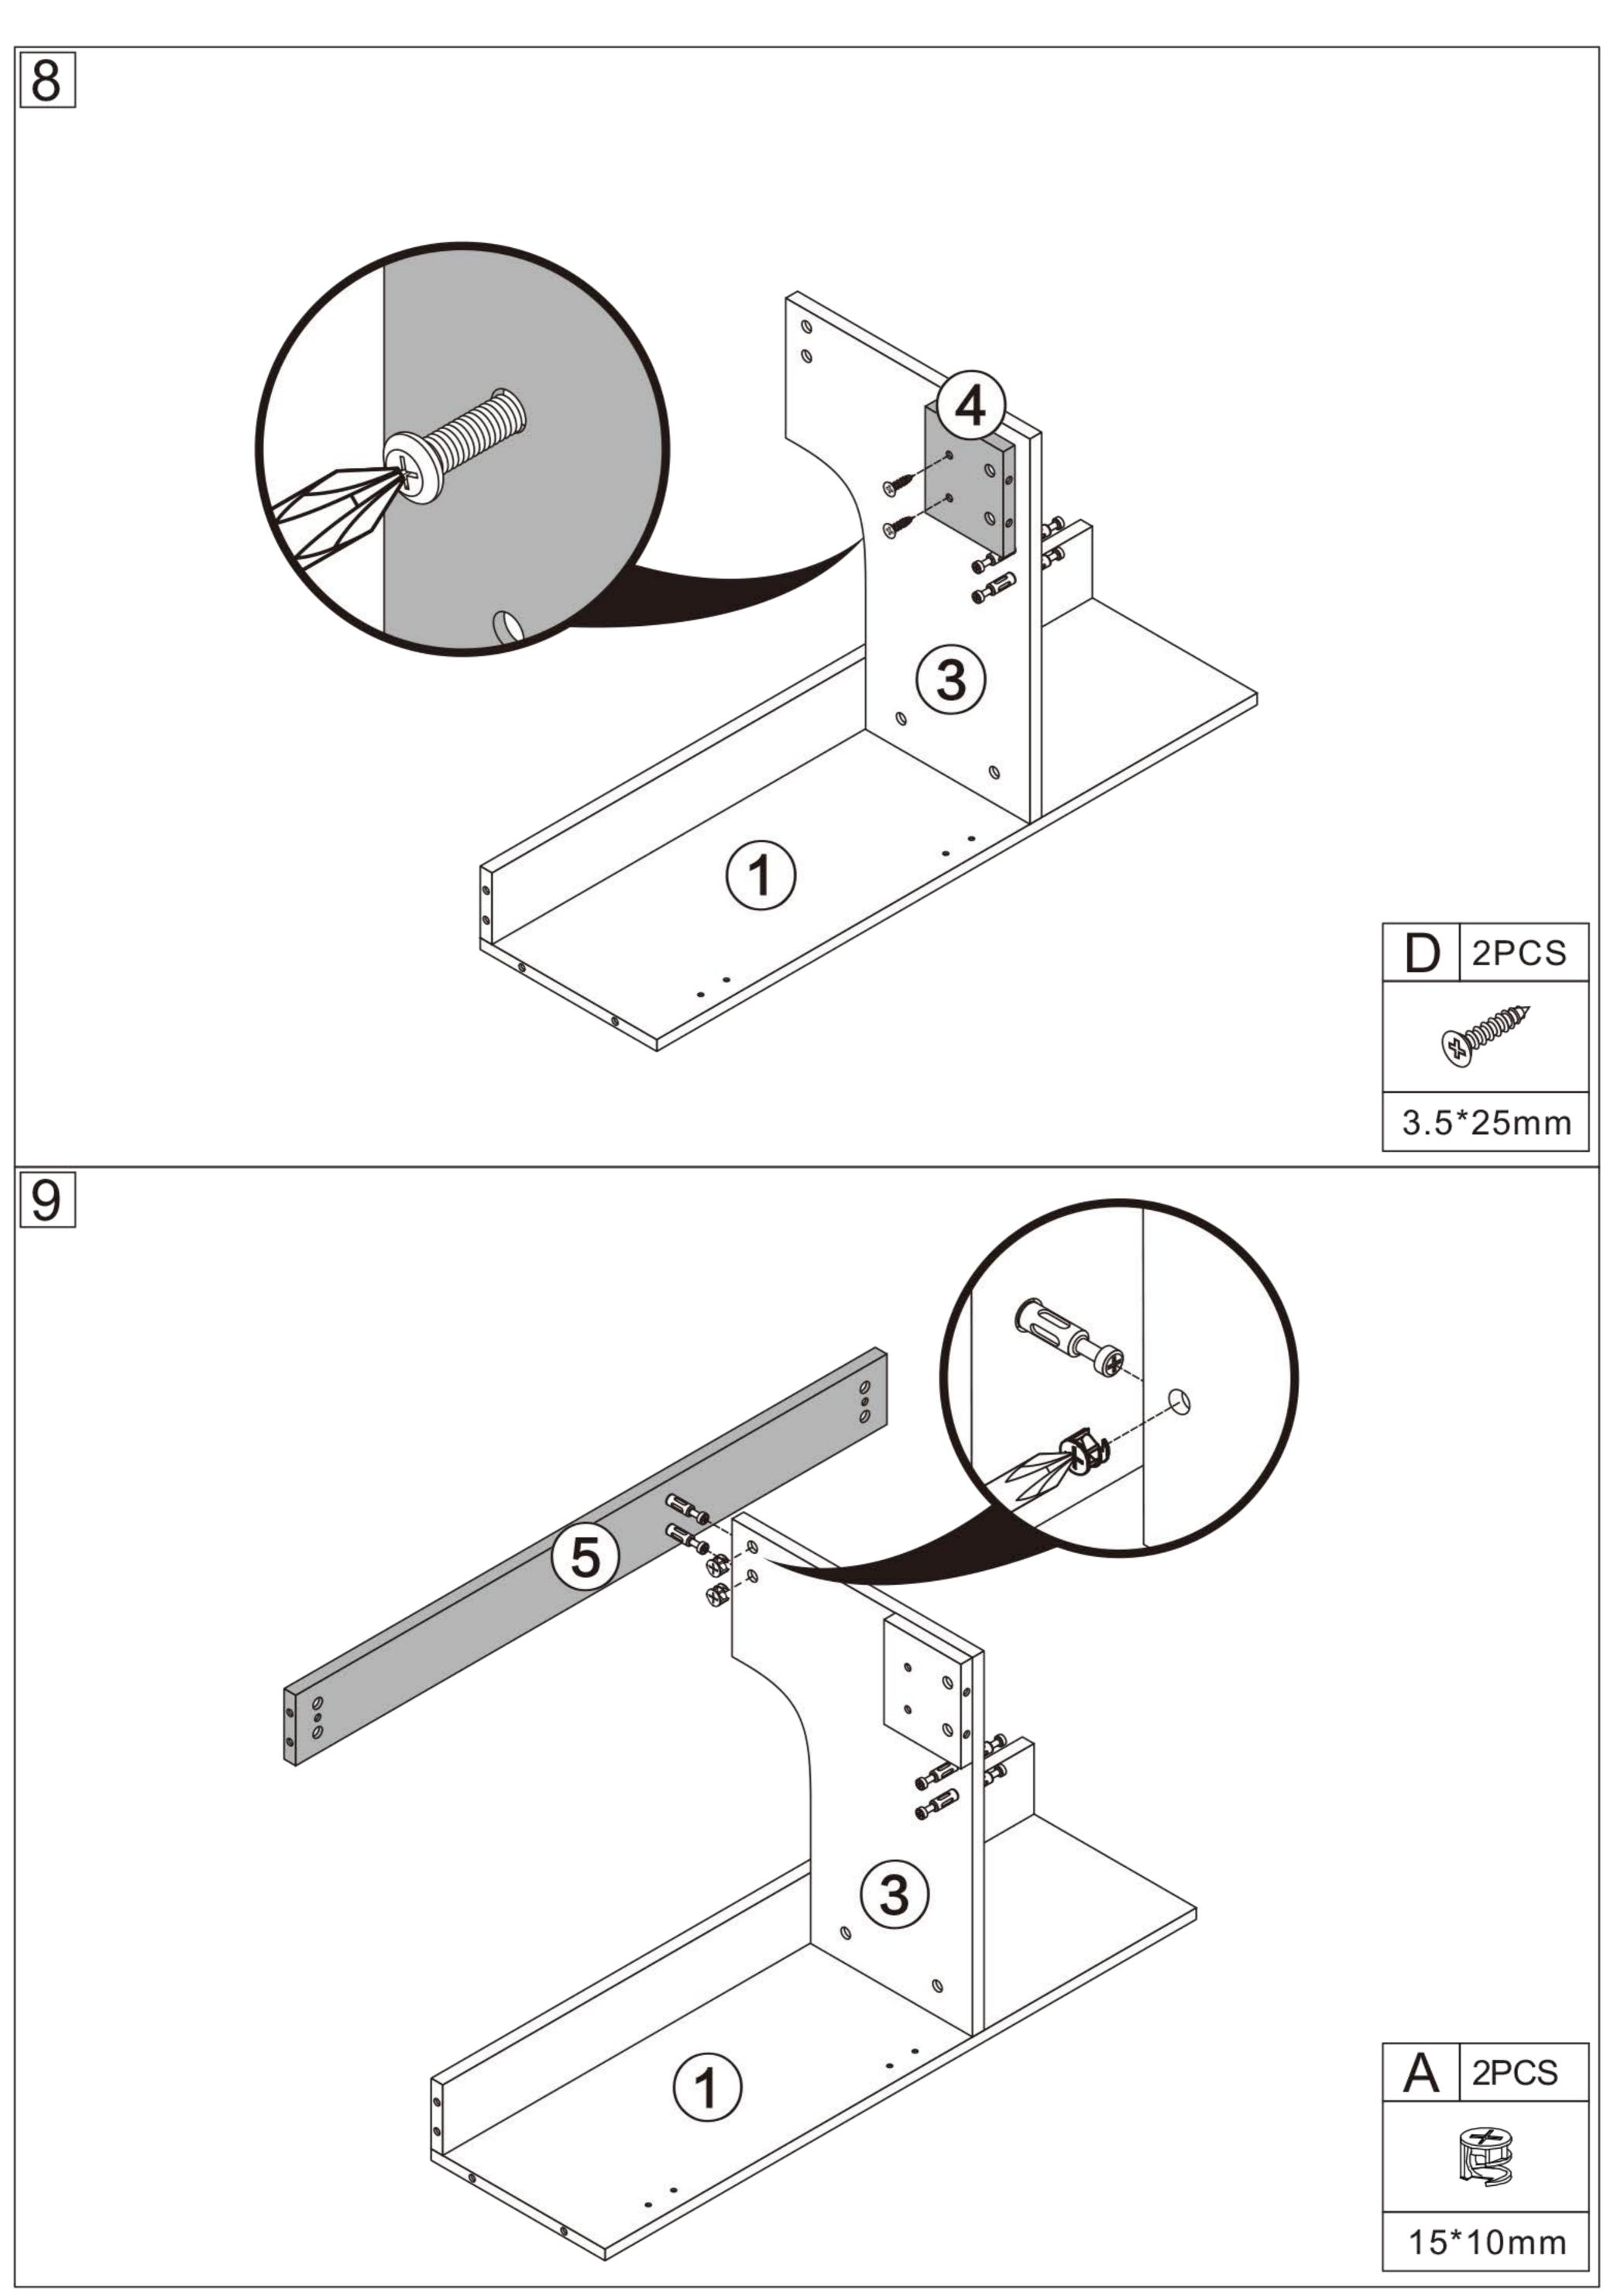


9 Pages

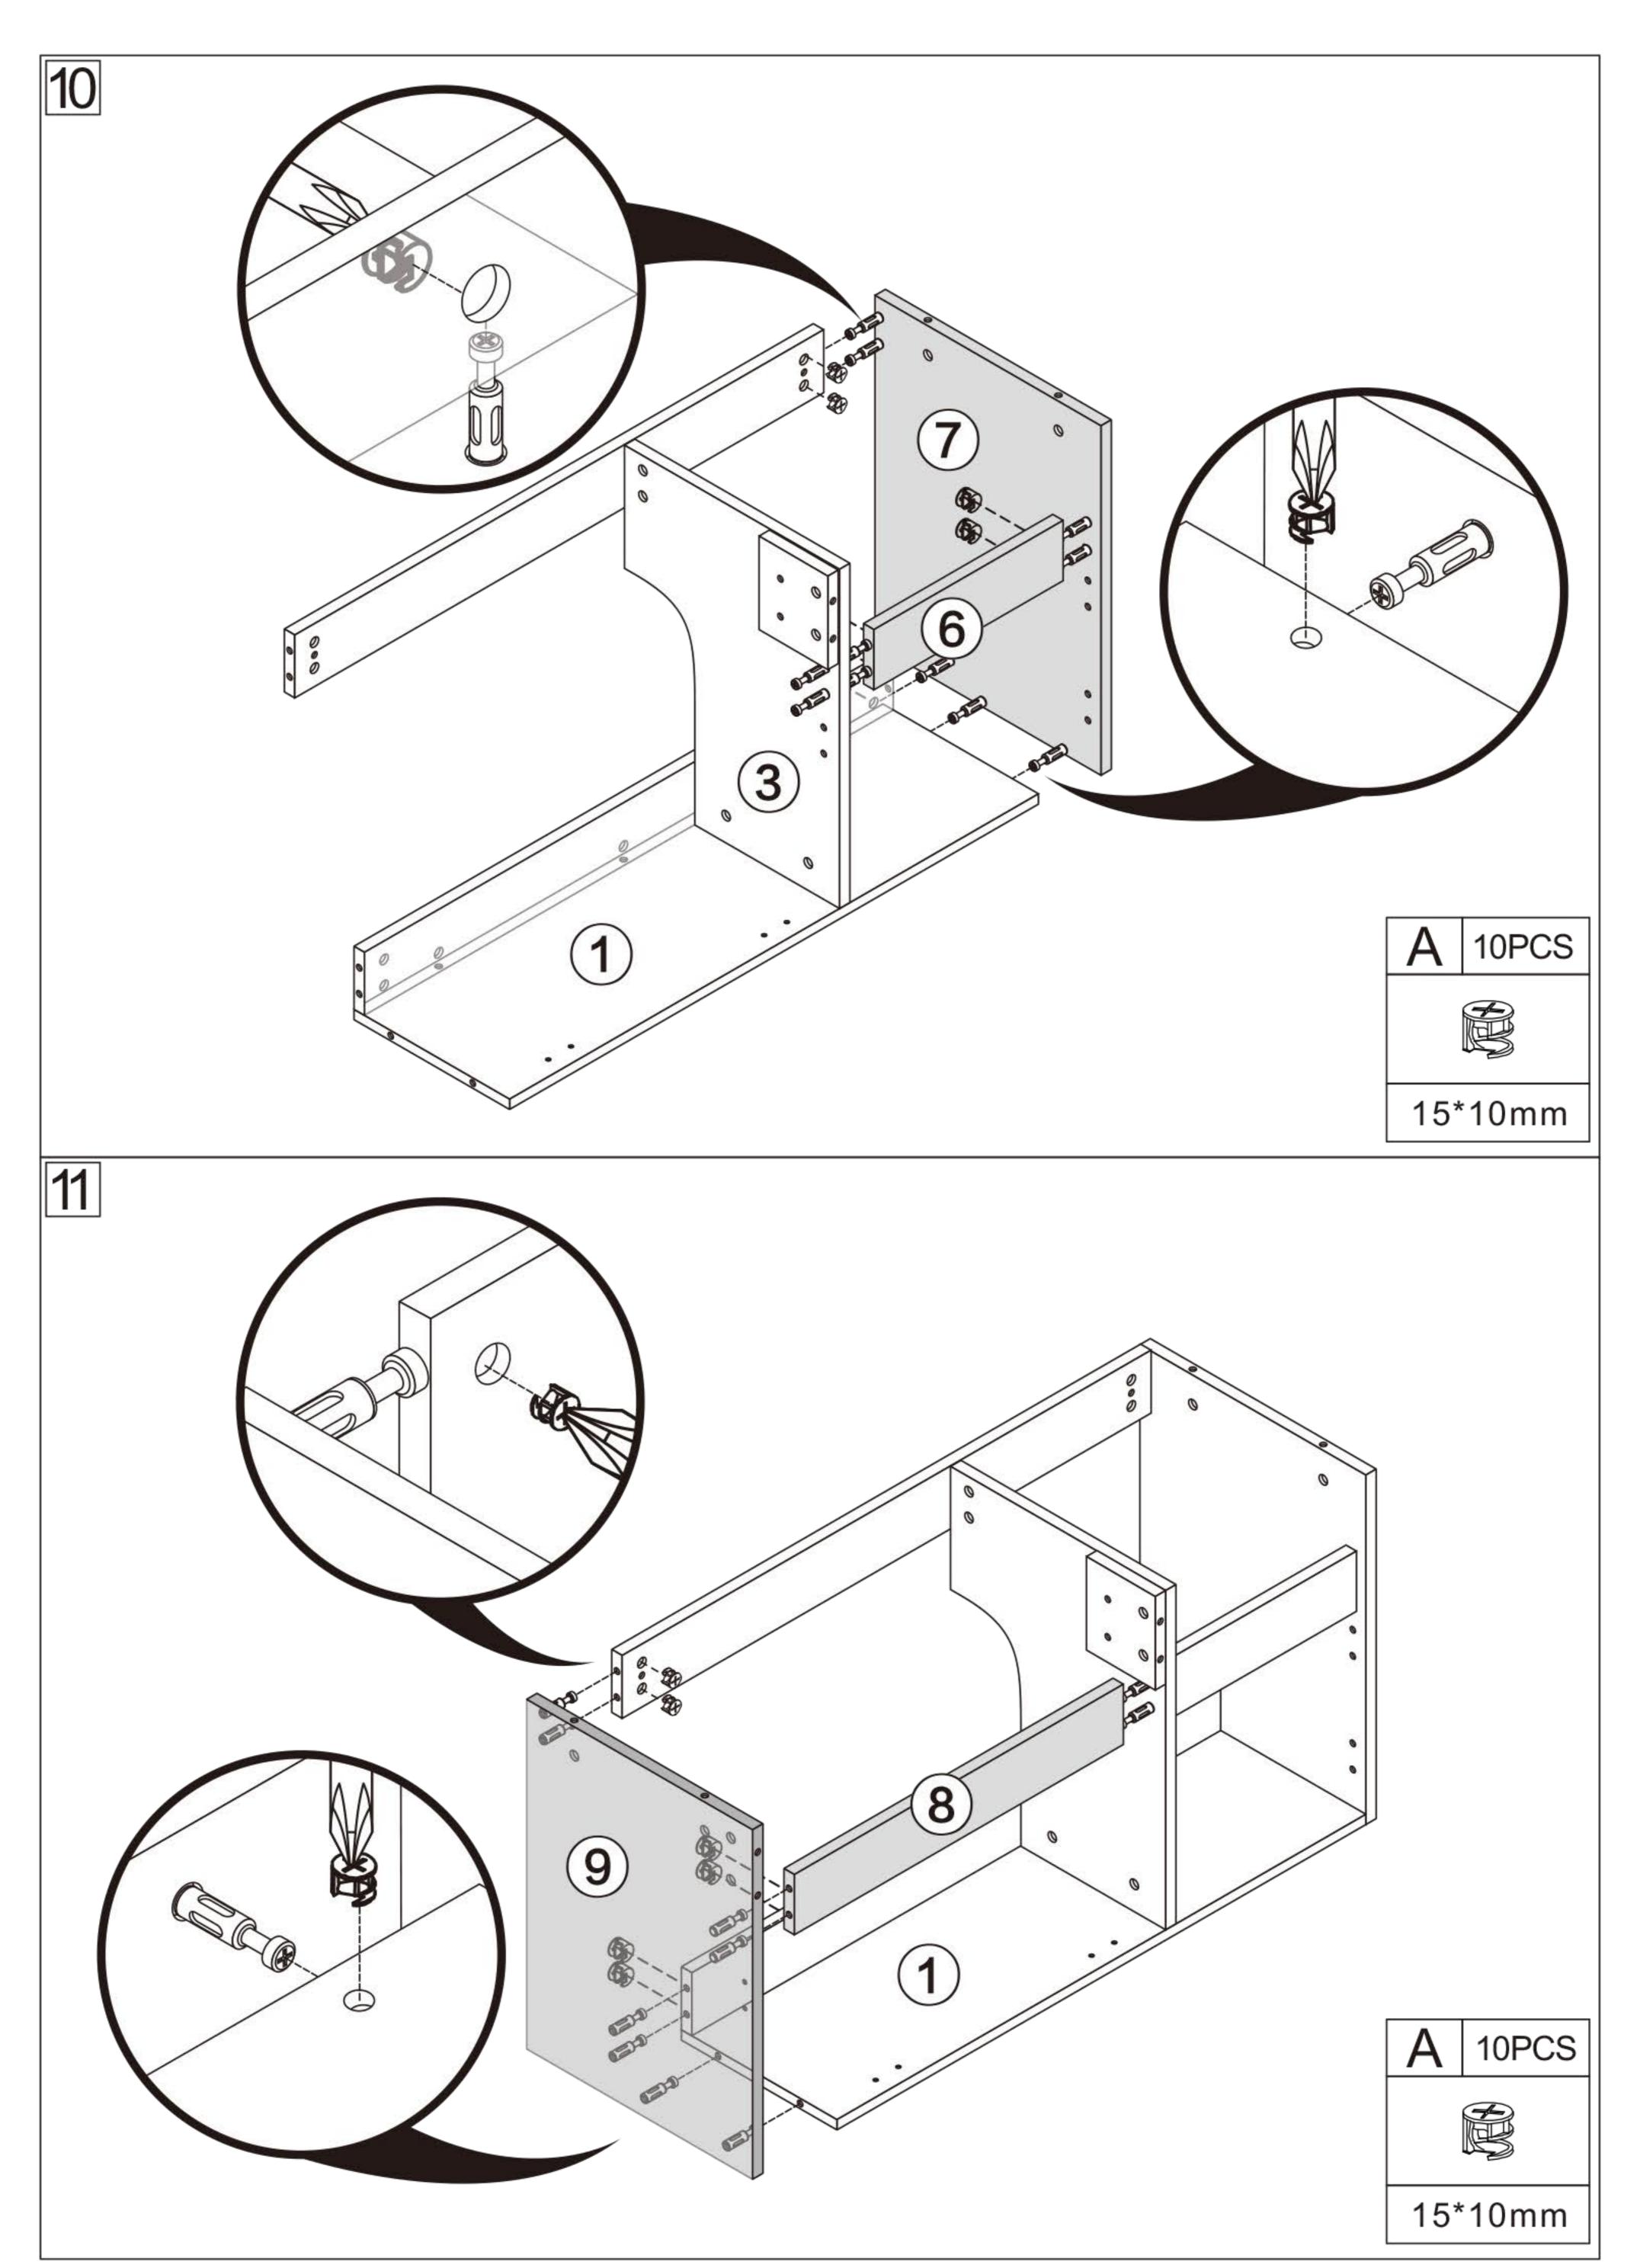

10 Pages

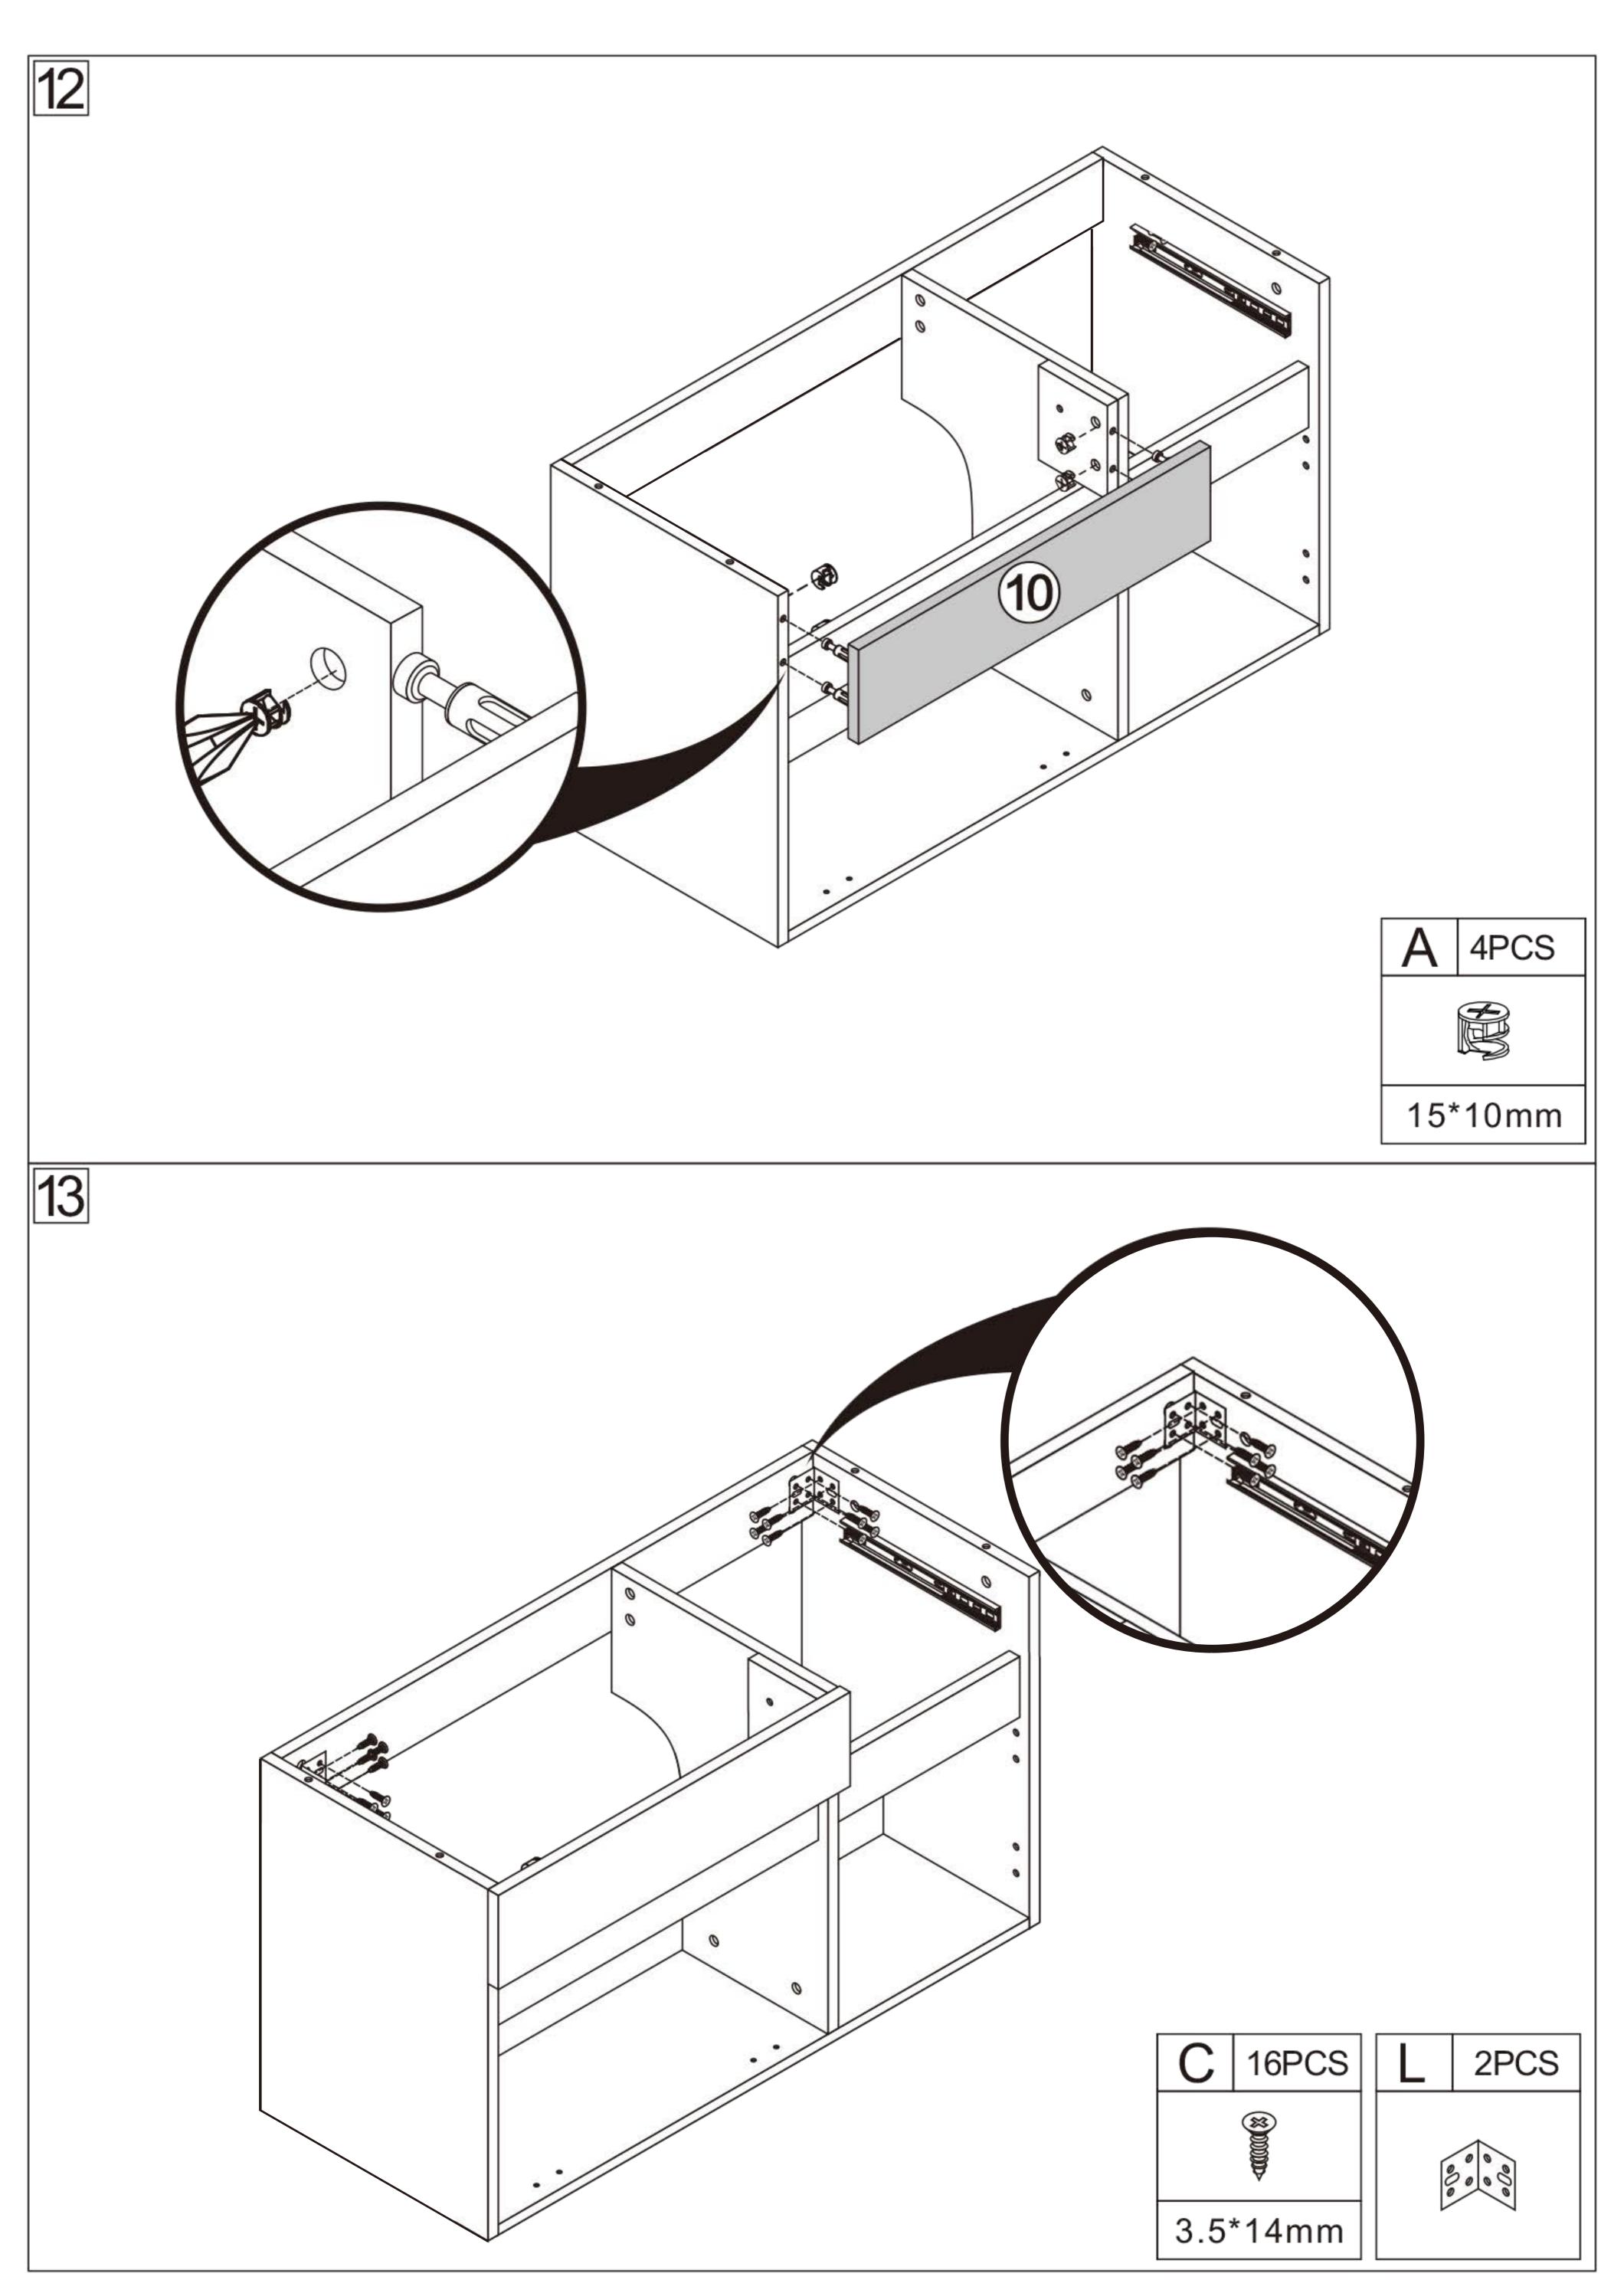

11 Pages

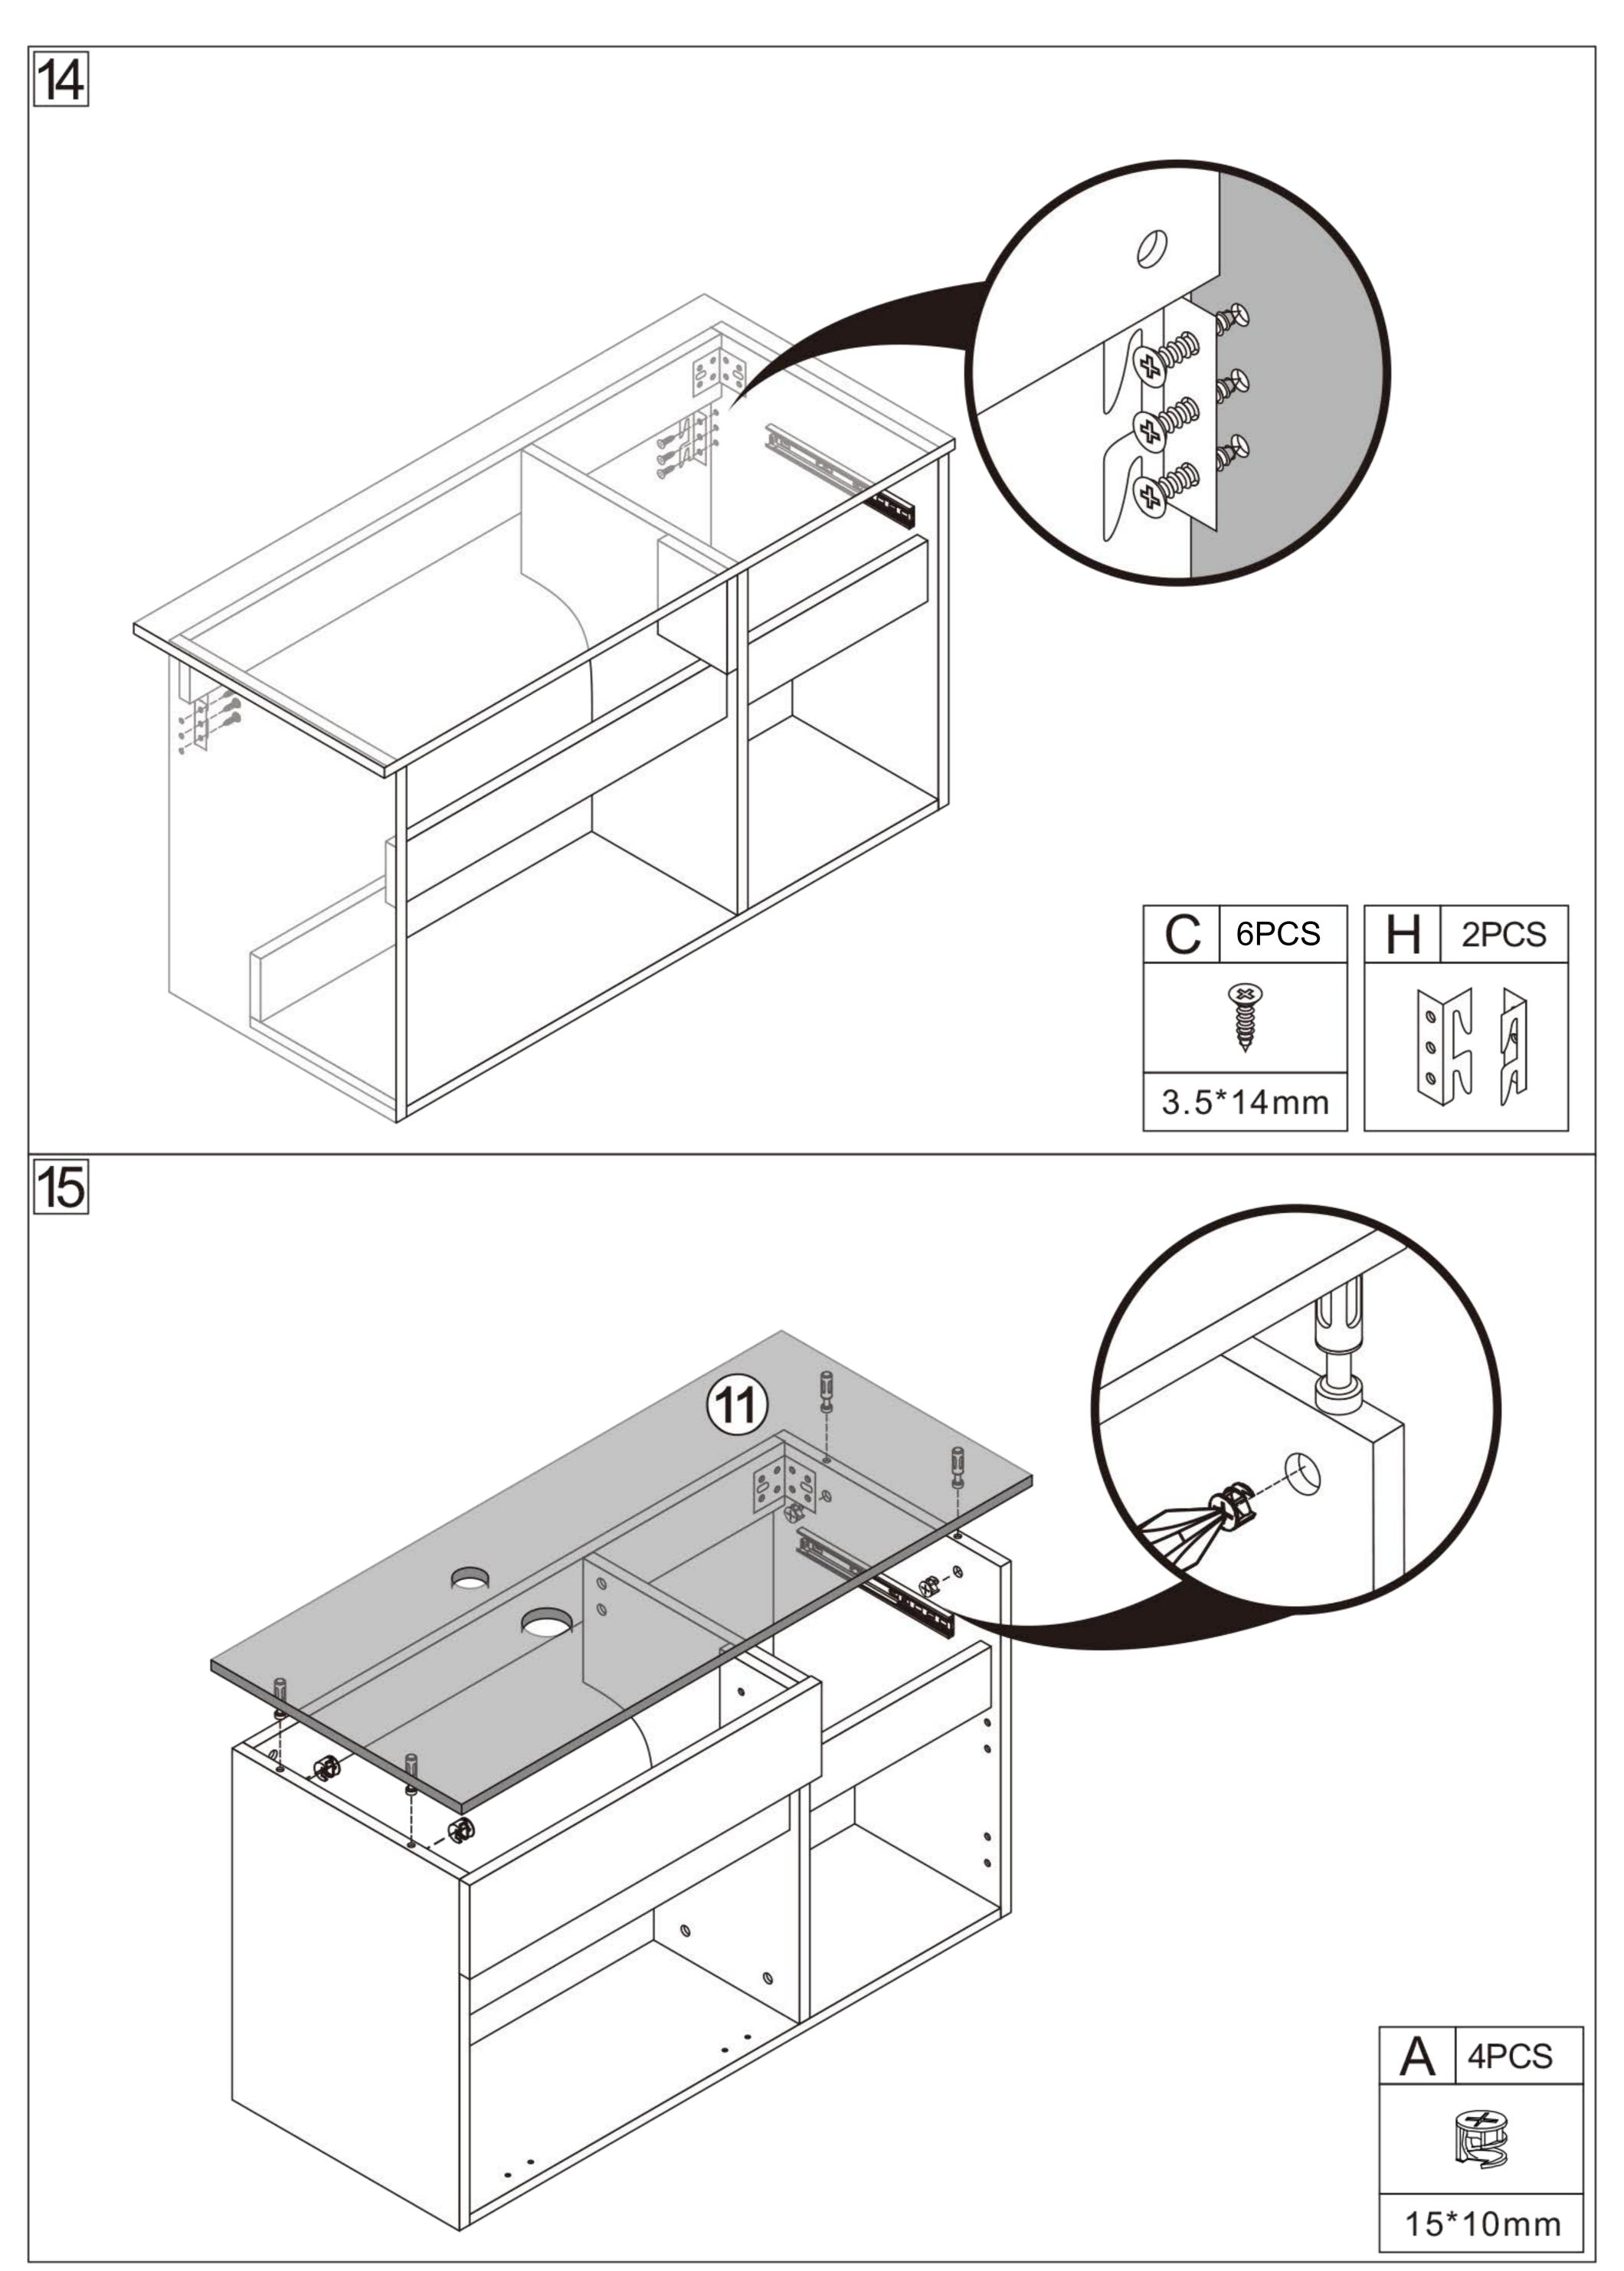

12 Pages

