

Bathroom cabinet

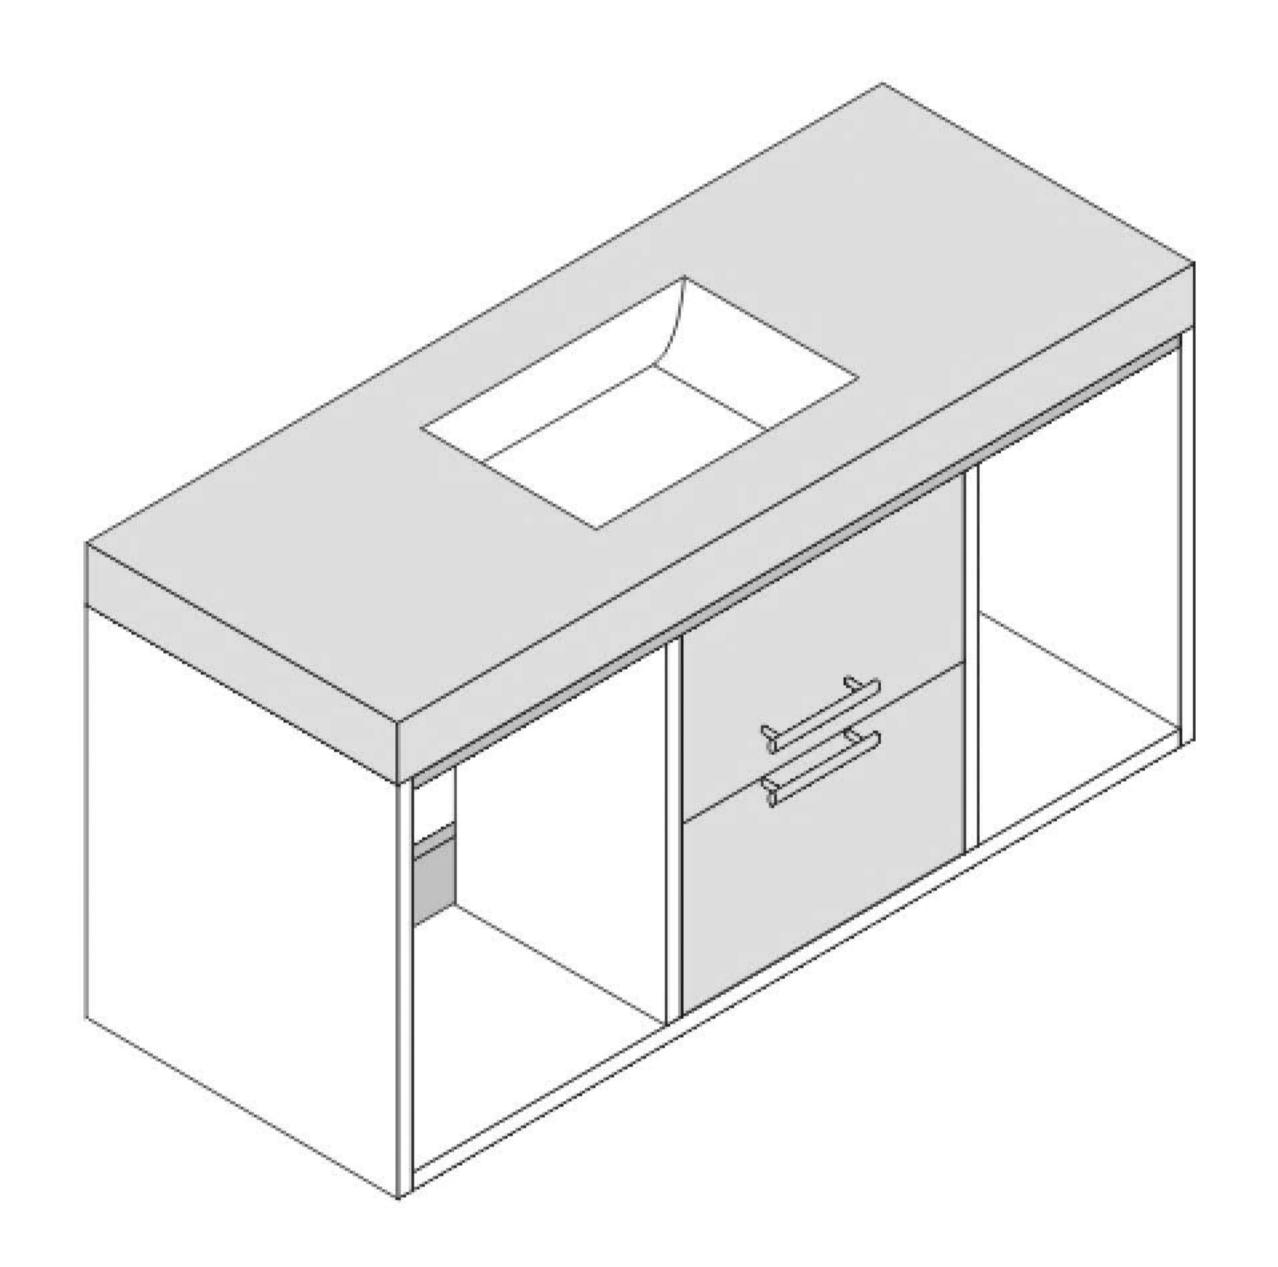


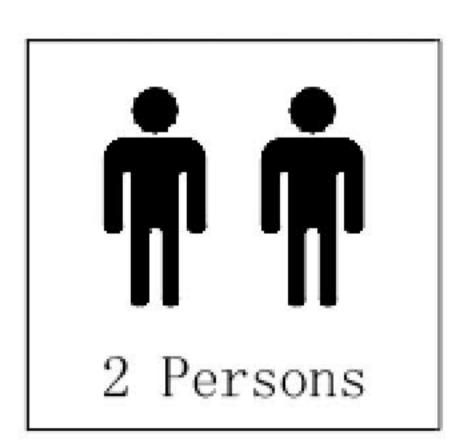



L1000*W480*H550MM


Installation Instructions


Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.

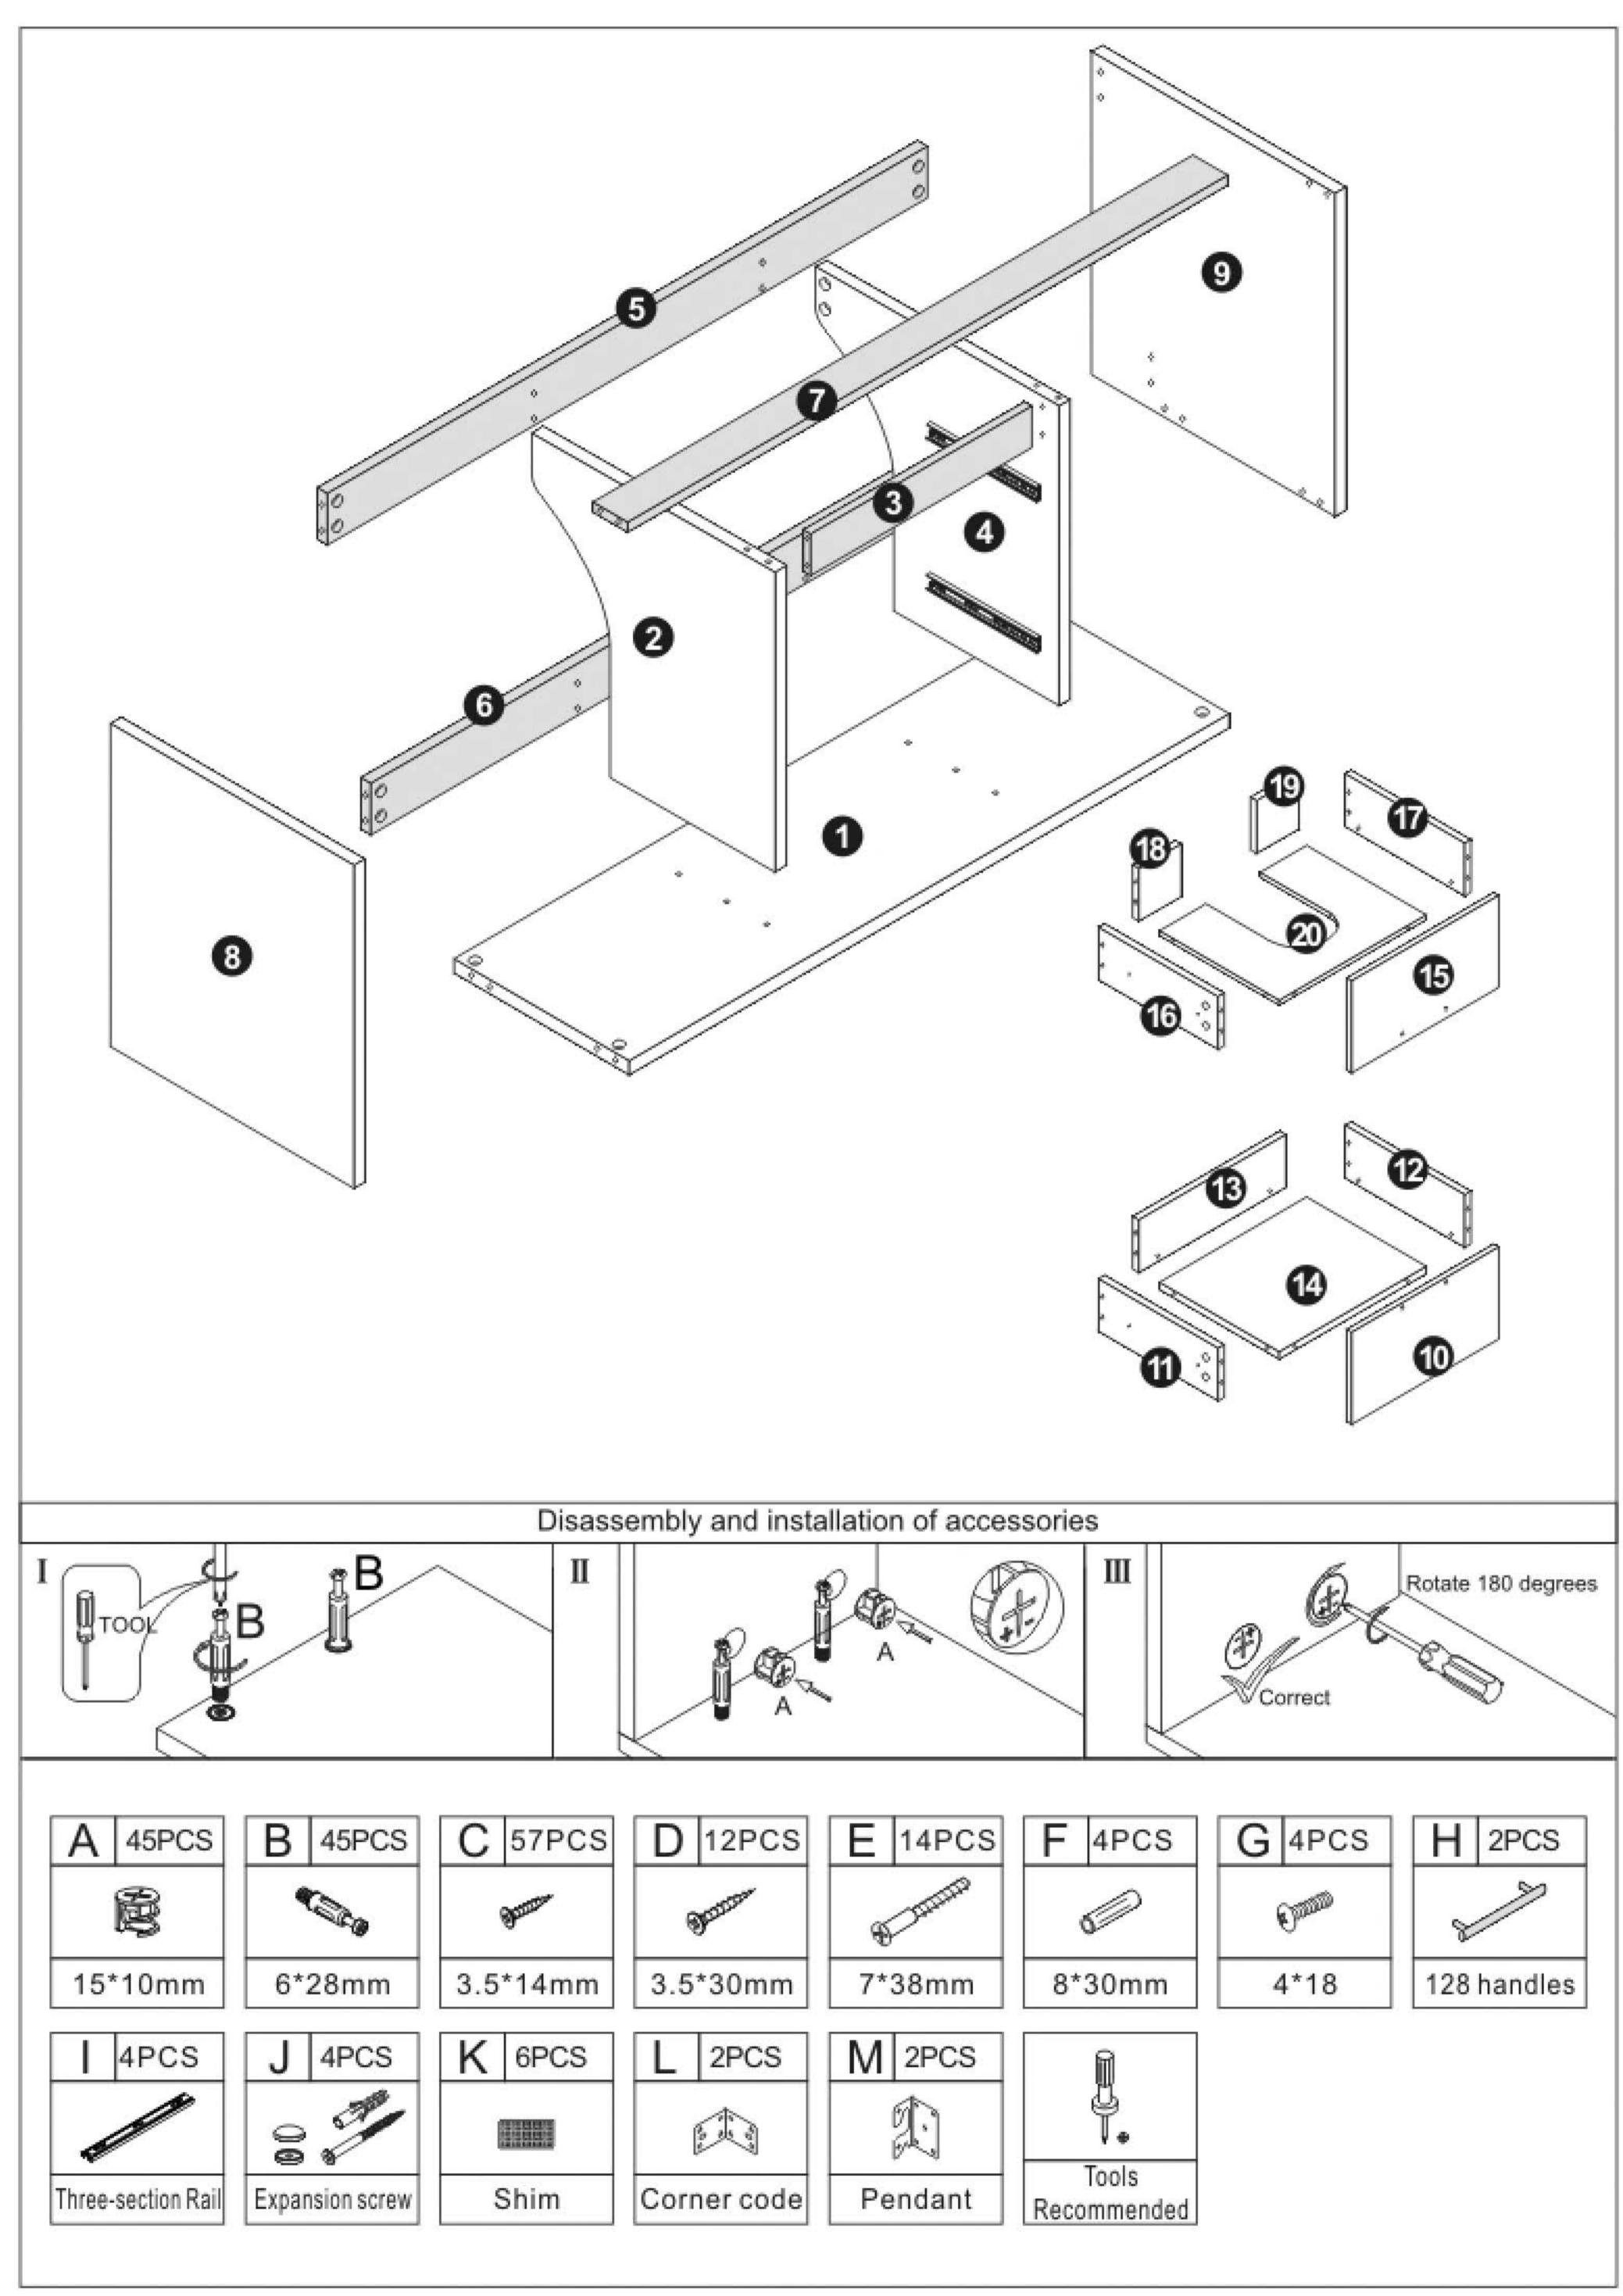


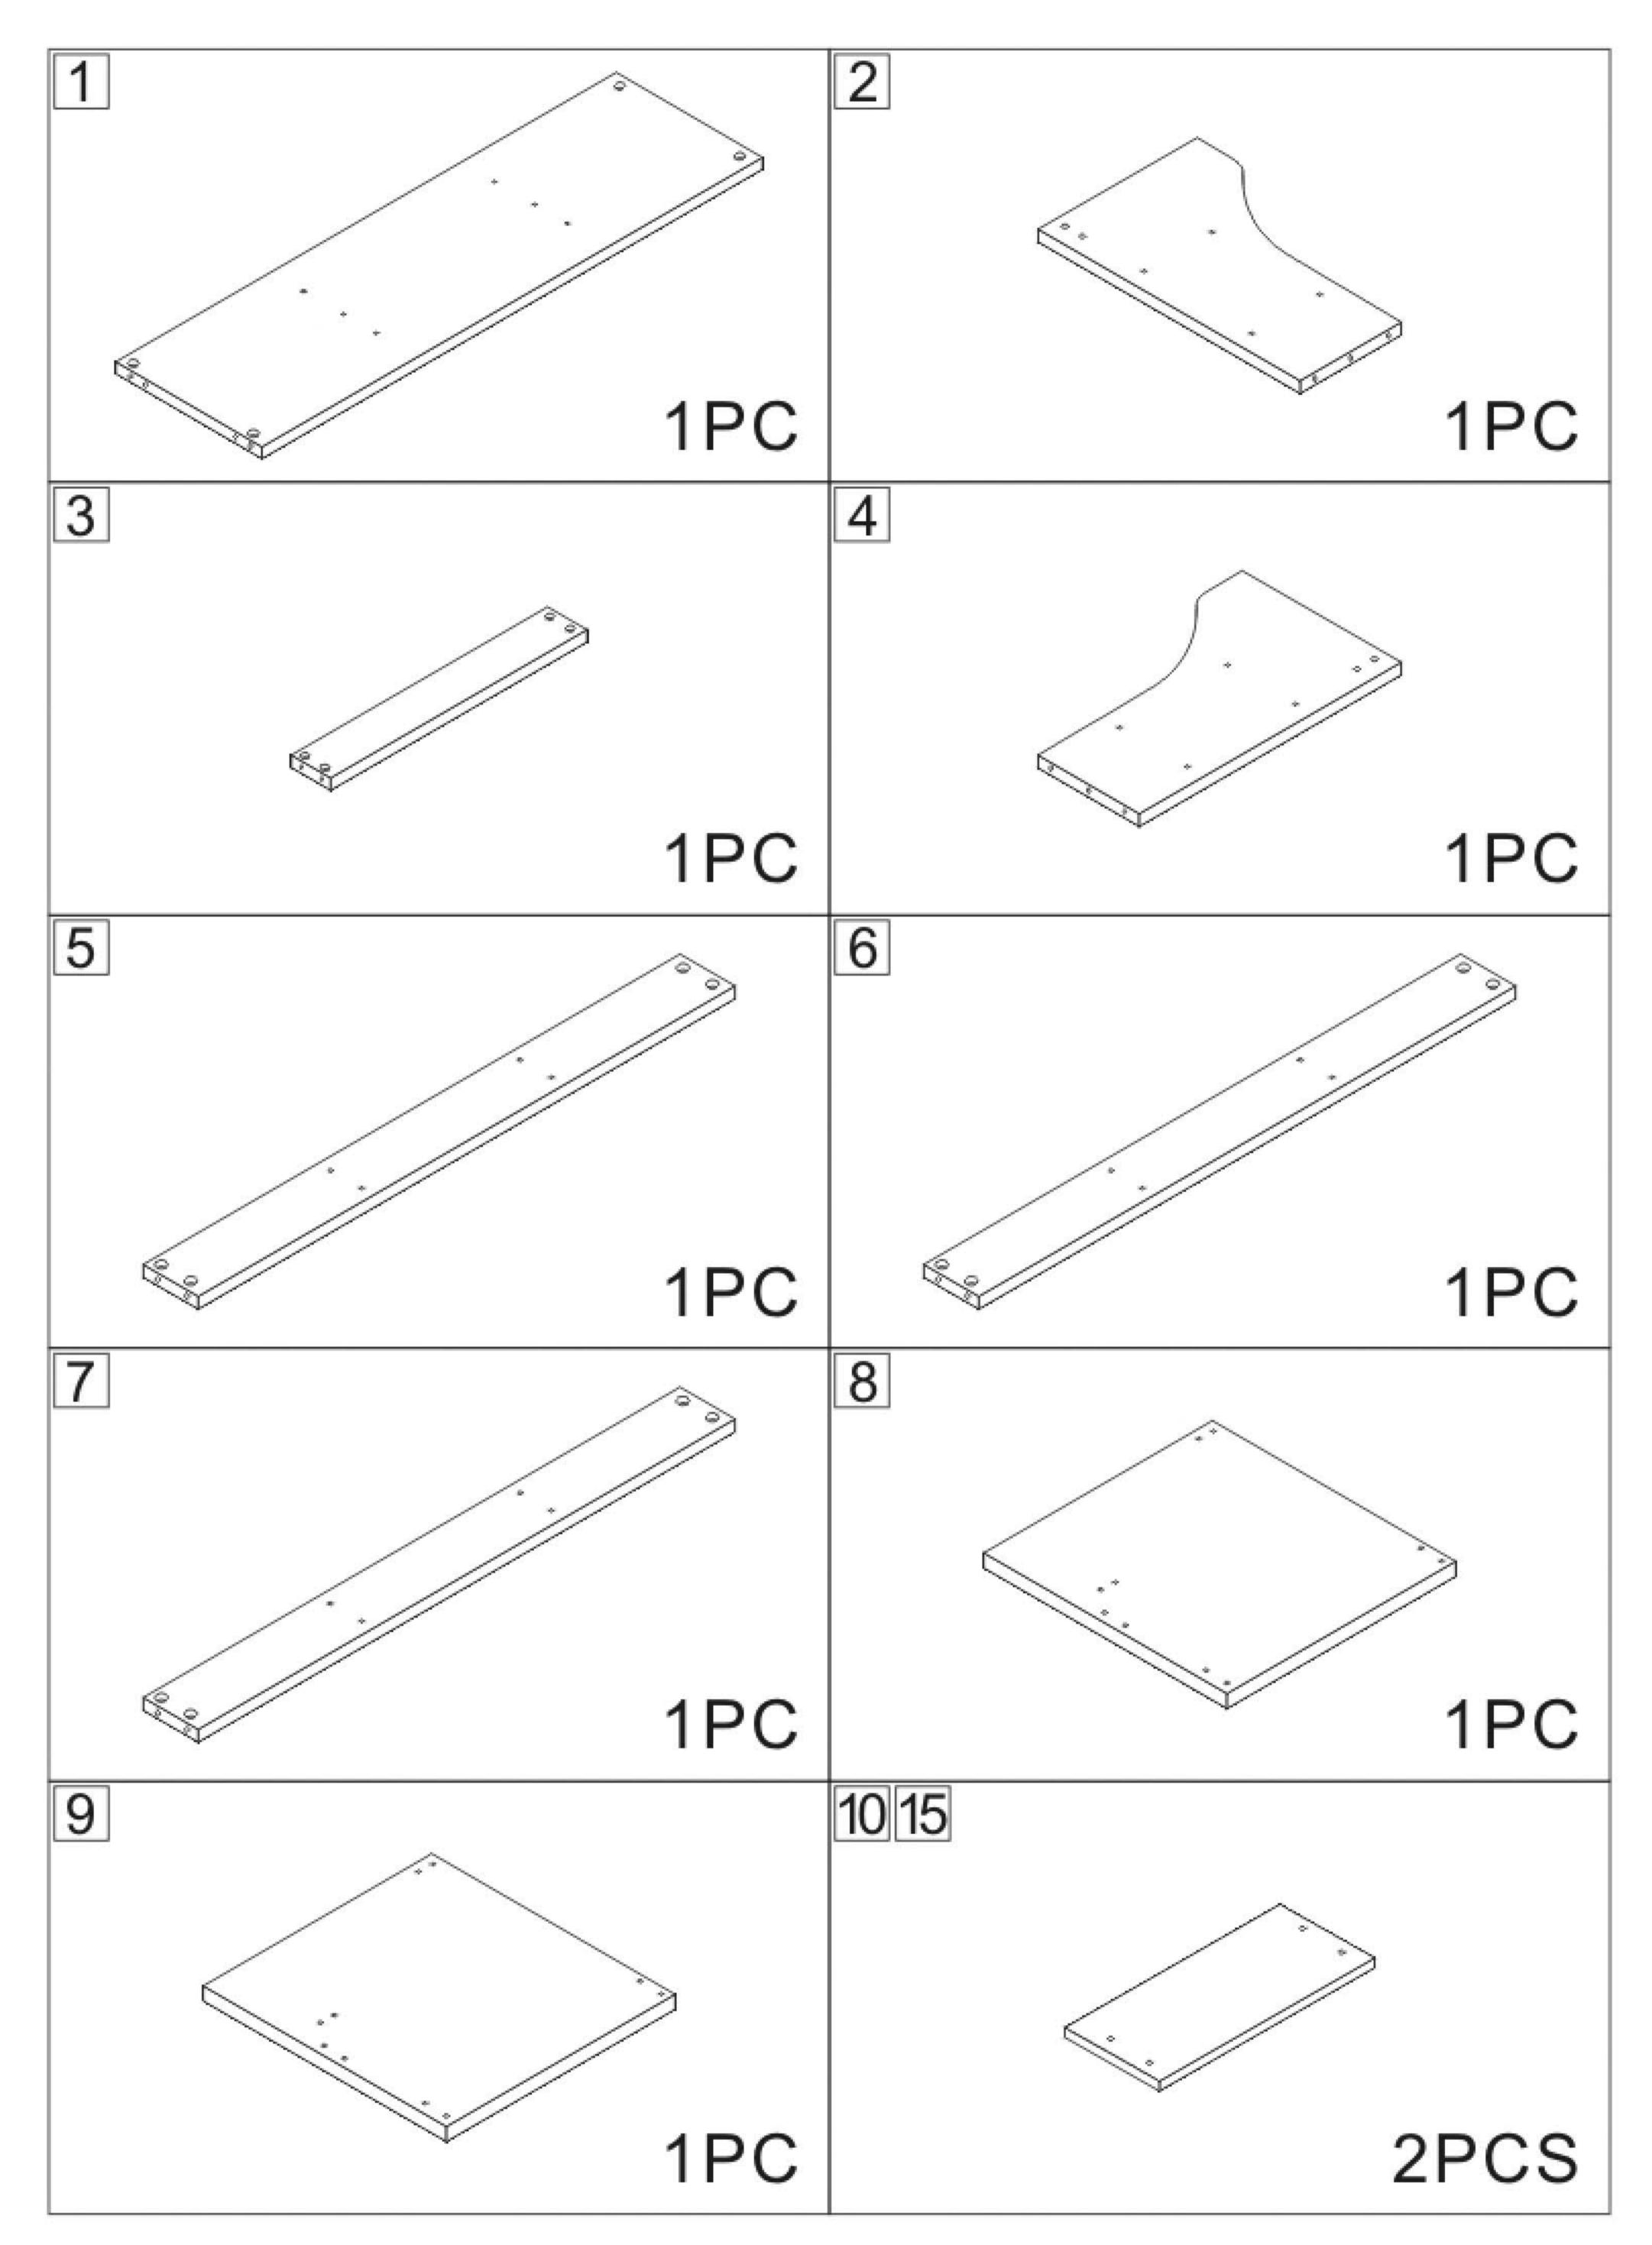


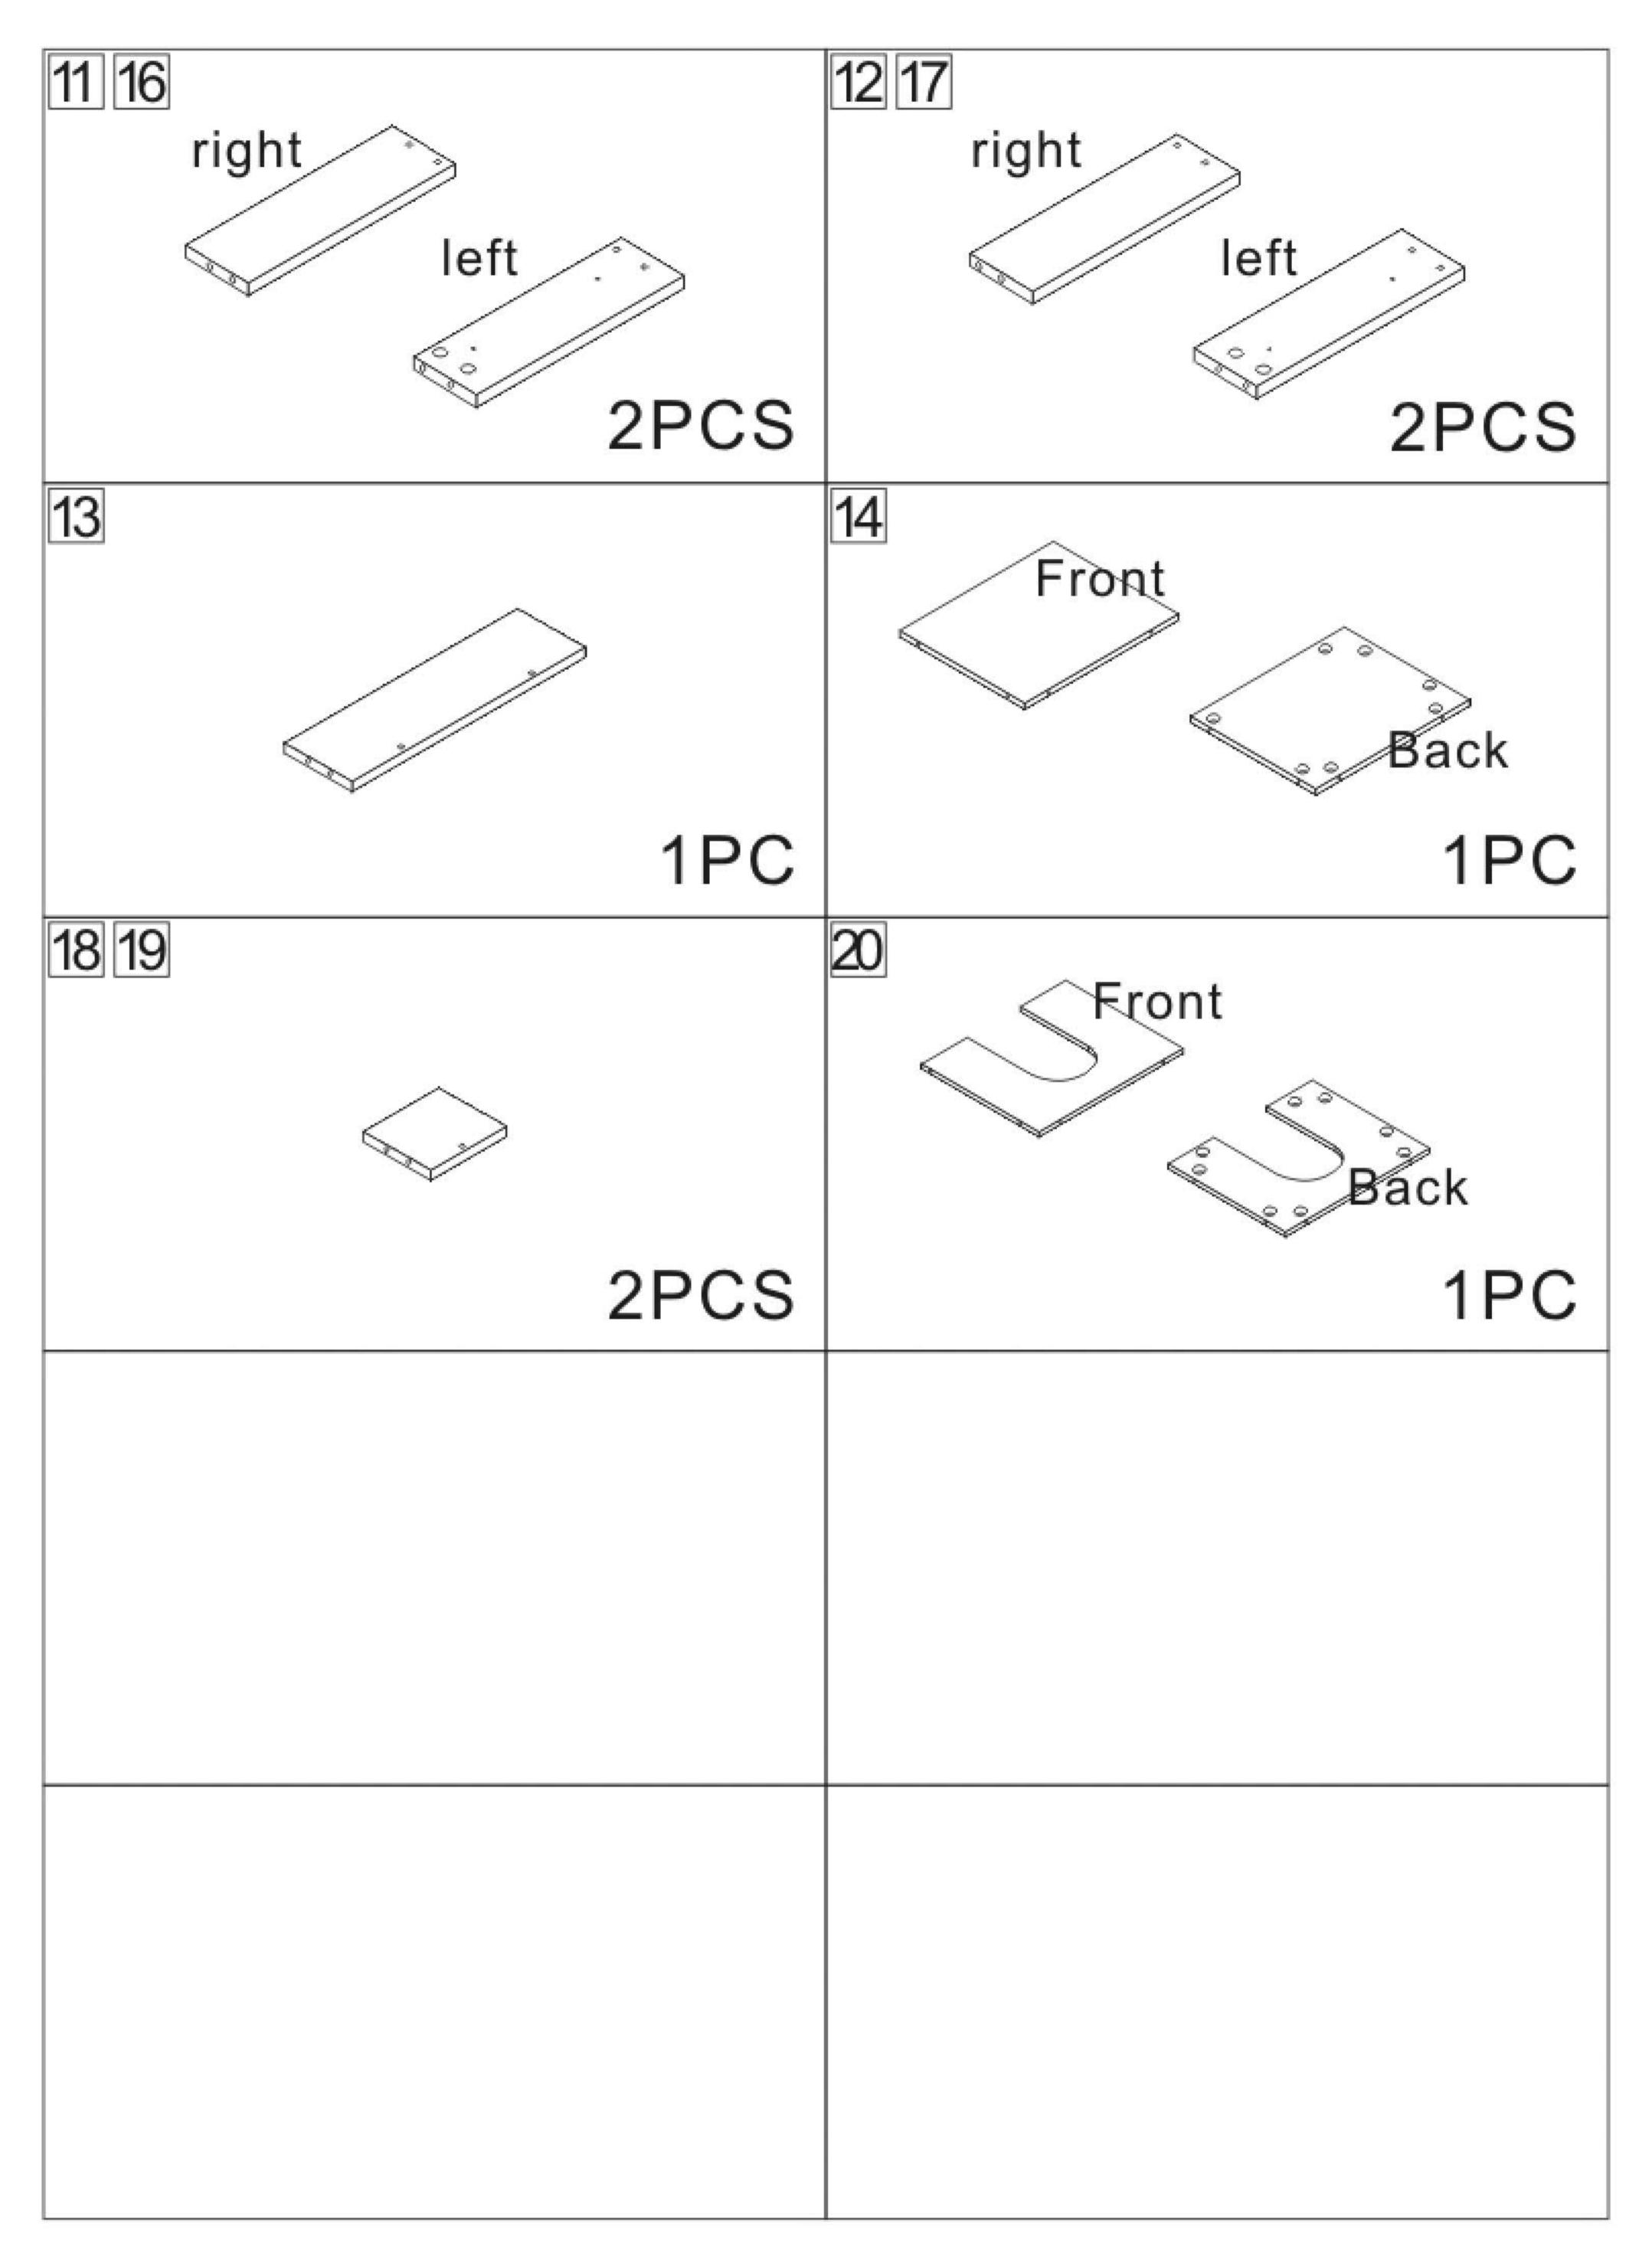


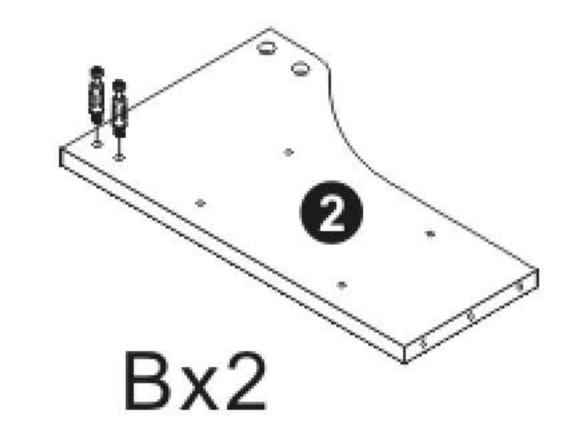


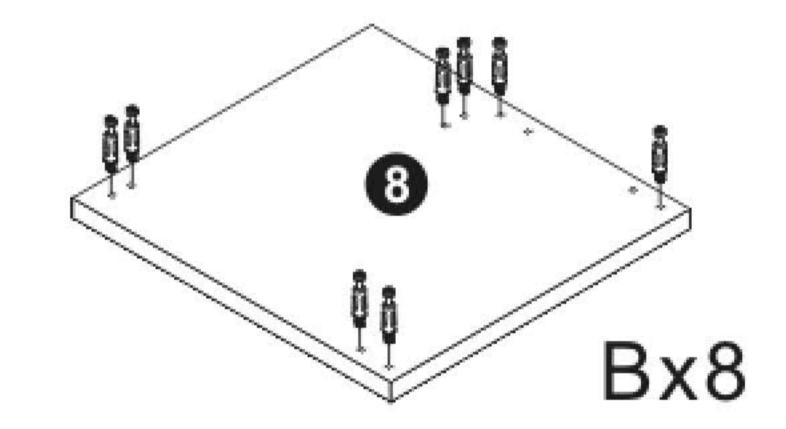


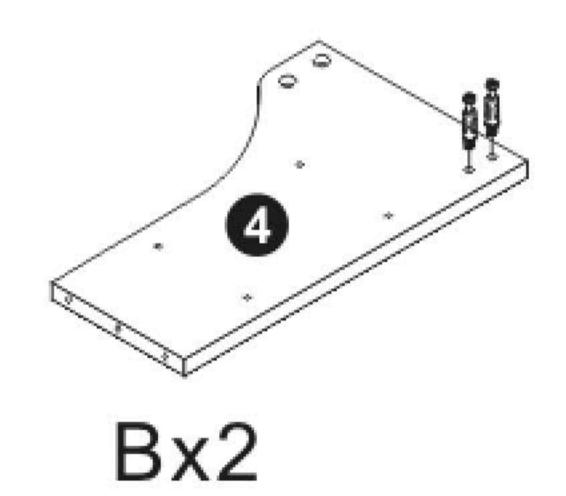


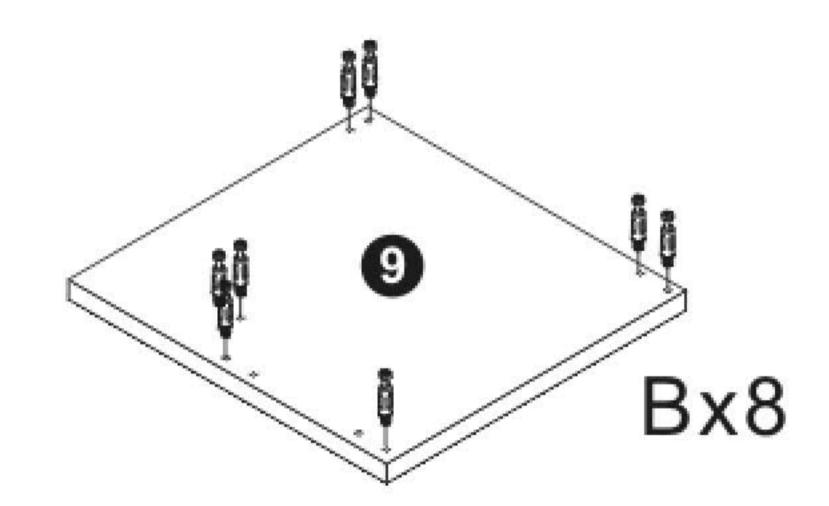


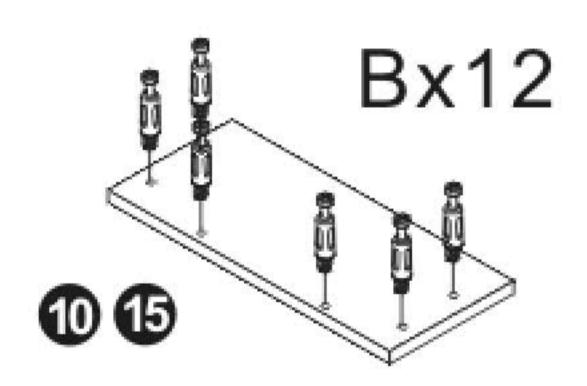


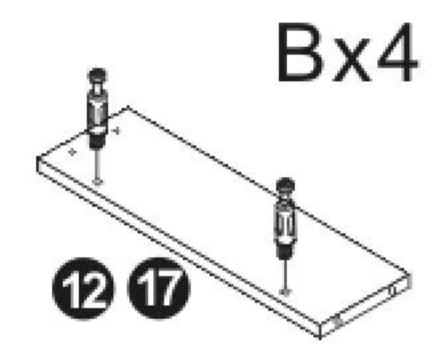


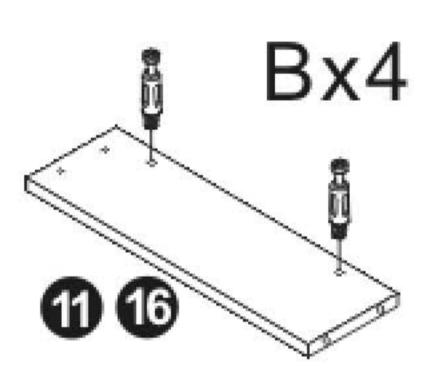


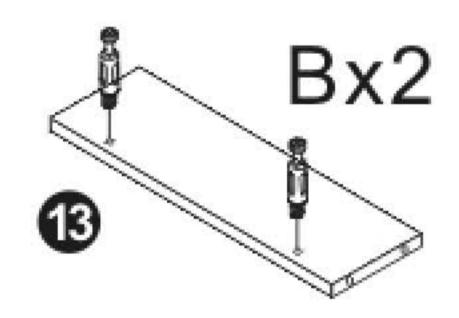


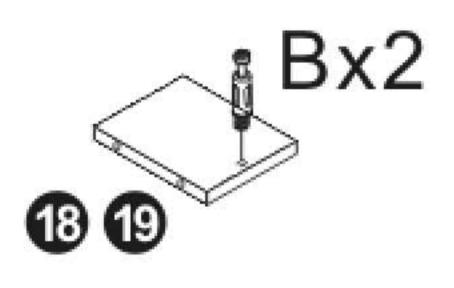


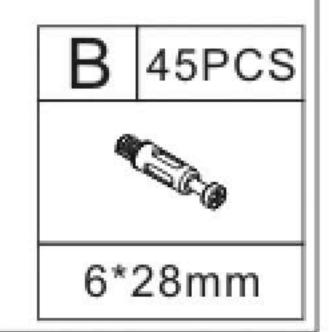


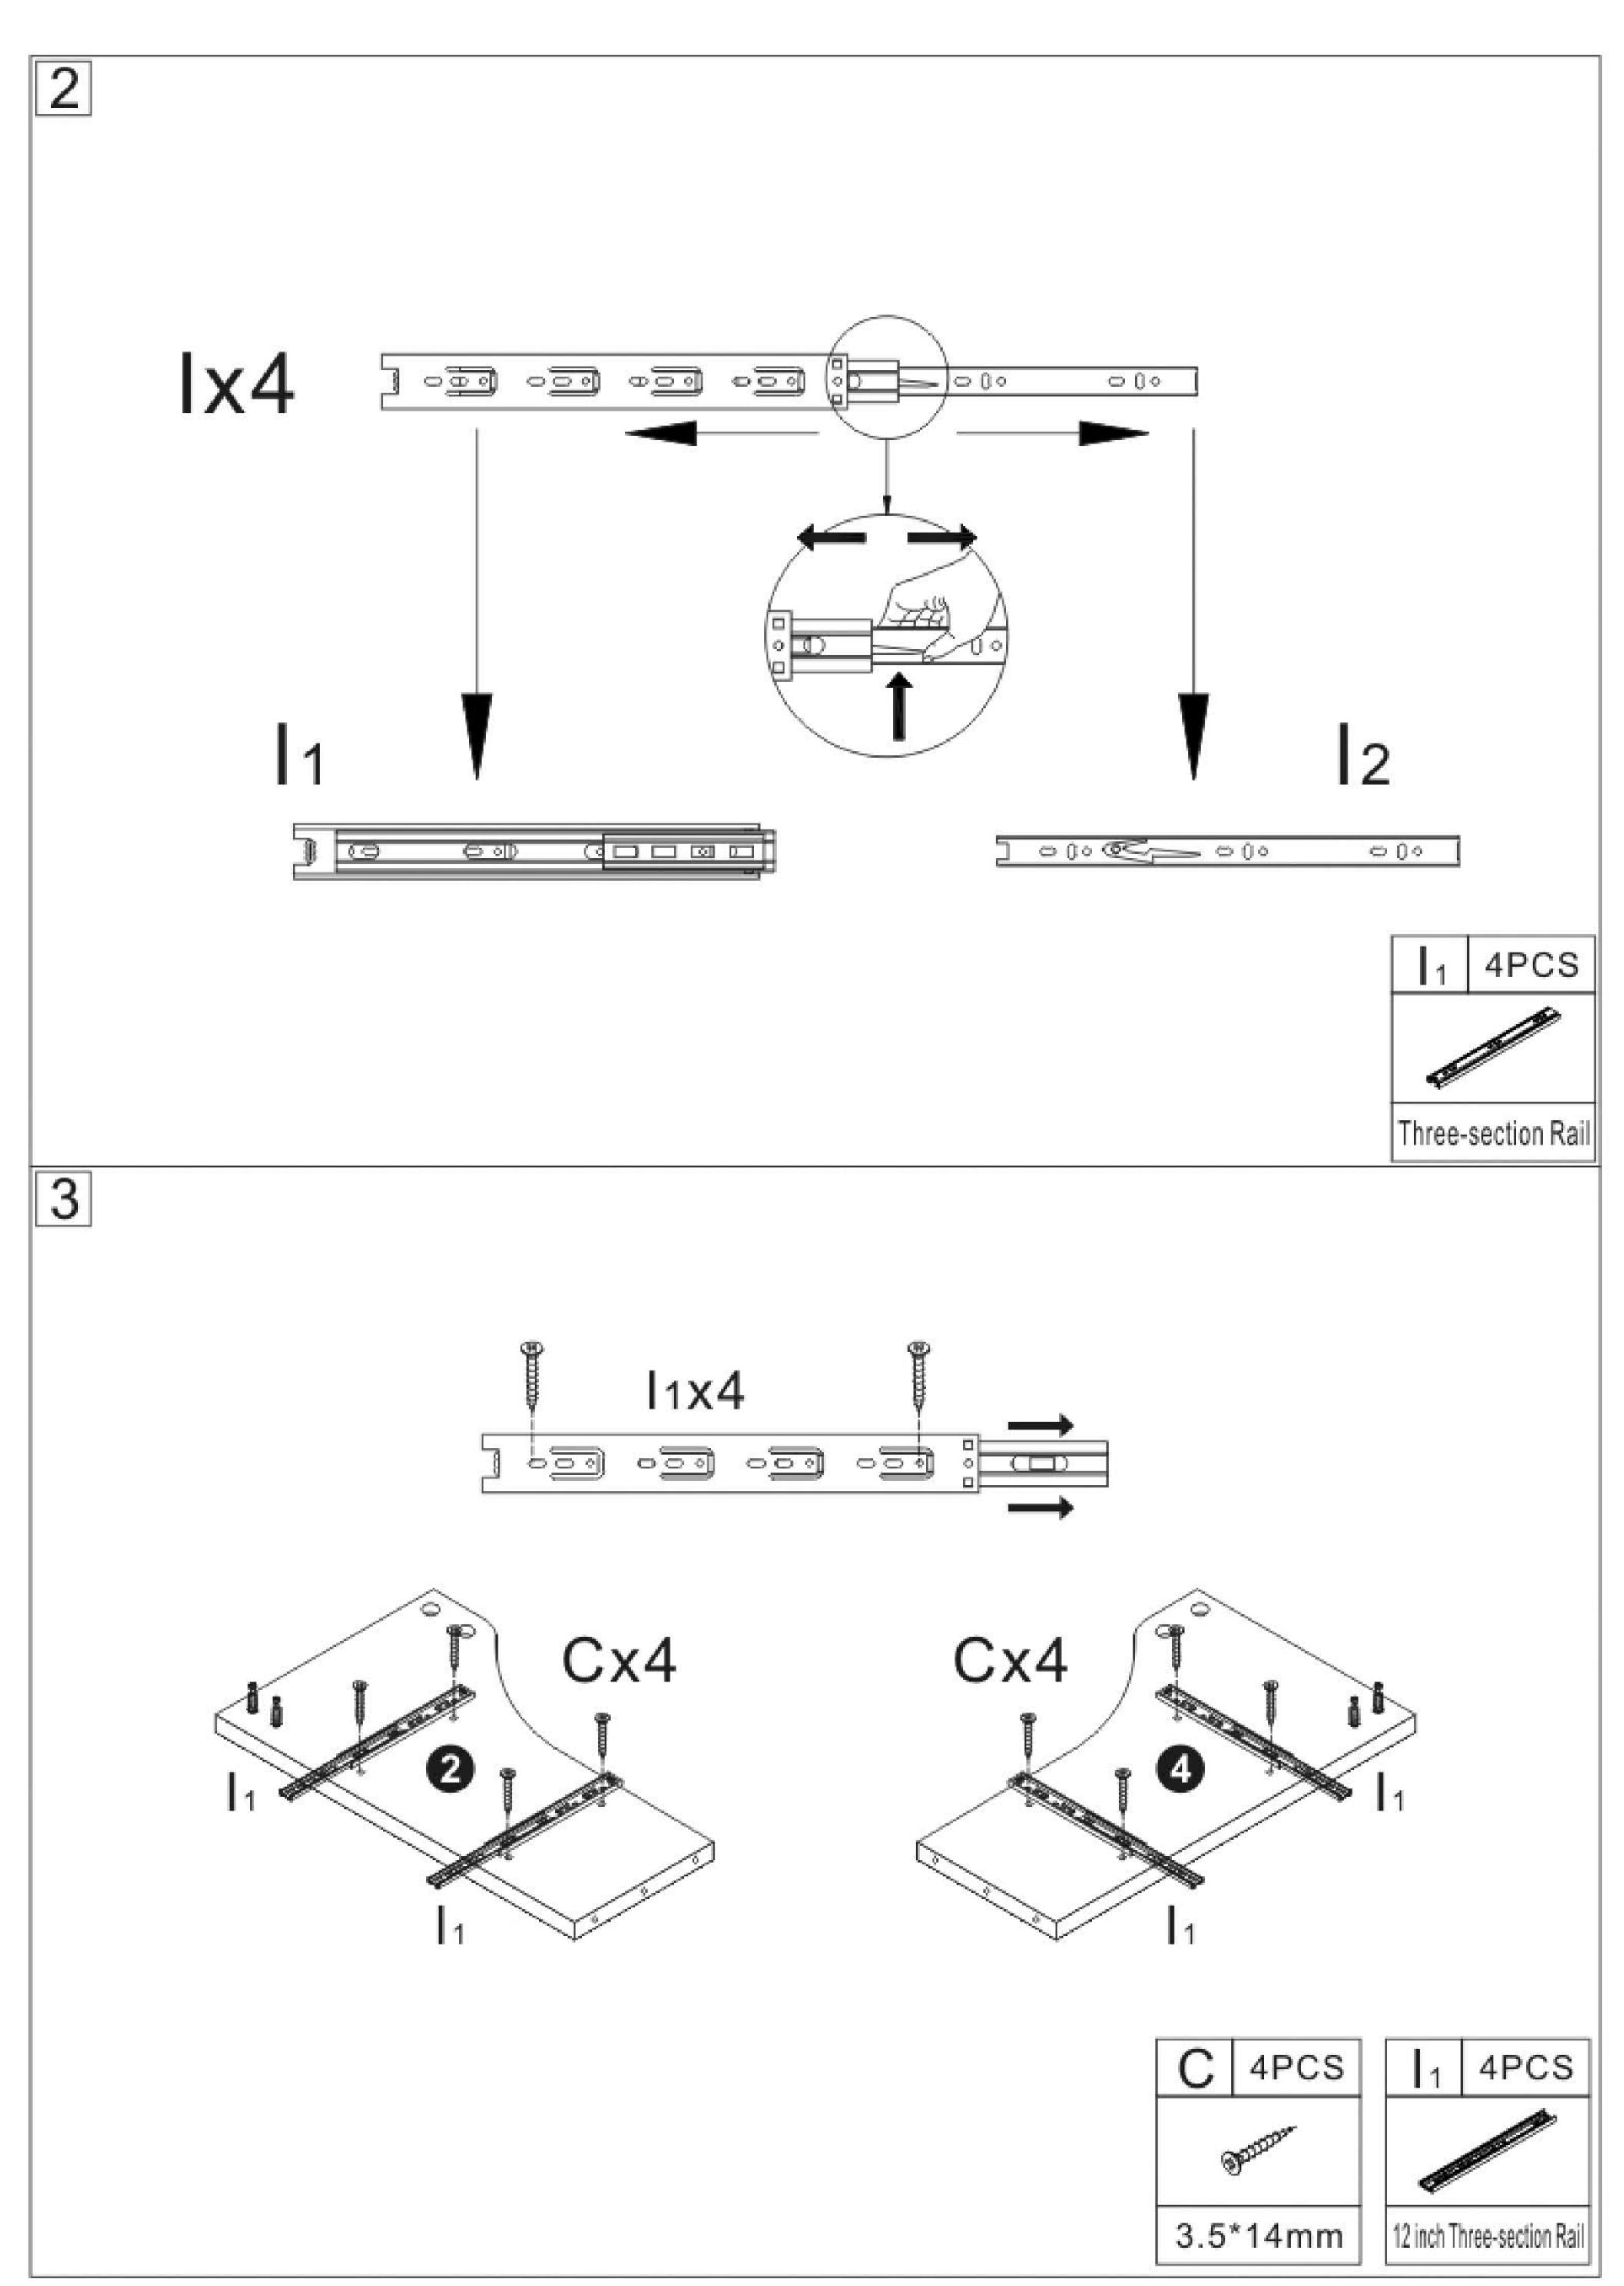

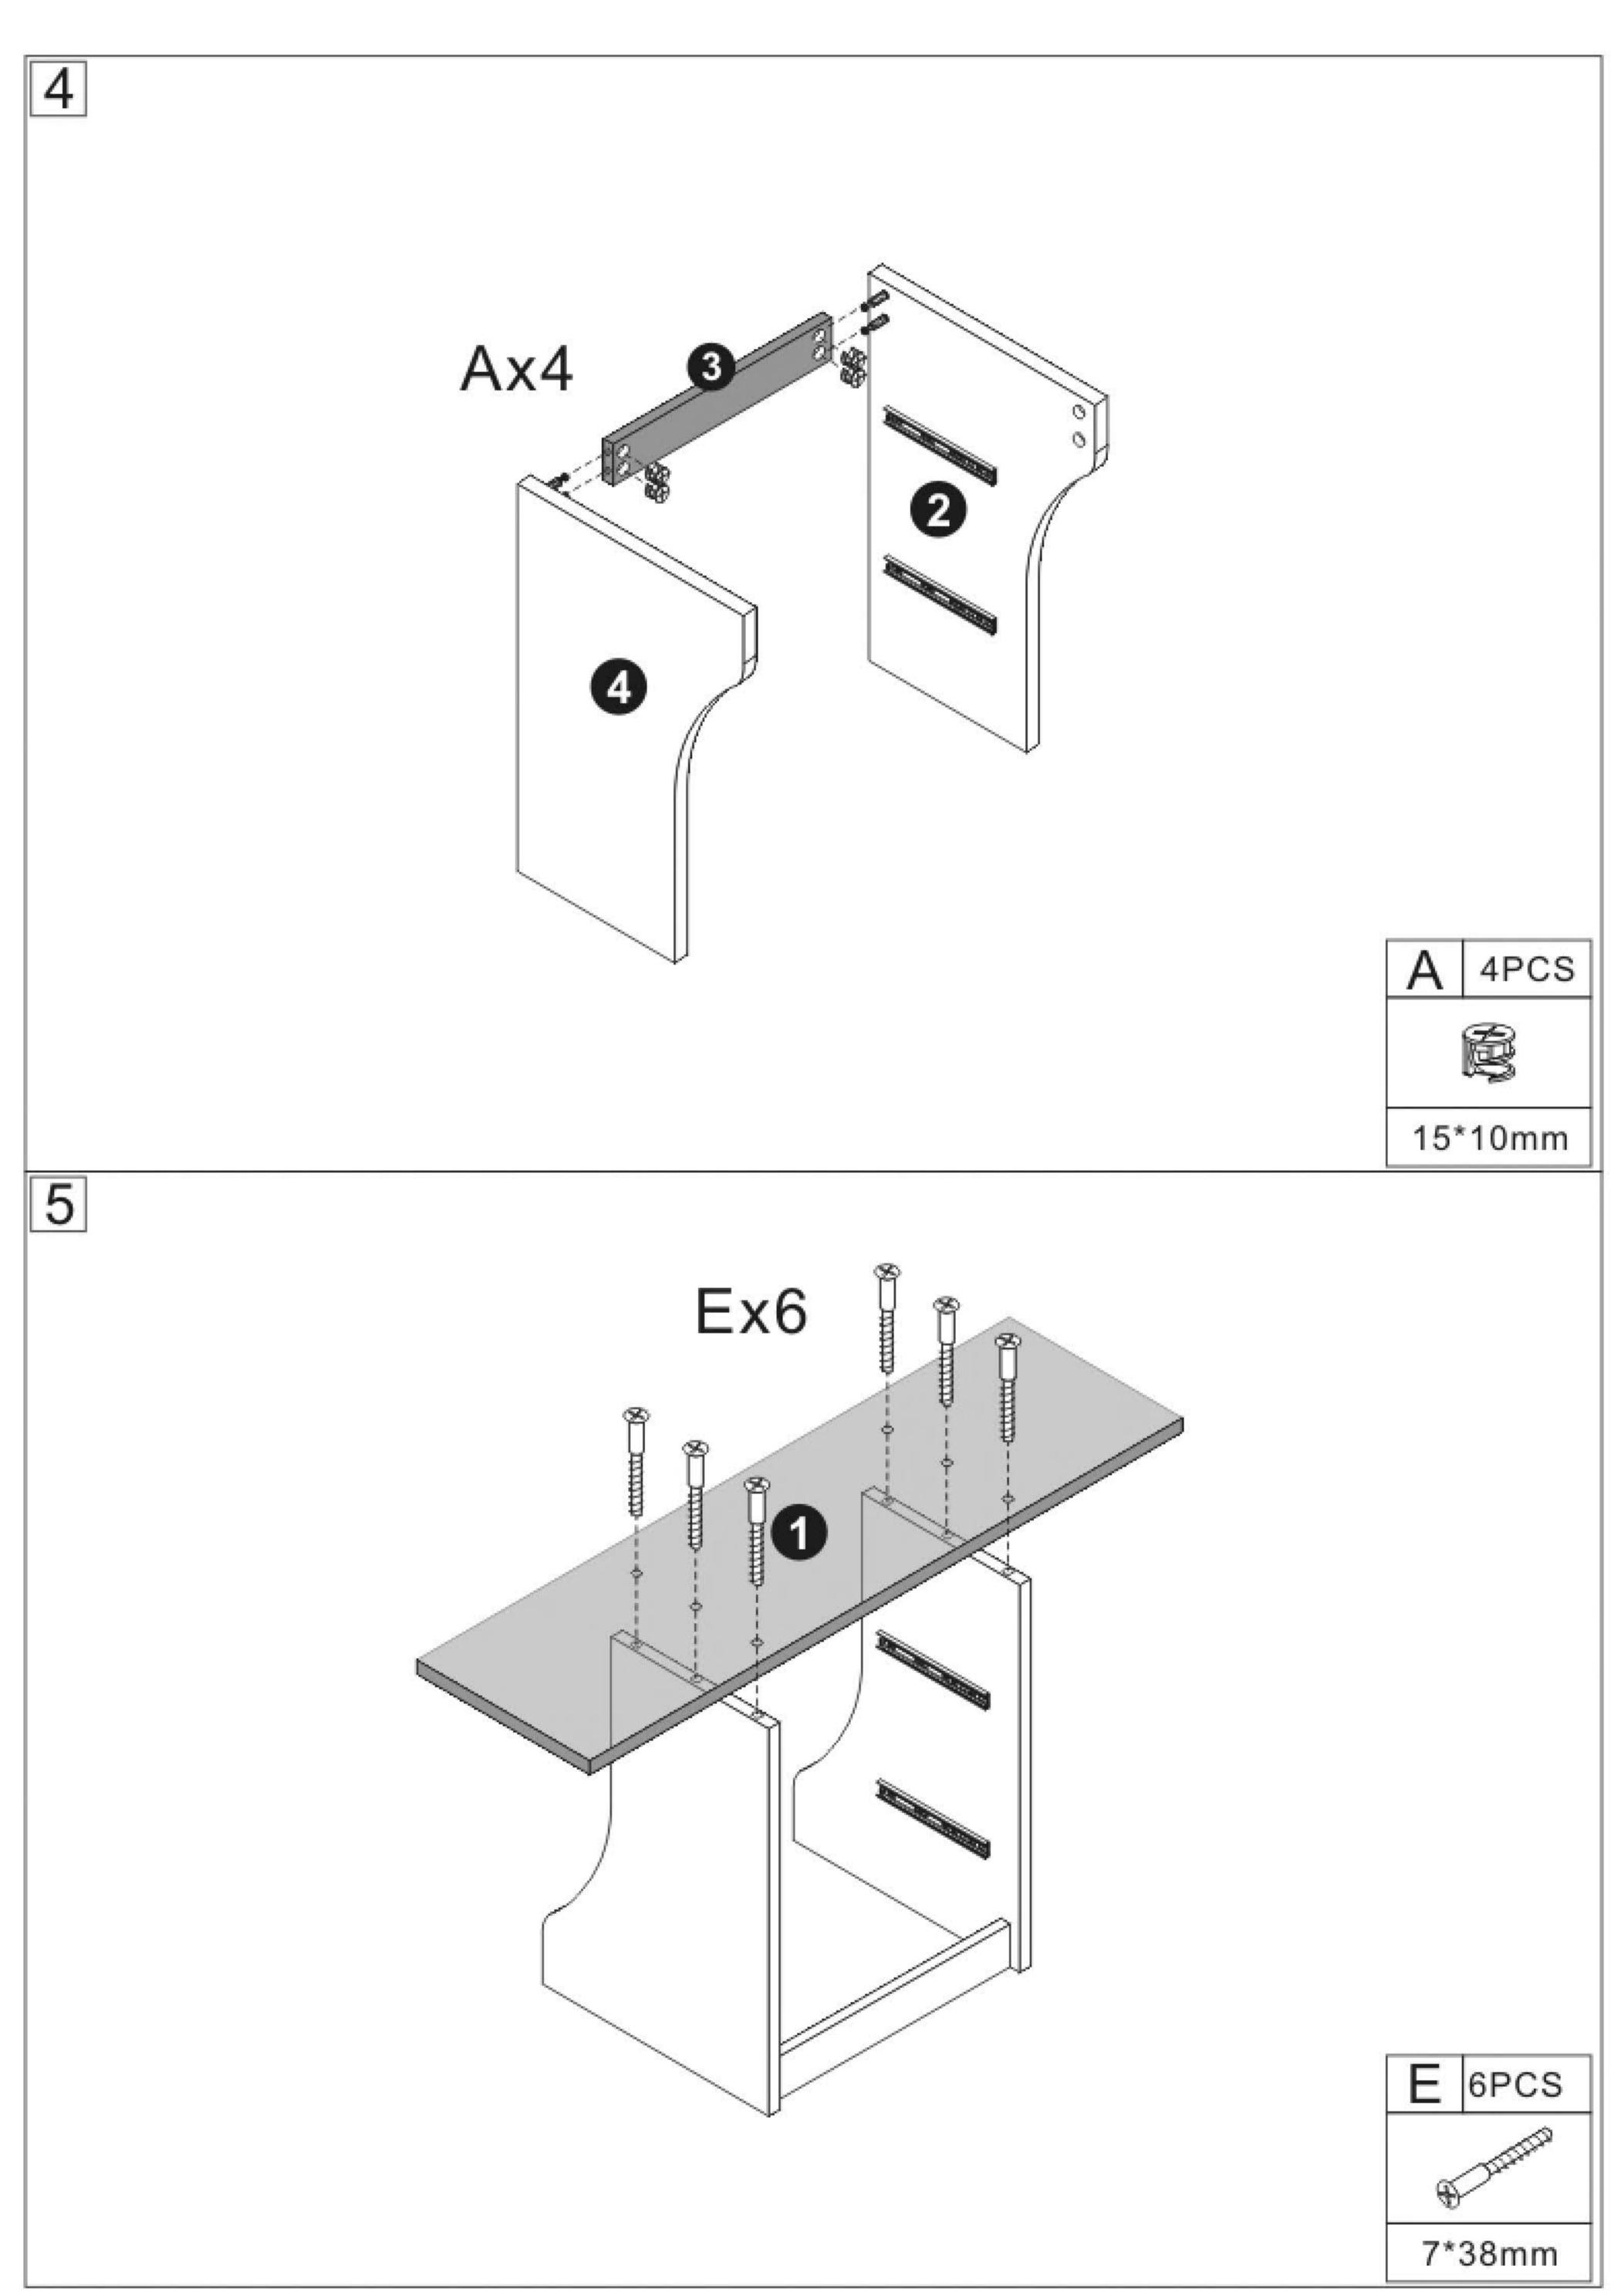


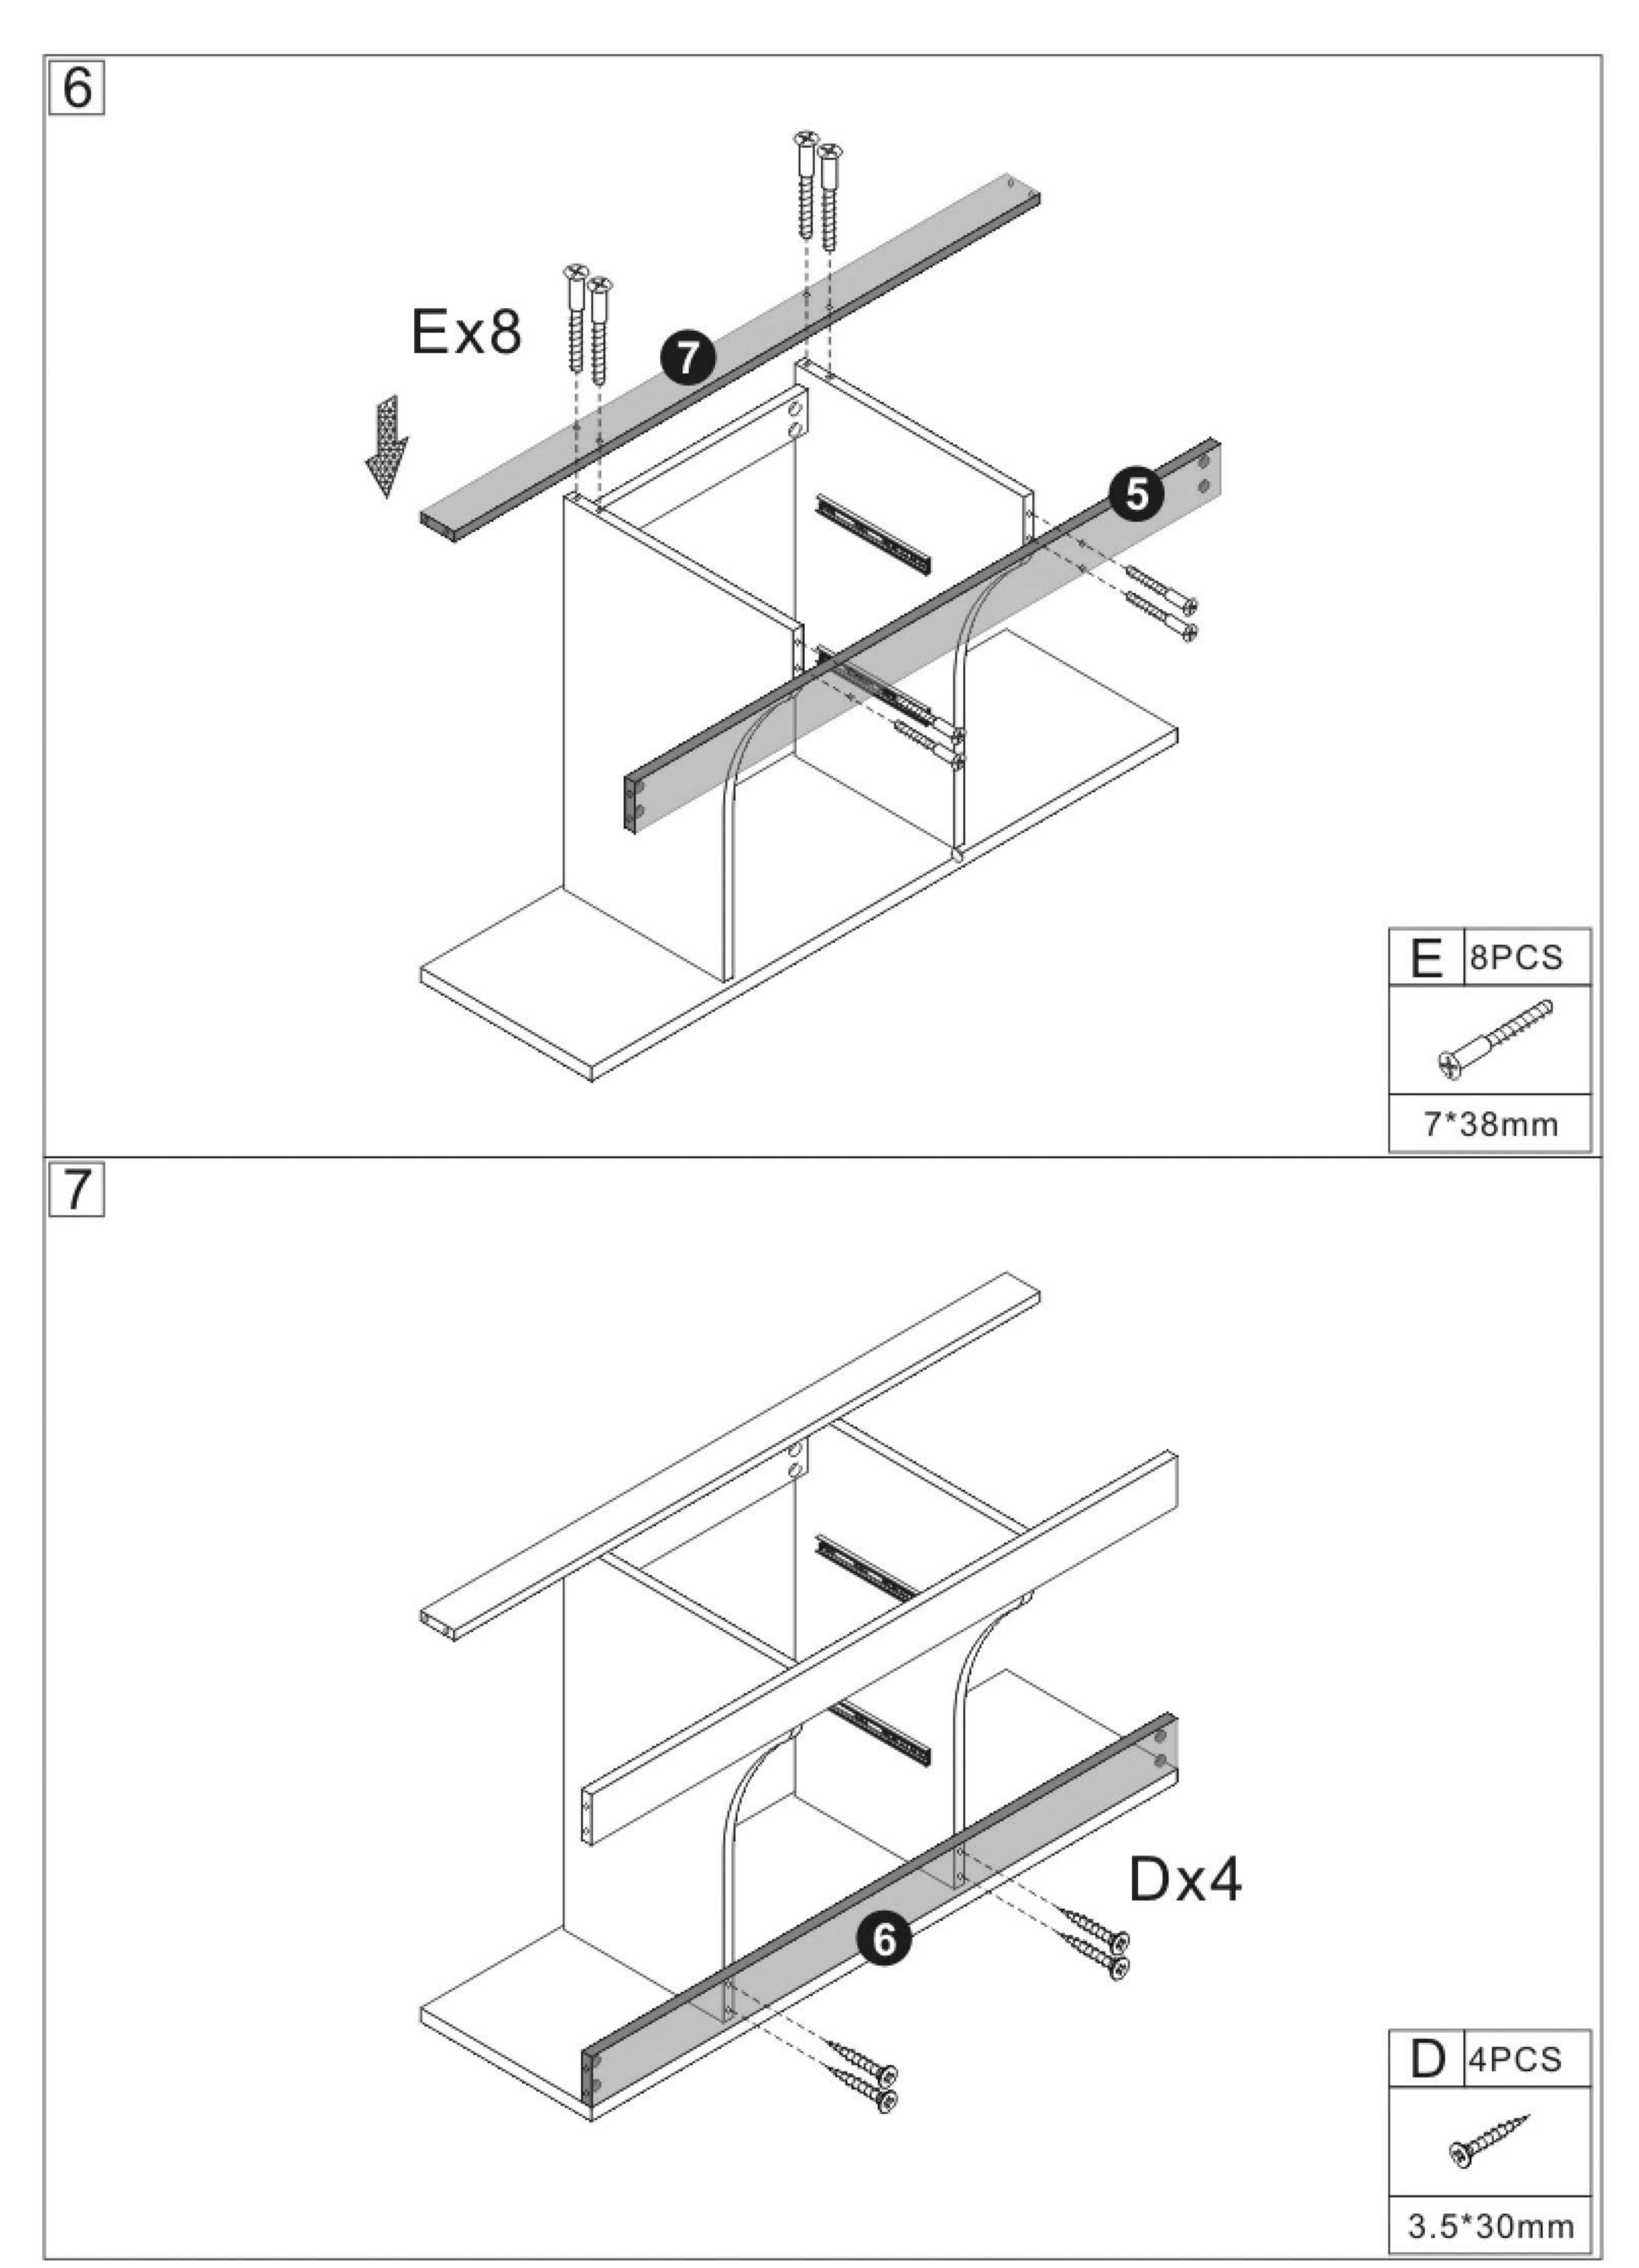


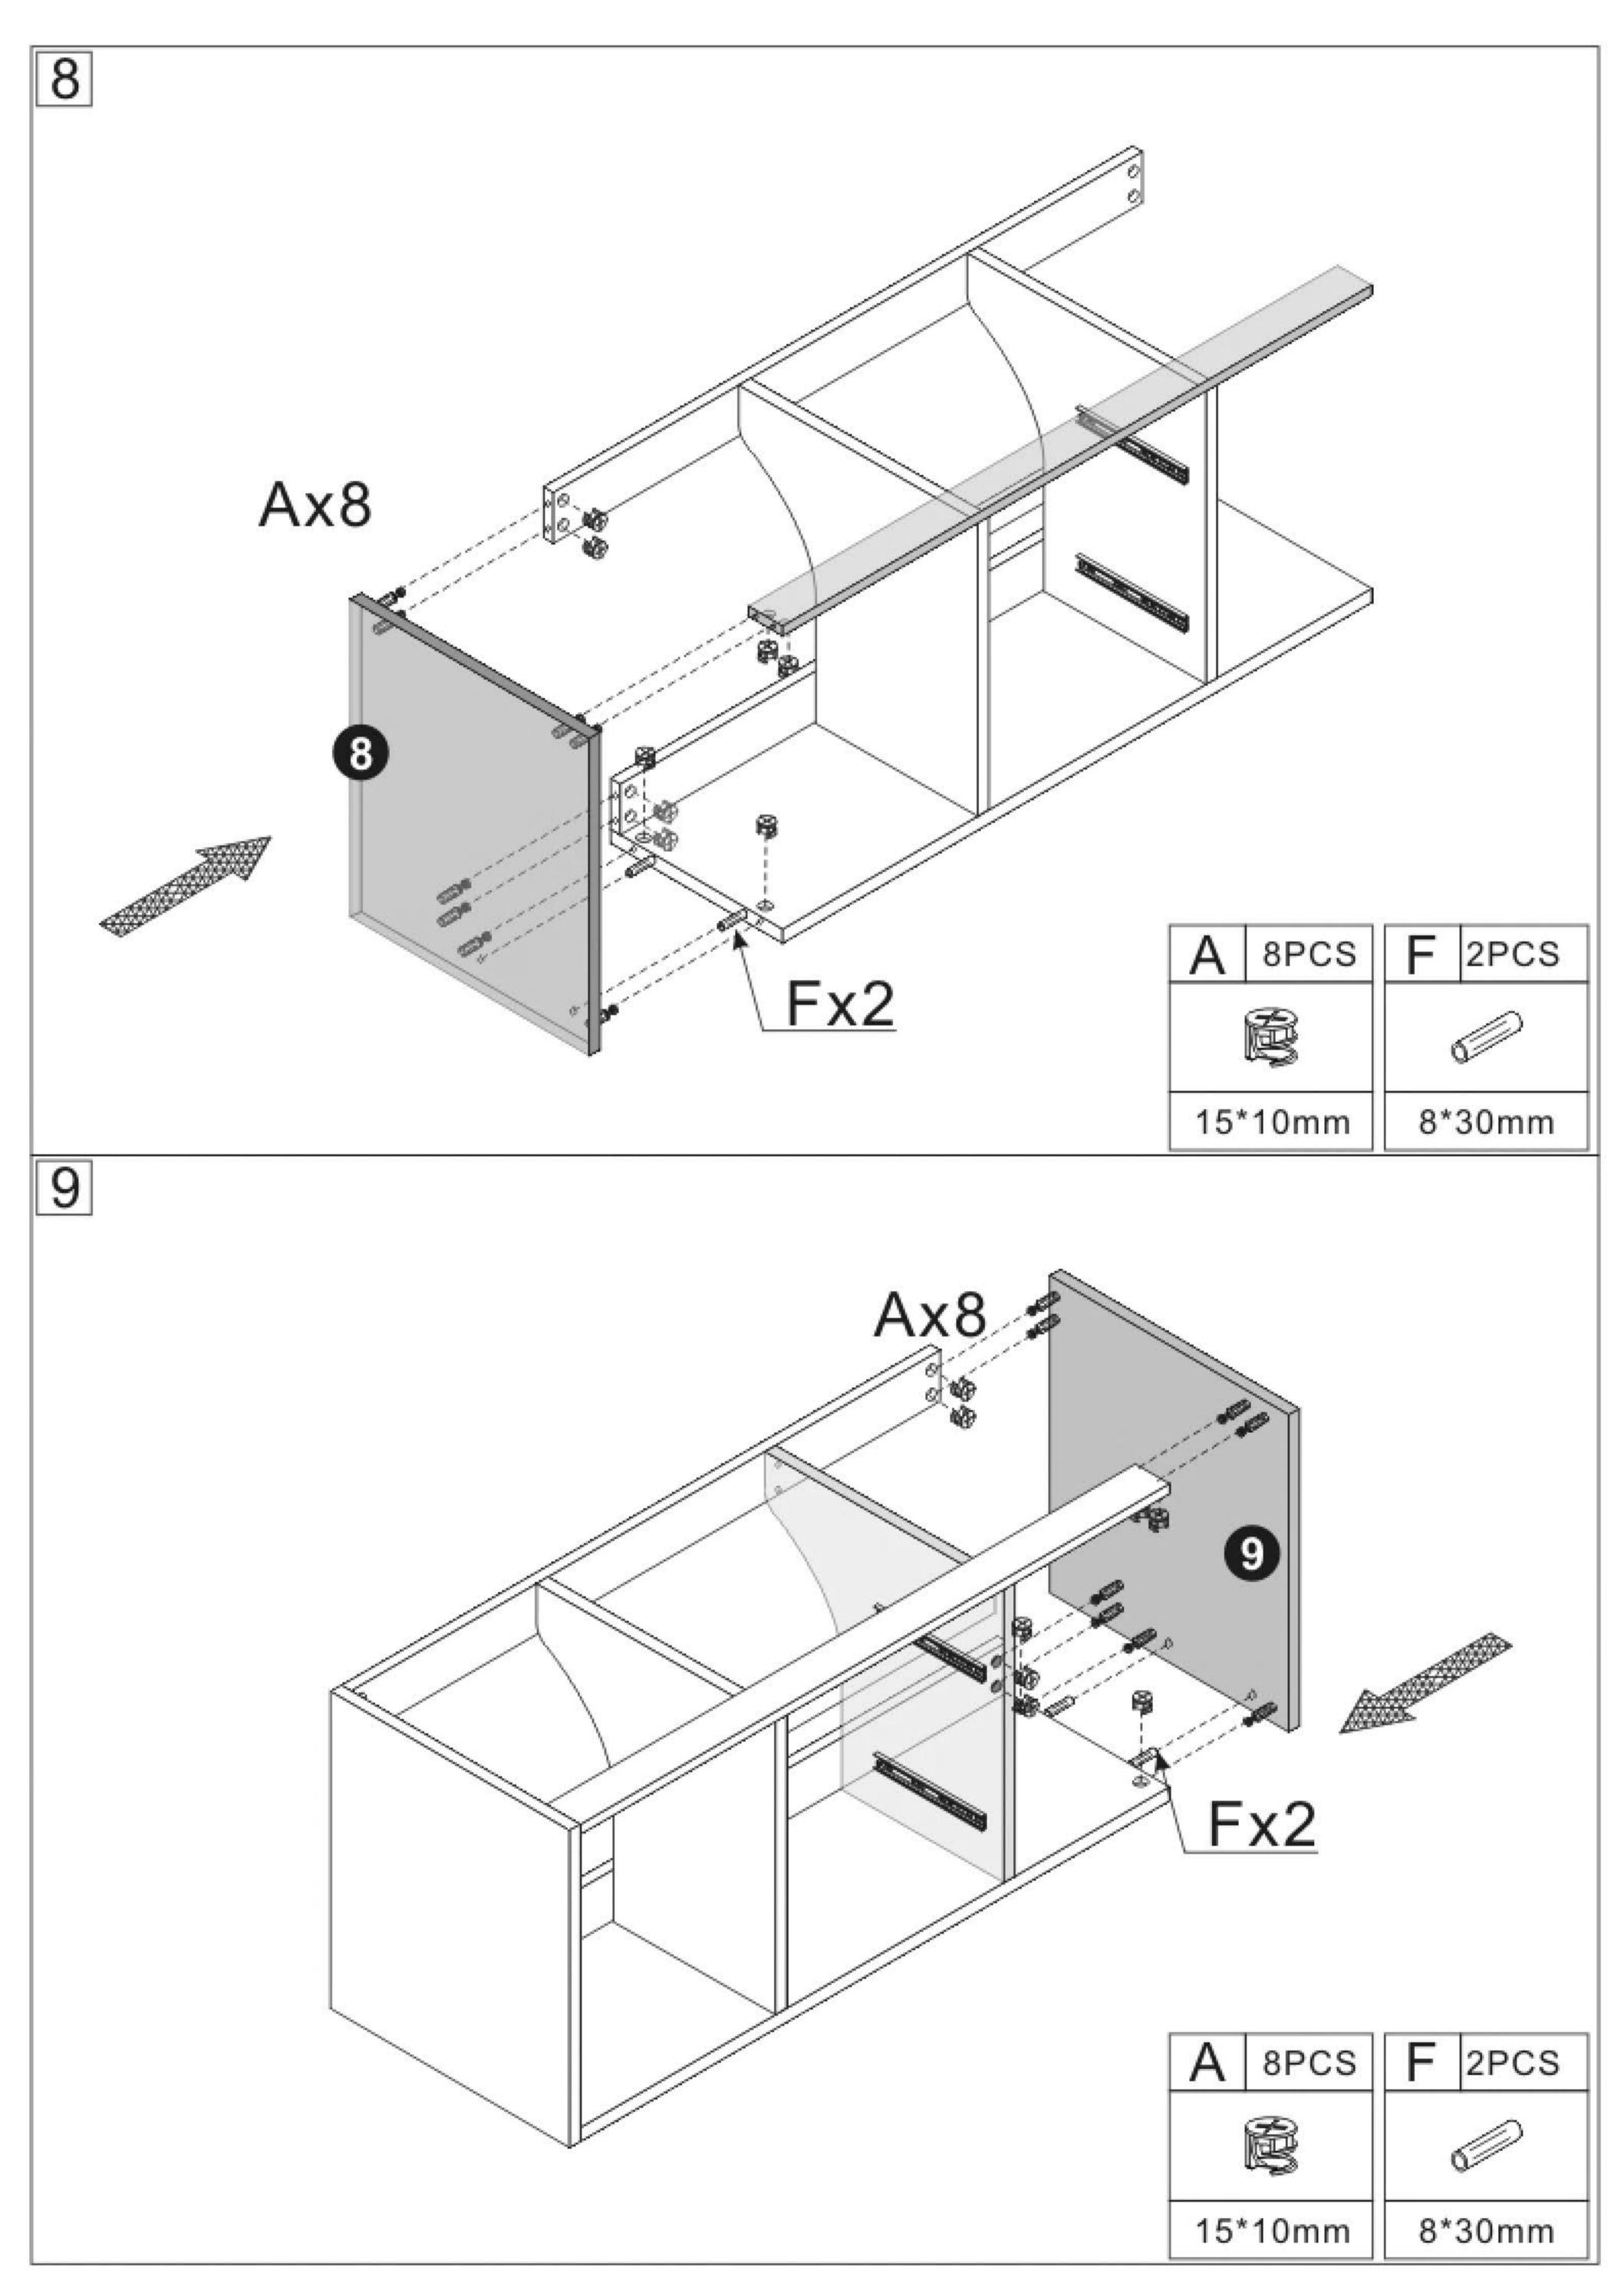


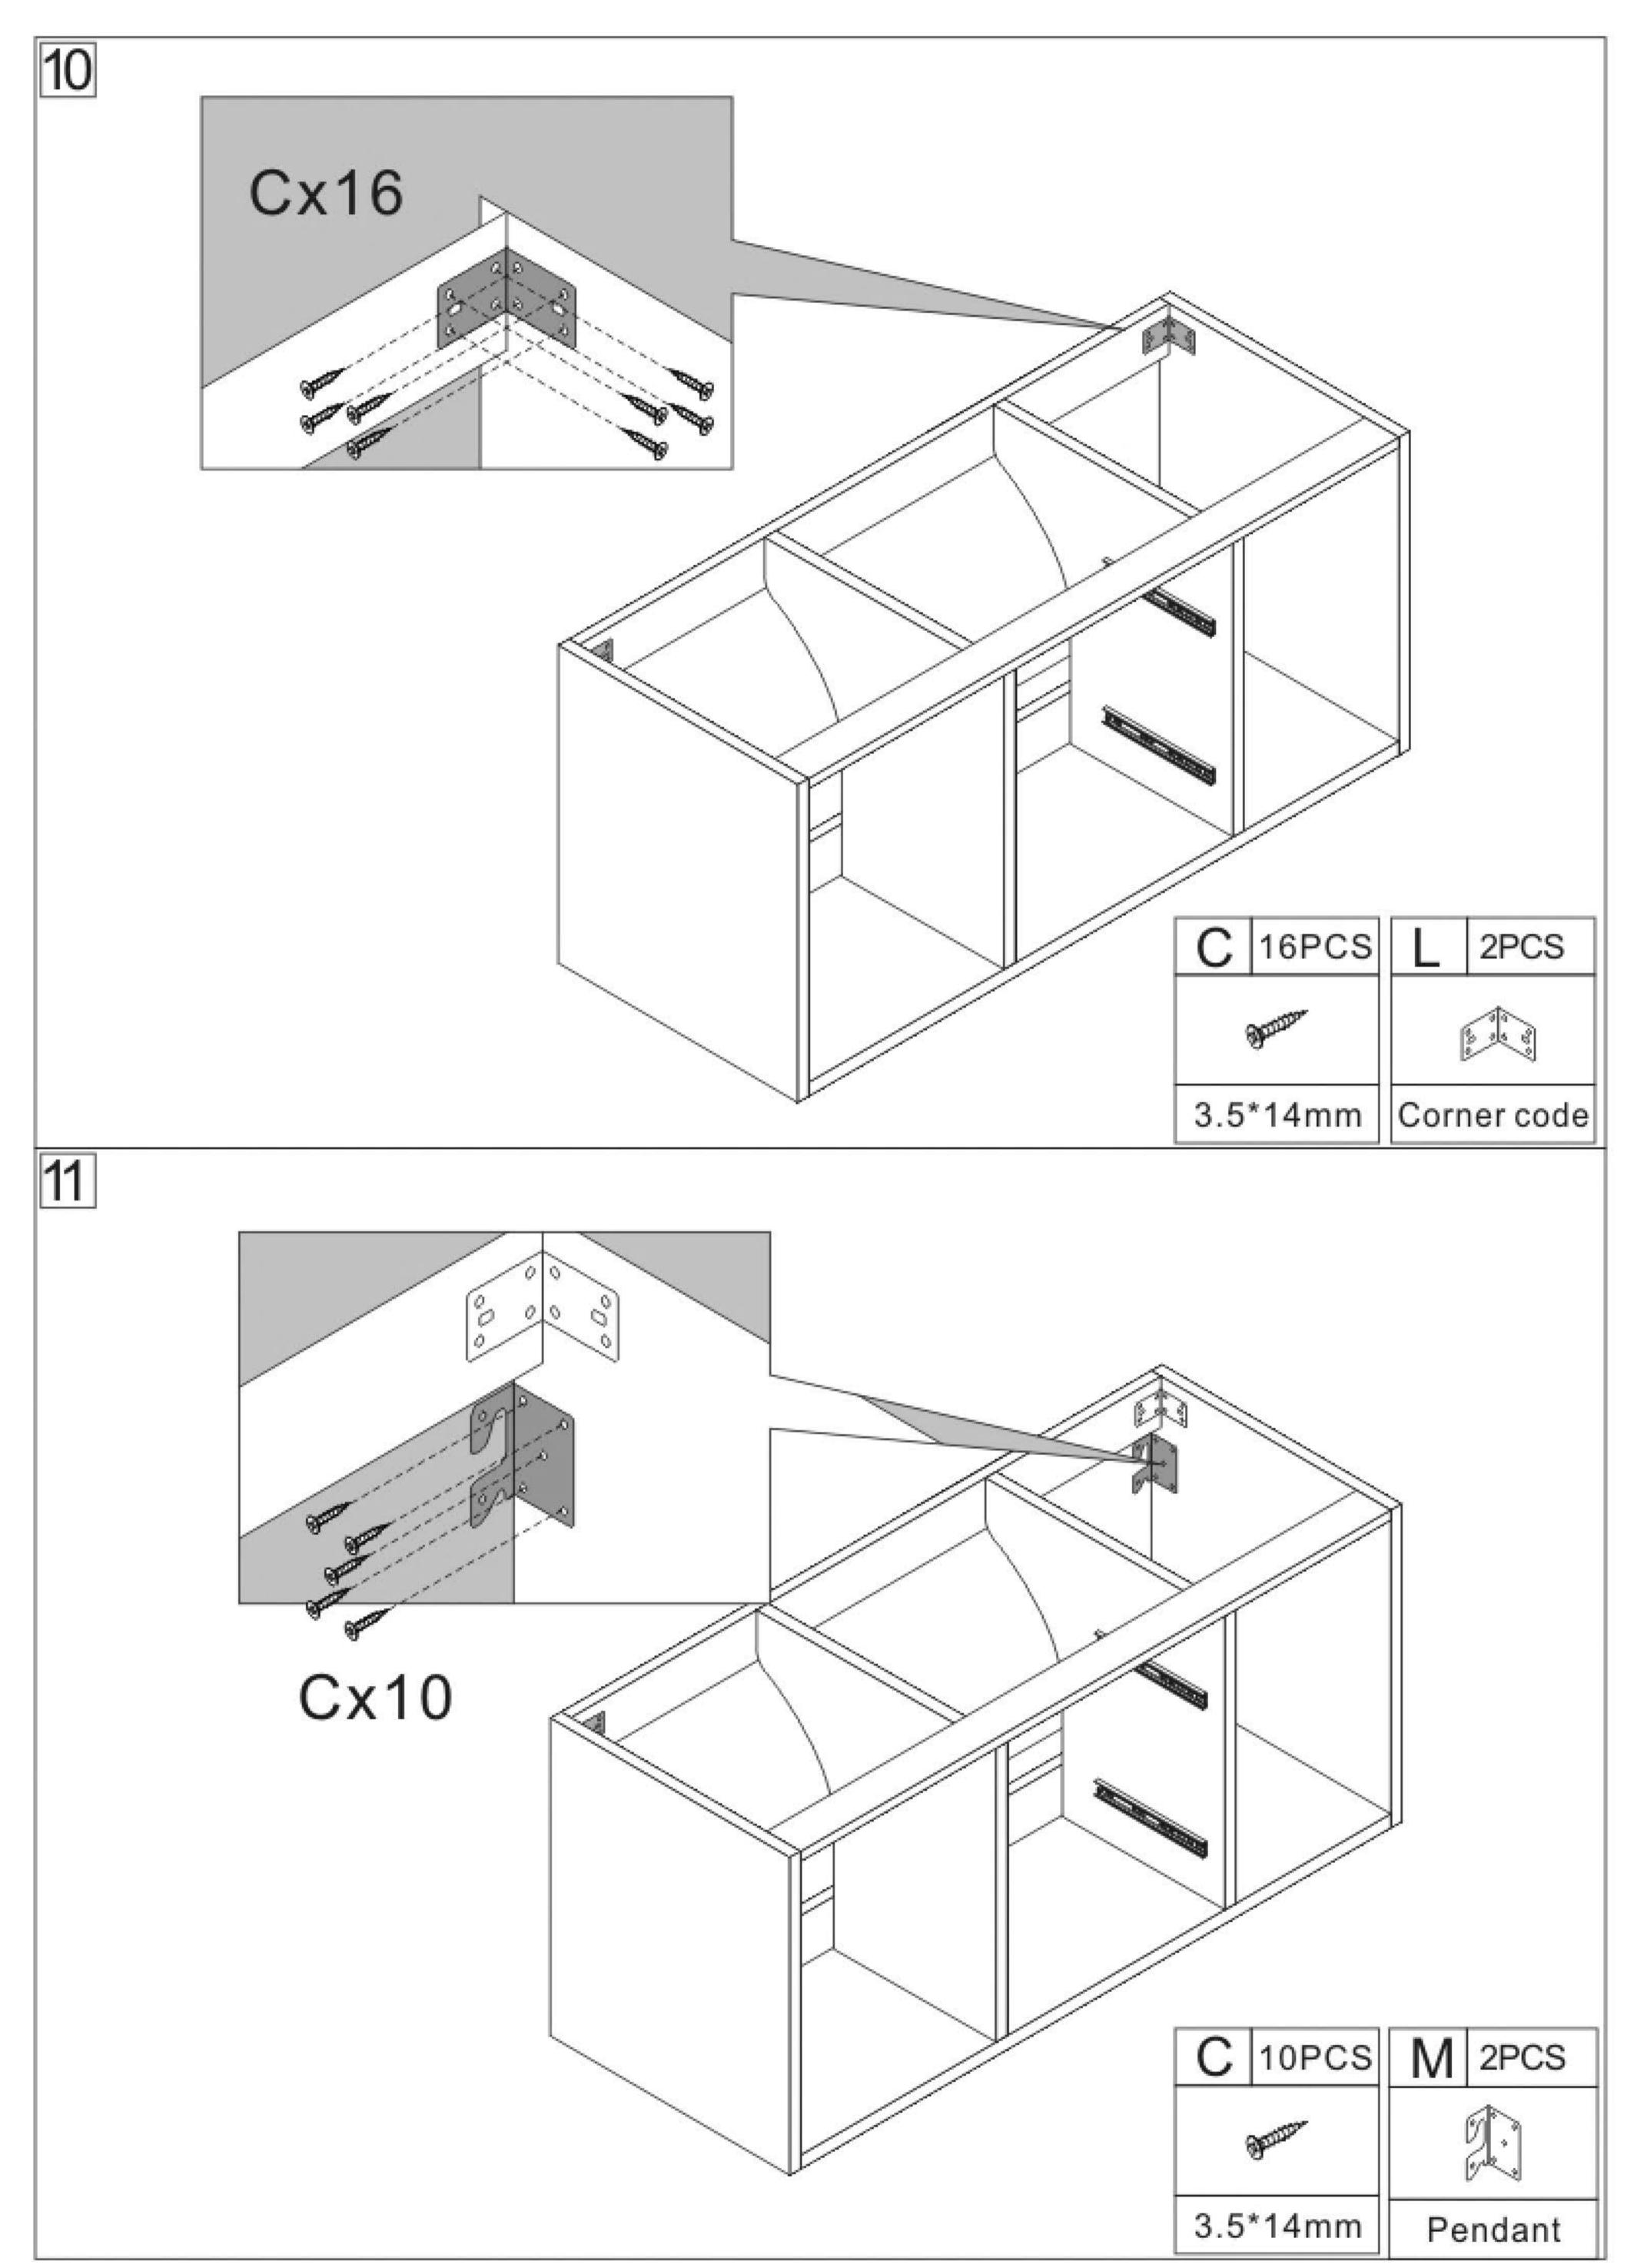


9 Pages

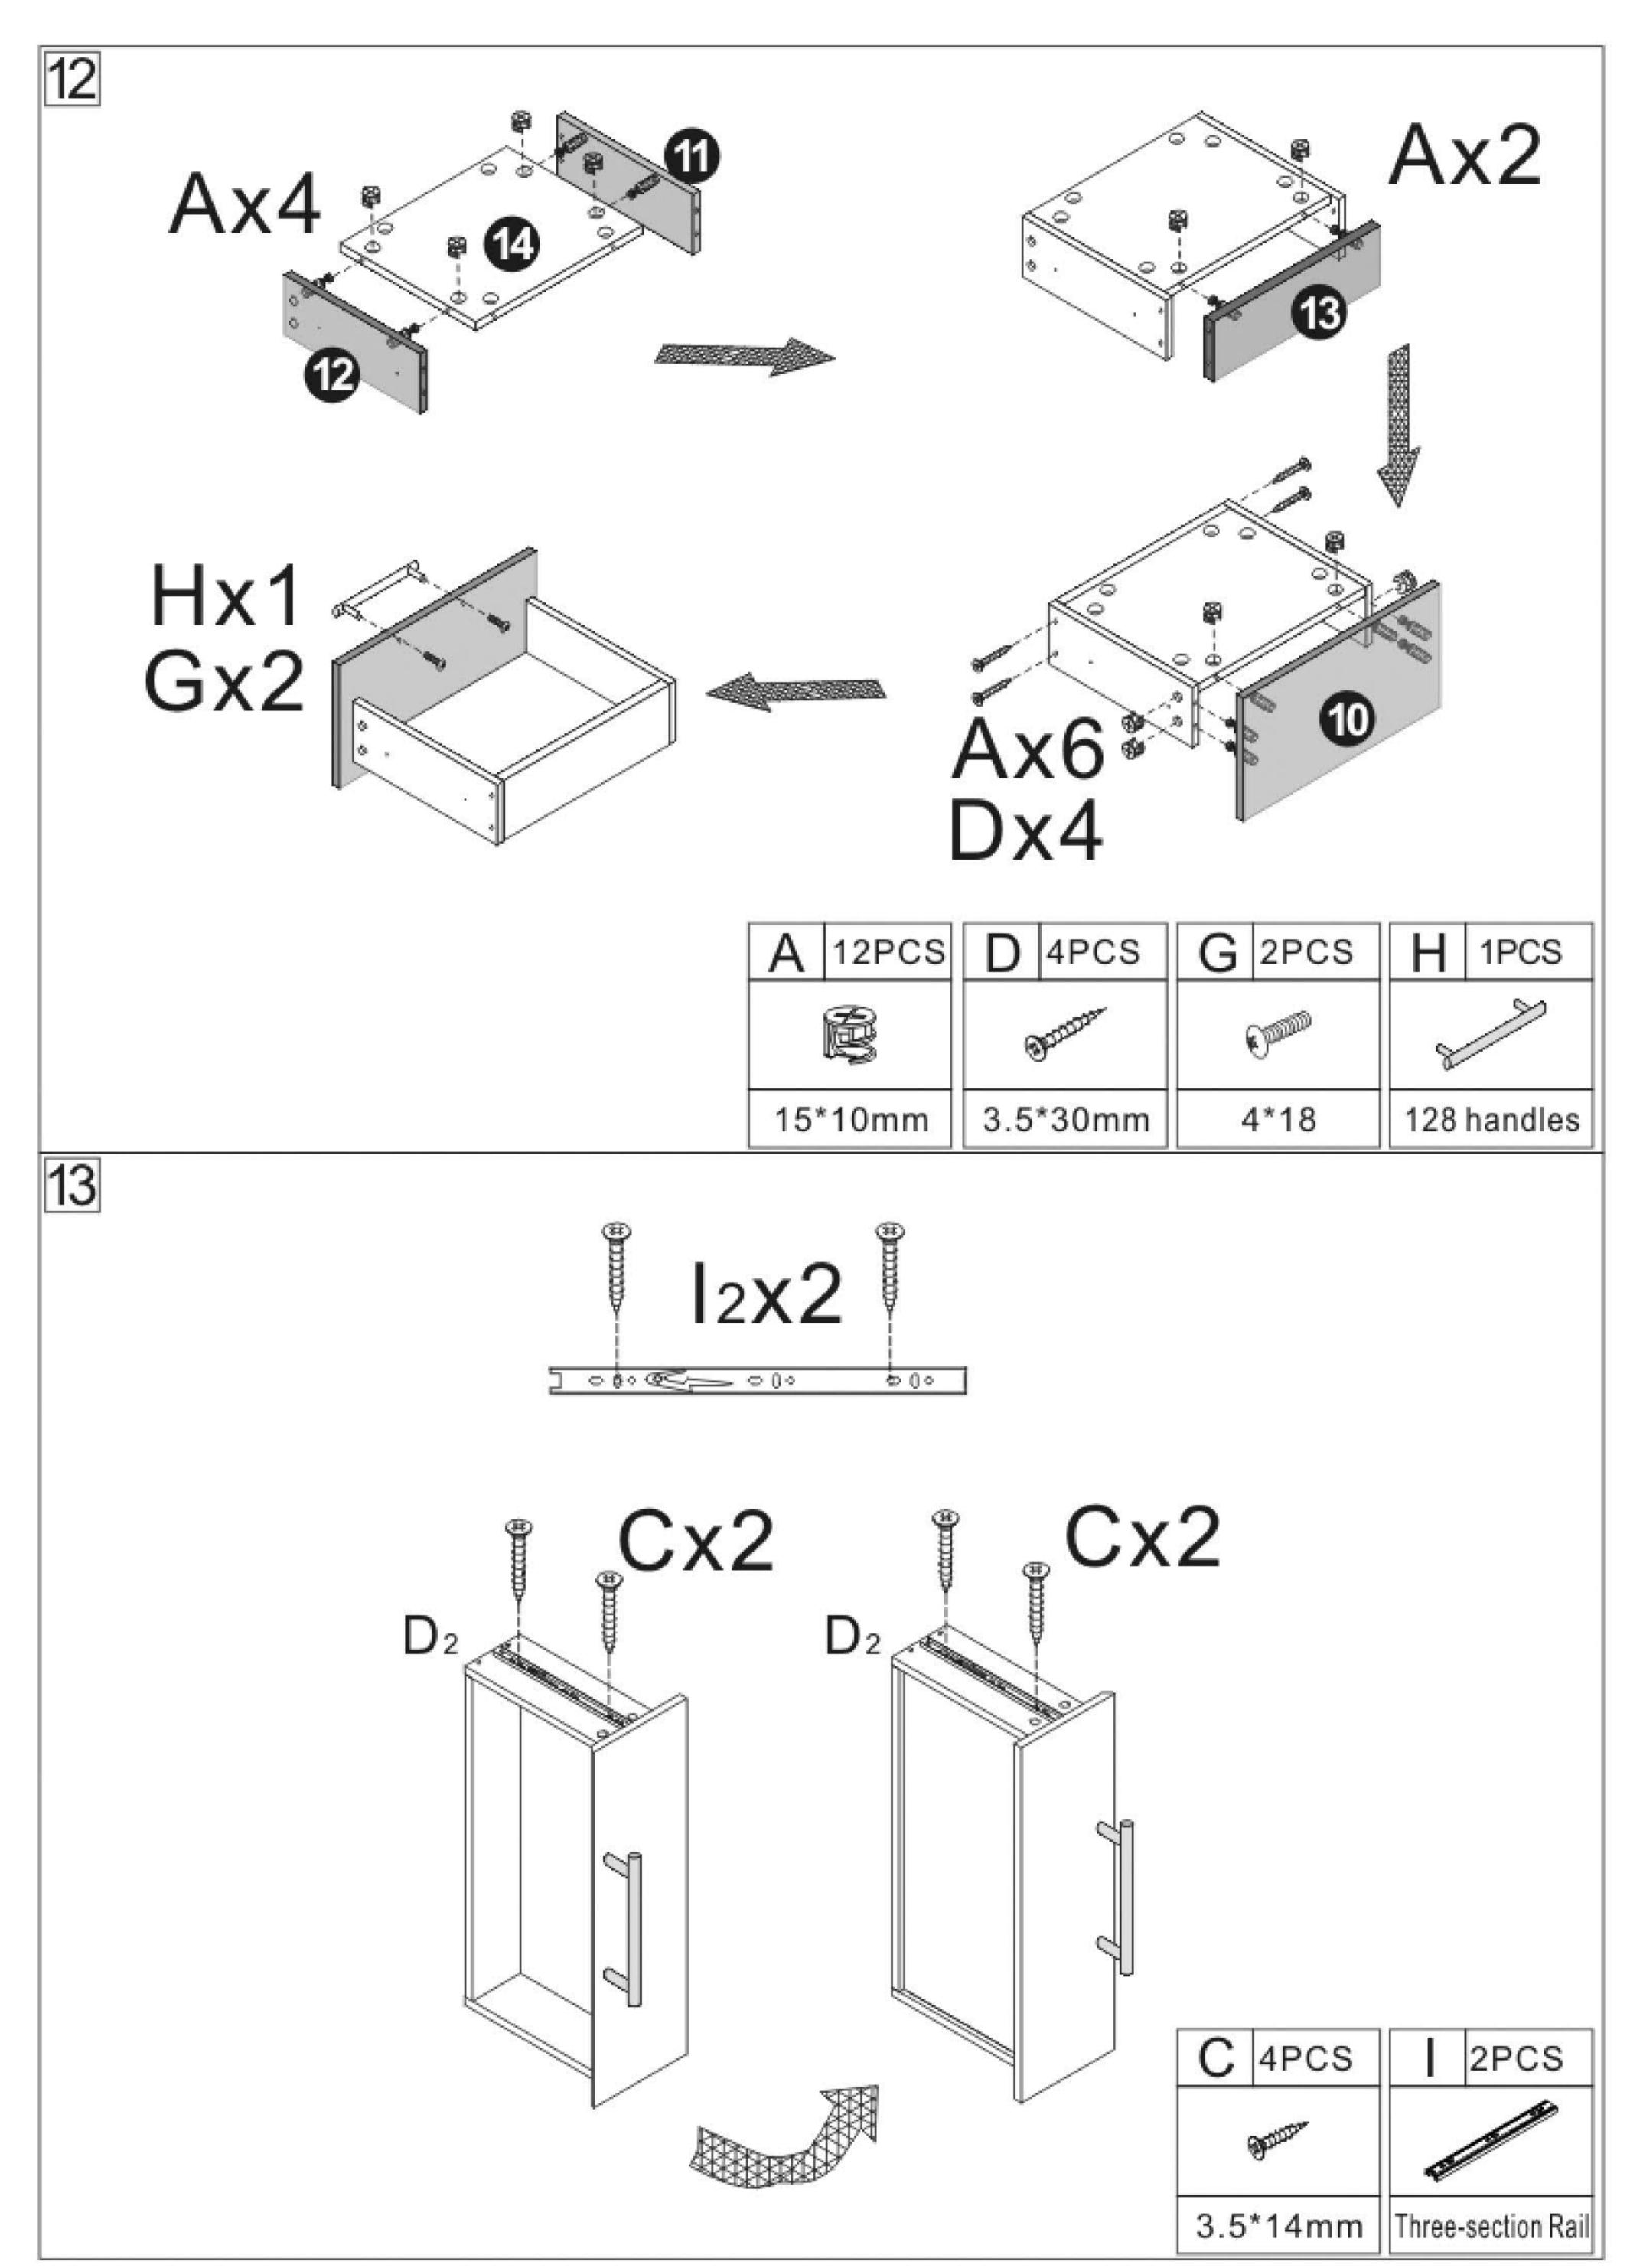


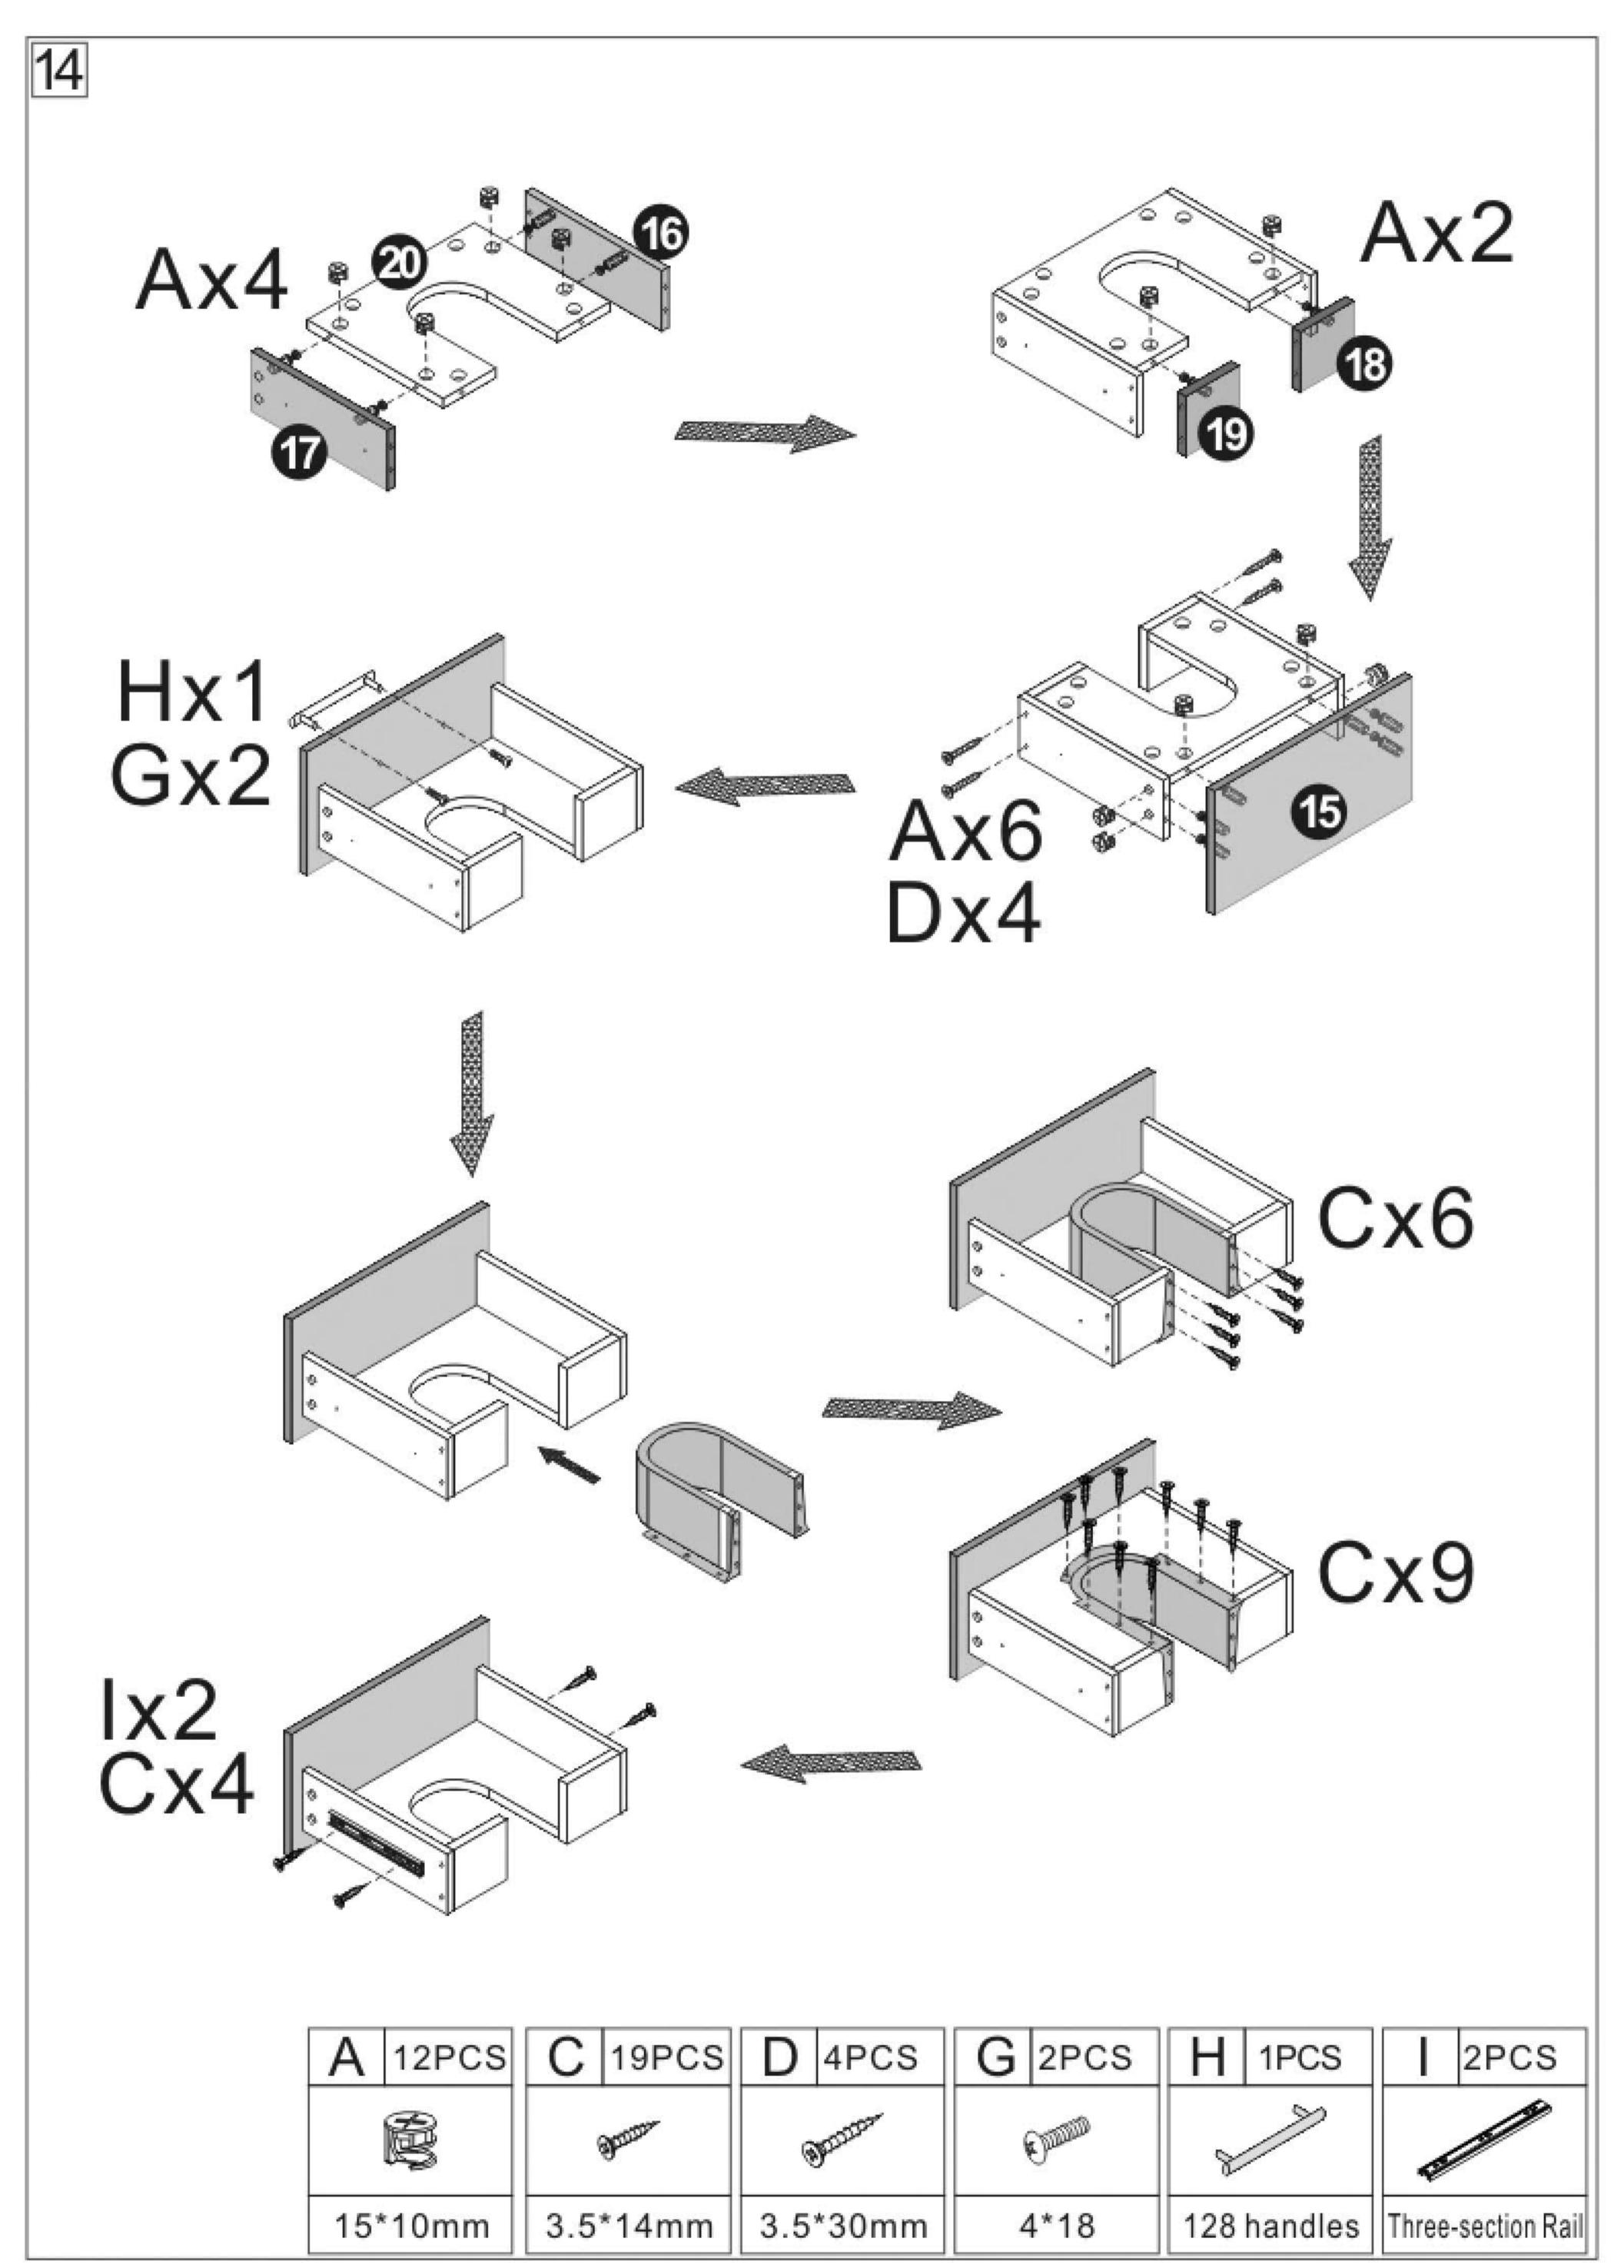


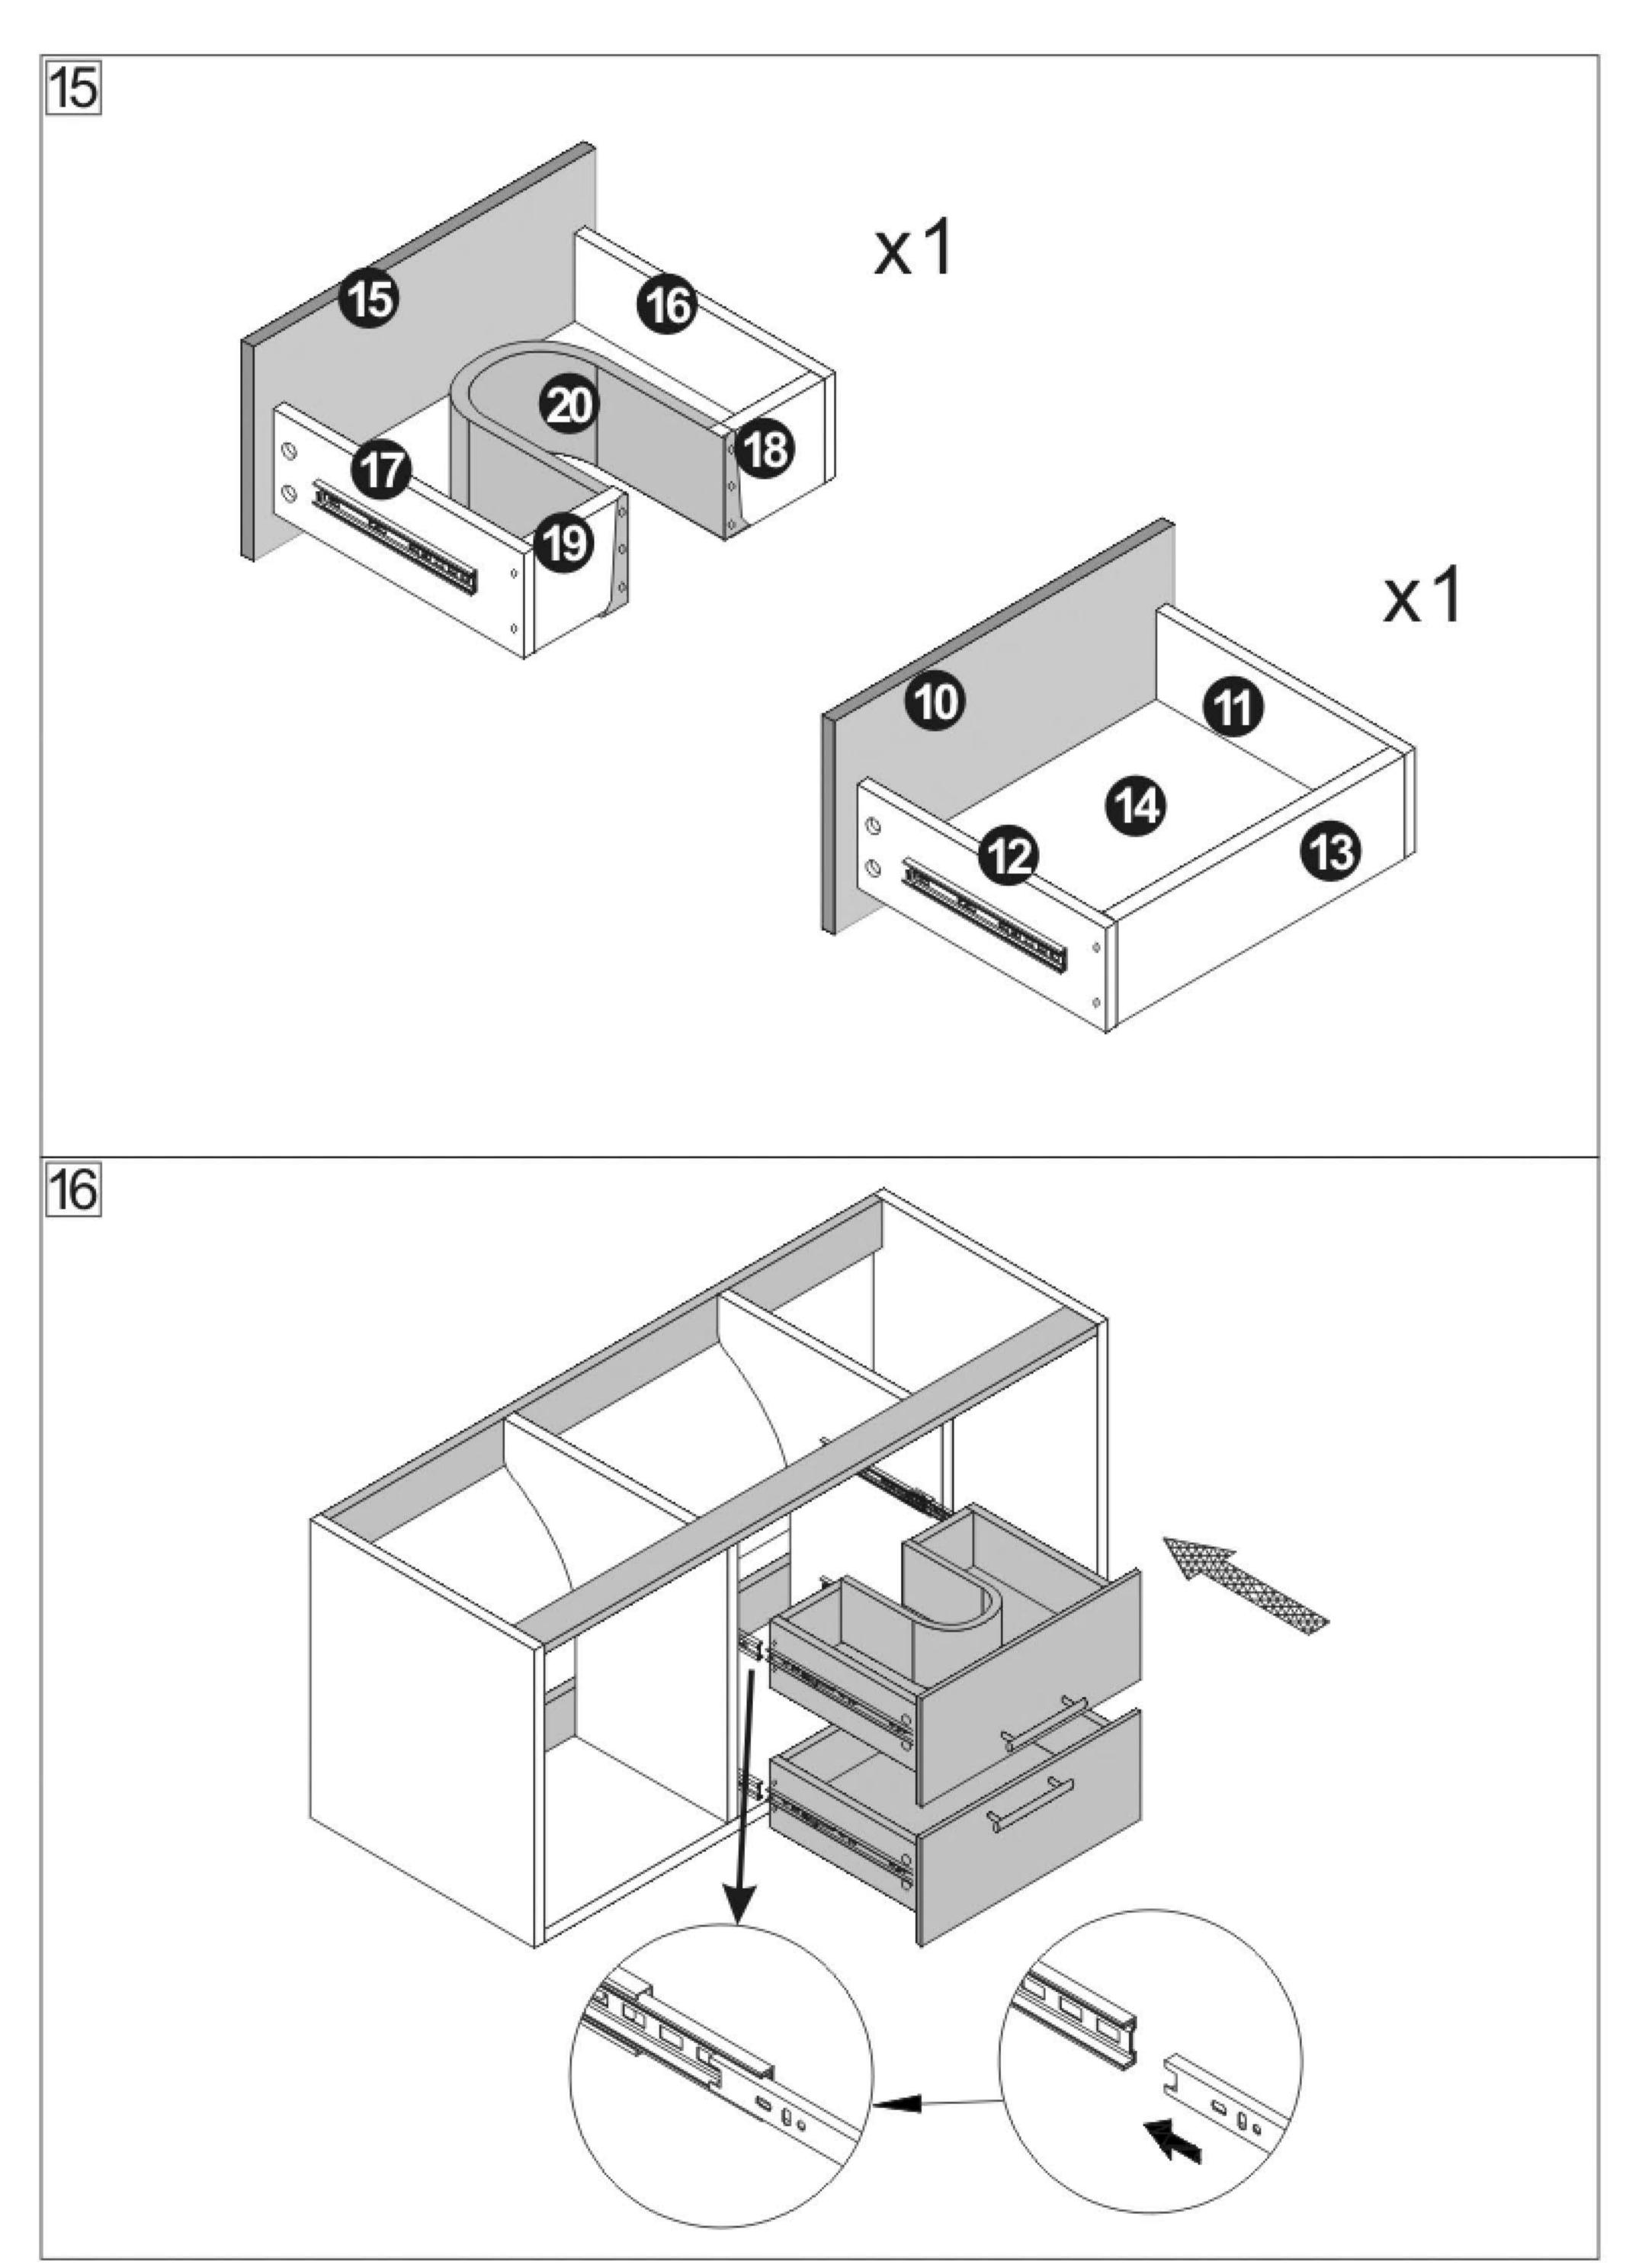

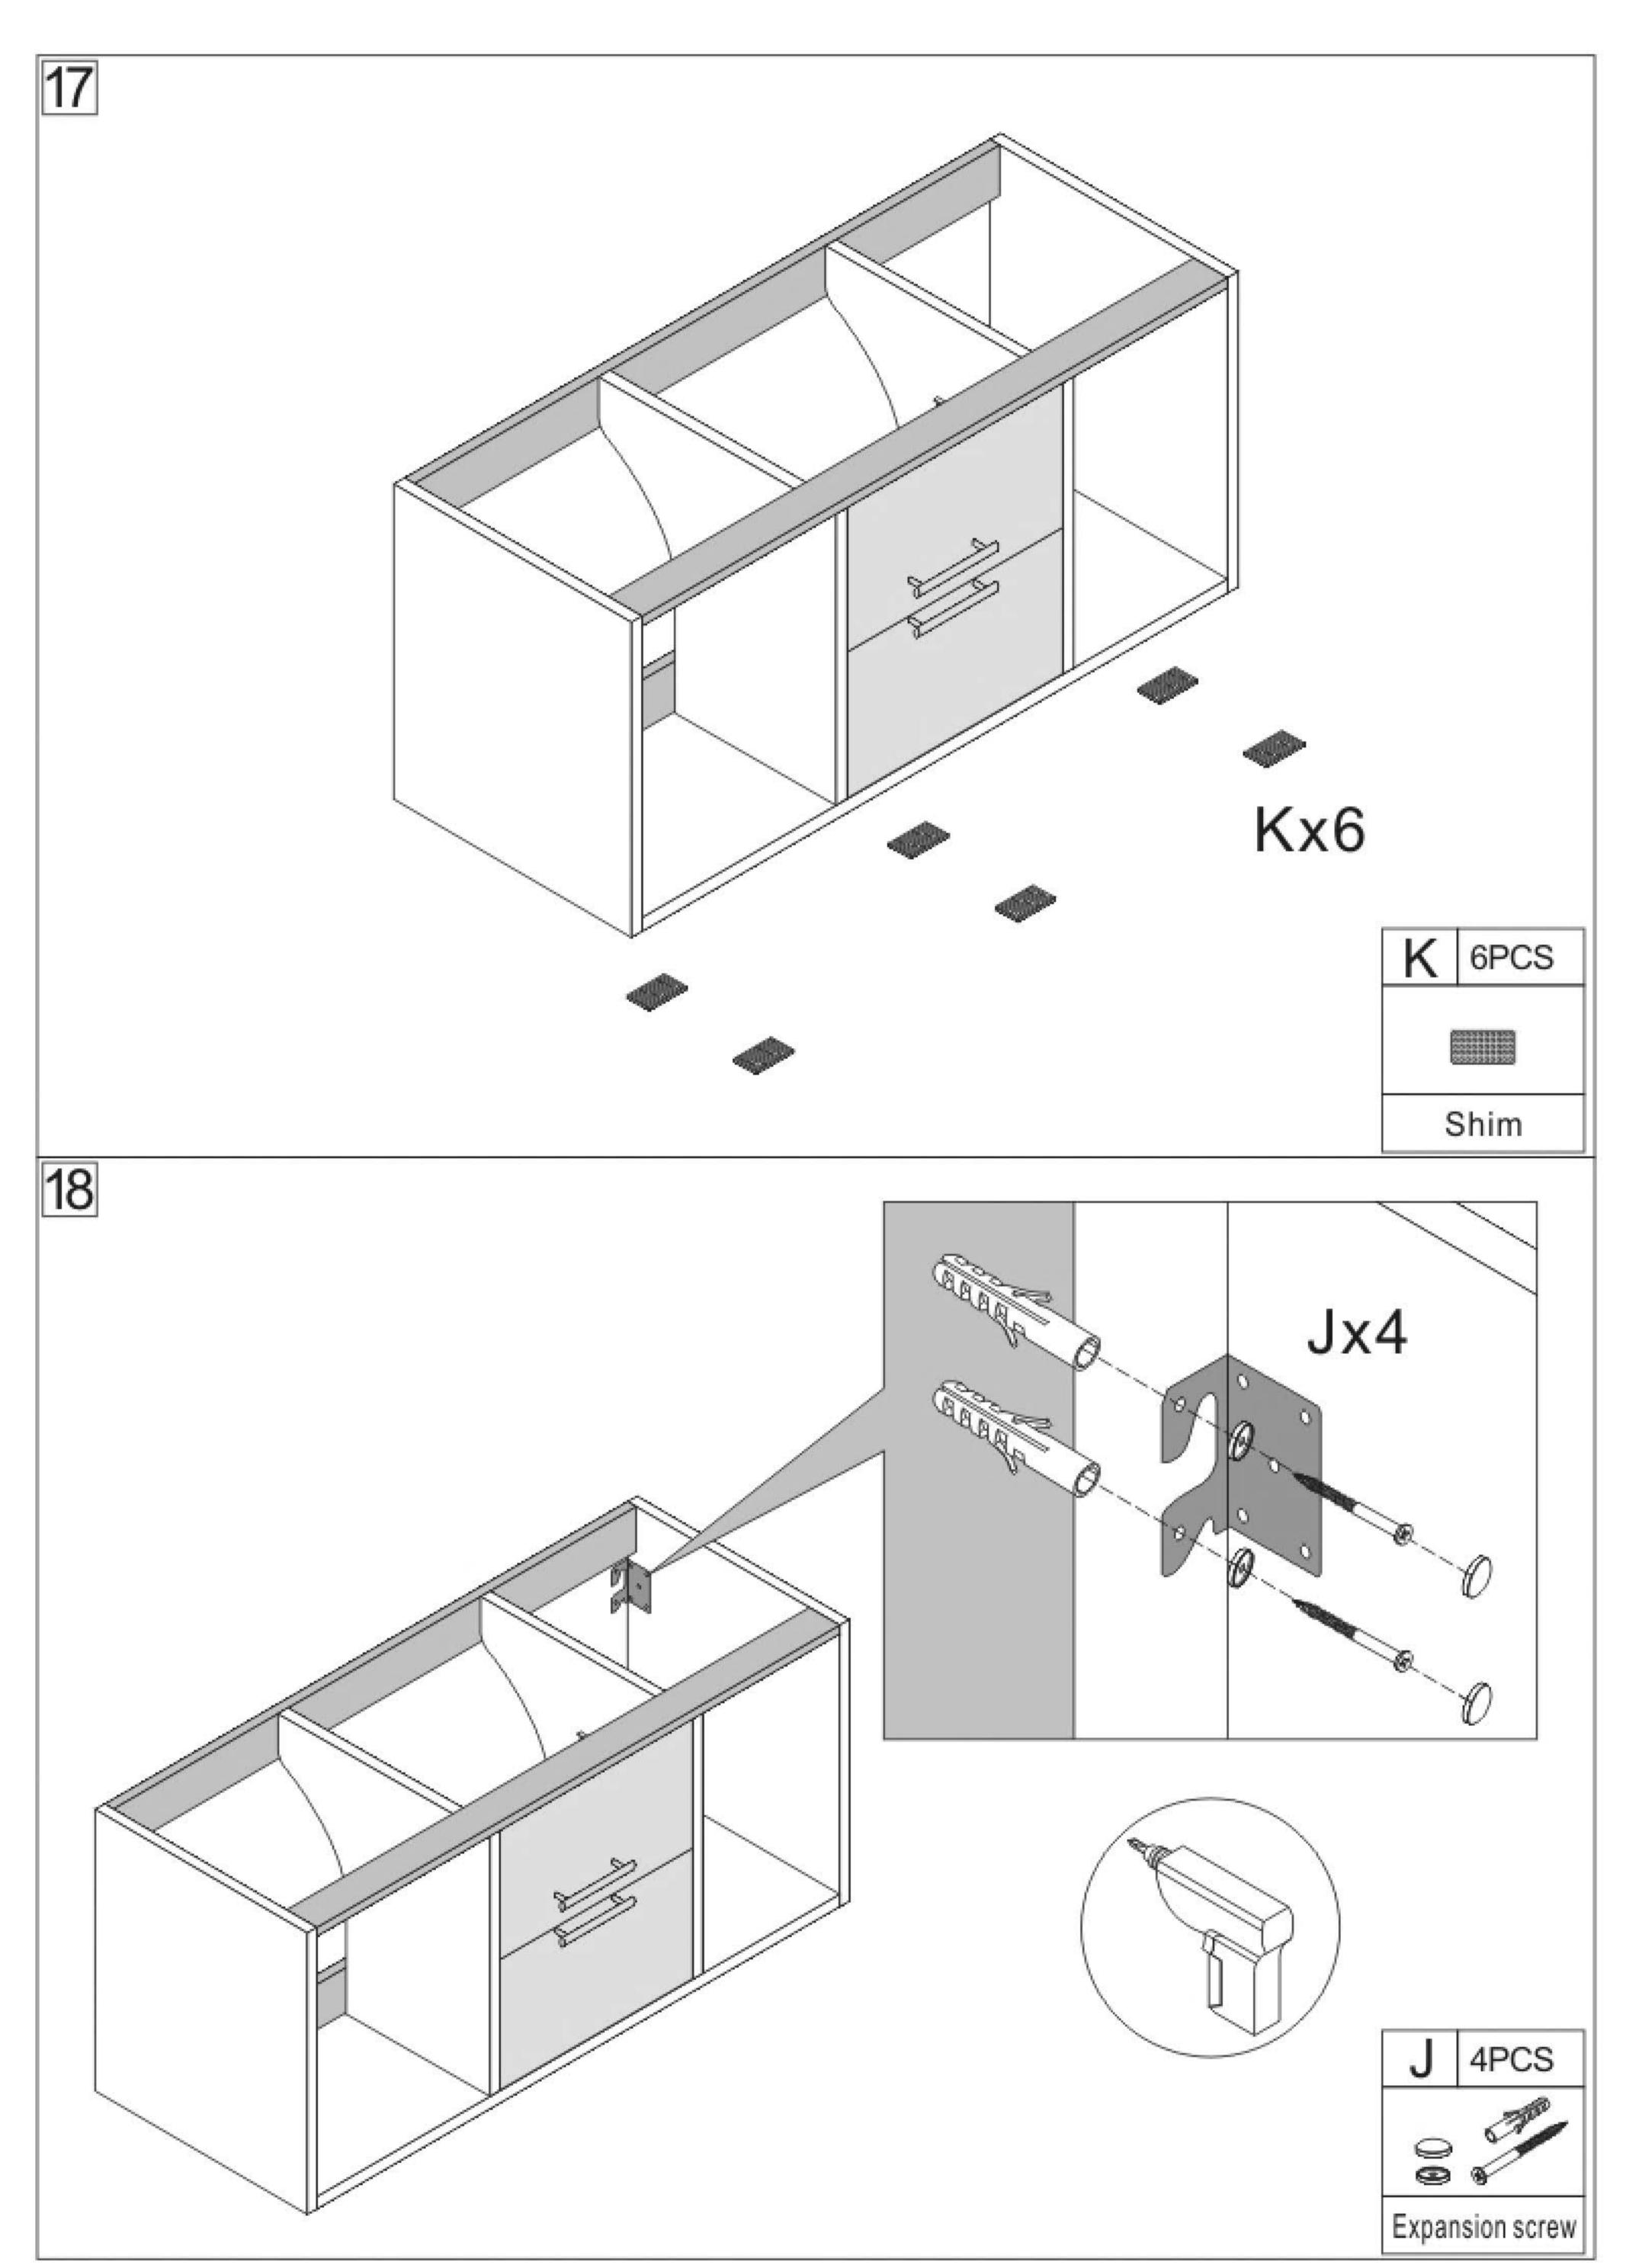

13 Pages

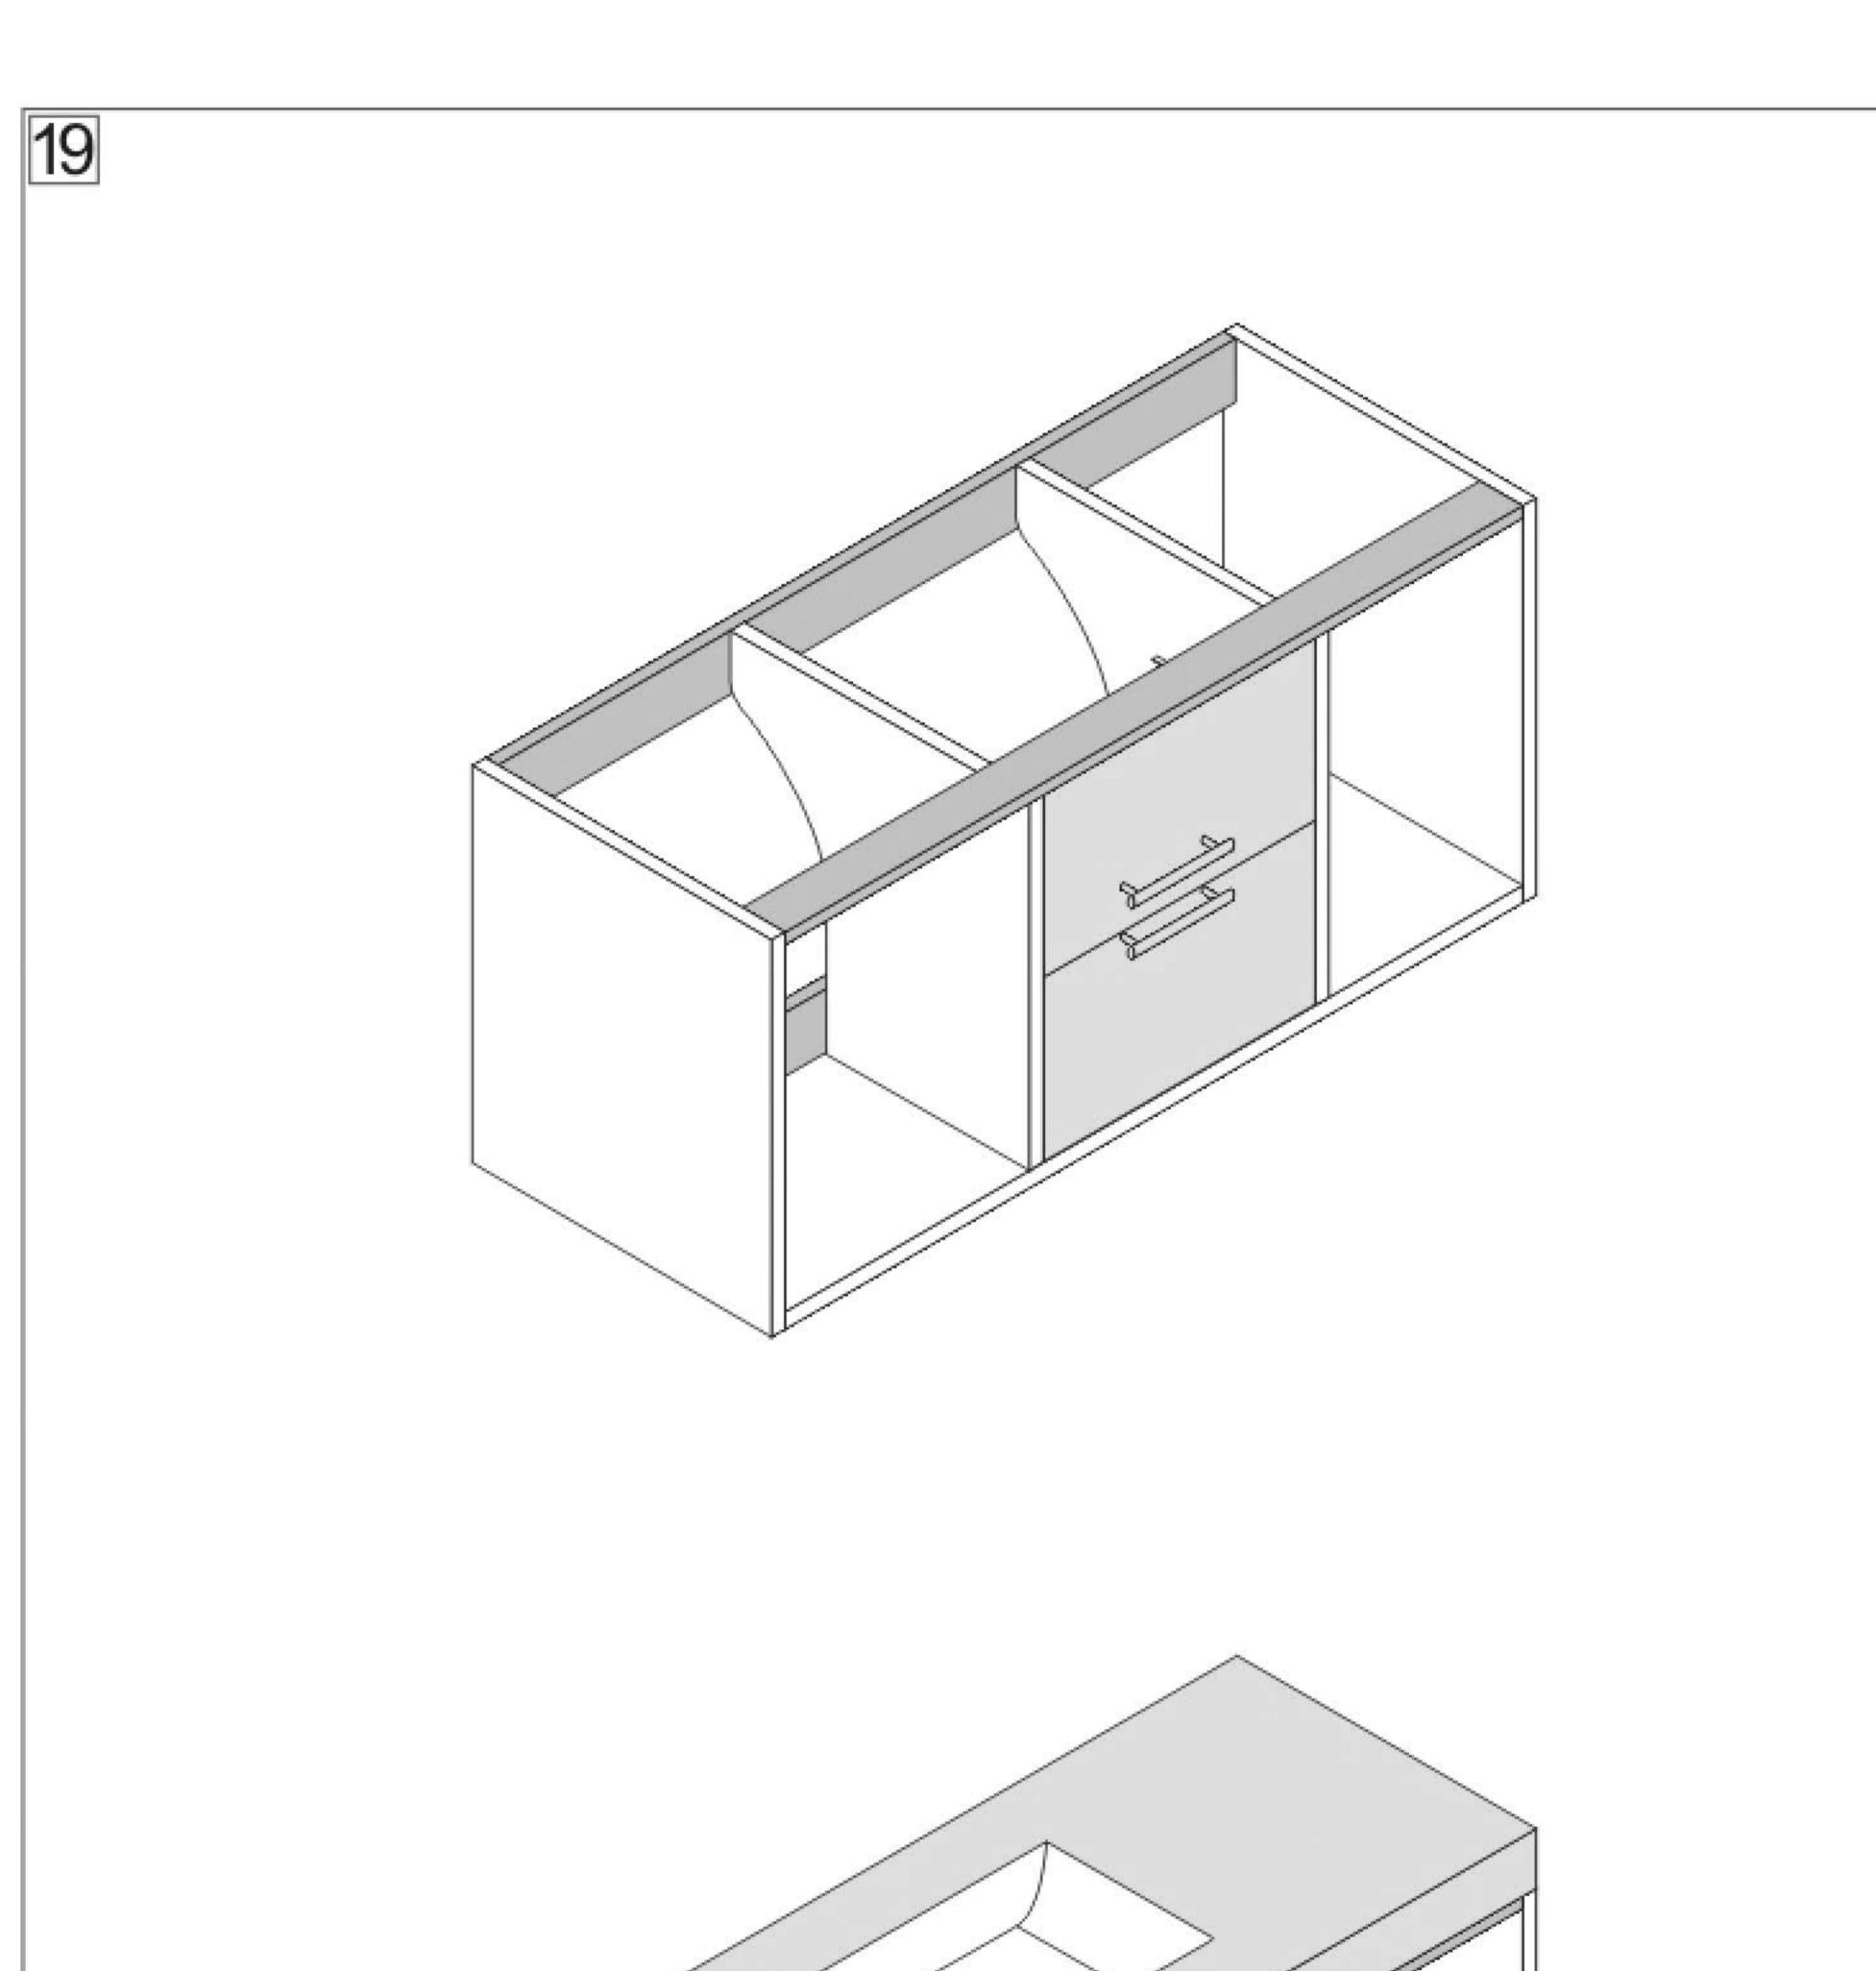

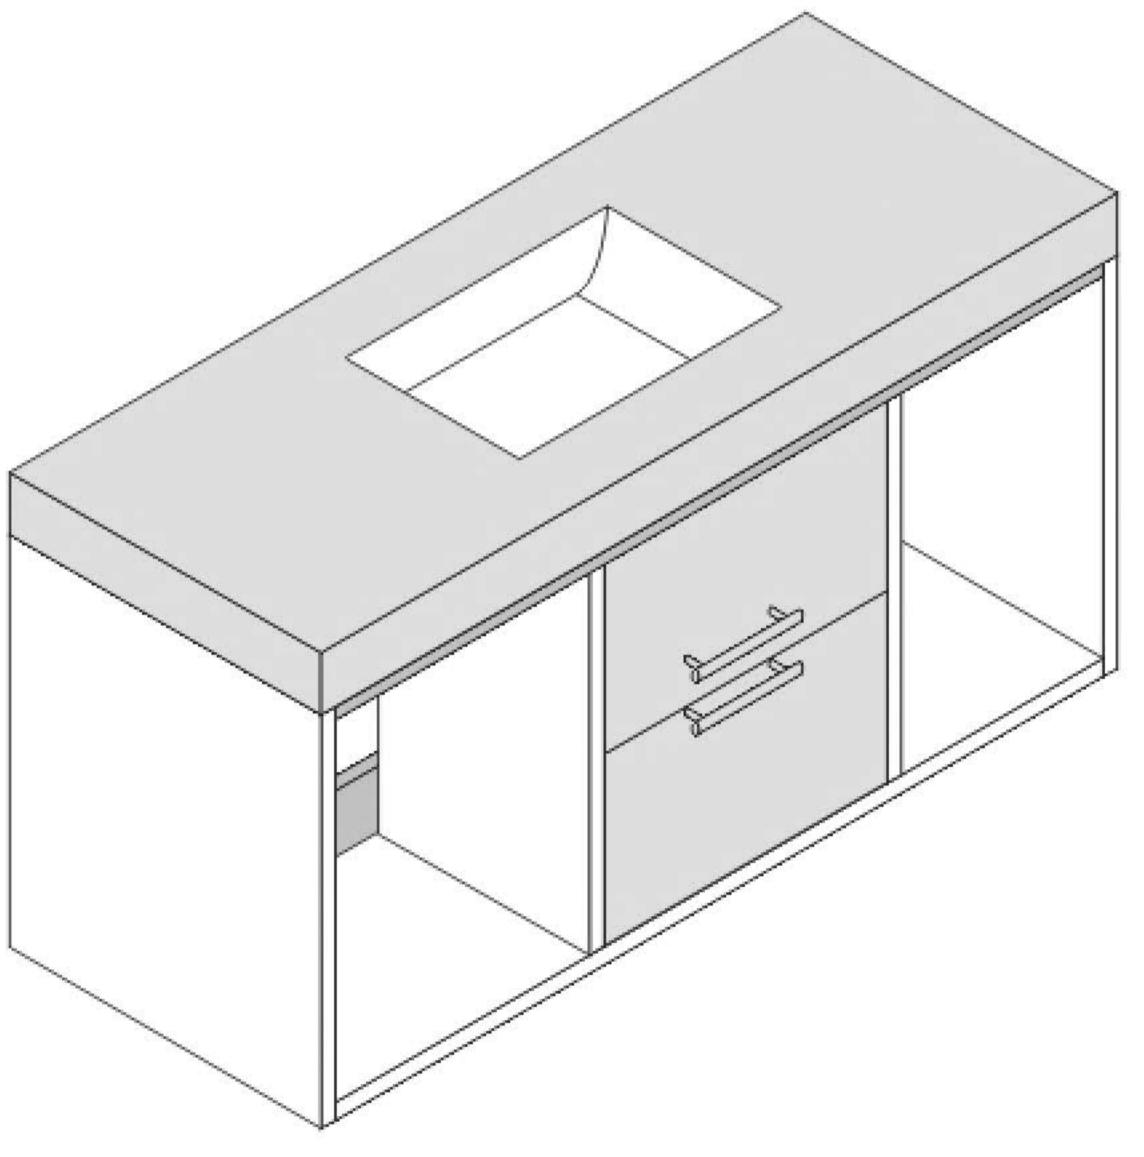

OK