


# ASSEMBLY INSTRUCTIONS


## TWIN FLOOR BED

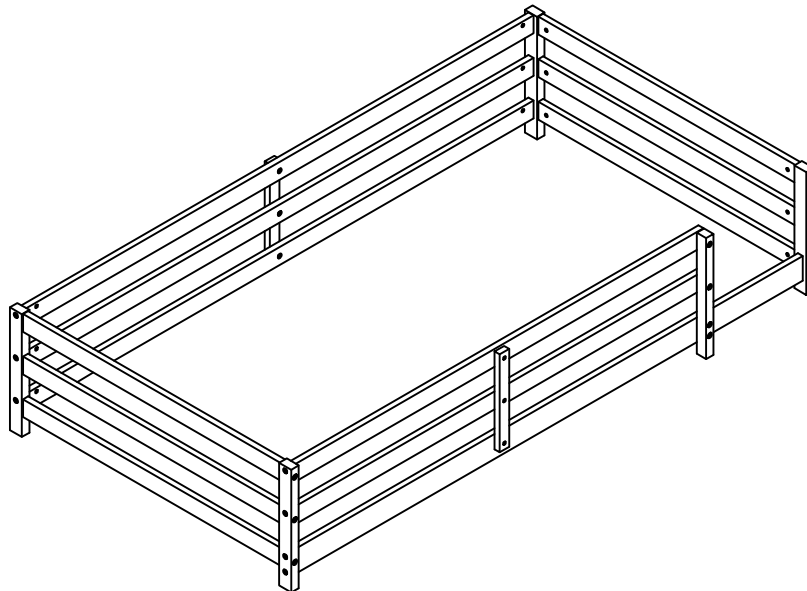











**BED104TB08/BED104TB15/BED104TB77**

Contact us: [vipservice2024@yeah.net](mailto:vipservice2024@yeah.net)


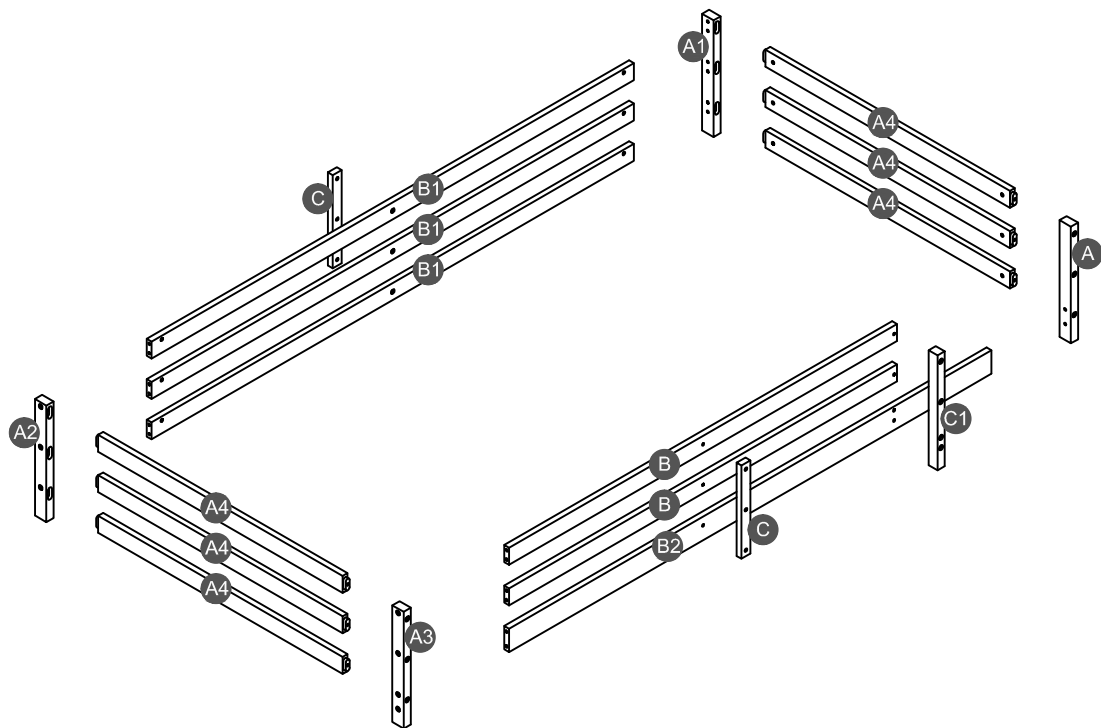





## Detail View




# Part List

<b>A</b>  <p>Leg (right front) - 1pc</p>	<b>A1</b>  <p>Leg (right back) - 1pc</p>	<b>A2</b>  <p>Leg (left back) - 1pc</p>
<b>A3</b>  <p>Leg (left front) - 1pc</p>	<b>A4</b>  <p>Horizontal bar - 6pcs</p>	<b>B</b>  <p>Short guard rail (front) - 2pcs</p>
<b>B1</b>  <p>Long guard rail (back) - 3pcs</p>	<b>B2</b>  <p>Side rail (Front) - 1pc</p>	<b>C</b>  <p>Vertical guard rail - 2pcs</p>
<b>C1</b>  <p>Vertical guard rail - 1pc</p>		

# Hardware List


<b>1</b>  Ø8*30mm Wood dowel (8pcs)	<b>2</b>  (Ø15)1/4"*80mm Hex-Head bolts (24pcs)	<b>3</b>  (Ø12)1/4"*40mm Hex-Head bolts (4pcs)
<b>4</b>  (Ø12)1/4"*30mm Hex-Head bolts (6pcs)	<b>5</b>  1/4"*15 (9.5mm) Horizontal-Hole bolts(24pcs)	<b>6</b>  (Ø13)1/4"*14mm Connect bolt (10pcs)
<b>7</b>  (1/4")4.5*58mm Allen key (2pcs)		

## ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !



## STEP 1:

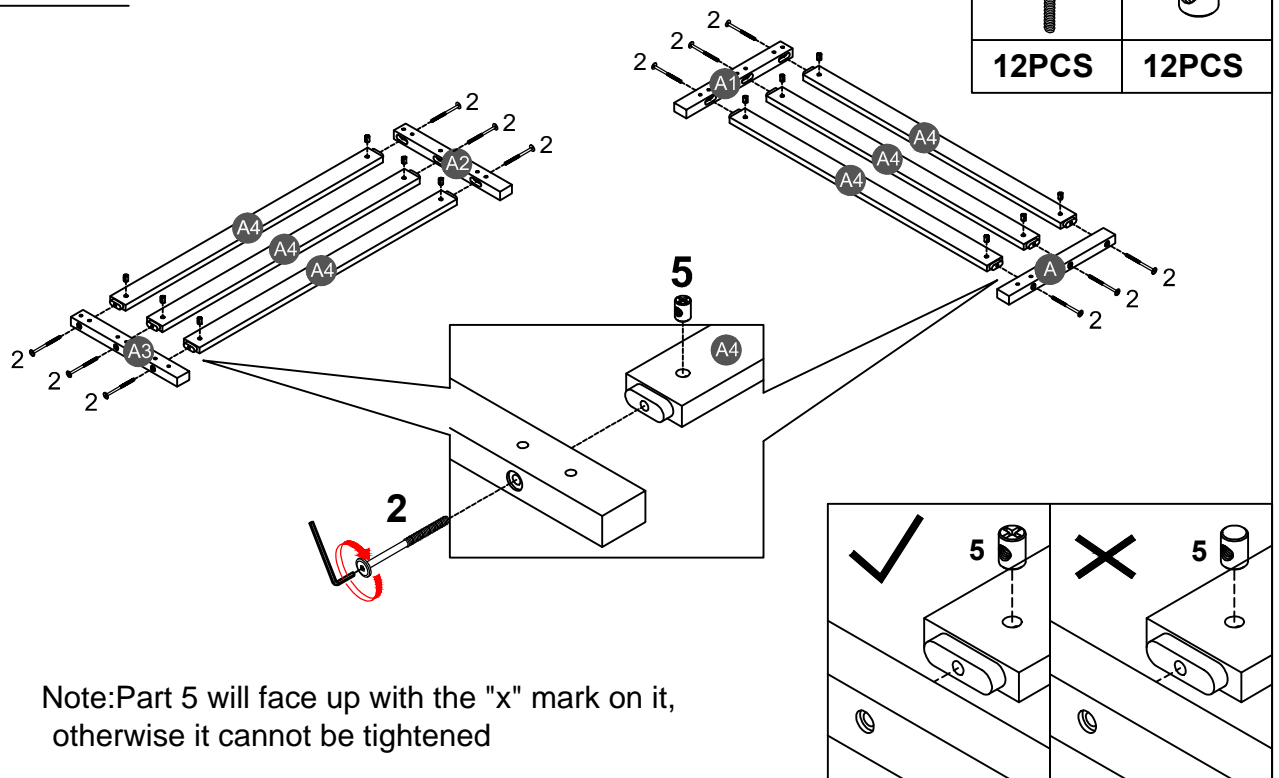


## STEP 2:

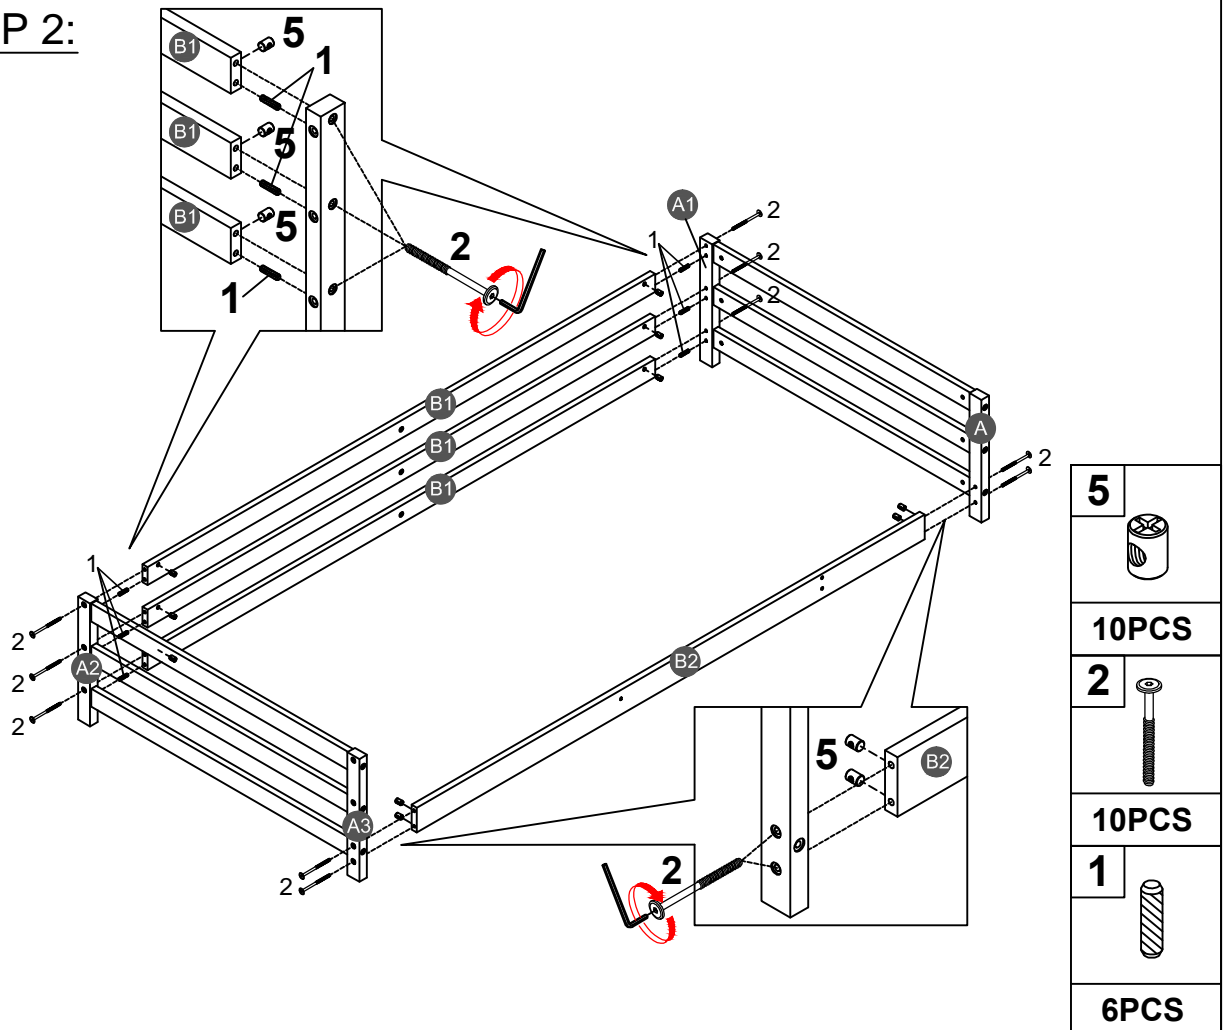








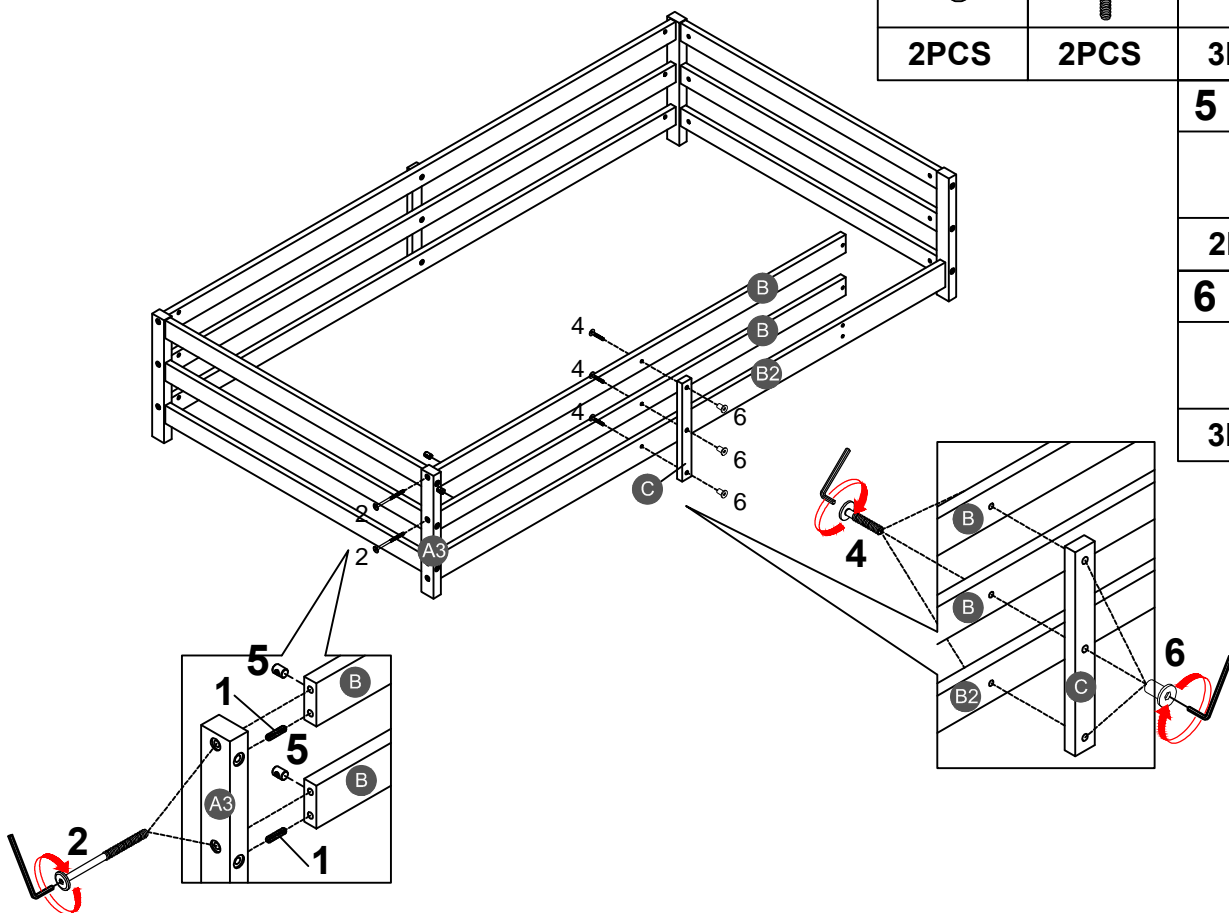
### STEP 3:
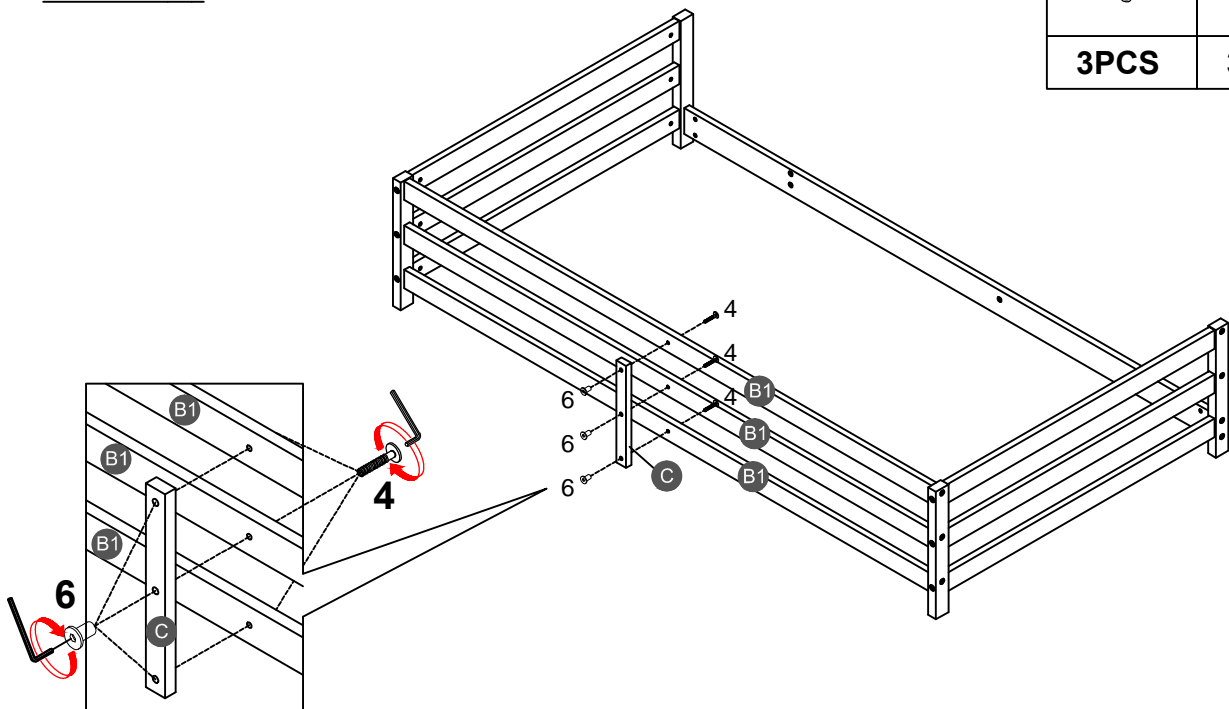
<b>4</b>		<b>6</b>	
<b>3PCS</b>		<b>3PCS</b>	




### STEP 4:

<b>1</b>		<b>2</b>		<b>4</b>	
<b>2PCS</b>		<b>2PCS</b>		<b>3PCS</b>	
				<b>5</b>	
				<b>2PCS</b>	
				<b>6</b>	
				<b>3PCS</b>	
					



**STEP 5:**

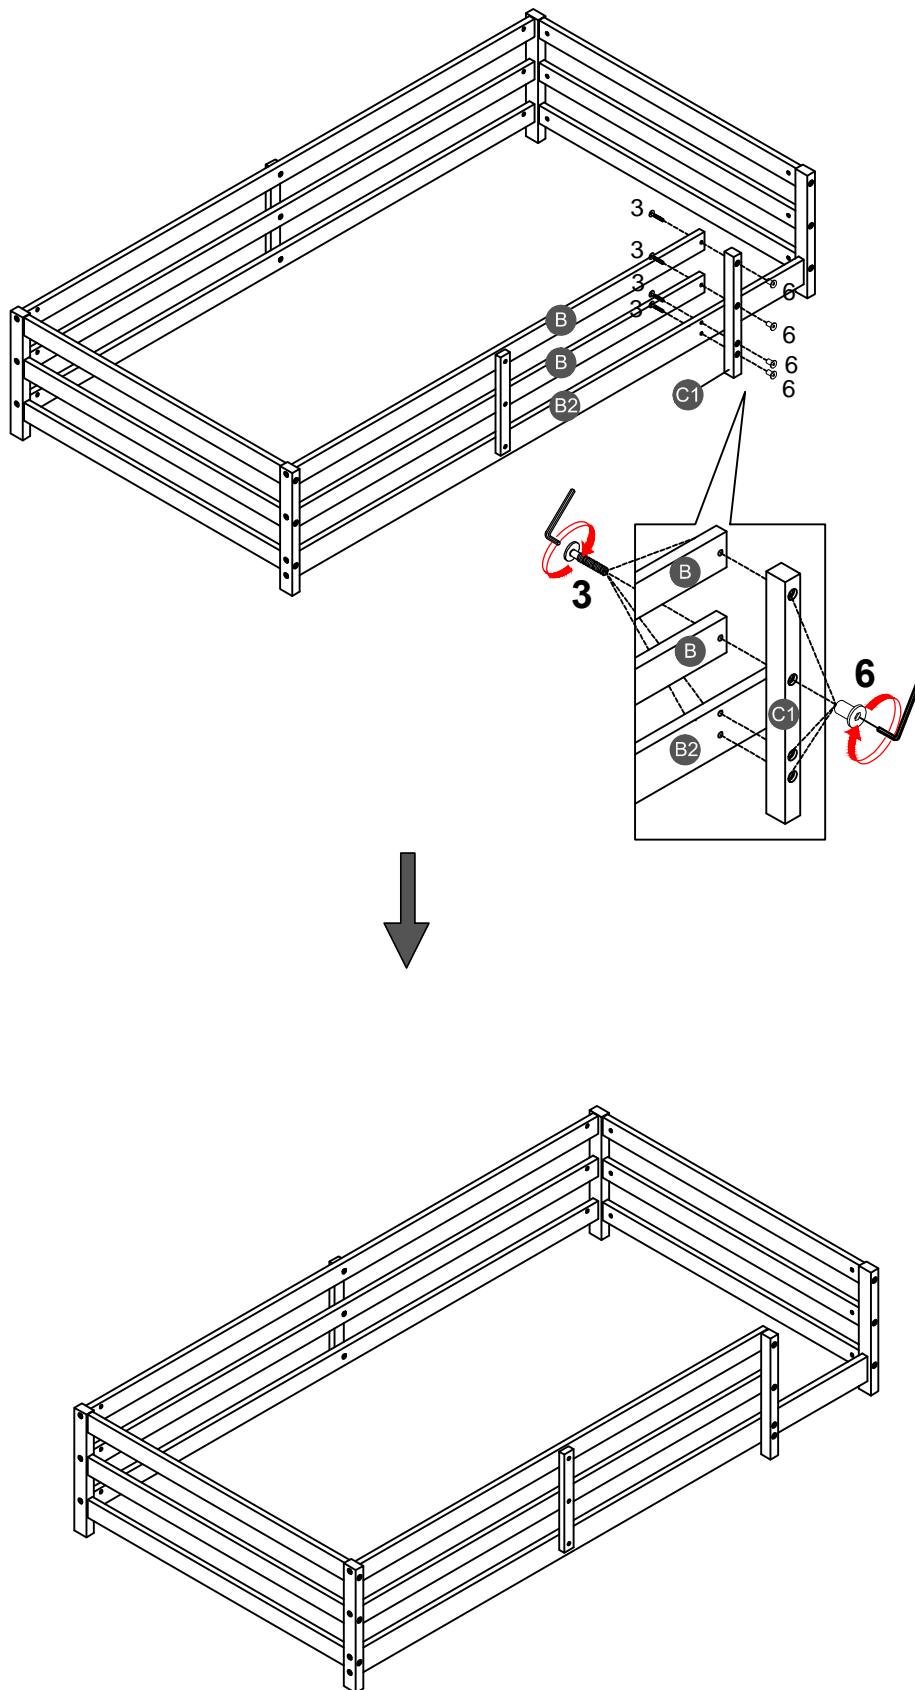

**3**



**4PCS**

**6**



**4PCS**