


ASSEMBLY INSTRUCTIONS


FULL FLOOR BED

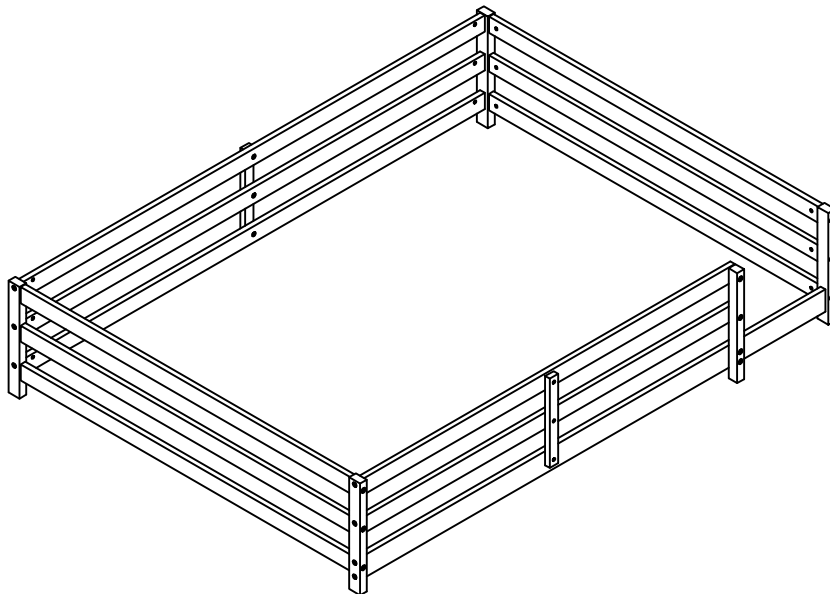








BED104FB08/BED104FB15/BED104FB77

Contact us: vipservice2024@yeah.net


Detail View

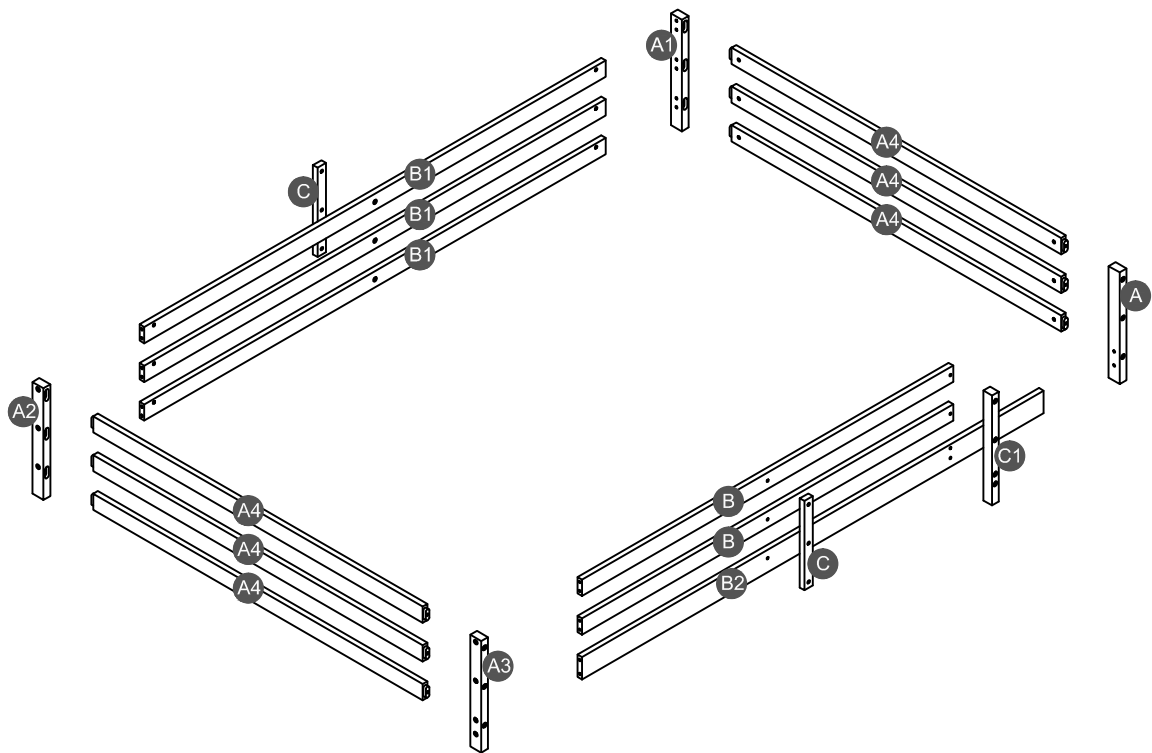


Part List

A  Leg (right front) - 1pc	A1  Leg (right back) - 1pc	A2  Leg (left back) - 1pc
A3  Leg (left front) - 1pc	A4  Horizontal bar - 6pcs	B  Short guard rail (front) - 2pcs
B1  Long guard rail (back) - 3pcs	B2  Side rail (Front) - 1pc	C  Vertical guard rail - 2pcs
C1  Vertical guard rail - 1pc		

Hardware List


1  Ø8*30mm Wood dowel (8pcs)	2  (Ø15)1/4"*80mm Hex-Head bolts (24pcs)	3  (Ø12)1/4"*40mm Hex-Head bolts (4pcs)
4  (Ø12)1/4"*30mm Hex-Head bolts (6pcs)	5  1/4"*15 (9.5mm) Horizontal-Hole bolts(24pcs)	6  (Ø13)1/4"*14mm Connect bolt (10pcs)
7  (1/4")4.5*58mm Allen key (2pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

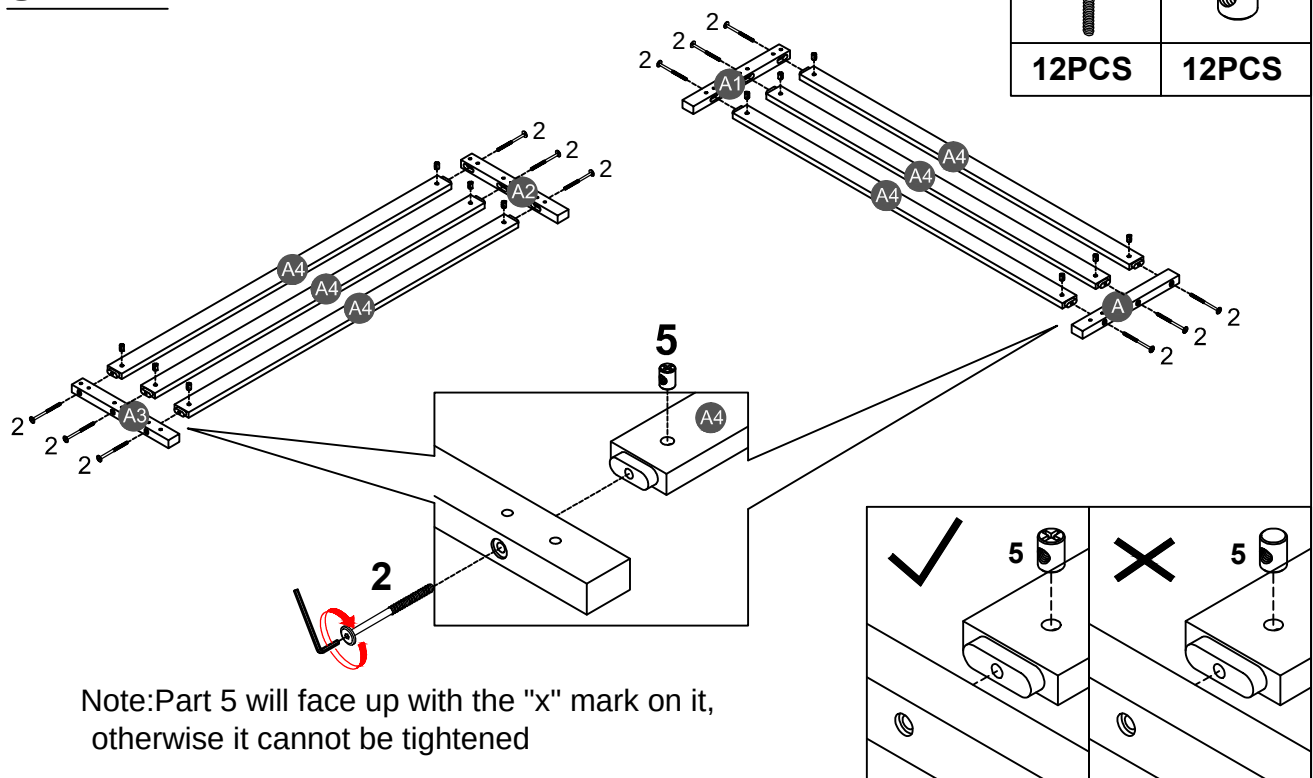


STEP 2:

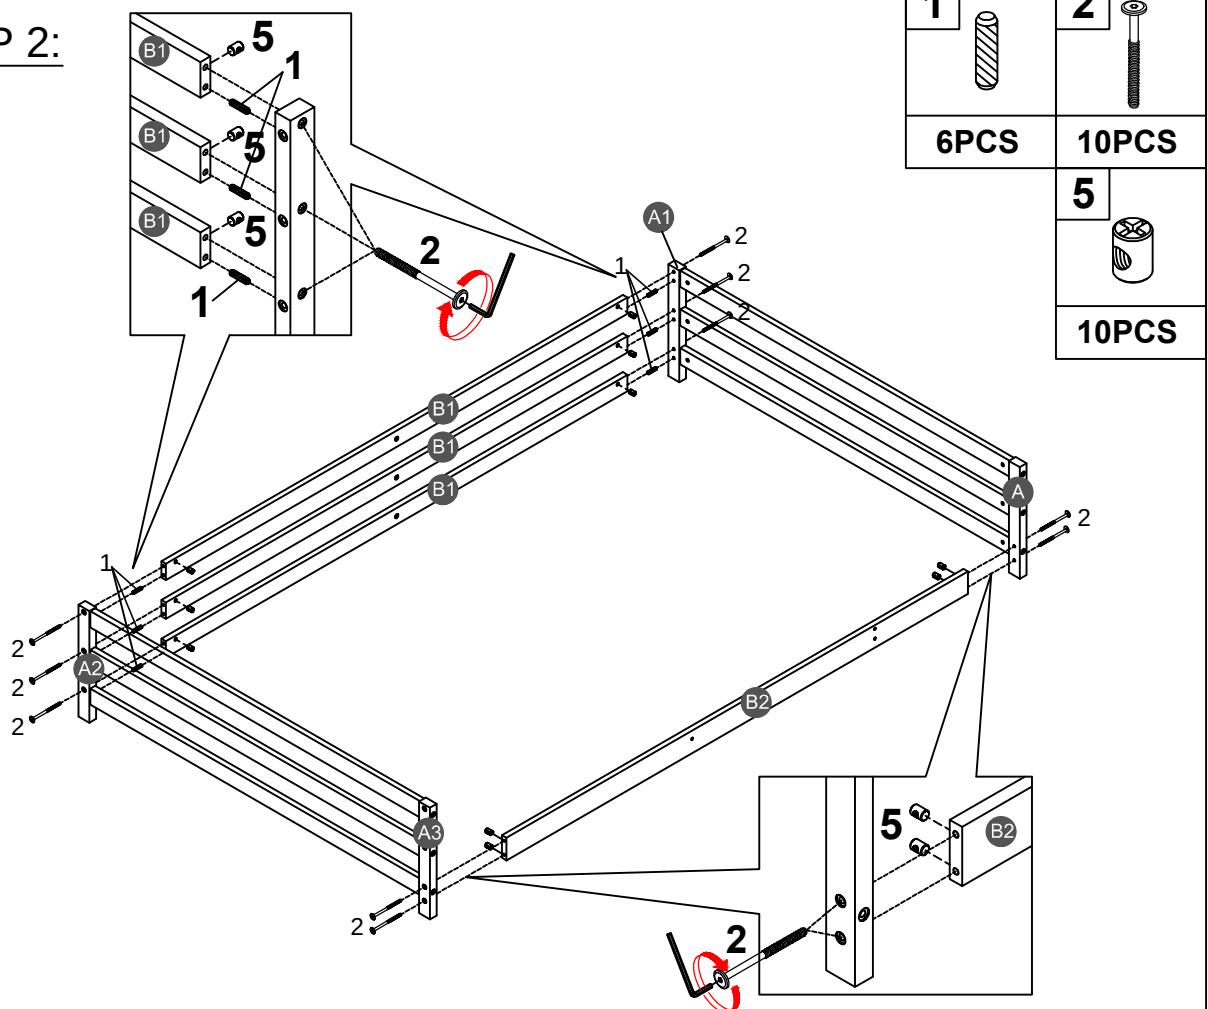

STEP 3:


4		6	
3PCS		3PCS	

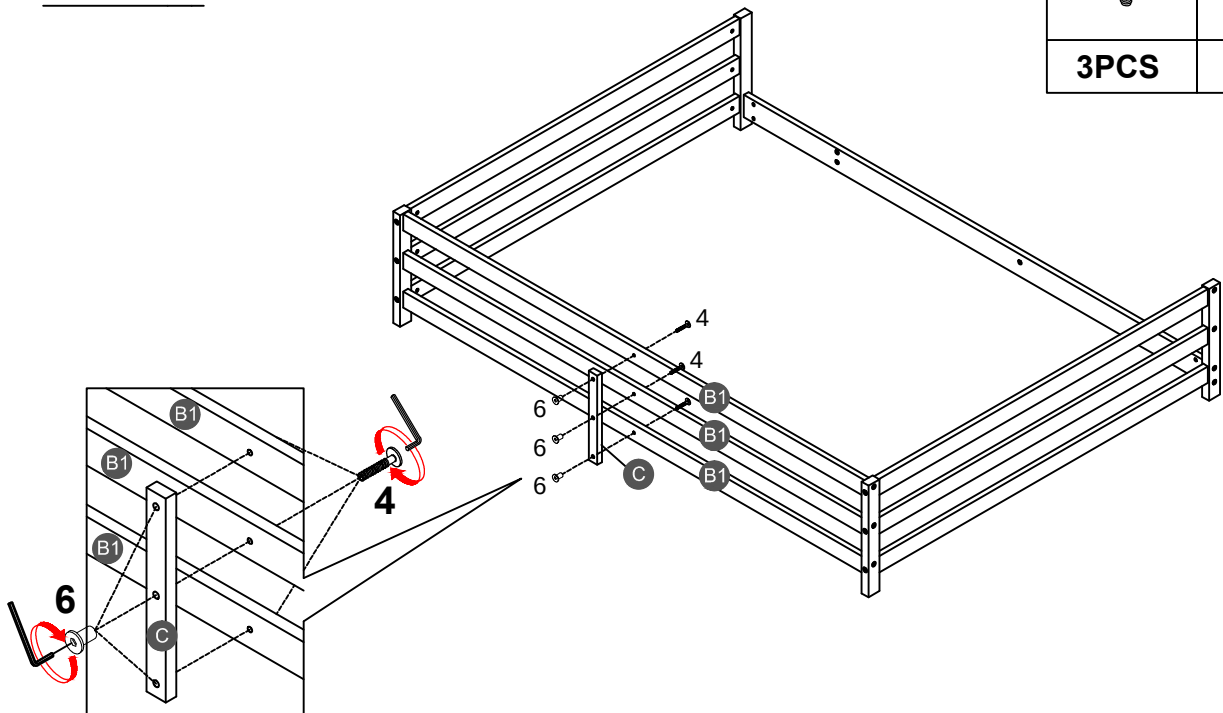


STEP 4:

1		2		4	
2PCS		2PCS		3PCS	

5	
2PCS	
6	
3PCS	

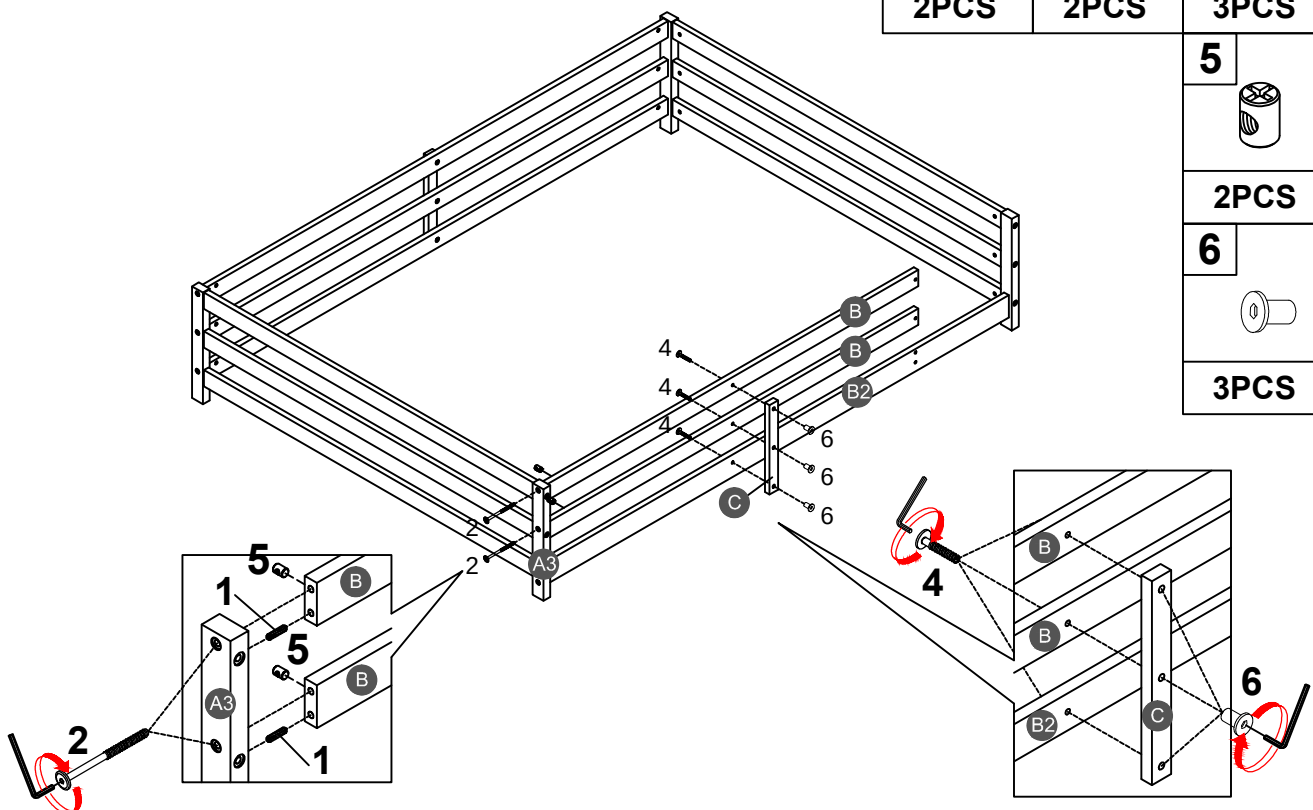

STEP 5:

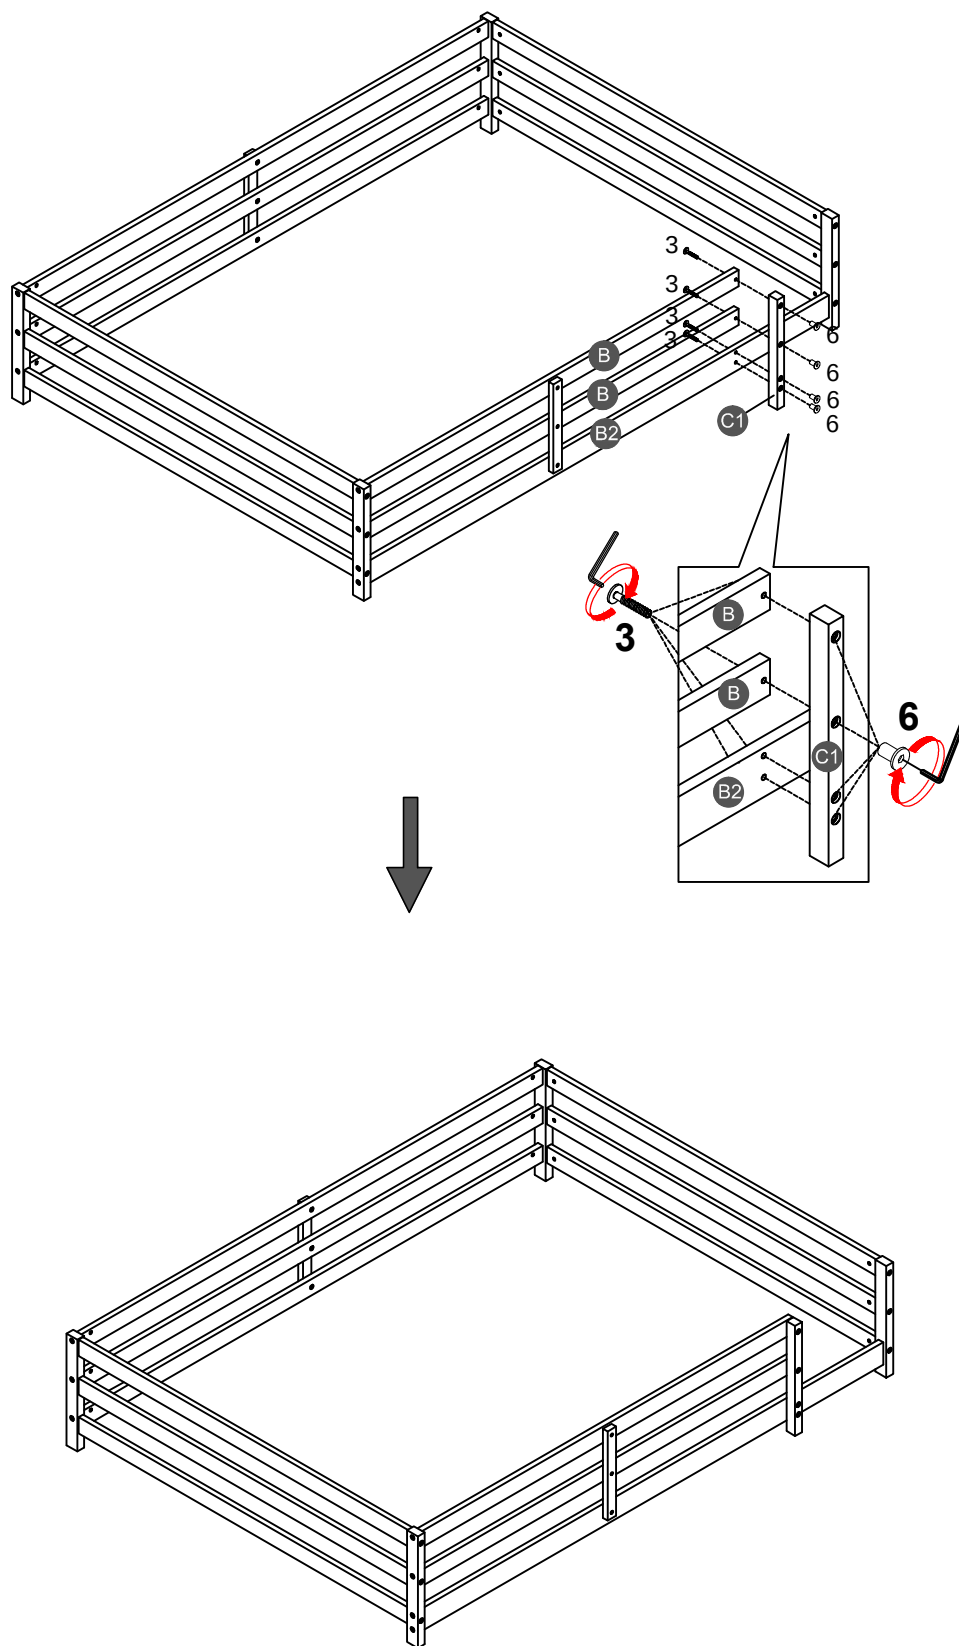

3



4PCS

6



4PCS