

7152/7152-1

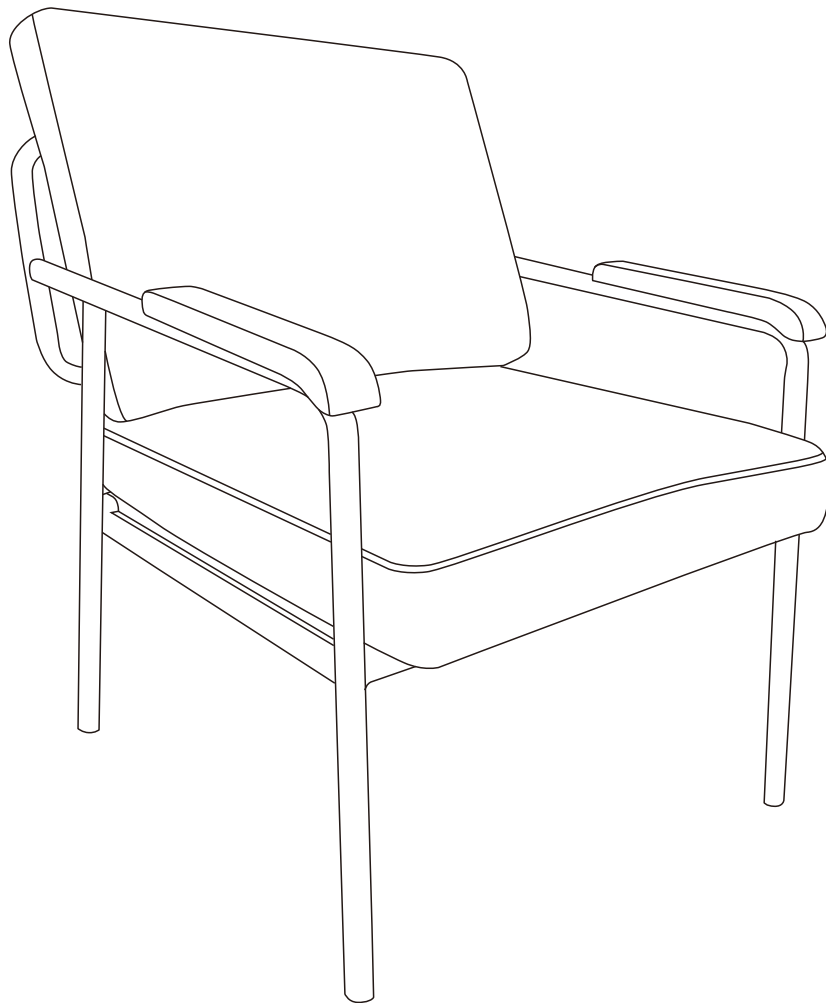


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

admin@ajyshoming.com

Our professional after-sales team will serve you online all day.

Before You Start

- 
- ✓ Read through each step carefully and follow the proper order
 - ✓ Separate and count all your parts and hardware
 - ✓ Give yourself enough room for the assembly process
 - ✓ Have the following tools: Allen Wrench
 - ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)


Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: 1-2


- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Part List

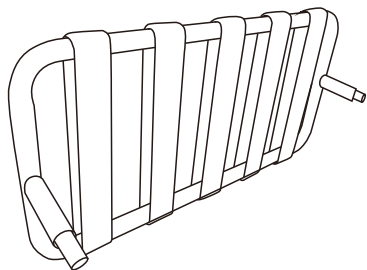


Ⓐ Backrest Frame
QTY:1

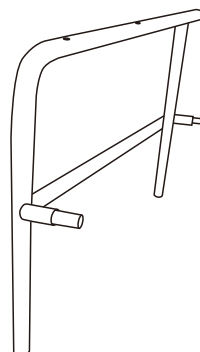


Ⓑ Left Armrest
QTY:1

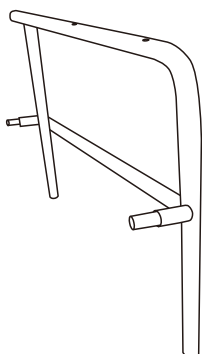


Ⓒ Right Armrest
QTY:1

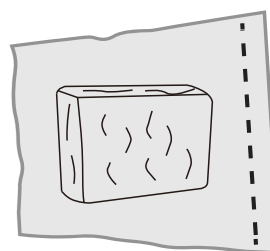


Ⓓ Back Cushion
QTY:1

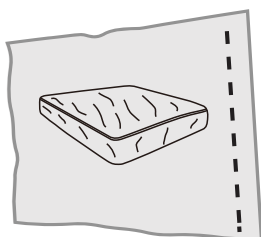

Ⓔ Seat Cushion
QTY:1

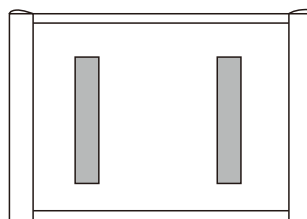

Ⓕ Support Fabric
QTY:1




Ⓖ Crossbars
QTY:2



Ⓖ Armrest Pads
QTY:2


Part List



M6X16mm

①


X6



M6X30mm

②



X 4

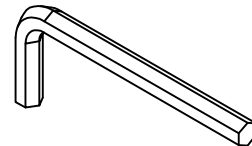


③

X 1

STEP 1 Attach the Crossbars (G) to the Left Armrest (B) by using screws (1) with Allen Wrench (3).

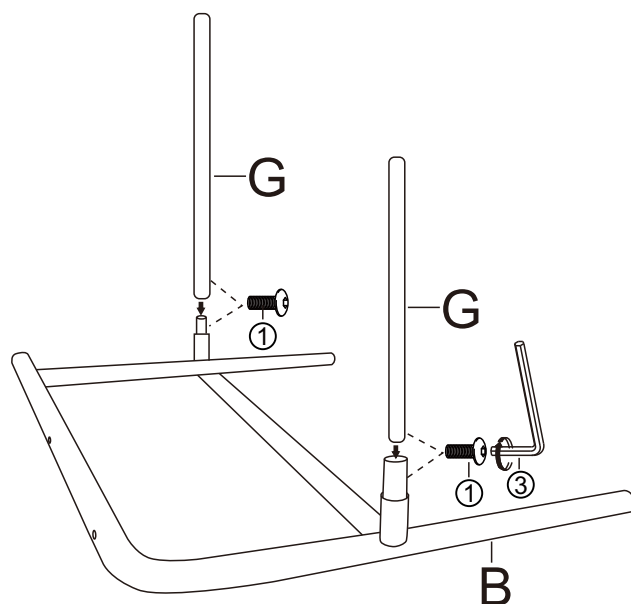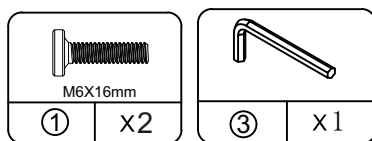




STEP 2 With the Velcro side facing up, align the two holes of the Support Fabric (F) with the two Crossbars (G) and slide them onto the crossbars.

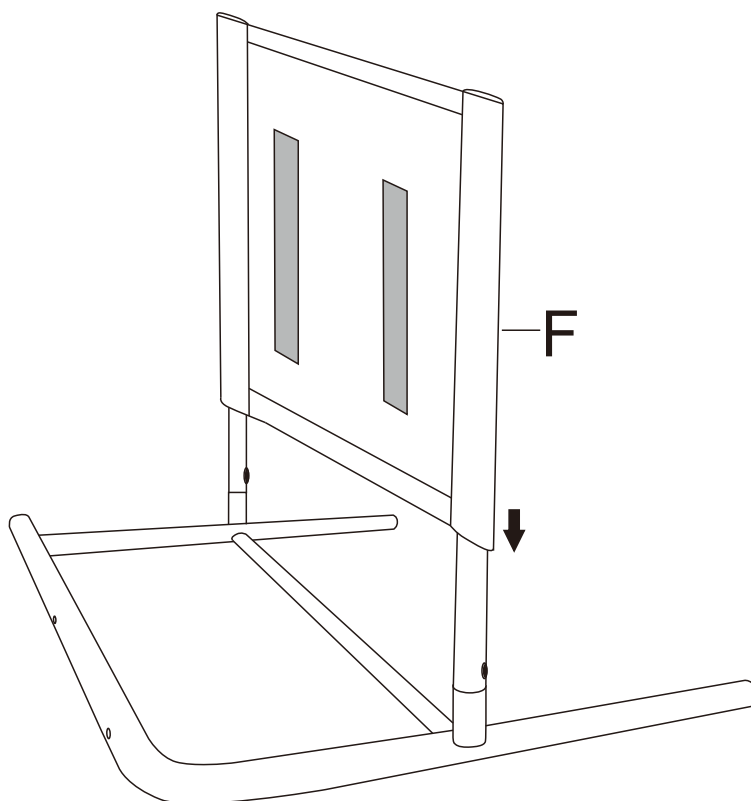

Pull down the Support Fabric (F) so that each end slightly exposes the crossbars (G) on both sides.




STEP 3

Attach the Right Armrest(C) to the Crossbars (G) by using screws (1) with Allen Wrench (3).

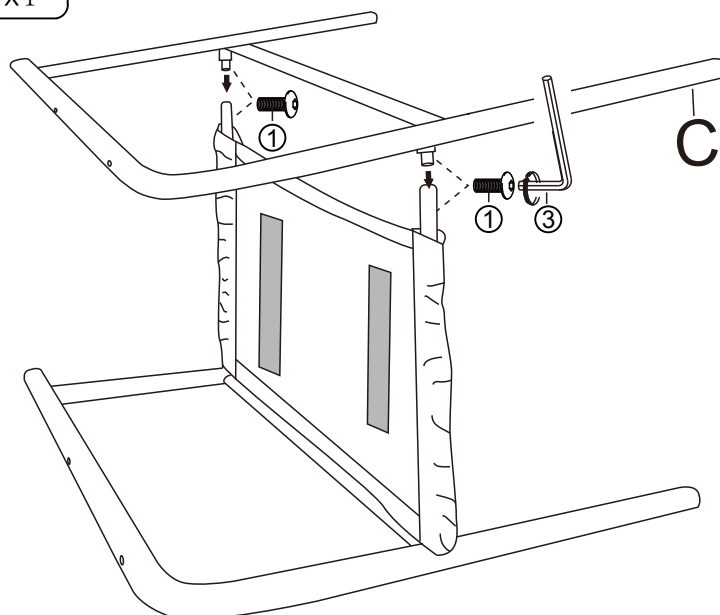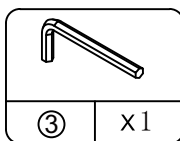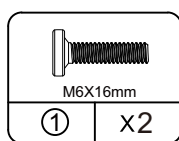


STEP 4

Attach the Backrest Frame (A) to the Armrests by using screws (1) with Allen Wrench (3).

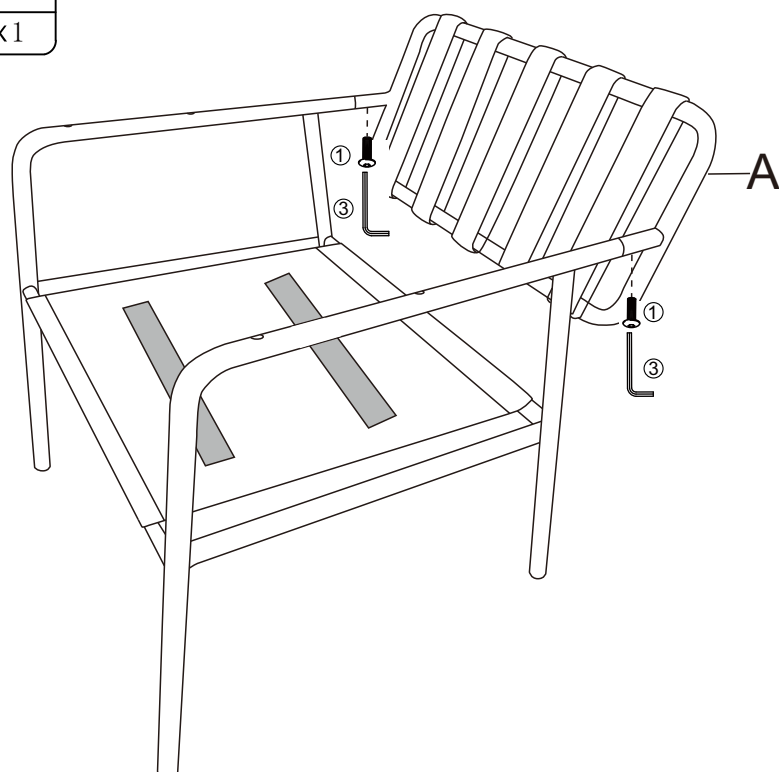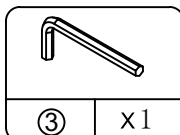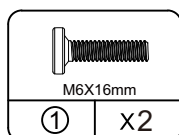



Take the Back Cushion (D) and seat cushion (E) out of the vacuum bag and place them on the assembled chair. Note: The cushions need to rest for 24 hours to fully regain their original shape. (and you can speed up recovery by tapping the seat and cushion with your hands.)

STEP 5

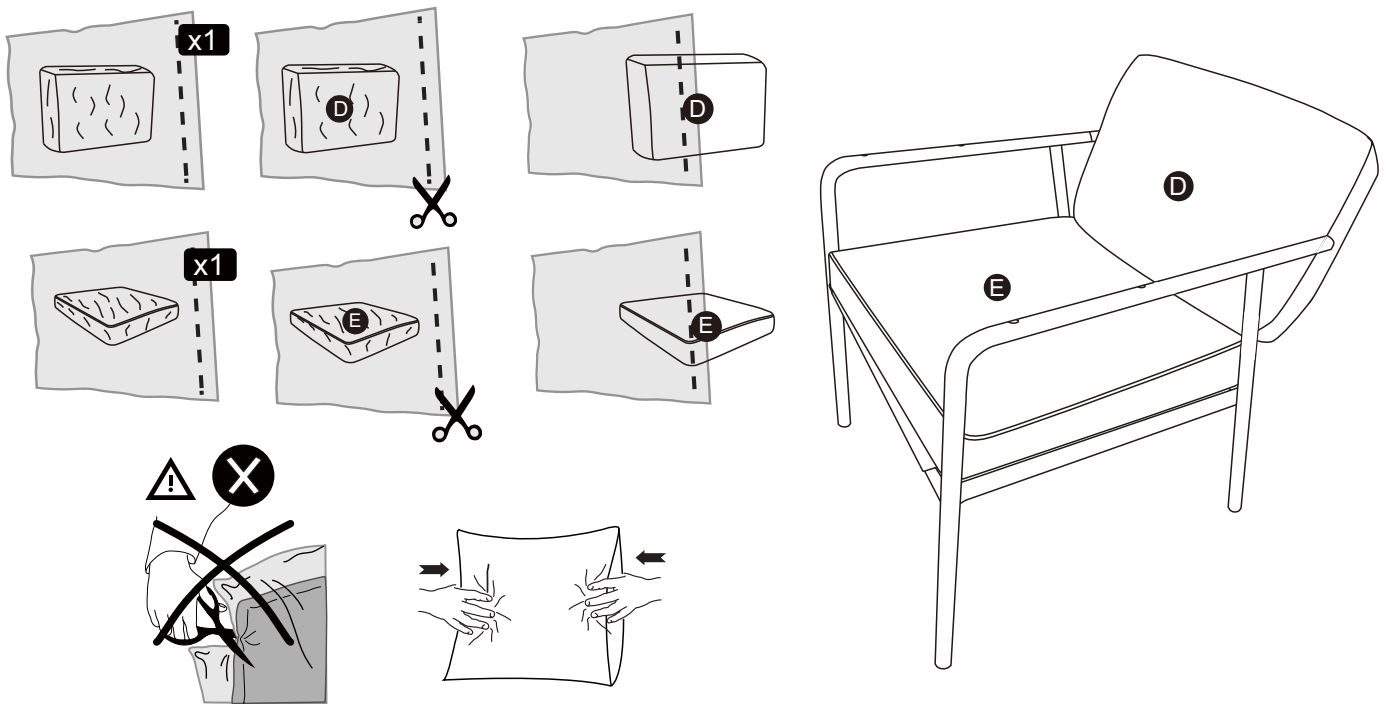

STEP 6

Attach the Armrest Pads (H) to the Armrests by using screws (2) with Allen Wrench (3).

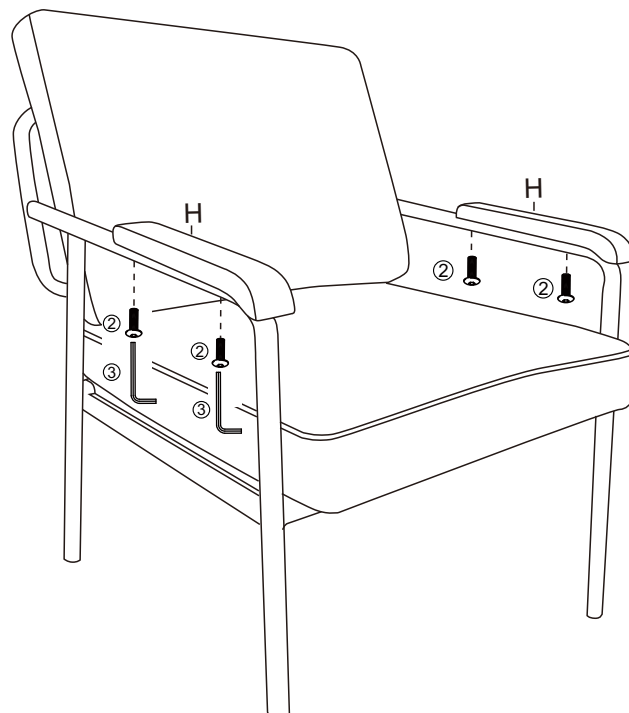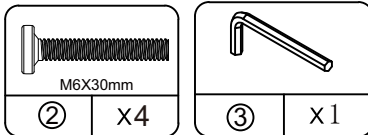

Assembly completed.

