

Bathroom Vanity

Notice:

- 1.Follow the installation instructions. Please confirm all accessories are preset before installation.
- 2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
- 3. If you encounter any problems during installation, please contact our customer service.
- 4. Please unbox the item from the side with an open-label and put a carpet on the foor to avoid scratching it.




Recommended installers: 2



Put a carpet on the floor before unpacking

Item




Estimate installation time: 30 minutes

Reference Image


Item no.	Reference Image	Qty
Α		x1
В	·°	x1
С		
1		x4


no.	Reference Image	Qty
2	0	x4
3	W Milita	x4
4		x6




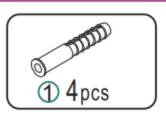




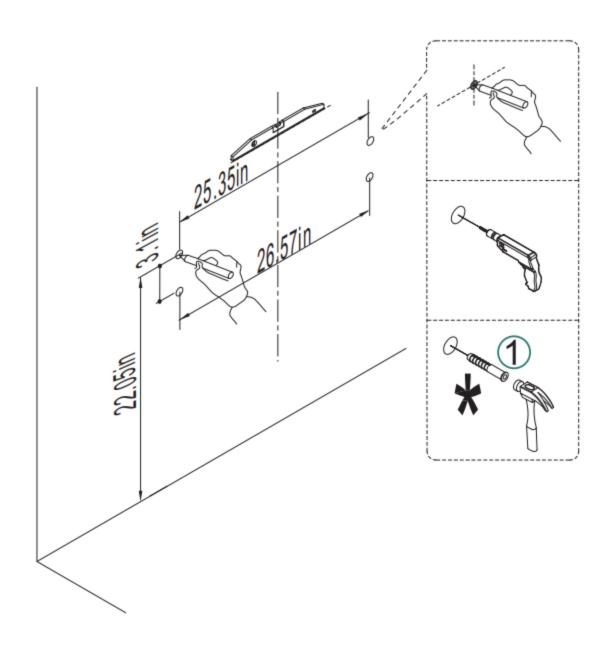



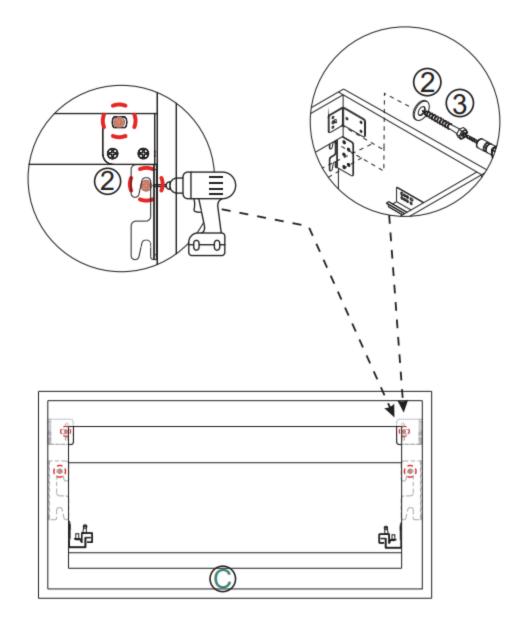




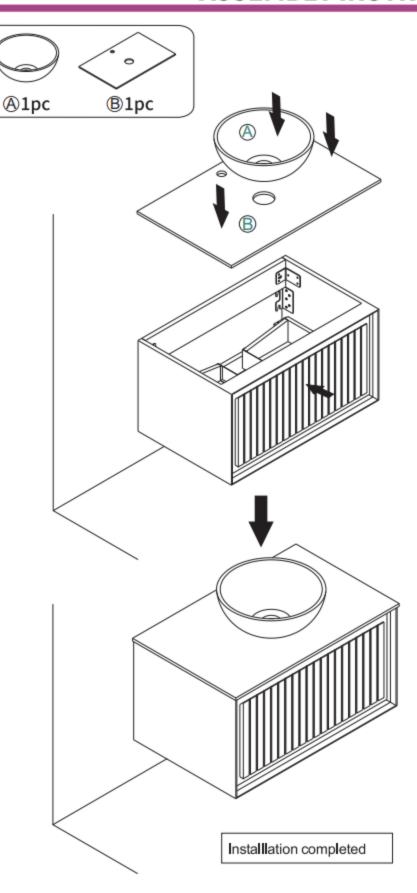


Installation of drain assembly


Turn the screw at the bottom of the guide rail counterclockwise!

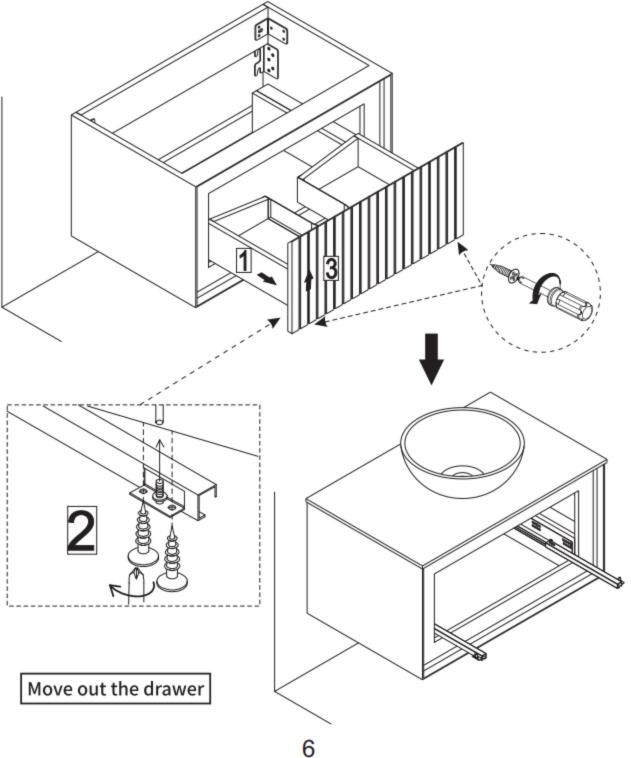





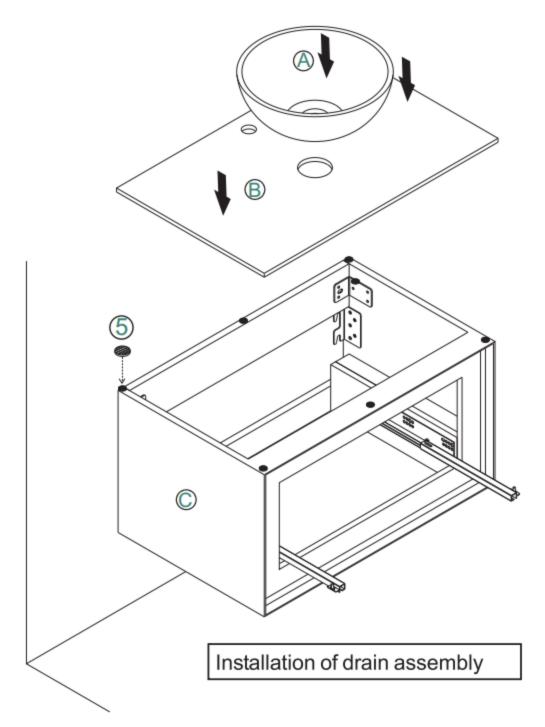

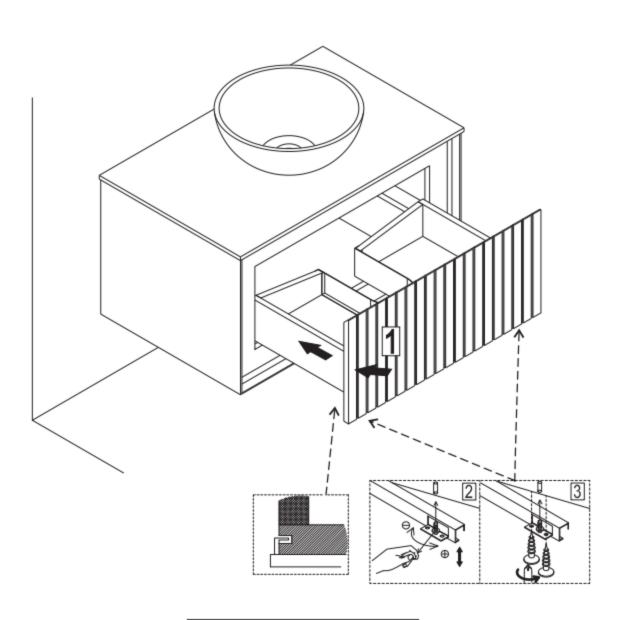

Installlation completed