













# ASSEMBLY INSTRUCTION

AC9155



## PARTS

S.NO.	DESCRIPTION	QTY
A	 Right Arm	1
B	 Left Arm	1
C	 Back	1
D	 Seat Frame	1
E	 Back cushion	1
F	 Seat frame	1
H	 Metal Legs	4


## HARDWARE

S.NO.	DESCRIPTION	QTY
①	 Bolt M6x75mm	11
②	 Bolt M6x18mm	13
③	 spacer M6x20mm	15
④	 Allen Key M6	1
⑤	 Bolt M6x80mm	5


## STEP1

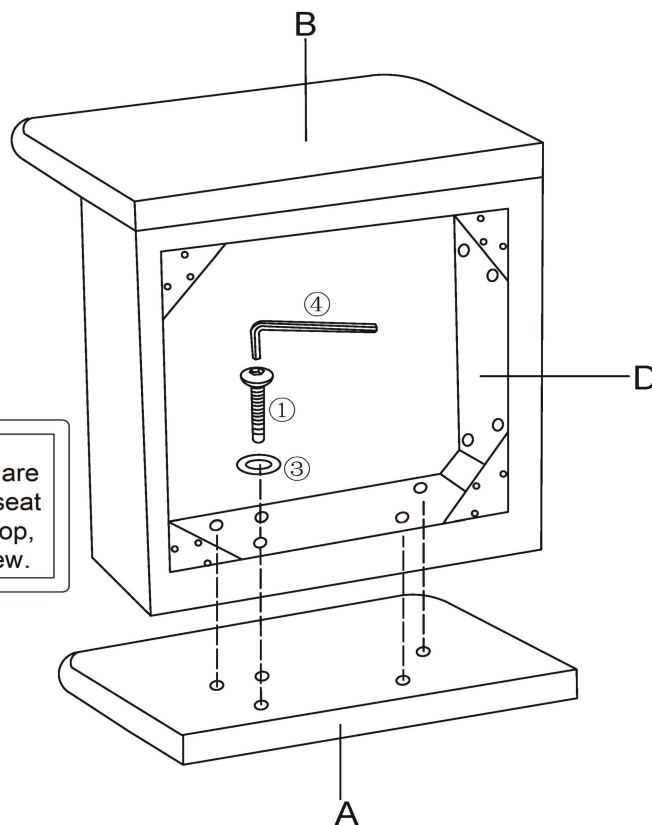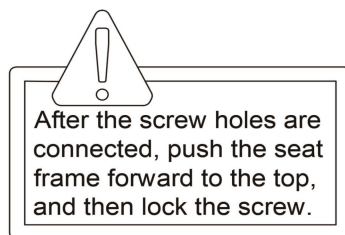


## STEP2

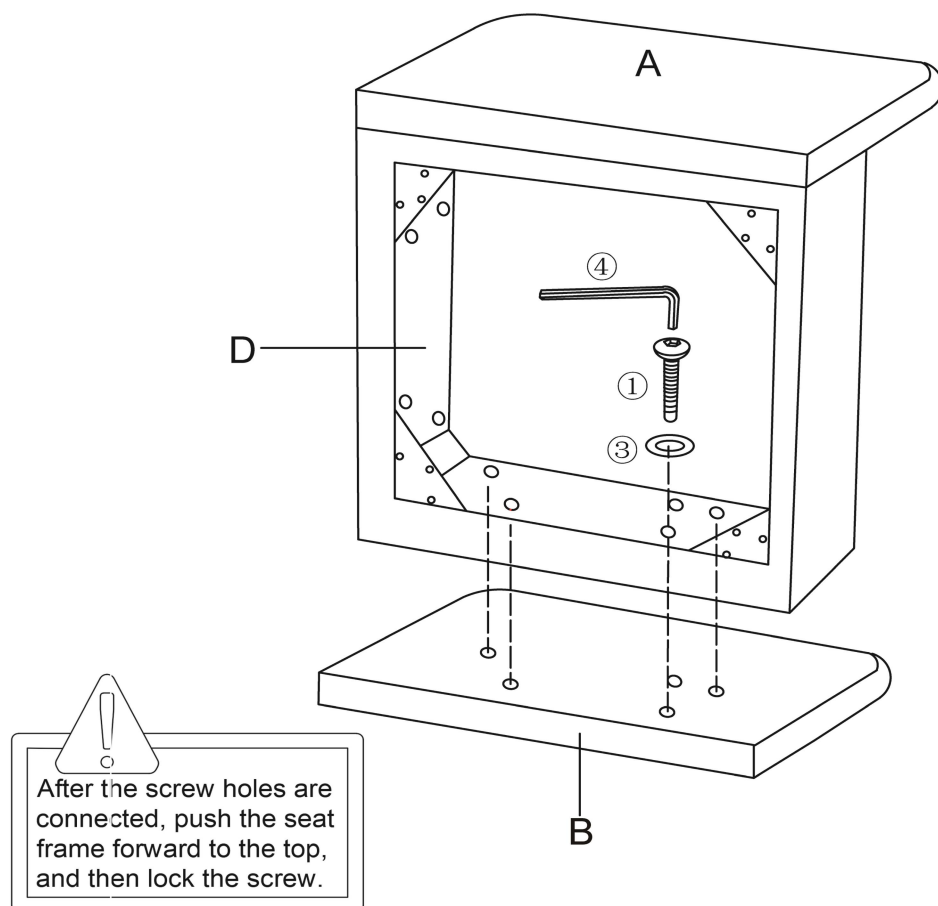


## STEP3

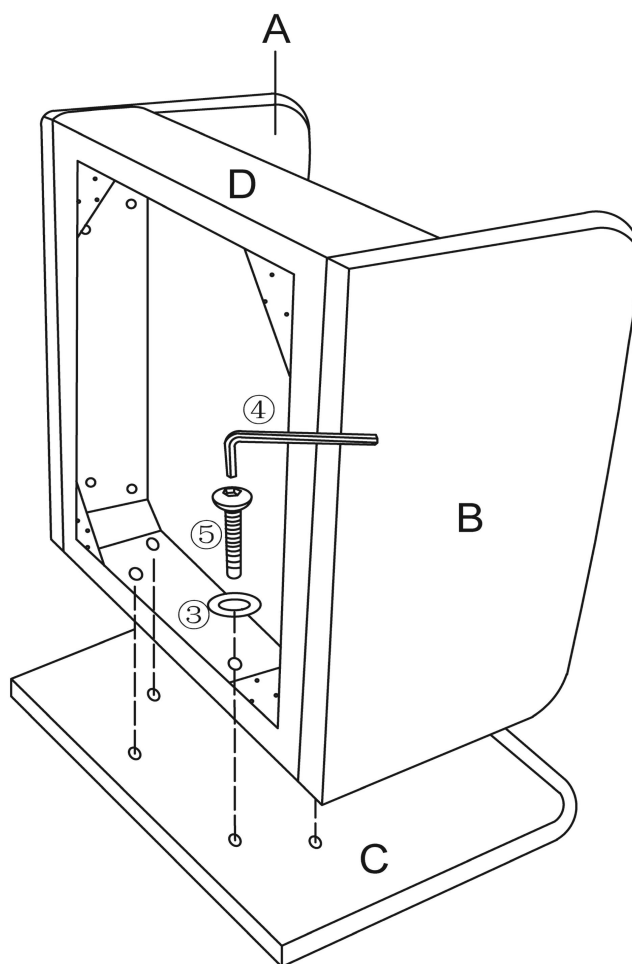


## STEP4

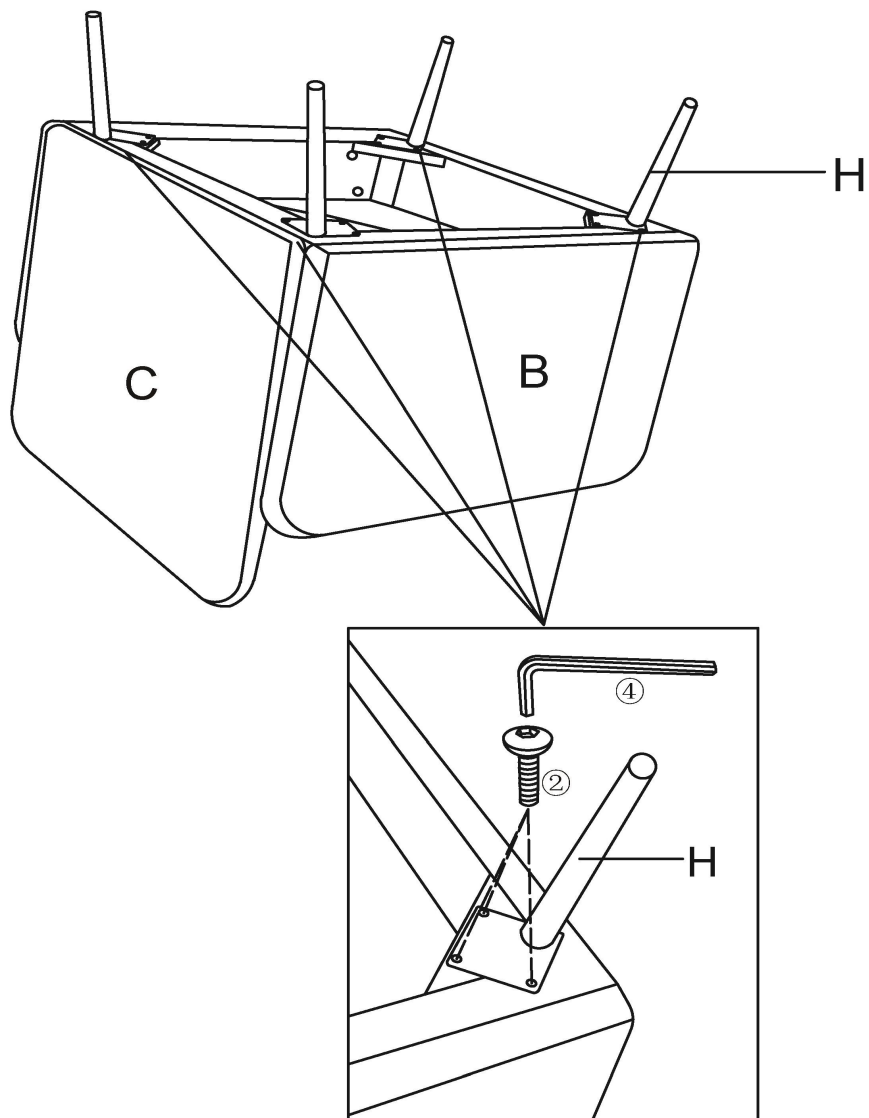

## STEP5

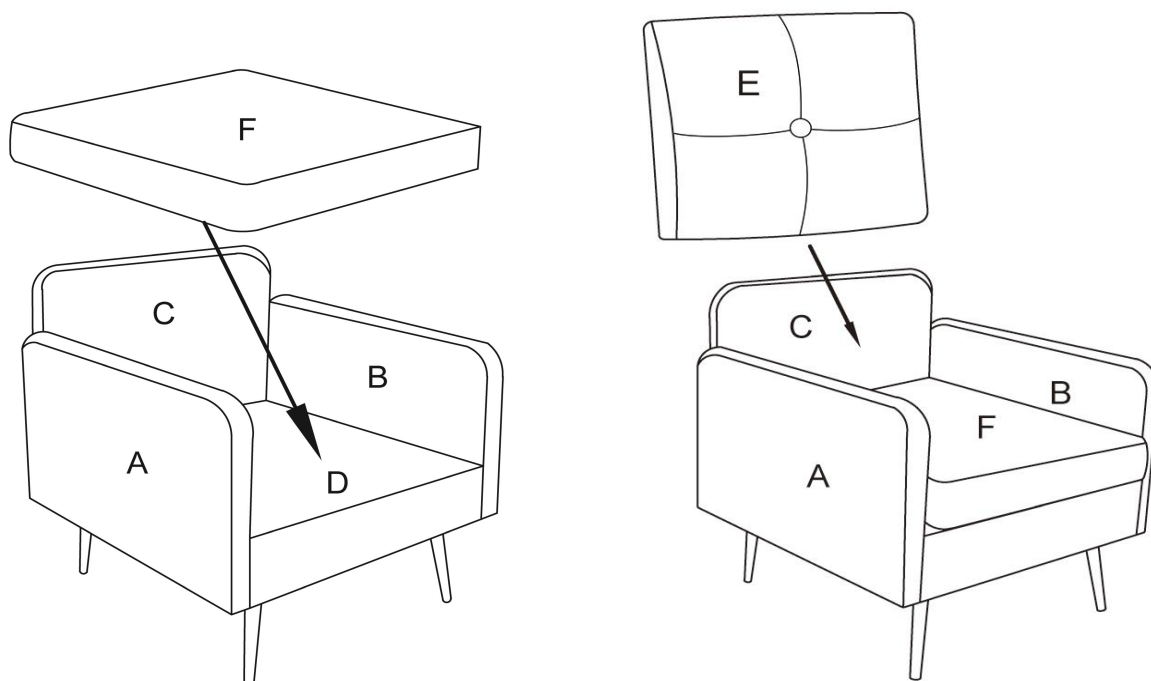


## STEP6

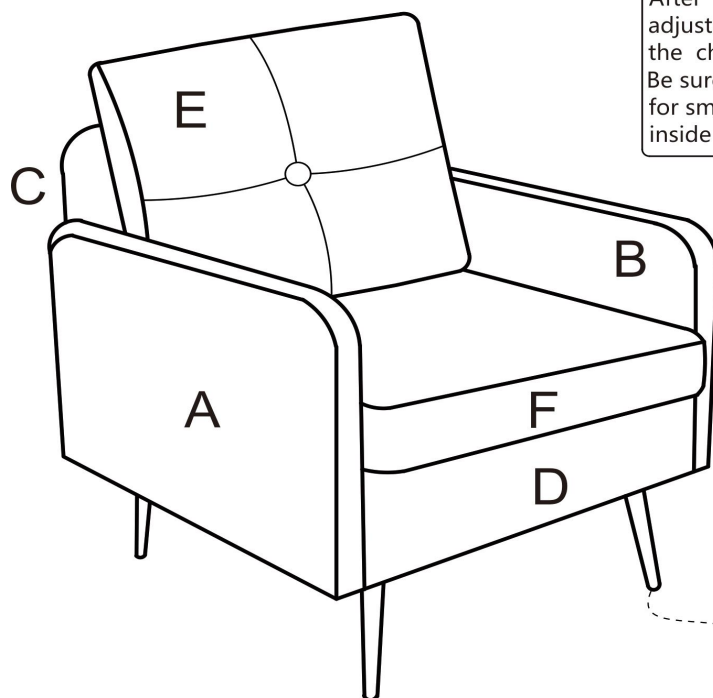


### Attention:

After installation, adjust the adjustable leveler to keep the chair balanced.

Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

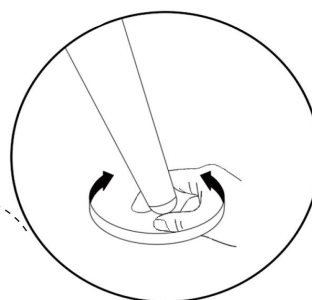

## FINISH

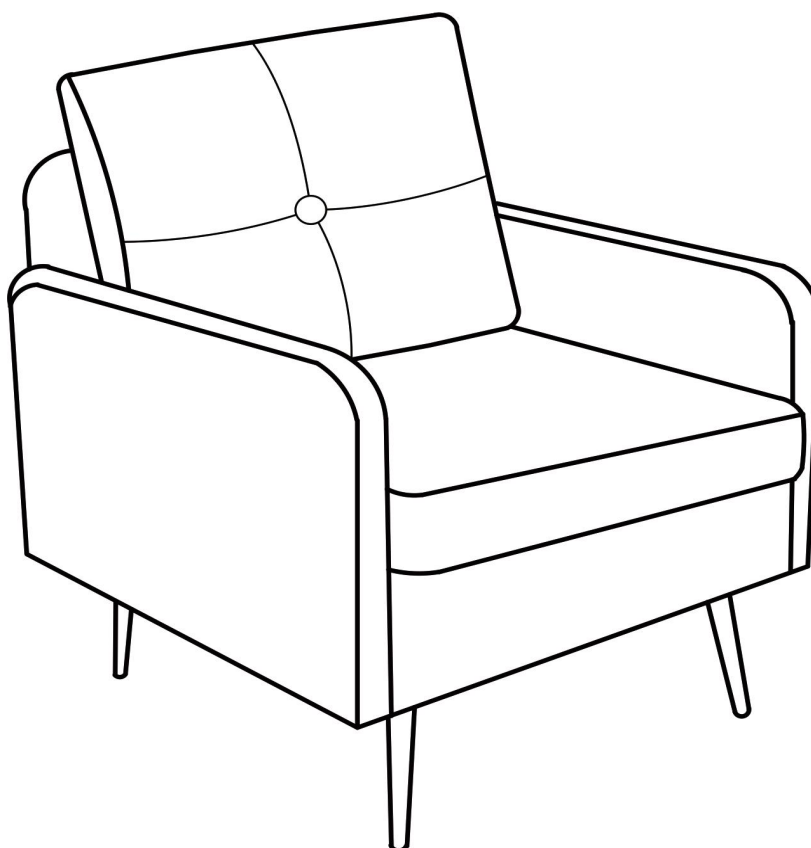

**MADE IN CHINA**