

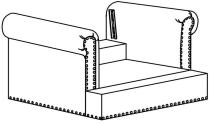


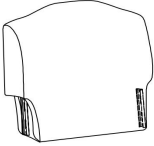




ASSEMBLY INSTRUCTION

AC9001


PARTS

S.NO.	DESCRIPTION		QTY
A		Seat Frame	1
B		Metal base	1
C		Seat cushion	1
D		Front legs	2
E		Back legs	2


HARDWARE

S.NO.	DESCRIPTION		QTY
①		Bolt M8x18mm	4
②		Allen Key 6mm	1
③		Flat washer	2


STEP1

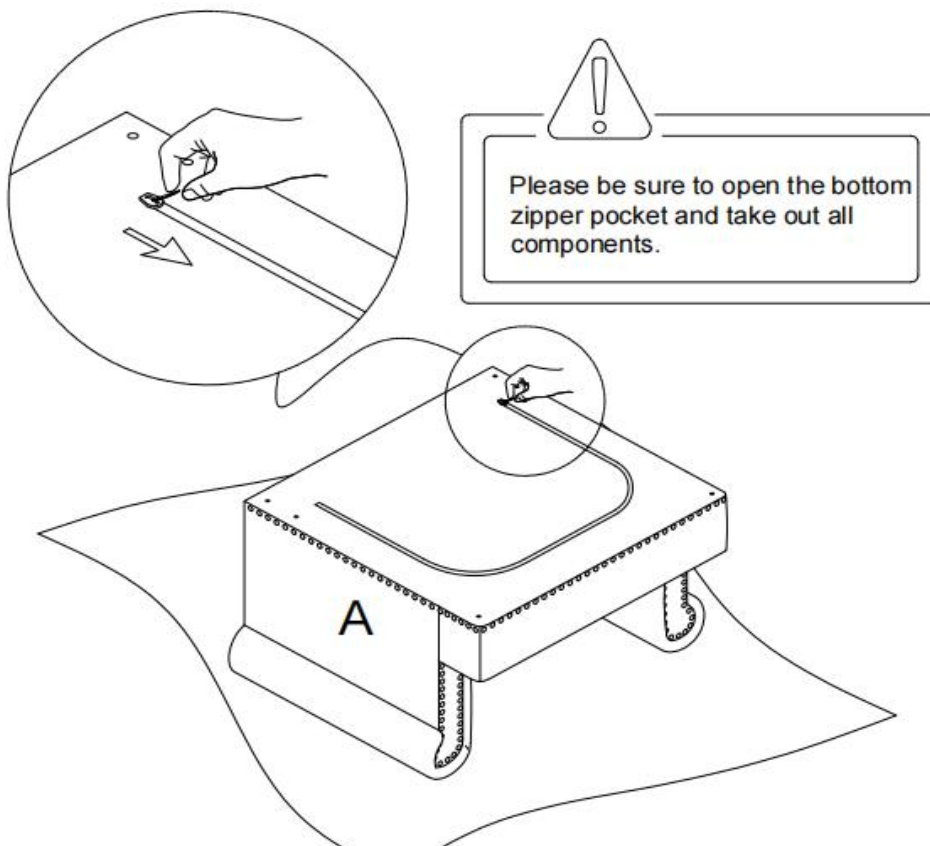


STEP2

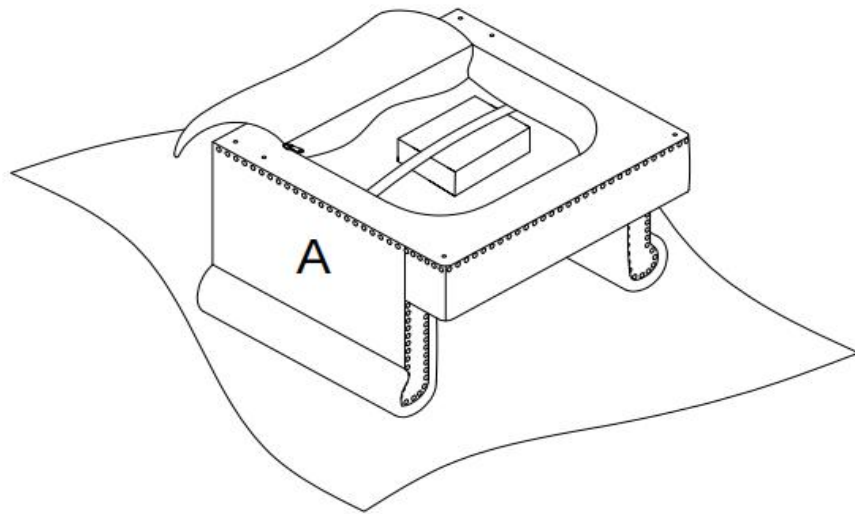


STEP3

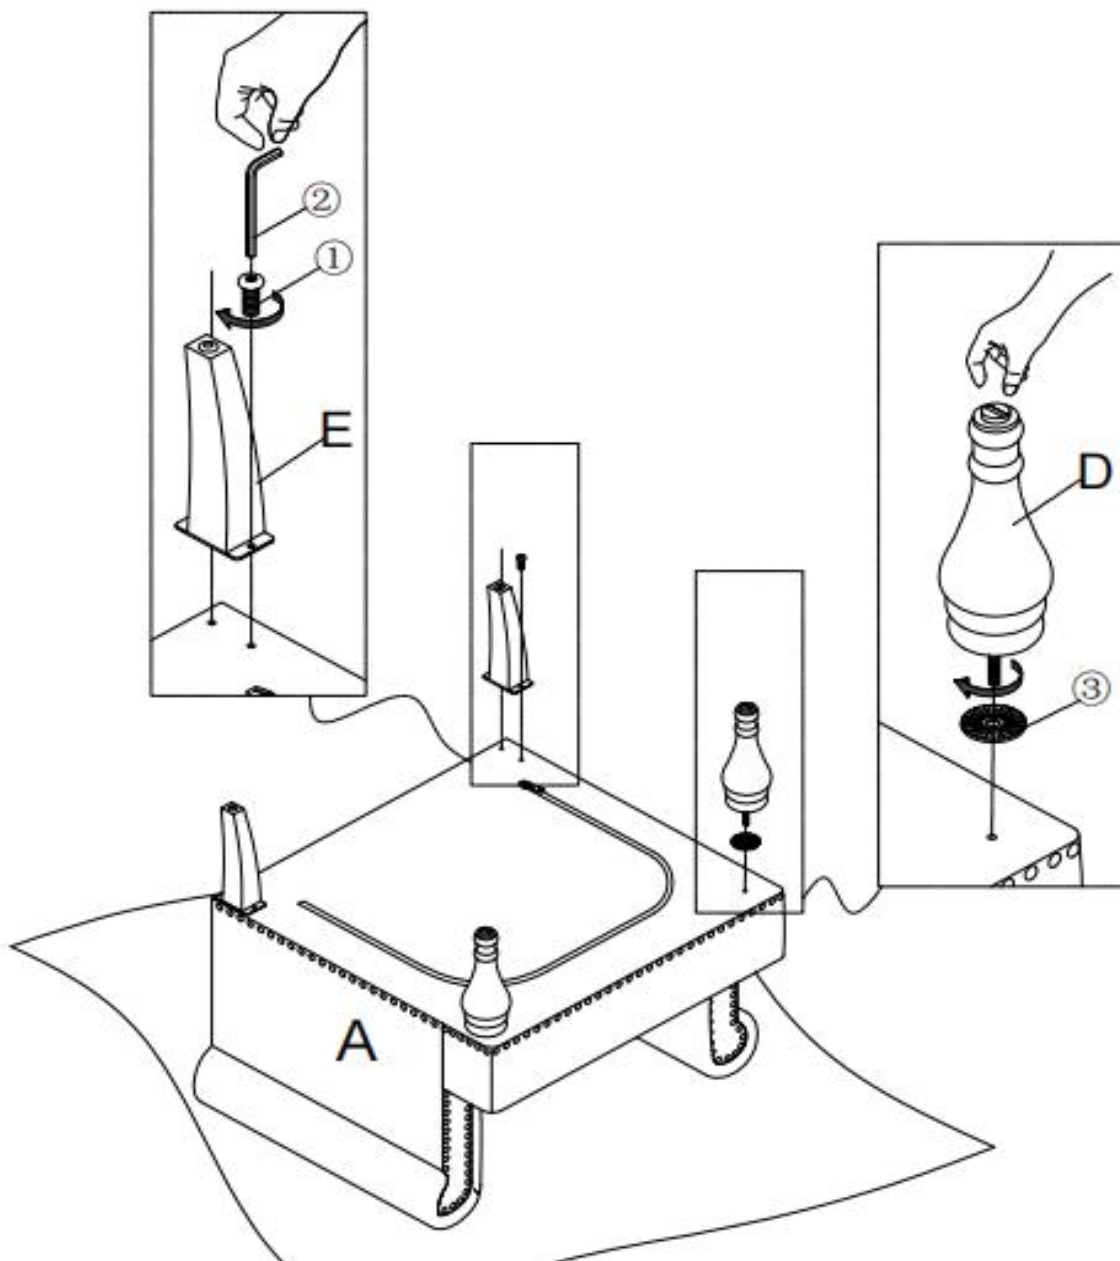


STEP4

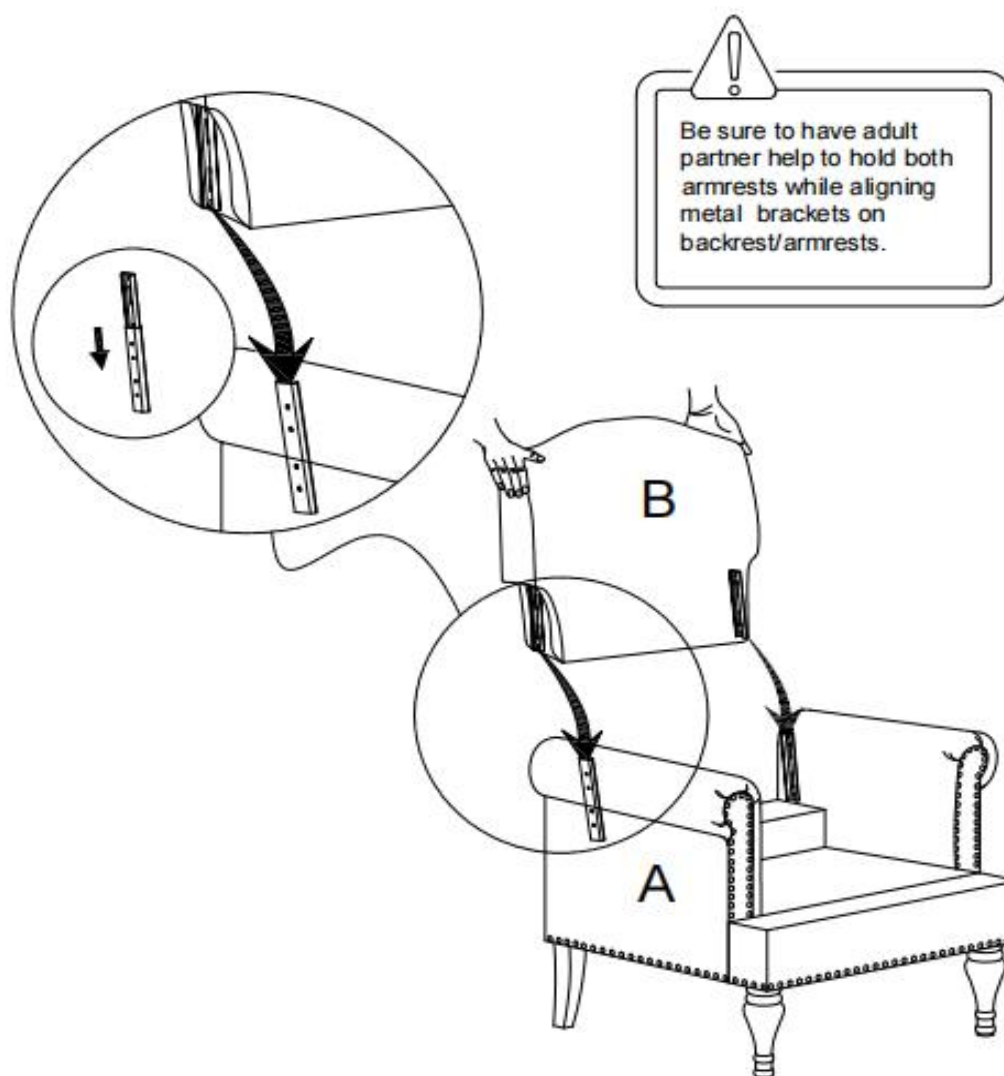

STEP5

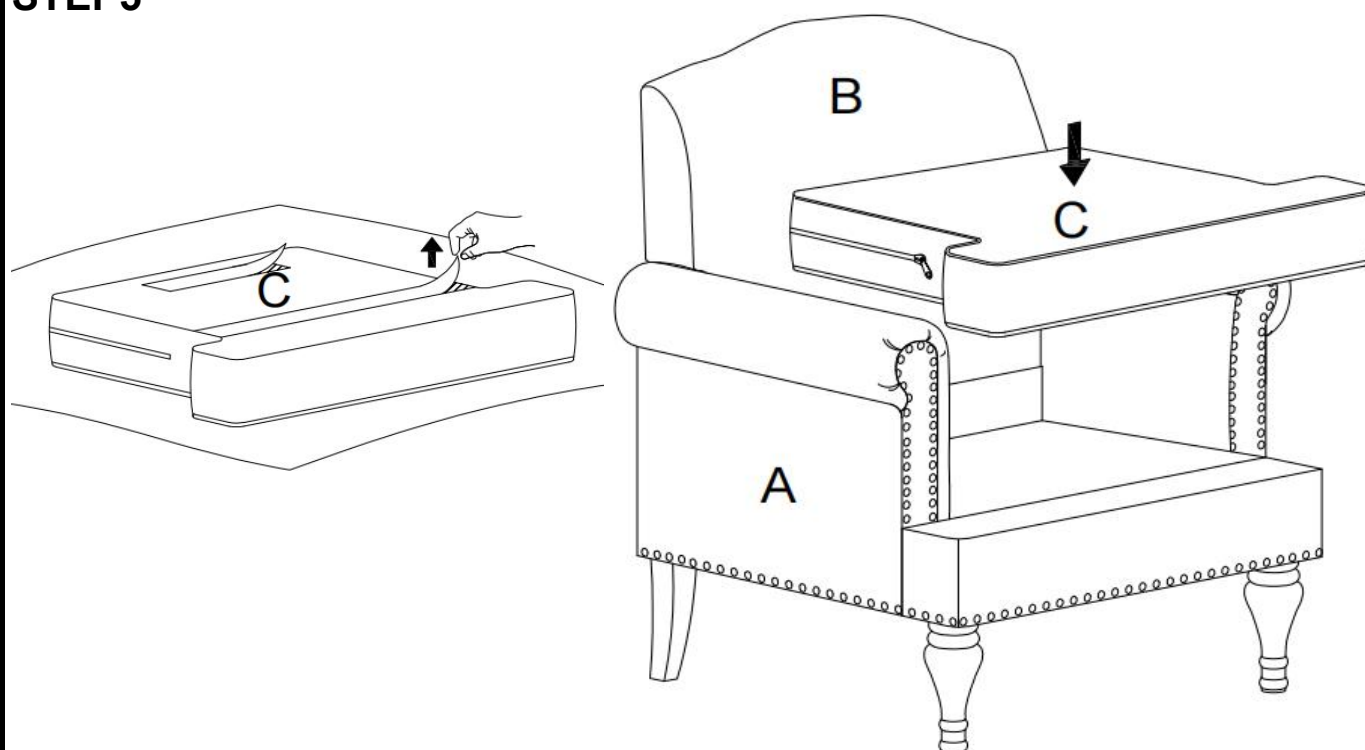


STEP6

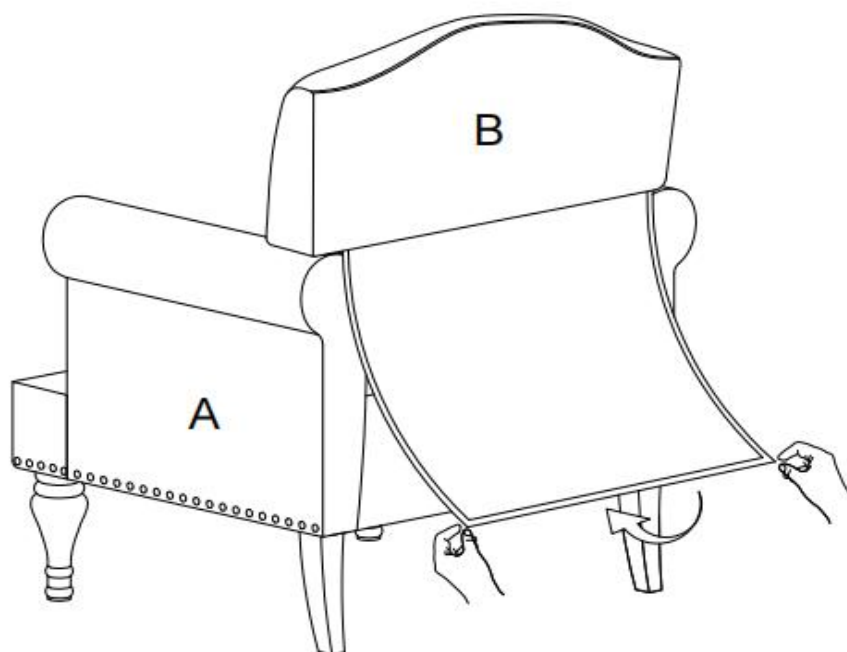

FINISH

Attention:
After installation, adjust the adjustable leveler to keep the chair balanced.
Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

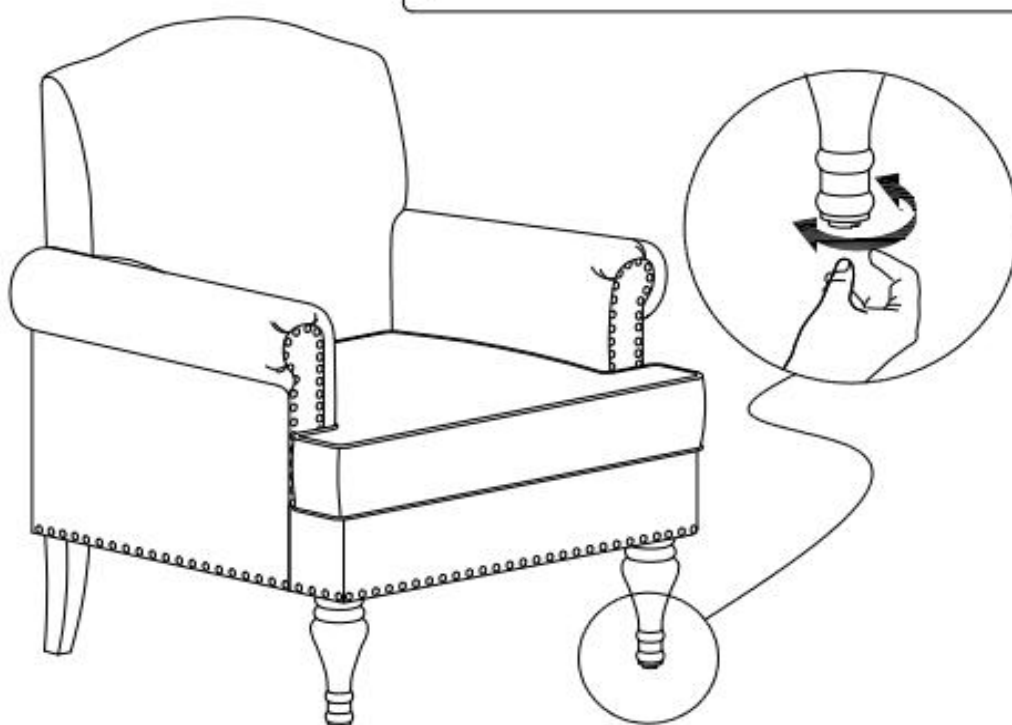

MADE IN CHINA