







# ASSEMBLY INSTRUCTION

AC9152


## PARTS

S.No.	DESCRIPTION		QTY
A		Front foot	2
B		Back foot	2
C		Seat frame	1
D		Back cushion	1

## HARDWARE


S.No.	DESCRIPTION		QTY
①		FALLEN BOLT M8*18MM	5
②		ALLEN KEY M6	1

### STEP 1

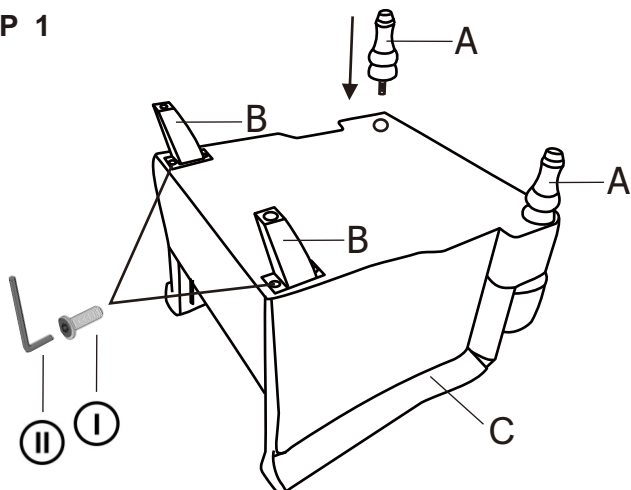


Attach the front and rear feet to the bottom of the seat frame.

### STEP 2

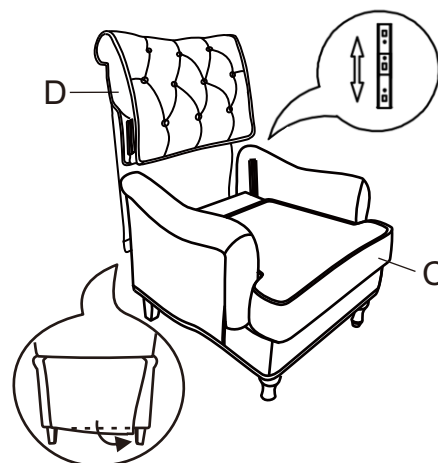


Carefully align male and female metal bracket then push all the way down to secure. Smooth the lower back flap and carefully secure the velcro belt to rear bottom edge of seat frame.

### STEP 3

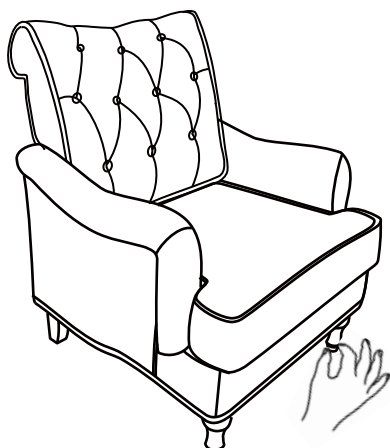

Attention: After installation, adjust the adjustable leveler to keep the chair balanced.

### STEP 4

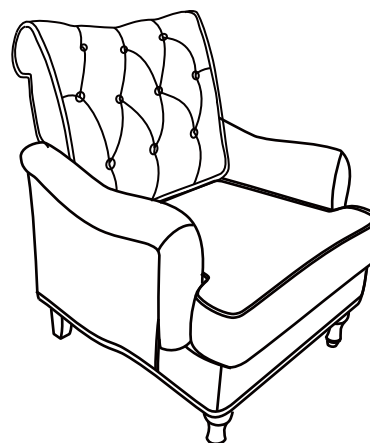

Installation complete.

MADE IN CHINA