






ASSEMBLY INSTRUCTION

AC9154


PARTS

S.No.	DESCRIPTION	QTY
A	 foot	4
B	 Back cushion	1
C	 Seat frame	1

HARDWARE


S.No.	DESCRIPTION	QTY
①	 FALLEN BOLT M6*18MM	13
②	 ALLEN KEY M6	1

STEP 1

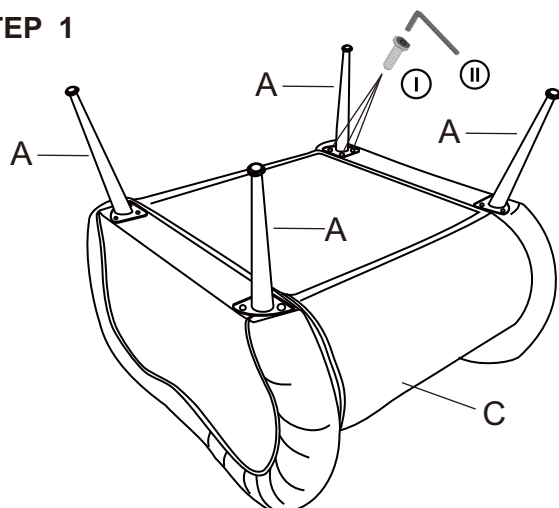


Install the chair legs at the bottom of the seat frame.

STEP 2

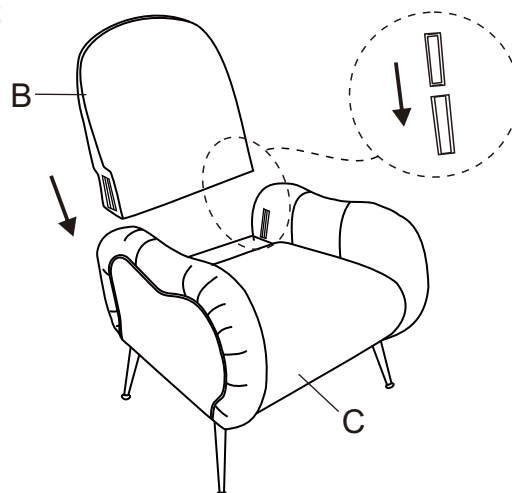


Install the chair back onto the seat frame.

STEP 3

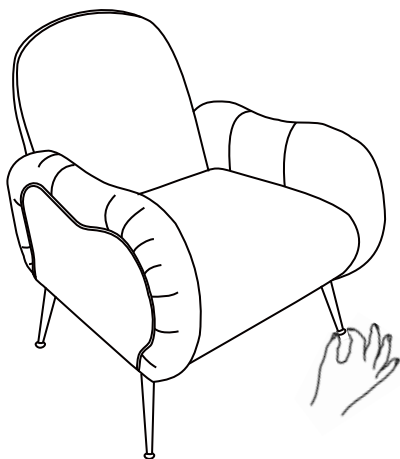

Attention: After installation, adjust the adjustable leveler to keep the chair balanced.

STEP 4

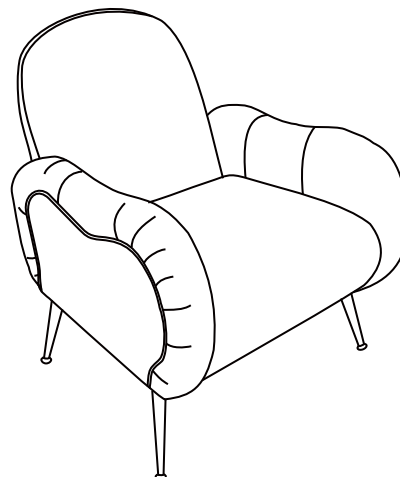

Installation complete.

MADE IN CHINA