



ASSEMBLY INSTRUCTION FOR ACME FURNITURE






MODEL#BD03792Q1


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

Do not fully tighten screw until fully assembled

	COMPONENT PARTS	
DESCRIPTION	PART NAME	Q'TY (PCS)
(A)	HEADBOARD 	1
(B)	HEADBOARD POST - (L/R) 	2

HARDWARE REQUIRED


NO	NAME	PART	QTY
1	Allen key		1pc
2	JCBC 40mm		6pcs
3	M6 Spring washer		6pcs
4	M6 Flat washer		6pcs
5	AC/DC Adapter		1pc

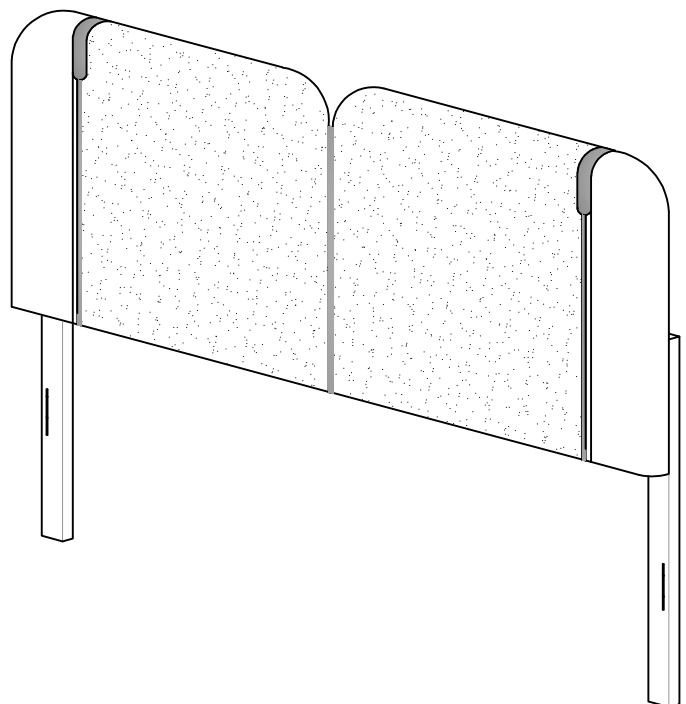

2 OPTIONS HEIGHT POSITION OF HEADBOARD

Version 1 :


ADJUST HEADBOARD TO FIT 10" MATTRESS

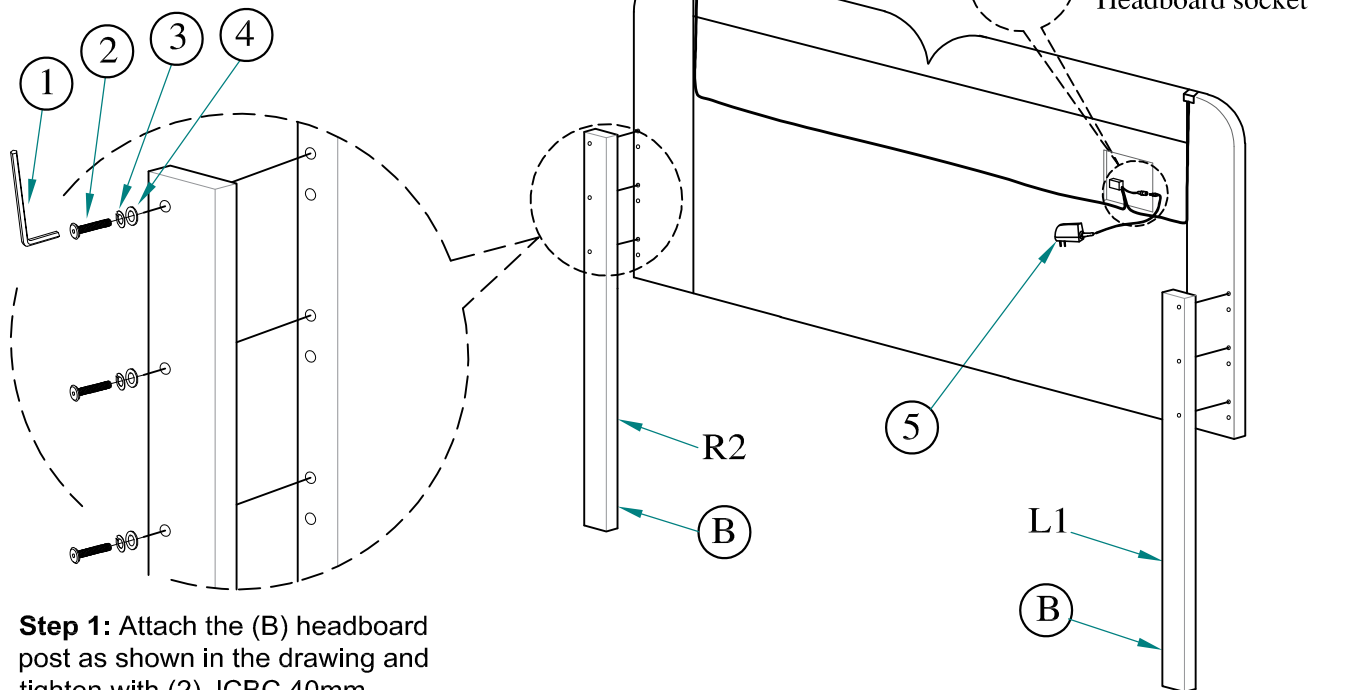


Step 1: Attach the (B) headboard post as shown in the drawing and tighten with (2) JCBC 40mm , (3) M6 spring washer & (4) M6 flat washer.

Version 2 :

ADJUST HEADBOARD TO FIT 12" MATTRESS

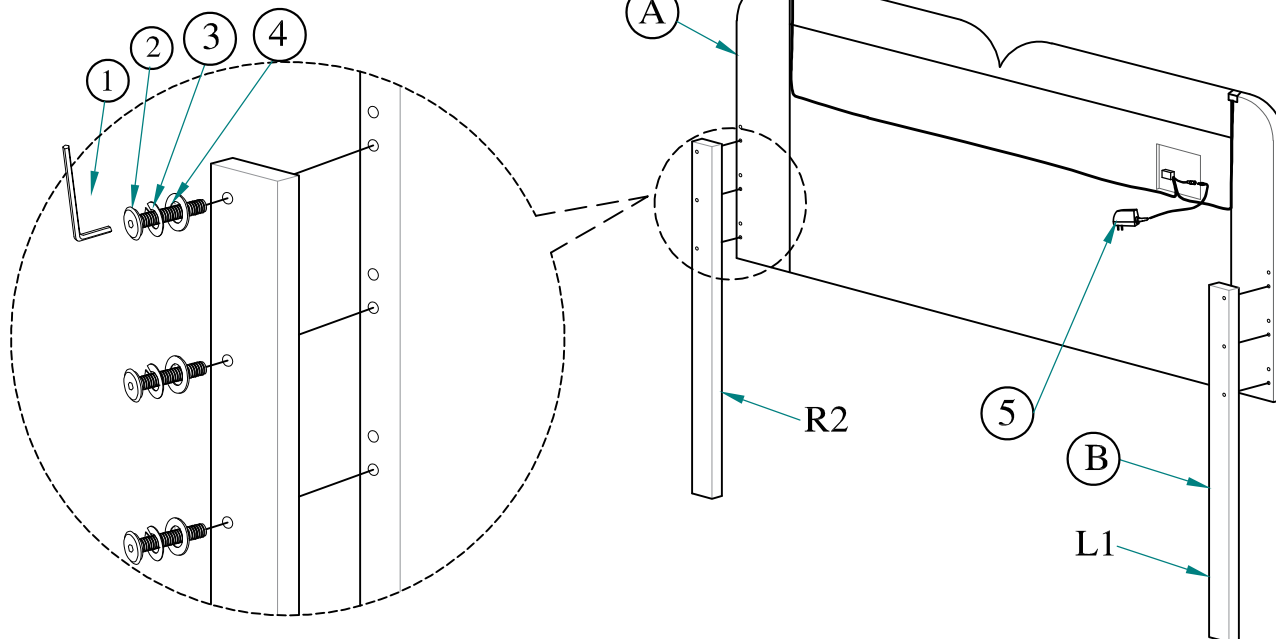

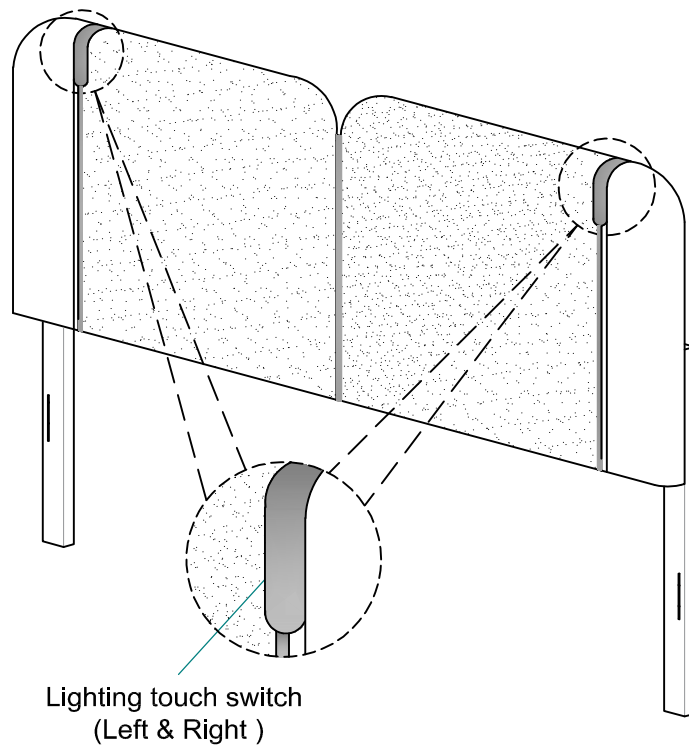

Lighting touch switch
(Left & Right)