


Dining Chair

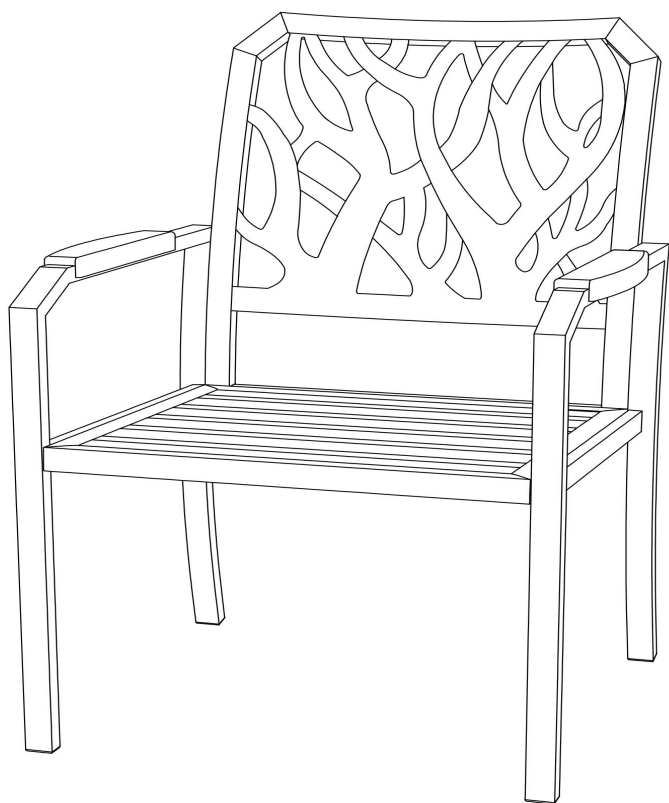











ASSEMBLY INSTRUCTIONS

OE-H-530-1A




BEFORE ASSEMBLY:

- Please read these instructions carefully before starting assembly. We suggest you carry out the assembly on a soft surface like a carpet, so as to avoid scratching the paint. Keep children away during assembly. This item contains small parts which can be swallowed by children.
- This product was made for the explicit purpose of providing outdoor function and is not to be used as a toy. This product is for residential use only. This product is not intended for commercial use; unintended use will void the warranty.
- This product is not intended for use during inclement or severe weather, that includes but is not limited to rain, hail, sleet, snow, wind, freezing conditions and extreme heat.
- Please note because of the nature of cast metal, you may find roughness on the surface which enhances the beauty of the product and is not a defect.
- Aluminum is soft metal, please do not use power tools, and over tighten may strip threads or break the parts.
- When not in use, store and/or cover the product in a cool dry location. Do not locate the product near any sort of high heat. Do not use the product as a support.
- Children under the age of 10, who are near the product, should be supervised by a competent adult at all times.
- Do not discard any of packaging until you finish the assembly. Keep the assembly instructions for future reference or warranty.

AX2  Back	BX2  Seat	CX2  Left Armrest	DX2  Right Armrest
EX16  Washer	FX16  Spring Washer	GX12  Bolt(M6*30)	HX4  Bolt(M6*45)
IX16  Cap	JX4  Resin-treated wood Arm	KX2  Cushion	LX2  Wrench

1


Step 1: Place all the parts on a clean and soft surface and identify all the parts and hardware kits against parts list. Assemble Left Armrest (C), Right armrest (D) and Seat (B) with parts (E,F,G,I) as fig(1). Remember not to tighten all the bolts before they are all set up.

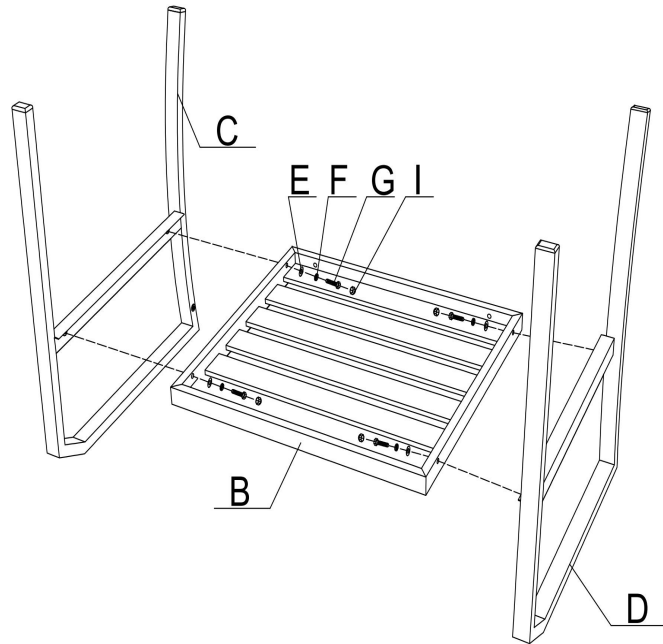

(1)

2


Step 2: Connect Back (A) and Seat (B) with parts (E,F,G,I) as fig(2)

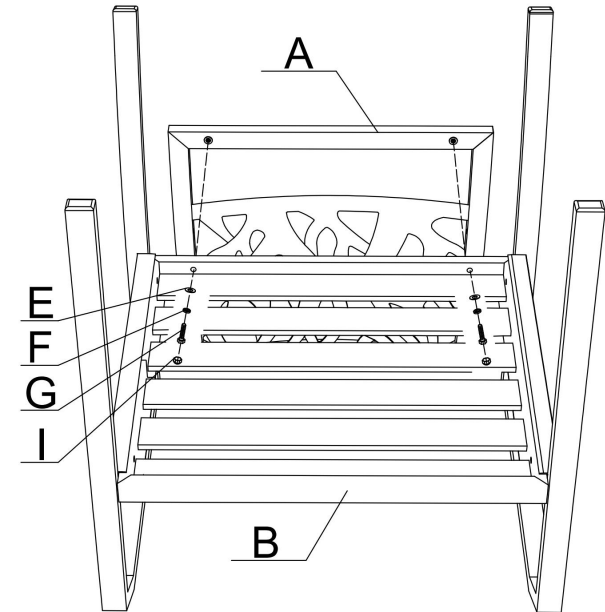

(2)

3


Step 3:Connect Back(A)and 2 Armrests(C,D) with parts(E,F,H,I) as fig(3)

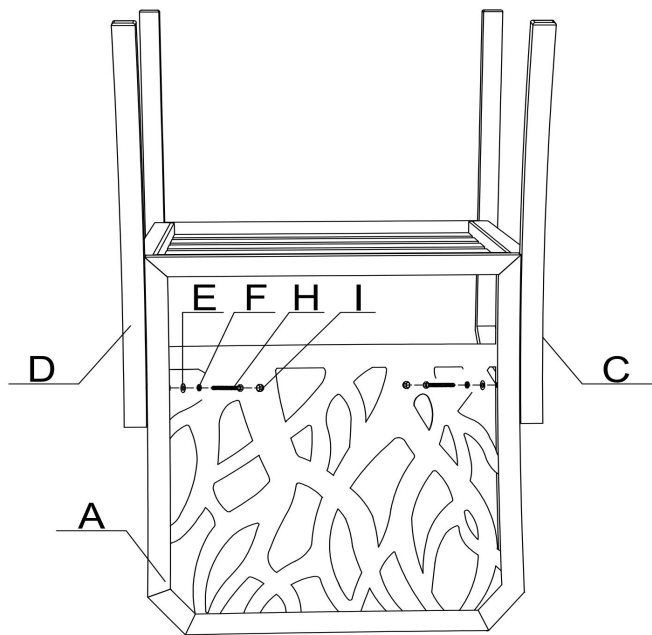

(3)

4


Step 4:Turn the chair over.

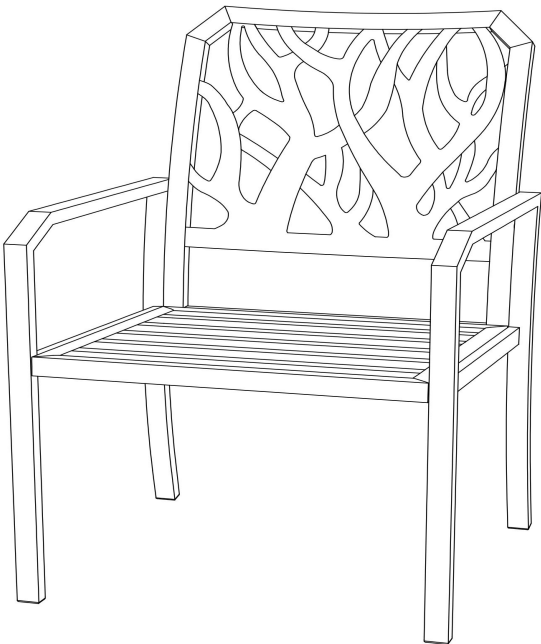

(4)

5


Step 5: Start by adjusting the position of the Resin-treated wood Arm(J), the default position is to place the front of the arms flush with the top edge of the cut corner of the Armrests(C,D). Remove the clear film from the bottom of the Resin-treated wood Arm(J) and snap it onto the armrest (C,D) as fig(5), pressing it down, make sure it is securely mounted. In an hour it will be completely bonded.

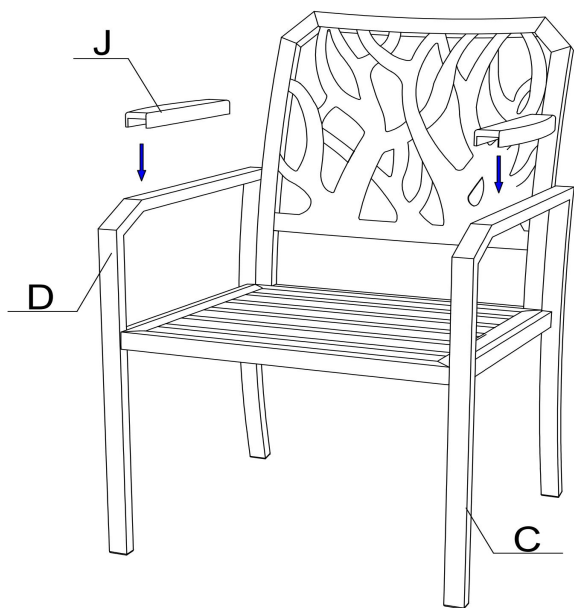

(5)

6

Step 6: Tie the Cushion(K). Your chair should be ready for use.

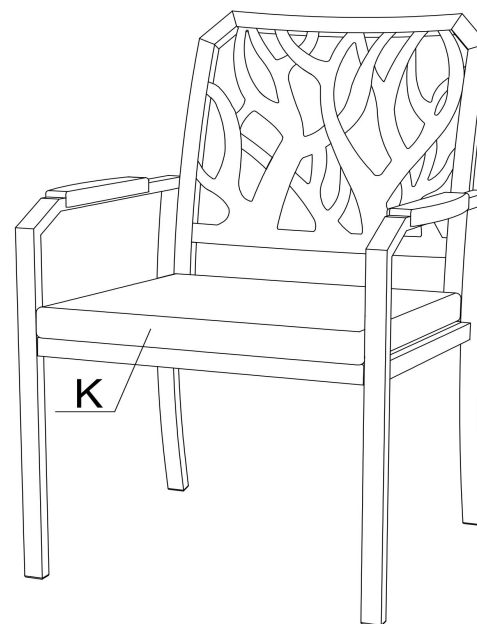

(6)

Tip: Tighten all the bolts with Wrench(L)