


Sideboard Cabinet

SKU WHIF2349

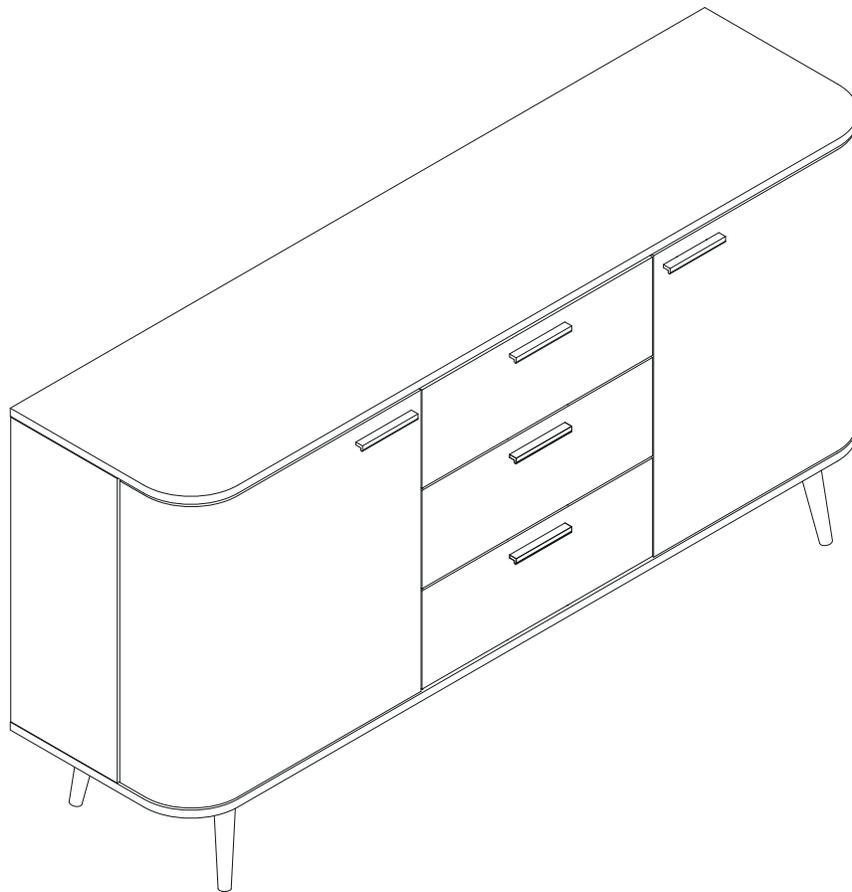

ASSEMBLY INSTRUCTIONS



90 min. assembly

2 person

*The estimated assembly time may vary depending on the individual.

Hey, there

Now is assembly time!

Deeeeeeep breathe.... and again....
Tools ready,
Easy peasy!

Estimated



90 min. assembly
2 person

Tools Required

- Phillips screwdriver (not included)
- Power Drill (not included)

important: *Cautious when you use power tools*

Need Help?

Call us at +1 909 548 6688
Email customerservice@luxenhome.com
Submit a ticket on www.luxenhome.com/help

Thank you for purchasing this LuxenHome product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY.

Un pack all parts from the packaging inside the carton to ensure there are no missing or damaged parts. Lay out all the parts on a clean, flat, and soft surface to prevent scratches. Refer to the steps provided as assembling guide.

Do not attempt to assemble or use the product if any parts are missing or damaged.

REMINDERS

SAFE USAGE IS KEY

Your well-being is our top priority when you use our product. Please prioritize your safety by diligently following the assembly guidelines and inspecting the product carefully both when it arrives and before each use.


Please be aware that LuxenHome and Winsome House, Inc. cannot be held liable for any injuries or fatalities that occur due to not adhering to the provided instructions or misuse of the product.

DO NOT MODIFY

Our products undergo rigorous testing to ensure they meet established safety standards before being released for sale. Altering the product in any way can lead to serious safety concerns, for which LuxenHome cannot assume responsibility.


What's in the box

Parts

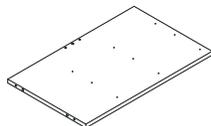


1 X 1

Left support panel

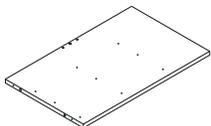


2 X 1

Right support panel



3 X 1

Left side panel




4 X 1

Right side panel




5 X 1

Left shelf panel




6 X 1

Right shelf panel



7 X 1

Back support panel

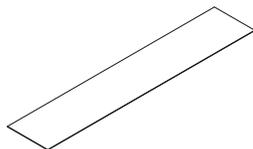


8 X 1

Lower back panel




9 X 1

Connecting strip

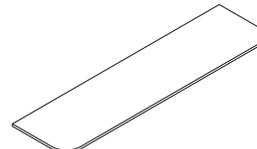


10 X 1

Top panel

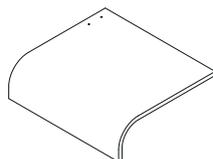

11 X 1

Left door panel

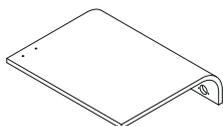

12 X 1

Right door panel



13 X 3

Drawer left panel




14 X 3

Drawer right panel




15 X 3

Drawer back panel




16 X 3

Drawer bottom panel




17 X 3

Drawer front panel

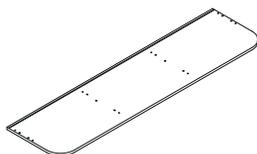

18 X 1

Bottom panel

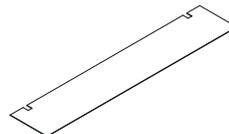

19 X 1

Upper back panel

What's in the box

Hardware & Accessory



A X 28+3
M7 x 39mm



B X 28+3
M15 x 12mm




C X 26+3
M8 x 30mm



D X 52+3
M3.5 x 14mm



E X 16+2
M5 x 40mm



F X 5
Handle with
screws



G X 20+3
M4 x 14mm




H X 4
Metal Plates




I X 2
Adjustable foot
nail



J X 2
Middle Leg



K X 4
Leg




L X 4
Hinge




M X 14+2
Wedge with
screws



N X 8+1
M5 x 50mm

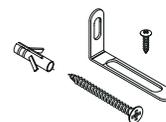

O X 2
Wall bracket
set



CL X 3
Sliding rail



CR X 3
Sliding rail




DL X 3
Sliding rail



DR X 3
Sliding rail

Assembly

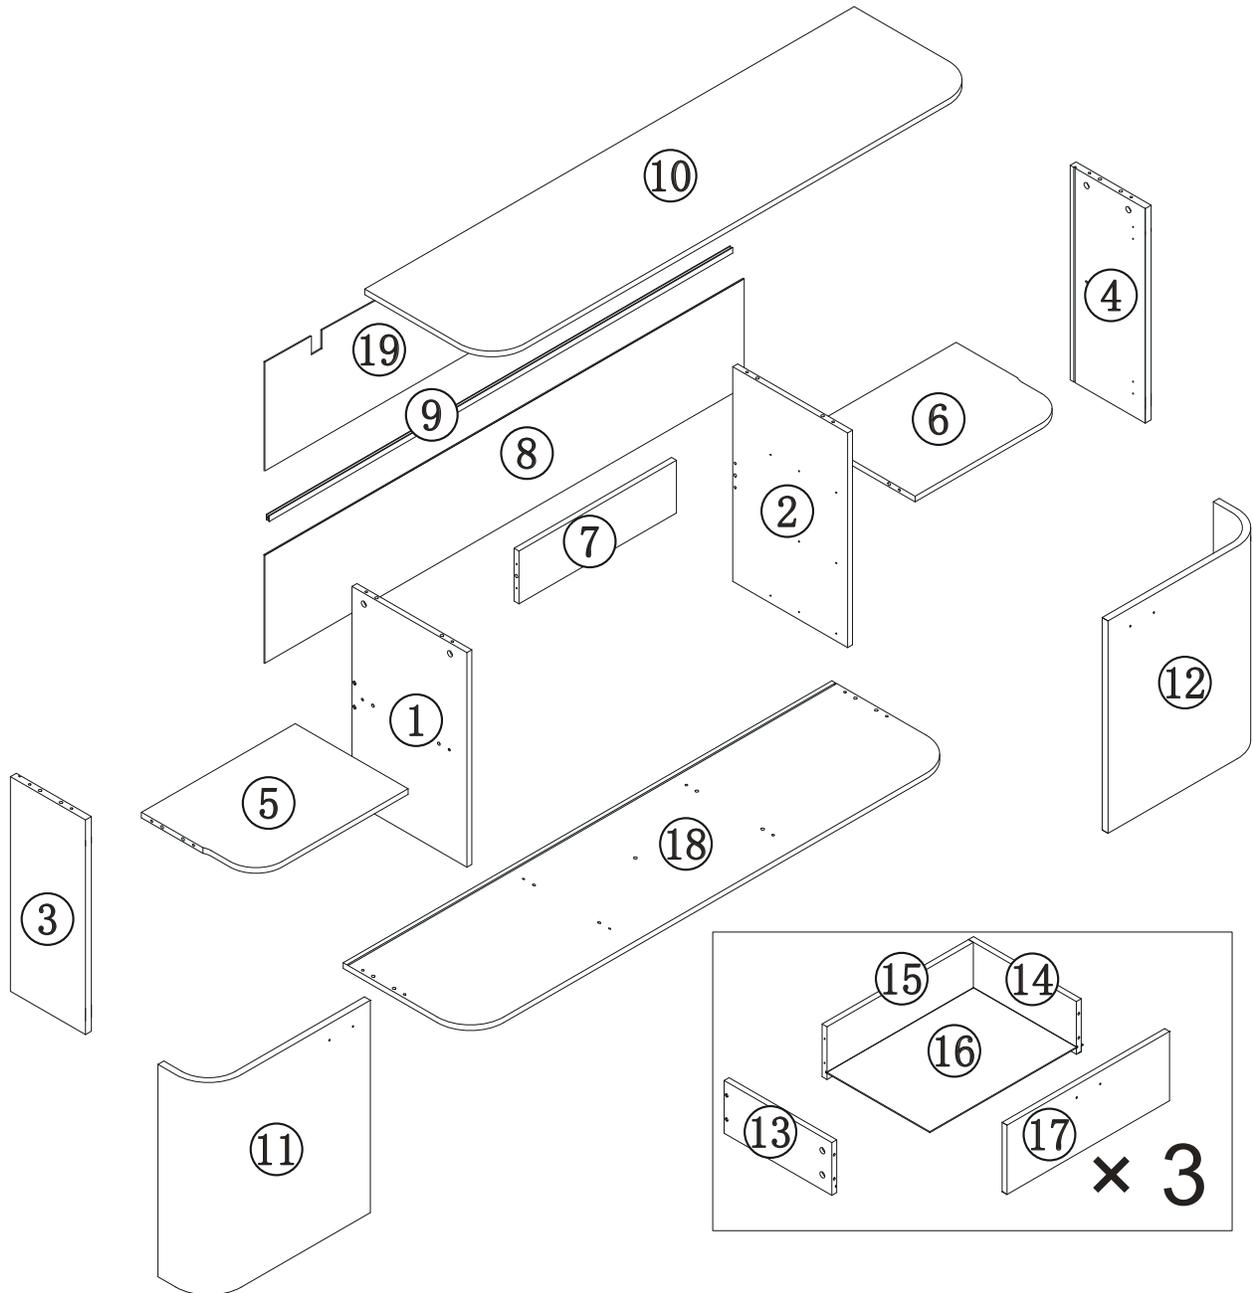


Step 1

Attach sliding rail(CR) and (CL) to parts 1 and 2 using screws (D) as shown.

Dx18
 M3.5 x 14mm
CLx3


CRx3

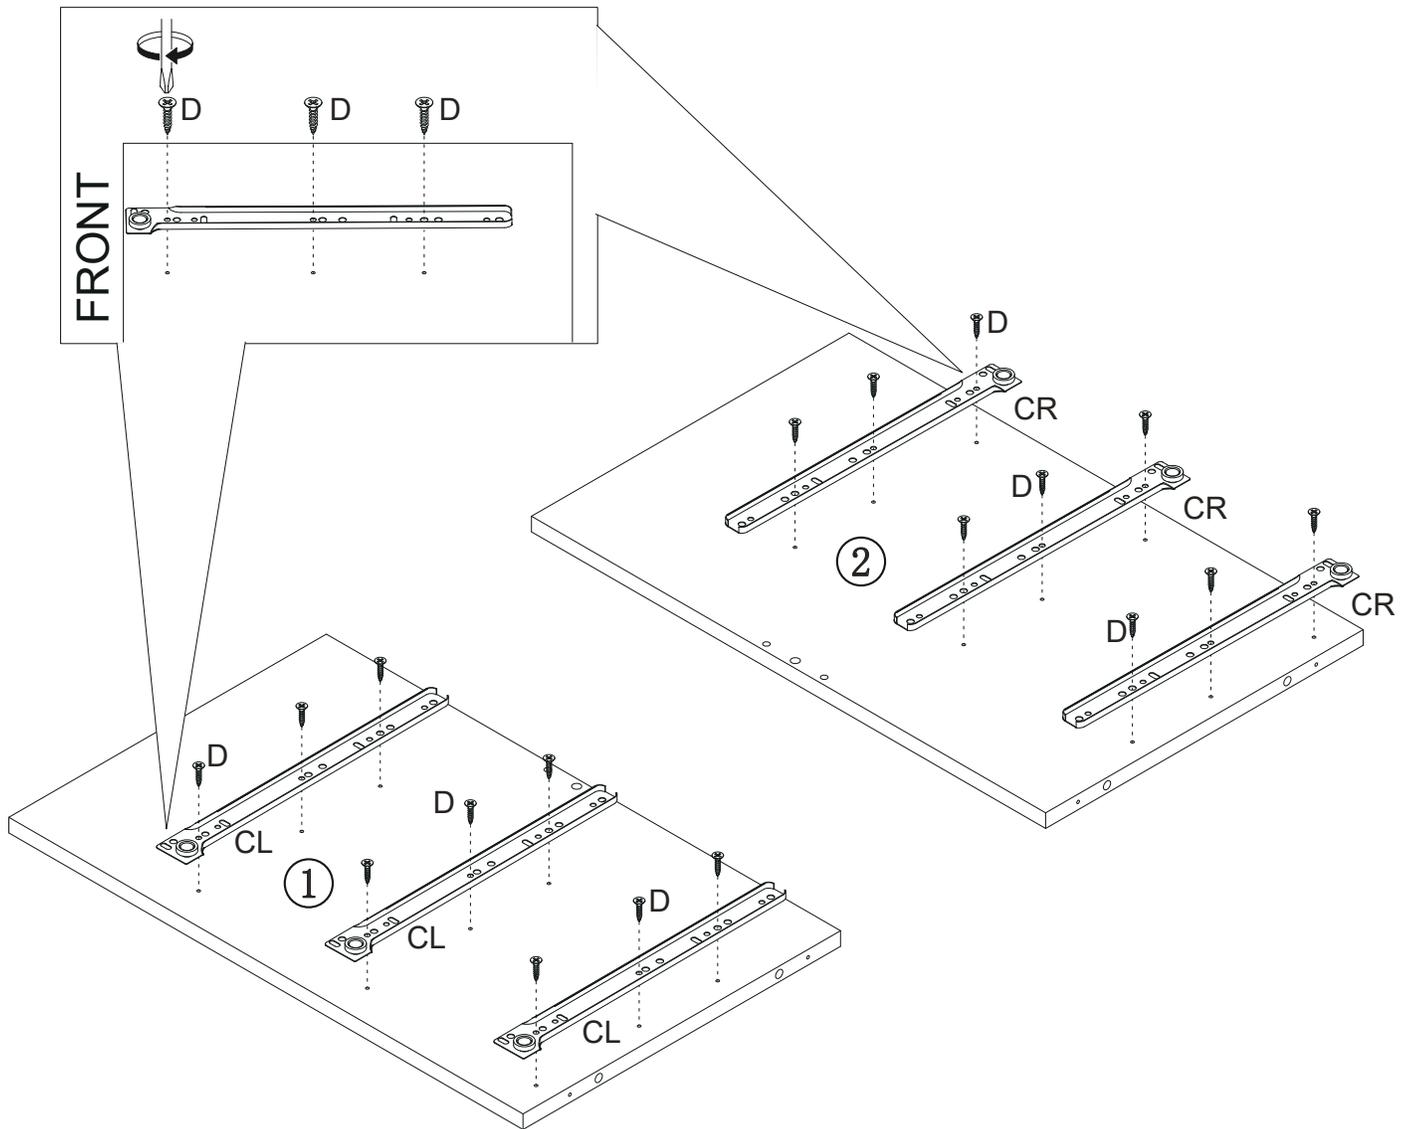Step 2



Insert quickfit screws (A) and wooden dowels (C) into parts 1, 2, 3 and 4 as shown.

Ax8
 M7 x 39mm
Cx16
 M8 x 30mm

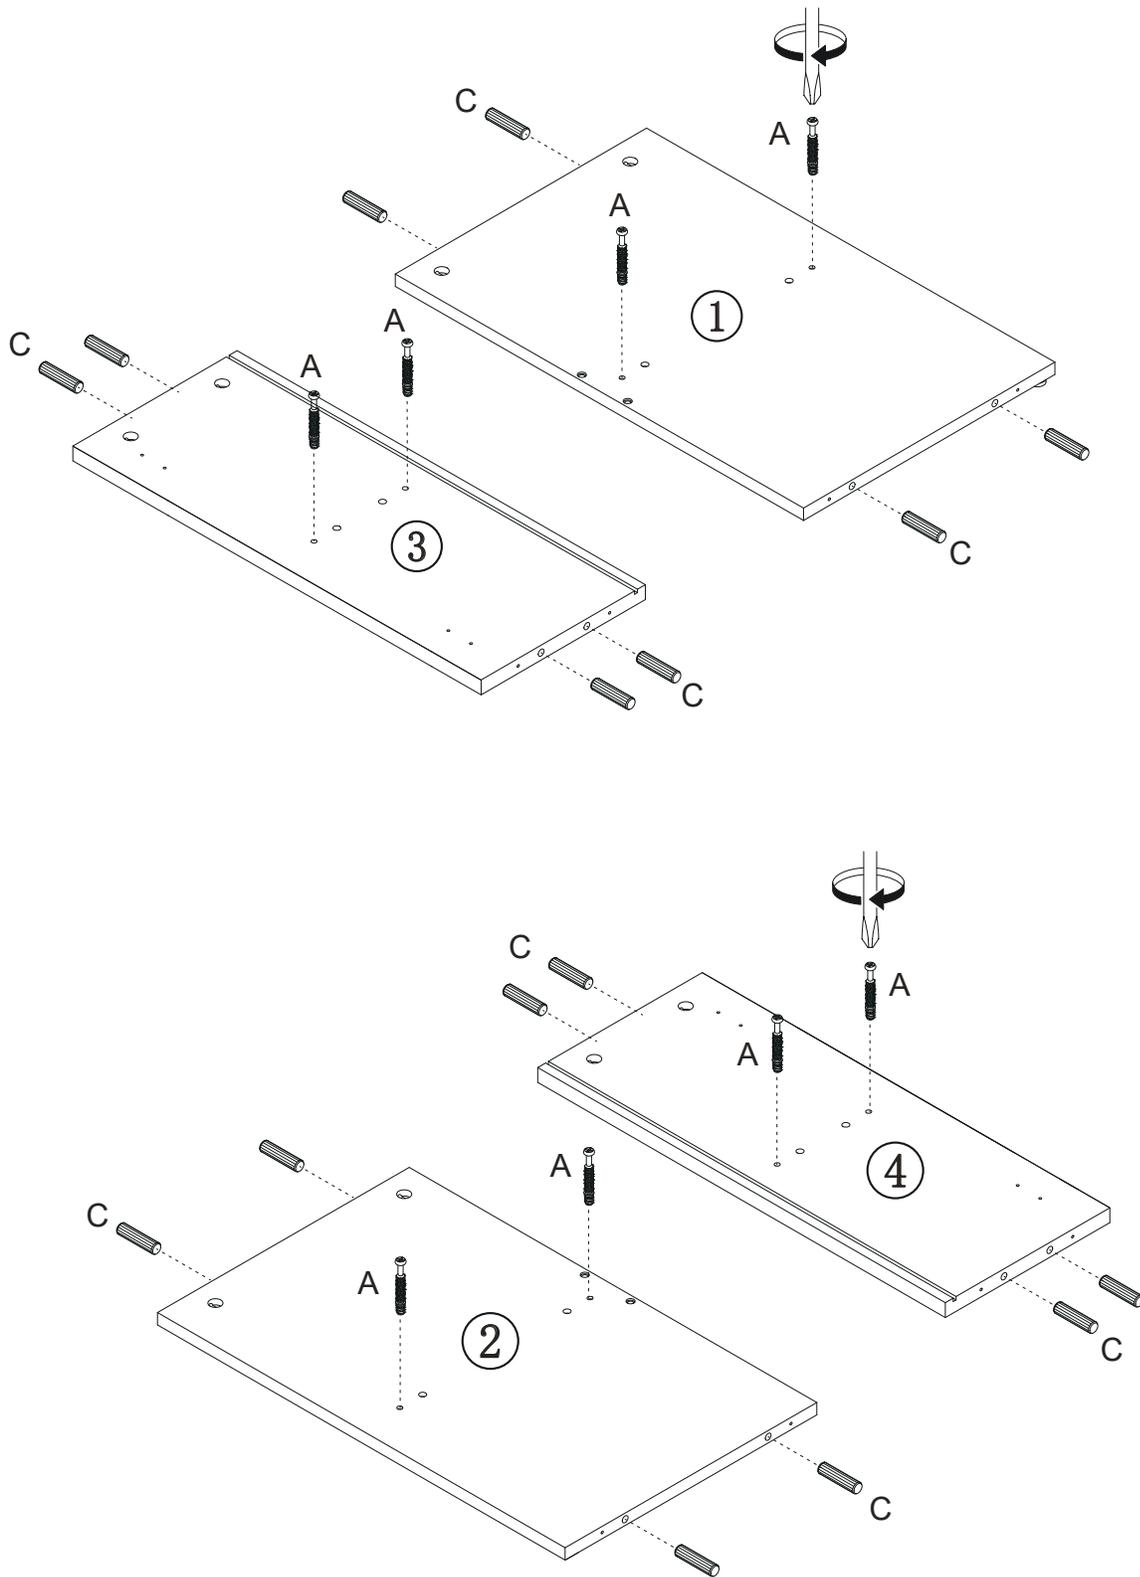



Step 3

Insert wooden dowels (C) into parts 5 , 6 and 7 as shown.

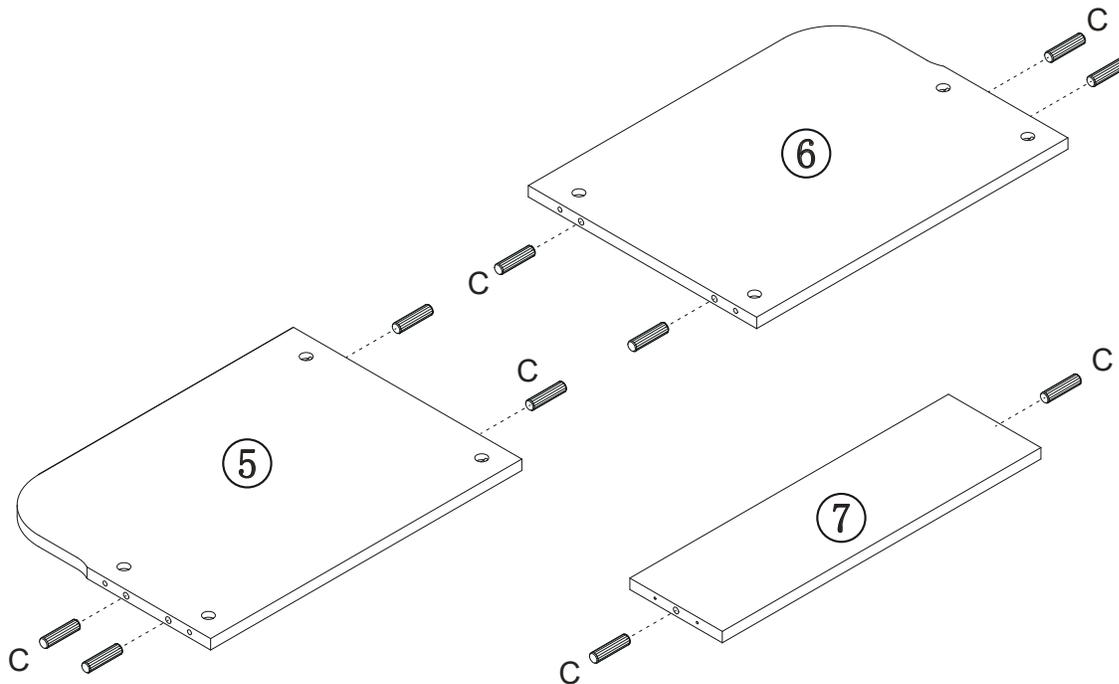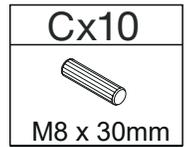



Step 4

Attach part 7 to parts 1 and 2 using screw (E) as shown.

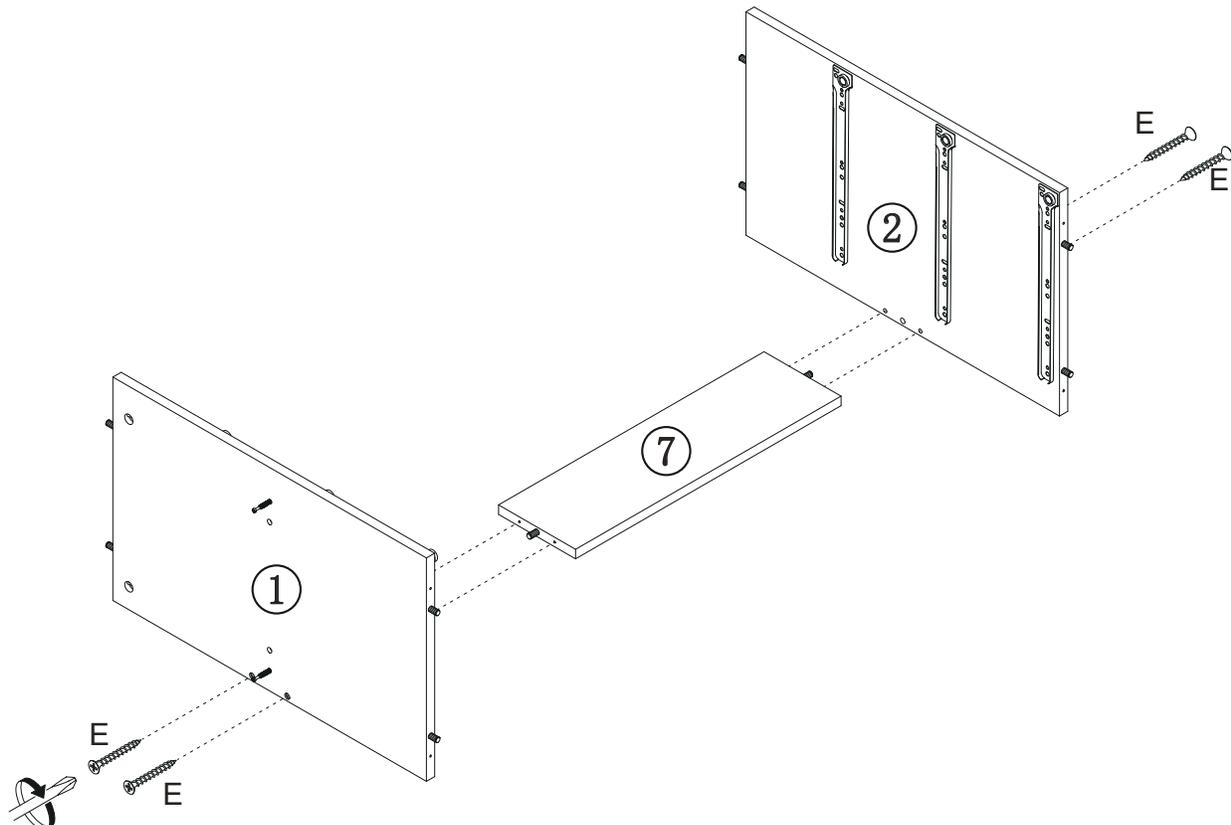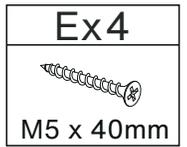



Step 5

Insert cam locks (B) to parts 5 and 6. Turn cam locks clockwise to tighten, attach part 5 and part 1. Attach part 6 and part 2 as shown.

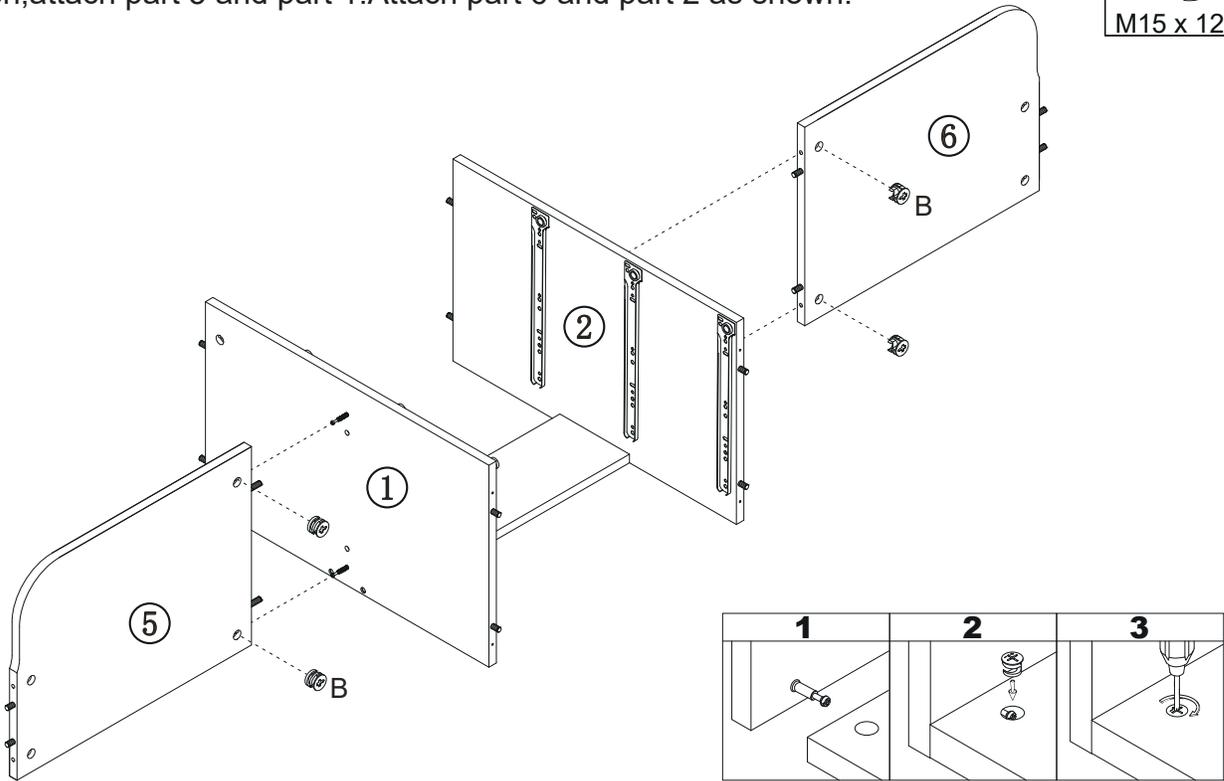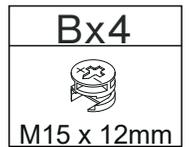



Step 6

Insert cam locks (B) to parts 5 and 6. Turn cam locks clockwise to tighten, attach part 3 and part 5. Attach part 4 and part 6 as shown.

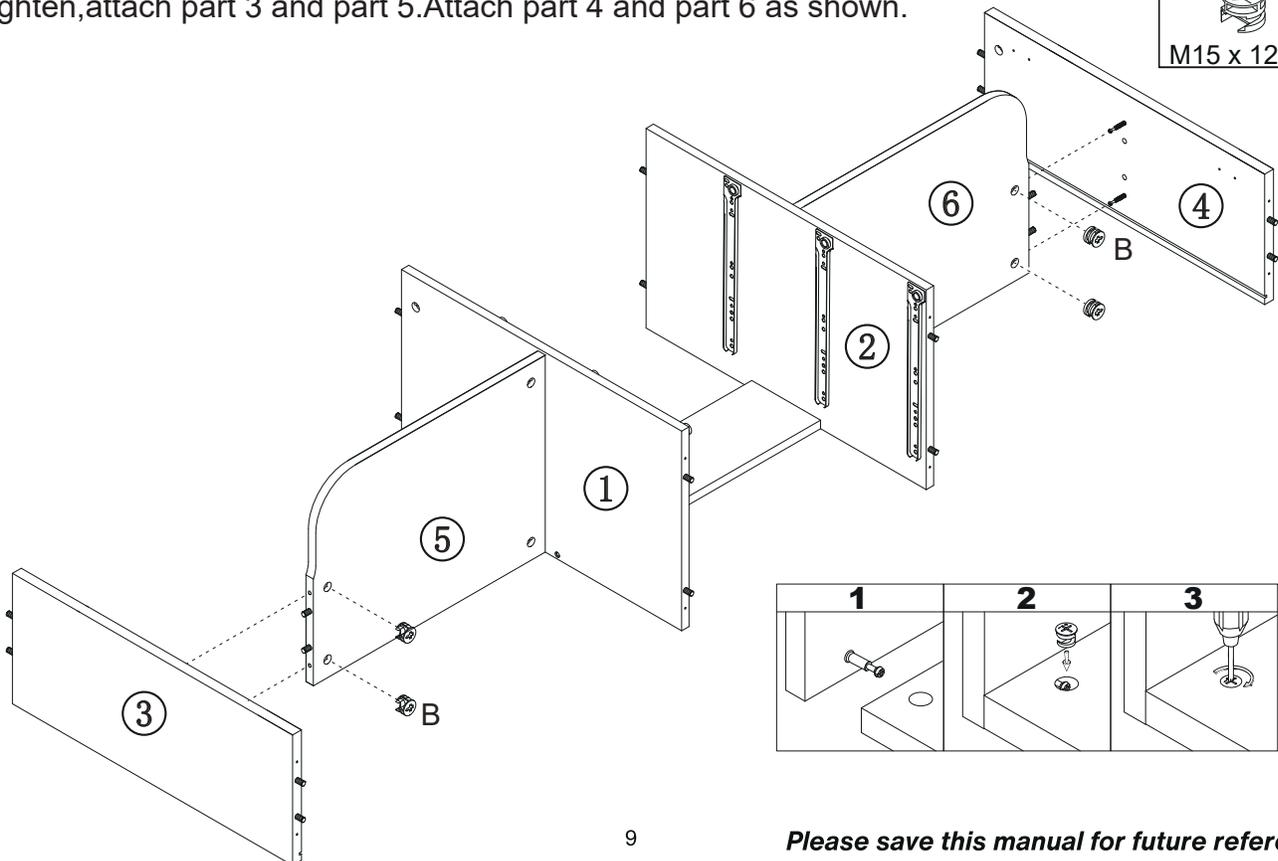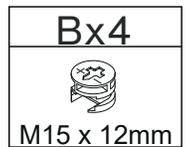


Step 7

Attach (H) to part 18 using screws (G) as shown.

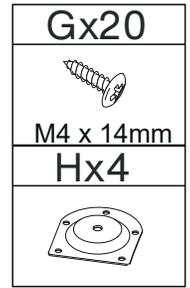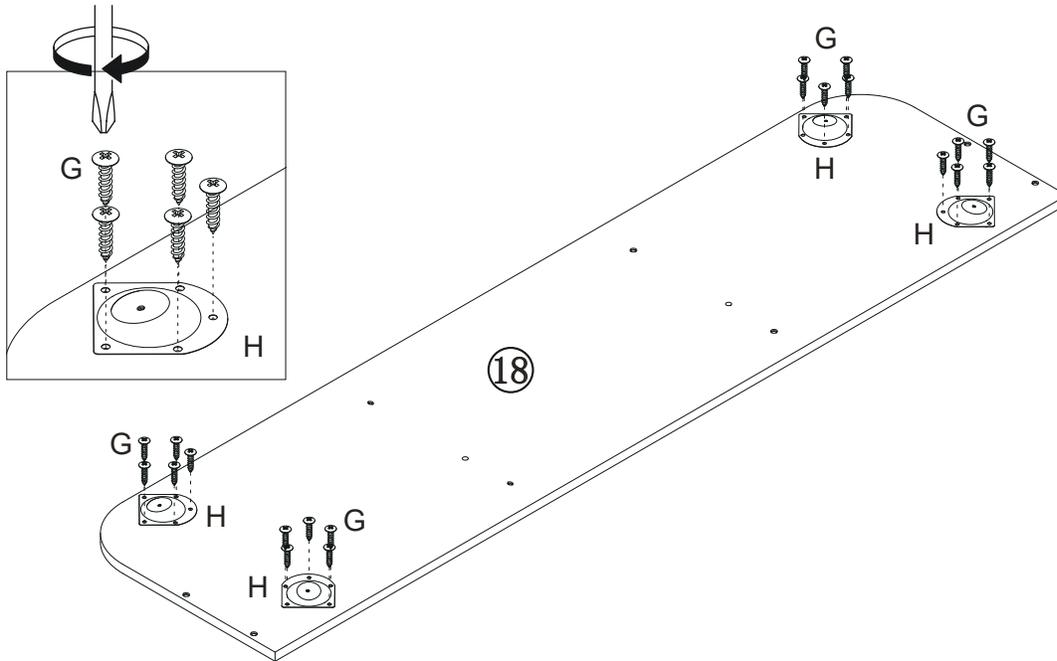


Step 8

Attach part 18 to parts 1,2,3 and 4 using screws (N) as shown.

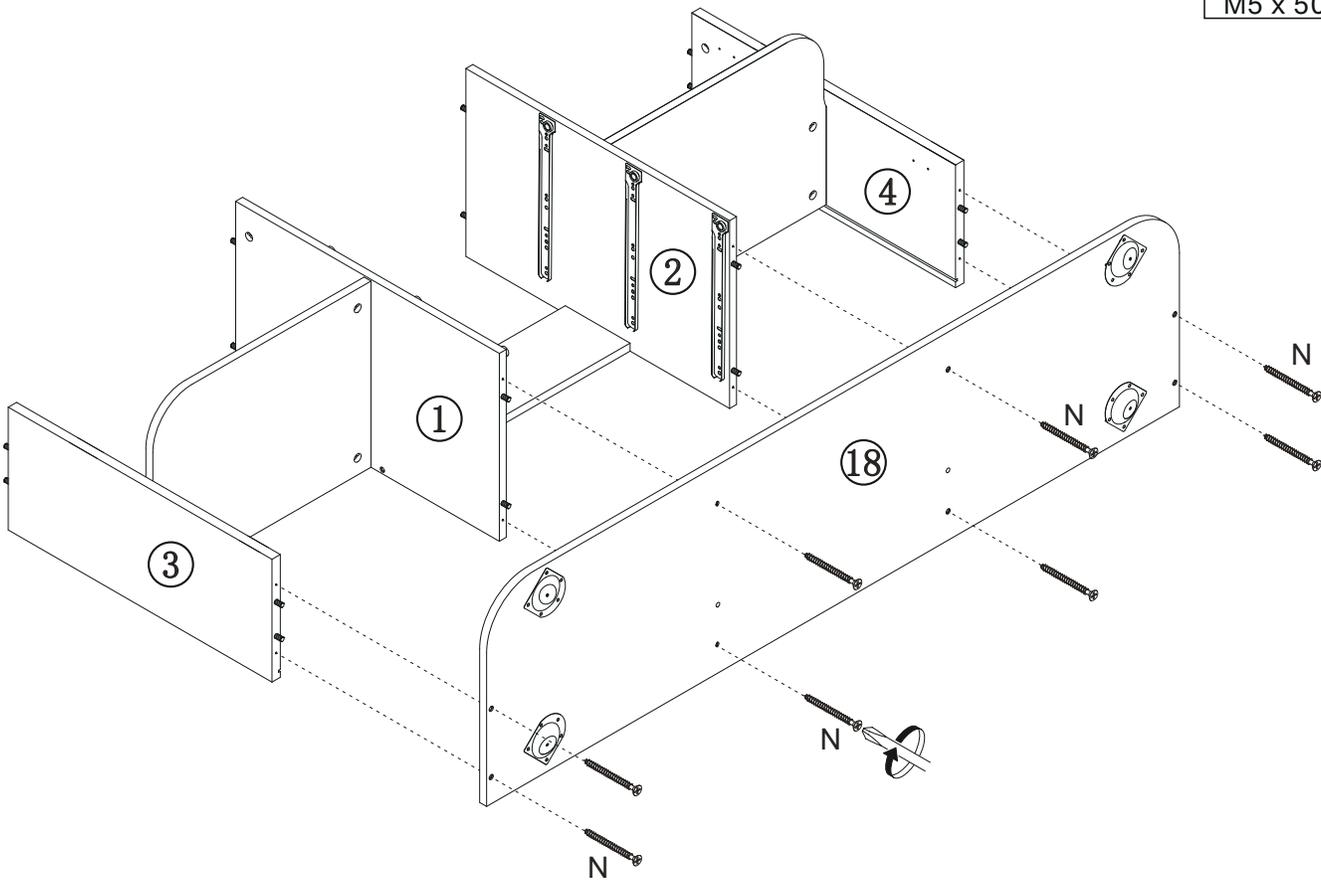


Step 9

Attach the legs (K) to the four corners of part 18 by screwing it into (H). Screw center legs (J) directly to part 18. Add adjustable foot nails (I) to Legs (J), screw it on until secure as shown.

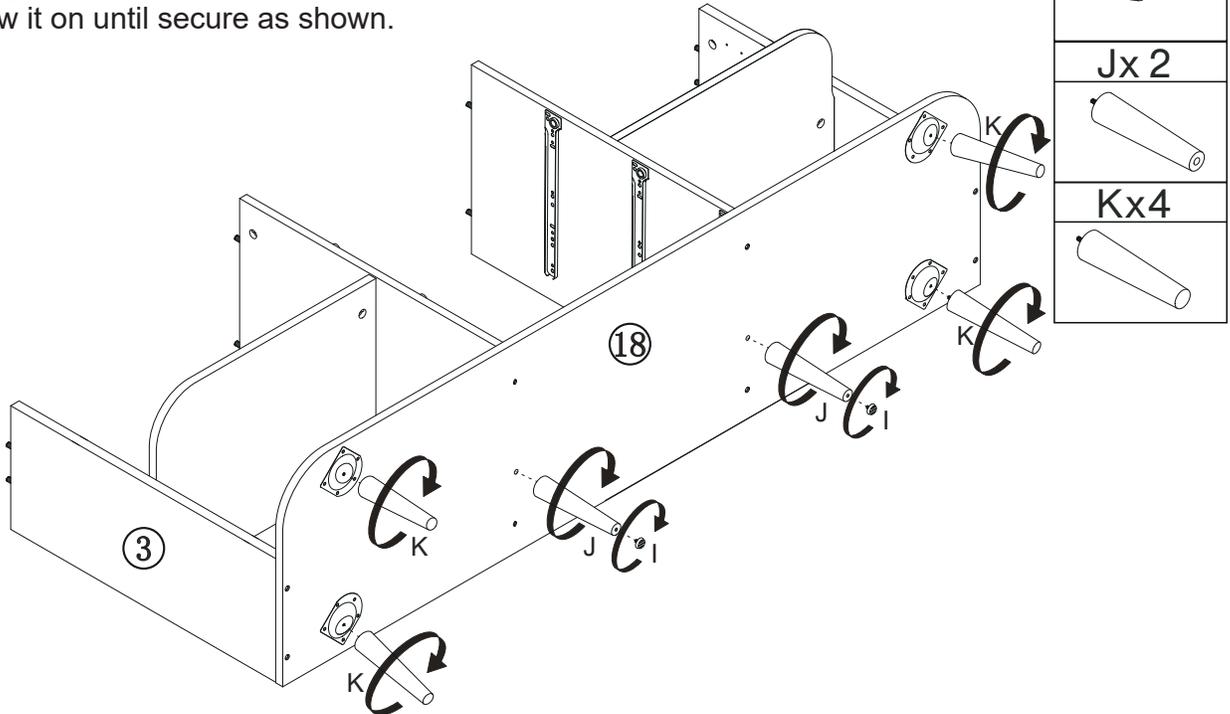


Step 10

Carefully flip the cabinet right side up. Connect panels 8 and 19 to connecting strip 9. Then slide the part 8,9 and 19 into the grooves of panels 3 and 4 as shown.

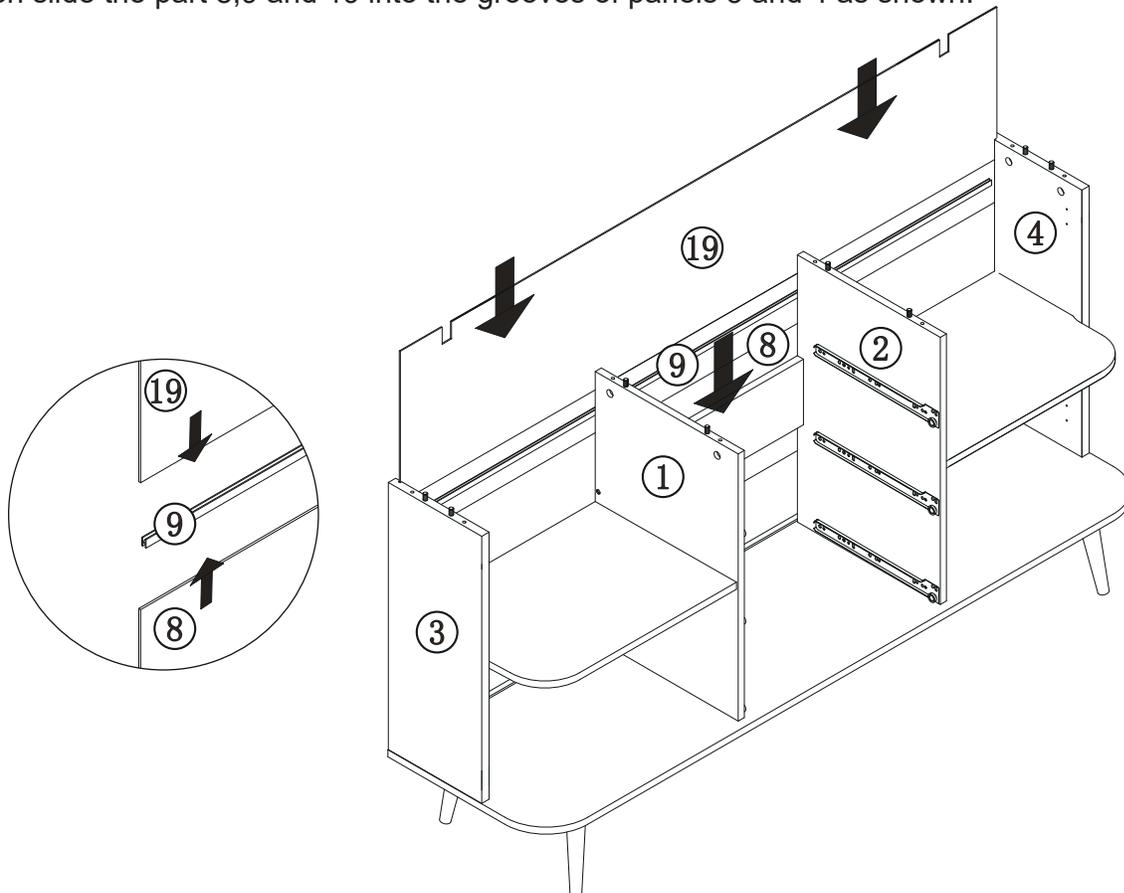

Step 11



Insert quickfit screws (A) into part 10, Fix wall brackets (O) on part 10 as shown.

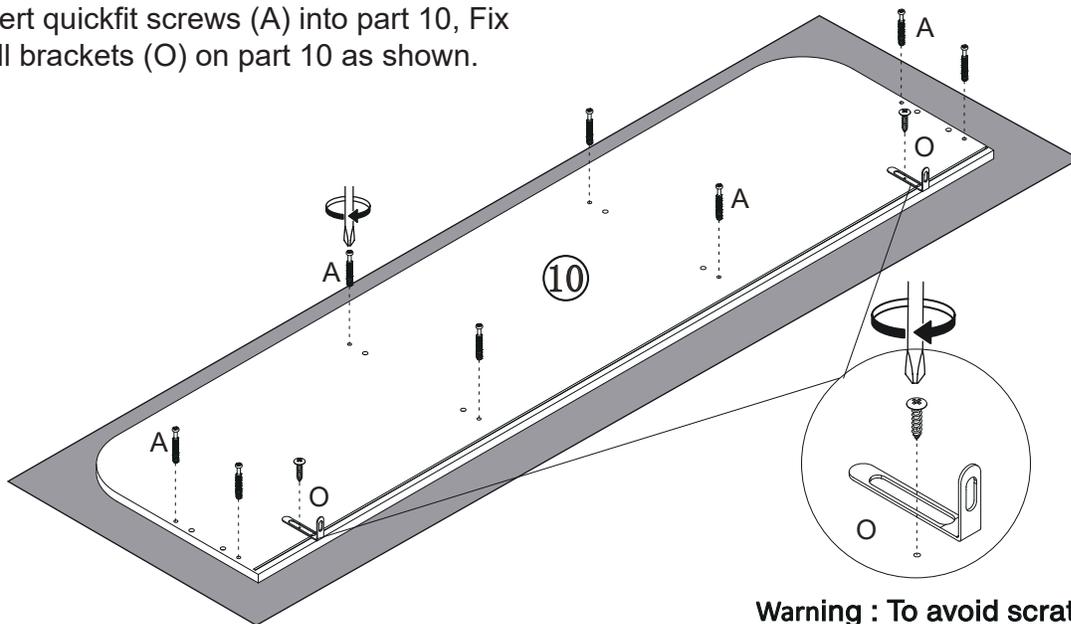

Warning : To avoid scratch , palce the panels on clean and soft surface.

Step 12

Insert cam locks (B) into parts 1,2,3 and 4. Fit part 10 to parts 1,2,3 and 4. Turn cam locks clockwise to tighten as shown.

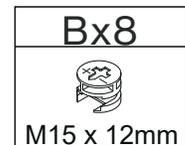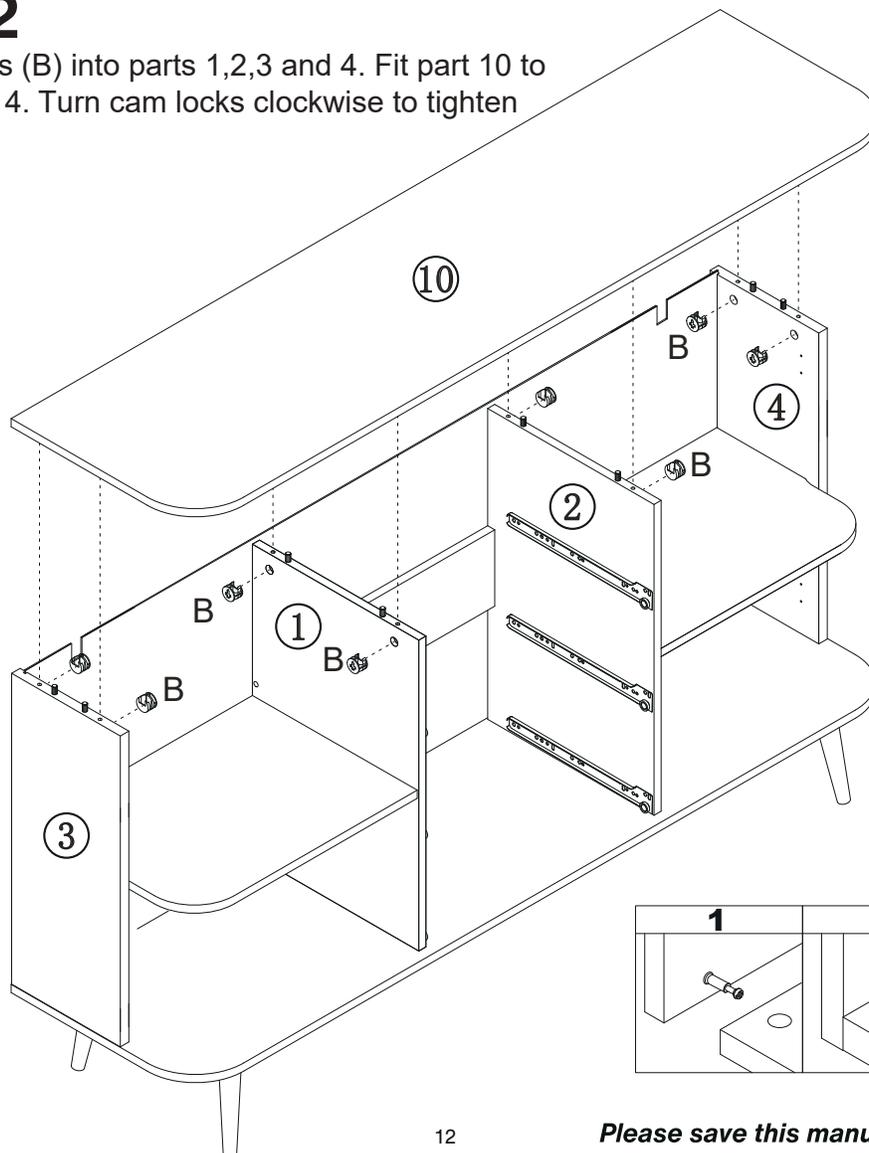



Step 13

Fix handles (F) to doors 11 and 12 using screws (F) as shown.
 Fix hinges (L) to doors 11 and 12 using screws (D) as shown.

Dx8

M3.5 x 14mm
F x2

L x4

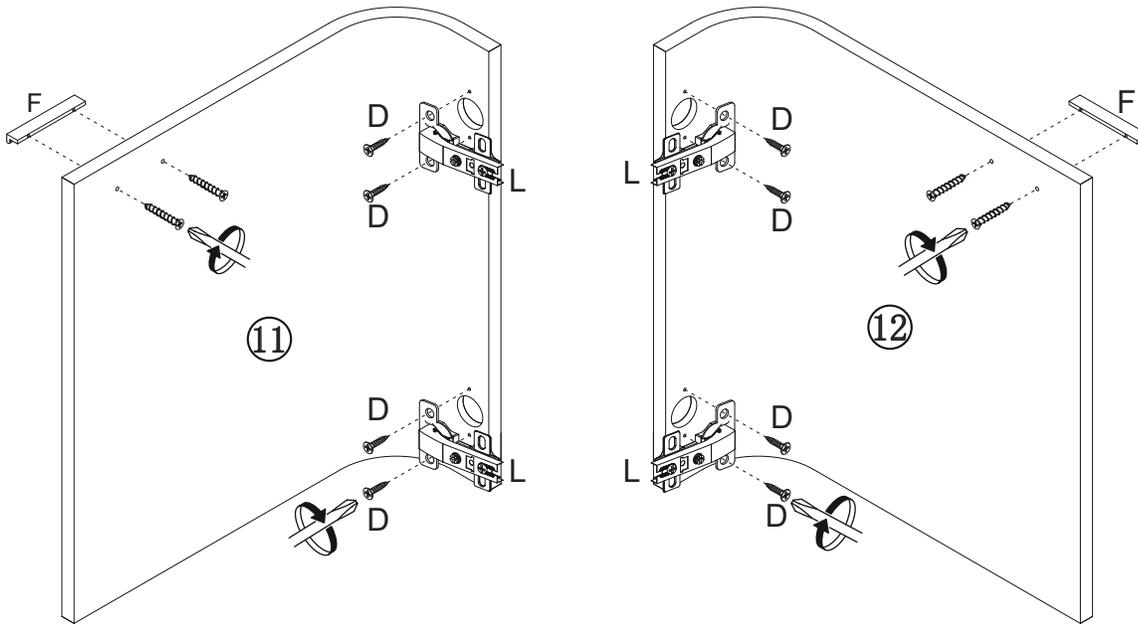
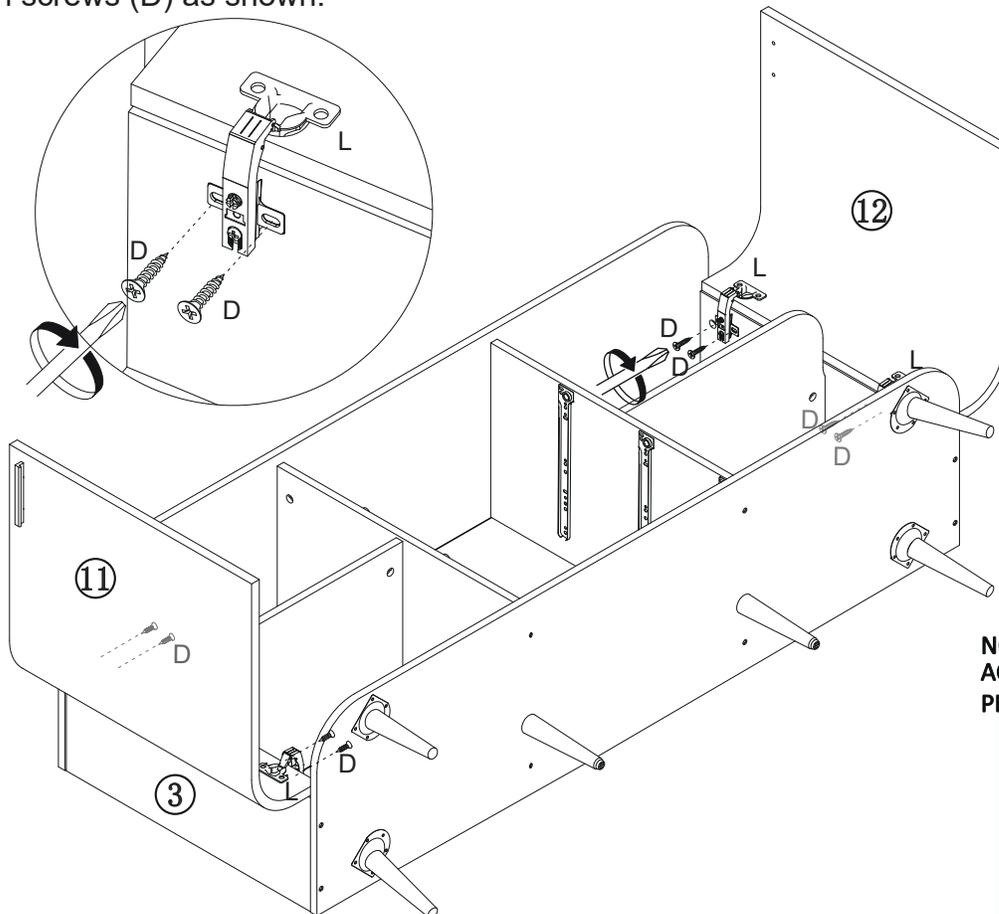


Step 14


Put the cabinet backwards down carefully.
 Fix doors 11 and 12 to the assembled unit using hinges (L) with screws (D) as shown.

Dx8

M3.5 x 14mm




NOTE: THIS STEP TO BE ACCOMPLISHED BY TWO PERSONS

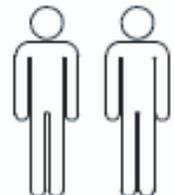

Step 15

Attach parts 13 and 14 to parts 15 using screws (E). Slide the parts 16 into the grooves of panels 13, 14 and 15 as shown.

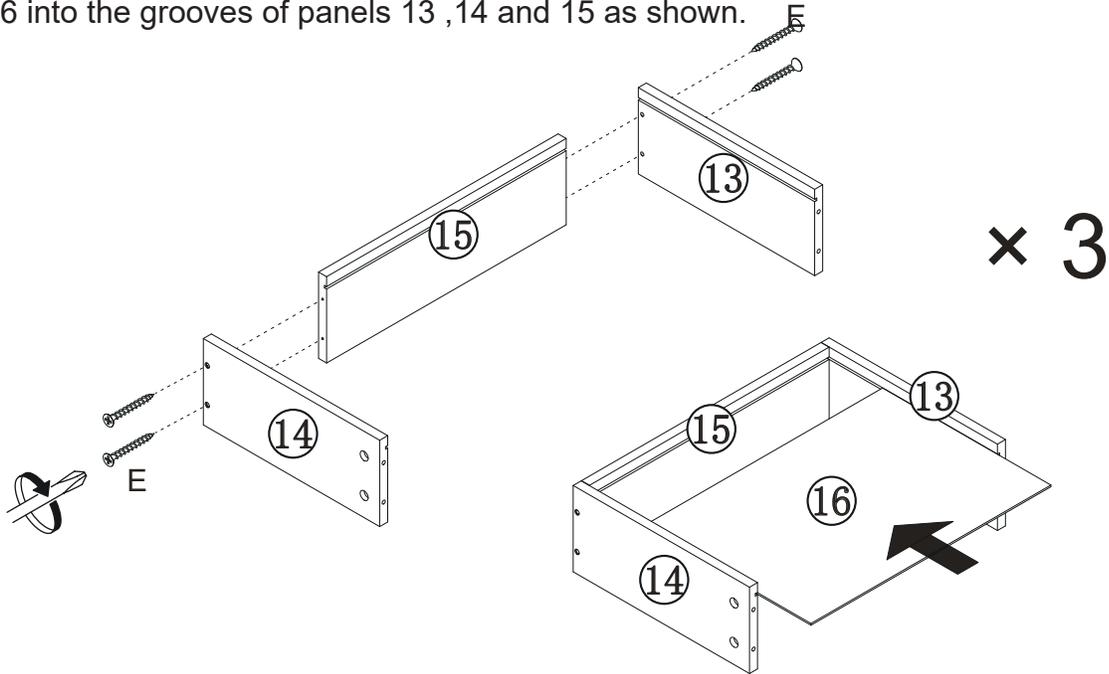


Ex12

M5 x 40mm

Step 16

Insert quickfit screws (A) into part 17, Fix handles (F) to part 17 using screws (F). Insert cam locks (B) into parts 13 and 14. Fit part 17 to parts 13, 16 and 14. Turn cam locks clockwise to tighten as shown.

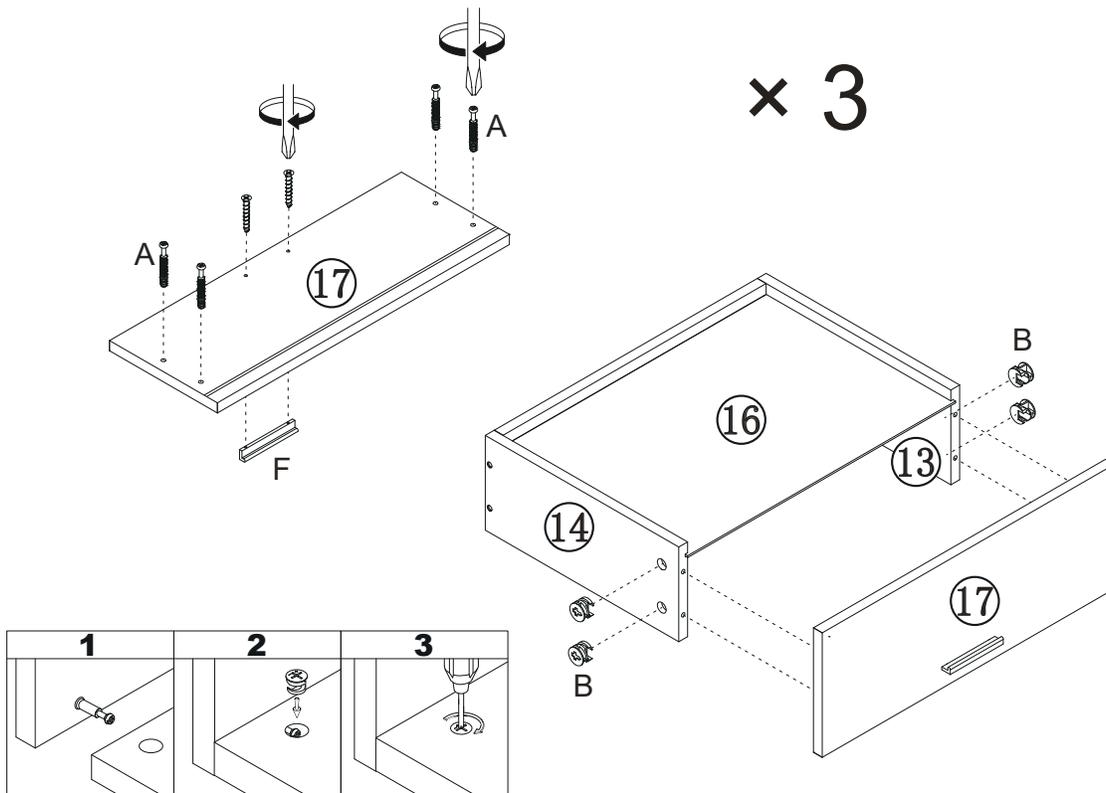


Ax12

M7 x 39mm
Bx12

M15 x 12mm
Fx3


Step 17

Attach sliding rail (DL) and (DR) to parts 13 and 14 using screws (D) as shown.

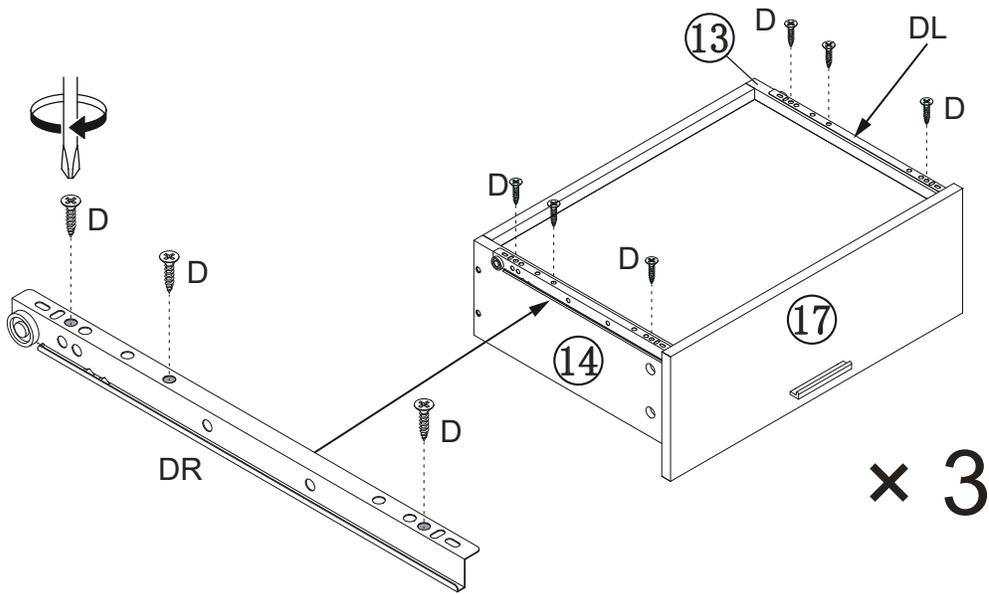


Dx18
 M3.5 x 14mm
DLx3

DRx3


Step 18

Carefully flip the cabinet right side up.
Slide in the drawers.

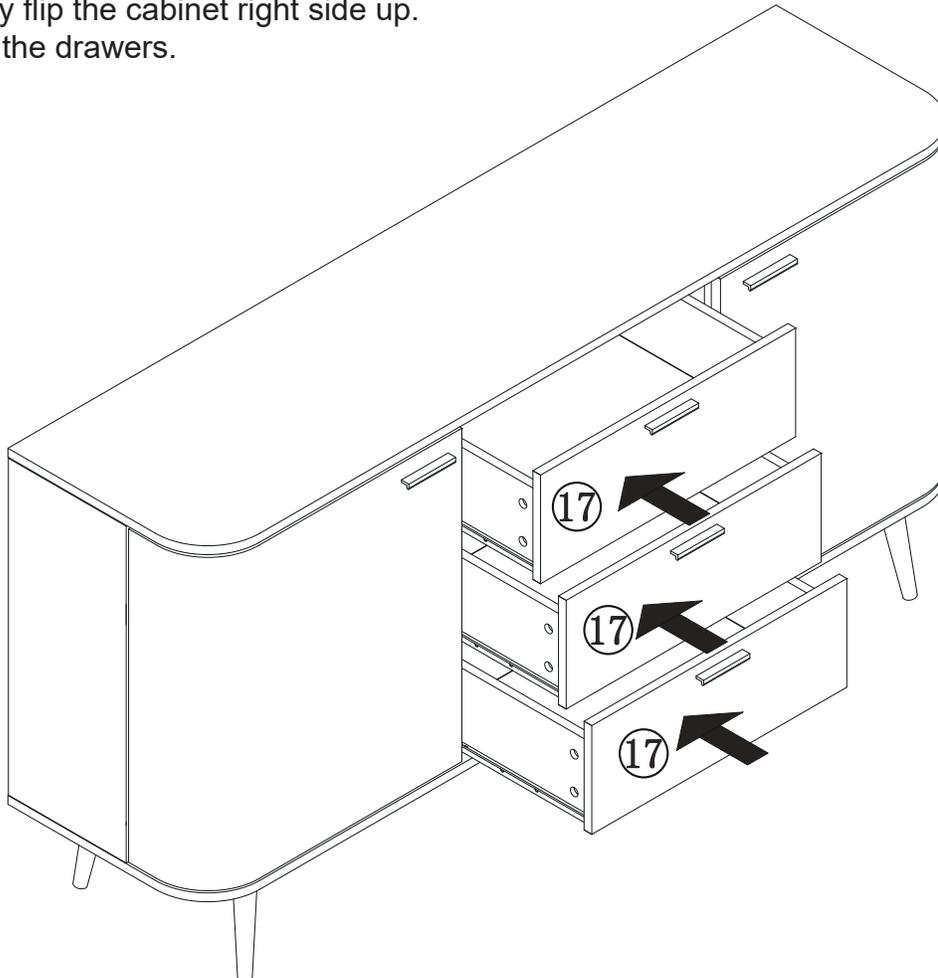



Step 19

Secure backing panels 8 and 19 by fixing wedges (M) using screws (M) as shown.

ATTENTION PLEASE


Please ensure the structure is straight and level and all panels are at right angles before installing hardware (M).

MUST install hardware (M) to strengthen product stability.

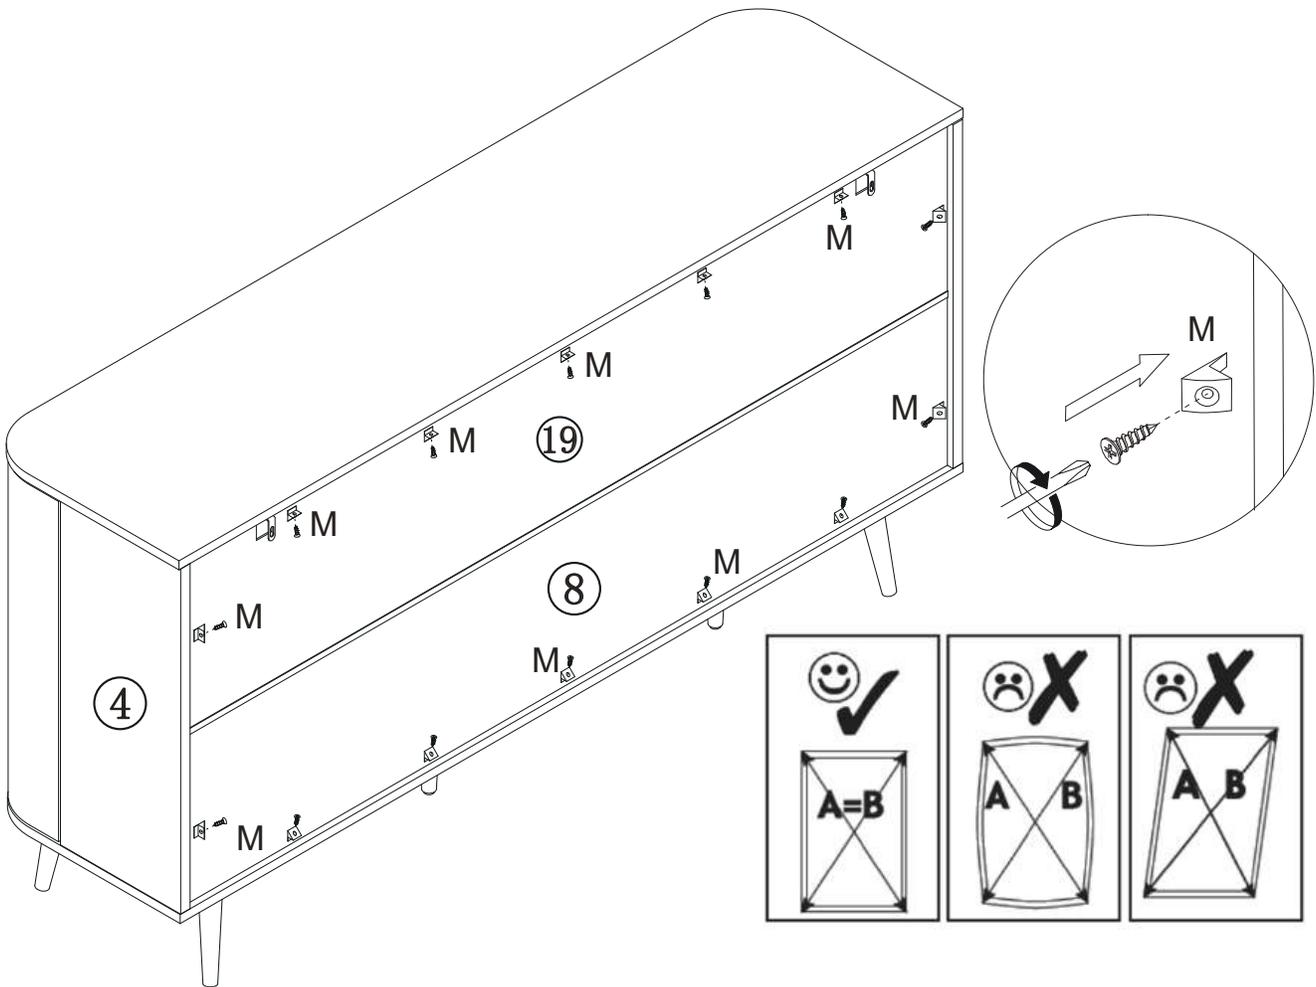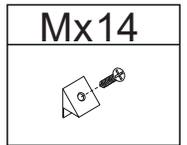


Step 20


Adjust the door up and down by loosening and tightening the screws in the vertical position.

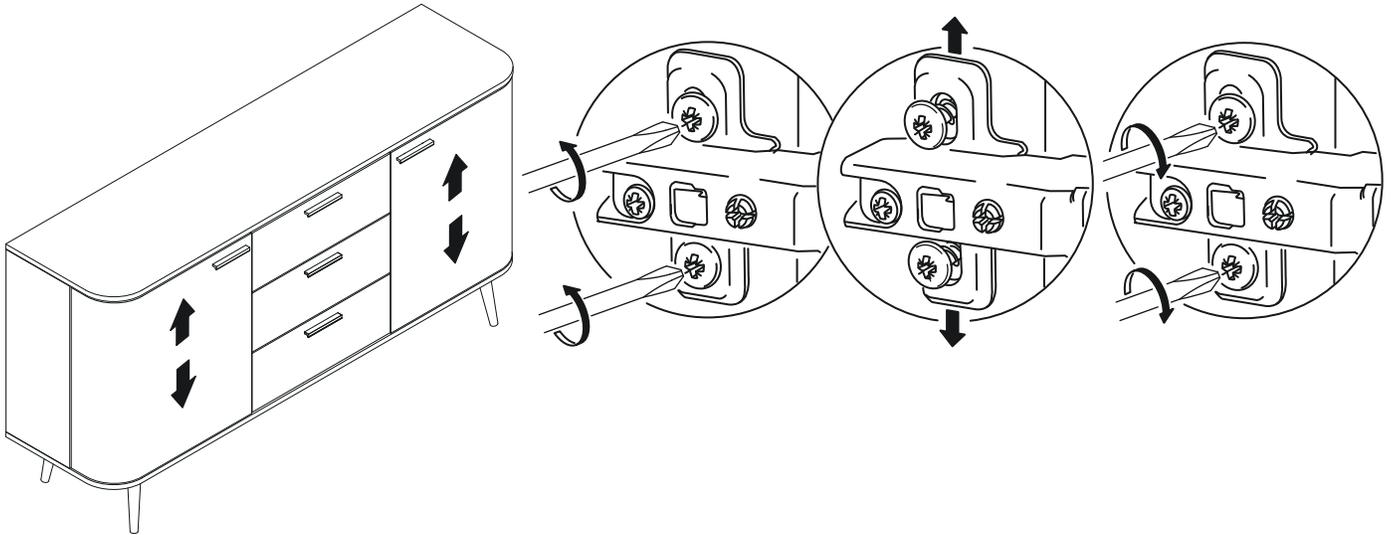

Adjust the door front and back with the left screw in the horizontal position.


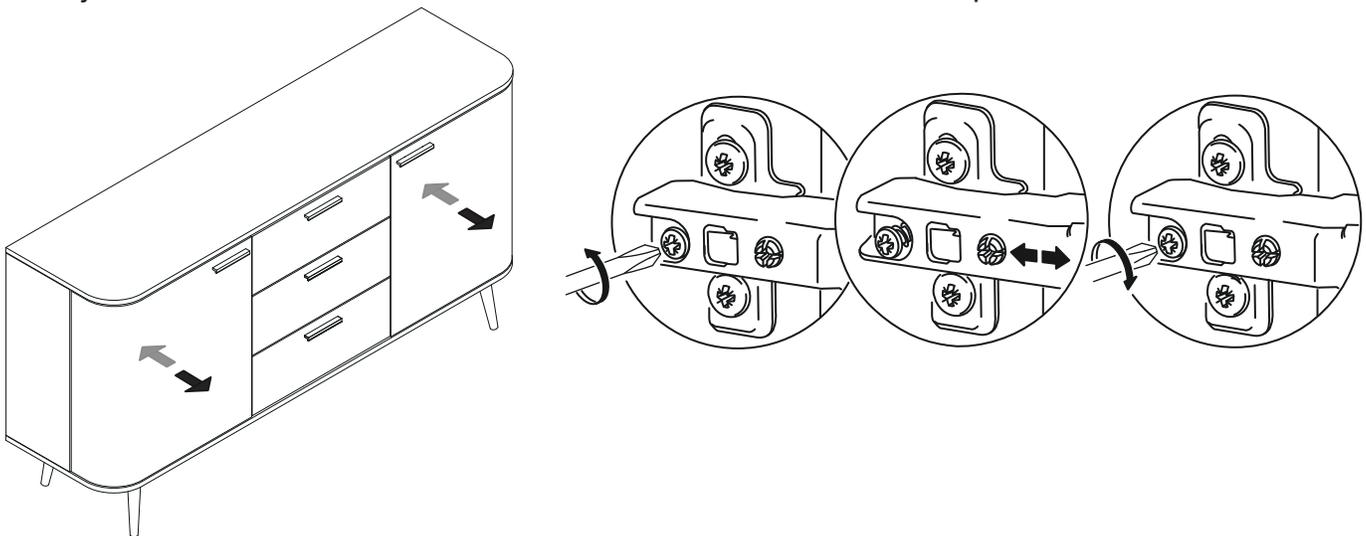


Adjust the door left and right with the right screw in the horizontal position.

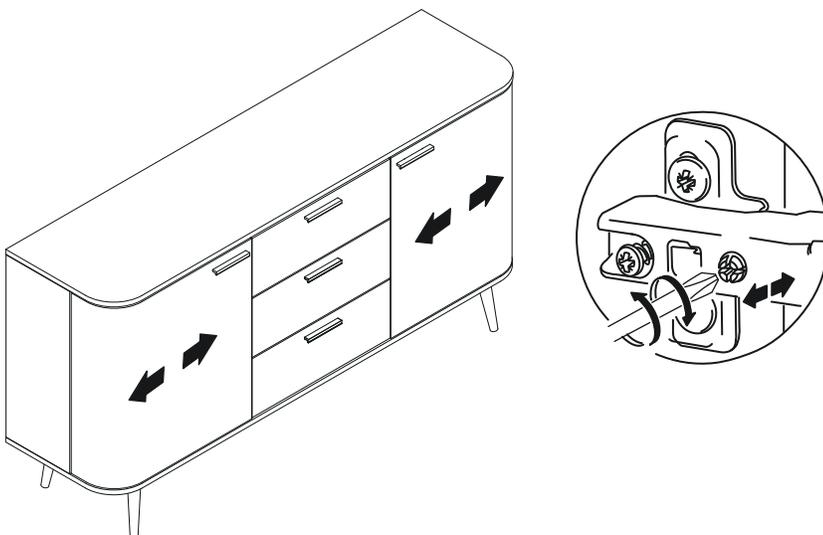


Step 21

For additional stability, secure the cabinet to the wall using the restraint kit included.

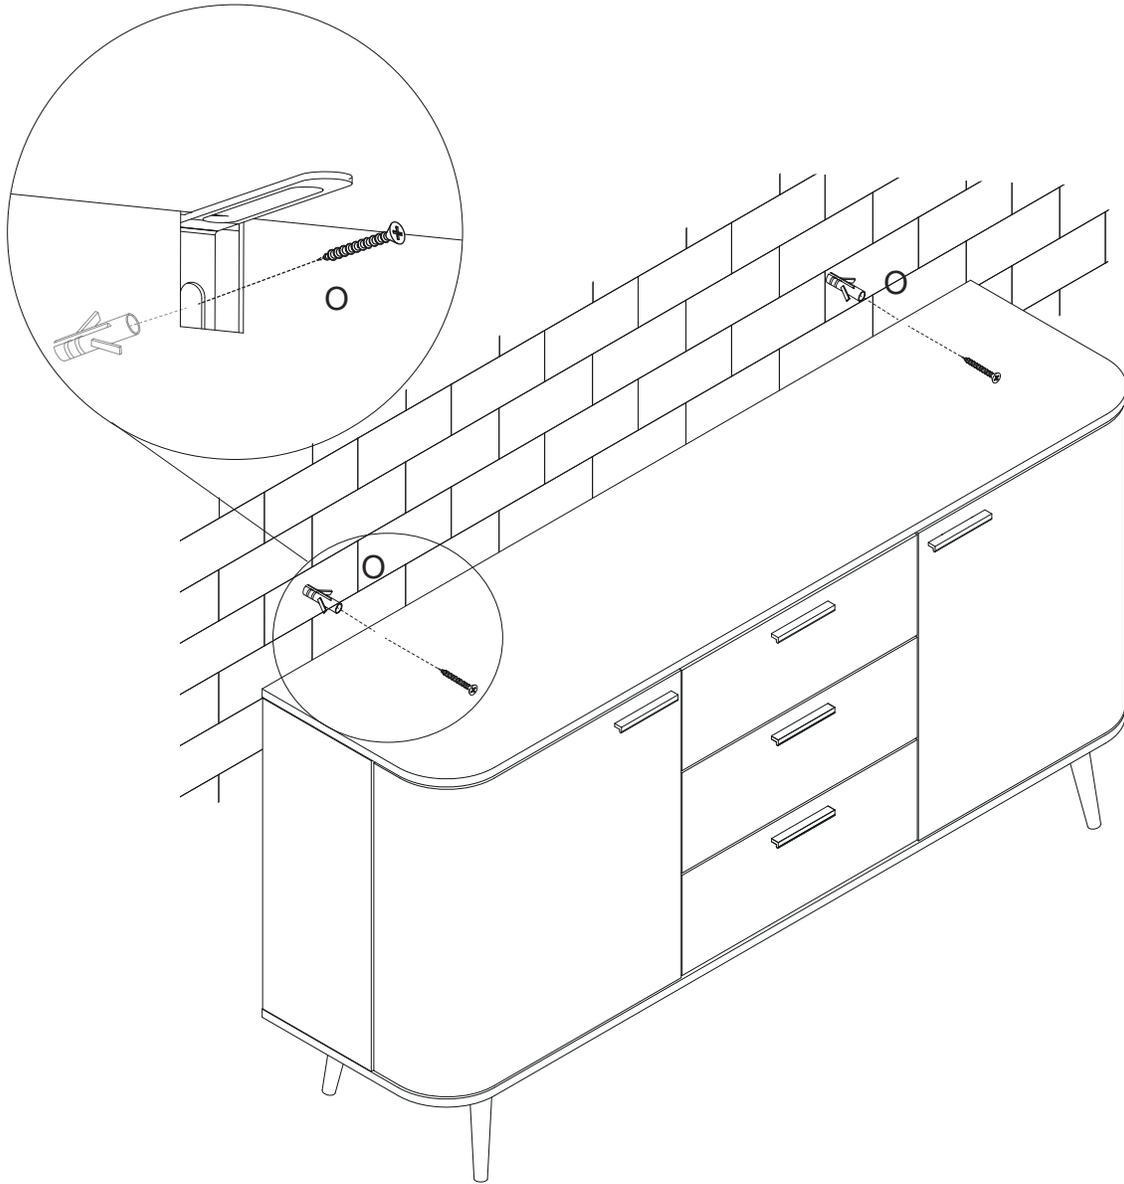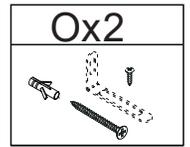

VOILA!
Now enjoy.

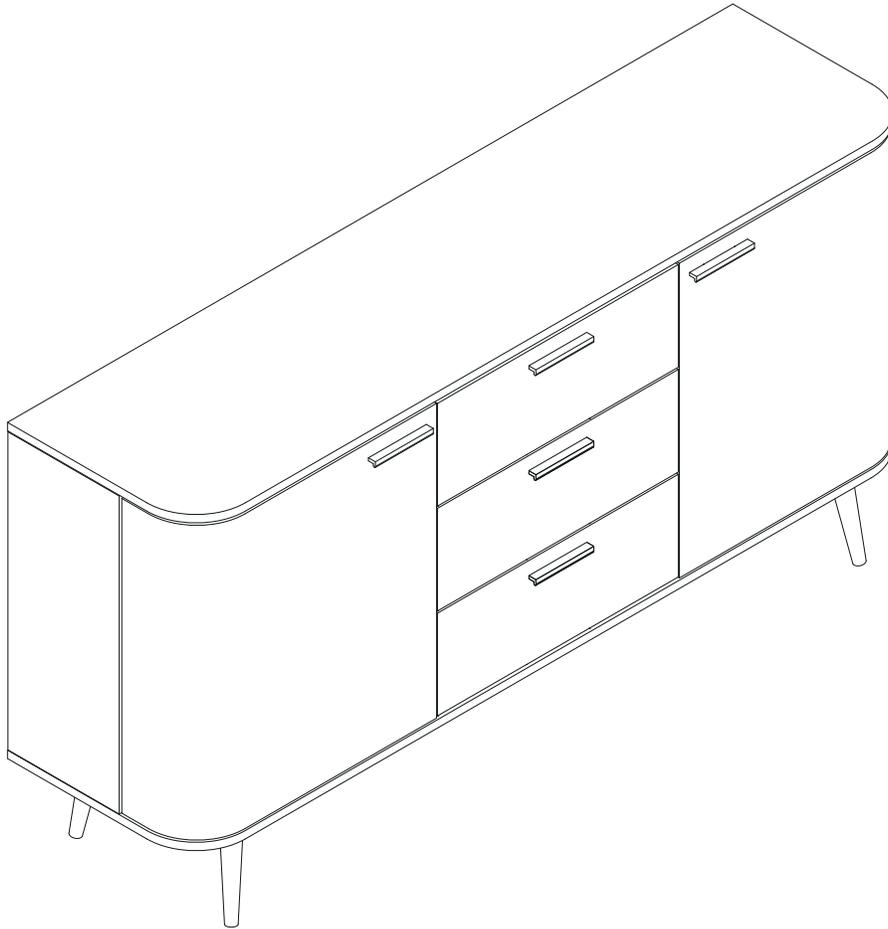

Warning

DO NOT climb, sit, or stand on the Cabinet as this may damage the product and cause serious bodily injury.

Something not right?

We are always here to help.

We make mistakes like every human does.

Though we always strive to provide the best possible products at competitive prices and the best service in the industry, it's not possible to completely eliminate mistakes. If you experience any dissatisfaction, feel free to contact us immediately. Our in-house customer care team will respond ASAP.



customerservice@luxenhome.com
Get response within 24 hrs



909.548.6688
Mon-Fri 9am-5pm PST/PDT



www.luxenhome.com/help
Submit a ticket on our website

Things to do to expedite the process

- Have your order# ready
- Take photos/videos to help us better identify the issues
- DO NOT throw away the packaging

Happy with our product?

Leave us a review

It really help us as a small business


- Find the product you purchased on our website (tip: search by SKU) and leave us a review.
- Alternatively, you can always return to the marketplace where you purchased it and leave a review there.

Share with others

Our customers look for REAL stuff



- Follow us on IG @luxen.home
- Share your #liveluxen moments

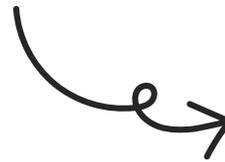

**Please save this manual
for future reference.**