

WARNING!!

Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping.

NEVER allow children to climb or hang on furniture, including drawers or cabinet doors.

In addition to installing the restrains , to help prevent tip-over

1. NEVER put a TV or other heavy objects on top of this product".
2. Do not stand on the product

In addition to installing the restrains , to help prevent tip-over











1. NEVER put a TV or other heavy objects on top of this product".
2. Do not stand on the product



Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance


- ⊘  ● Not for commercial use. For residential use only.
- ✓  ● Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- ⊘  ● Do not put hot items directly on furniture surface.
- ⊘  ● Do not clean furniture with harsh cleansers or polish.
- ⊘  ● Do not place furniture under direct sunlight.
- ⊘  ● Do not place furniture near heating or cooling vents.
- ⊘  ● Do not write on furniture without a padded barrier to protect the surface.
- ⊘  ● Do not place furniture outside . For indoor use only.
- ⊘  ● Stains may be removed with mild soap solution and damp cloth.
- ⊘  ● Children should not climb or jump on the furniture.













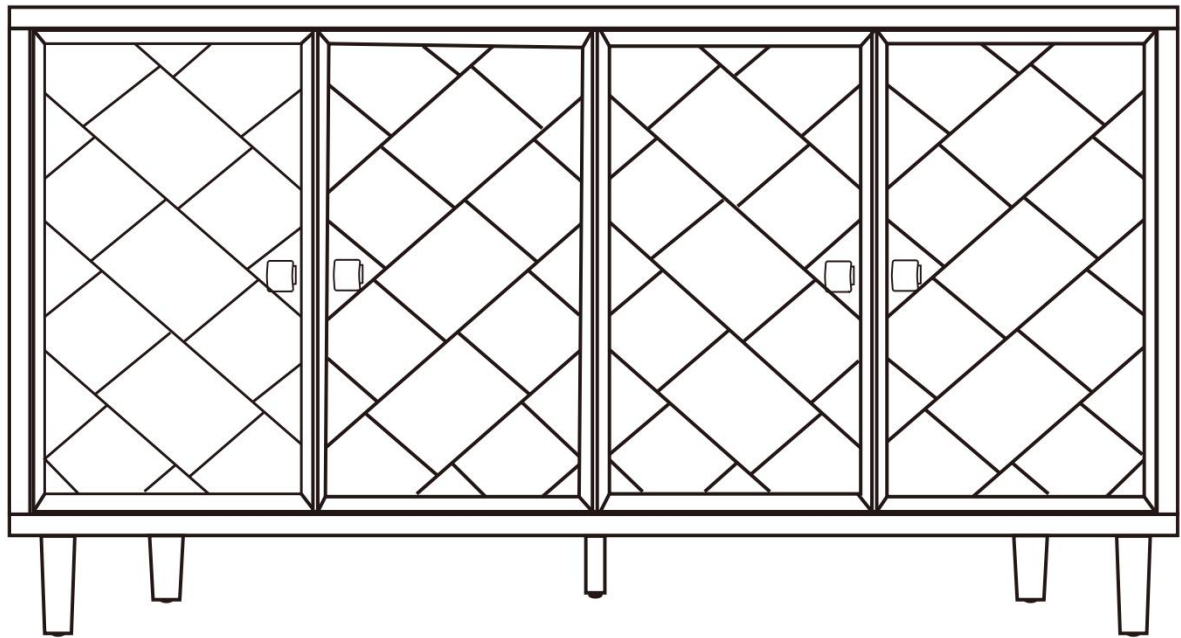


- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in box for hardware packs.










SIDEBOARD






Parts List

Label	Picture	Description	QTY
①		TOP PANEL 152x40x1.5cm	1
②		BOTTOM PANEL 152x40x1.5cm	1
③		LEFT SIDE PANEL 40x64x1.8cm	1
④		RIGHT SIDE PANEL 40x64x1.8cm	1
⑤		MIDDLE SIDE PANEL 37.4x64x1.5cm	1
⑥		LAYER PANEL 73.5x34.5x1.2cm	2
⑦		BACK MIDDLE PANEL 64.6x37.2x0.3cm	2
⑧		LEFT DOOR 36.8x63.6x2cm	2
⑨		MIDDLE FEET 14.5x4cm	1
⑩		BACK PANEL STRIP 63.8x1.2cm	2
⑪		FEET 4.8X4.8X15.5cm	4
⑫		RIGHT DOOR 36.8x63.6x2cm	2
⑬		BACK SIDE PANEL 64.6x37.2x0.3cm	2


Hardware

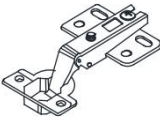

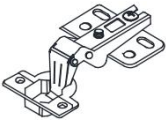





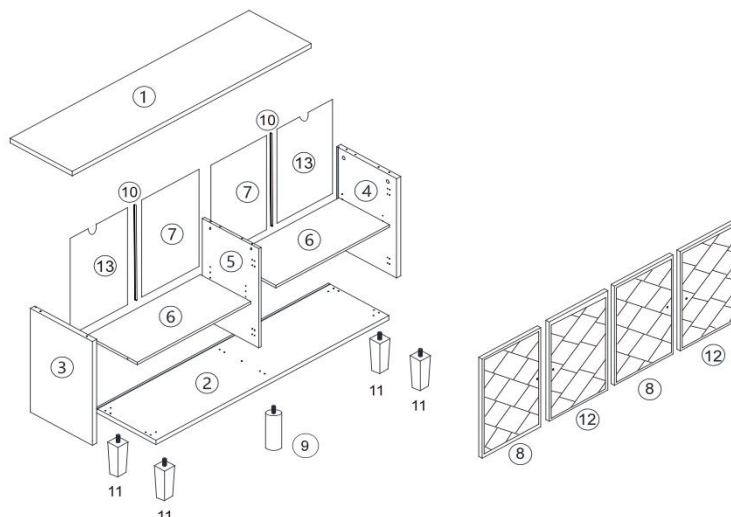









Label	Picture	Description	QTY
A	 Ø 6x35mm	Φ6x35mm CAM LOCK BOLT	6
B	 Ø 15x10mm	Φ15x10mm CAM LOCK NUT	6
C	 Ø6x30mm	Φ6x30mm WOOD DOWEL	12
D	 Ø 5x45mm	Φ5x45mm BOLT	6
E		SCREWDRIVER	1
F		Door Stopper	2
G	 Φ3x14mm	Φ3x14mm BOLT	12
H		SHELF NAIL	8
K		HINGE	4

S		HINGE	4
M	 Ø4x14mm	Φ4x14mm BOLT	48
N		HANDLE	4
J	 Ø4x22mm	Φ4x22mm BOLT	4
Q		SHEET IRON	2
R		EXPANSION SCREWS	2
P		BACK PANEL BRACKET	8
T		PLASTIC WASHER	4
Y		COVER	4

Assembly Preparation

Before
Beginnin
g
Assembly
:



 Ø 6x35mm AX6	 Ø 15x10mm BX6	 Ø6x30mm CX12	 Ø 5x45mm DX6	 EX1
 FX2	 Ø3x14mm GX12	 HX8	 KX4	 SX4
 Ø 4x14mm MX48	 NX4	 Ø4x22mm JX4	 Q1 Q2 QX2	 R1 R2 RX2
 PX8	 TX4	 YX4		



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

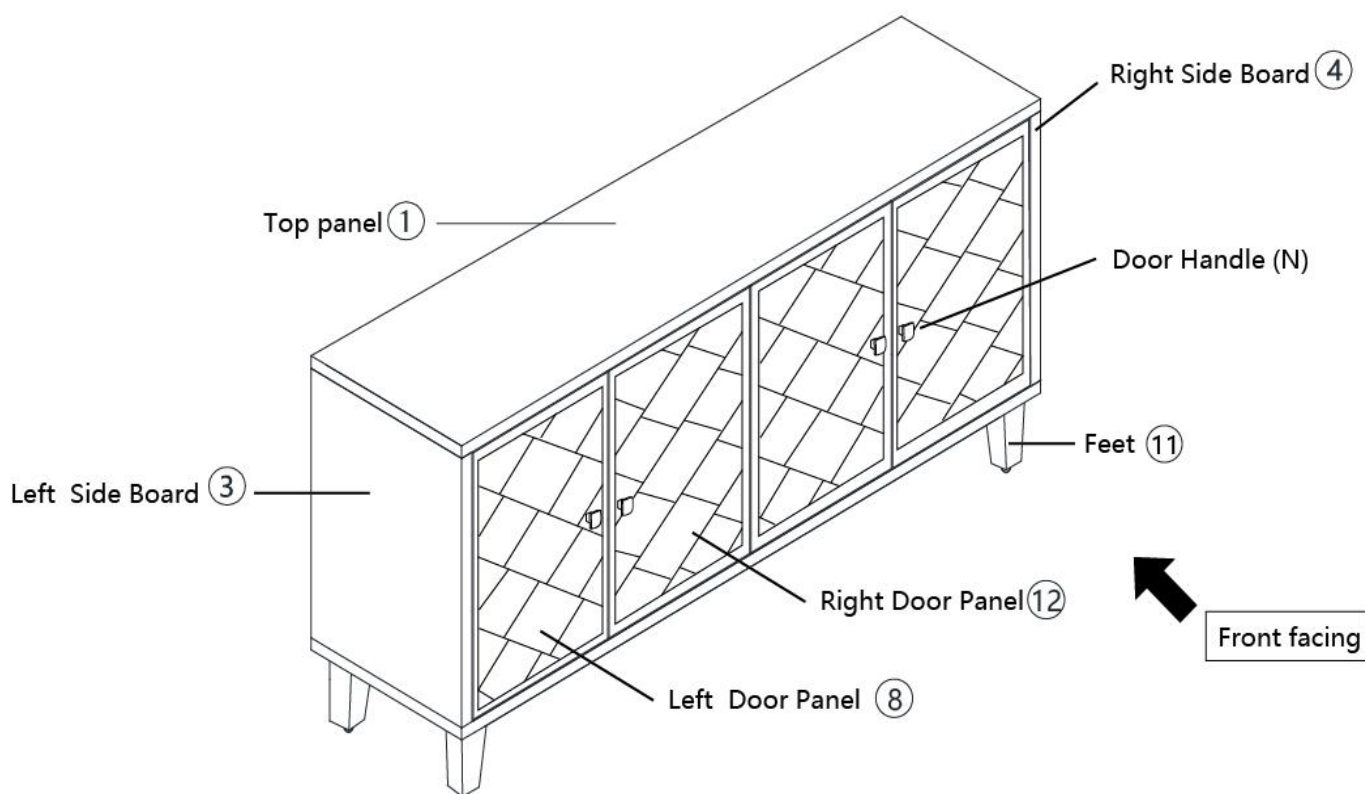

This Sideboard has multiple parts and may require up to some 60 minutes to assemble. To give you an overview of the Sideboard parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


Step 1

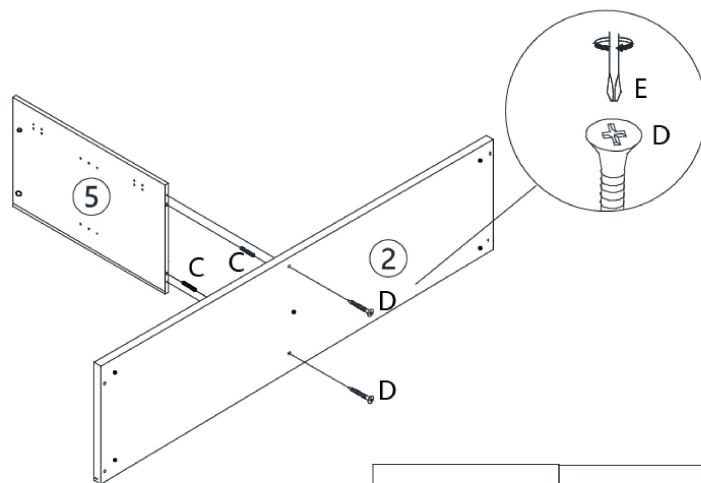

Ø6x30mm		Ø 5x45mm
CX2	EX1	DX 2

1. Take the Middle panel ⑤ and the Bottom panel ②, align the bottom panel with the bottom edge of the Middle panel, insert the Wood dowel (C) into the corresponding hole in the connection area between the middle panel ⑤ and the bottom panel ②, and use a screwdriver (E) to tighten the screws (D) to make sure that the connection is secure.



Step 2

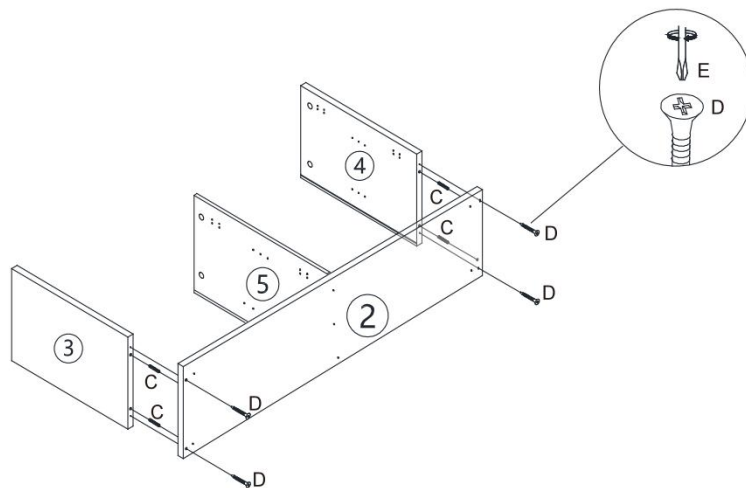

Ø6x30mm	Ø 5x 45 mm
CX4	DX4

1. Take the left side panel ③ and the right side panel ④, align the bottom panel with the bottom edge of the side panels, insert the Wood dowel (C) into the corresponding hole in the connection area between the side panels ③ ④ and the bottom panel ②, and use a screwdriver (E) to tighten the screws (D) to make sure that the connection is secure.

Step 3

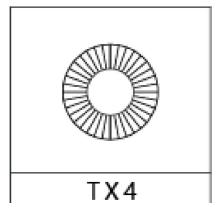
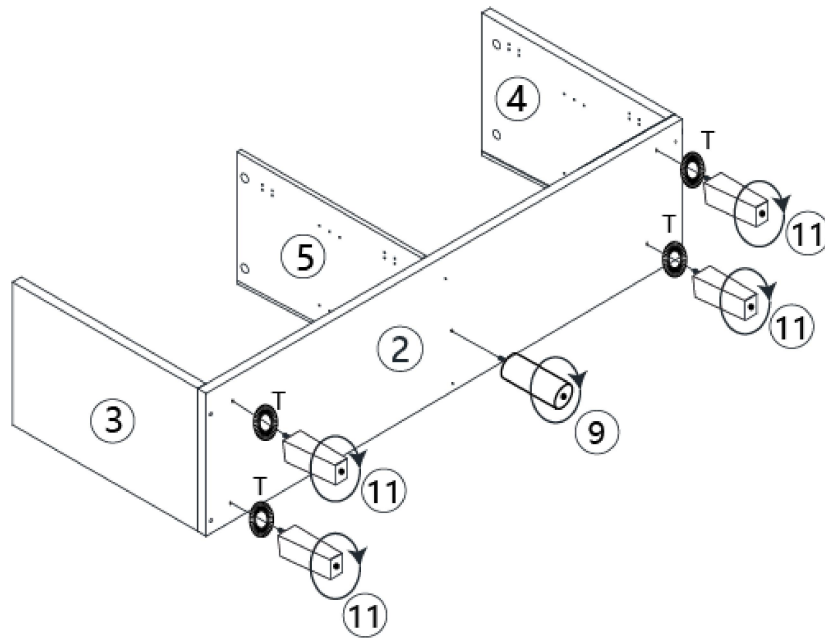


TX4

1. Fit plastic washer (T) into wood foot nut, then screw four feet(11) onto bottom panle(2).

2. Screw middle feet(9) onto bottom panle(2).

Step 4

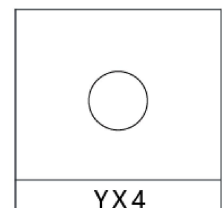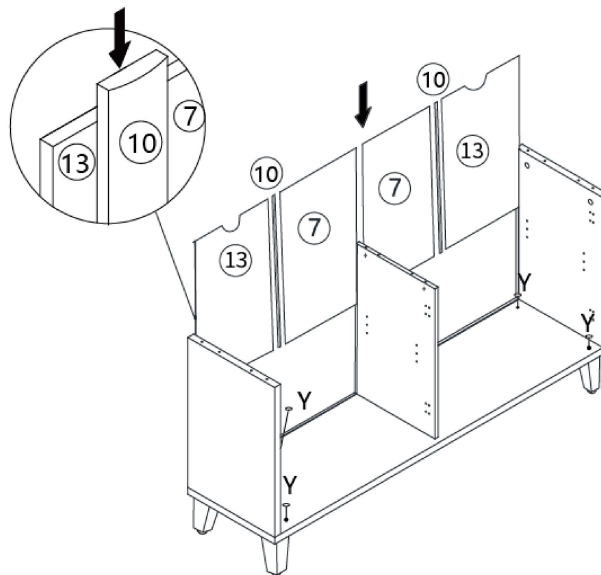


YX4

Insert the back panels ⑦ ⑬ and connect them with the back panel strip ⑩ in the center.

The holes for the screws, affixed with Cover (Y).


Step5

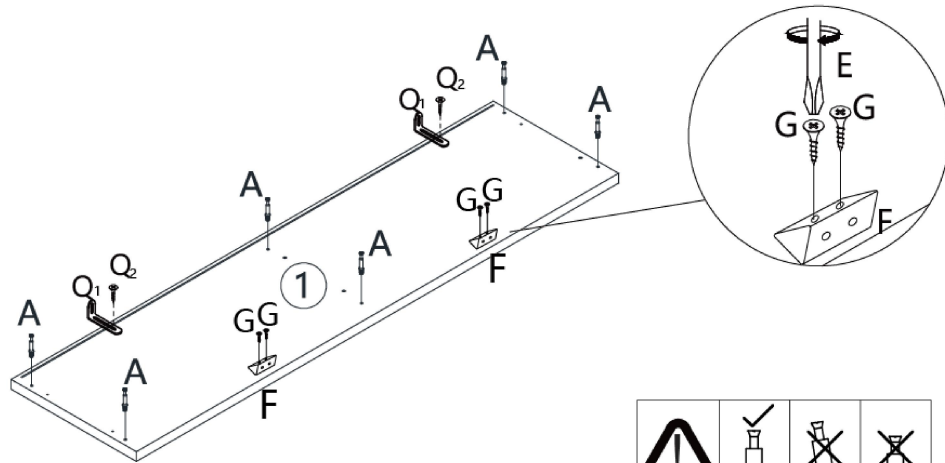

Ø6x35mm	Ø3x14mm	FX2	Q1 Q2
AX6	G X4		QX2

Mount cam lock bolt (A), Door Stopper (F), and Sheet Iron (Q) on top panel. (①)


Step6

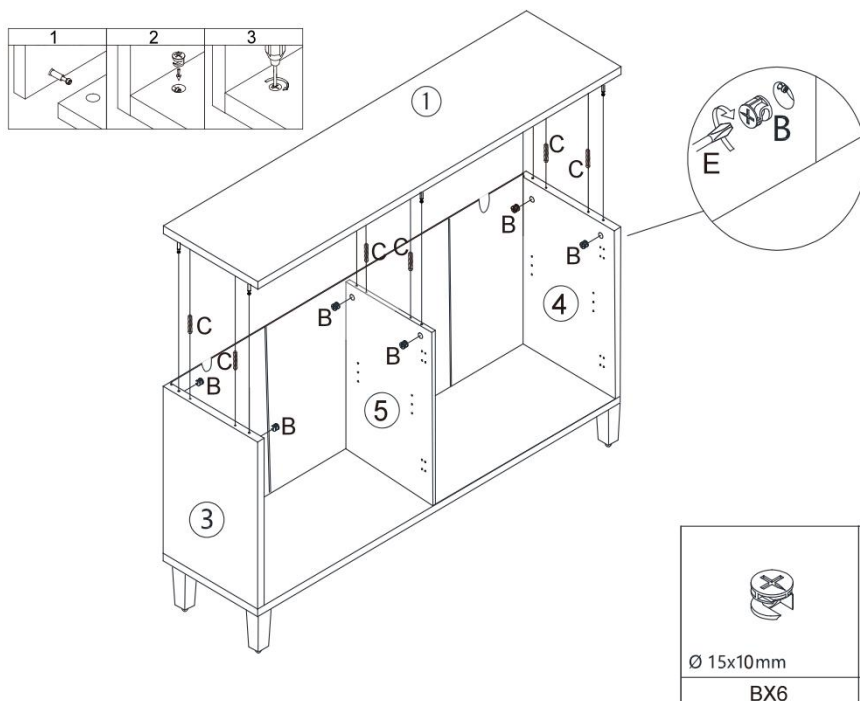

Ø 15x10mm	Φ6x30mm
BX6	CX6


Connect top panel(①) and two side panels(③④)&middle side panel(⑤) ,with Wood dowel (C),Cam lock nut(B). Next, use a screwdriver(E)to rotate the Cam lock nut(B).

Step 7

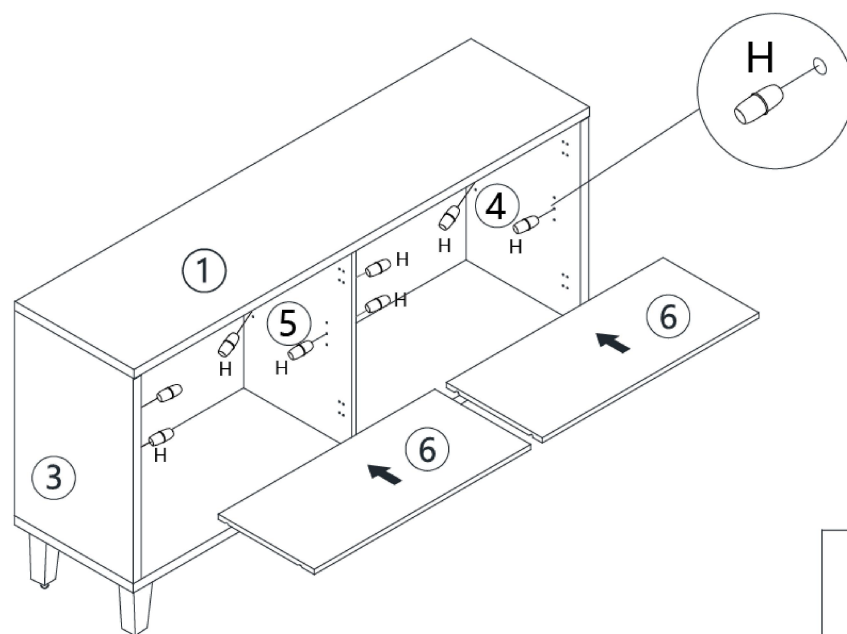

Insert shelf nails(H) on two side panels(③④)and the middle panel(⑤), then place layer panels(⑥).



Step 8

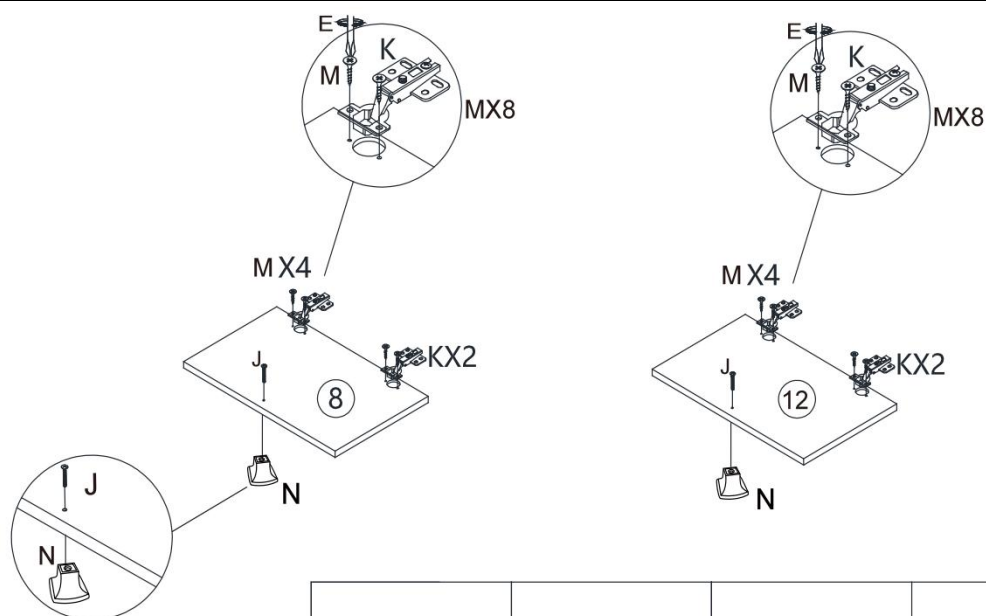


KX4	Ø 4 x14mm MX8	NX2	Ø4x22mm JX2

Installation of hinges (K) and Pull handle (N) on Doors ⑧,⑫ .

Step 9

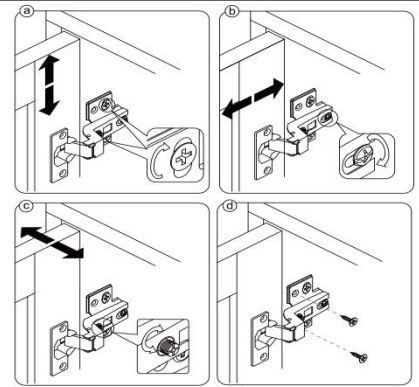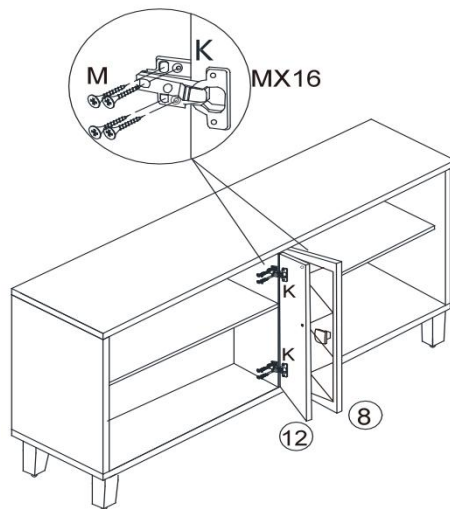


NOTE: If the doors are uneven or there is a gap in the middle, loosen or tighten the screw on the door hinge until they are sitting flush.

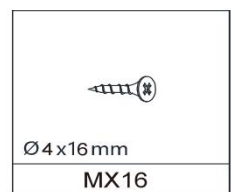

Install the door ⑫, ⑧ on the middle panel ⑤, paying attention to the left and right order in the picture.

NOTE: If the doors are uneven or there is a gap in the middle, loosen or tighten the screw on the door hinge until they are sitting flush.


Step 10

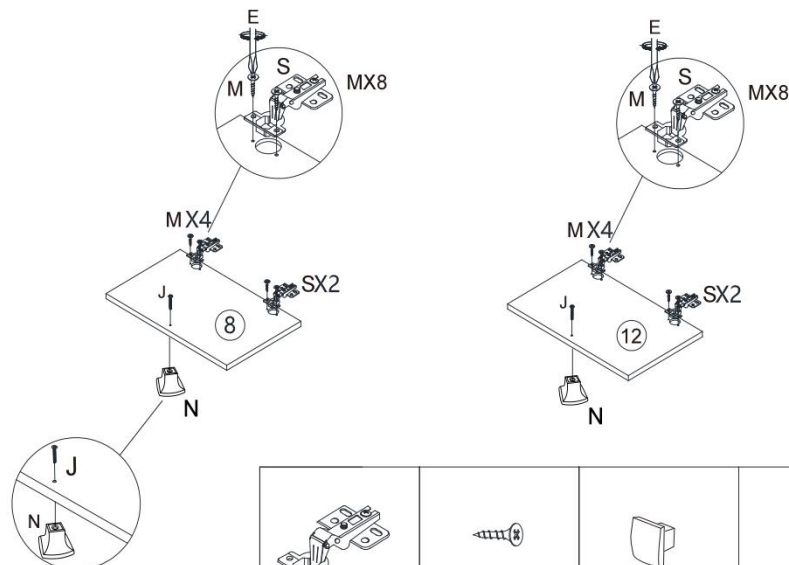

SX4	Ø 4 x14 mm MX8	NX2	Ø4x22mm JX2

Installation of hinges (S) and Pull handle(N) on Doors⑧,⑫ .


Step 11

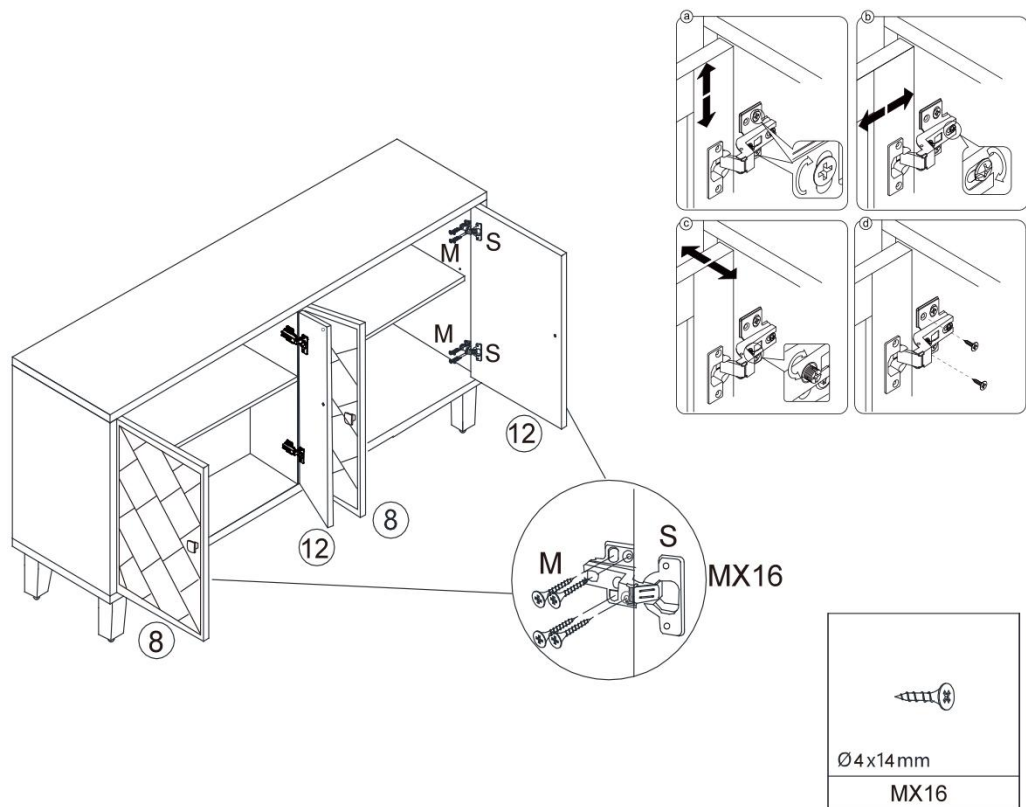

Install the left door ⑧ on the Left Side Panel, Install the right door ⑫ on the Right Side Panel.


NOTE: If the doors are uneven or there is a gap in the middle, loosen or tighten the screw on the door hinge until they are sitting flush.

Step 12

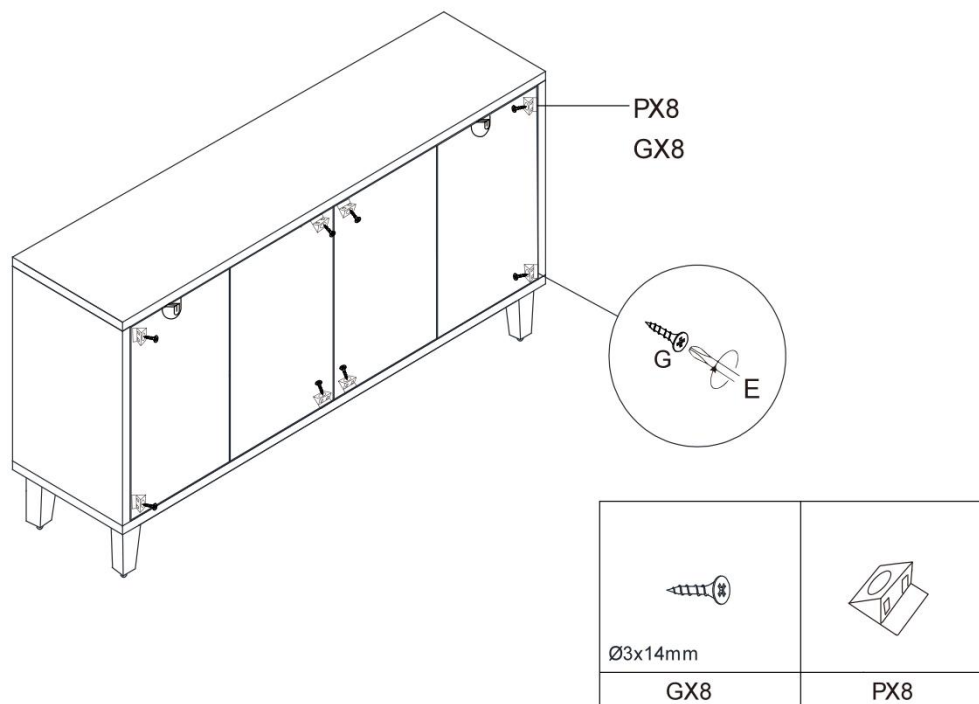


Fit back panel bracket (P) on the back of the cabinet with screws (G).

Step 13

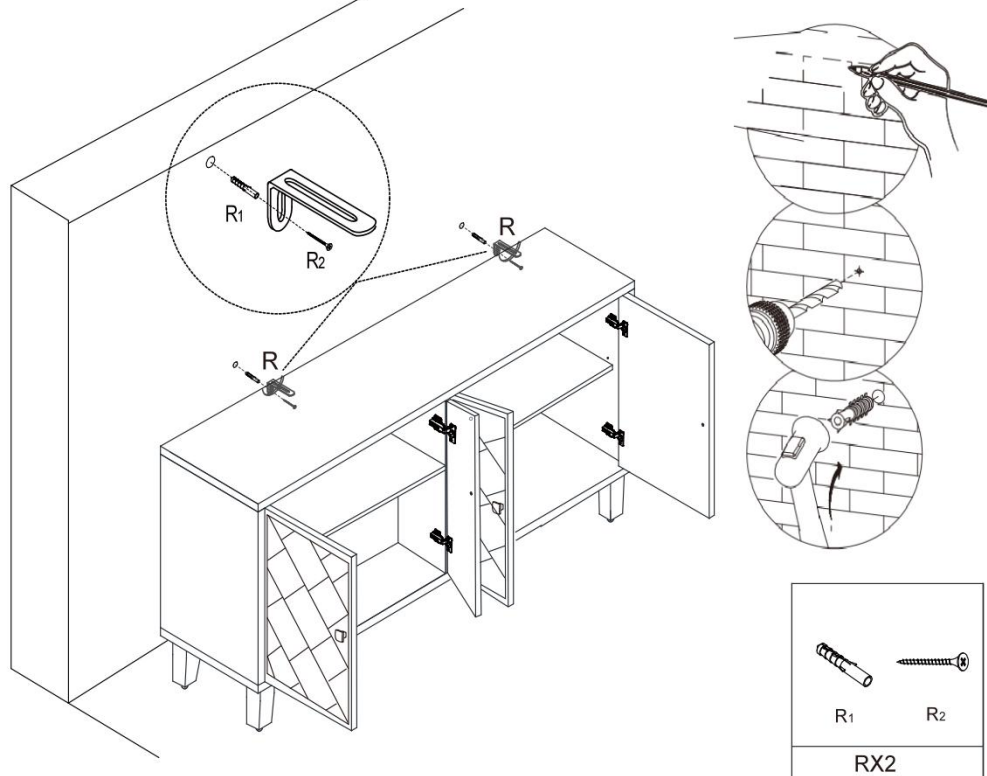

Align the cabinet with the wall and slats. Screw the expansion screw (R1) into the wall, then attach the other end of the Sheet Iron (Q) to the expansion screw (R1) on the wall and tighten the screw (R2) to ensure that the anti-tipover device is securely mounted and effective in preventing the cabinet from tipping over.

Step 14

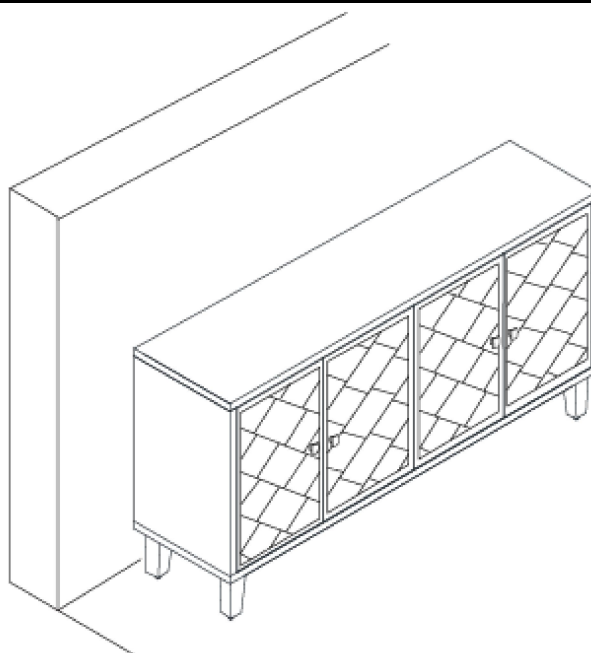

Your cabinet is ready for use. This cabinet can only be used on a flat and level surface.