

# WARNING!!

Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping.

**NEVER** allow children to climb or hang on furniture, including drawers or cabinet doors.

In addition to installing the restrains, to help prevent tip-over











1. **NEVER** put a TV or other heavy objects on top of this product".
2. Do not stand on the product

 <b>WARNING</b>	
	<p><b>Children have died from furniture tipover. To reduce the risk of furniture tipover:</b></p> <ul style="list-style-type: none"><li>• ALWAYS install tipover restraint provided.</li><li>• NEVER put a TV on this product.</li><li>• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.</li><li>• NEVER open more than one drawer at a time.</li><li>• Place heaviest items in the lowest drawers.</li><li>• Do not defeat or remove the drawer interlock system.</li></ul>
	<p><i>This is a permanent label. Do not remove!</i></p>

# Assembly Instructions

**Caution: You must read this before you proceed**

## Care & Maintenance


- ⊘  • Not for commercial use. For residential use only.
- ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- ⊘  • Do not put hot items directly on furniture surface.
- ⊘  • Do not clean furniture with harsh cleansers or polish.
- ⊘  • Do not place furniture under direct sunlight.
- ⊘  • Do not place furniture near heating or cooling vents.
- ⊘  • Do not write on furniture without a padded barrier to protect the surface.
- ⊘  • Do not place furniture outside . For indoor use only.
- ⊘  • Stains may be removed with mild soap solution and damp cloth.
- ⊘  • Children should not climb or jump on the furniture.








- Dust and pick-up spills using a clean, non-colored, lint-free cloth.





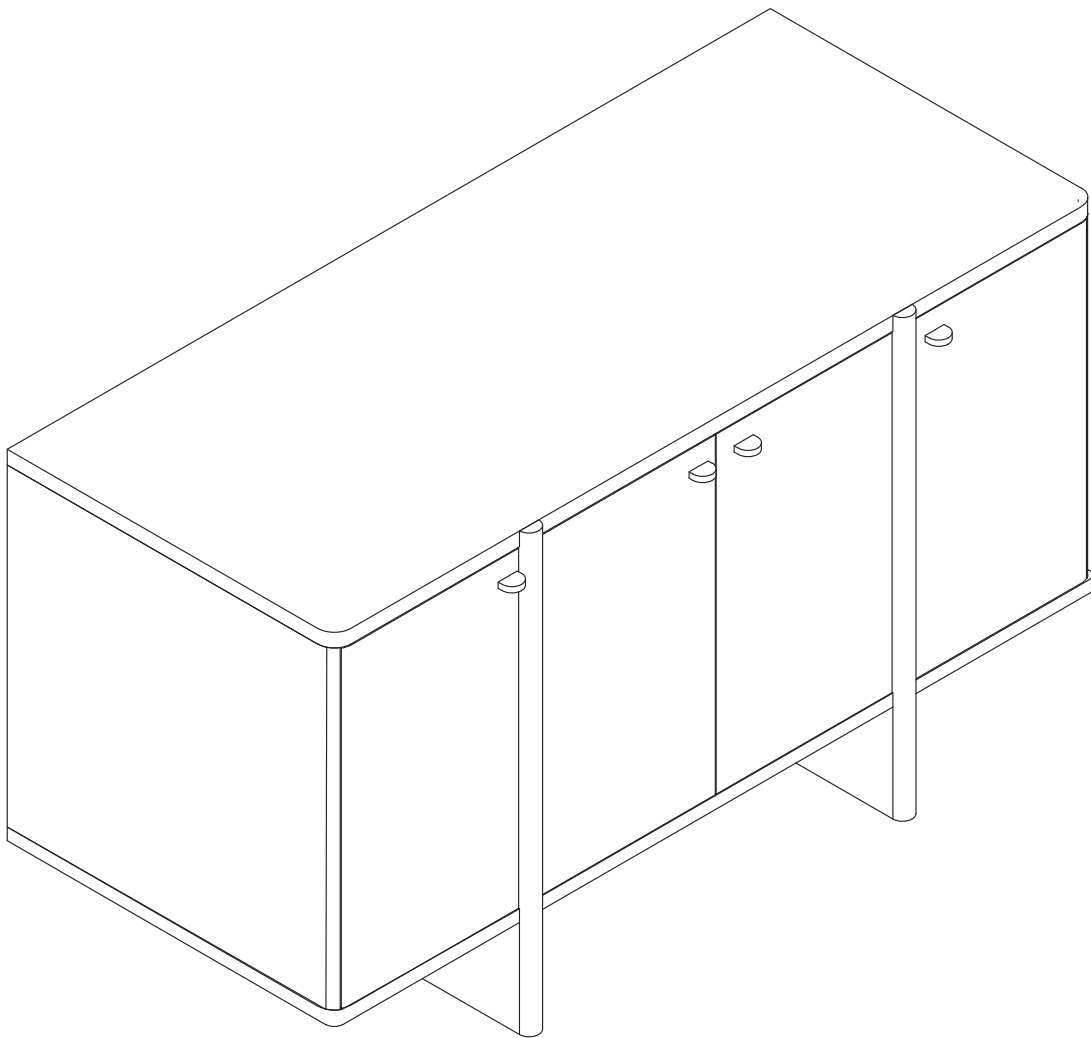


Please look in carton for hardware packs and legs.

# Sideboard




















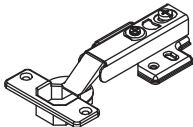



# Parts List

Label	Picture		Description	QTY
A			Top panel	1PC
B	B1	B2	Left and Right Side Board	2PCS
C	C1	C2	Middle Board	2PCS
D	D1	D2	Left and Right Side Bottom Board	2PCS
E			Middle Bottom Board	1PC
F			Left and Right Side Metal Support Strip	2PCS
G			Left and Right Back Board	2PCS
H			Middle Back Board	2PCS

I				Back Board Buckle	1PC	
J				Left and Right Shelf Board	2PCS	
K				Middle Shelf Board	1PC	
L	L1		L2		Left and Right Door Panel	2PCS
M	M1		M2		Middle Door Panel	2PCS


# Hardware


Label	Picture	Description	QTY
①		Screw (M6x25mm)	20+1
②		Screw (M6x16mm)	8+1
③		Flat gasket (M6mm)	20+1
④		Spring Leaf (M6mm)	20+1
⑤		Hex Wrench	1
⑥		Csk Screw (M4x16mm)	48+1
⑦		Csk Screw (M3x12mm)	36+1
⑧		Shelf Support Pin	12
⑨		Door hinge	4
⑩		Door hinge	4
⑪		Foot pad	4

⑫		Csk Screw (M4x25mm)	4+1
⑬		Door Handle	4
<b>Tipover Restraint Device Hardware</b>			
⑭		Anti- Tipping Cloth Strip	2
⑮		Flat Gasket (M4mm)	2
⑯		Screw (M4x16mm)	2
⑰		Screw (M4x30mm)	2
⑱		Expansion screw	2
⑲		Screwdriver (Not provided)	1
⑳		Power Drill (Not provided)	1
㉑		Hammer (Not provided)	1

# Assembly Preparation

Before  
Beginning  
Assembly:

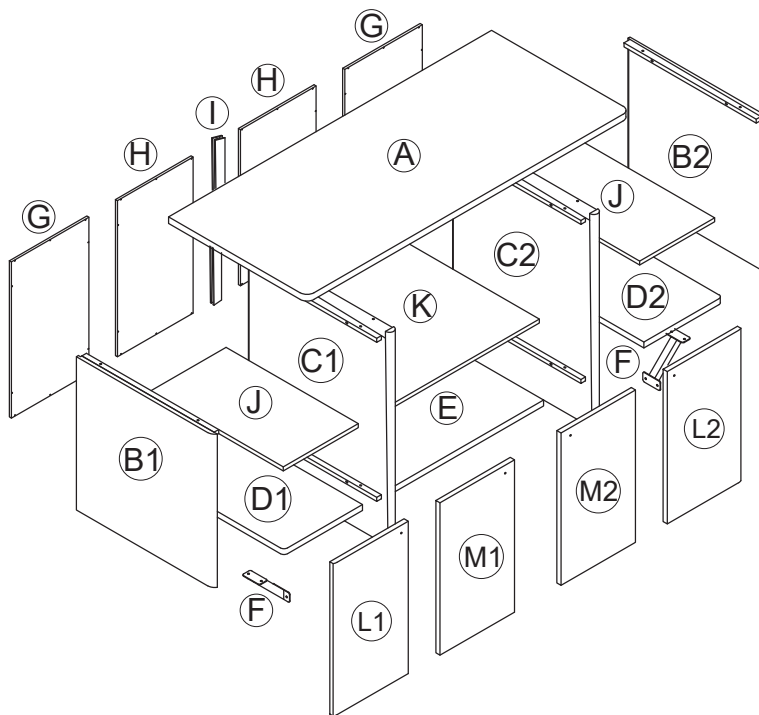

①  x20+1

②  x8+1

③  x20+1

④  x20+1

⑤  x1


⑥  x48+1

⑦  x36+1

⑧  x12

⑨  x4

⑩  x4

⑪  x4

⑫  x4+1

⑬  x4

⑭  x2

⑮  x2

⑯  x2

⑰  x2

⑱  x2



• Read instructions, cover to cover-



• Have 2 adults on hand for assembly-



• Do not assemble on flooring or carpet-




• Assemble on a clean non-marring surface (packing foam)-



• Save all packaging until finished-

# Assembly Steps


## Overview

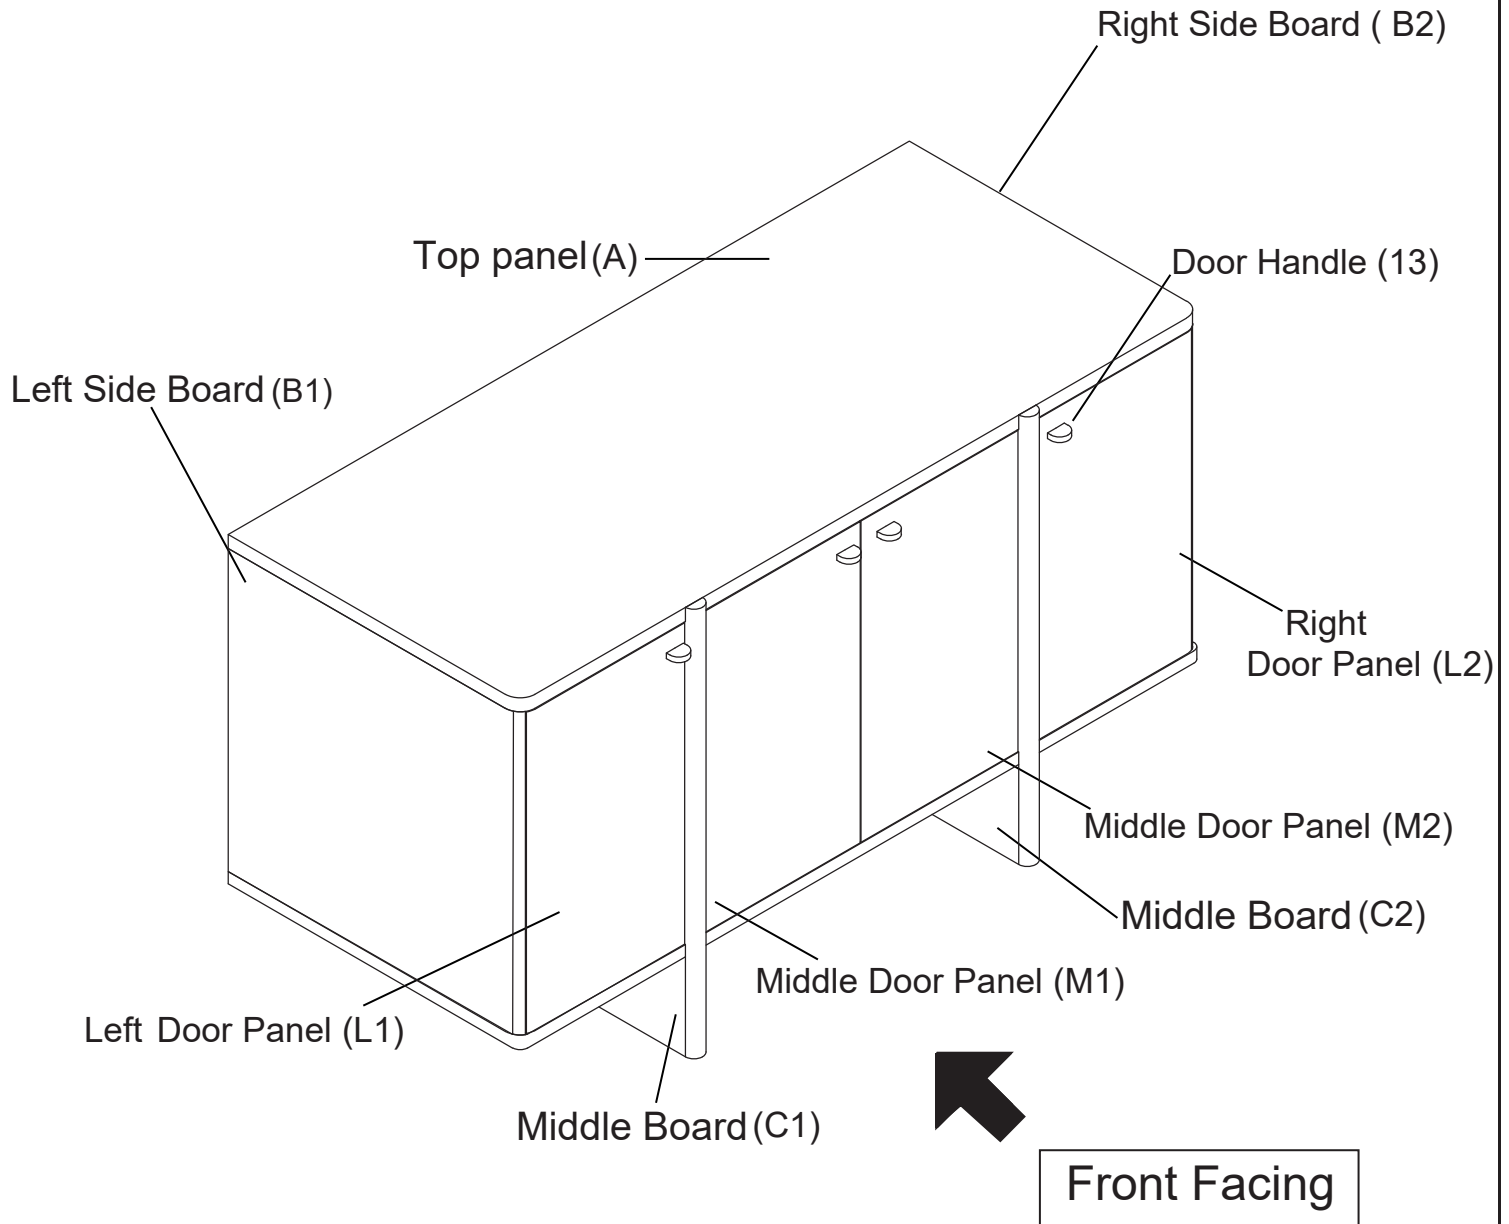

This Sideboard has multiple parts and may require up to 60 minutes to assemble. To give you an overview of the Sideboard parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


# Assembly Steps

## Step 1

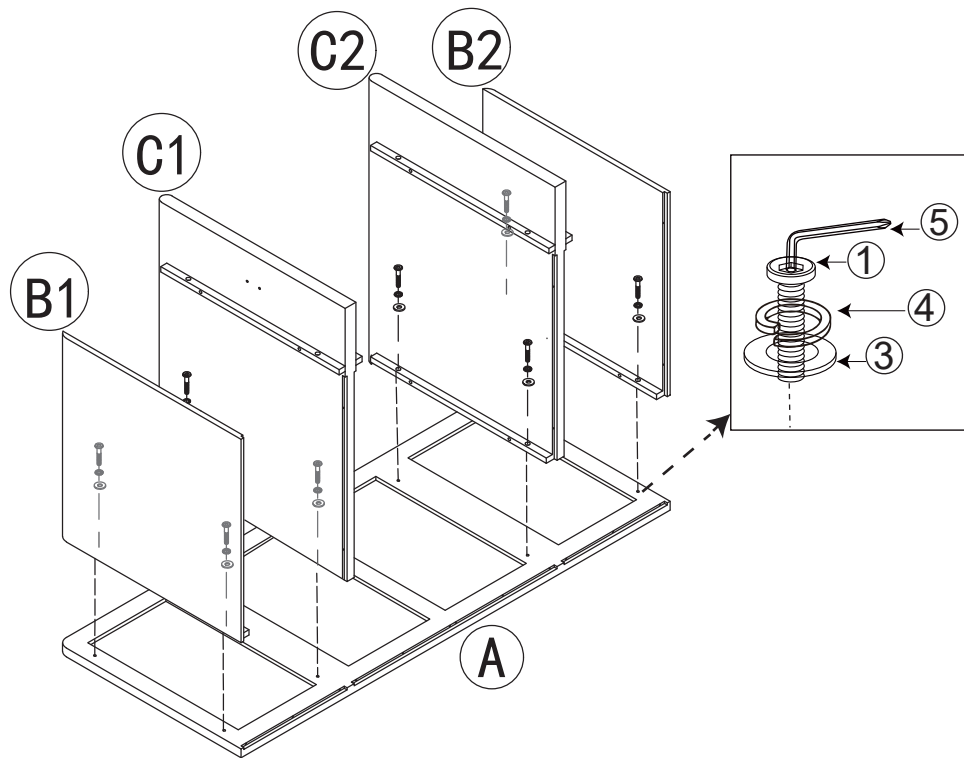


Flip the top panel (A) upside down on the floor, and attach the left and right side board (B1) & (B2), middle board (C1) & (C2), use screw ① and spring Leaf ④ and flat gasket ③ align with the hole position, Hex wrench ⑤ is used to assist rotation tightening.

## Step 2

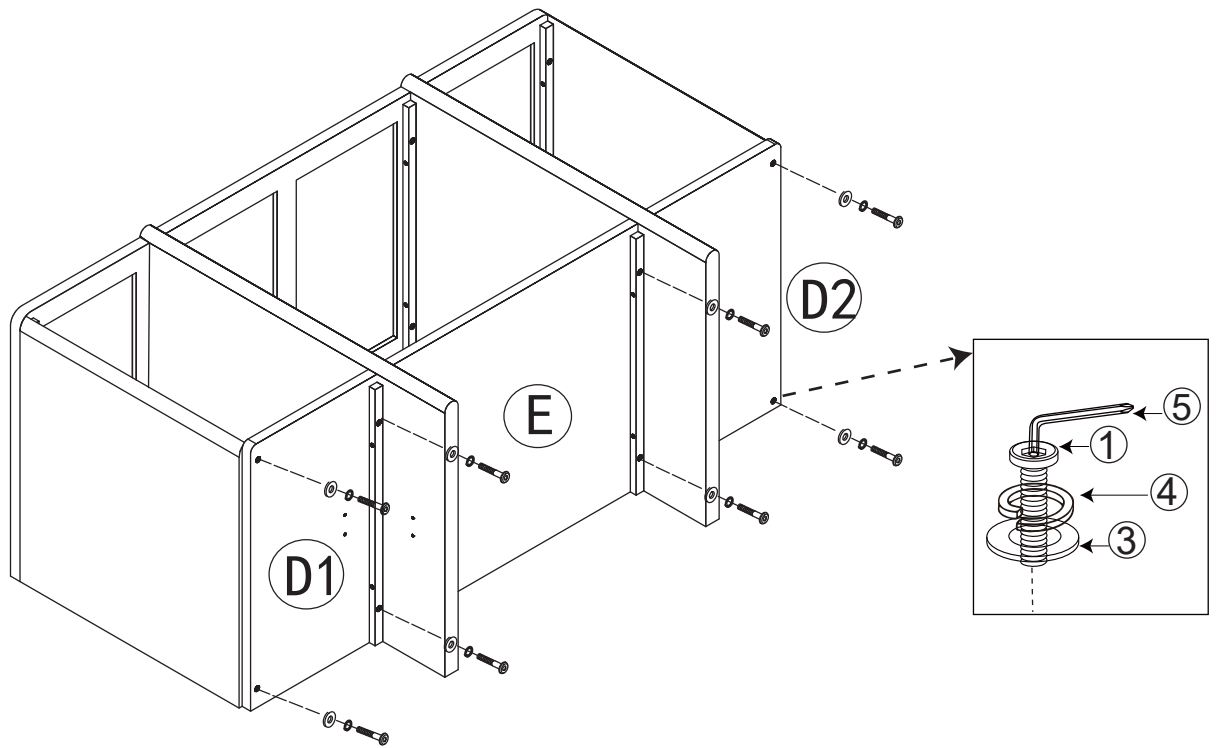


Place the Left and Right Side Bottom Board (D1) & (D2) on the holes of the Left and Right Side Board (B1) & (B2). Insert the Middle Bottom Board (E) into the Middle Board (C1) & (C2), use screw ① and spring Leaf ④ and flat gasket ③ align with the hole position, Hex wrench ⑤ is used to assist rotation tightening.

### Step 3

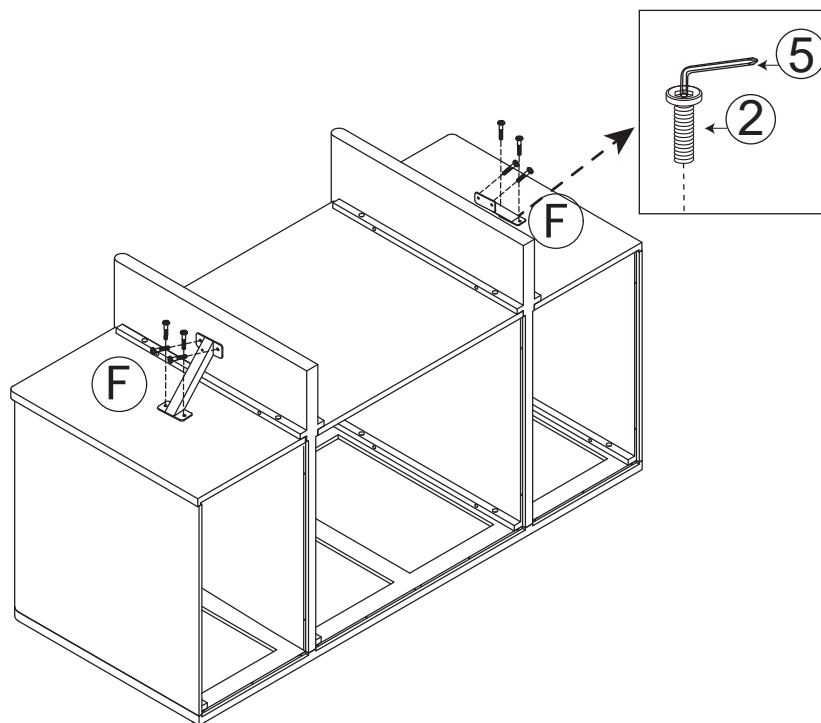


After installing the base plate, install the Left and Right Side Metal Support Strip (F) on the Middle Board (C1) & (C2), align the holes with screw ② and Hex Wrench ⑤, and tighten to secure the assembly.

### Step 4

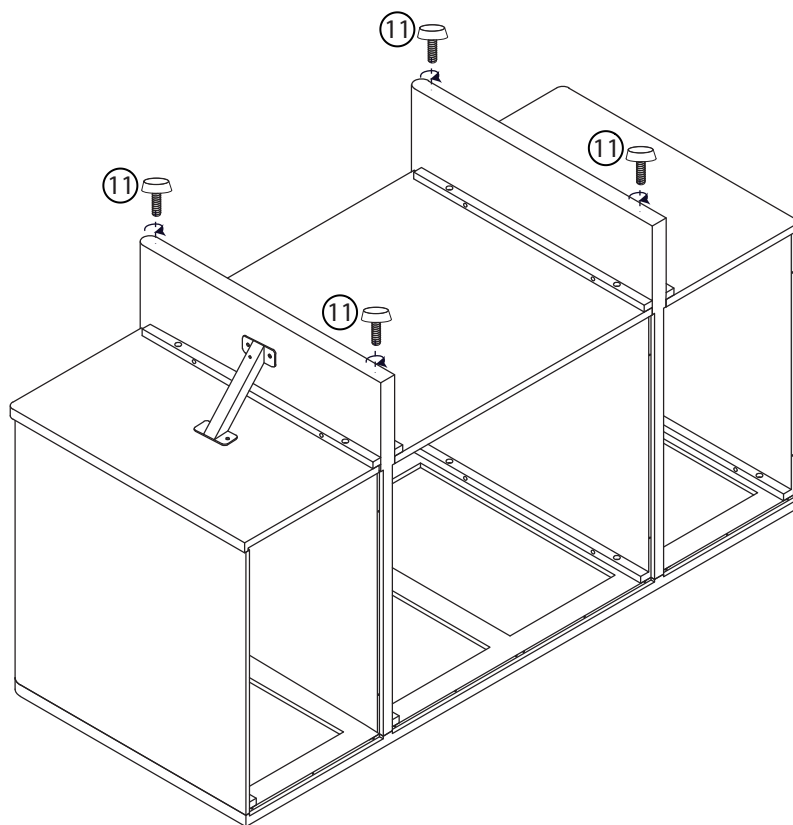


Rotate the foot pad ⑪ over the two middle board (C1) & (C2).

### Step 5

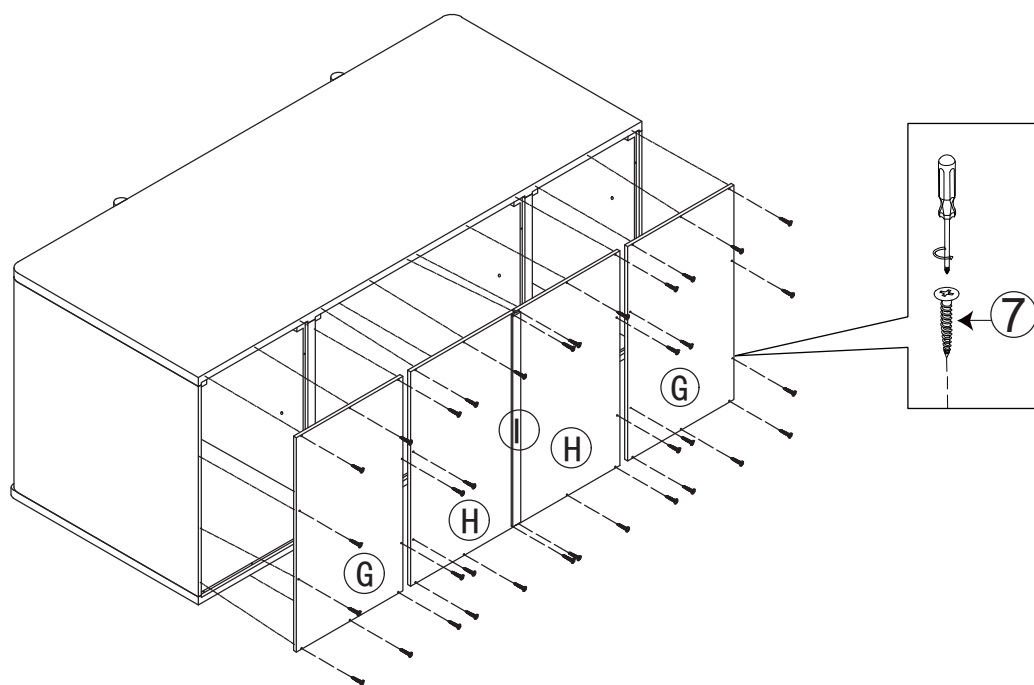


Stand the mounted sideboard up. From the back side, fasten the left and right back board(G) and the middle back board(H) with Csk Screw⑦, and then insert the back board buckle(I) into the middle of the middle back board(H).

### Step 6

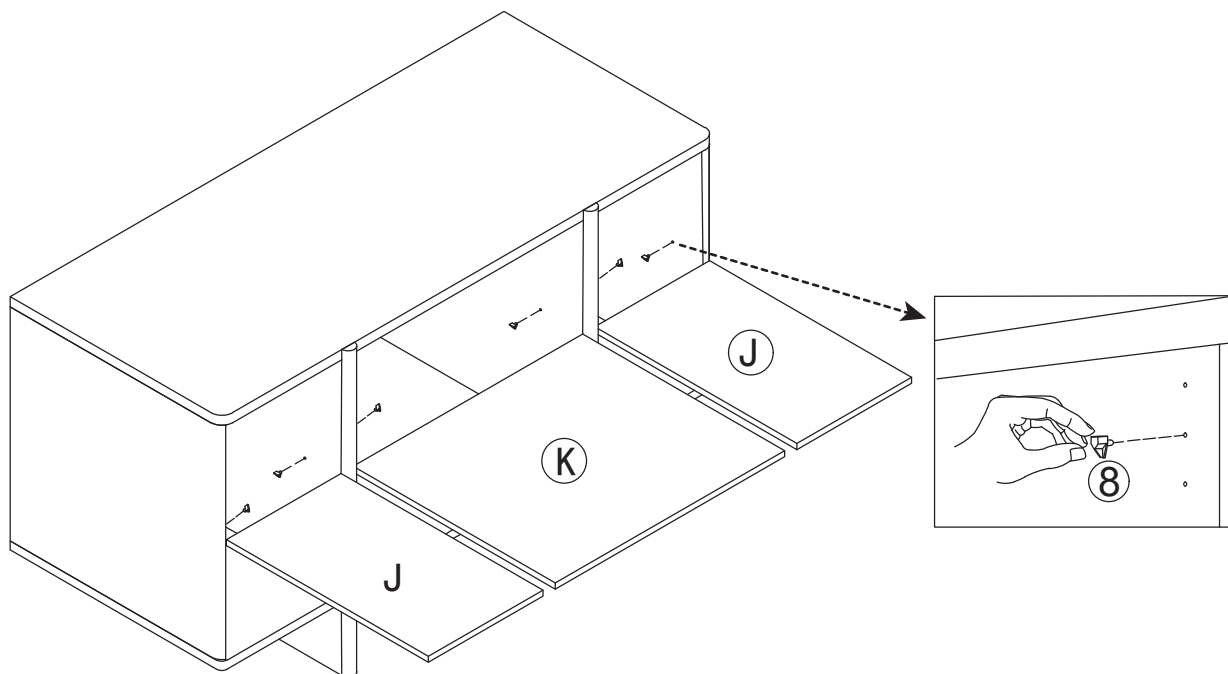

Turn the cabinet to the front and start assembling the shelf board. Insert shelf support pin⑧into each panel hole before placing the laminates in, and then insert the left and right shelf board (J), and middle shelf board (K).


## Step 7

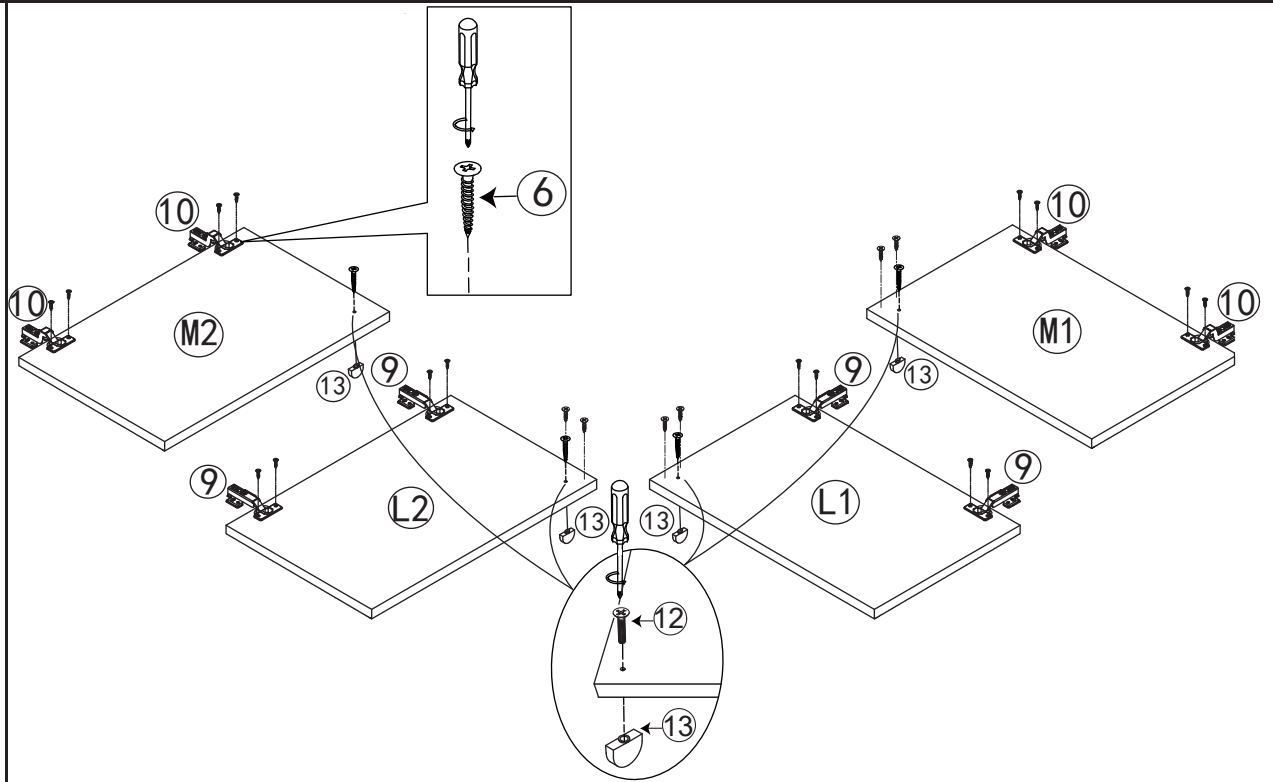

1. Install the connecting door hinge (9) (10) on the hole side of the left and right door panel (L1) & (L2) and the middle door panel (M1) & (M2) with Csk screw (6).


2. Fasten Csk Screw (12) through the designated hole and secure Door Handle (13) using Screwdriver (19).

## Step 8

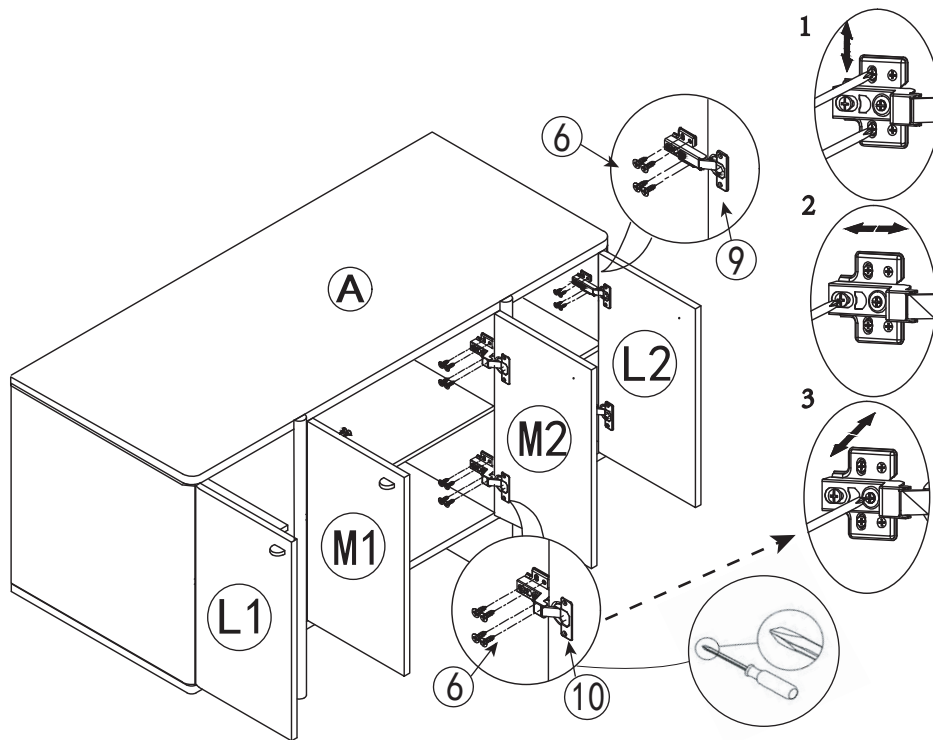


As shown in the picture, use Csk Screw (6) and a screwdriver (20) to connect the Door hinge (9) (10) to the door panel of the cabinet body.

### Step 9

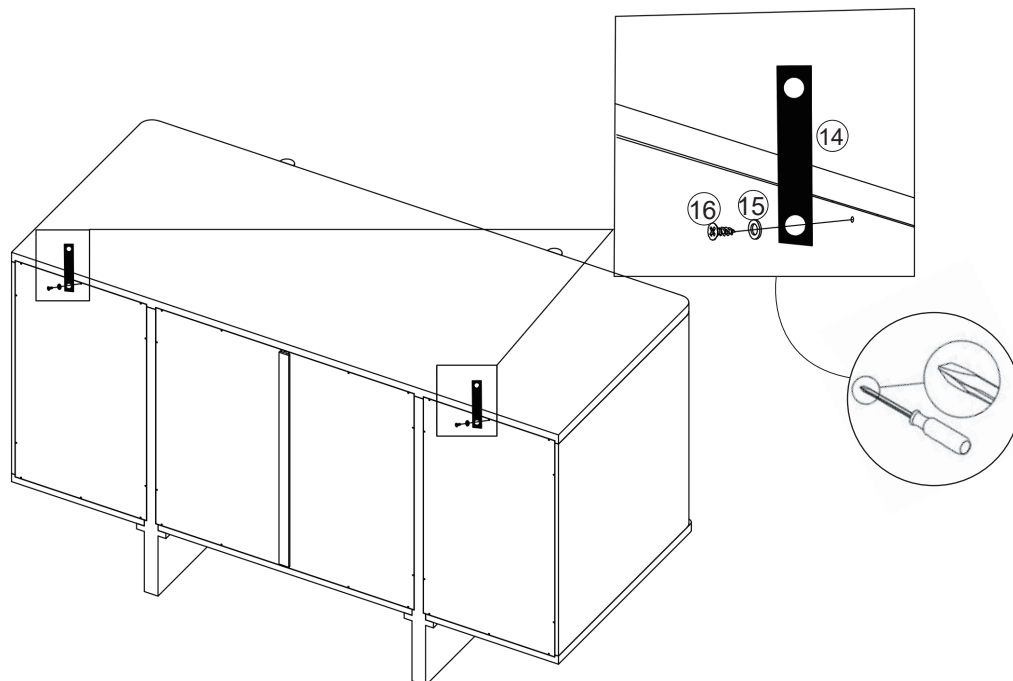


In the upper left and upper right corners of the back of the cabinet, secure the Anti-Tipping Cloth Strip (14) to the sideboard using screwdrivers (19), Screws (16) and Gasket (15).

### Step 10

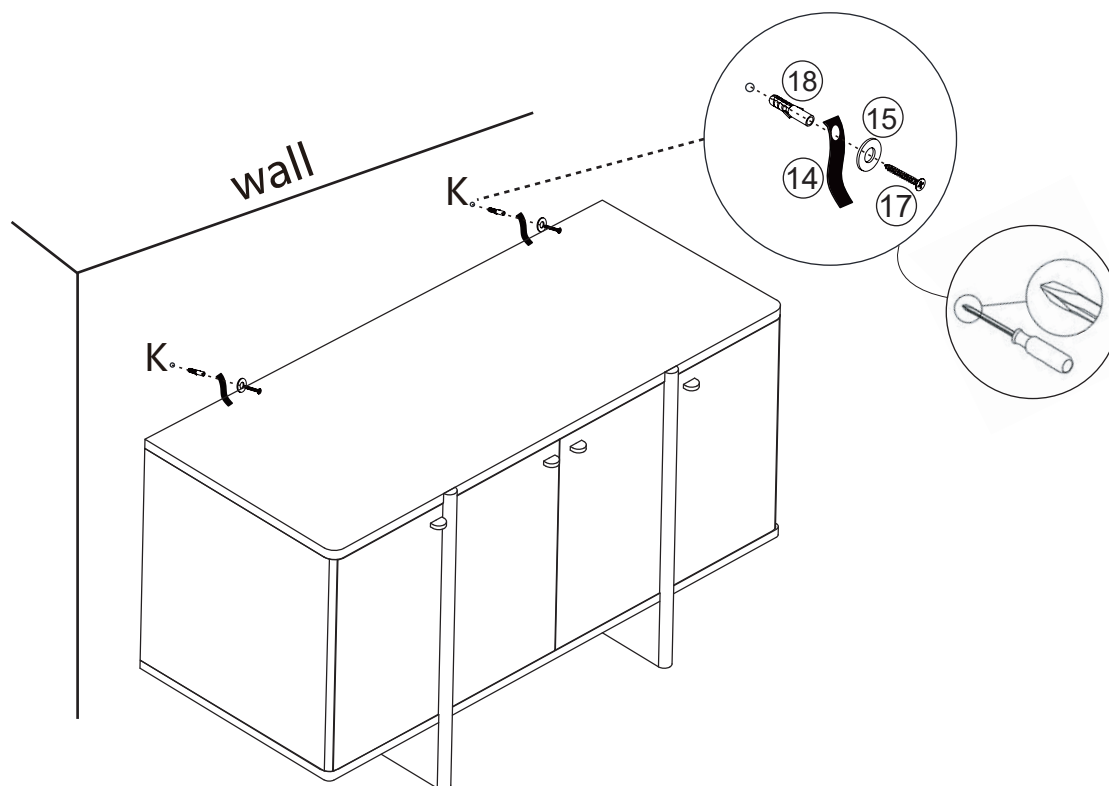

Align the cabinet with the wall and the strip. Screw the expansion screw (18) into the wall and install the flat gasket (15) and screw (17) using the Anti-tipping cloth strip (14) connected to the cabinet. Screw in the tilting strip with a screwdriver (19).

Step 1F

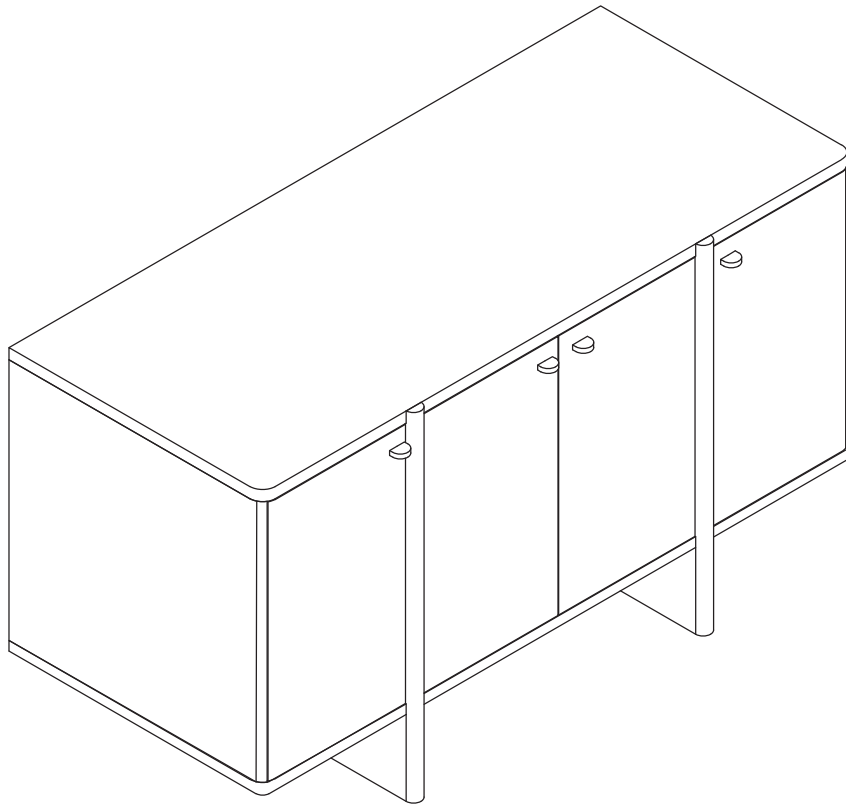

Your cabinet is ready for use.  
This cabinet can only be used on flat ground.