




**MANHATTAN
COMFORT**

NS008

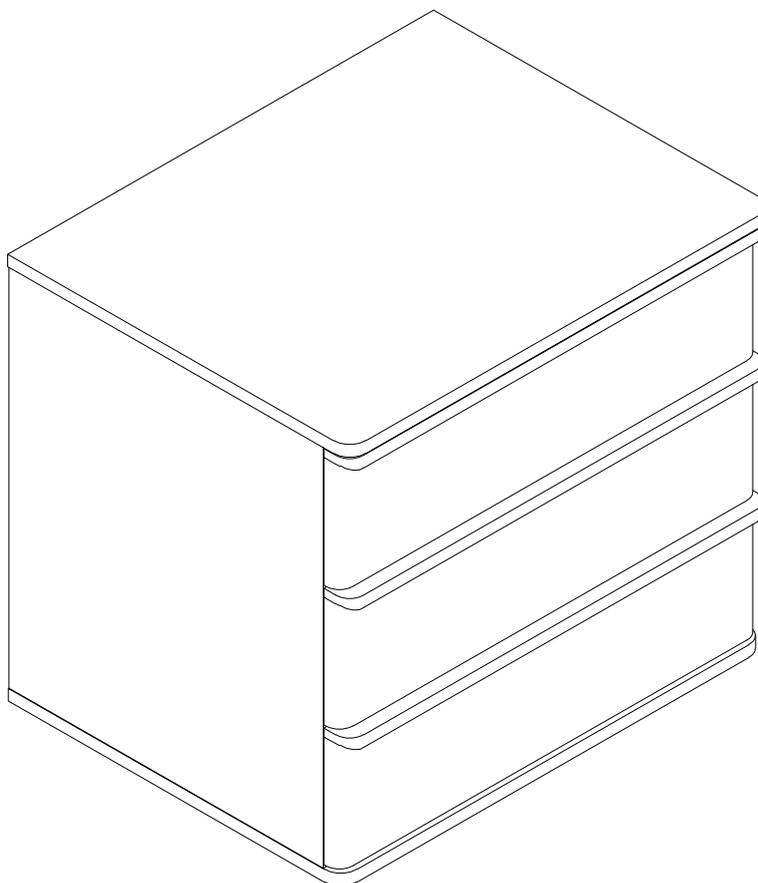





STOP!

Before beginning the assembly process, ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

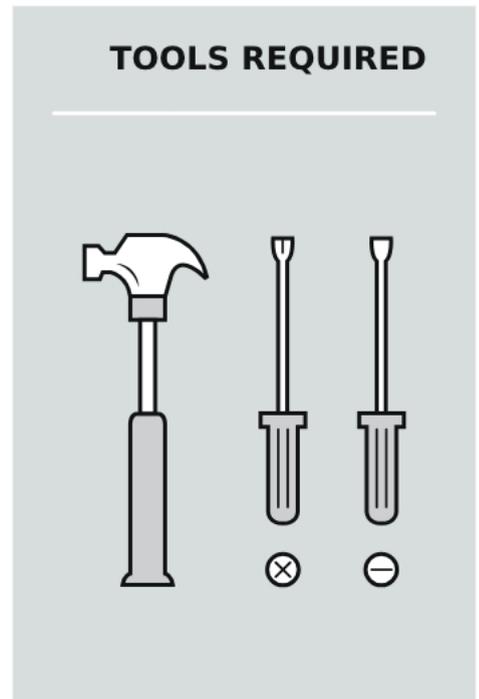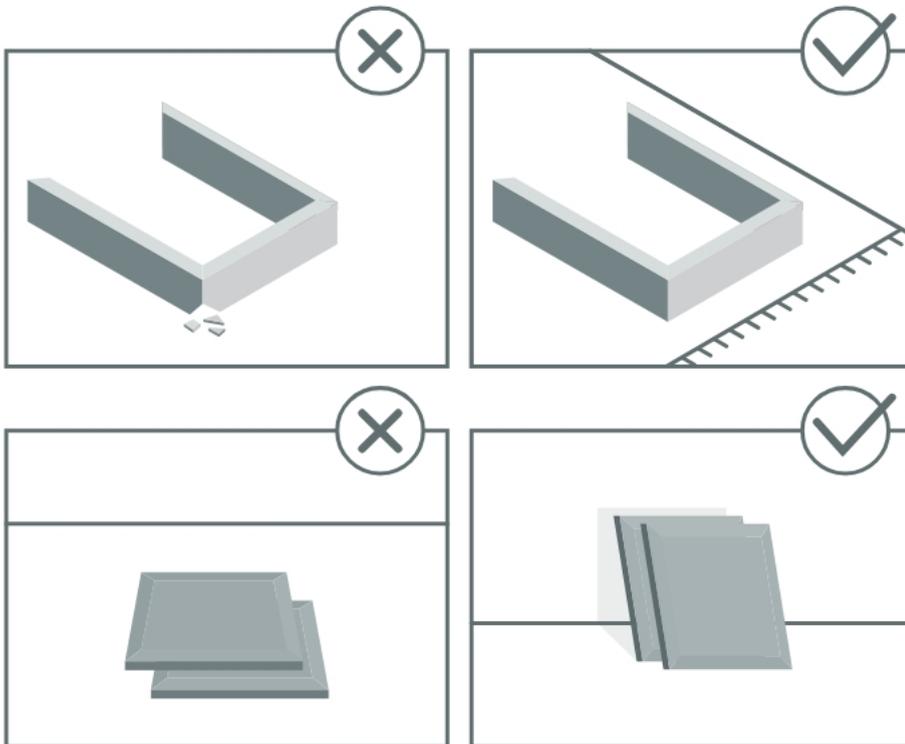

View our assembly video online:
WWW.MANHATTANCOMFORT.COM




Stuck? Question? We are here to help.
tel: **908-888-0818**
e-mail:

Support Site



Included in this package:

- A. TOP PANEL(1)
- B. BOTTOM PANEL(1)
- C. LEFT PANEL (1)
- D. RIGHT PANEL (1)
- E. BACK PANEL (2)
- F. BACK HORIZONTAL PANEL(1)
- G. FRONT HORIZONTAL PANEL (2)
- H. DRAWER FRONT PANEL (3)
- I. DRAWER SUPPORT PANEL (3)
- J. DRAWER LEFT PANEL (3)
- K. DRAWER RIGHT PANEL (3)
- L. DRAWER BACK PANEL (3)
- M. DRAWER BOTTOM PANEL (3)

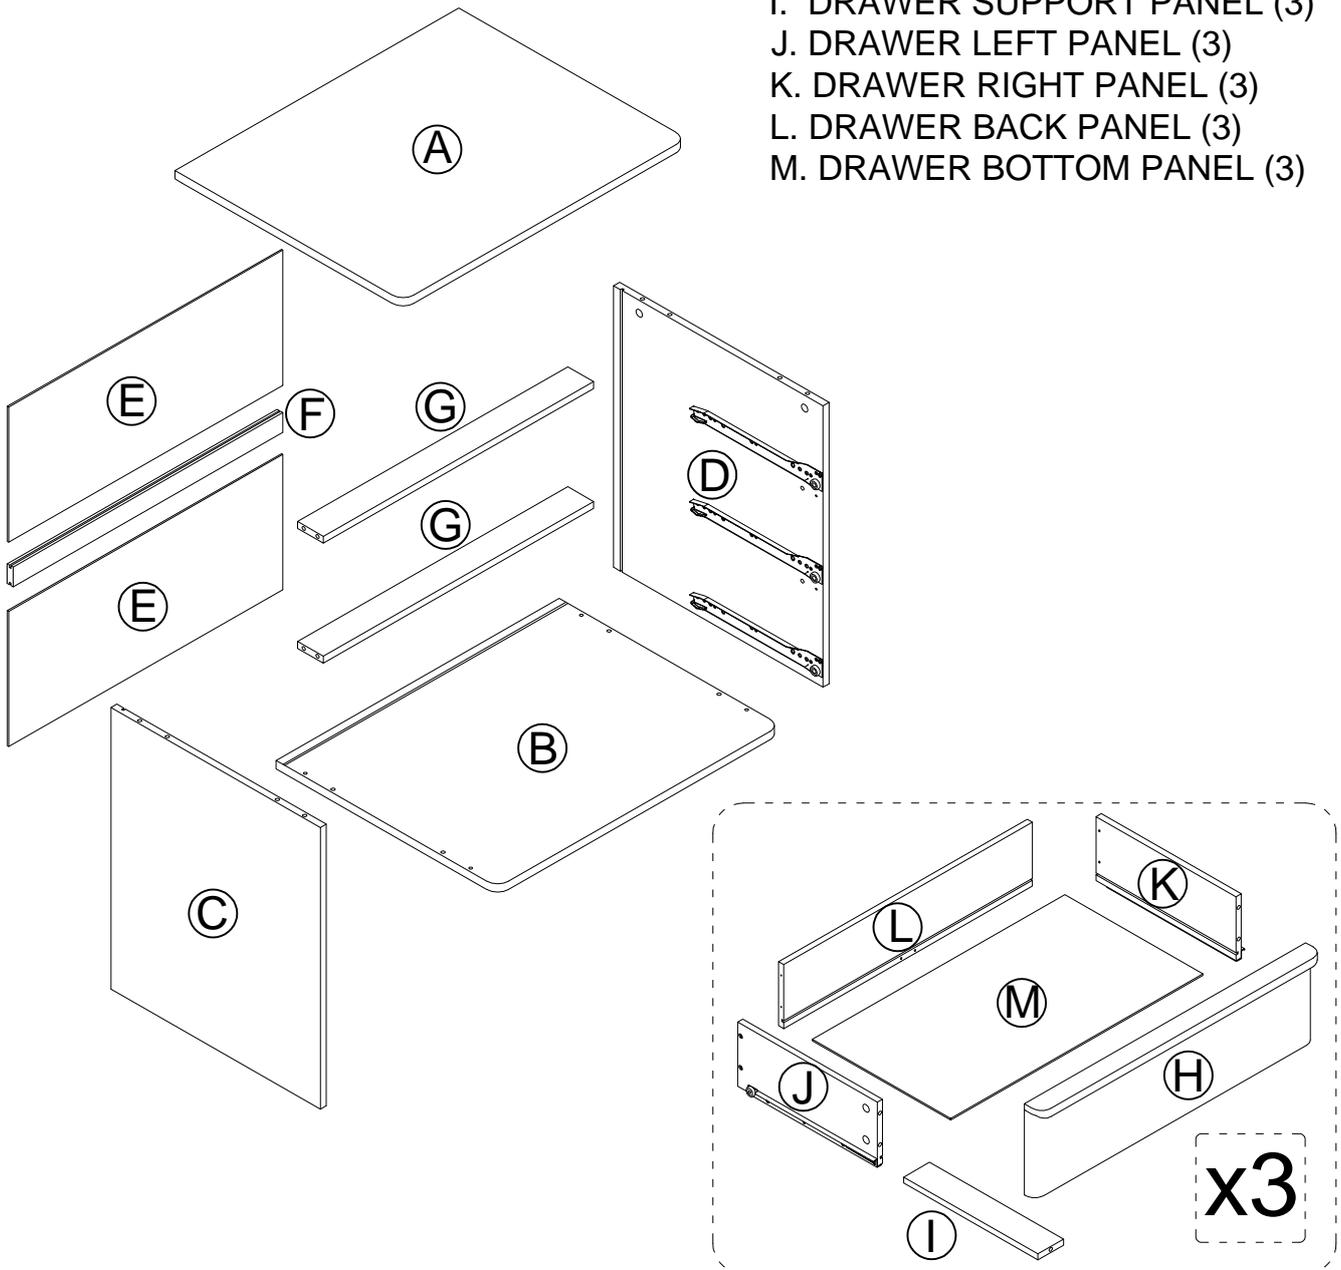


Hardware Identification


- ① KD BOLT - 23pcs
L=35mm




- ② KD LARGE CAM - 8pcs
Ø15*11mm



- ③ COVER CAP - 23pcs



- ④ WOOD DOWEL - 12pcs
Ø8*30mm



- ⑤ KD SMALL CAM - 15pcs
Ø15*9mm




- ⑥ SCREW - 18pcs
Ø4*38mm




- ⑦ SCREW - 4pcs
Ø6*50mm



- ⑧ LOCK - 1pc




- ⑨ PLASTIC WEDGE - 8pcs




- ⑩ SCREW - 8pcs
Ø3*17mm




- ⑪ STRAPS - 1pc

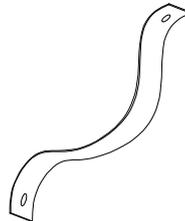

- ⑫ SCREW - 1pc
Ø4*18mm




- ⑬ SCREW - 1pc
Ø4*25mm




- ⑭ PLASTIC - 1pc




- ⑮ EVA PLATE - 4pcs



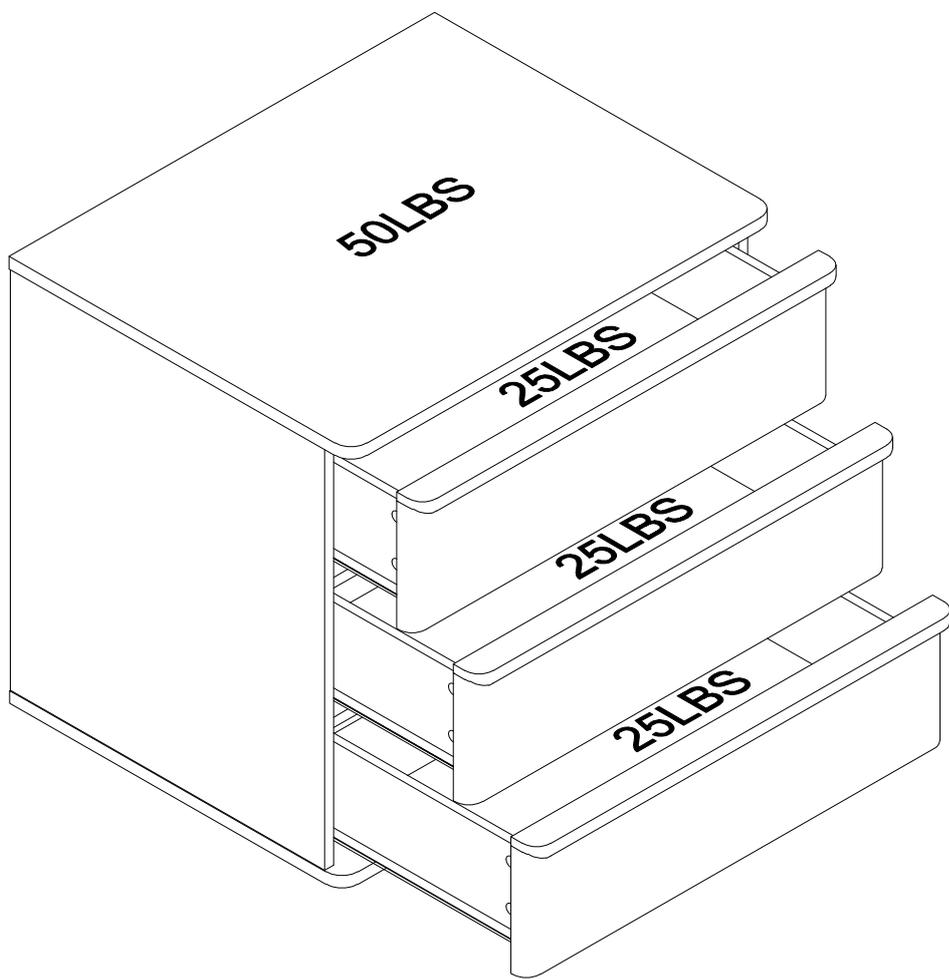


Step 1:

* Insert Eight KD BOLT (1) to the TOP PANEL(A), LEFT PANEL (C) and RIGHT PANEL(D).

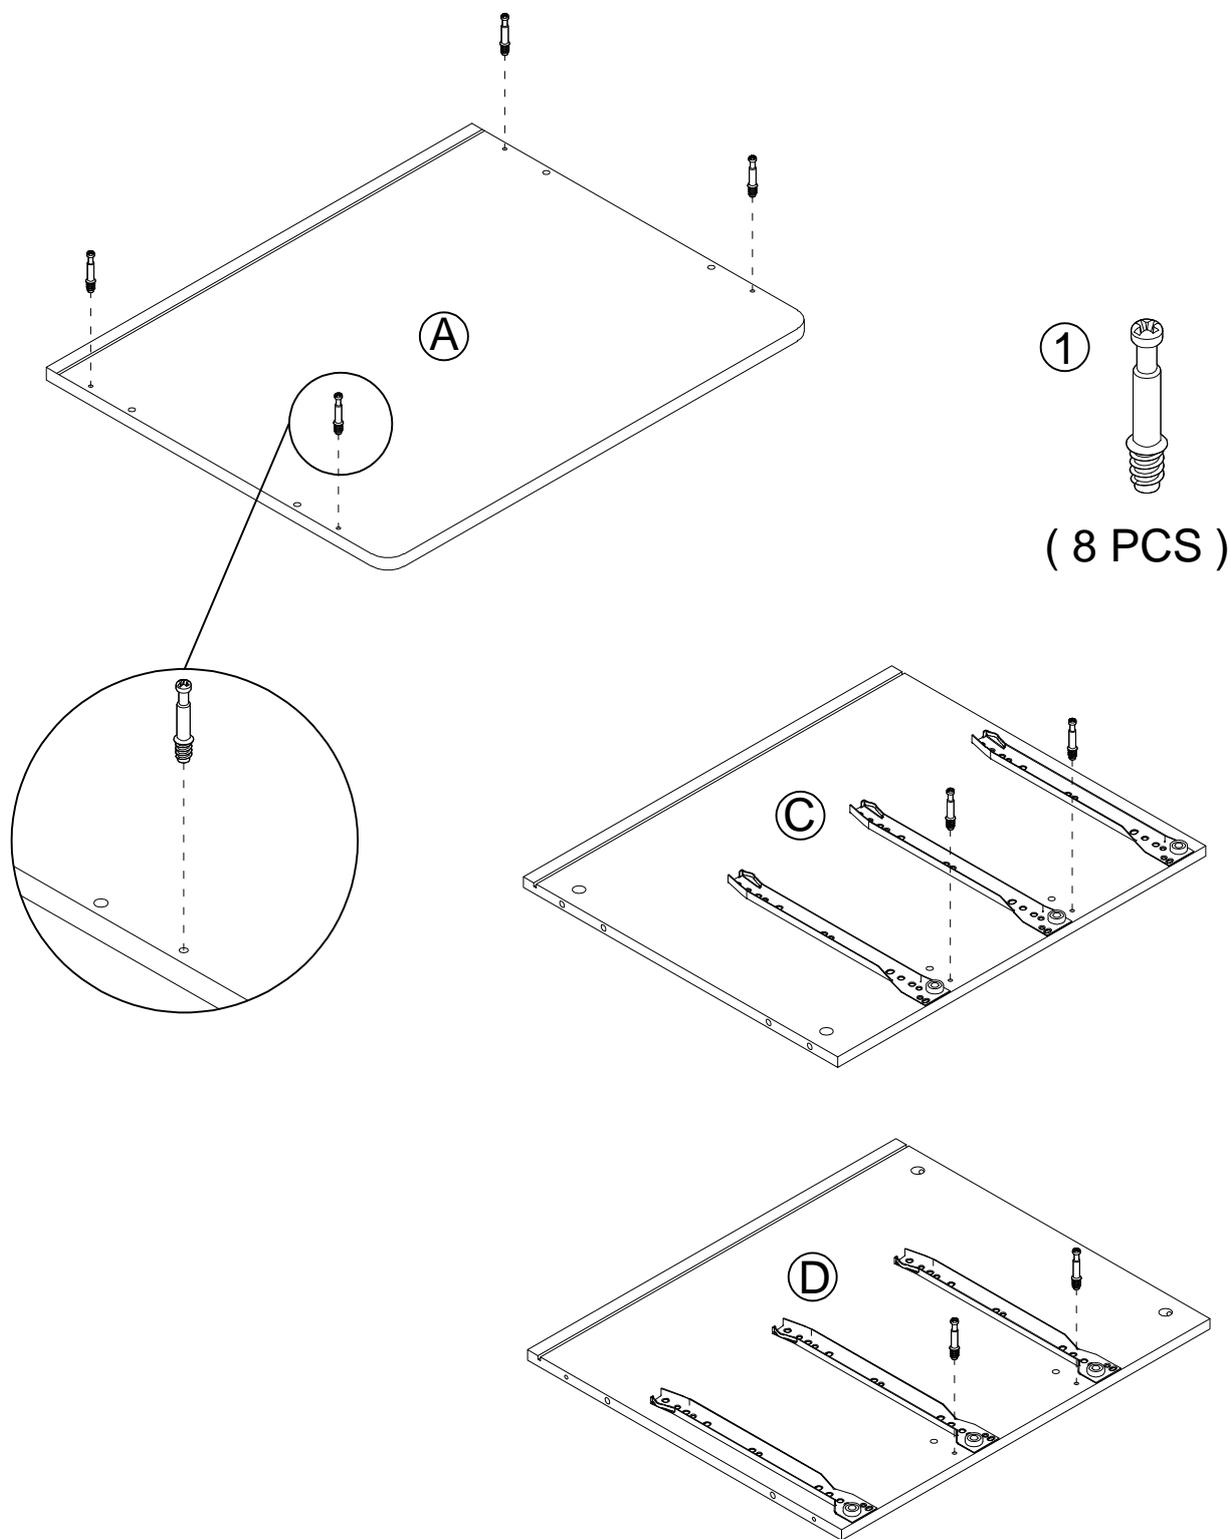



Step 2:

* Attach the Two FRONT HORIZONTAL PANEL(G) to the LEFT PANEL(C) by the Two KD LARGE CAM (2) , Two COVER CAP (3) and Two WOOD DOWEL (4) .

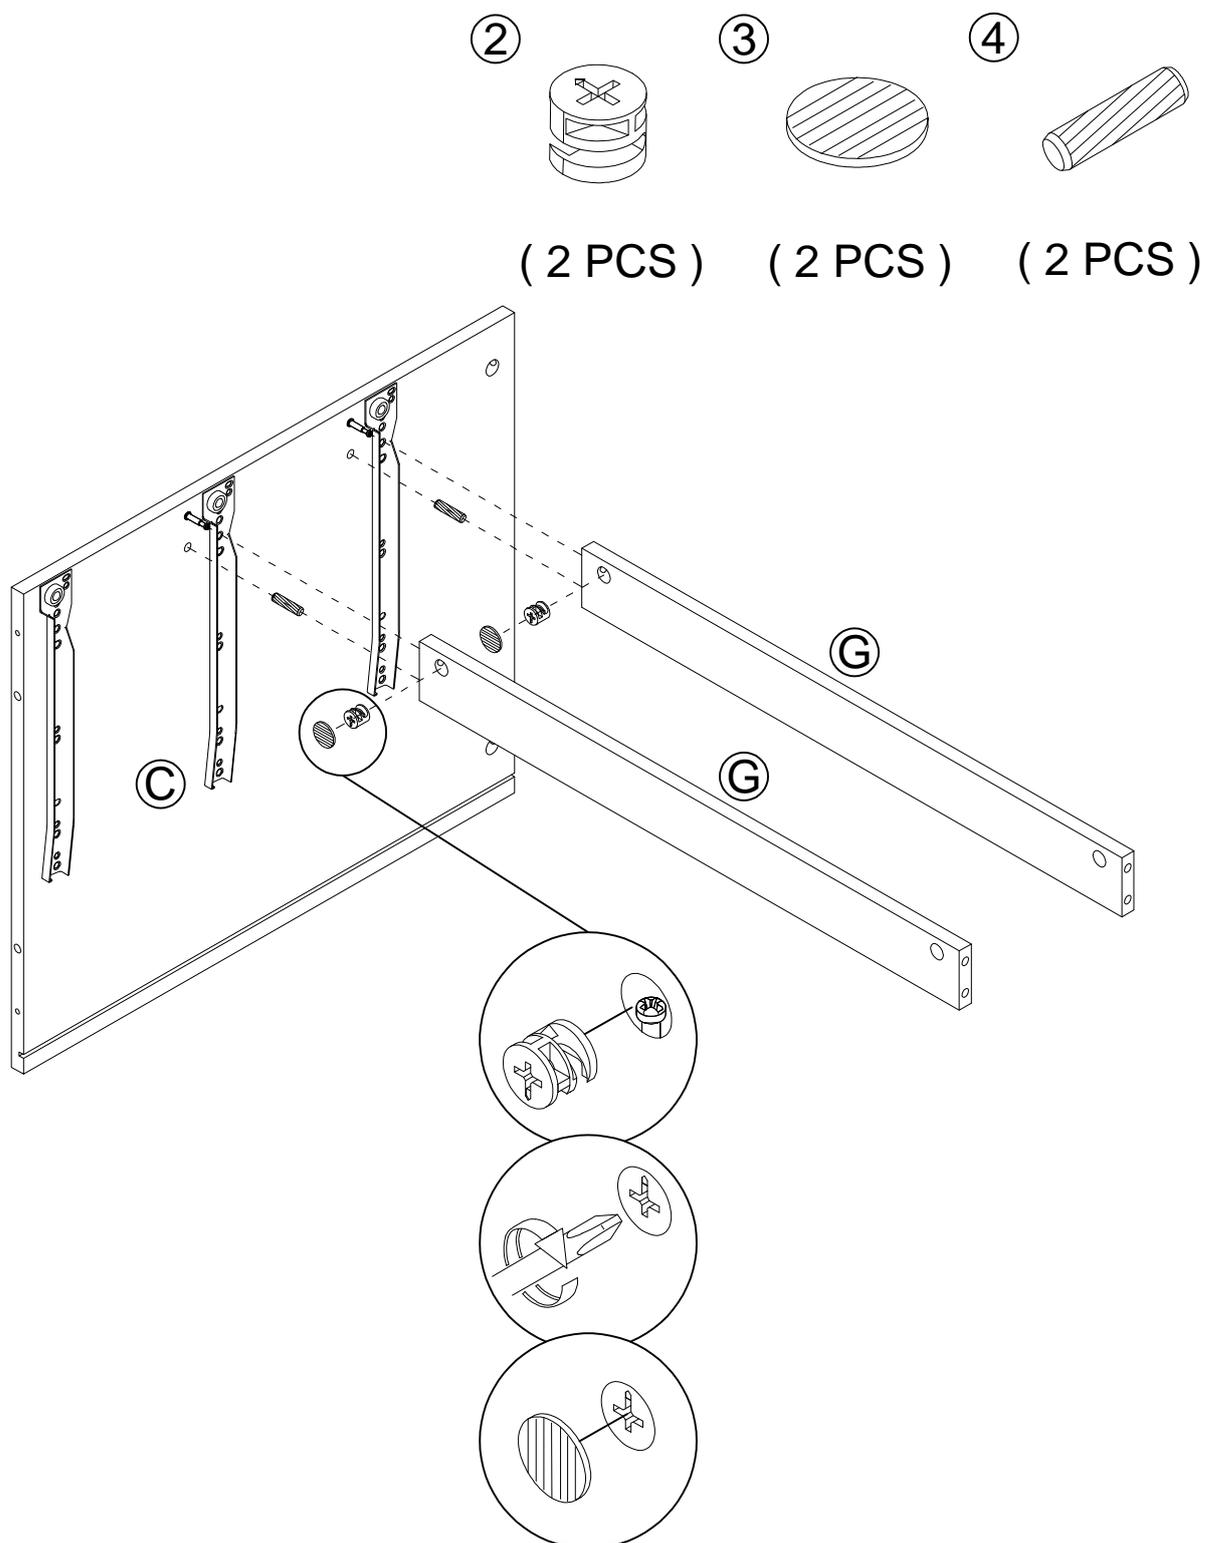


Step 3:

* Attach the RIGHT PANEL(D) to the Two FRONT HORIZONTAL PANEL(G) by the Two KD LARGE CAM (2) , Two COVER CAP (3) and Two WOOD DOWEL (4) .

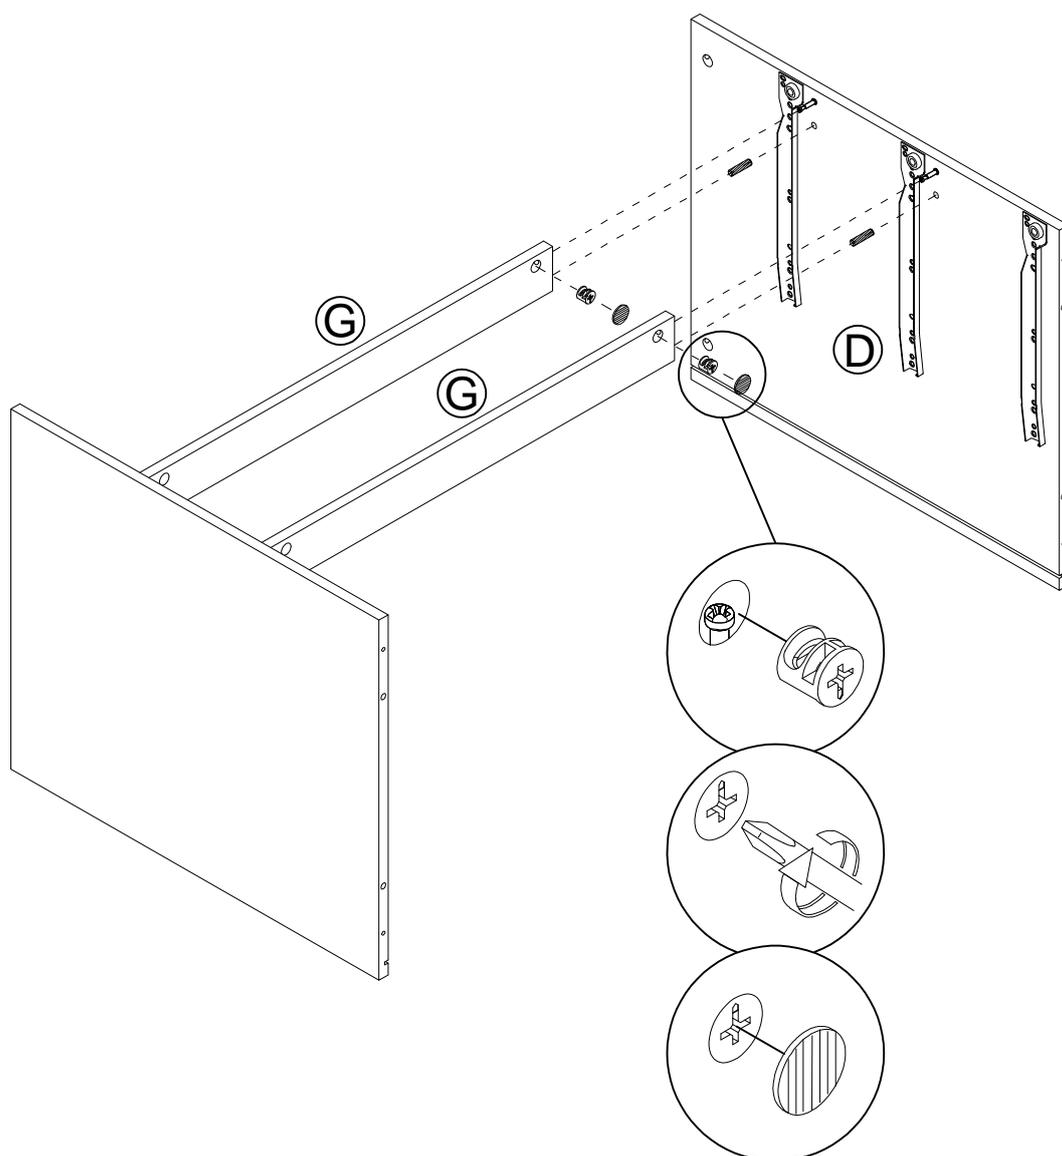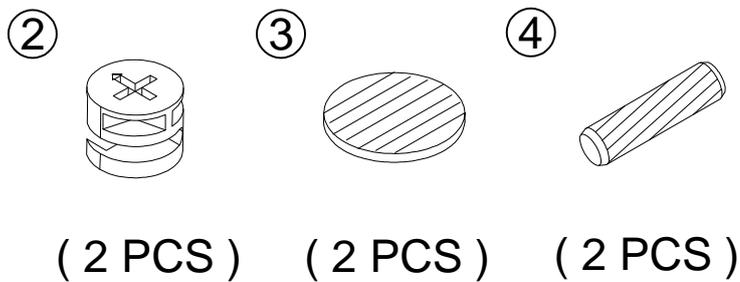


Step 4:

* Attach the BOTTOM PANEL(B) to the LEFT PANEL(C) and RIGHT PANEL(D) by the Four Screw(7), Four WOOD DOWEL (4) and LOCK(8) .

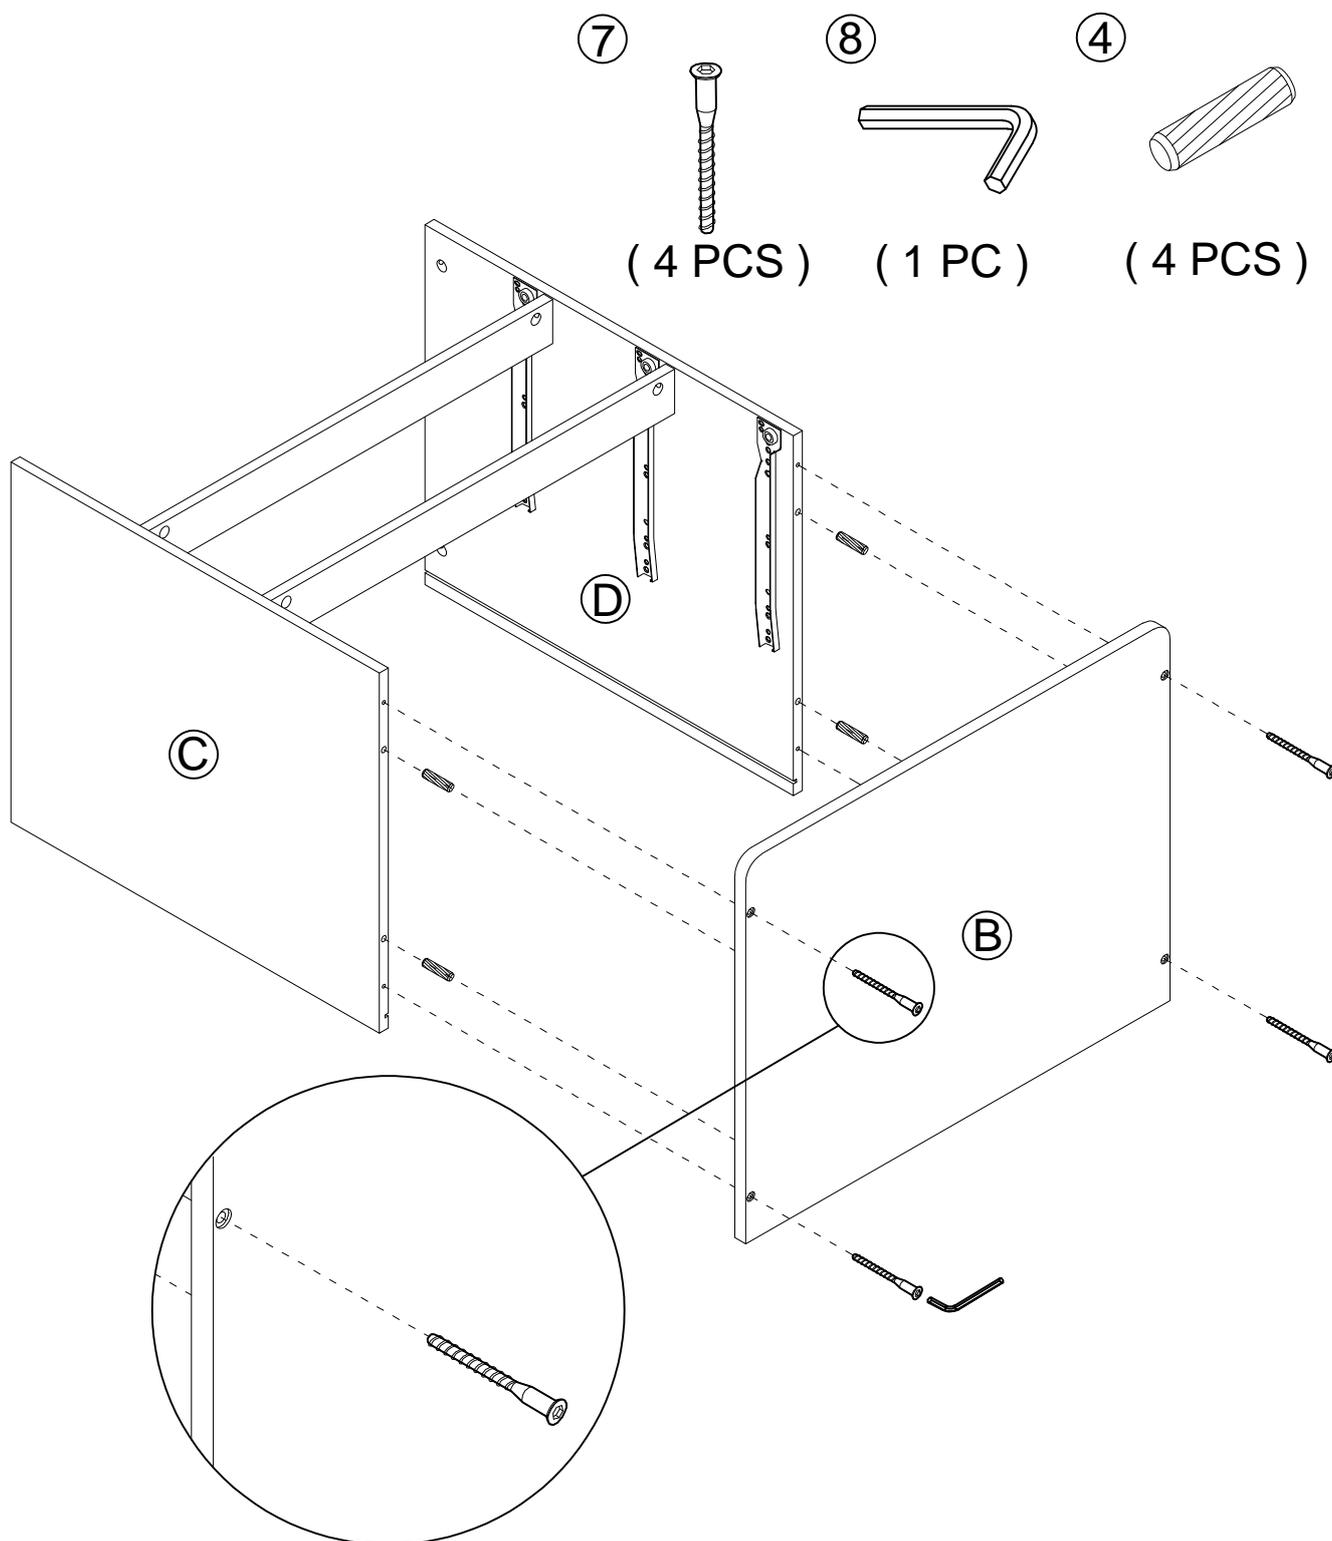

Step 5:



* Insert the Two BACK PANEL(E) and BACK HORIZONTAL PANEL(F) to the stand.

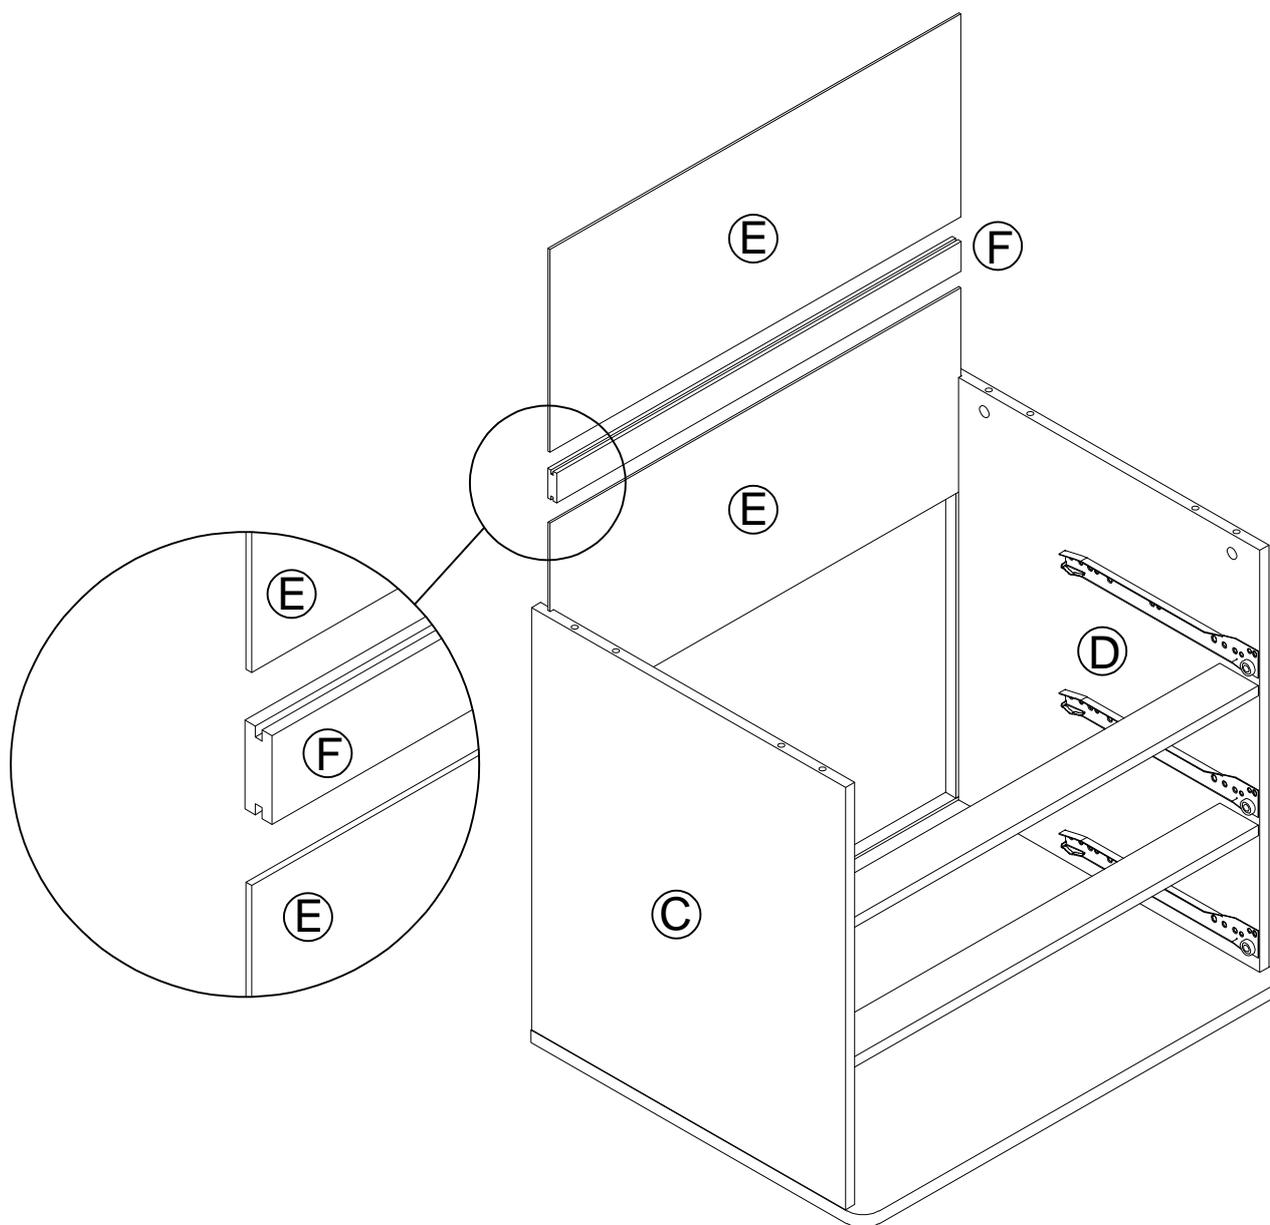

Step 6:


* Attach the TOP PANEL(A) to the LEFT PANEL(C) and RIGHT PANEL(D) by the Four KD LARGE CAM (2) , Four COVER CAP (3) and Four WOOD DOWEL (4) .

* Stick the Four EVA PLATE(15) to the BOTTOM PANEL(B).

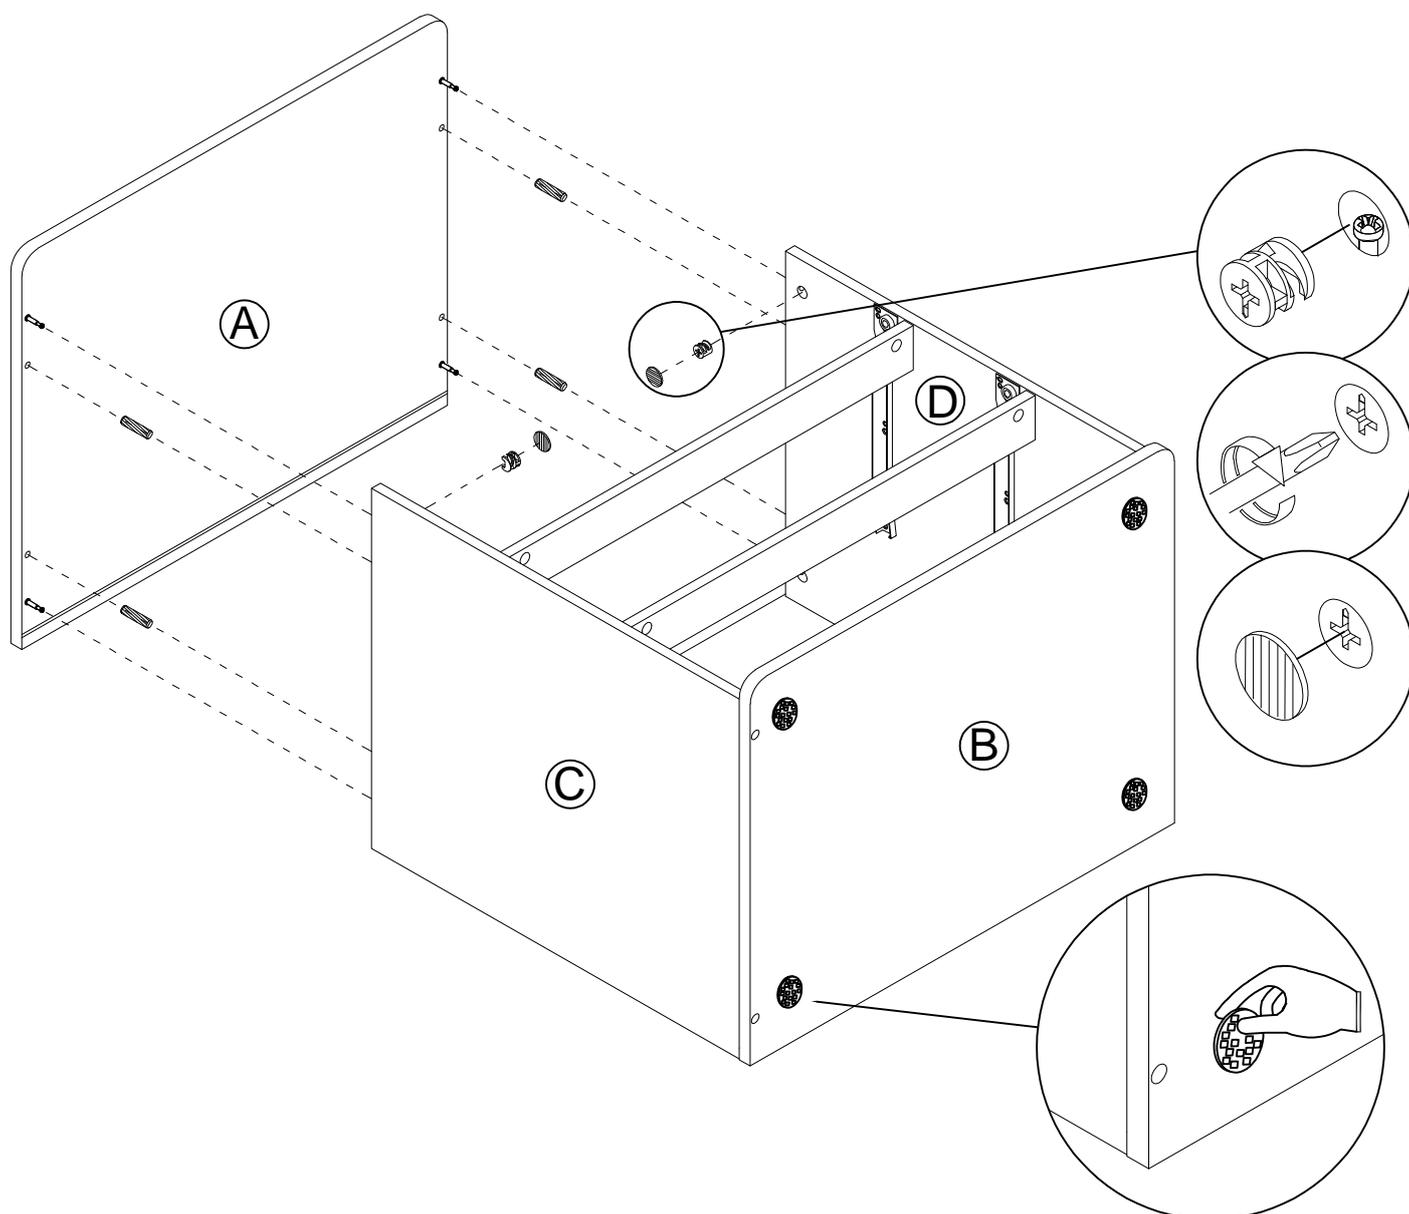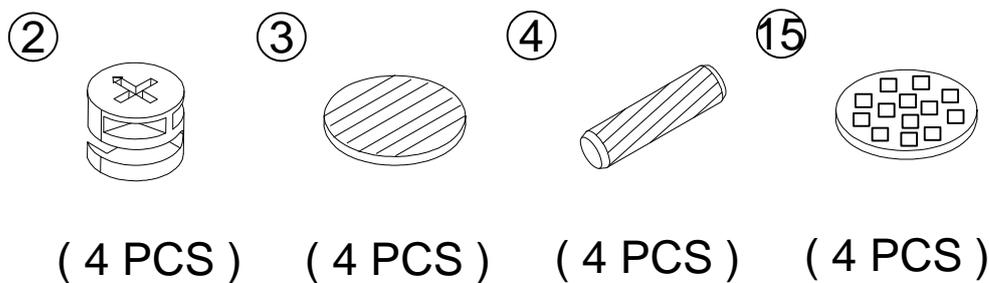


Step 7:

* Assemble the DRAWER BACK PANEL(L) to the DRAWER LEFT PANEL (J) and DRAWER RIGHT PANEL (K) by the SCREW (6) .

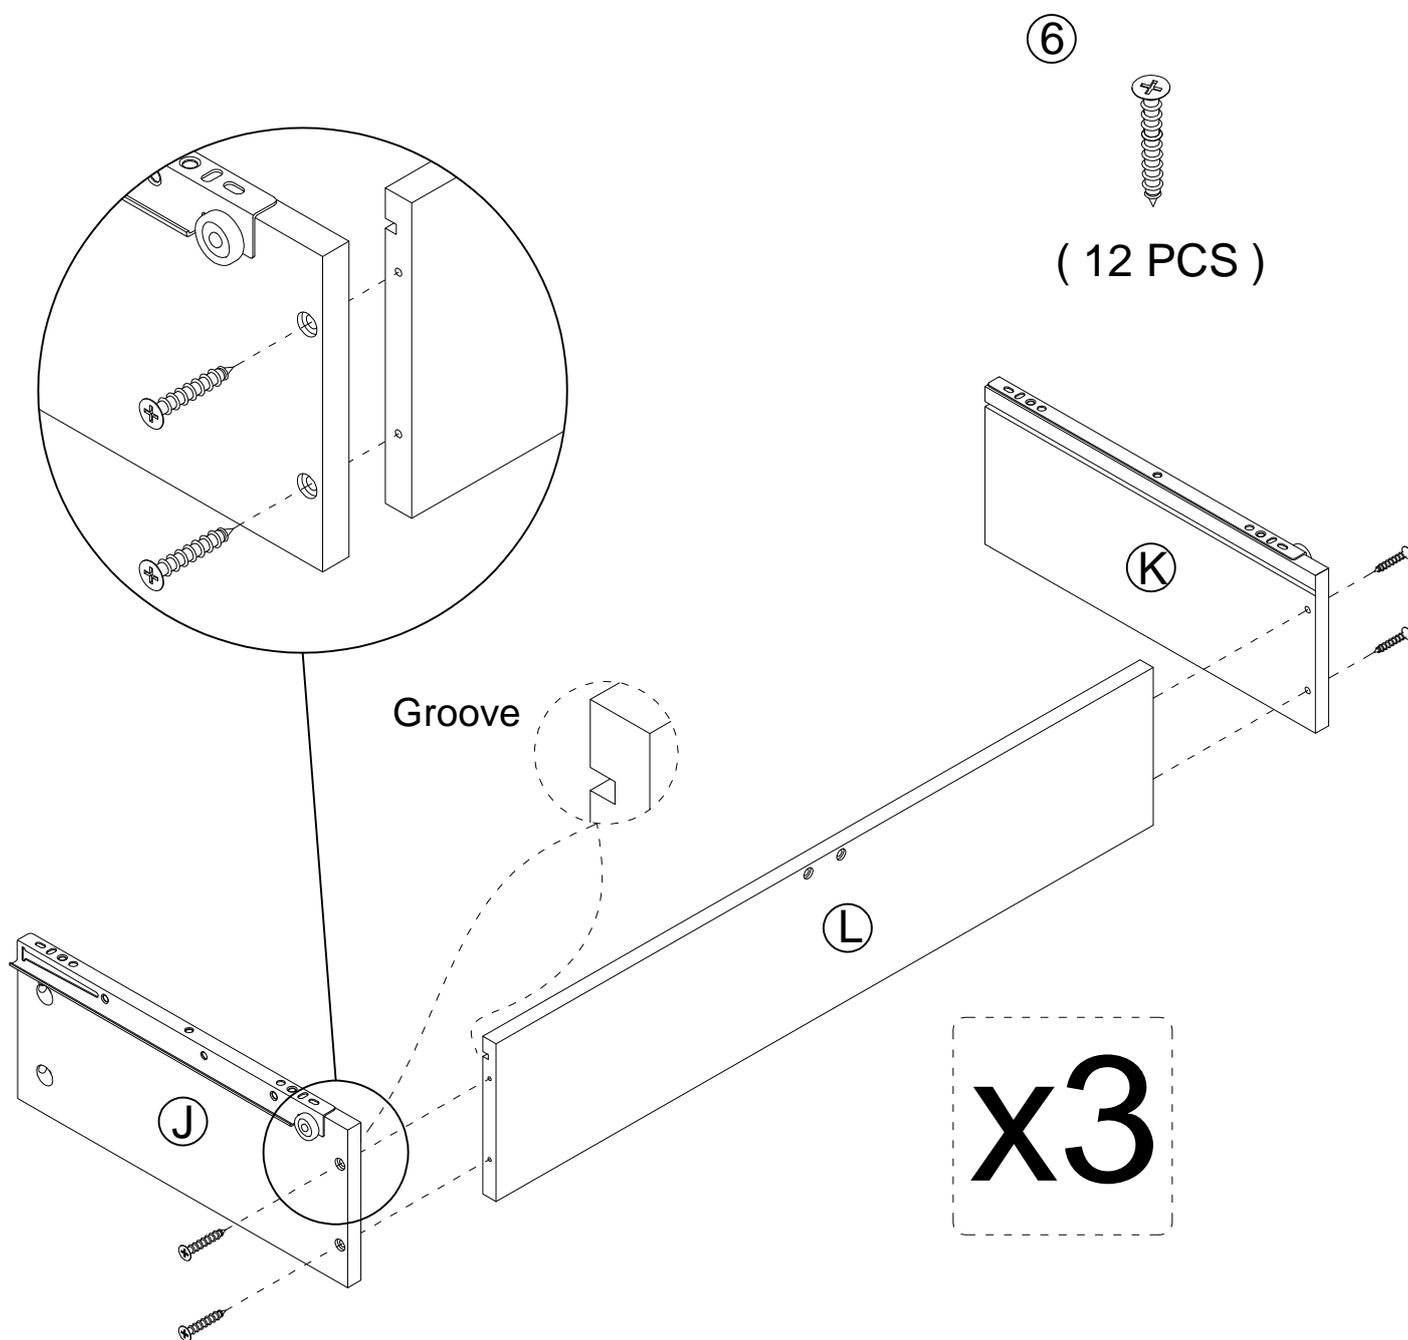

Step 8:

- * Slide in the DRAWER BOTTOM PANEL (M).

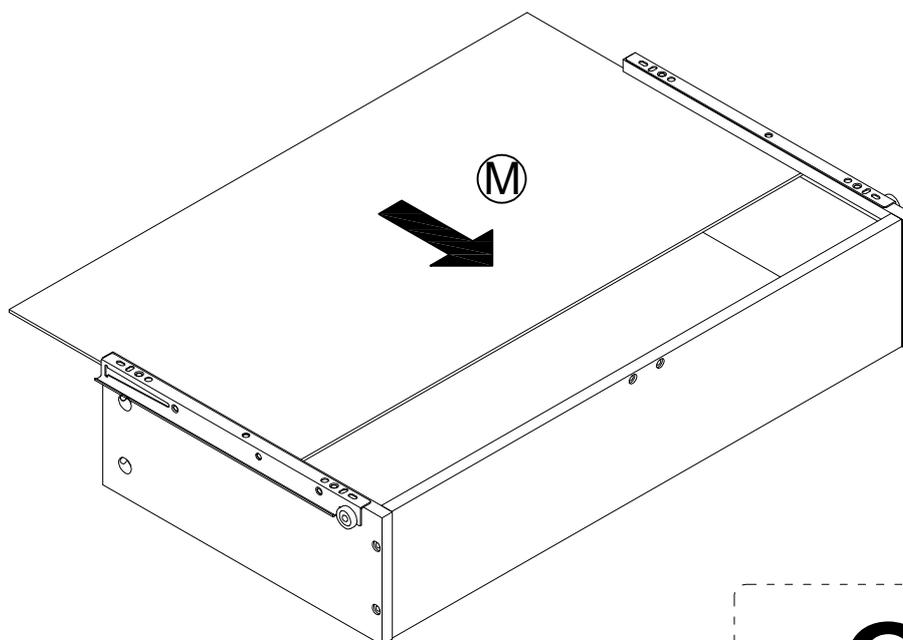

x3


Step 9:

* Assemble the DRAWER SUPPORT PANEL (I) to the DRAWER TRAY by the SCREW (6) .

⑥




(6 PCS)

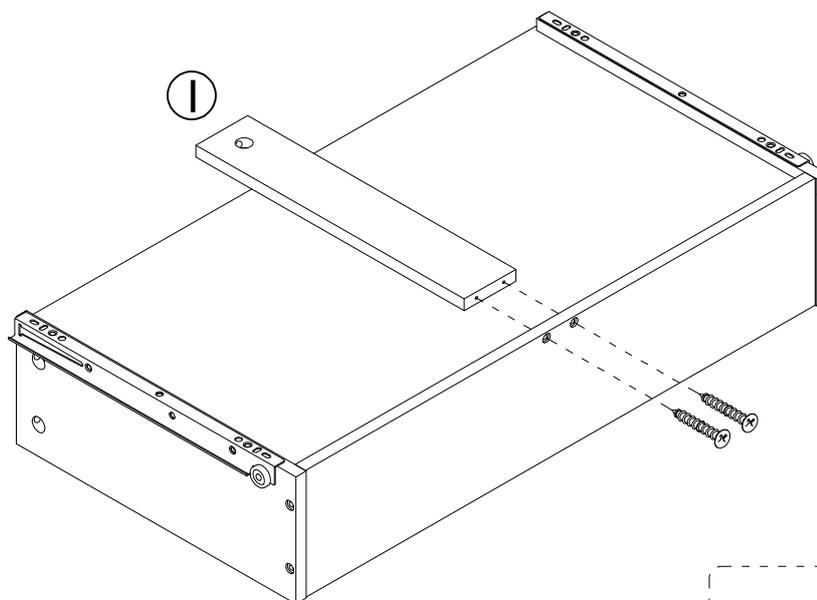

x3

Step 10:

* Insert Fifteen KD BOLT (1) to the Three DRAWER FRONT PANEL (H).

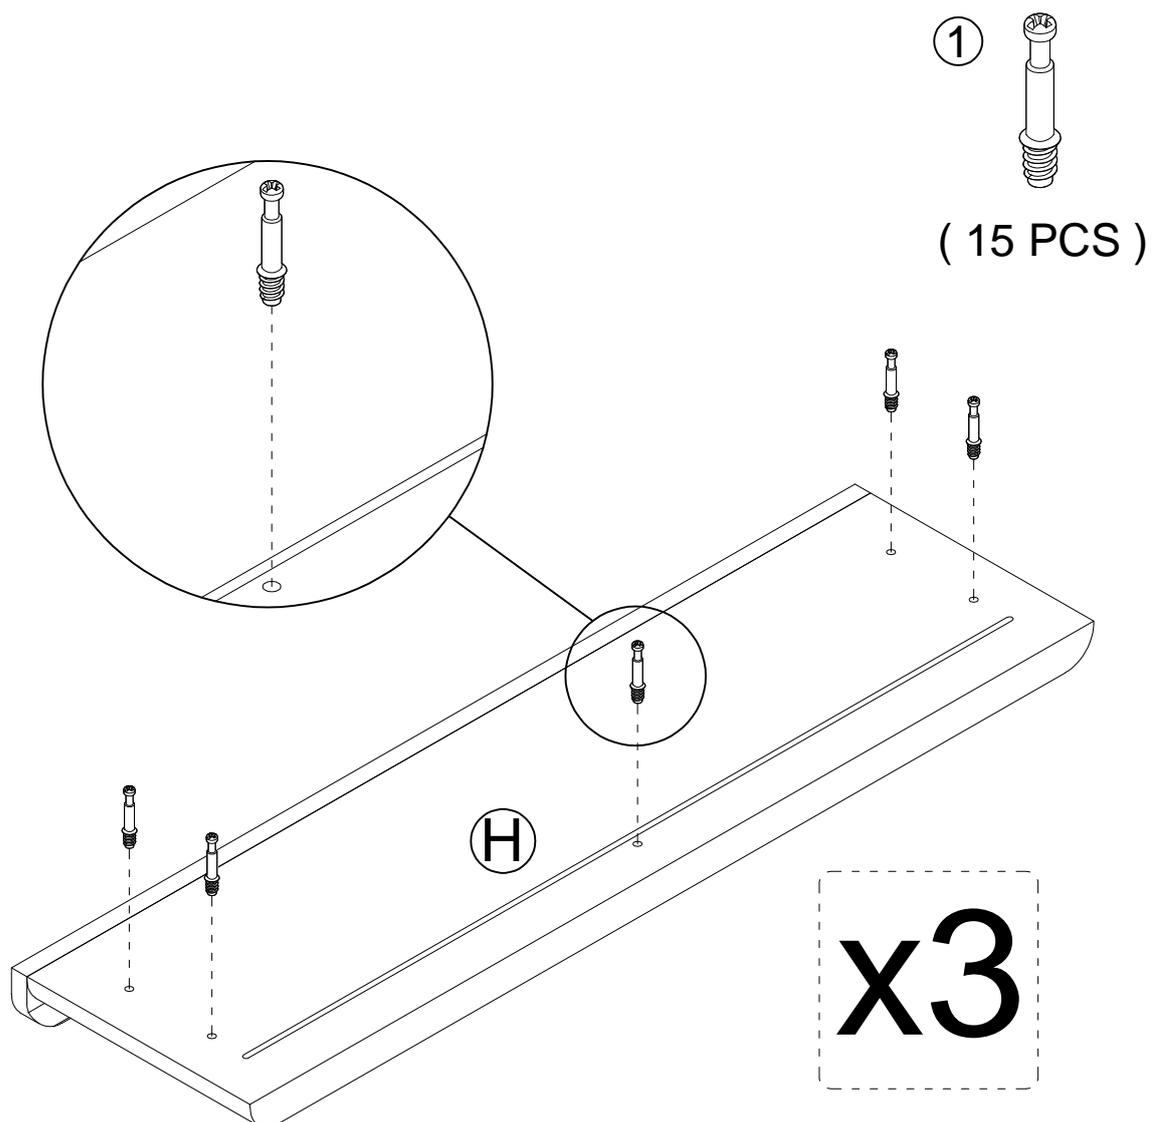


Step 11:

* Assemble the Three DRAWER FRONT PANEL (H) to the DRAWER TRAY by the Fifteen KD SMALL CAM (5) and Fifteen COVER CAP (3).


⑤



③





(15 PCS) (15 PCS)

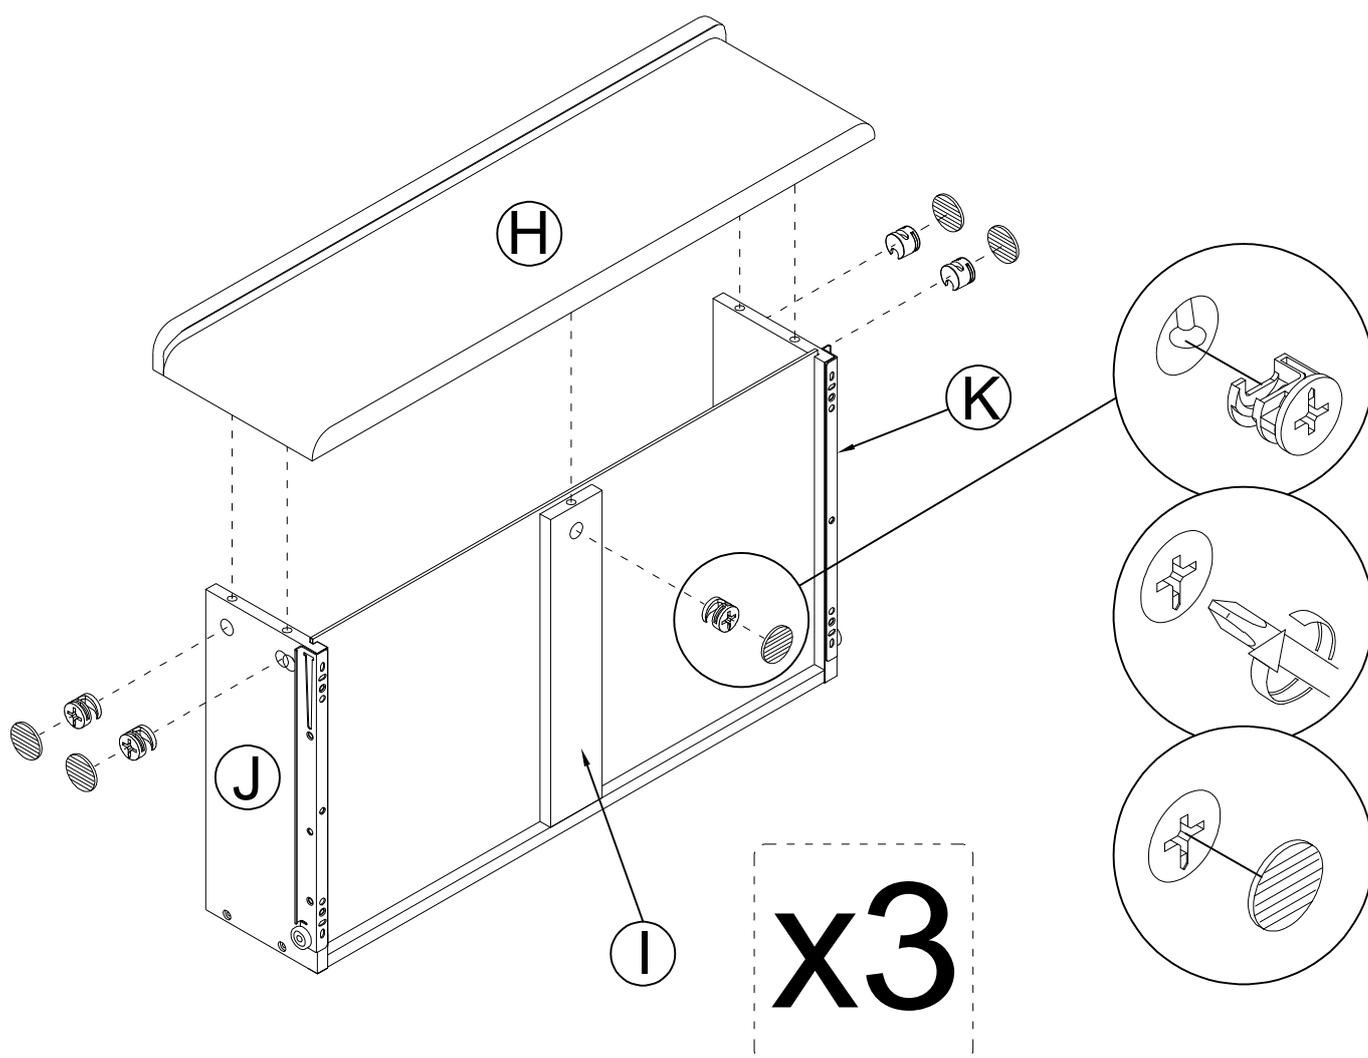

Step 12:


*Input Three Drawer tray to the stand.

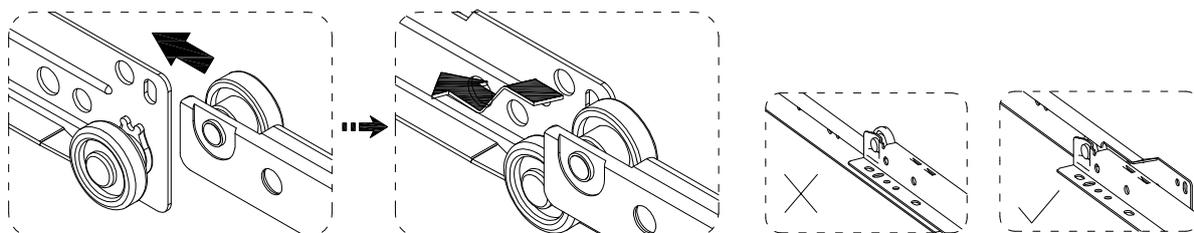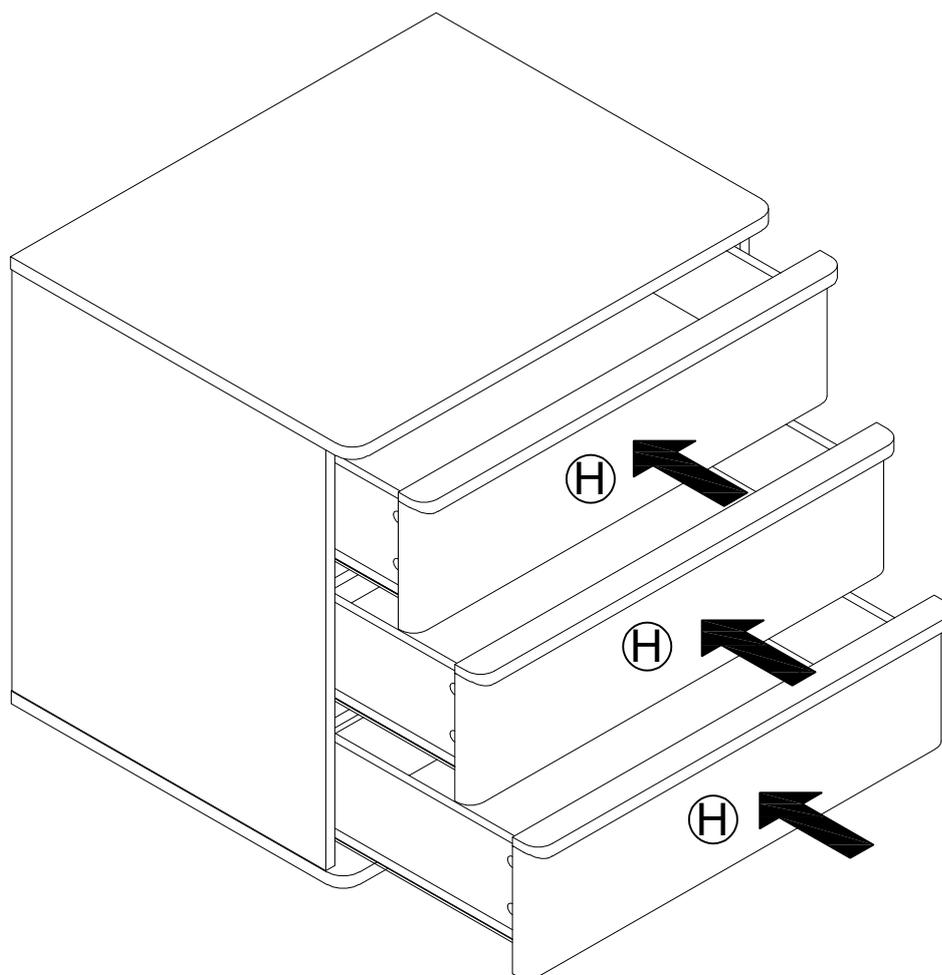

Step 13:


* Insert Eight PLASTIC WEDGE(9) and Eight SCREW(10) to the Two BACK PANEL (E).

⑨




(8 PCS)

⑩




(8 PCS)

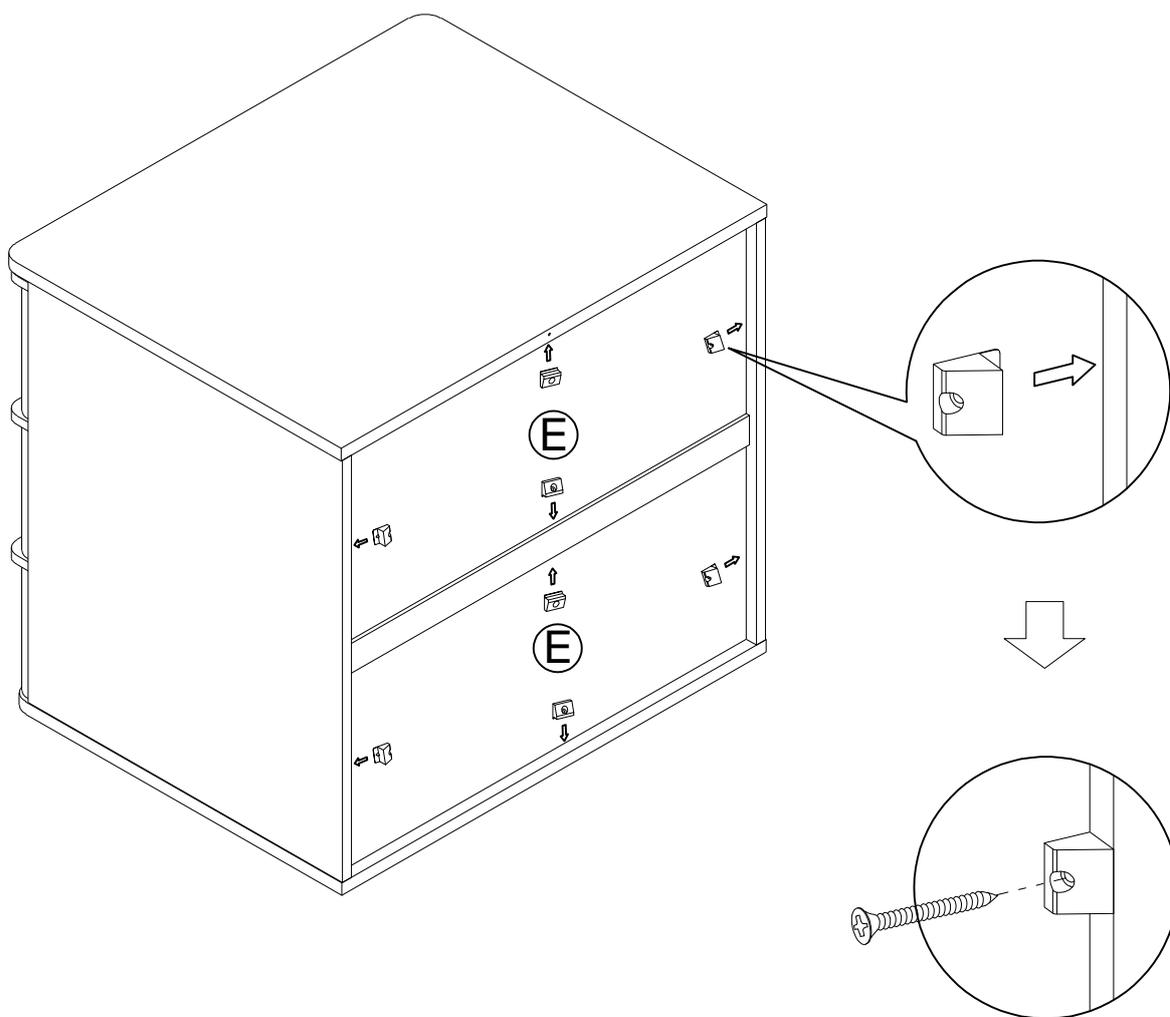

Step 14:

* Attach anti-tipping straps to the back of the stand.

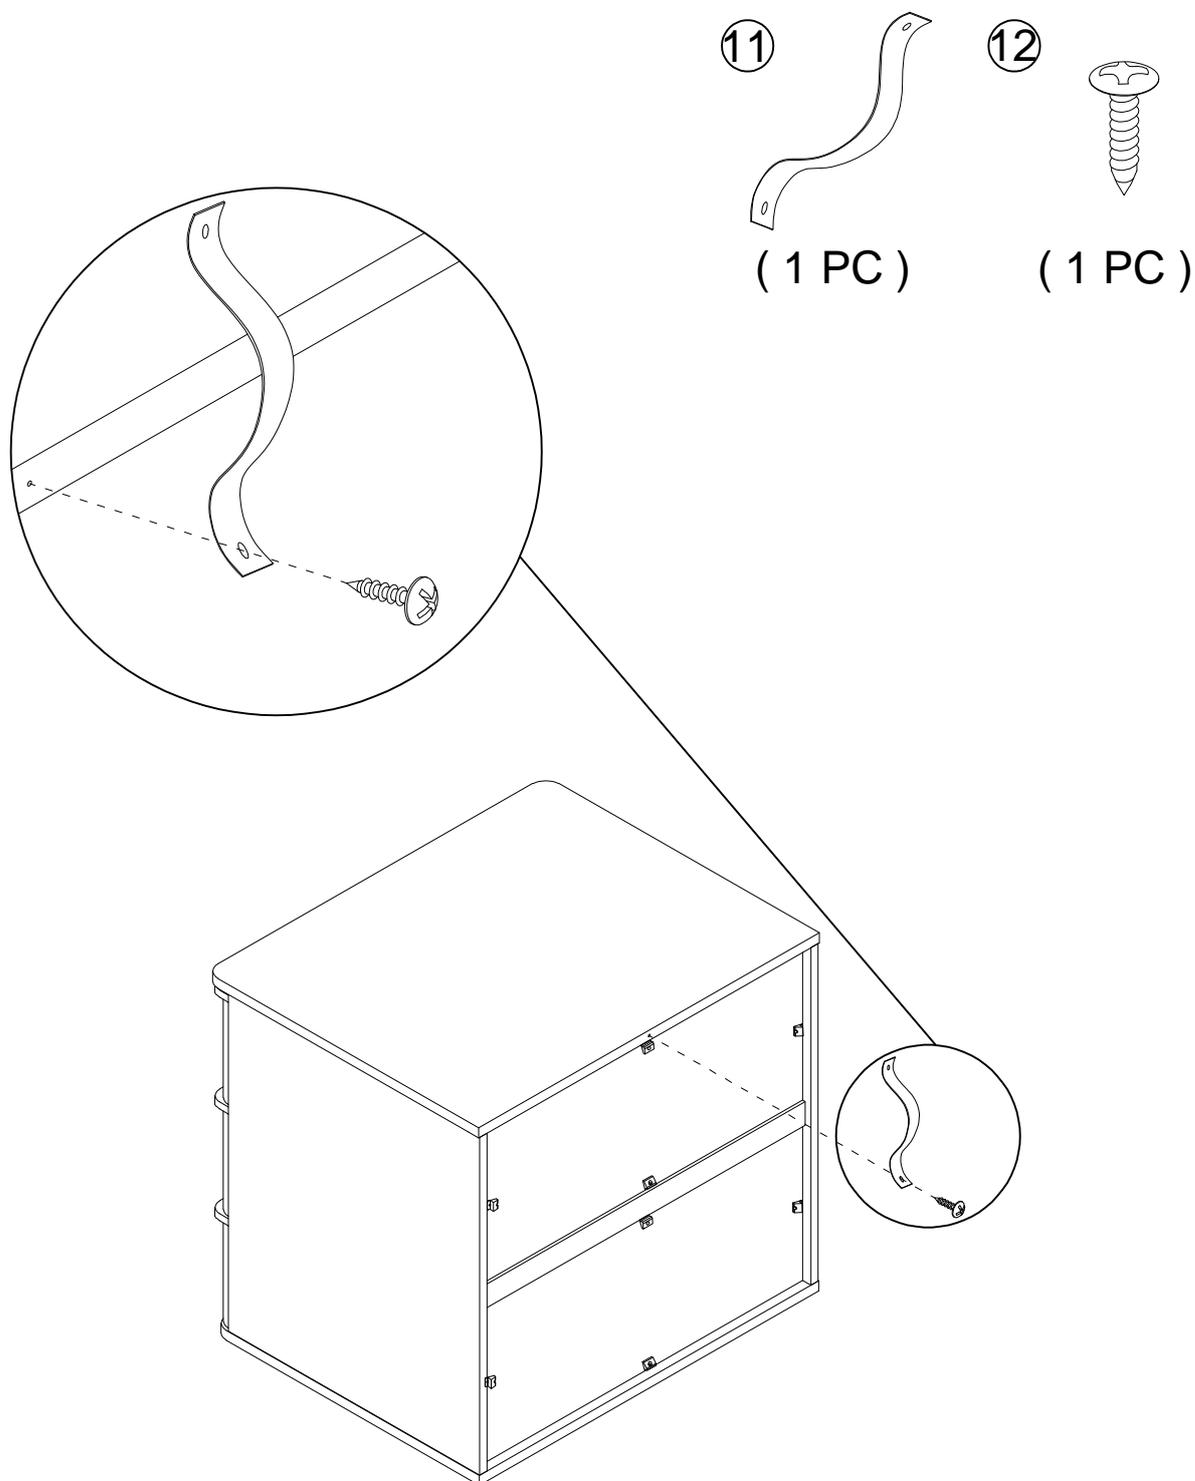

Step 15:


1st- With your pencil, strike a mark through the center of the hole in the SAFETY STRAP.

2nd- Drill a 3/8" hole on the mark.

3rd- FURNITURE TIPPING RESTRAINT KIT (14) into the hole until it is even with the surface of the wall.

4th- Turn the LONG SCREW through the hole in the SAFETY STRAP and into the WALL ANCHOR.

NOTE: You will need to turn the LONG SCREW multiple turns to completely tighten and secure your unit.

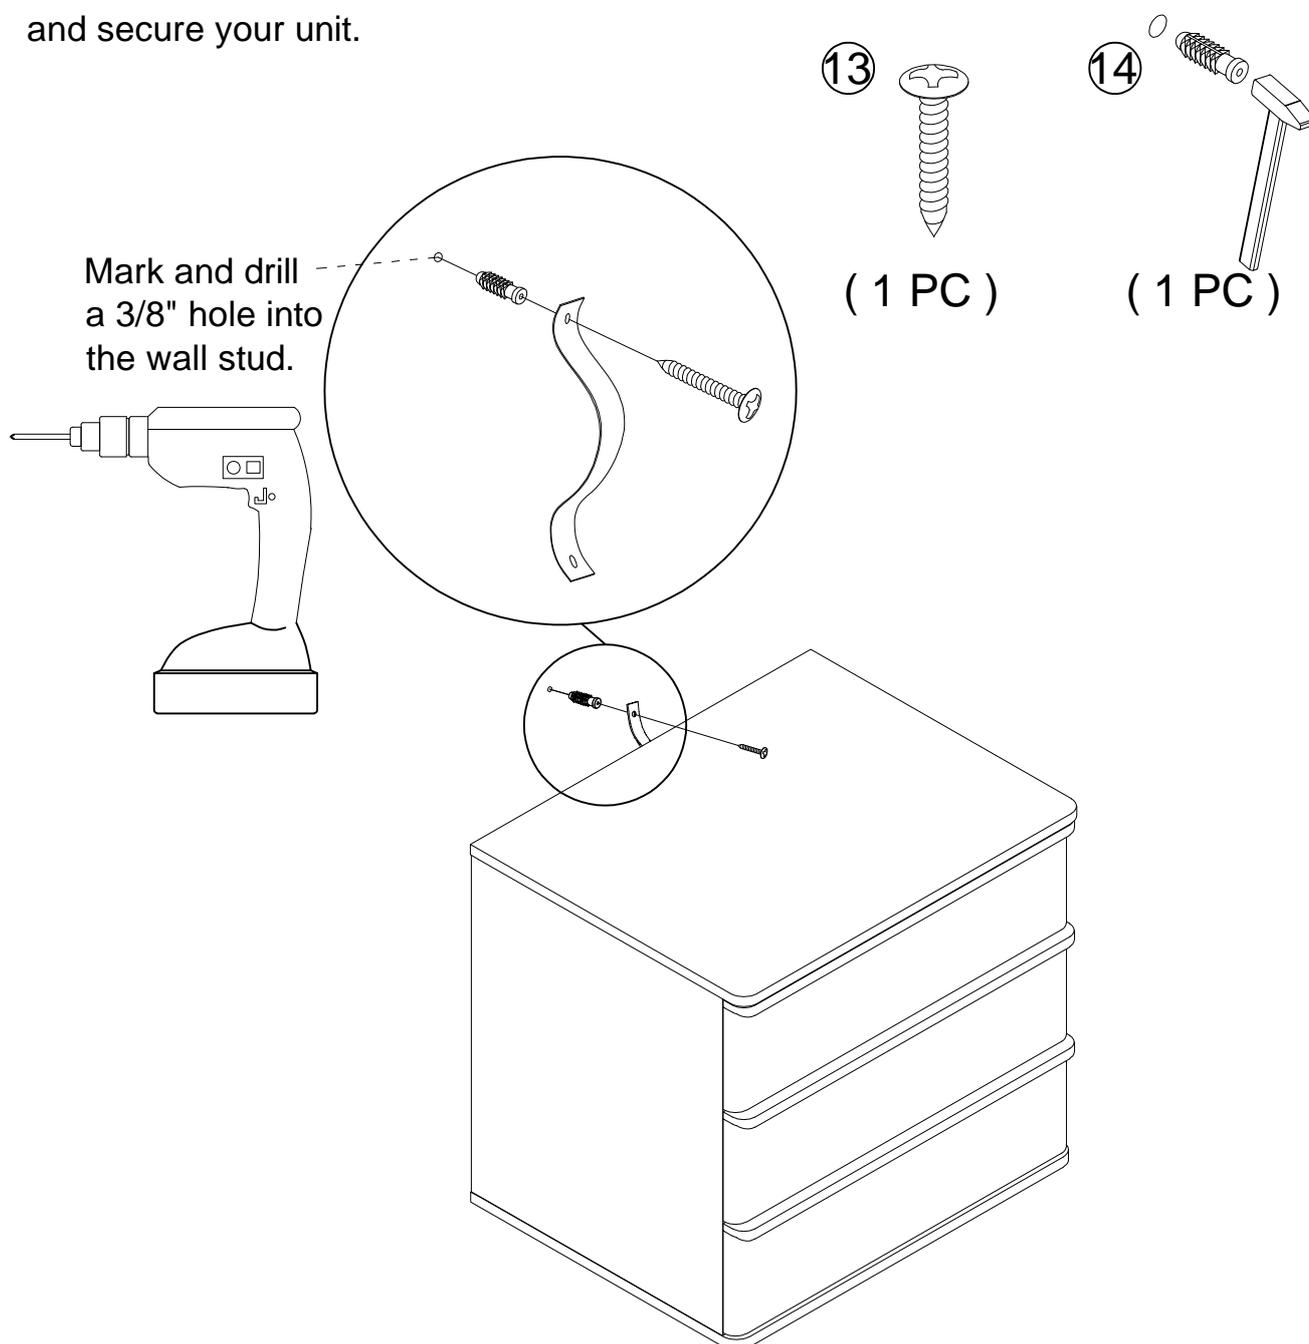



WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.



319 Ridge Rd. Dayton, NJ 08810

908-888-0818