
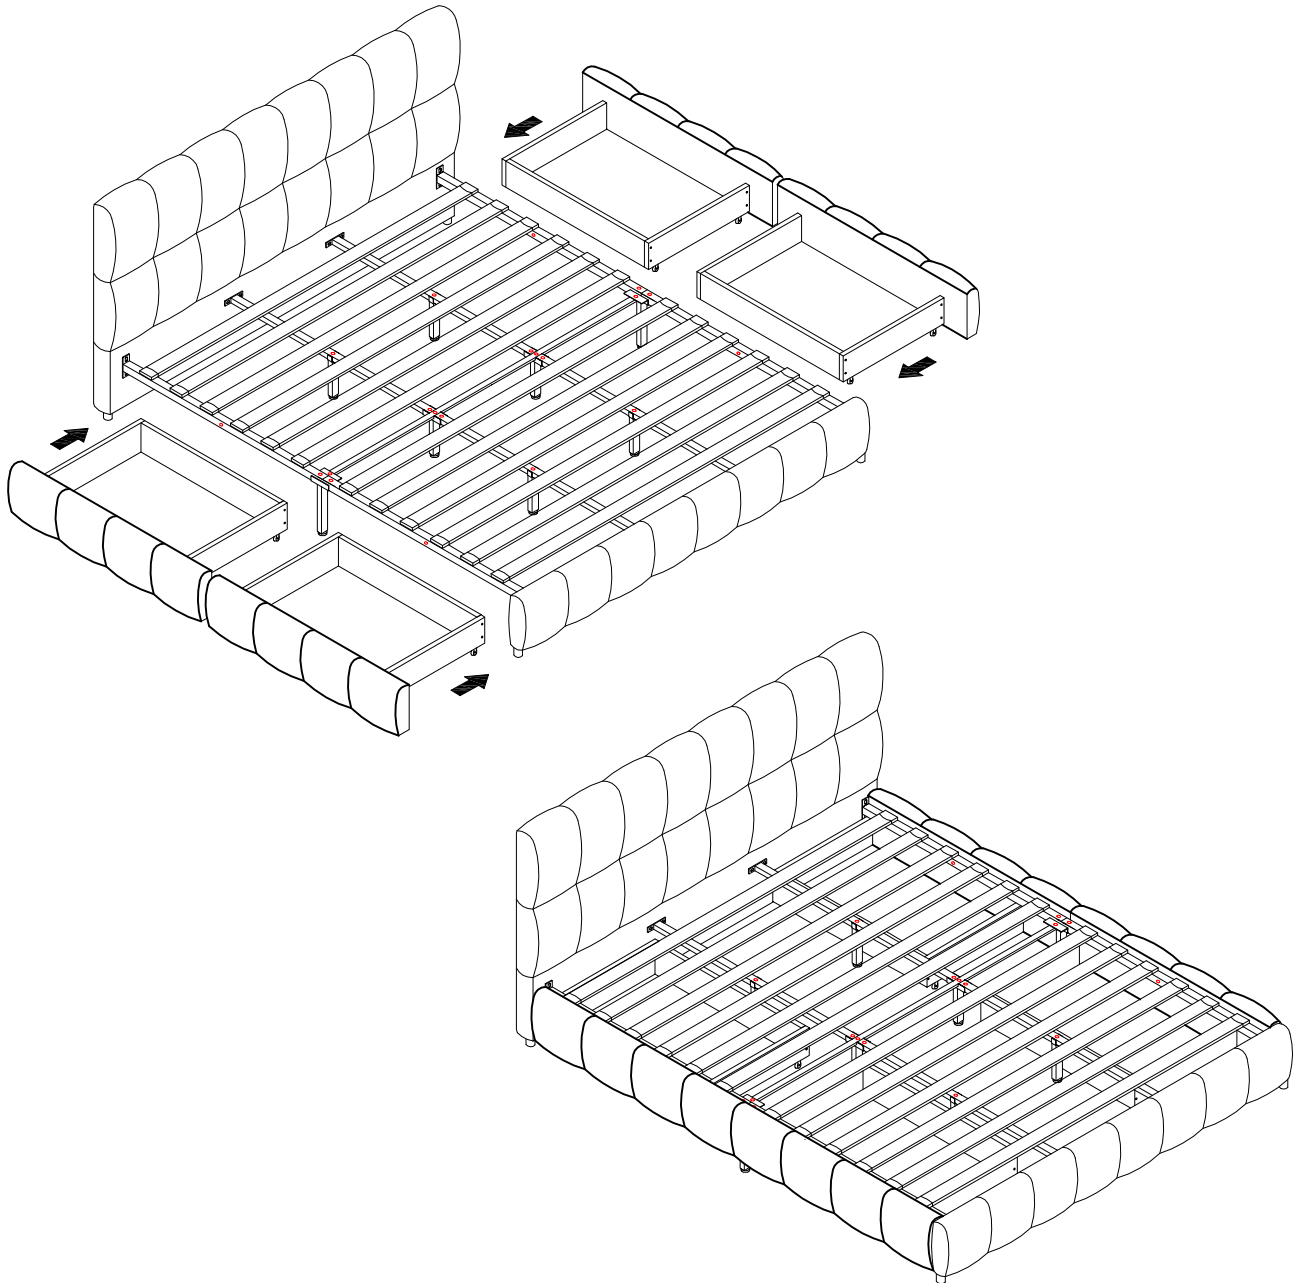
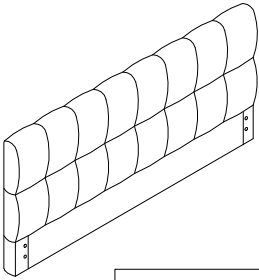
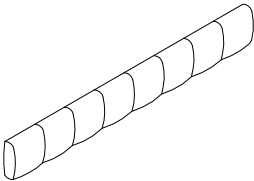
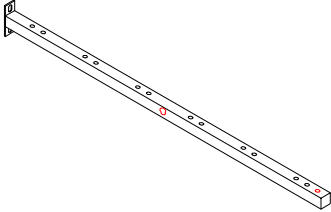
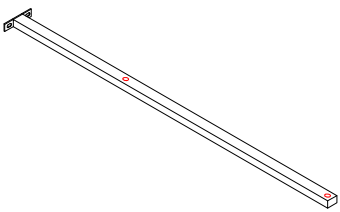
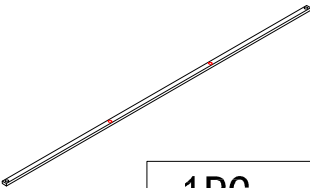




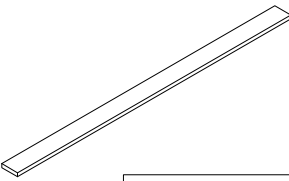
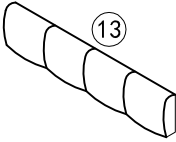




ASSEMBLY INSTRUCTIONS

2620 K1






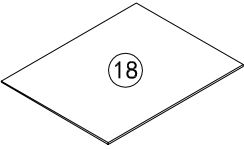


PARTS AND HARDWARE


① Headboard  1PC	② Footboard  1PC	③ Side Rail Support  4PCS	④ Center support rail  4PCS
⑤ Center cross bar  1PC	⑥ Side Rail Feet  2PCS	⑦ Center Support Leg  2PCS	⑧ Support Leg  6PCS
⑨ Leg  4PCS	⑩ Single Sided Plastic cap  24PCS	⑪ Slat  12PCS	⑫  16PCS
⑬  4PCS	⑭  4PCS	⑮  4PCS	⑯  4PCS
⑰  4PCS	⑱  4PCS		

PARTS AND HARDWARE

HARDWARE LIST:


A  m8*30mm 18PCS	B  m8*45mm 14PCS	C  m6*25mm 4PCS	D  m8 32PCS
E  m8*19mm 32PCS	F  m8 1PC	G  24PCS	H  24+2PCS
I  8*30mm 24PCS	J  8*15mm 64PCS	K  1PC	

STEP :Packing Details

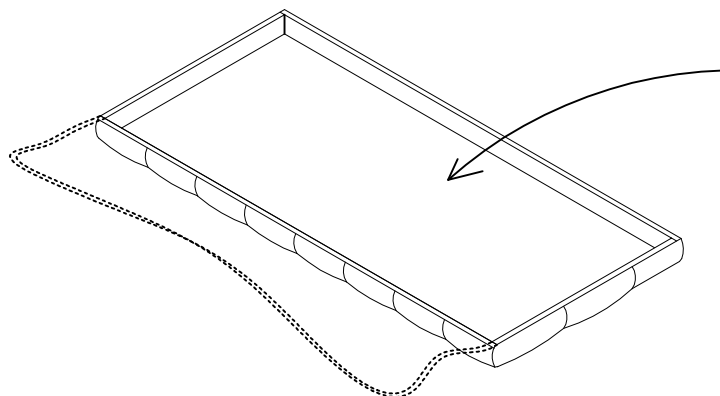


All components inside

STEP 1

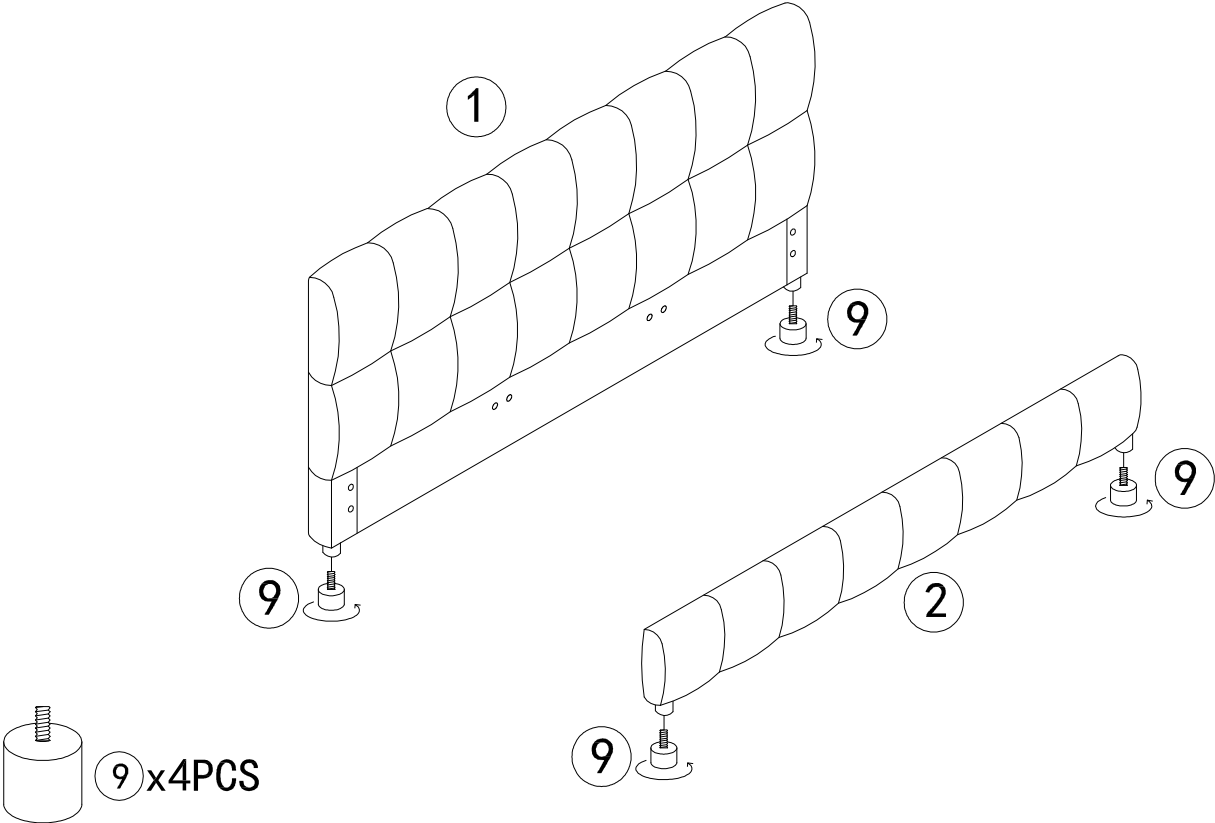


STEP 2

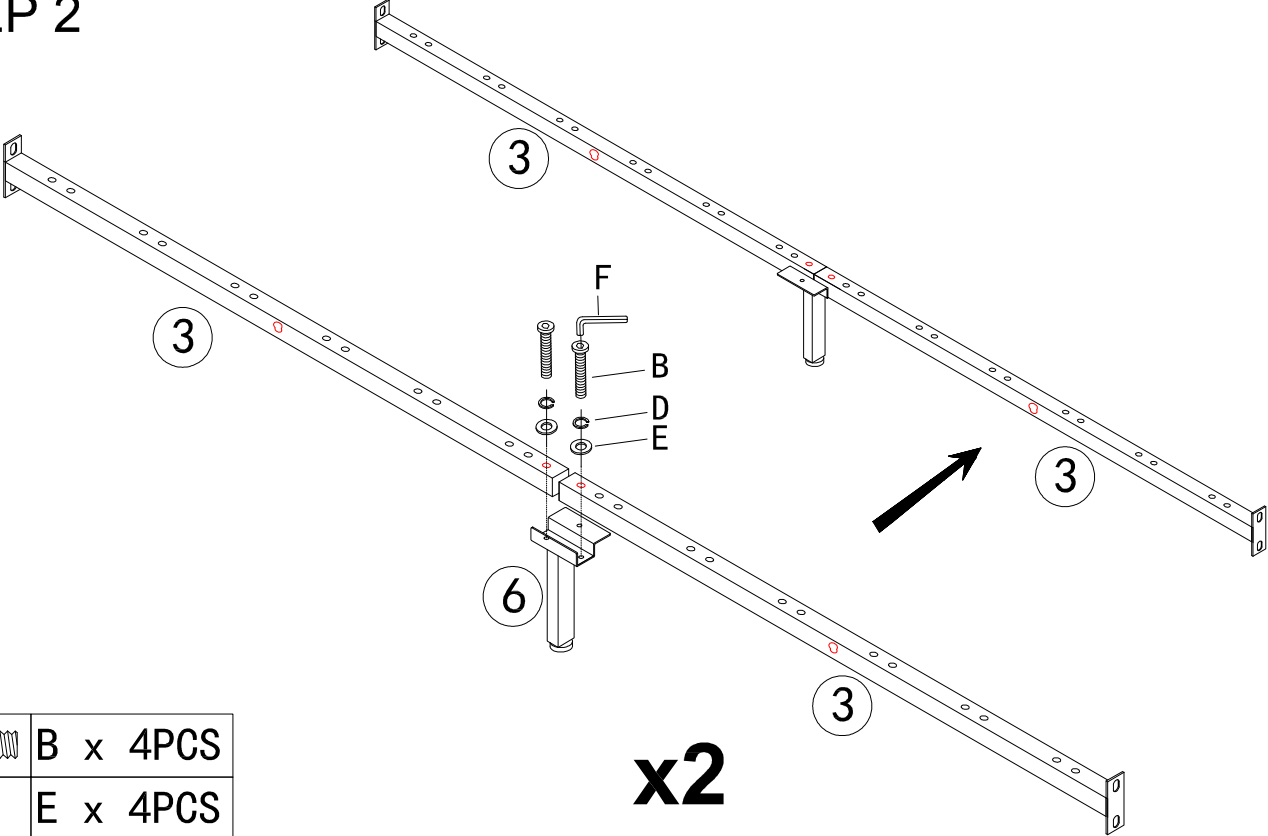

	B x 4PCS
	E x 4PCS
	D x 4PCS
	F x 1PC


STEP 4

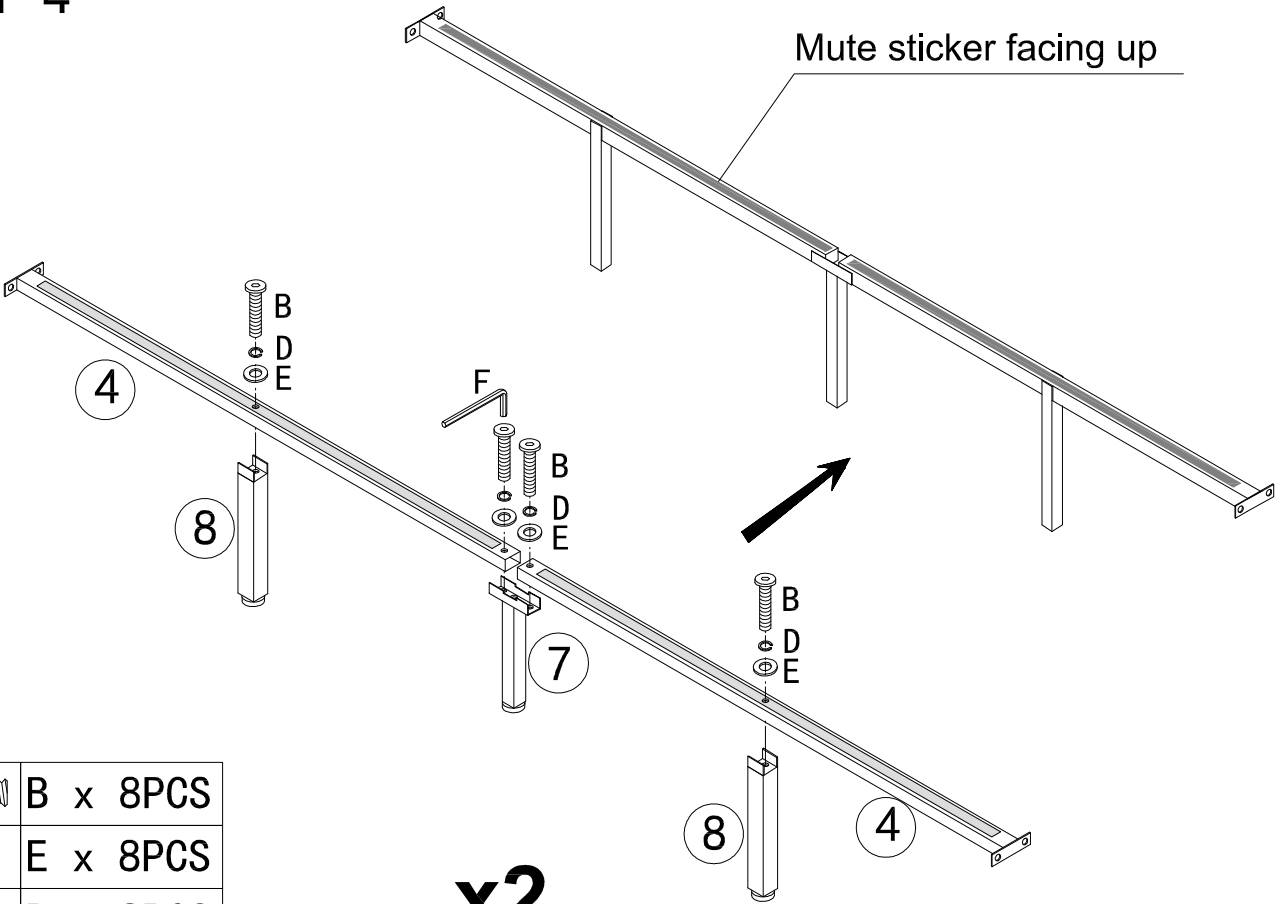

x2


	B x 8PCS
	E x 8PCS
	D x 8PCS
	F x 1PC


STEP 5

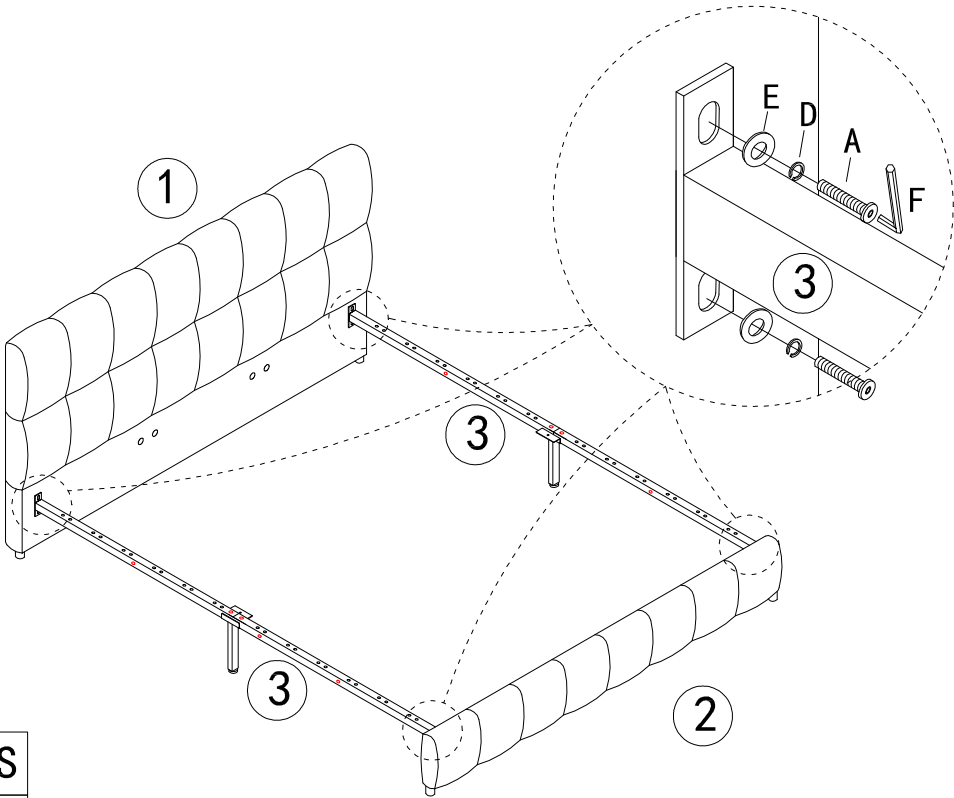


	A x 8PCS
	E x 8PCS
	D x 8PCS
	F x 1PC


STEP 5

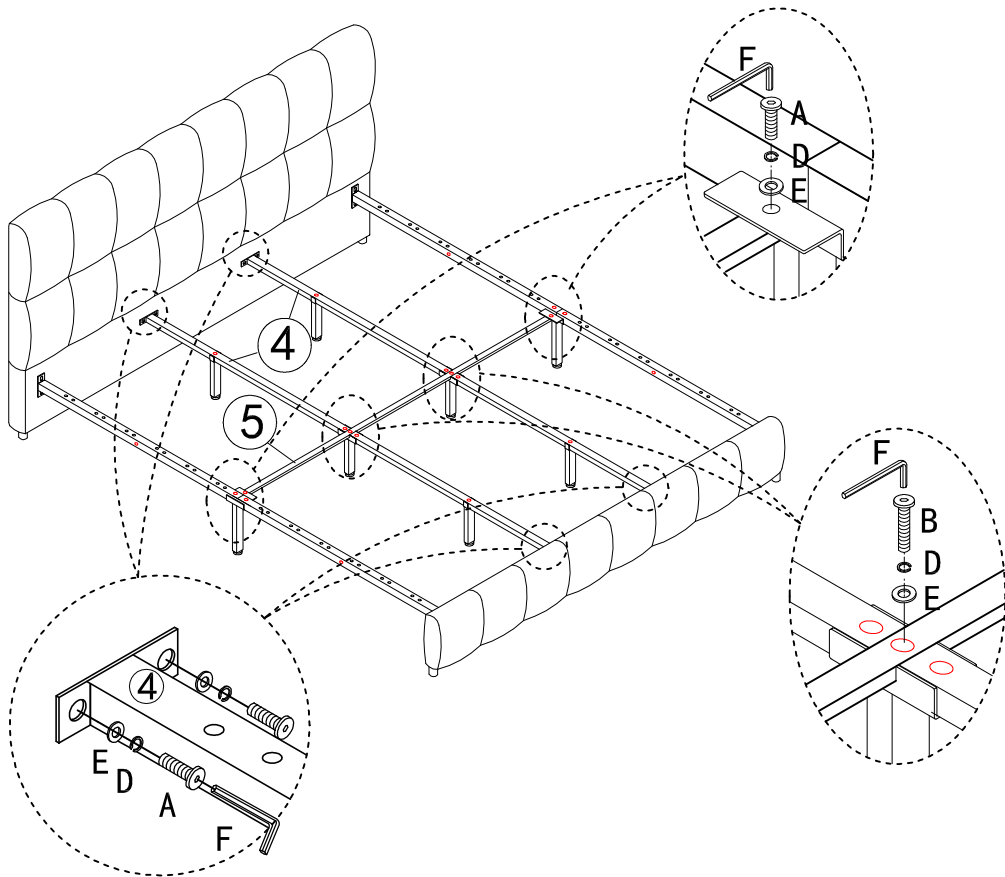

	B x 2PCS
	A x10PCS
	E x12PCS
	D x12PCS
	F x 1PC

STEP 6



	
12PCS	24PCS

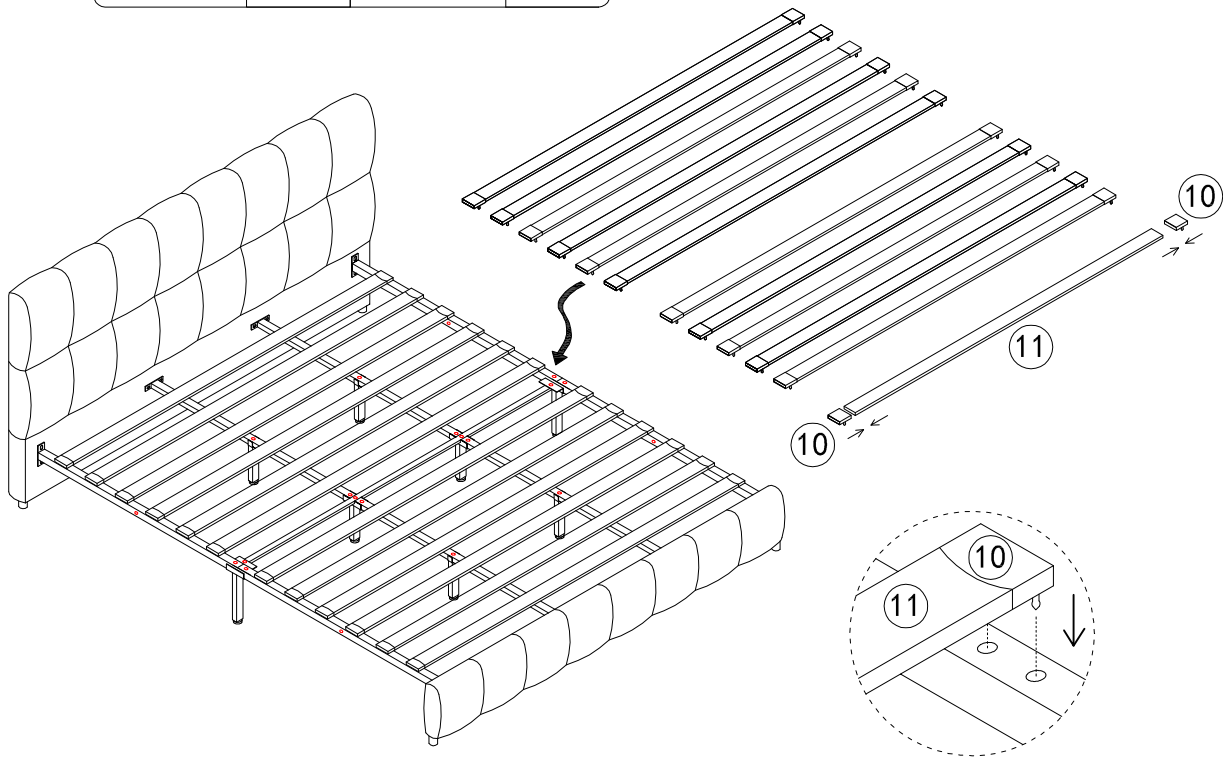



STEP 9

THIS IS HOW A CAM NUT WORKS...

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




THE HEAD OF BOLT GOES INTO THE WIDE MOUTH OF THE CAM NUT. YOU THEN TURN THE NUT SO THE NARROW PART CLOSES OVER THE BOLT.

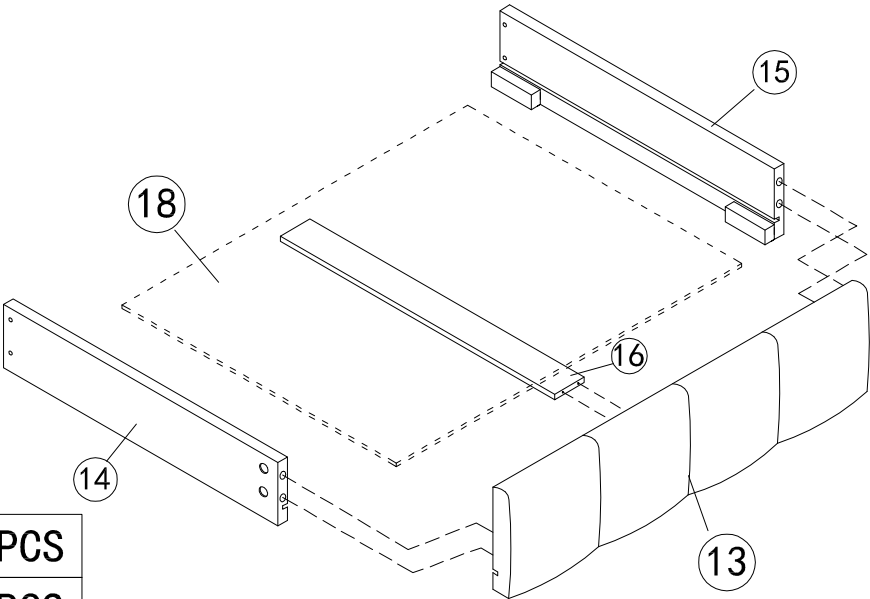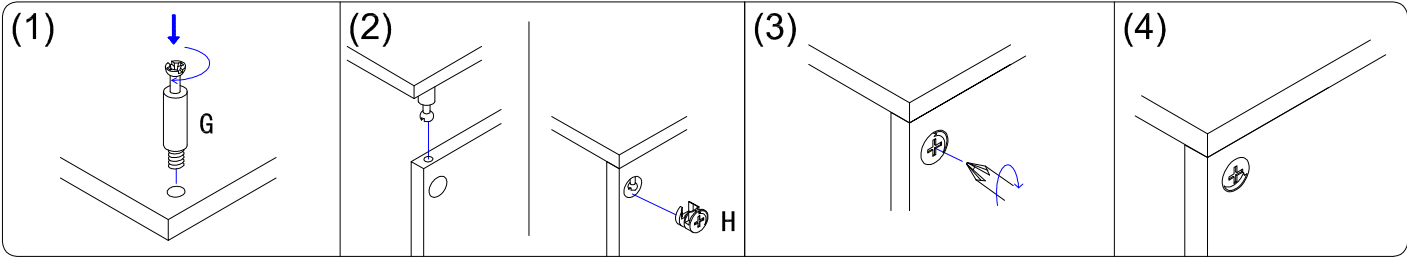

x4

	Gx24PCS
	Hx24PCS


STEP 10

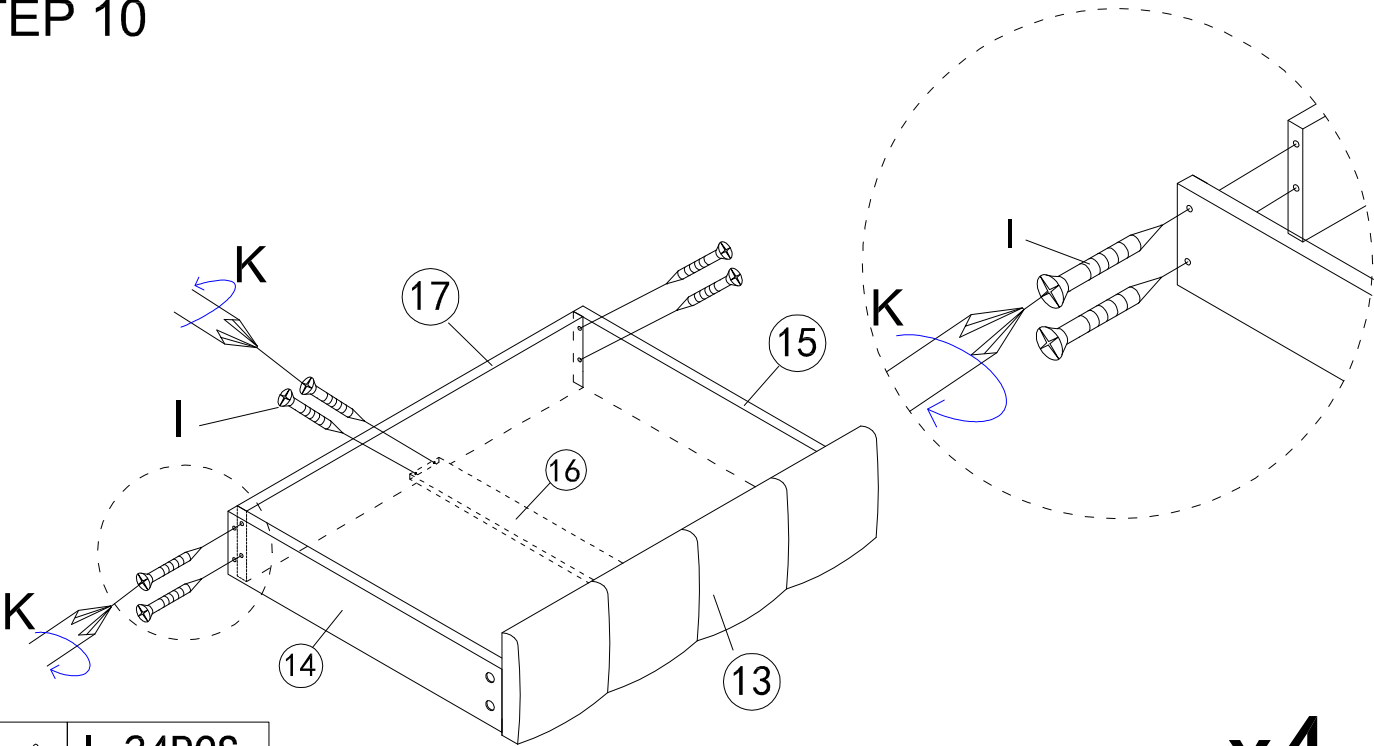


x4


	Ix24PCS
	Kx1PC

STEP 11

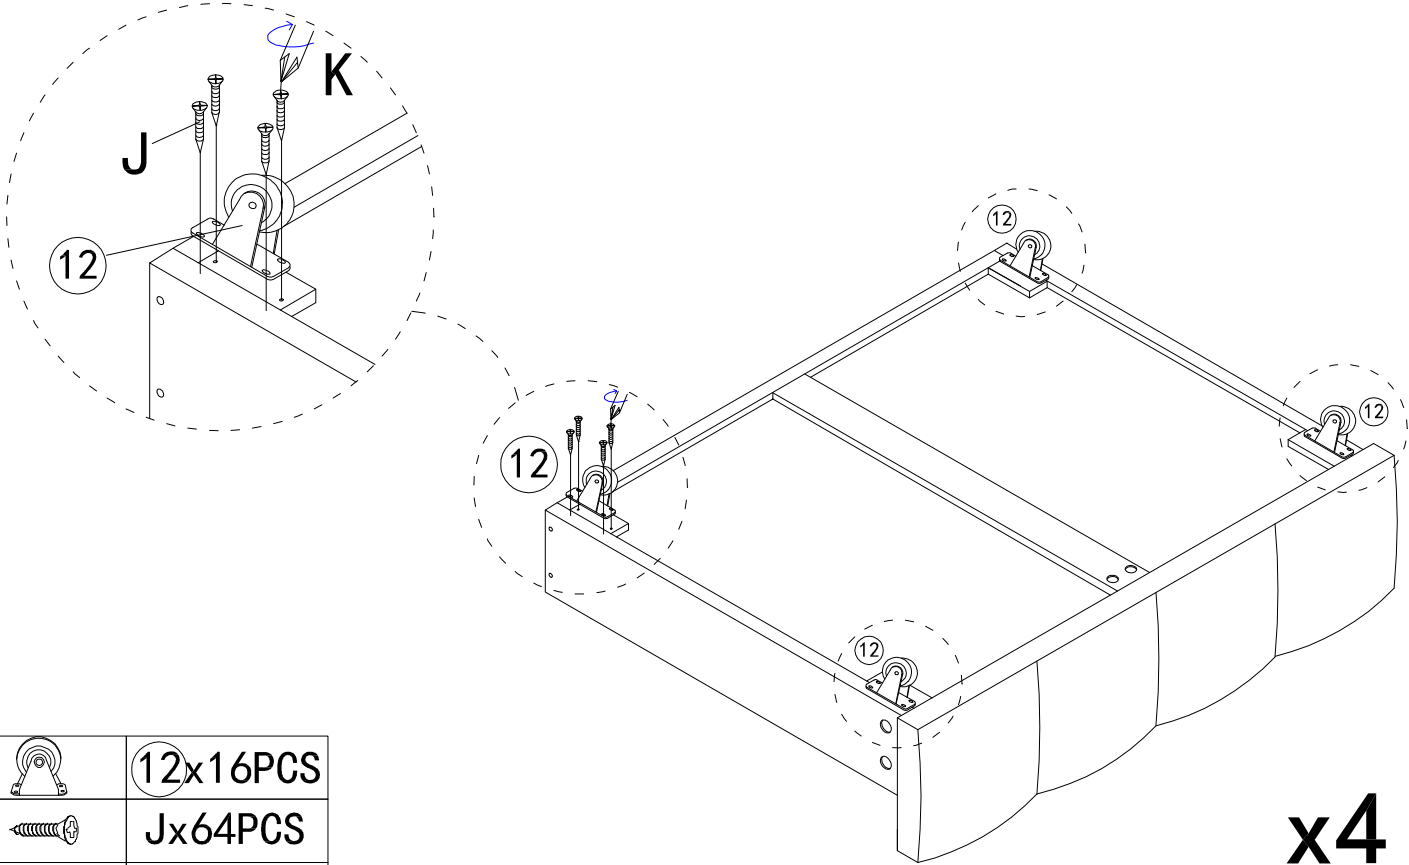

	12x16PCS
	Jx64PCS
	Kx1PC


STEP 12

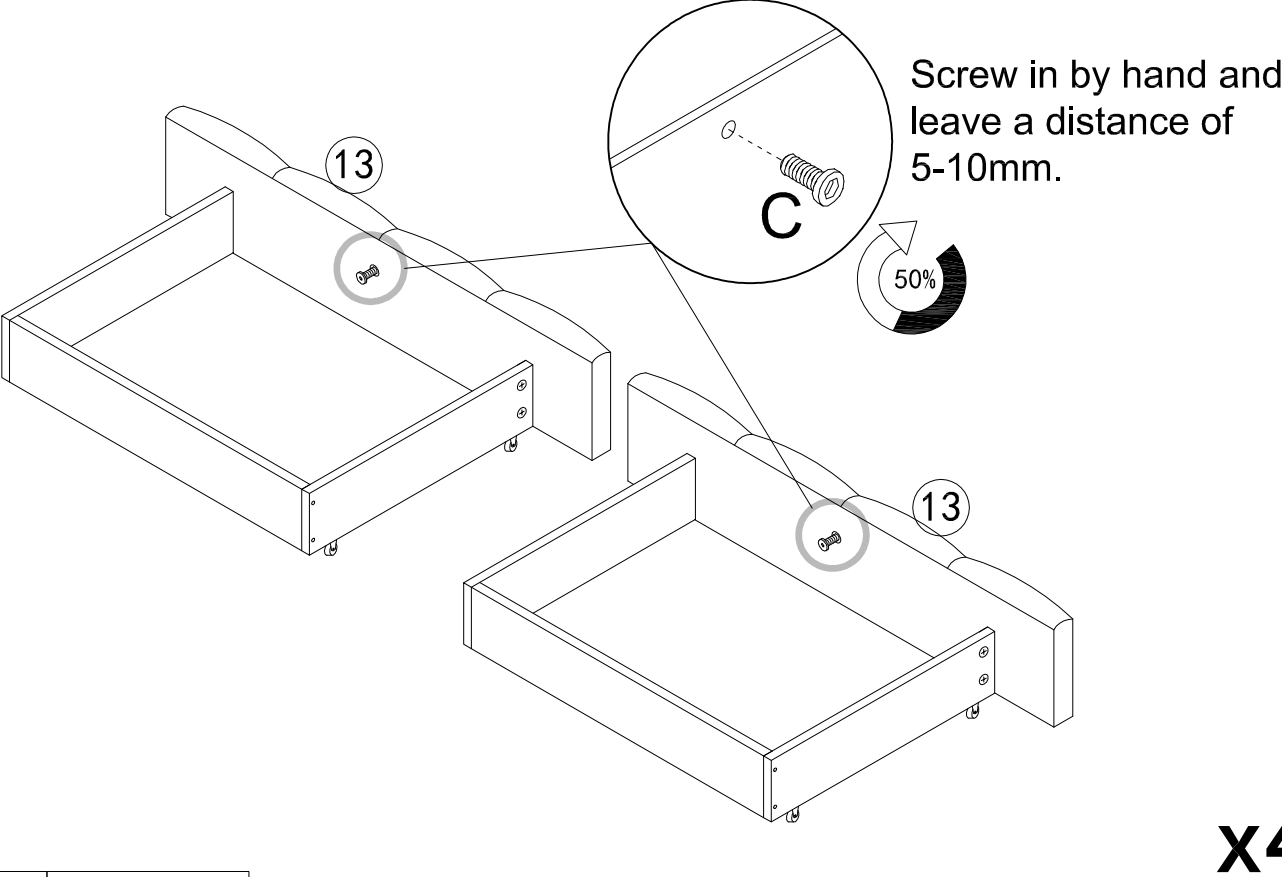

	C x4PCS
--	---------

STEP 13

Drawer panel screw hang into side cross beam hole.

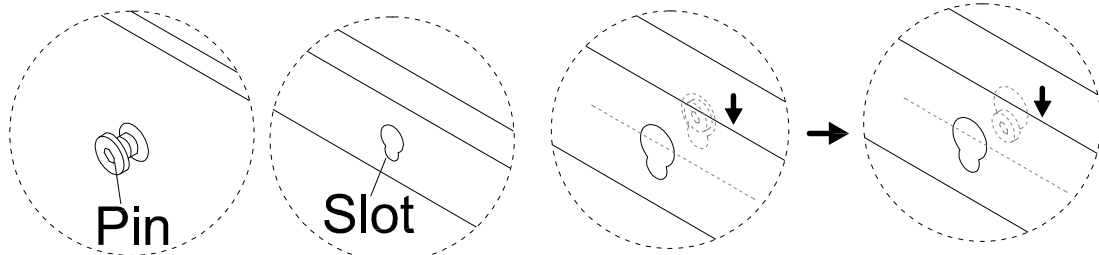

There is a screw head on the drawer board. Hang them in the hole as shown in the figure.

