


# ASSEMBLY INSTRUCTIONS

## 30" Bathroom Vanity

N710P228374

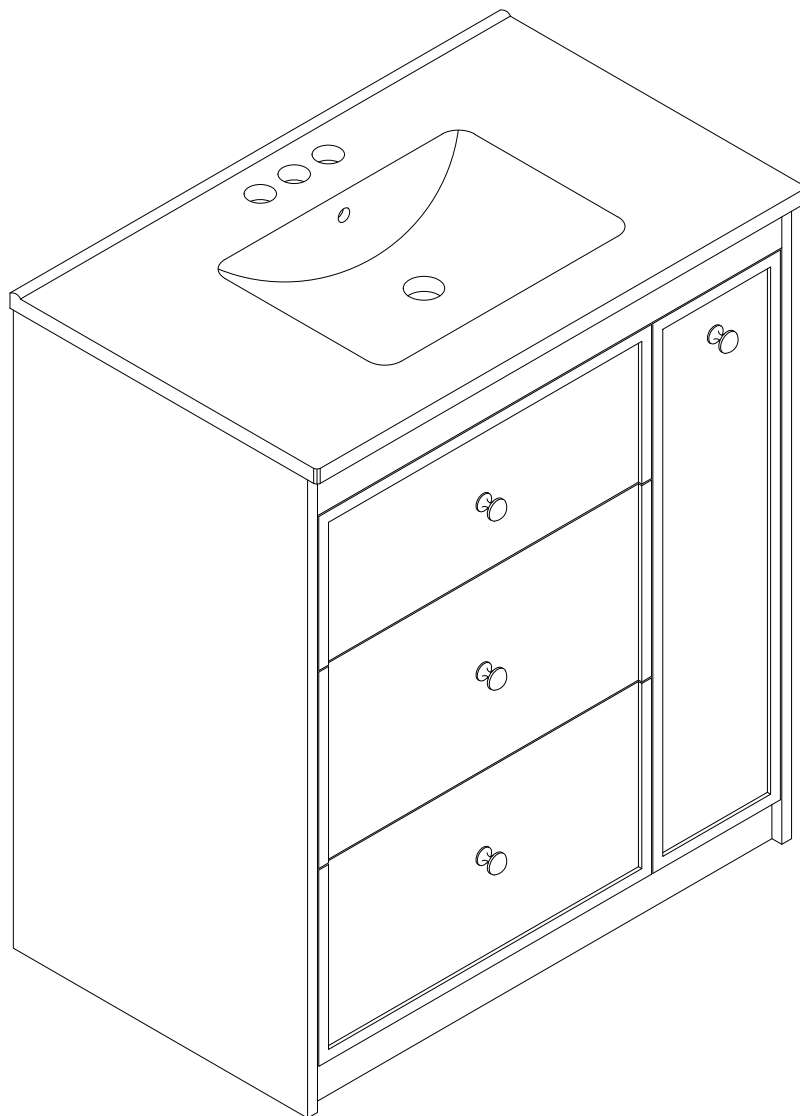

**PLEASE DO NOT RETURN TO STORE**



**Please do not return this product to the retailer!!  
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.







# Before Installation


**Important-Please read these instructions fully before starting assembly**









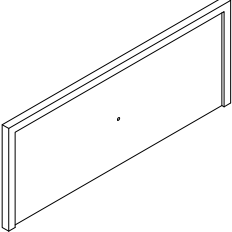
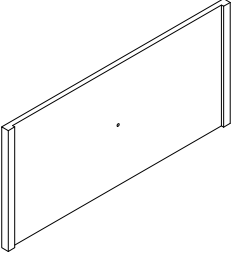
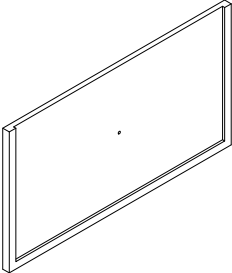
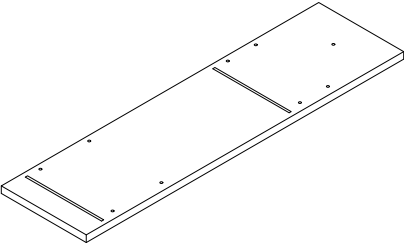
Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

## Cam Lock Assembly Instructions

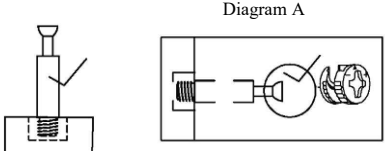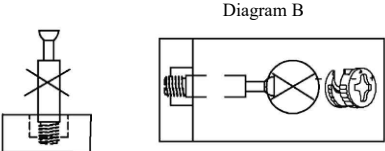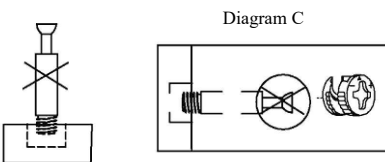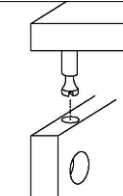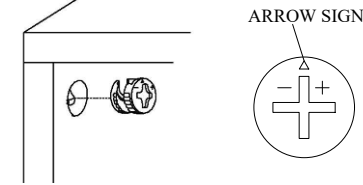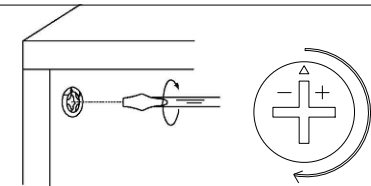
<p>Diagram A</p> 	<p>Insert Cam Bolt into hole as shown in diagram A.</p>
<p>Diagram B</p> 	<p>Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.</p>
<p>Diagram C</p> 	<p>Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.</p>
	<p>Connect the panels together.</p>
	<p>Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.</p>
	<p>To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. *Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</p>

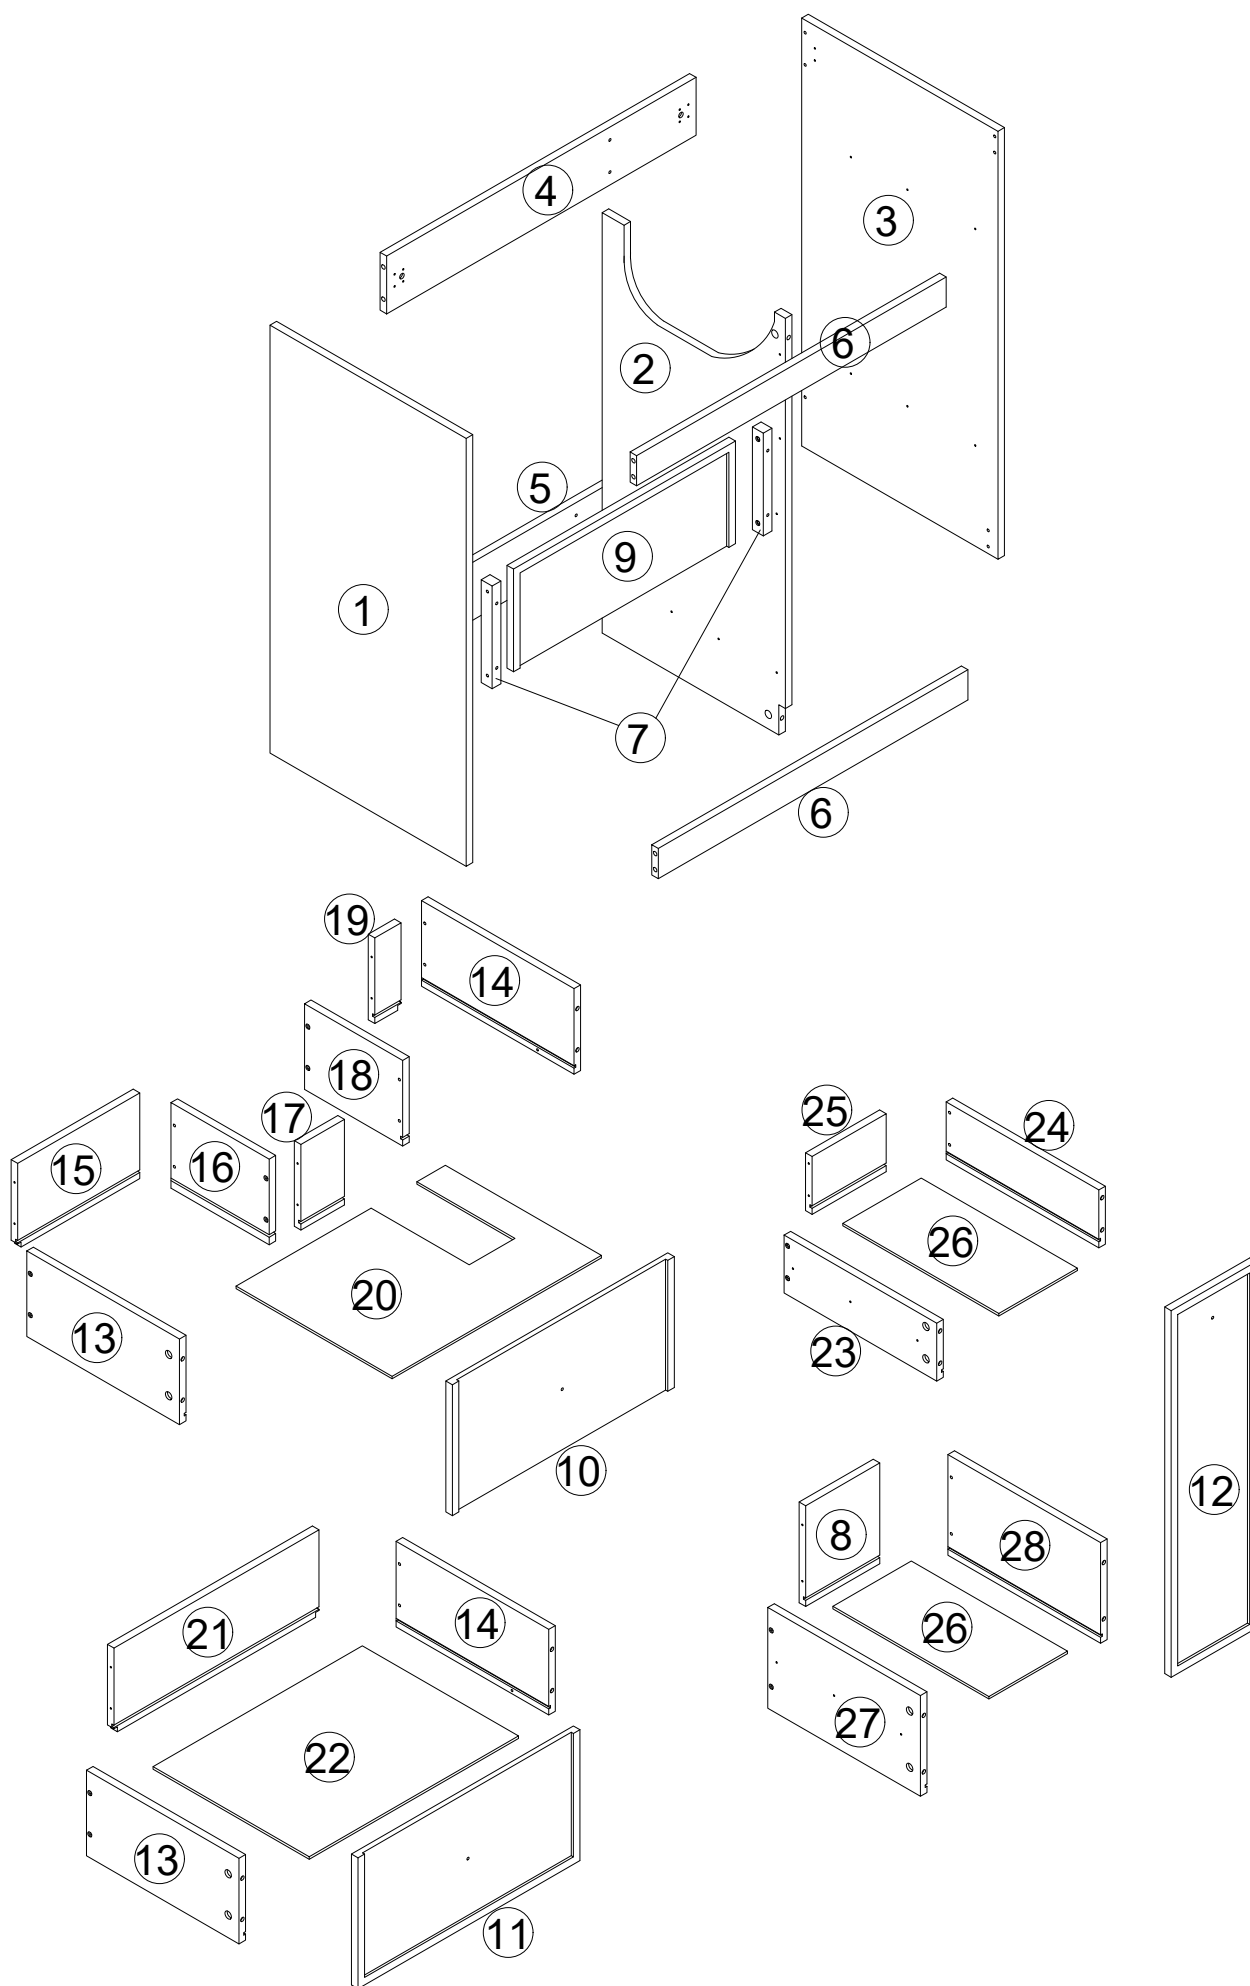

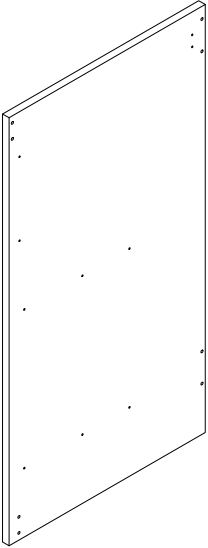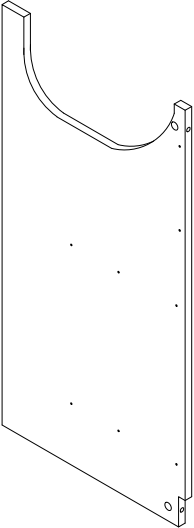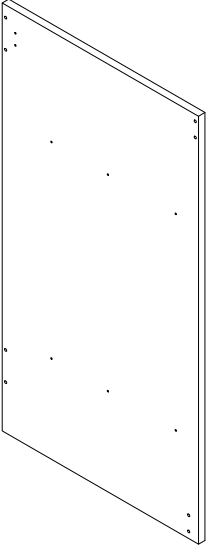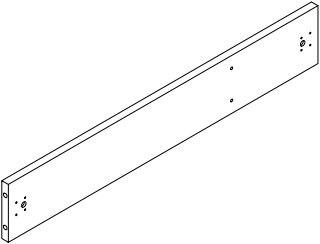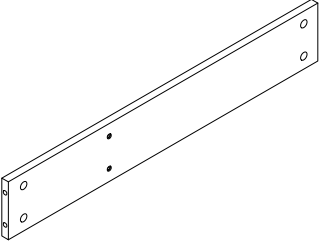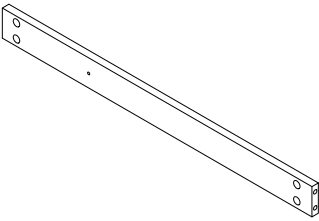
		
① x 1	② x 1	③ x 1
		
④ x 1	⑤ x 1	⑥ x 2
		
⑦ x 2	⑧ x 1	⑨ x 1
		
⑩ x 1	⑪ x 1	⑫ x 1

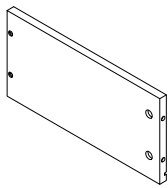


⑬ x 2

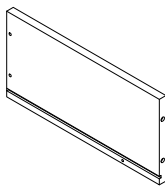


⑭ x 2

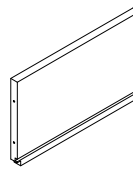


⑮ x 1



⑯ x 1




⑰ x 1




⑱ x 1




⑲ x 1

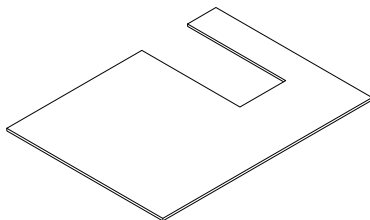


⑳ x 1

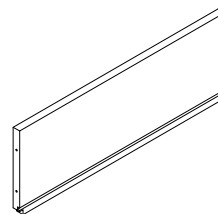


㉑ x 1

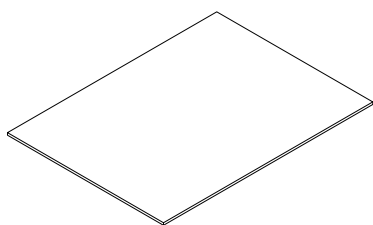





㉒ x 1

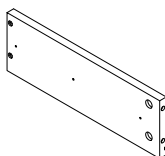


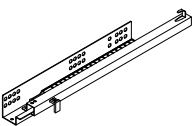
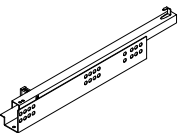

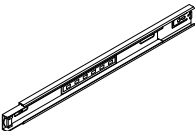







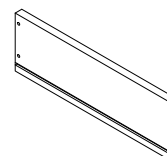

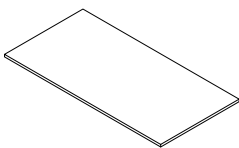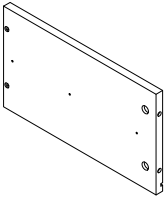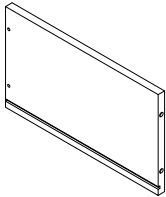

㉓ x 1



㉔ x 1

		
25 x 1	26 x 2	27 x 1
		
28 x 1		

					
Φ6x35mm A x 34+2	Φ15x12mm B x 34+2	C x 4	D x 2	E x 2	F x 2
					
G x 4	H x 4	M4x14mm I x 12+1	M4x14mm J x 36+2	M4x25mm K x 8	M4x35mm L x 28+2
					
M x 4	M4x16mm N x 4	Φ8x40mm O x 2	M6x60mm P x 2		



**Slides Must Be Separated Before Assembly.  
After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.  
Después de la separación, déjelo a un lado hasta que sea necesario.


Les glissières doivent être séparées avant l'assemblage.  
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

**Pay attention when connecting !  
The sliding module must be at the front end.**


**STEP 1 : Extend Slide**  
Extender la diapositiva

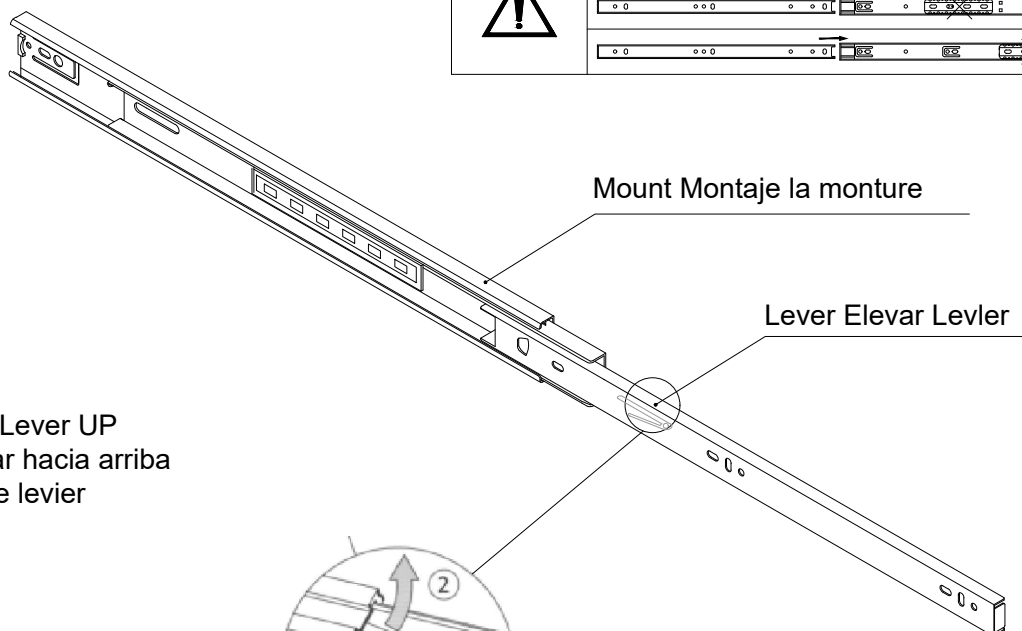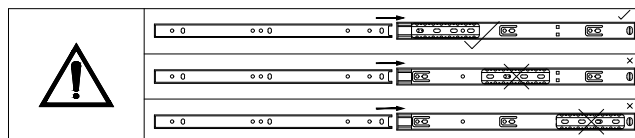

**STEP 2: Push Lever UP**  
Empujar hacia arriba  
Lever le levier

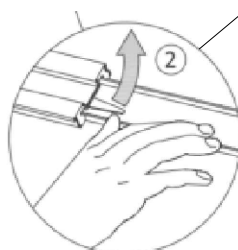


**Push lever for the left of drawer ,  
press the lever for the right of drawer.**

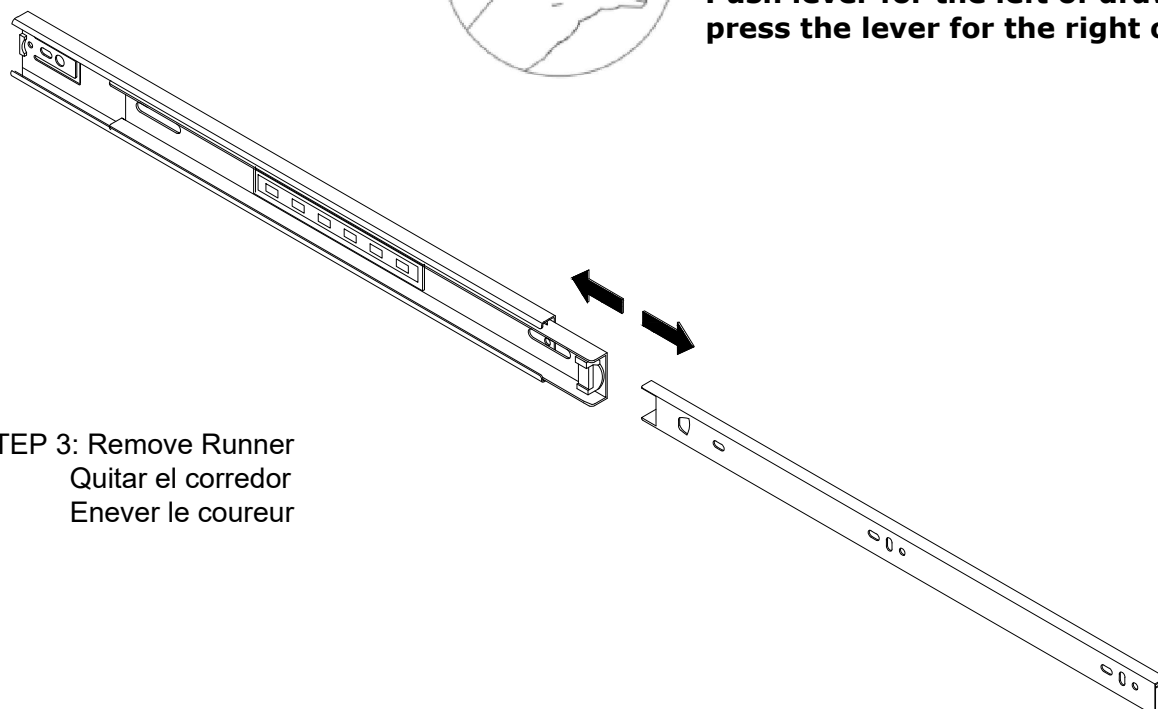







**STEP 3: Remove Runner**  
Quitar el corredor  
Enever le coureur







Step 1

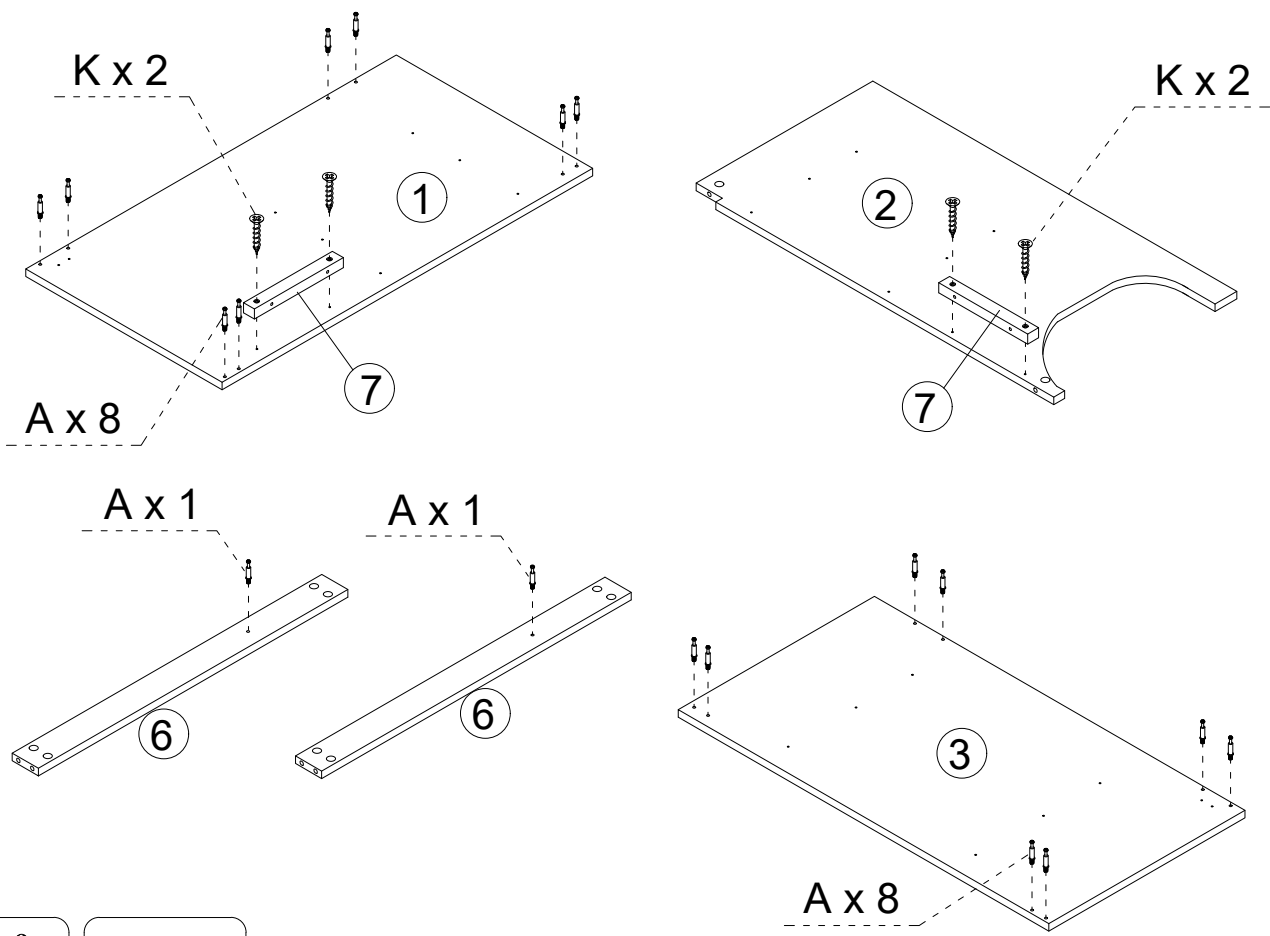



Step 2

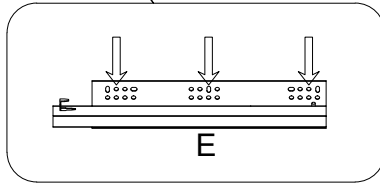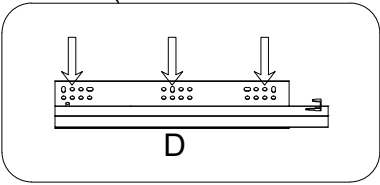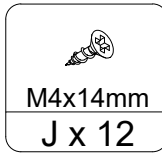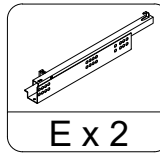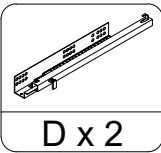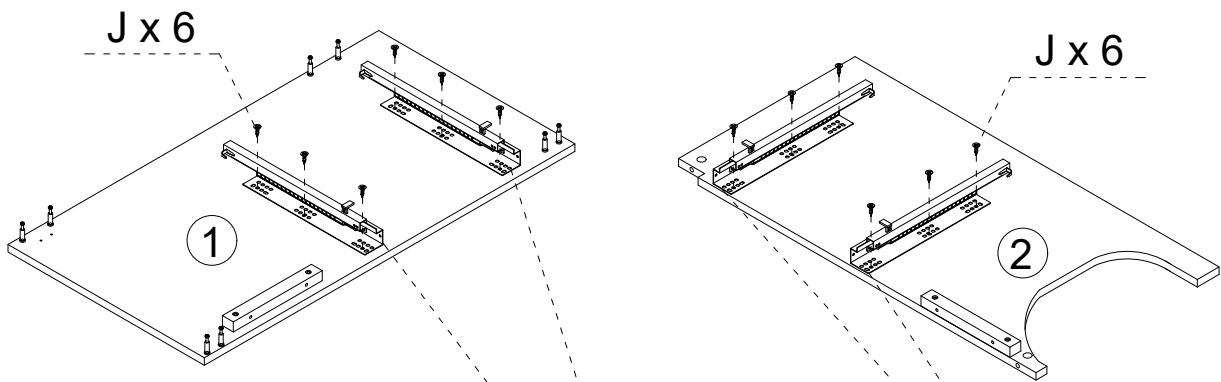




Step 3

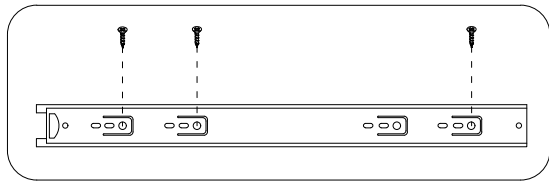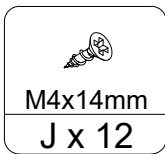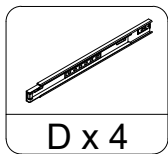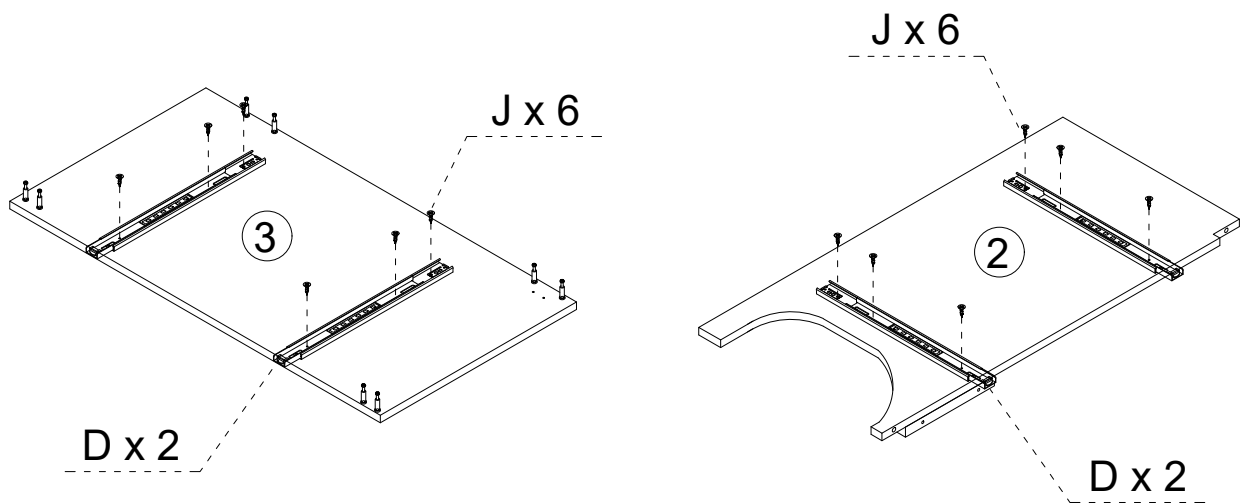



Step 4

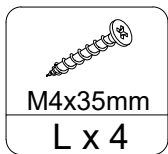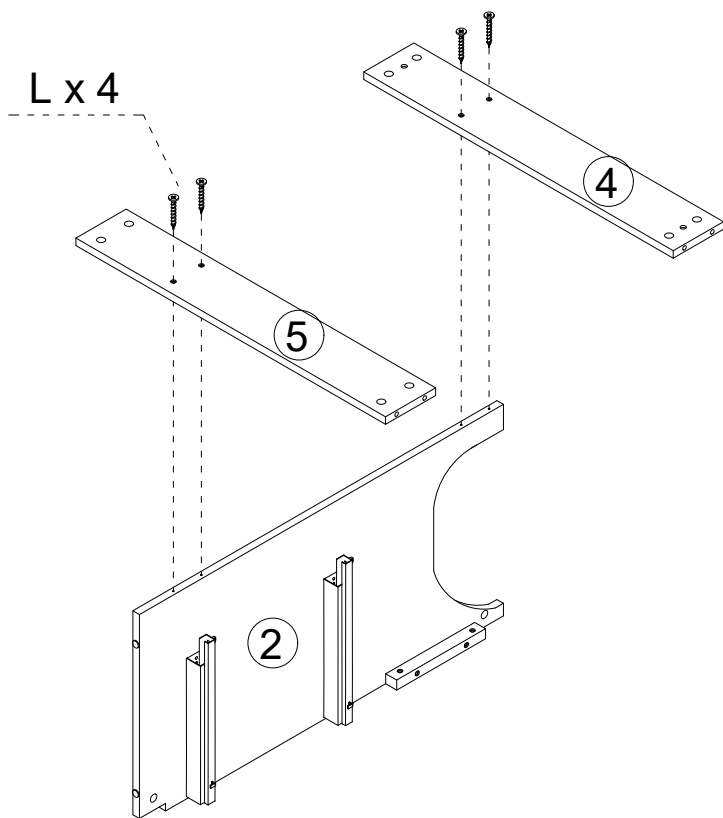


Step 5

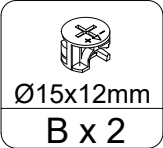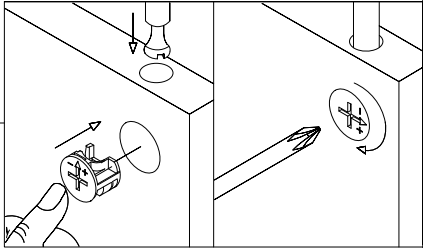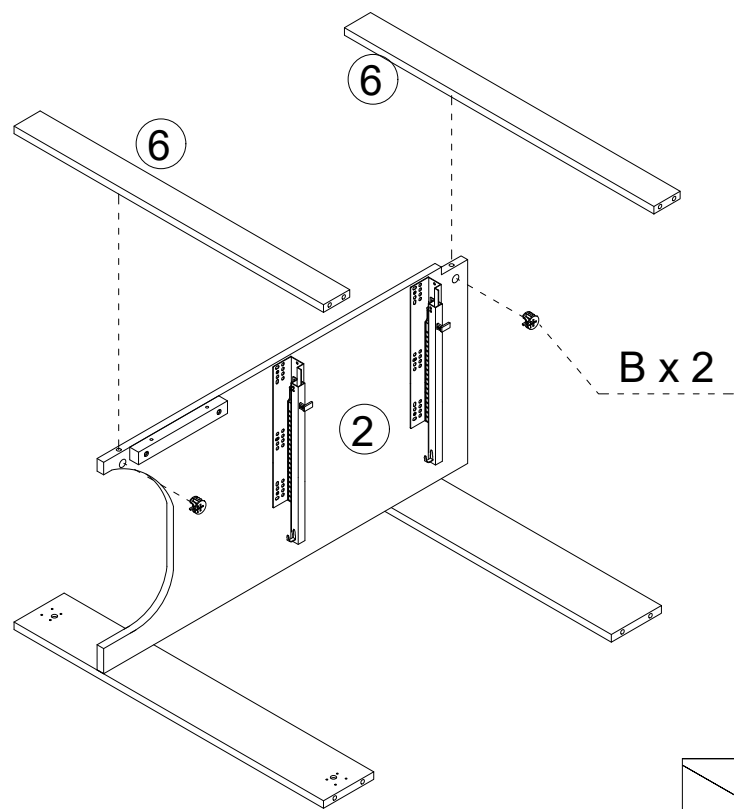


Step 6

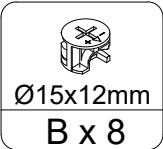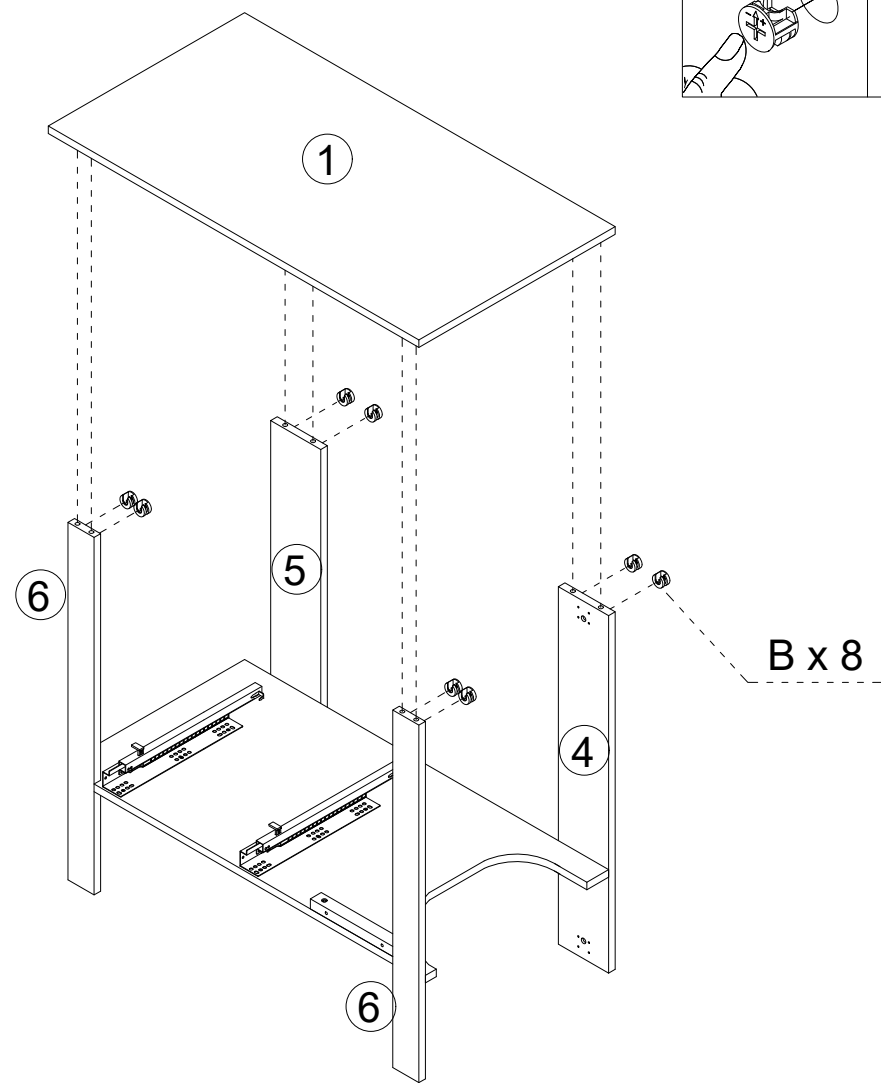






Step 7

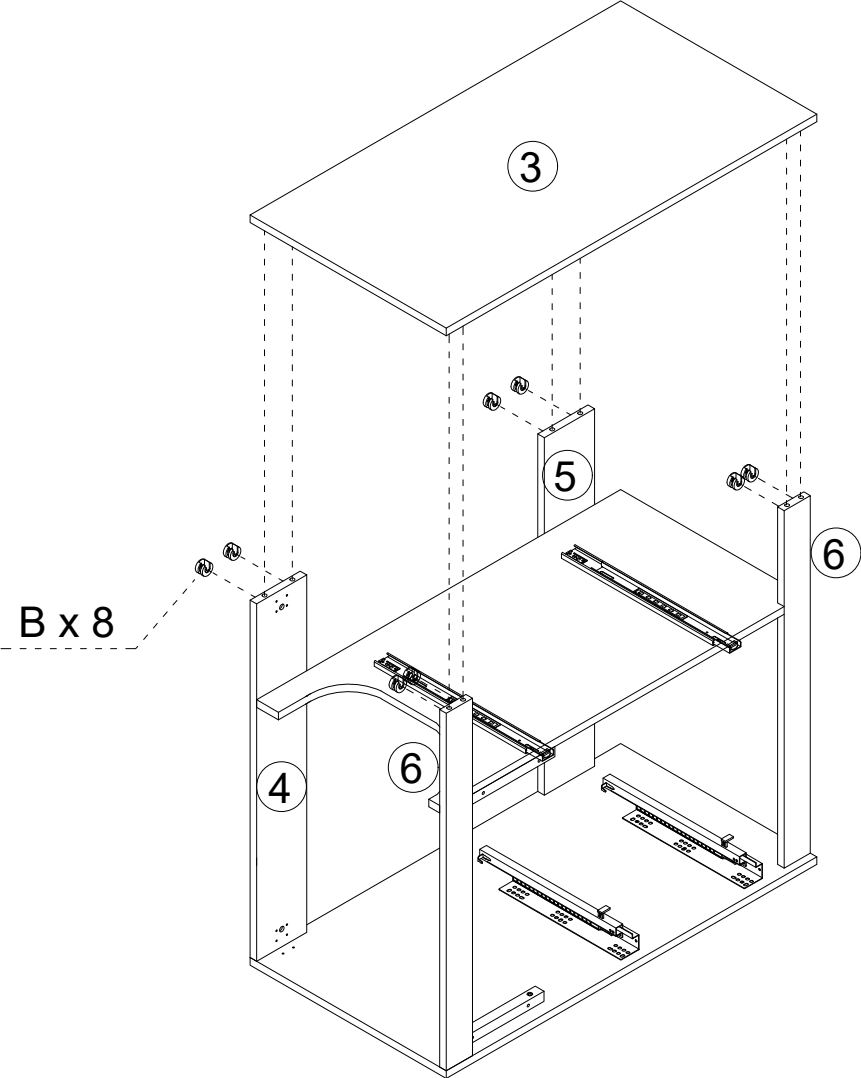




Step 8

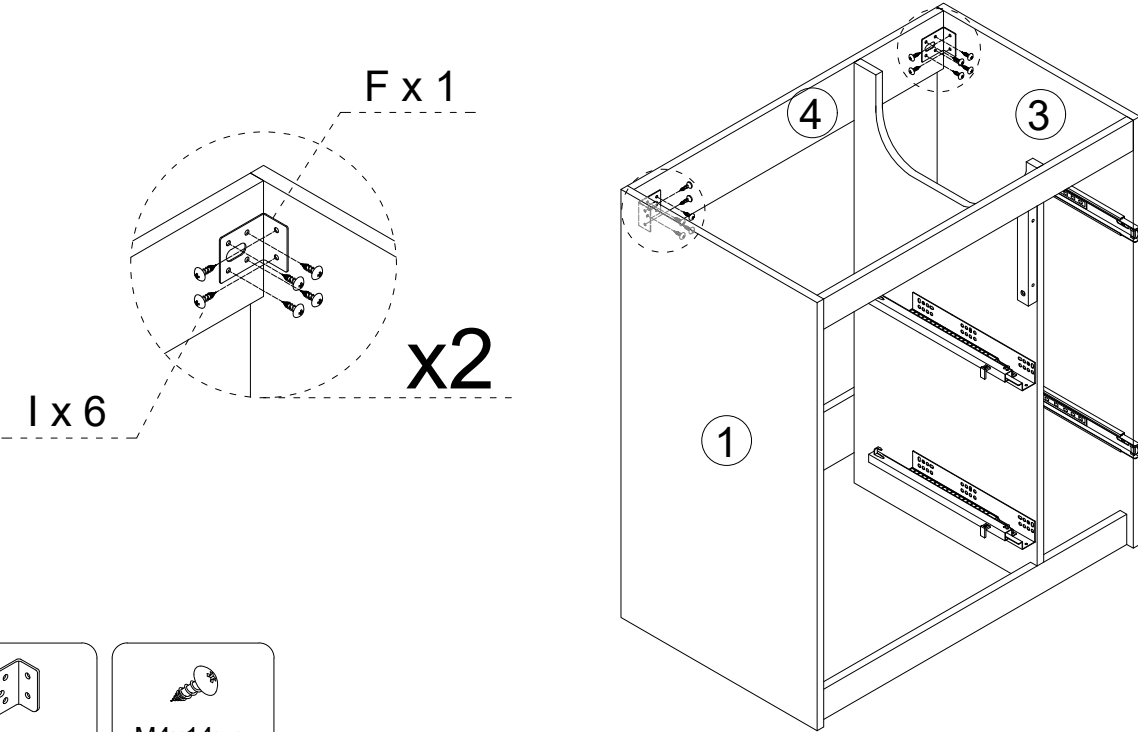


Step 9

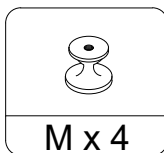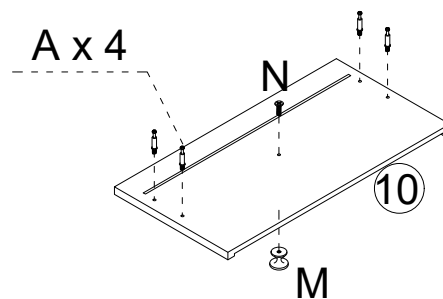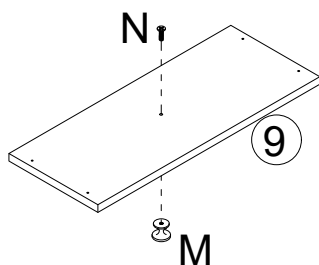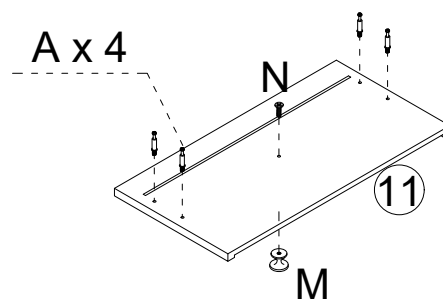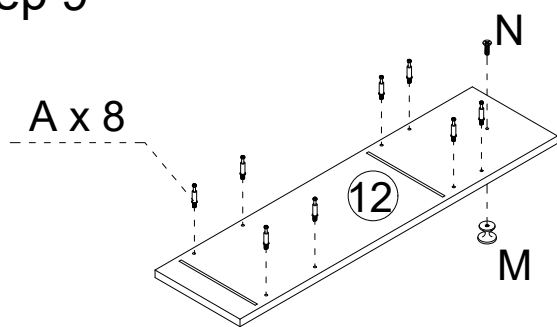



Step 10

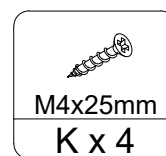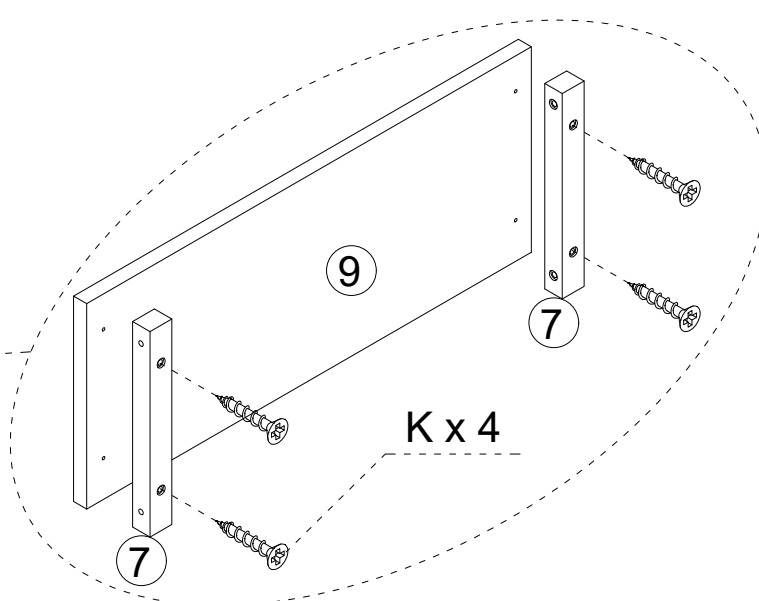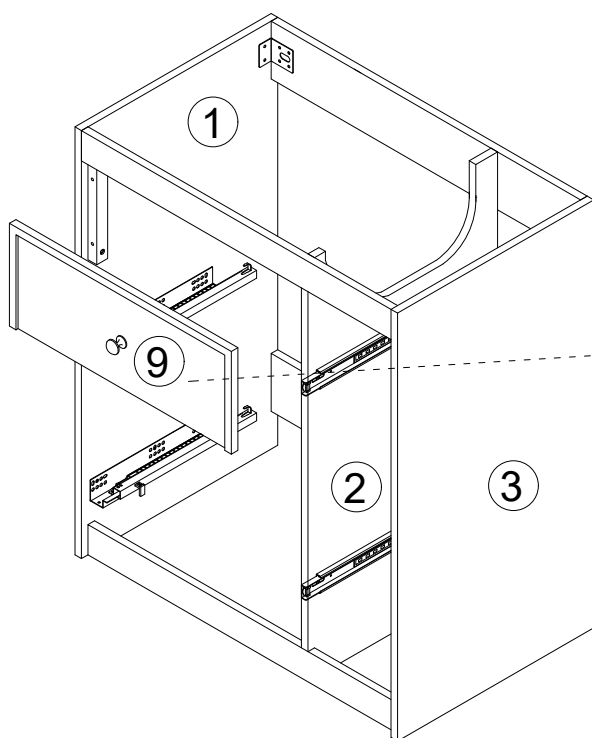


Step 11

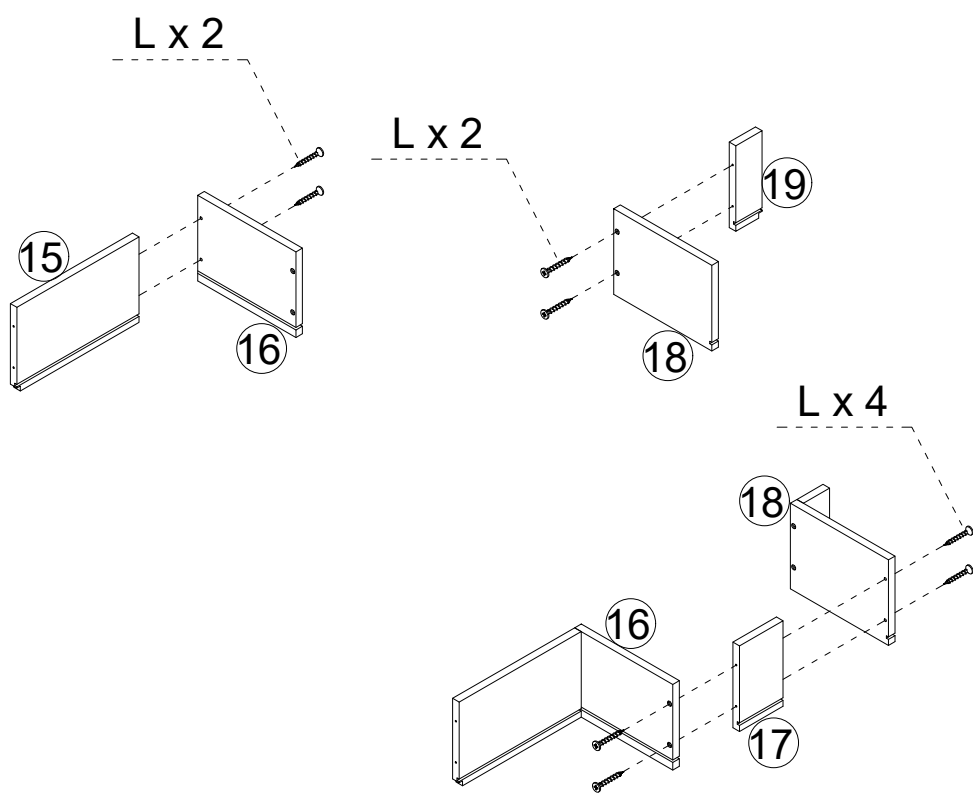




Step 12

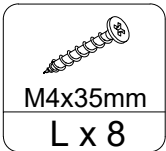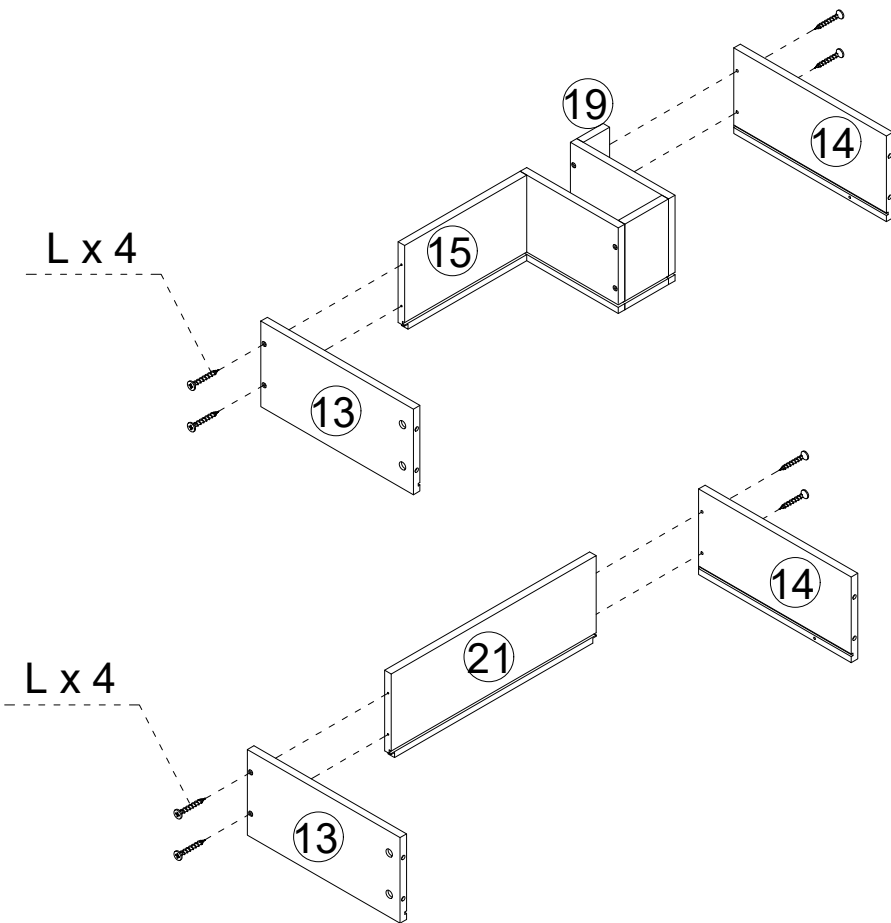







Step 13

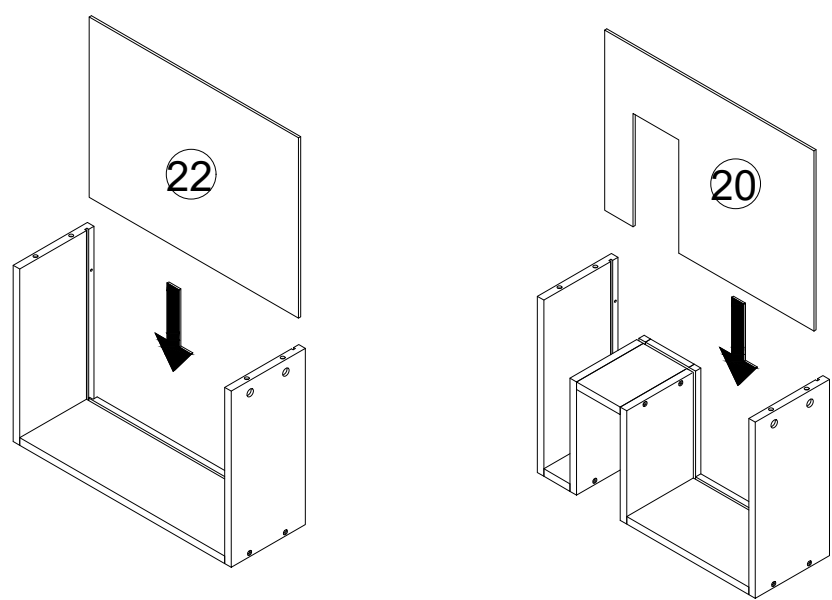


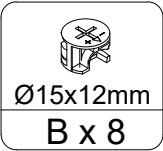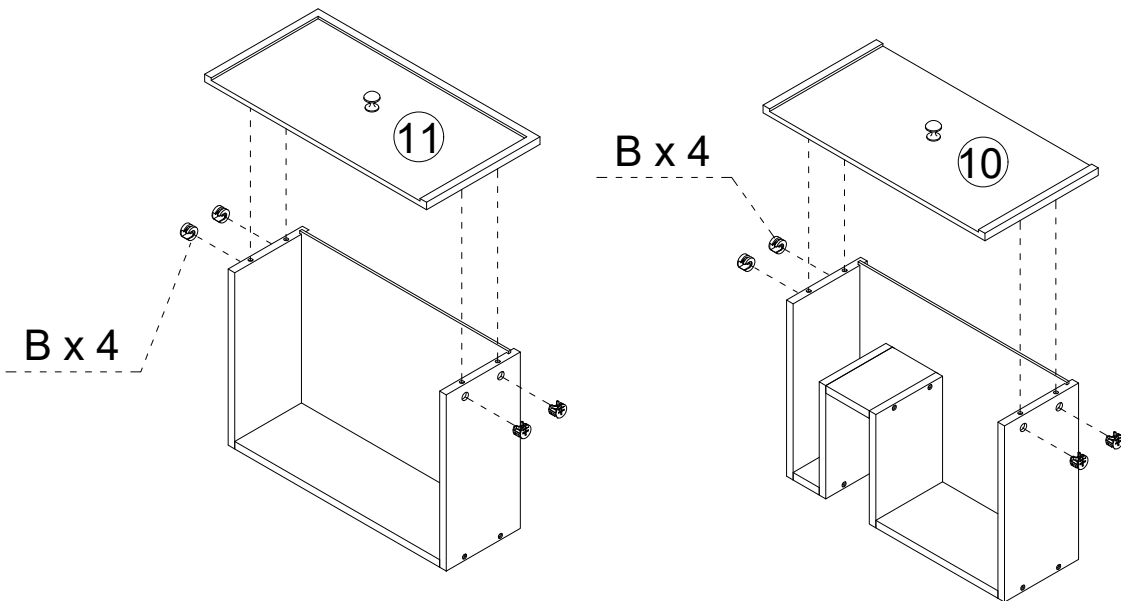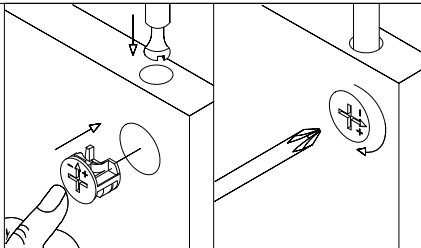


Step 14

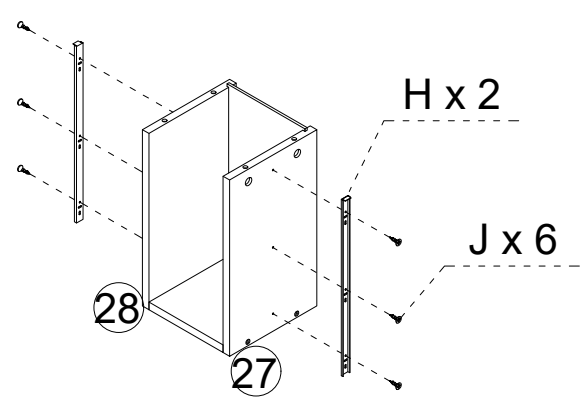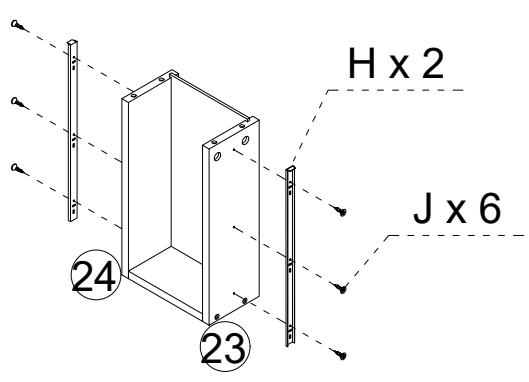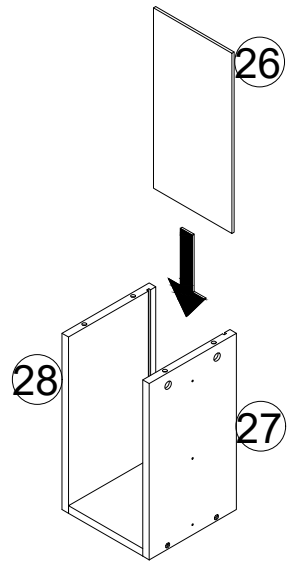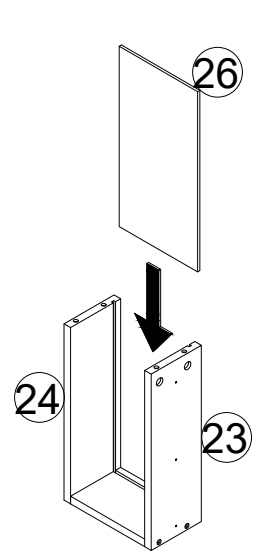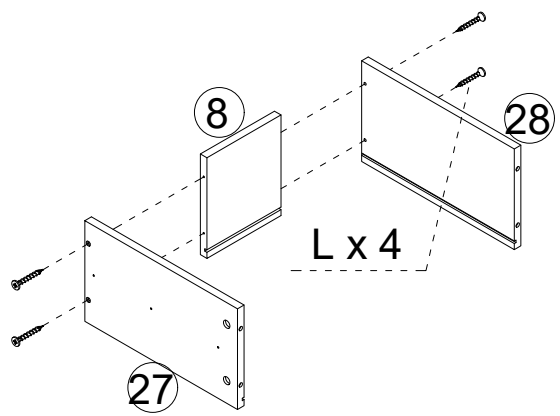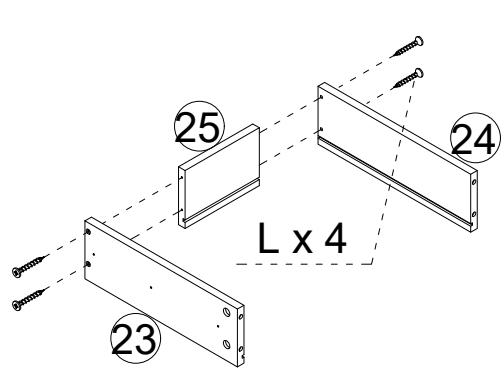

Step 15






		
H x 4	M4x14mm J x 12	M4x35mm L x 8






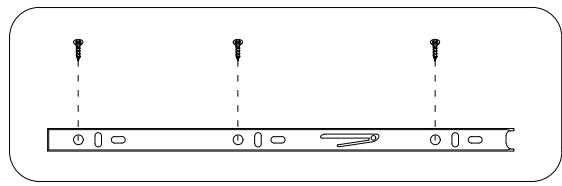






## Step 16

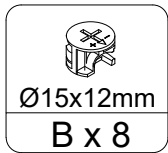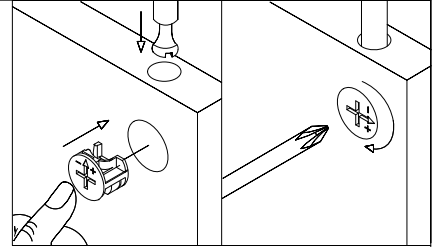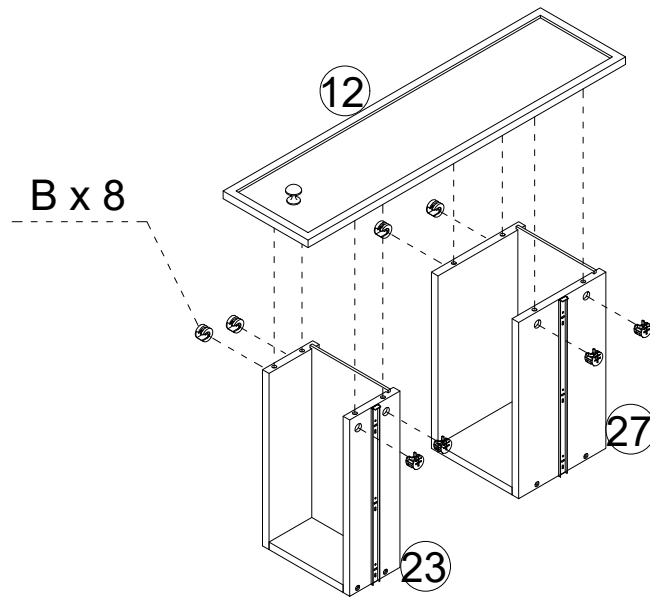


## Step 17

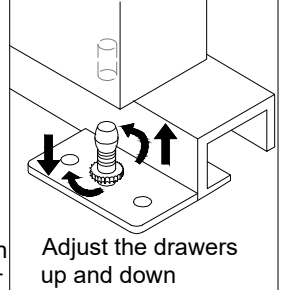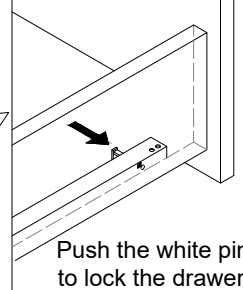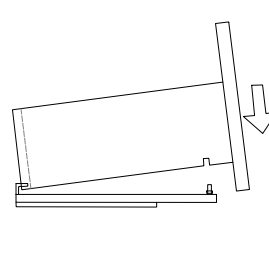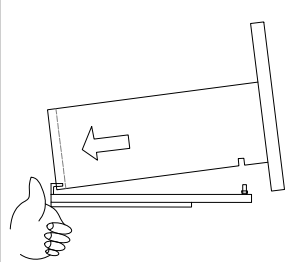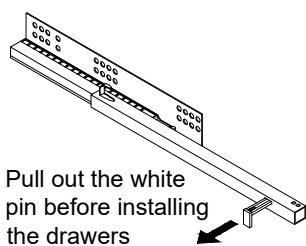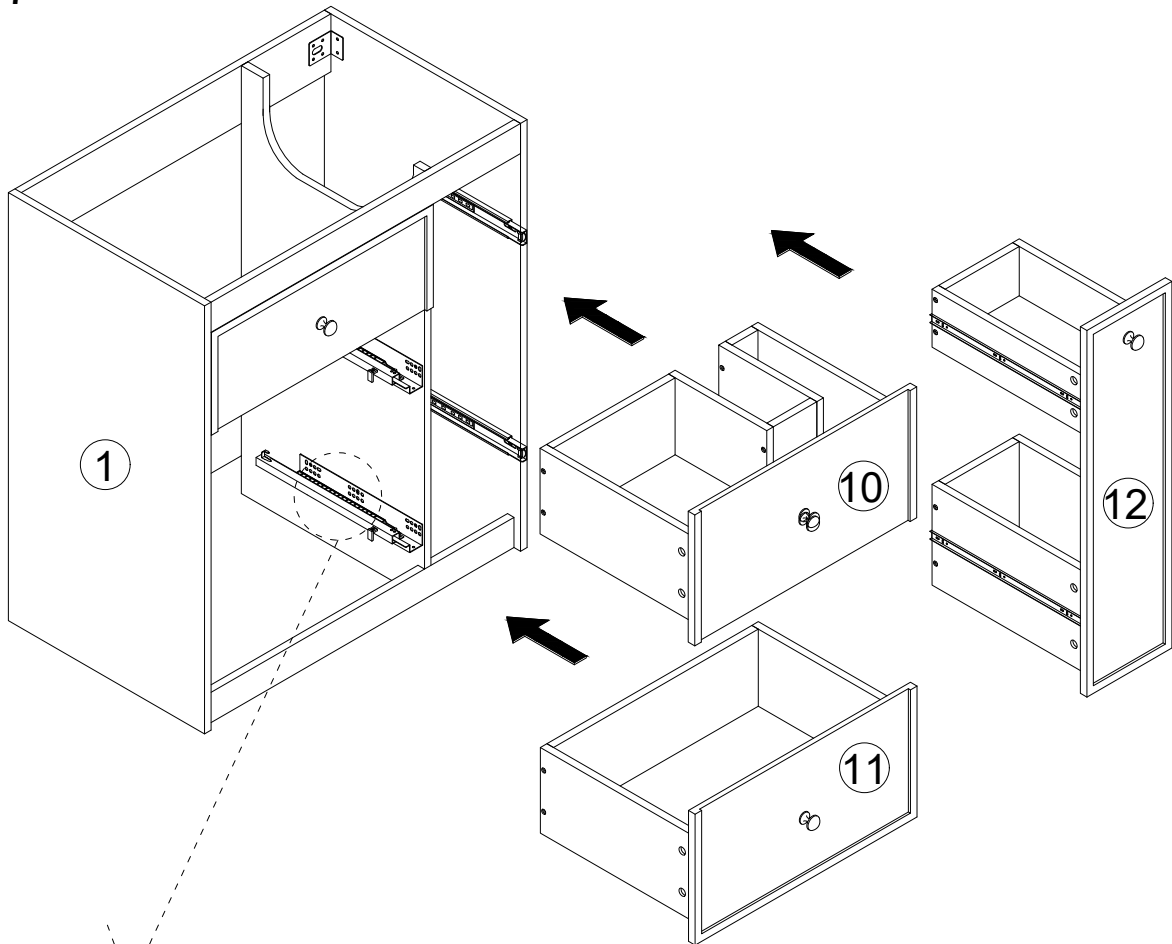



Step 18

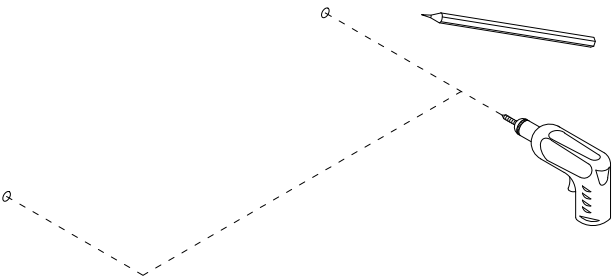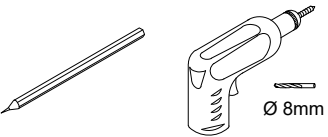

Step 19

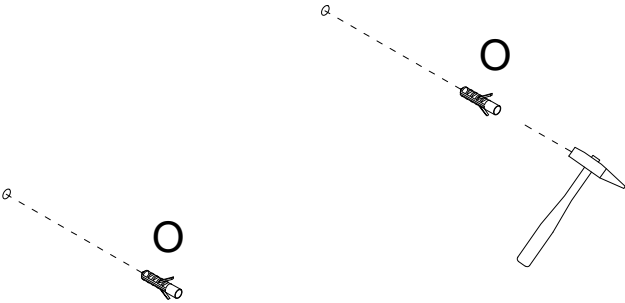



Step 20

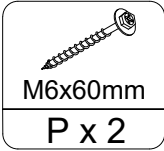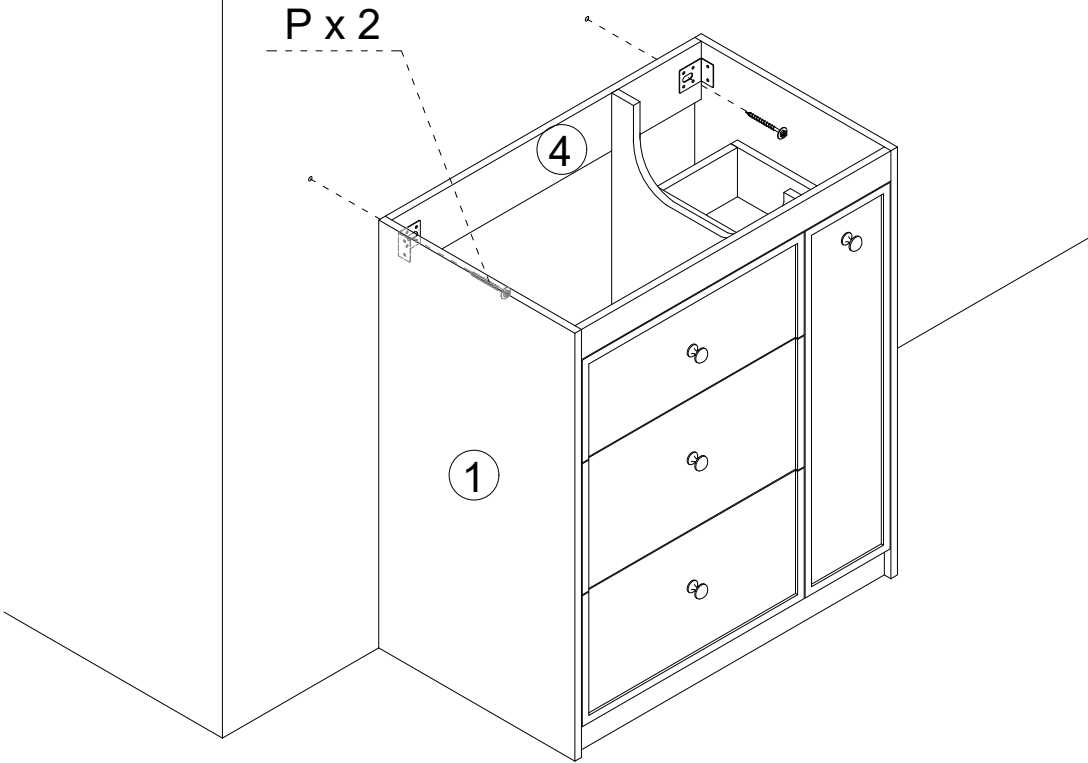

## Step 21

Install the sink on the cabinet with glue. Let stand for 24 hours

\*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

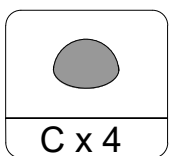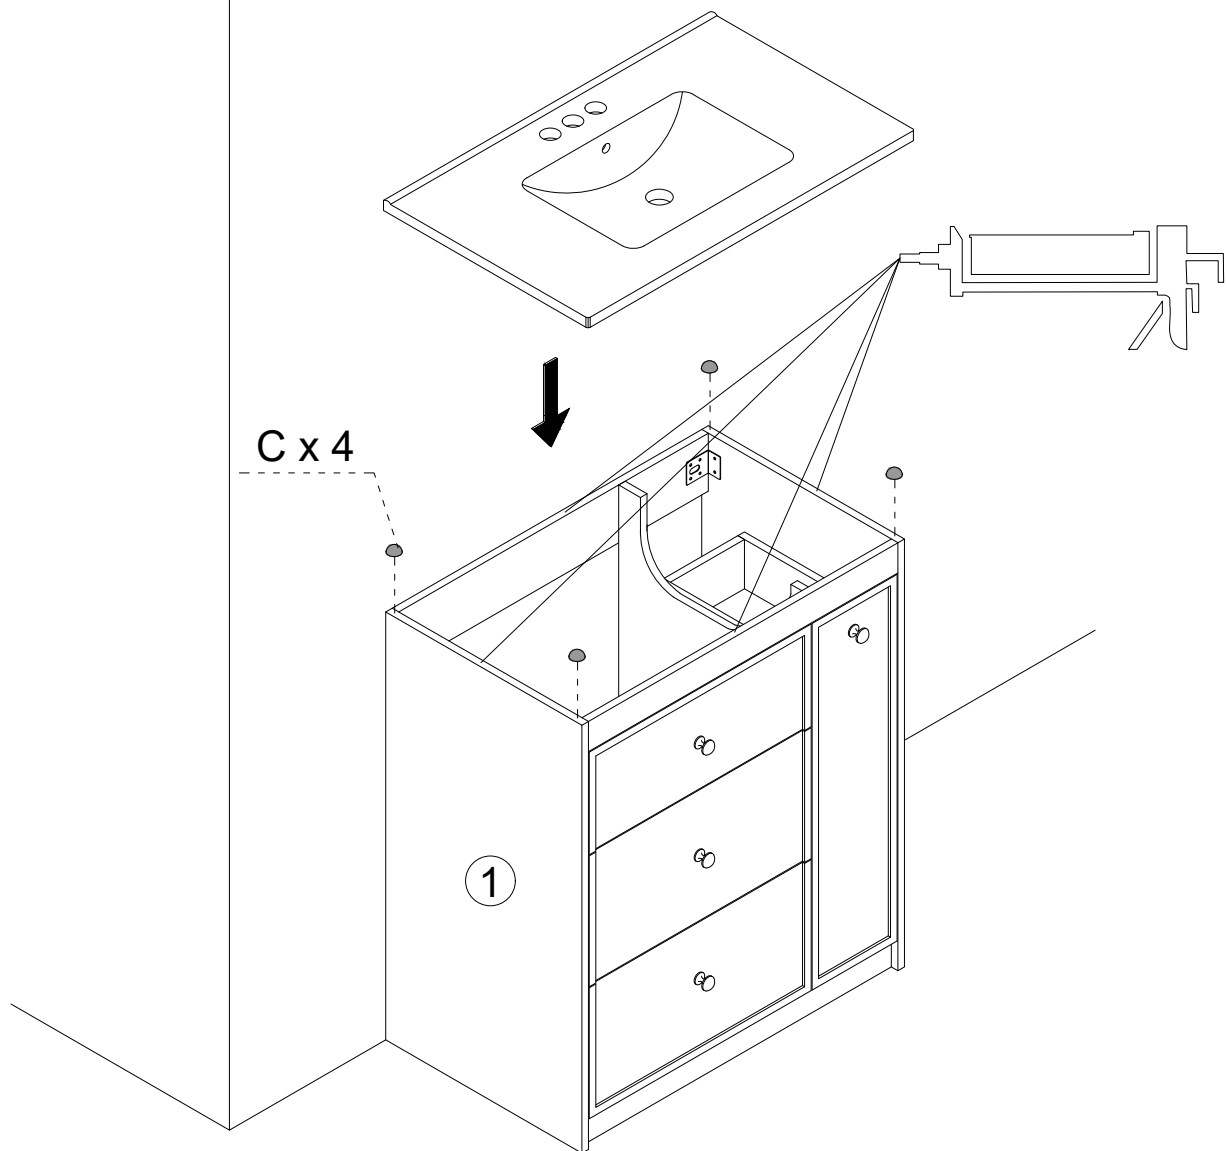

Step 22

