


Rect. Dining Table









ASSEMBLY INSTRUCTIONS

OE-566-1A

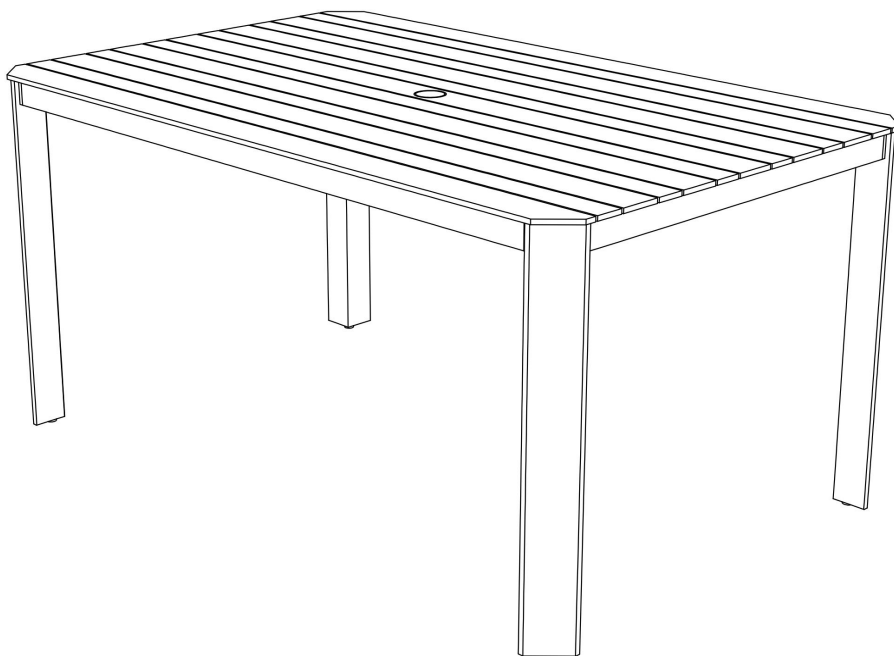


BEFORE ASSEMBLY:

- Please read these instructions carefully before starting assembly. We suggest you carry out the assembly on a soft surface like a carpet, so as to avoid scratching the paint. Keep children away during assembly. This item contains small parts which can be swallowed by children.
- This product was made for the explicit purpose of providing outdoor function and is not to be used as a toy. This product is for residential use only. This product is NOT intended for commercial use; unintended use will void the warranty.
- This product is not intended for use during inclement or severe weather, that includes but is not limited to rain, hail, sleet, snow, wind, freezing conditions and extreme heat.
- Please note because of the nature of cast metal, you may find roughness on the surface which enhances the beauty of the product and is not a defect.
- Aluminum is soft metal, please do not use power tools, and over tighten may strip threads or break the parts.
- When not in use, store and/or cover the product in a cool dry location. Do not locate the product near any sort of high heat. Do not use the product as a support.
- Children under the age of 10, who are near the product, should be supervised by a competent adult at all times.
- Do not discard any of packaging until you finish the assembly. Keep the assembly instructions for future reference or warranty.

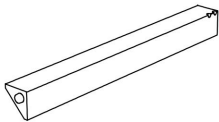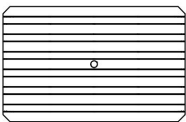AX4  Leg	BX1  Table Top	CX8  Washer
DX8  Spring Washer	EX8  Bolt(M8*40)	FX8  Bolt Cap
GX1  Umbrella Hole Cover	HX1  Wrench	

1


Step 1: Place all the parts on a clean and soft surface and identify all the parts and hardware kits against parts list. Turn over the Table top(B) onto a flat surface; Assemble table Leg(A) and Table top(B) with parts (C,D,E,F) in the order displayed in fig(1). Then assemble the other 3 Legs. Tighten all the Bolts(E) at this stage. Repeat this step with other 3 legs.

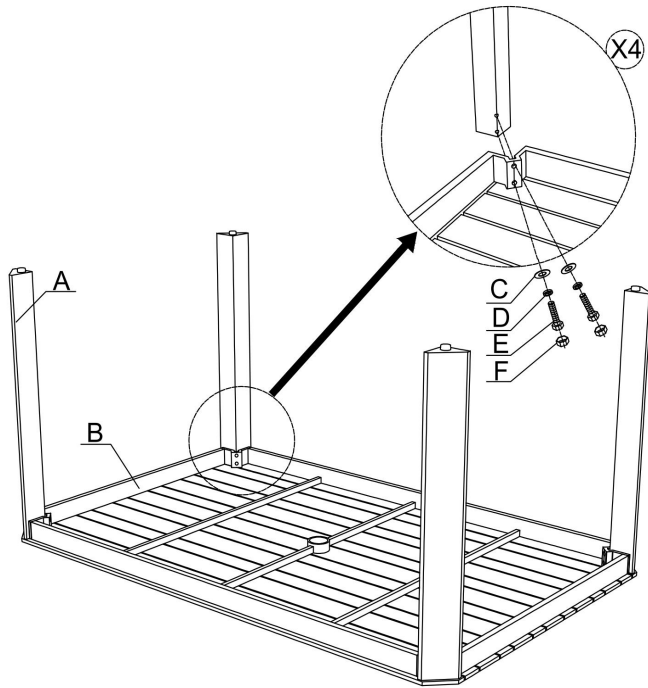

(1)

2

Step 2: Turn over again and check that all the parts are securely connected. Tighten all screws fully. Adjust the levelers till the table is stable. Now Your table is ready to use.

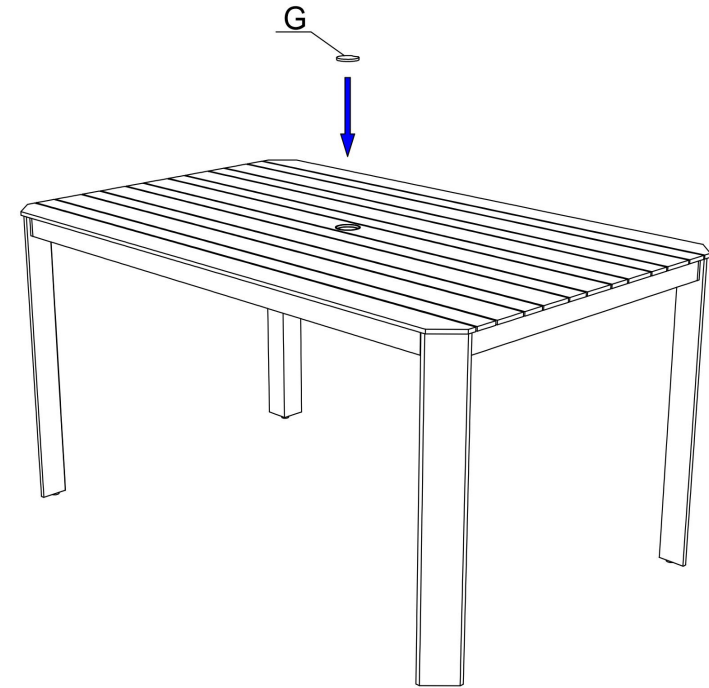


(2)

Tip: Tighten all the bolts with Wrench(H)

Dining Chair








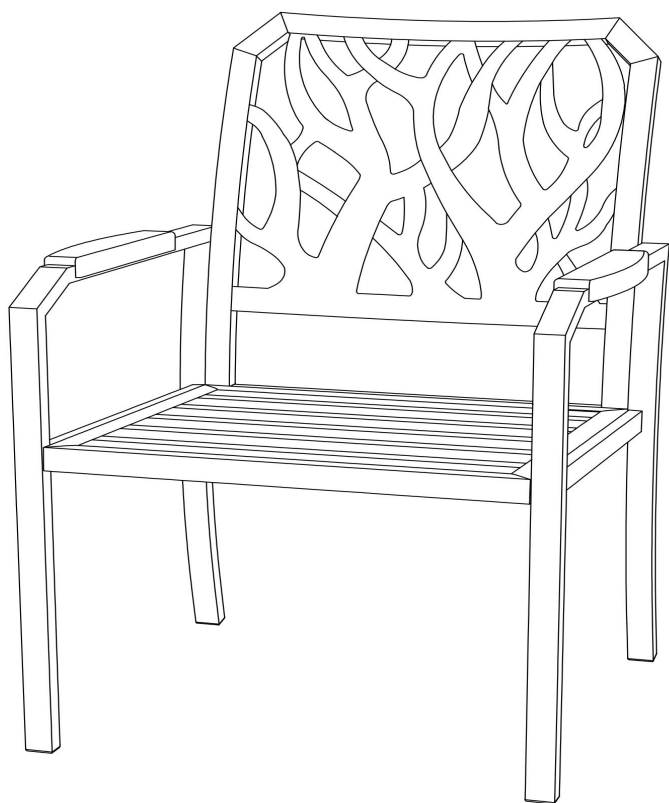




ASSEMBLY INSTRUCTIONS

OE-H-530-1A




BEFORE ASSEMBLY:

- Please read these instructions carefully before starting assembly. We suggest you carry out the assembly on a soft surface like a carpet, so as to avoid scratching the paint. Keep children away during assembly. This item contains small parts which can be swallowed by children.
- This product was made for the explicit purpose of providing outdoor function and is not to be used as a toy. This product is for residential use only. This product is not intended for commercial use; unintended use will void the warranty.
- This product is not intended for use during inclement or severe weather, that includes but is not limited to rain, hail, sleet, snow, wind, freezing conditions and extreme heat.
- Please note because of the nature of cast metal, you may find roughness on the surface which enhances the beauty of the product and is not a defect.
- Aluminum is soft metal, please do not use power tools, and over tighten may strip threads or break the parts.
- When not in use, store and/or cover the product in a cool dry location. Do not locate the product near any sort of high heat. Do not use the product as a support.
- Children under the age of 10, who are near the product, should be supervised by a competent adult at all times.
- Do not discard any of packaging until you finish the assembly. Keep the assembly instructions for future reference or warranty.

AX2  Back	BX2  Seat	CX2  Left Armrest	DX2  Right Armrest
EX16  Washer	FX16  Spring Washer	GX12  Bolt(M6*30)	HX4  Bolt(M6*45)
IX16  Cap	JX4  Resin-treated wood Arm	KX2  Cushion	LX2  Wrench

1


Step 1: Place all the parts on a clean and soft surface and identify all the parts and hardware kits against parts list. Assemble Left Armrest (C), Right armrest (D) and Seat (B) with parts (E, F, G, I) as fig(1). Remember not to tighten all the bolts before they are all set up.

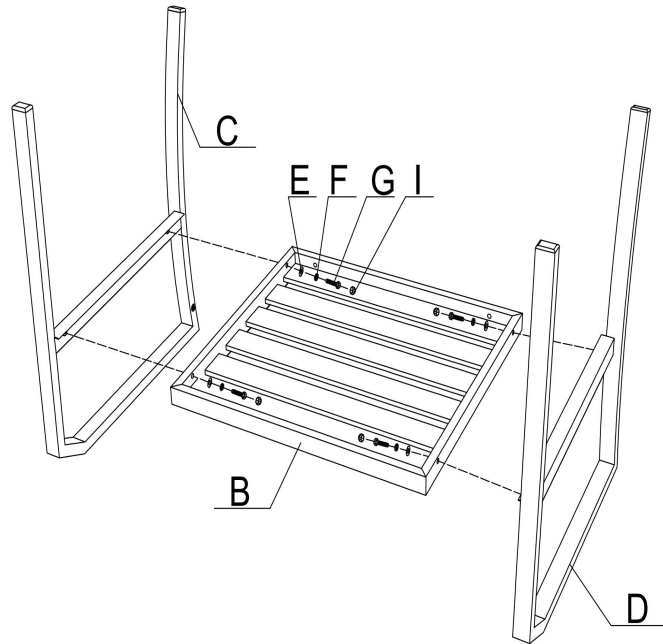

(1)

2


Step 2: Connect Back (A) and Seat (B) with parts (E, F, G, I) as fig(2)

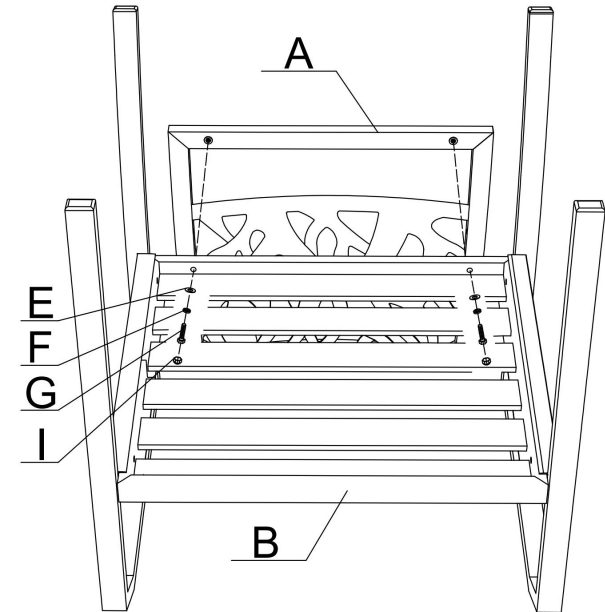

(2)

3


Step 3:Connect Back(A)and 2 Armrests(C,D) with parts(E,F,H,I) as fig(3)

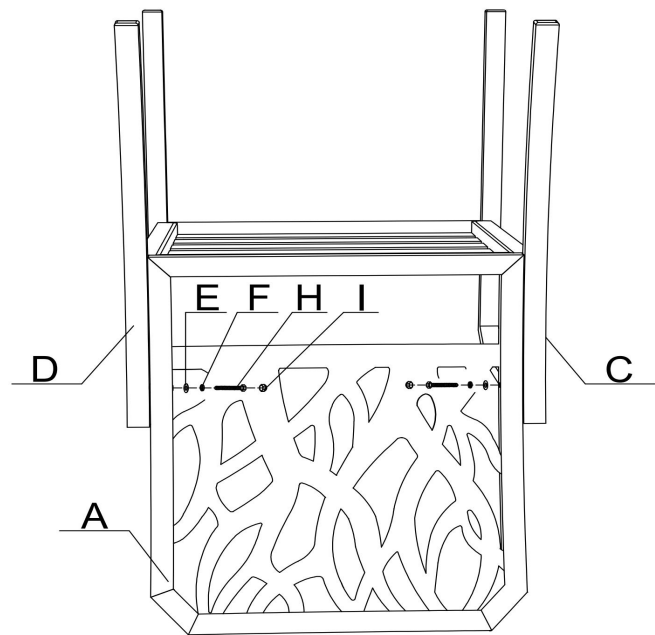

(3)

4


Step 4:Turn the chair over.

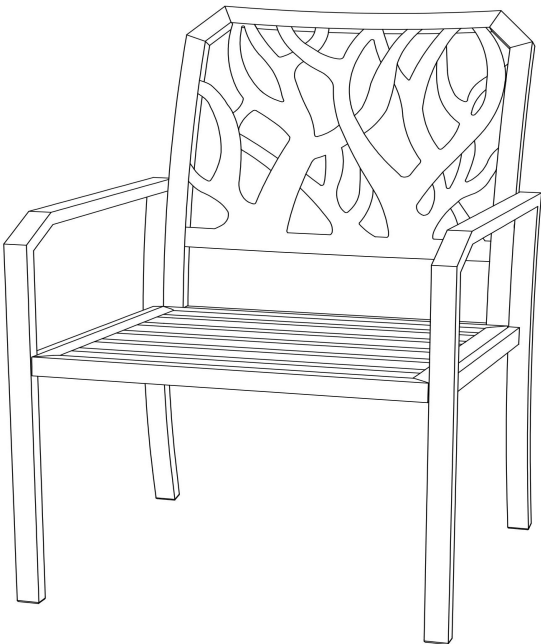

(4)

5


Step 5: Start by adjusting the position of the Resin-treated wood Arm(J), the default position is to place the front of the arms flush with the top edge of the cut corner of the Armrests(C,D). Remove the clear film from the bottom of the Resin-treated wood Arm(J) and snap it onto the armrest (C,D) as fig(5), pressing it down, make sure it is securely mounted. In an hour it will be completely bonded.

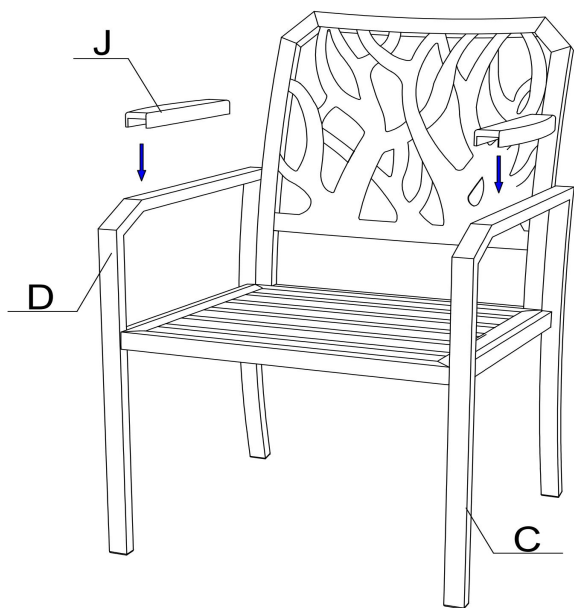

(5)

6

Step 6: Tie the Cushion(K). Your chair should be ready for use.

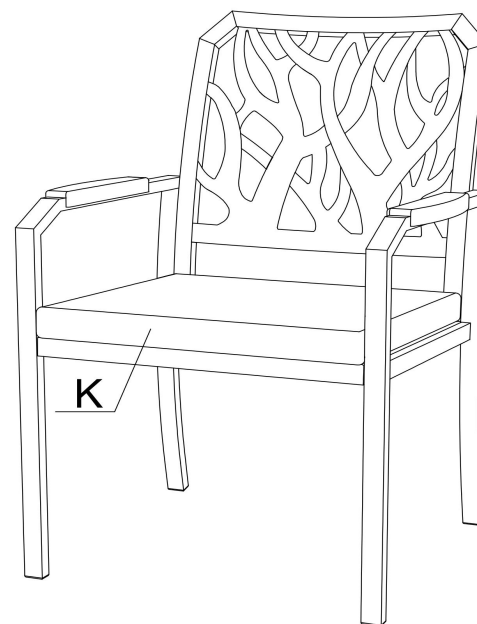


(6)

Tip: Tighten all the bolts with Wrench(L)

Swivel Rocker








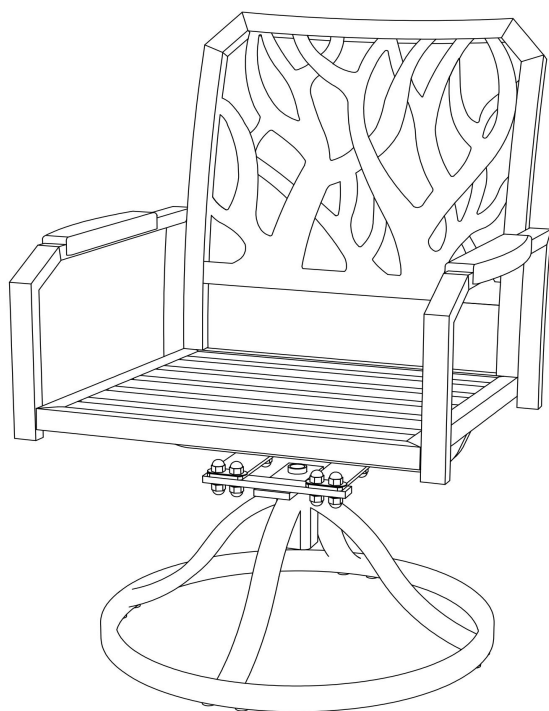




ASSEMBLY INSTRUCTIONS

OE-H-531

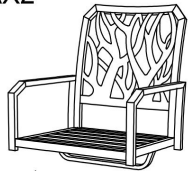


BEFORE ASSEMBLY:

- Please read these instructions carefully before starting assembly. We suggest you carry out the assembly on a soft surface like a carpet, so as to avoid scratching the paint. Keep children away during assembly. This item contains small parts which can be swallowed by children.
- This product was made for the explicit purpose of providing outdoor function and is not to be used as a toy. This product is for residential use only. This product is not intended for commercial use; unintended use will void the warranty.
- This product is not intended for use during inclement or severe weather, that includes but is not limited to rain, hail, sleet, snow, wind, freezing conditions and extreme heat.
- Please note because of the nature of cast metal, you may find roughness on the surface which enhances the beauty of the product and is not a defect.
- Aluminum is soft metal, please do not use power tools, and over tighten may strip threads or break the parts.
- When not in use, store and/or cover the product in a cool dry location. Do not locate the product near any sort of high heat. Do not use the product as a support.
- Children under the age of 10, who are near the product, should be supervised by a competent adult at all times.
- Do not discard any of packaging until you finish the assembly. Keep the assembly instructions for future reference or warranty.

AX2  Seat	BX2  Connector	CX2  Base	DX4  Double Hole Washer
EX8  Bolt(M8*35)	FX8  Nut	GX32  Cap	HX8  Spring Washer
IX8  Washer	LX4  Resin-treated wood Arm	MX2  Cushion	NX2  Wrench

1


Step 1:Place all the parts on a clean and soft surface,identify all the parts and hardware kits against parts list.Assemble **Seat(A)** and **Connector(B)** first,and make sure the direction of **connector(B)** is correct as Fig(1). This is very important for safe.

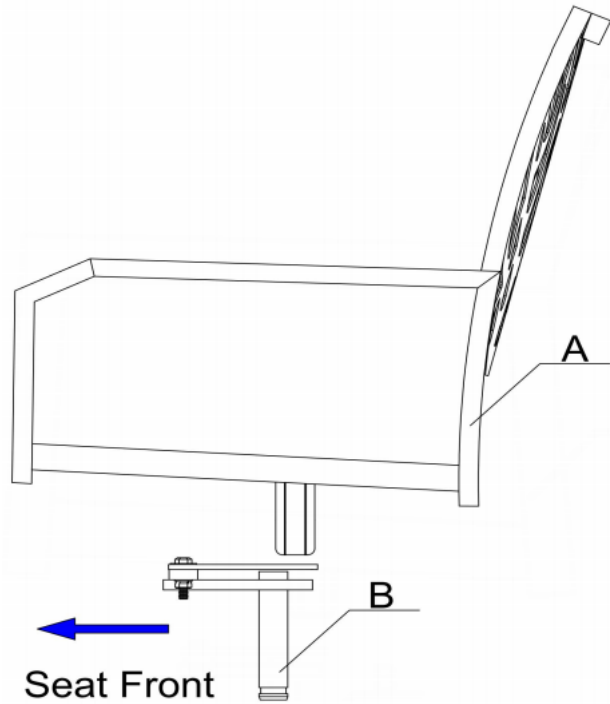

(1)

2


Step 2:Install hardware parts(D,E,G) and (I,H,F,G)in the order displayed in Fig(2). Do not tighten the bolts and nuts before they are all set up.Tighten all the bolts and nuts with **Wrench(N)**, Do not over tighten bolts and nuts, it will cause the damage of U-bar of **Seat(A)** without warranty.

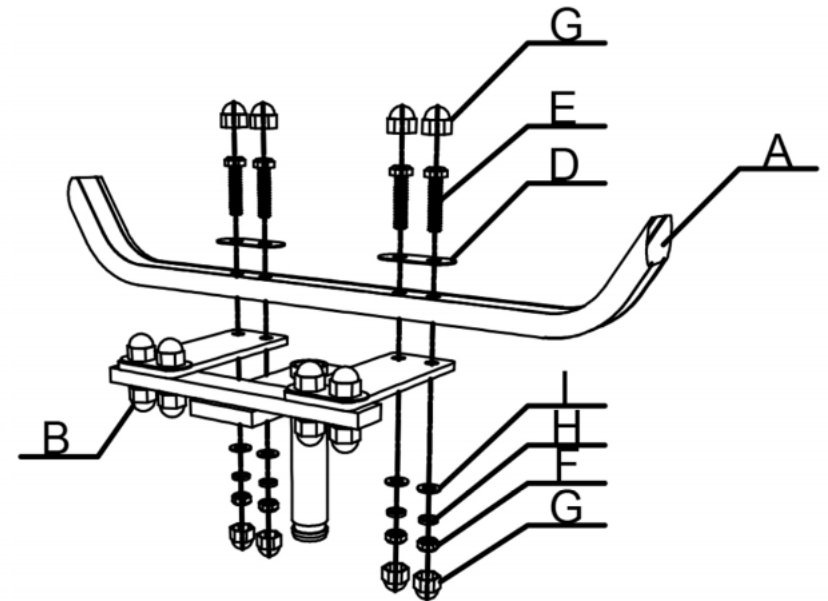

(2)


3

Step3:Insert the installed pivot shaft into the Base(C) as fig(3)

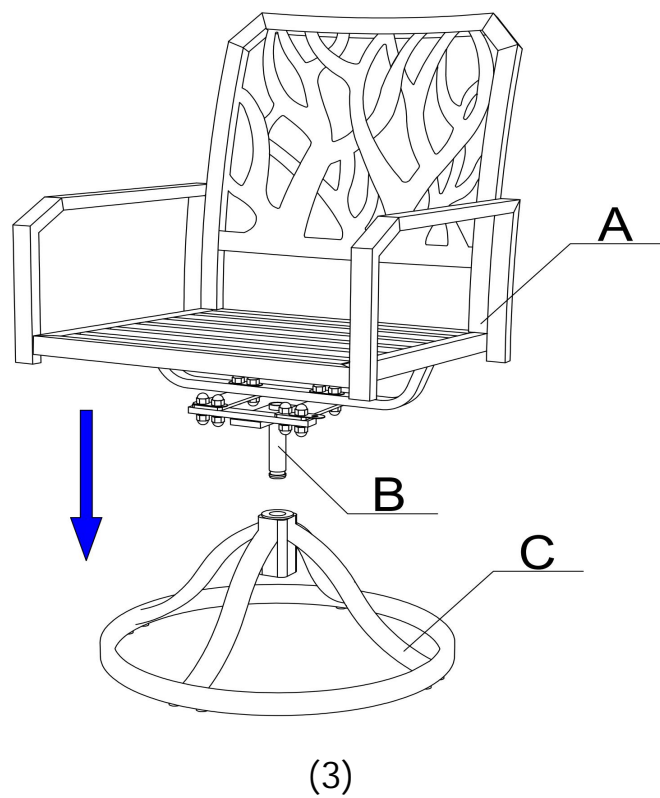


4

Step 4:Start by adjusting the position of the Resin-treated wood Arm(L), the default position is to place the front of the arms flush with the top edge of the cut corner of the Armrests(C,D). Remove the clear film from the bottom of the Resin-treated wood Arm(L) and snap it onto the armrest(C,D)as fig(5), pressing it down,make sure it is securely mounted.In an hour it will be completely bonded.

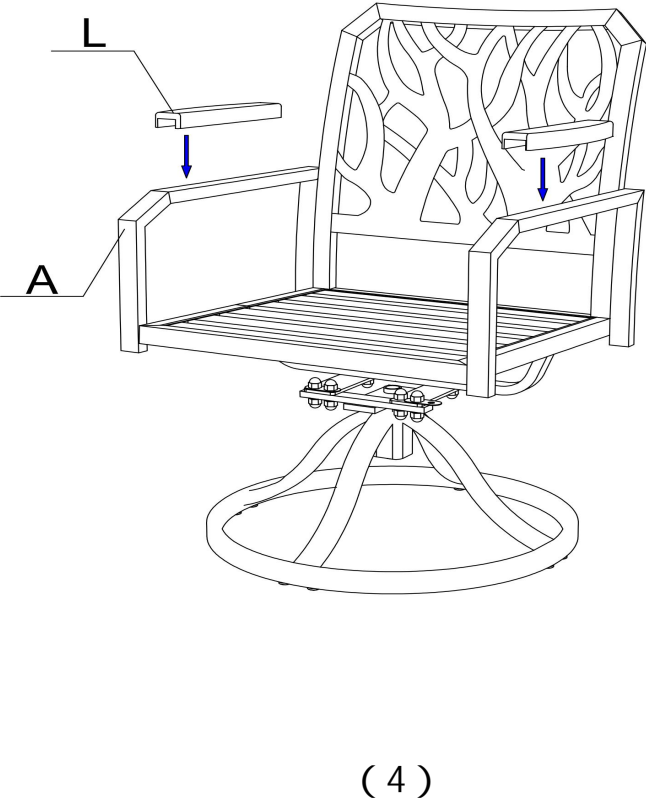

5

Step 5: Tie the Cushion(M).Your chair should be ready for use.

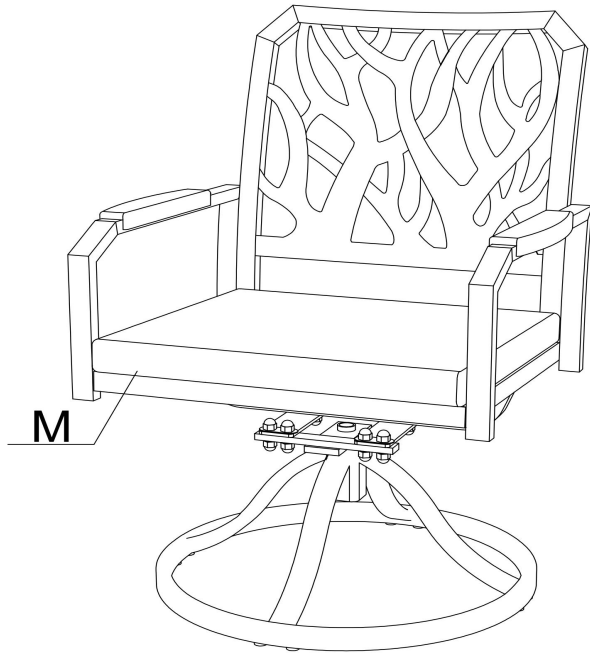

(5)

Tip:Tighten all the bolts and nuts with Wrench(N)