

DREAMS

IDEA

Instruction Manual



DREAMS/IDEA

NO:OD0005

ABOUT US

*D*REAMSIDEA IS A ONE-STOP HOME

FURNISHING AND SERVICE COMPANY BASED IN USA.

WE ARE DEDICATED TO BRINGING YOUR DREAM HOME TO LIFE.

OUR SERVICES COVER FROM DESIGN, PRODUCTION,

DIRECT SELL, STORAGE, AND TRANSPORTATION.

IF REALITY IS THE NEAR SHORE

AND IDEALISM THE FAR SHORE,

*D*REAMSIDEA

AS THE FERRY BETWEEN THEM,

EAGER TO ACCOMPANY YOU ON A JOURNEY

TO YOUR IDEAL HOME.

ITEM NO. OD0005

WARRANTY

WE STRIVE TO OFFER HIGH-QUALITY PRODUCT AND WE ALSO TRY OUR BEST TO SATISFY EACH CUSTOMER THAT ORDERS FROM US WITH PRODUCT OR SERVICE AS NEEDED. EACH CUSTOMER RECEIVES A RECORD OF THEIR ORDER, SUCH AS THE ORDER NUMBER OR ITEM RECEIPT. FOR ANY ITEMS THAT ARE OUT OF THE WARRANTY PERIOD, YOU MAY STILL RECEIVE REPLACEMENT PARTS BY PURCHASING THEM FROM OUR COMPANY IF THEY ARE AVAILABLE.

Are you having difficulty

with assembly? Missing parts?

Please contact us : info@firstopintl.com


Tel.5627813327

send an email with your order No. to us

For return, please check the return policy with the retailer or market place you bought from.

Appreciate your purchasing from us.

Pop up your life by our furniture !

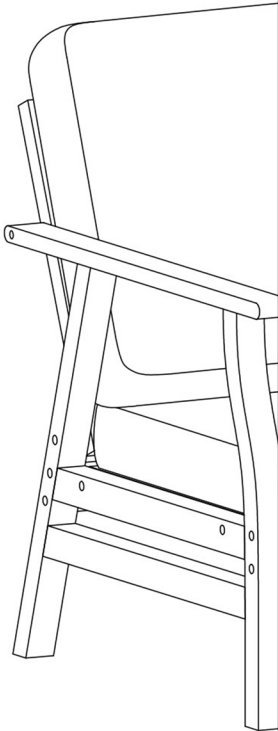

MAINTAINANCE AND WARNING

Please read the manual thoroughly before
you start install.

Please always use proper tools for
installment.

Packaging and small parts may have
chocking hazard, please keep them away
from children and pets.

Please clean the product with dry clean
cloth, some of the parts may be able to
wash directly. Check with the product
description!

Please keep the product away
from fire.

Please keep the product away from
sharp objects.

IF the product is placed under direct
sunlight, the pattern or color might
fade away.


Do not jump on the product.

Check the product periodically to make
sure everything is tightened.

If you have any questions else, please
contact us, we will be glad to help
you out.



Two people

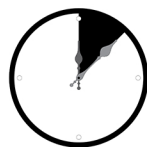

Around 45 min

PRDOUCT DESCRIPTION

Made with waterproof Oxford fabric, this chair is built to withstand various outdoor conditions and is easy to clean.

Soft, resilient cushions provide both comfort and support, making it perfect for extended outdoor relaxation.

The solid wood frame ensures long lasting strength and durability, with a weight capacity of 400 lbs.

· Ideal for patios, gardens, decks, and more, this chair suits any outdoor environment.


With its sturdy construction and weatherproof fabric, this chair is designed to last through all seasons.

Dream




House

EXPLODED VIEW

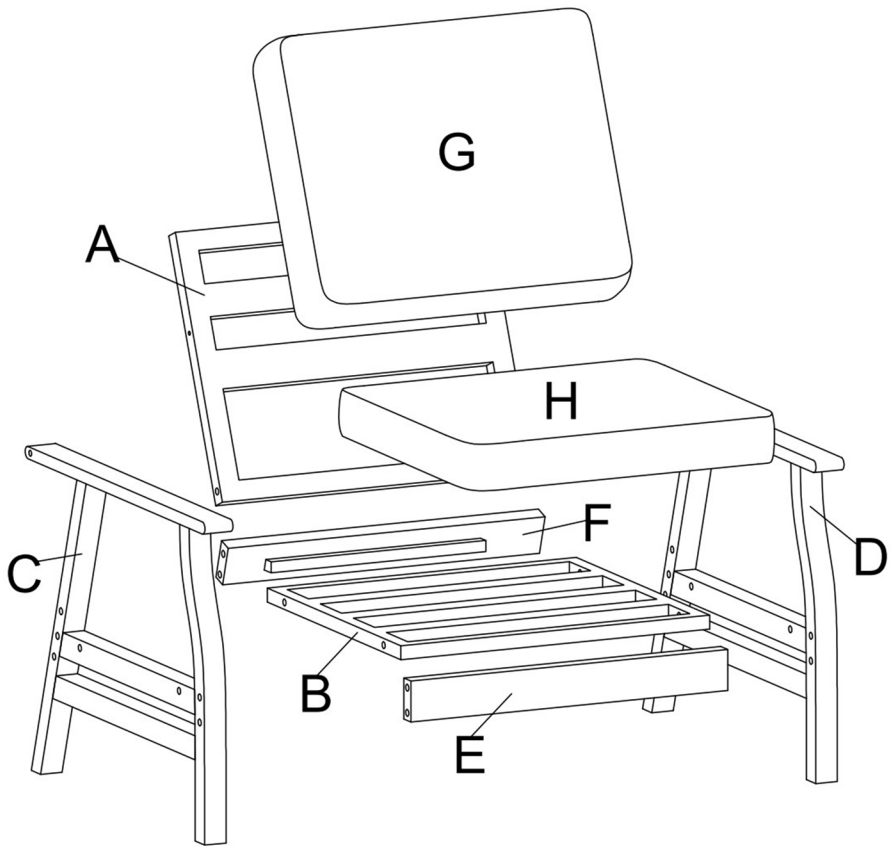

PARTS

A*1

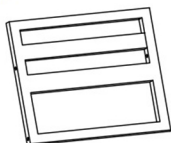


Back frame

B*1



Seat frame

C*1



Right arm

D*1



Left arm

E*1



Front cross member

F*1



Back cross member

G*1



Back cushion

H*1



Seat cushion

I*1



Cover of backrest

J*1



Cover of seat

HARDWARE

TOOL LIST

①*16



M6*50mm
Bolts

②*8




Ø10*13mm
Vertical nut

③*16



Black hole
cover

④*1





Allen key

BE SURE TO CHECK ALL
PACKING MATERIAL
FITTING THE PACKING
LIST. BE CAREFUL FOR
SMALL PARTS, WHICH
MAY HAVE COME
LOOSE INSIDE THE
CARTON DURING
SHIPMENT.


step 1

TAKE OUT THE CUSHIONS (G & H) FROM THE COMPRESSION BAGS, AND ALLOW IT TO RECOVER TO ITS ORIGINAL SHAPE, IT MIGHT TAKE UP TO 24 HOURS TO BE FULLY RECOVERED, YOU MAY GENTLY SLAP ON THEM TO SPEED UP THE PROCESS.

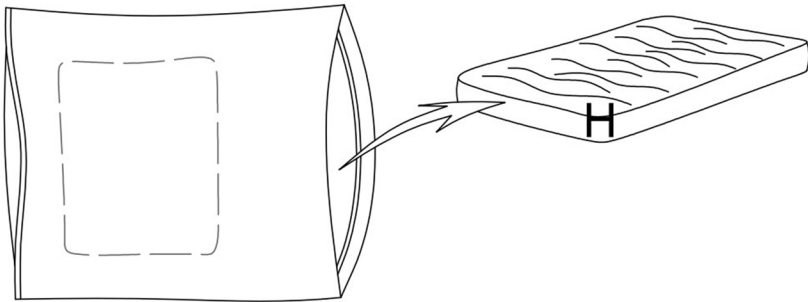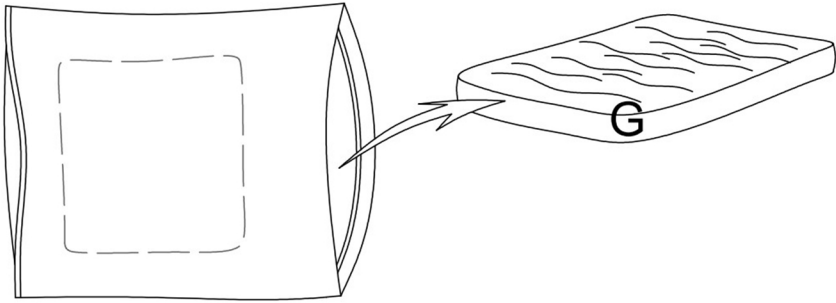


step 2

PUT THE CUSHIONS (G & H) INTO THE CUSHION COVERS (I & J) AS SHOWN.

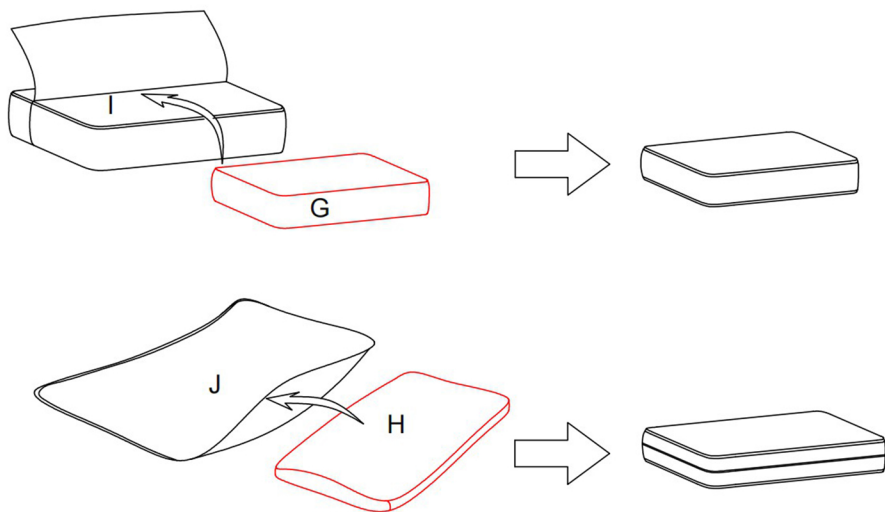


step 3

INSTALL THE RIGHT ARM(C) ONTO THE SEAT FRAME (B) AS SHOWN, USE THE ALLEN WRENCH (4) PROVIDED TO TIGHTEN THE BOLTS (1).

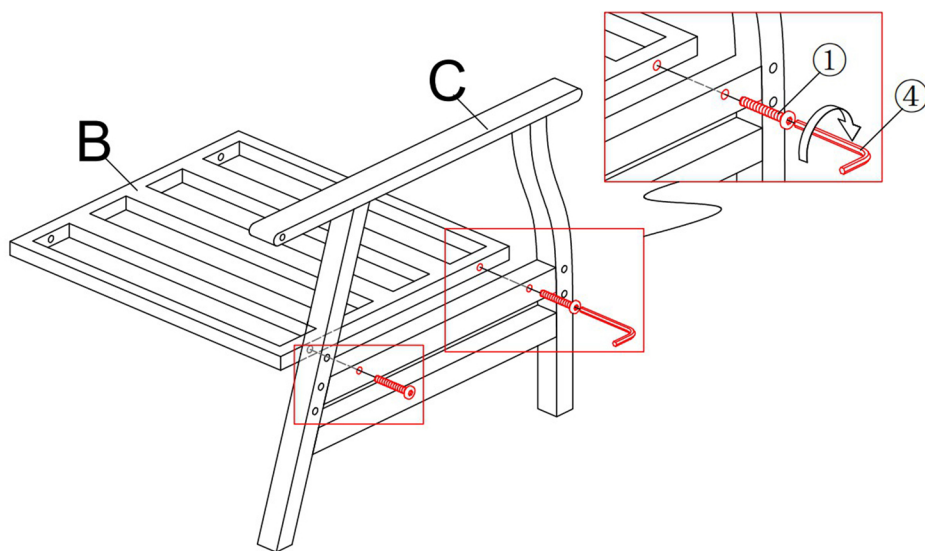


step 4

INSTALL THE LEFT ARM (D) ONTO THE SEAT FRAME (B) AS SHOWN, USE THE ALLEN WRENCH (4) PROVIDED TO TIGHTEN THE BOLTS (1).

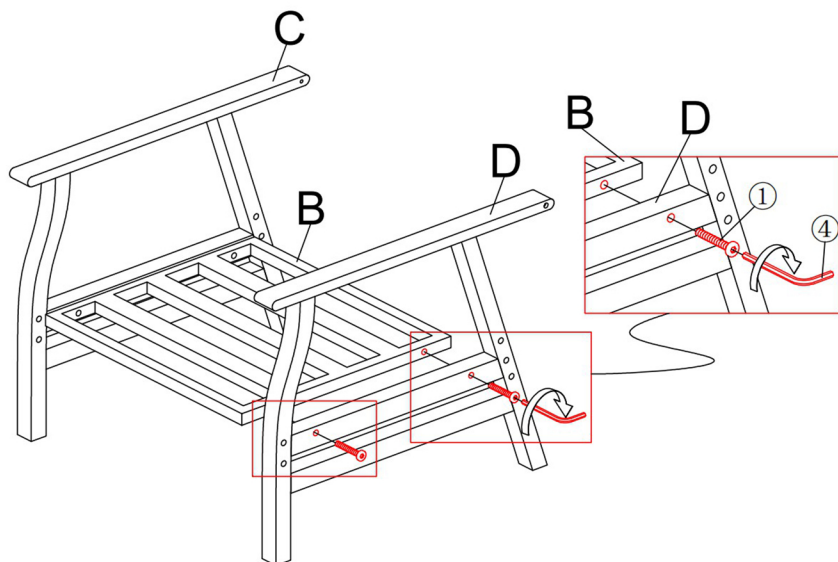


step 5

PLACE THE VERTICAL NUTS (2) INTO THE HOLES ON BOTH FRONT CROSS MEMBER (E) AND BACK CROSS MEMBER (F) AS SHOWN, MAKE SURE THE HOLES ON VERTICAL NUTS ARE ALIGNED WITH THE HOLES ON CROSS MEMBERS' SIDES.

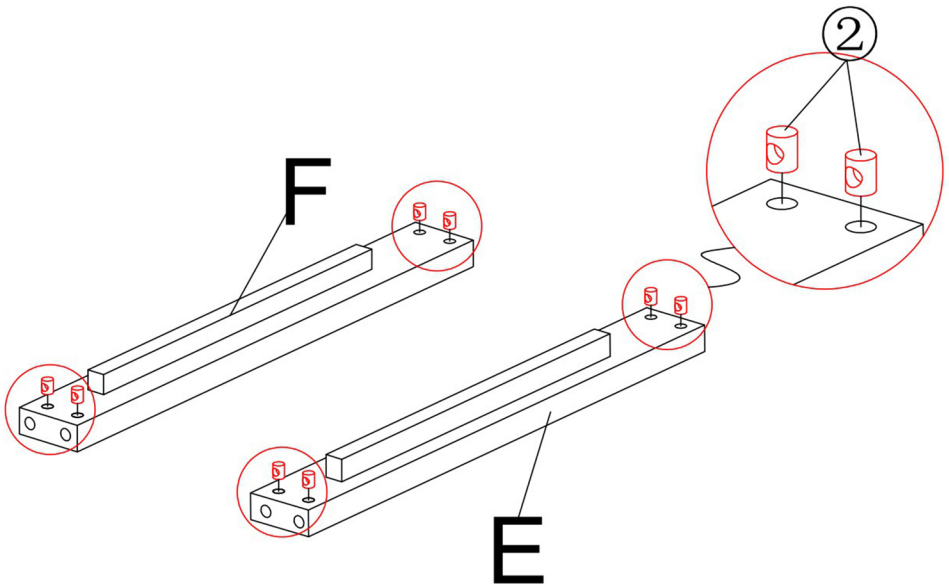


step 6

INSTALL THE FRONT CROSS MEMBER (E) ONTO THE SEAT FRAME AS SHOWN.

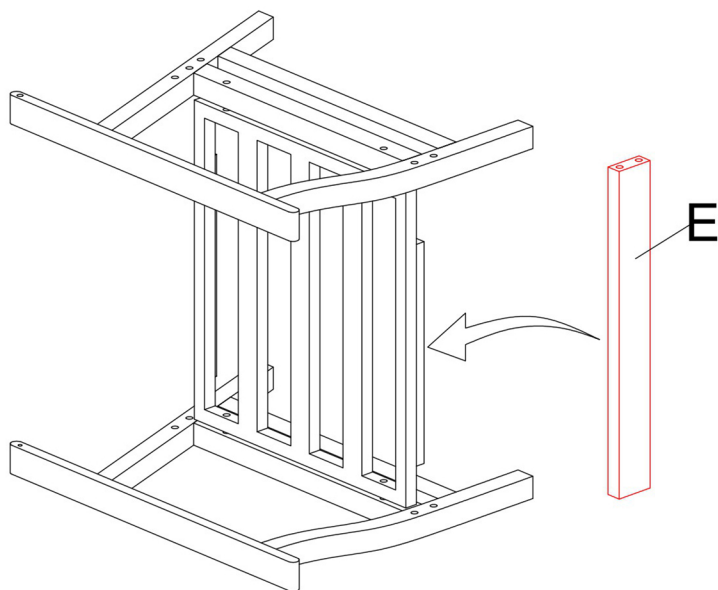


step 7

USE THE ALLEN WRENCH (4) PROVIDED TO TIGHTEN THE BOLTS (1),
MAKE SURE ALL THE BOLTS ARE FULLY TIGHTENED BEFORE NEXT STEP.

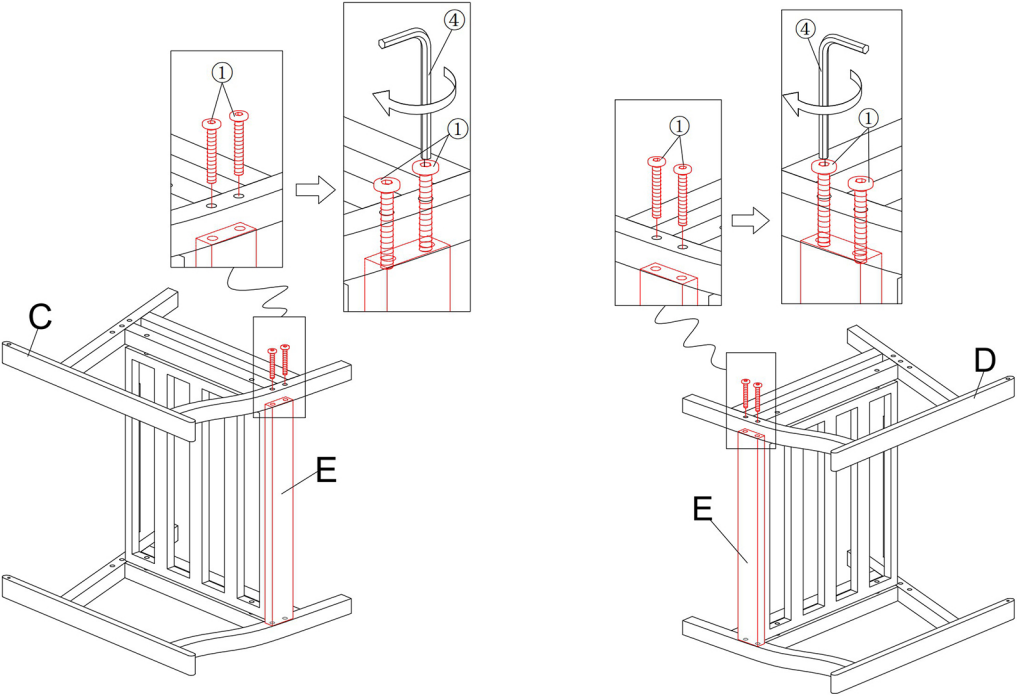


step 8

INSTALL THE BACK CROSS MEMBER (F) ONTO THE SEAT FRAME AS SHOWN.

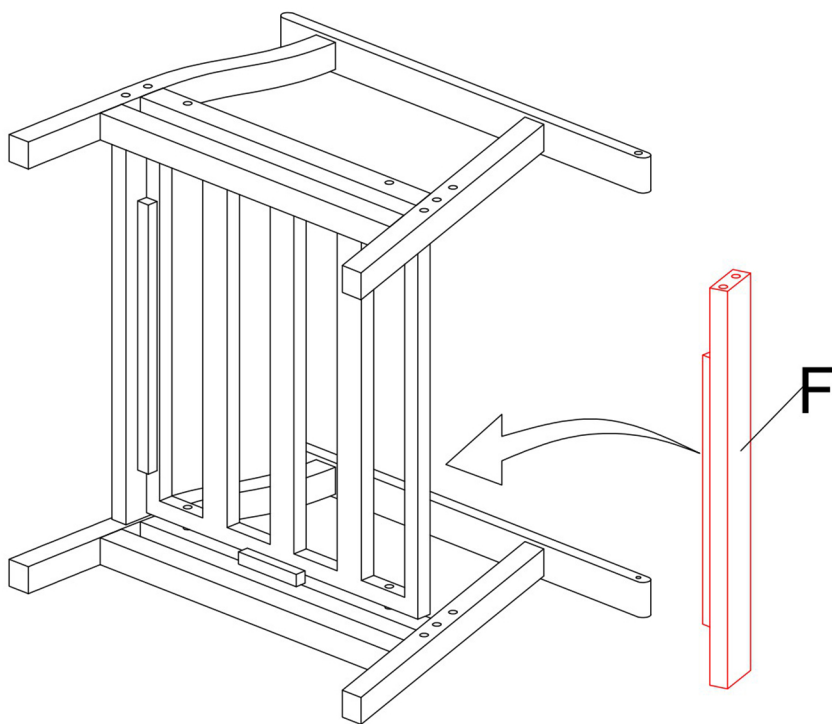


step 9

USE THE ALLEN WRENCH (4) PROVIDED TO TIGHTEN THE BOLTS (1),
MAKE SURE ALL THE BOLTS ARE FULLY TIGHTENED BEFORE NEXT STEP.

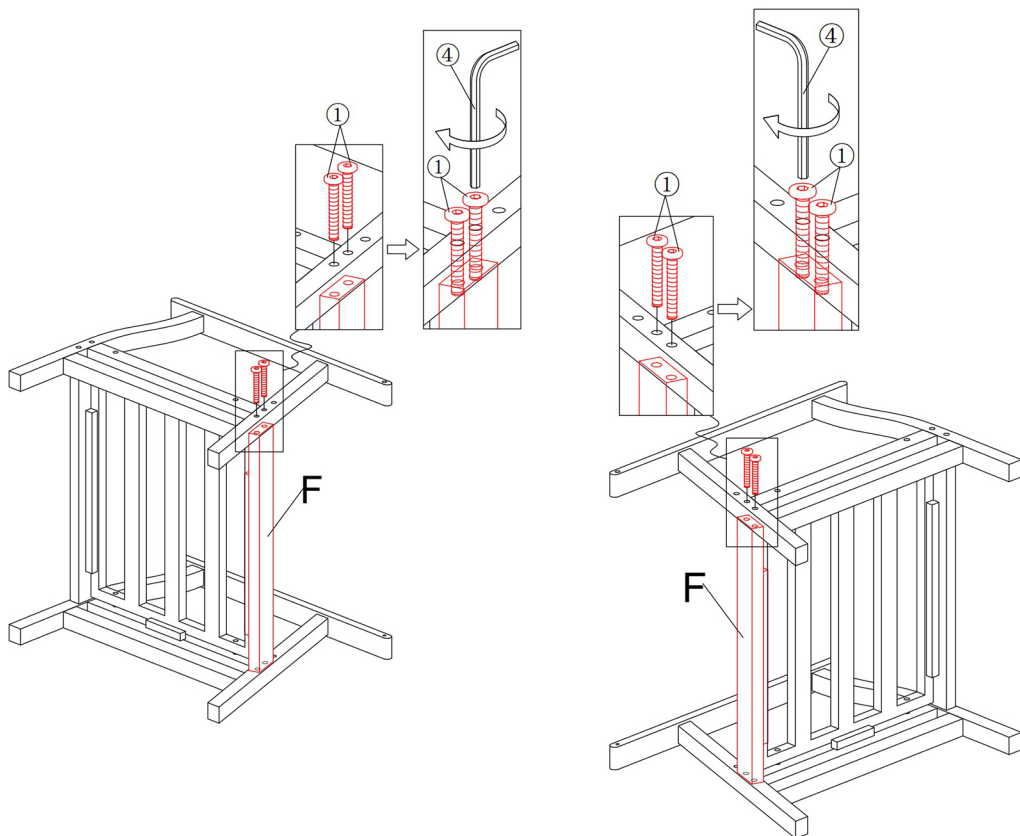


step 10

INSTALL THE BACK FRAME (A) ONTO THE SEAT FRAME AS SHOWN.

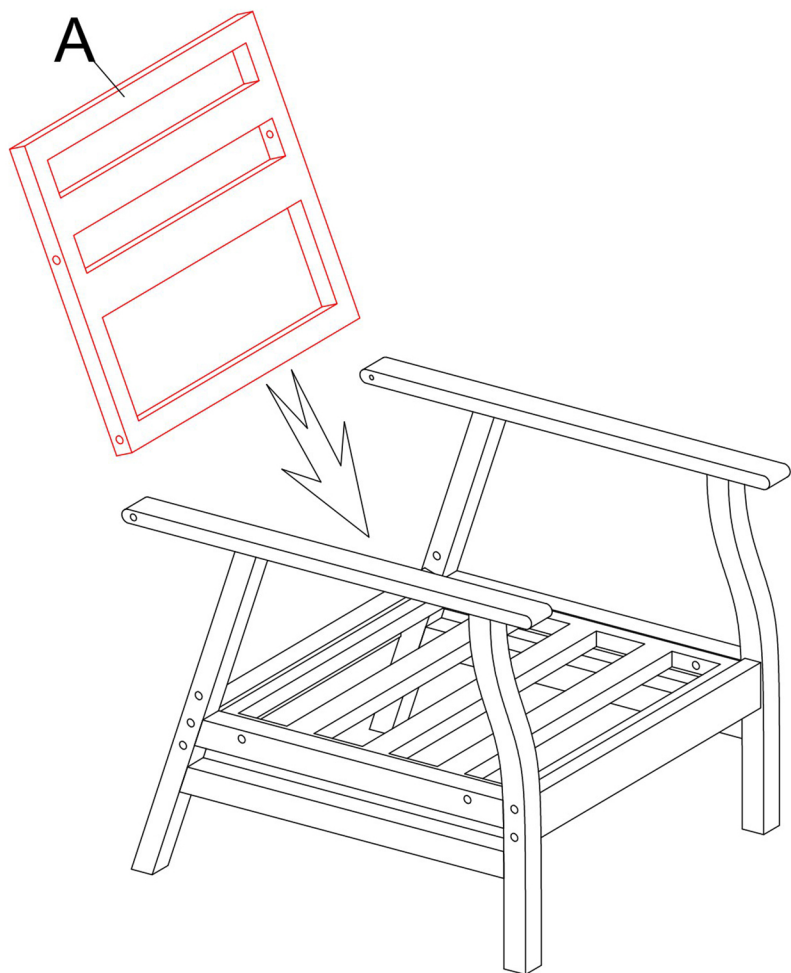


step 11

USE THE ALLEN WRENCH (4) PROVIDED TO TIGHTEN THE BOLTS (1),
MAKE SURE ALL THE BOLTS ARE ALIGNED CORRECTLY BEFORE TIGHTEN.

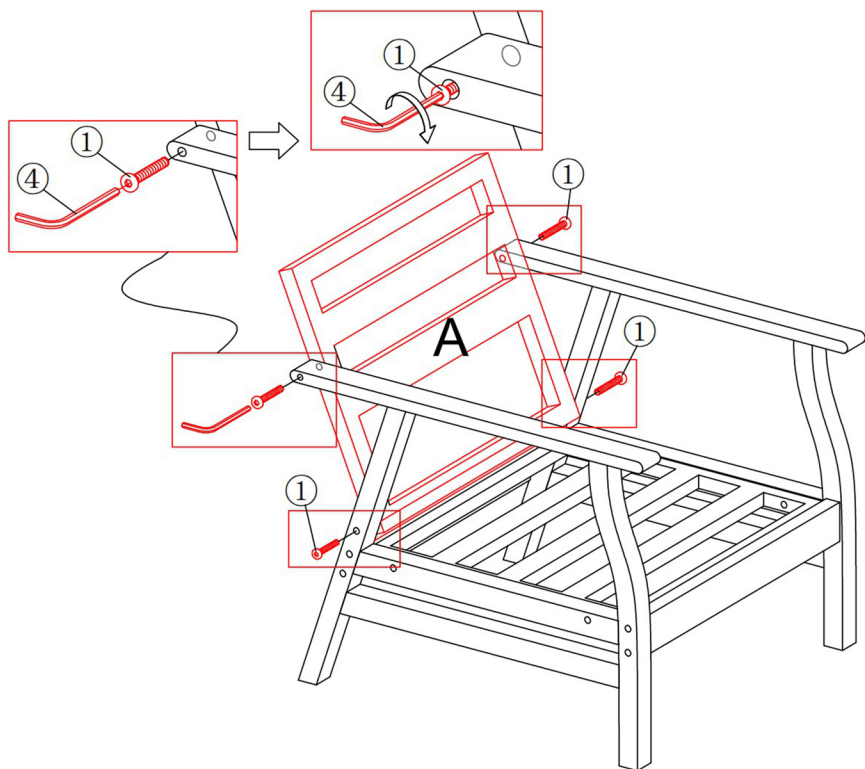


step 12

PLACE THE PLASTIC BLACK HOLE COVERS (3) INTO EACH BOLT HOLES AS SHOWN.

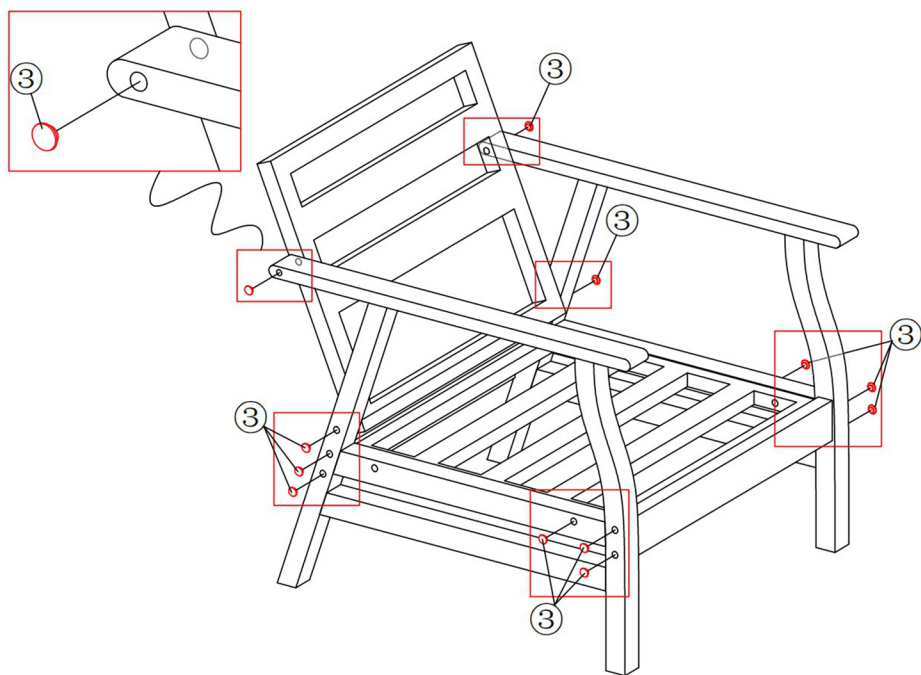


step 13

PLACE THE SEAT CUSHION ONTO THE SEAT.

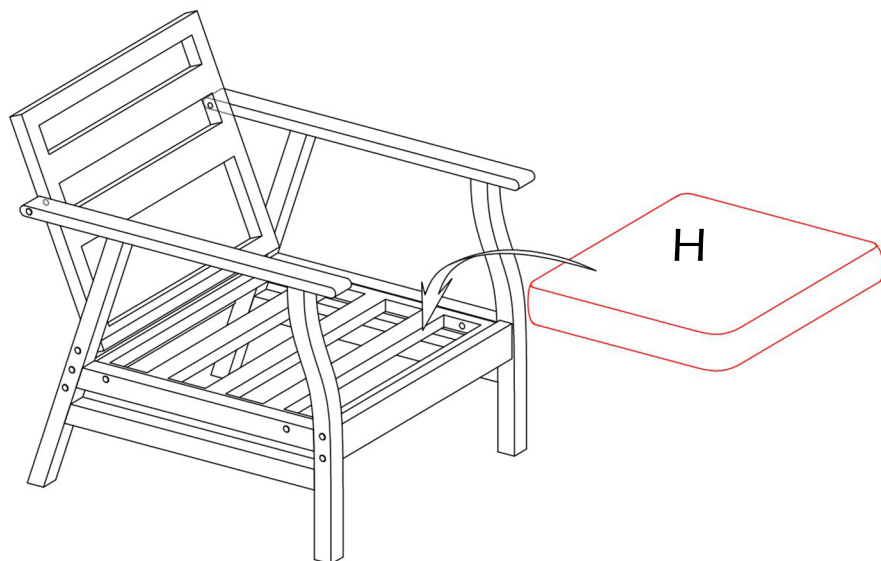


step 14

PLACE THE BACK CUSHION ONTO THE SEAT AS SHOWN.

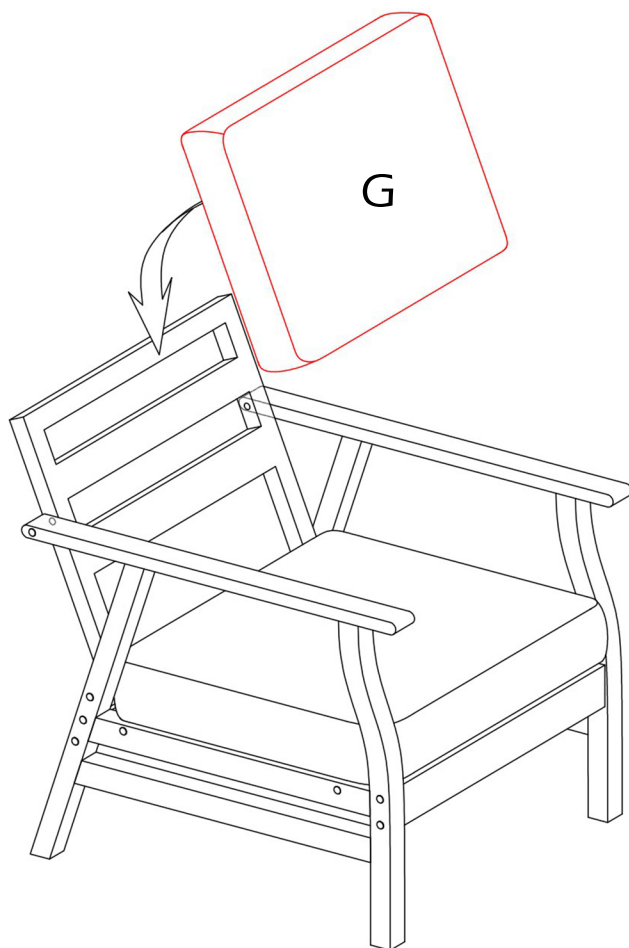

step 15

THE ASSEMBLY IS COMPLETED, THANK YOU FOR CHOOSING OUR
PRODUCT ,PLEASE ENJOY!

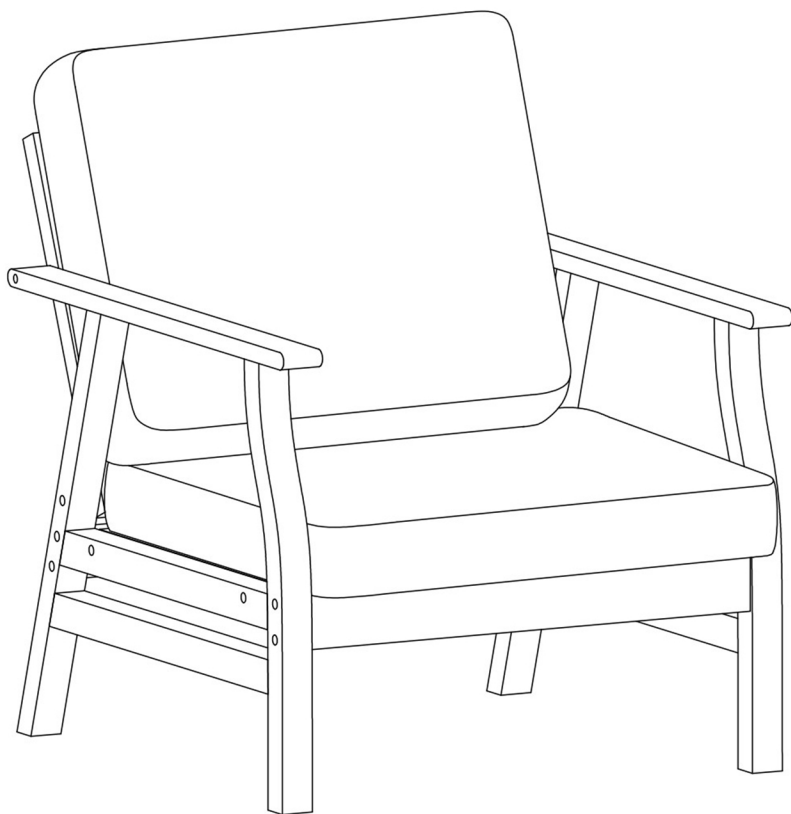



ASSEMBLY INSTRUCTIONS

Tel.5627813327

Please contact us: info@firstopintl.com

<https://www.dreamsidea.com>