



# Assembly Instruction

SKU CODE : N701P249171 / N701P249172

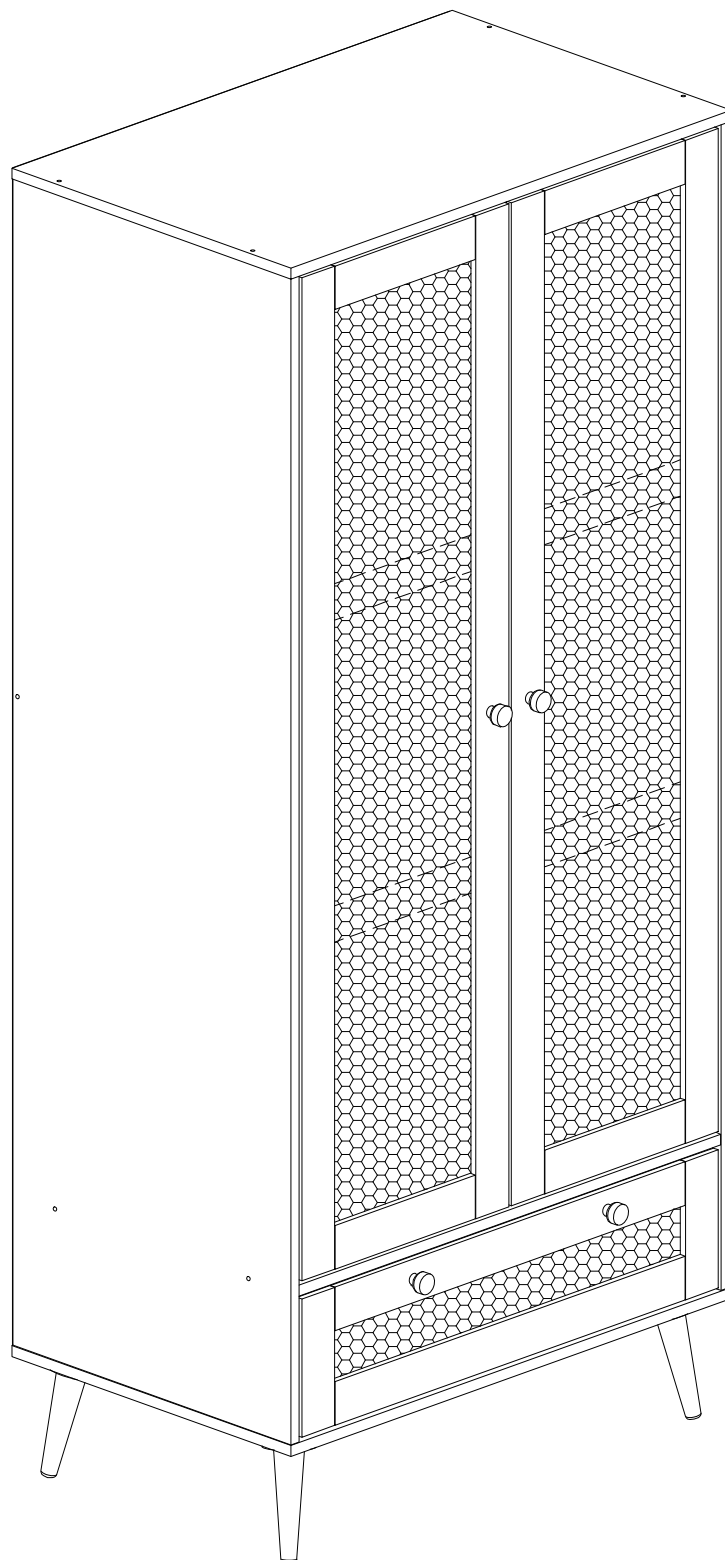

# Assembly Instruction


Detail :

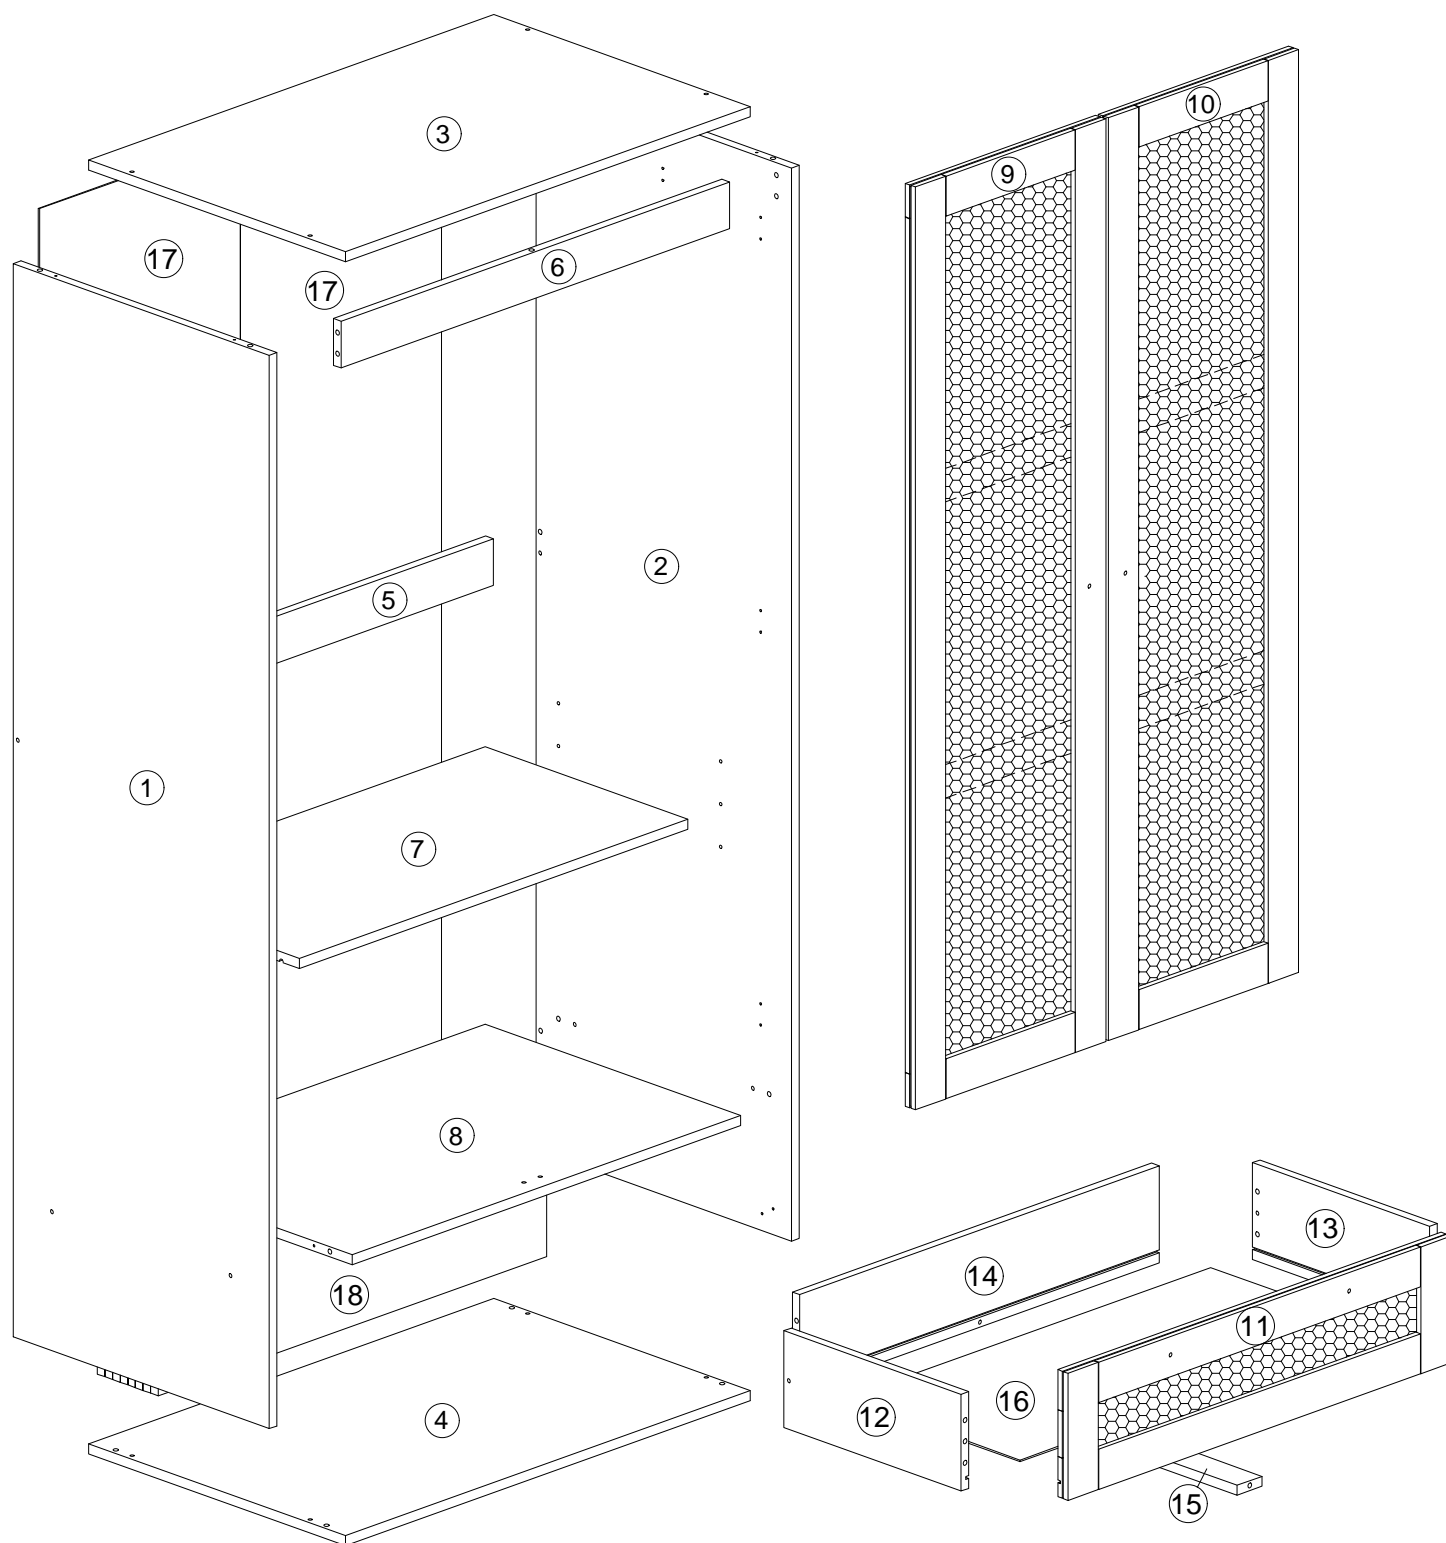

# Assembly Instruction


## Part List (N701P249171)

① X 1

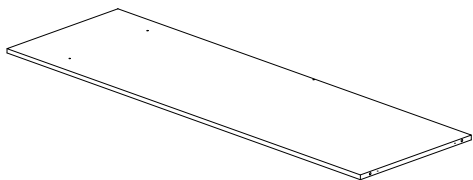


Side Panel - Left

② X 1

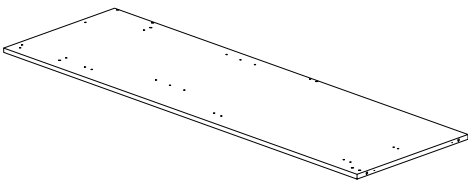


Side Panel - Right

⑨ X 1

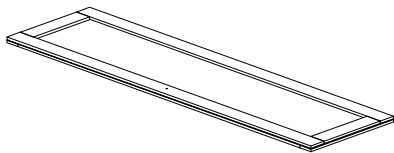


Door Panel - Left

⑩ X 1

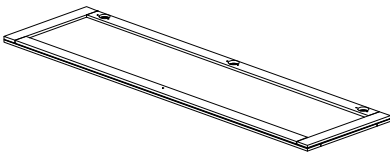

Door Panel - Right

⑰ X 2

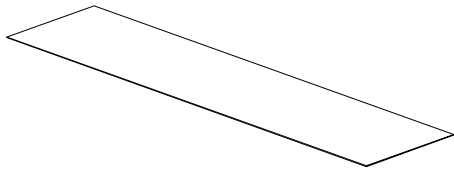


Back Panel

# Assembly Instruction


## Part List (N701P249172)

③ X 1




Top Panel

④ X 1



Bottom Panel

⑤ X 1




Support Panel

⑥ X 1




Top Support Panel

⑦ X 1



Adjust Panel

⑧ X 1




Partition Panel

⑪ X 1




Drawer Front Panel

⑫ X 1




Drawer Side Panel - Left

⑬ X 1



Drawer Side Panel - Right

⑭ X 1




Drawer Back Panel

⑮ X 1




Drawer Support Panel

⑯ X 1



Drawer Bottom Panel





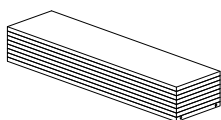
⑱ X 1







Back Panel Small

# Assembly Instruction

## Hardware List (N701P249172)

No.	SHAPE	DESCRIPTION	Qty.
A		8x25mm Dowel (Wood)	31Pcs
B		15mm Myfix Minifix	3Sets
C		M3.5x16mm Screw	47Pcs
D		M4x45mm Screw	17Pcs
E		M3.5x12mm Screw	6Pcs
F		Oil Cup Shaped Single Handle	4Pcs
G		M4x26mm Handle Screw	4Pcs
H		V Bracket	2Pcs
I		Hinges 7/8	6Pcs
J		Shelf Support	4Pcs
K		2 Pin Stopper	1Pc
L		Round Wooden Leg D40 x D20 x H150 mm With Hanger Bolt M8 (Out 15mm)	4Pcs
M		Mounting Support Leg H25.3mm x 71.5m	4Pcs
N		M4x20mm Screw	16Pcs
O		6/8 Power Pin	34Pcs
P		Drawer Slide (350mm)	1Set
Q		Aluminium Pipe(760mm)	1Pc
R		Sticker	6Pcs


## Anti Tipping Hardware (N701P249172)

No.	SHAPE	DESCRIPTION	Qty.
a		Mounting Bracket	2Pcs
b		TP 6# x 5/8" Screw	1Pc
c		TP 8# x 2" Screw	1Pc
d		Restraint Strap	1Pc

# Assembly Instruction


## Left Drawer Silde (P)

Flat Shaped - Left

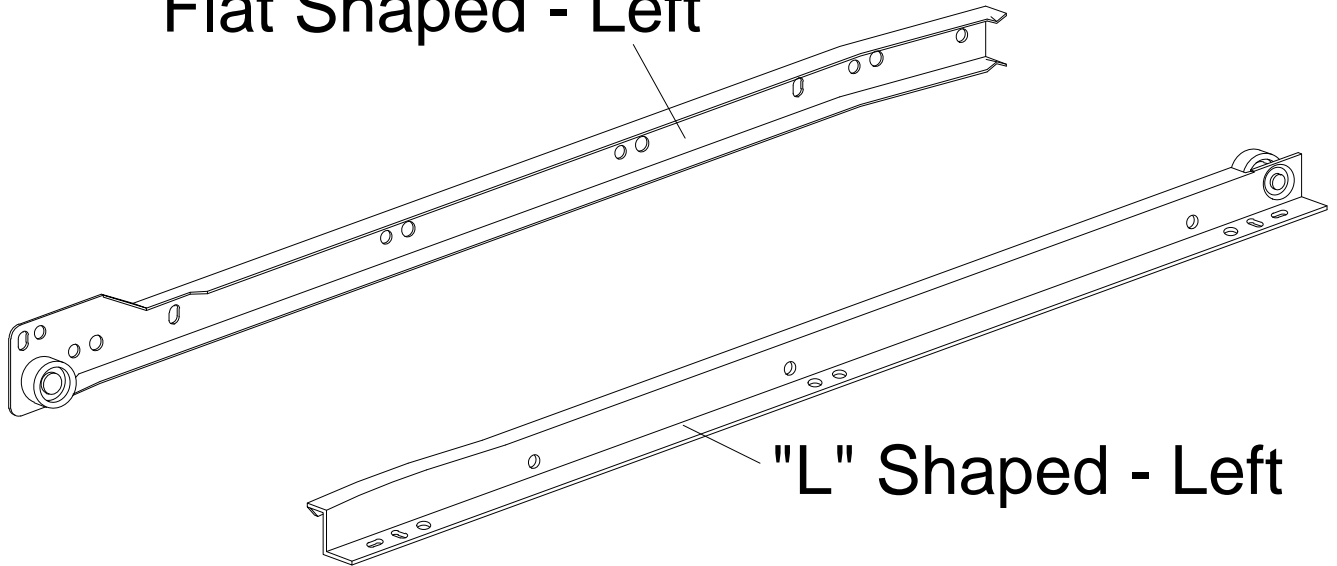

## Right Drawer Silde (P)



"L" Shaped - Right

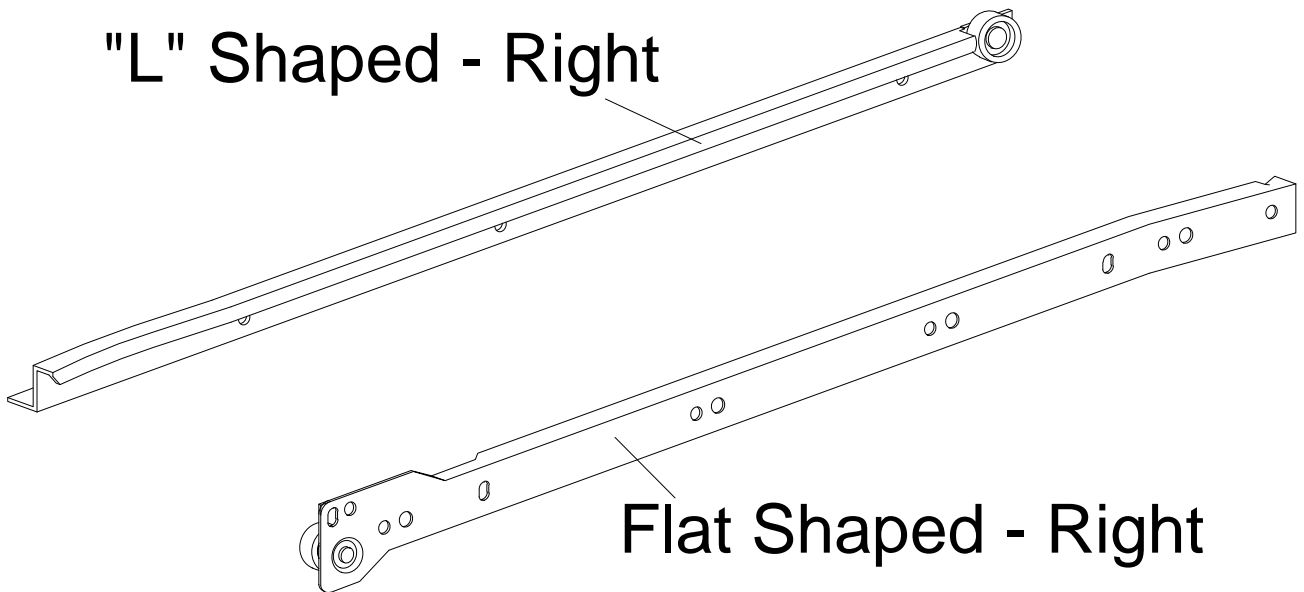


# Assembly Instruction


## Step 1


A		8x25mm Dowel (Wood)	31Pcs
---	---	---------------------	-------

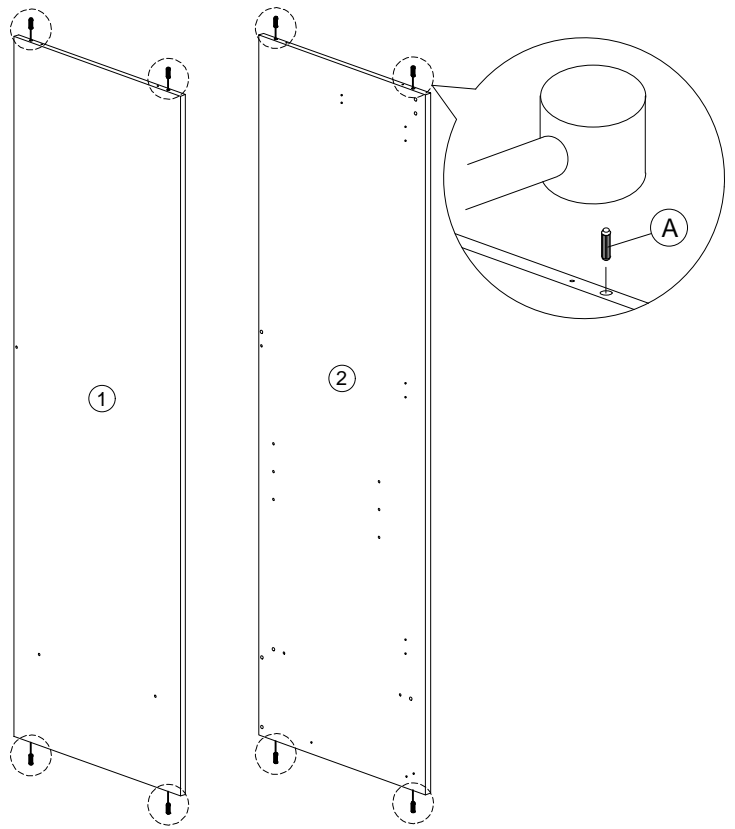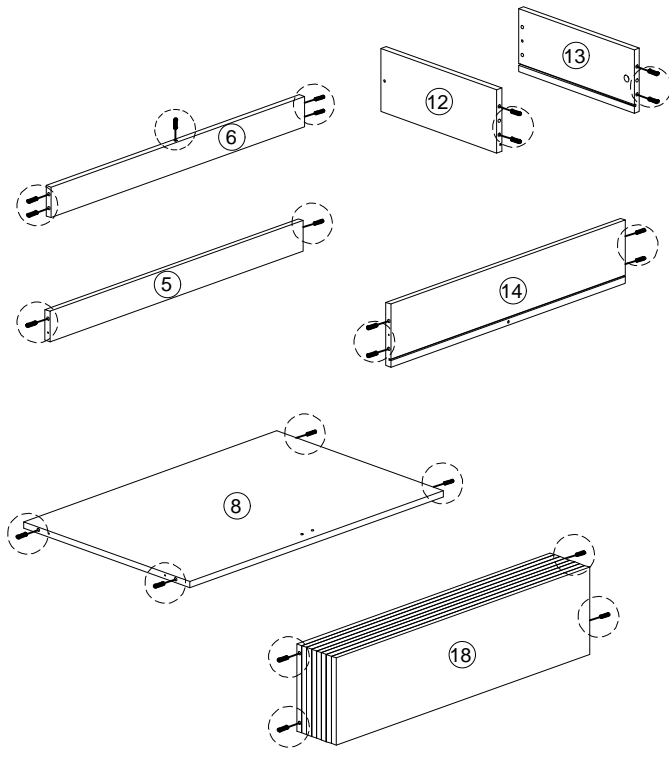

## Step 2



C		M3.5x16mm Screw	4Pcs
---	---	-----------------	------

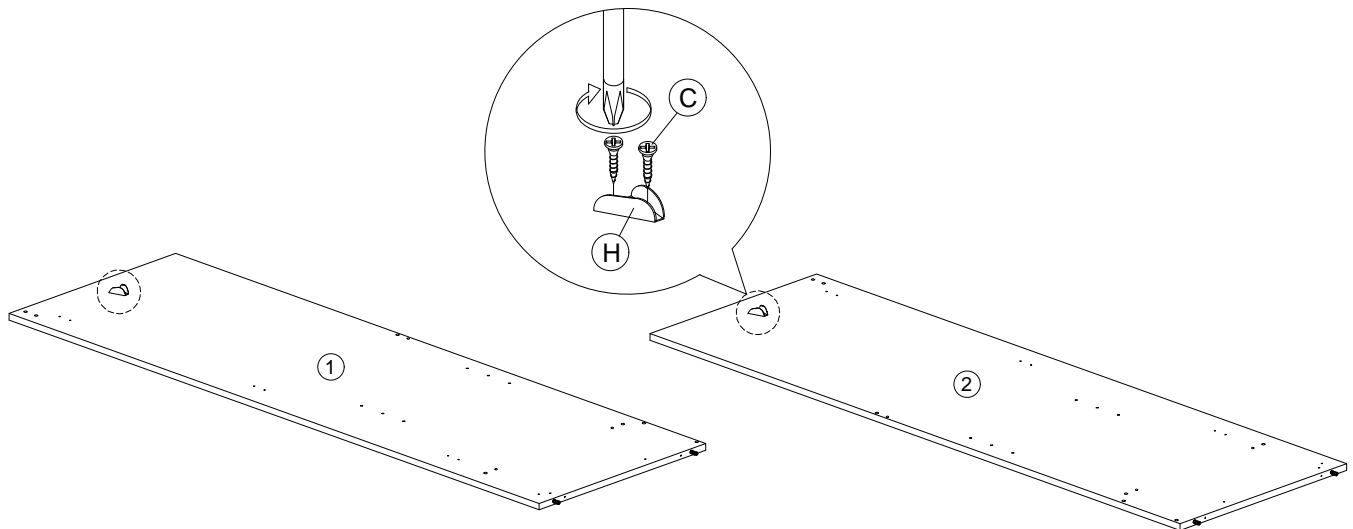
H		V Bracket	2Pcs
---	---	-----------	------




# Assembly Instruction


## Step 3


E		M3.5x12mm Screw	6Pcs
P		Drawer Slide 350mm - R	1Pc

P		Drawer Slide 350mm - L	1Pc
---	---	------------------------	-----

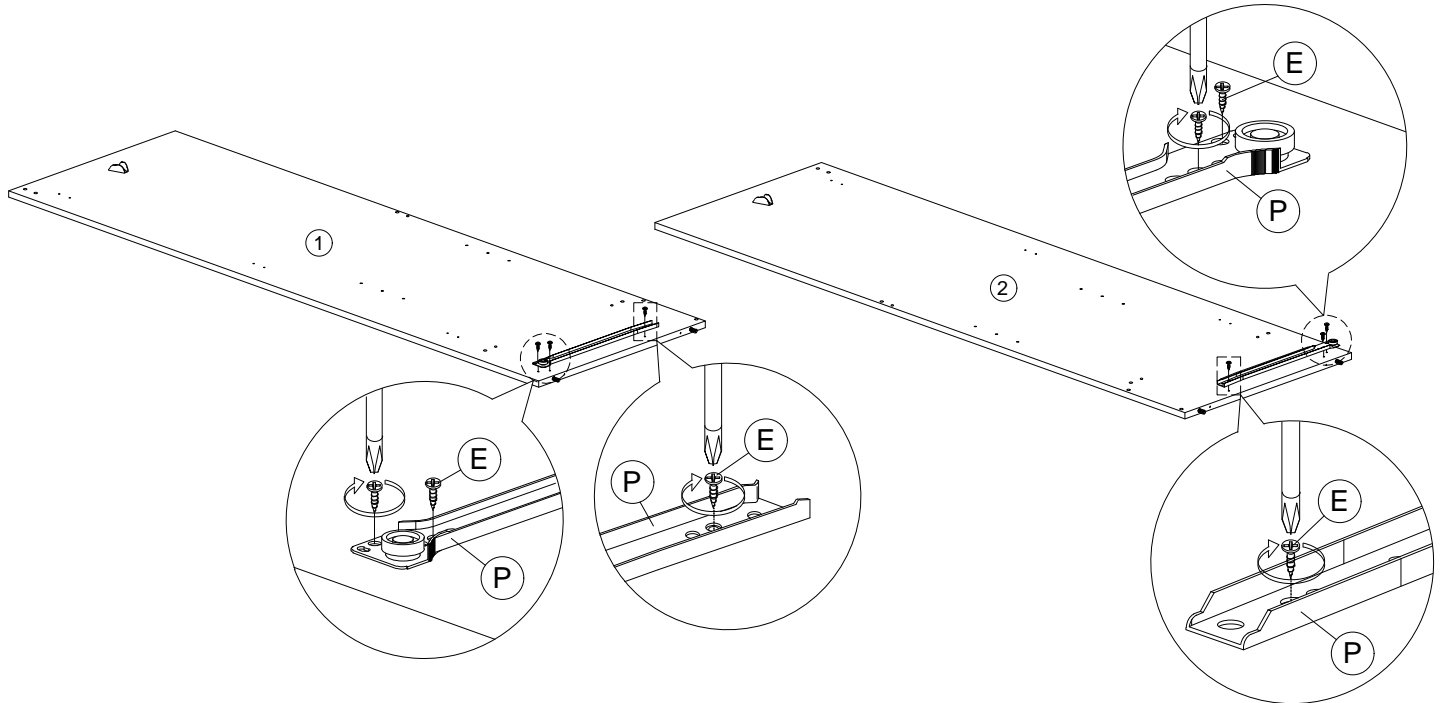



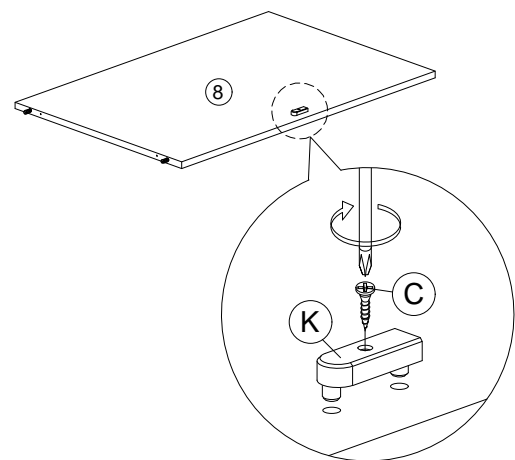
## Step 4

B		Myfix	3Pcs
---	---	-------	------

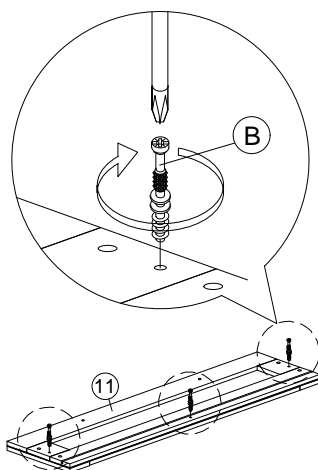

## Step 5



C		M3.5x16mm Screw	1Pc
K		2 Pin Stopper	1Pc







# Assembly Instruction


## Step 6

M		Mounting Support Leg H25.3mm x 71.5mm	4Pcs
N		M4x20mm Screw	16Pcs

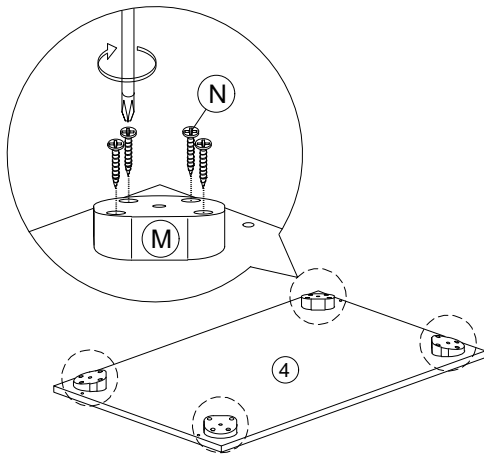




## Step 7

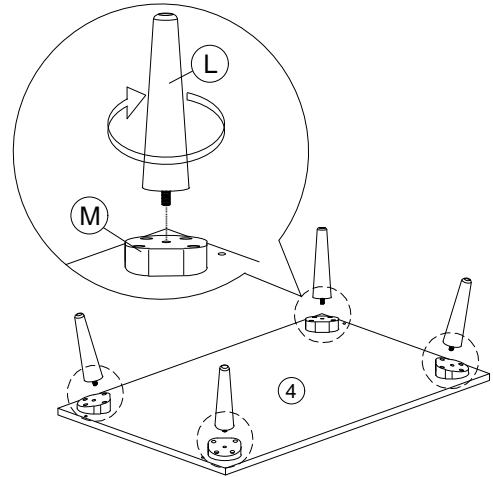L		Round Wooden Leg D40 x D20 x H150 mm With Hanger Bolt M8 (Out 15mm)	4Pcs
---	---	---	------




## Step 8

D		M4x45mm Screw	3Pcs
R		Sticker	3Pcs

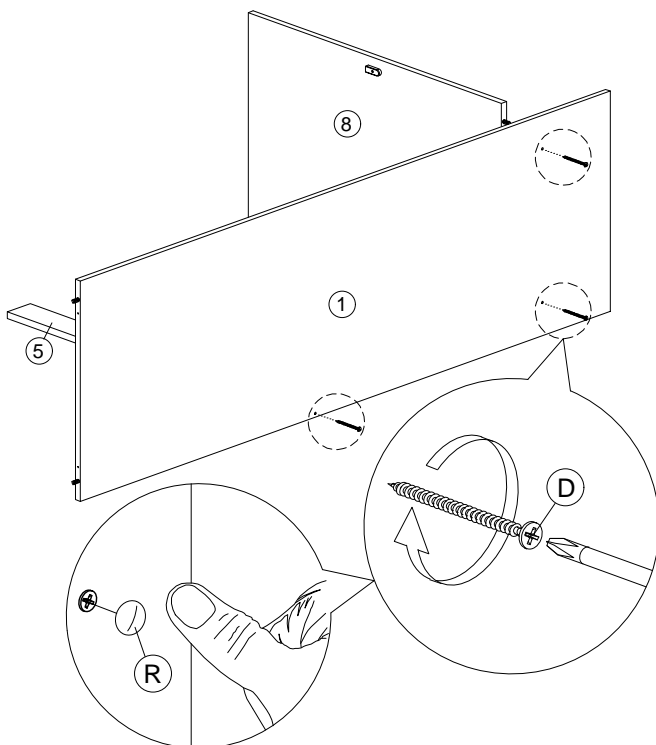


## Step 9

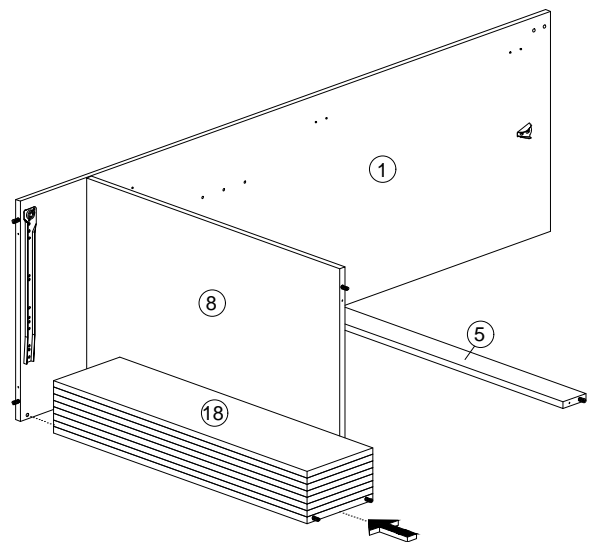


# Assembly Instruction


## Step 10


D		M4x45mm Screw	3Pcs
---	---	---------------	------

R		Sticker	3Pcs
---	---	---------	------

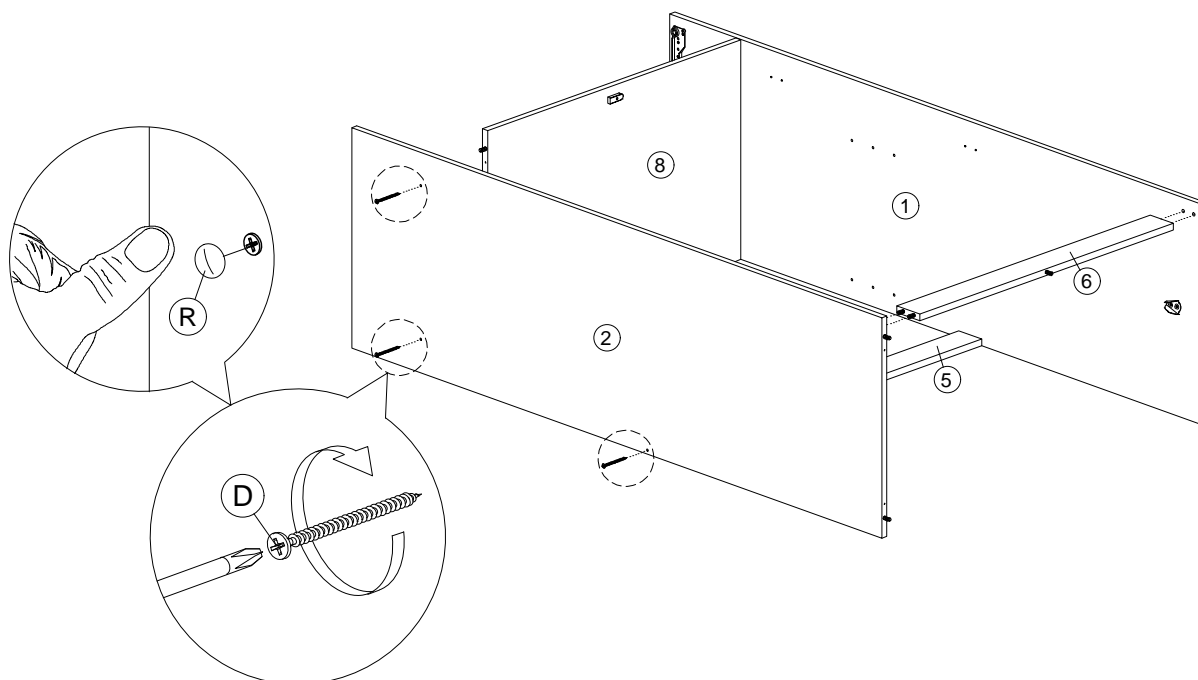


## Step 11


D		M4x45mm Screw	4Pcs
---	---	---------------	------

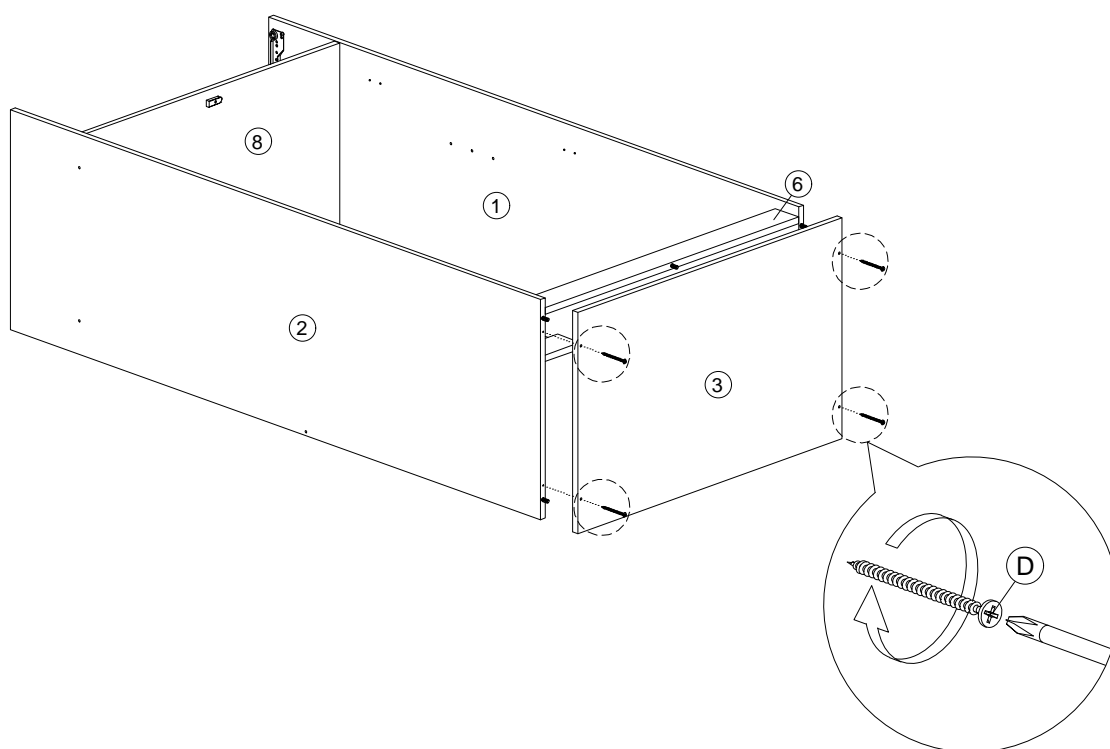

# Assembly Instruction

## Step 12


D		M4x45mm Screw	4Pcs
---	---	---------------	------

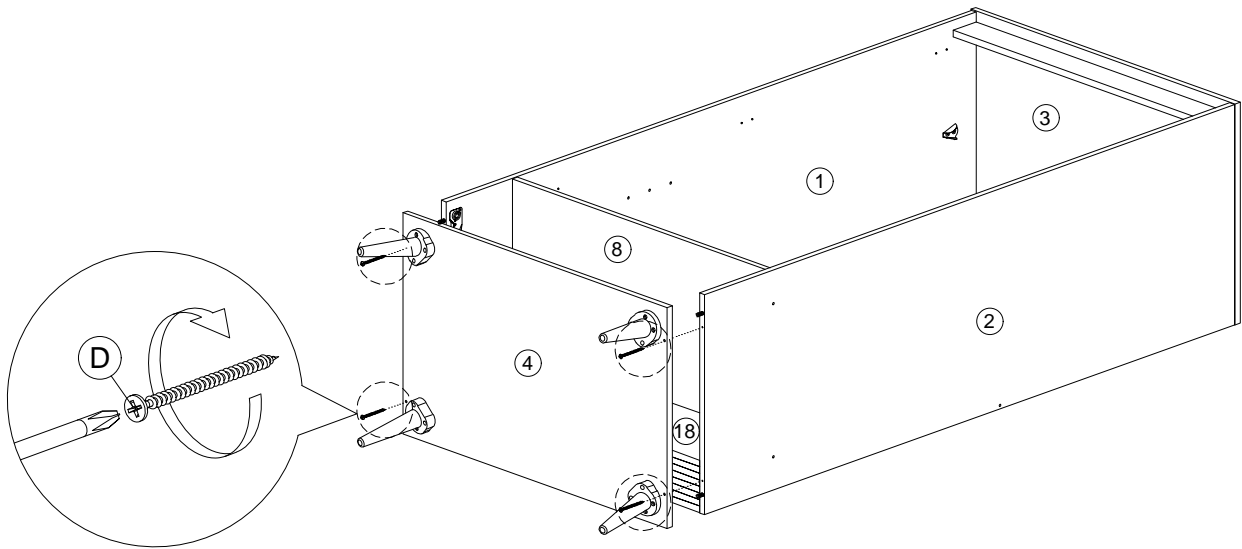

## Step 13



O		6/8 Power Pin	34Pcs
---	---	---------------	-------

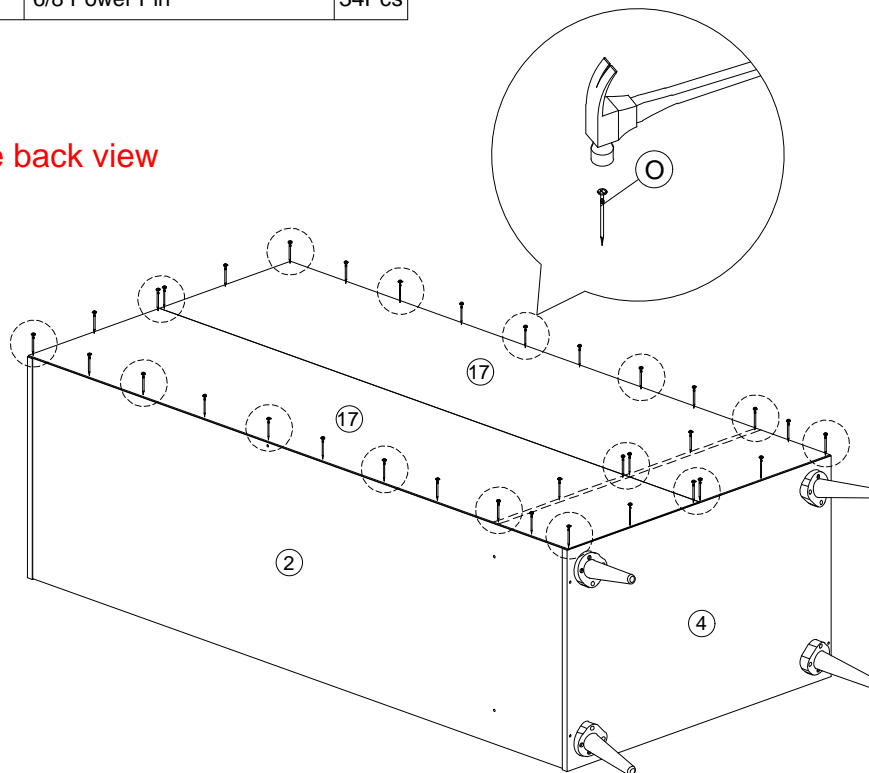
\* Flip to the back view




# Assembly Instruction


## Step 14

Q		Aluminium Pipe(70mm)	1Pc
H		V Bracket	2Pcs

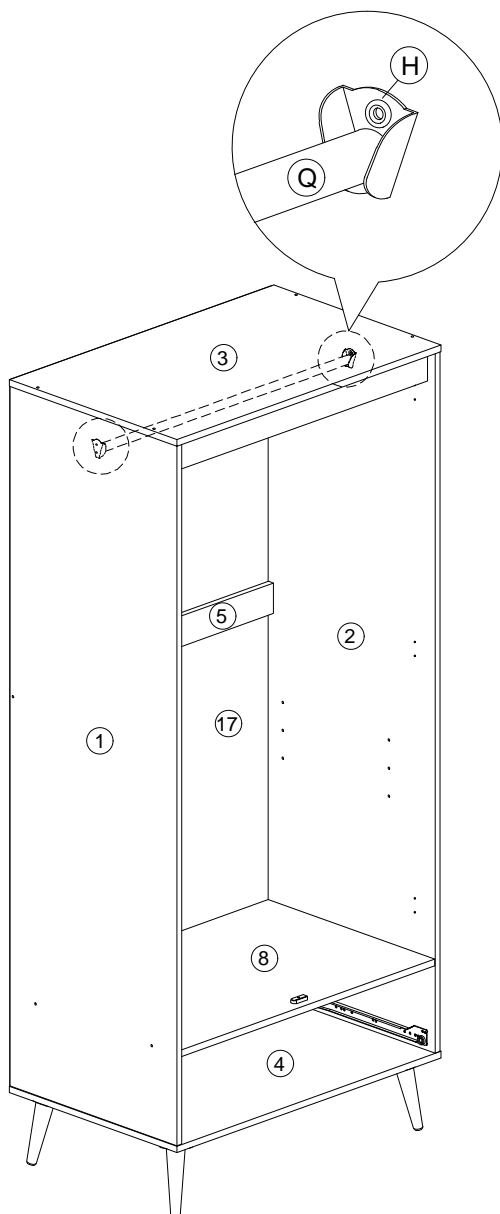


## Step 15

J		Shelf Support	4Pcs
---	---	---------------	------

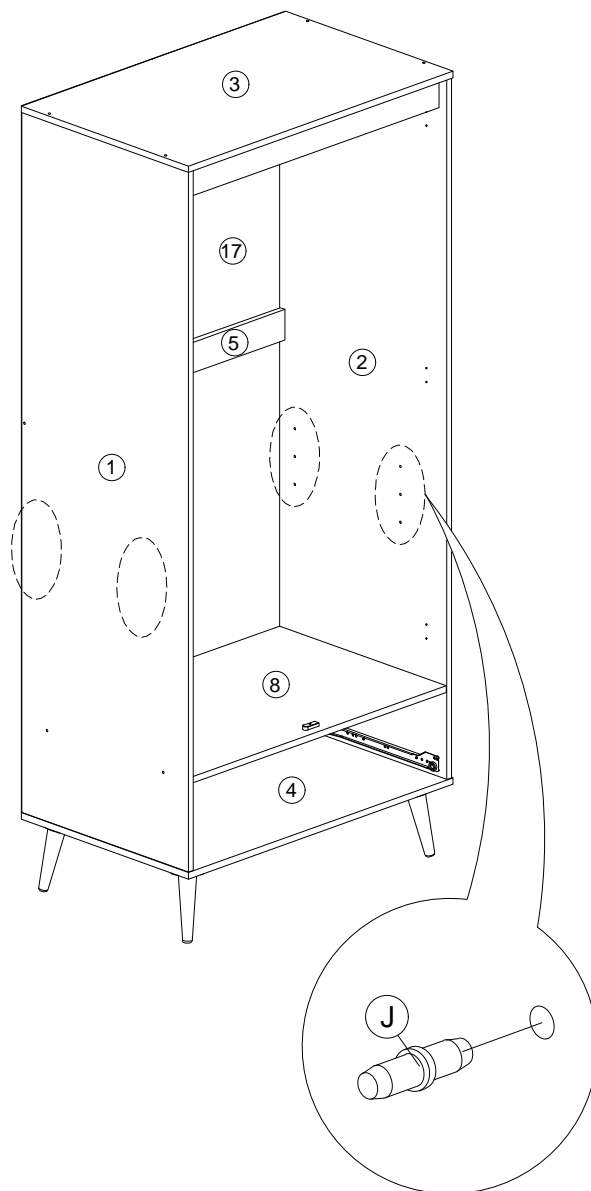



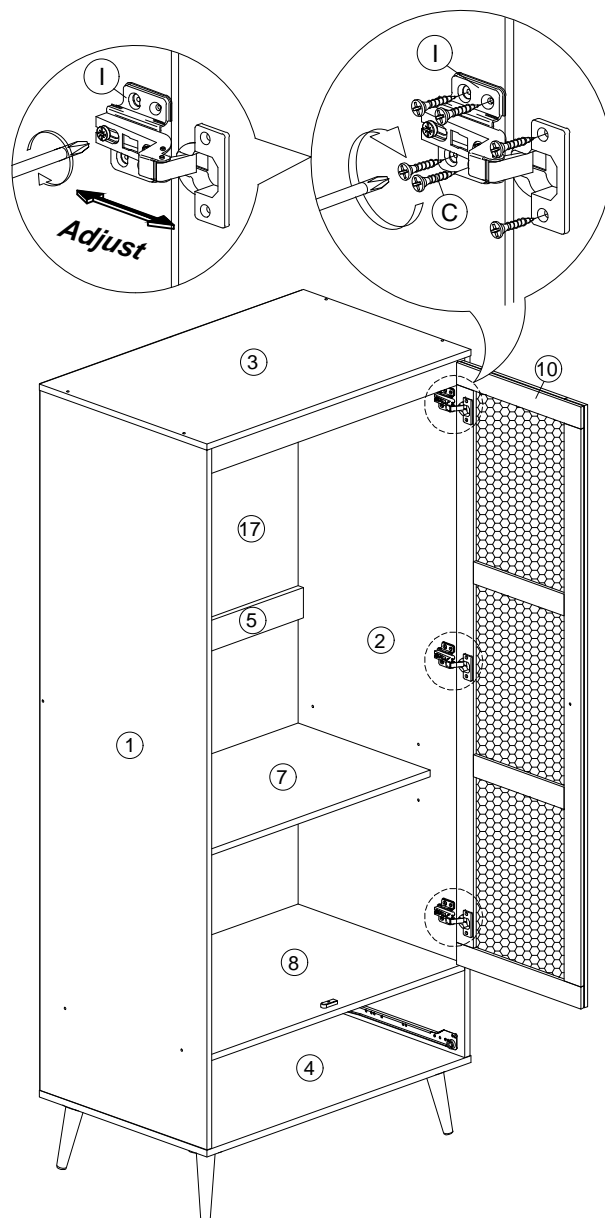
# Assembly Instruction

## Step 16

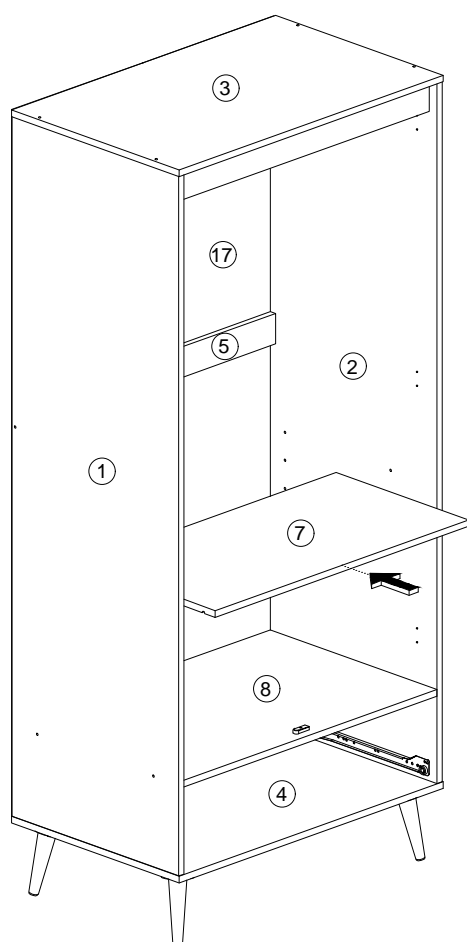



## Step 17


C		M3.5x16mm Screw	18Pcs
I		Hinges 7/8	3Pcs





# Assembly Instruction


## Step 18

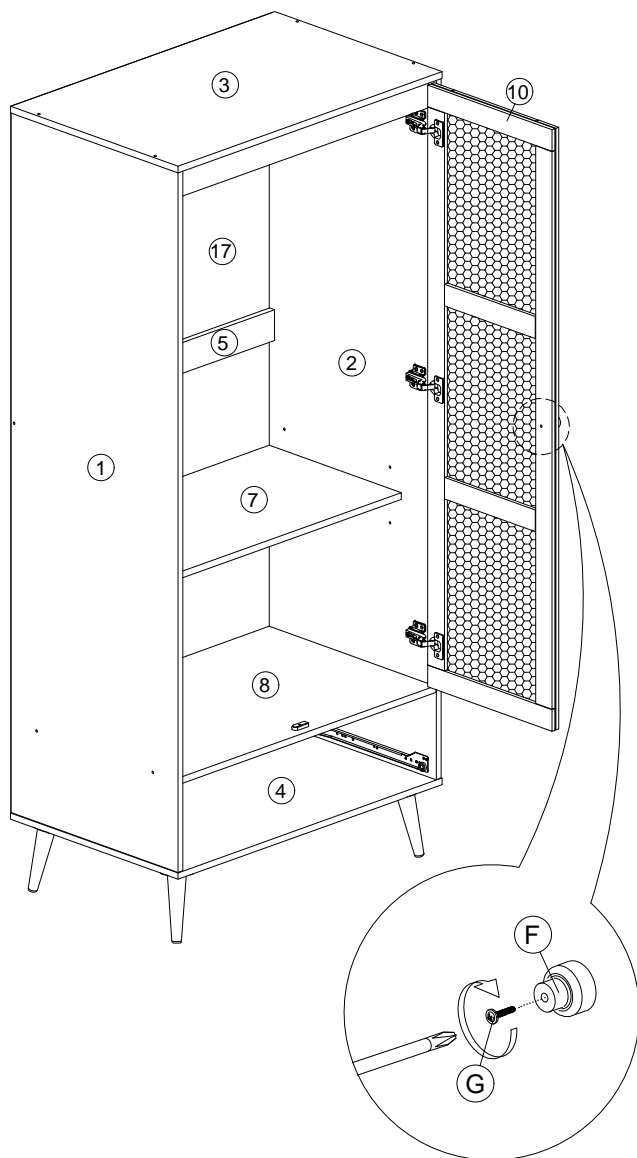F		Oil Cup Shaped Single Handle	1Pc
G		M4x26mm Handle Screw	1Pc





## Step 19

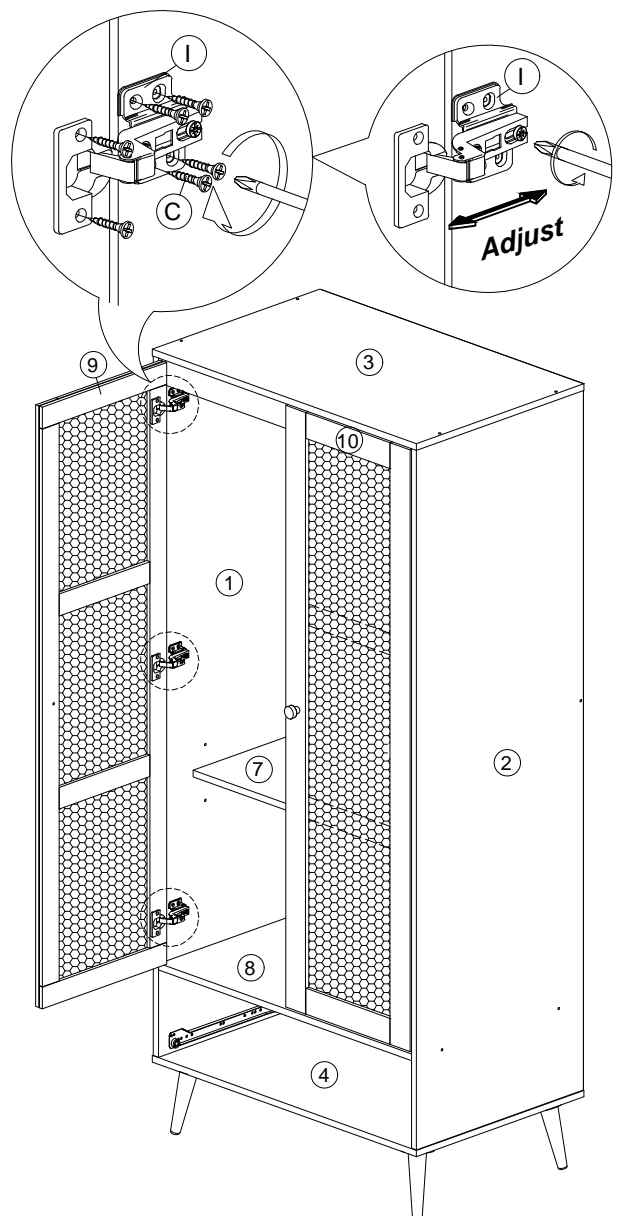
C		M3.5x16mm Screw	18Pcs
I		Hinges 7/8	3Pcs




# Assembly Instruction


## Step 20

F		Oil Cup Shaped Single Handle	1Pc
G		M4x26mm Handle Screw	1Pc

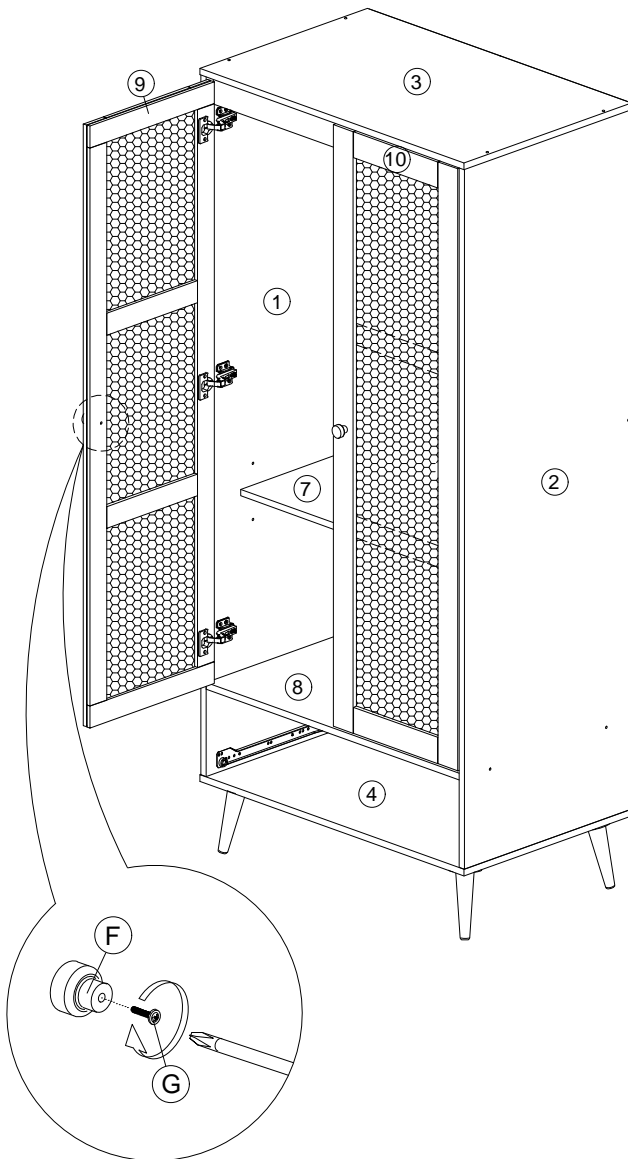


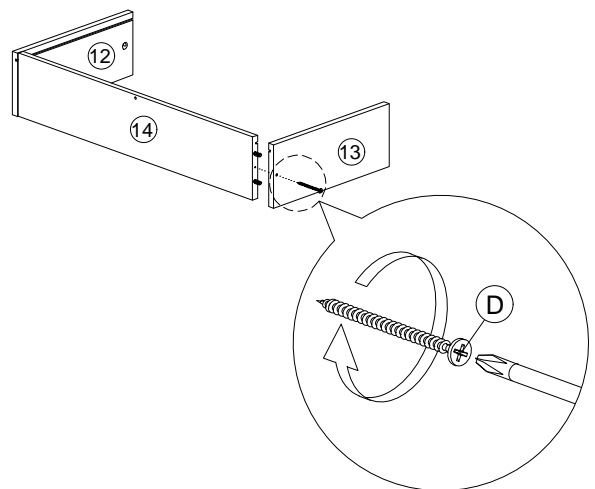
## Step 21

D		M4x45mm Screw	1Pc
---	---	---------------	-----

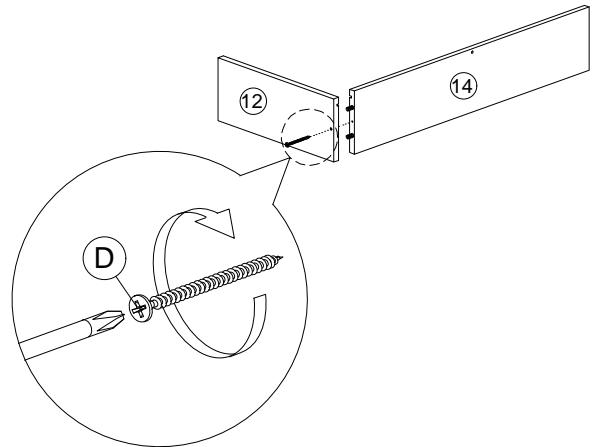


## Step 22


D		M4x45mm Screw	1Pc
---	---	---------------	-----




# Assembly Instruction

## Step 23


D		M4x45mm Screw	1Pc
---	---	---------------	-----

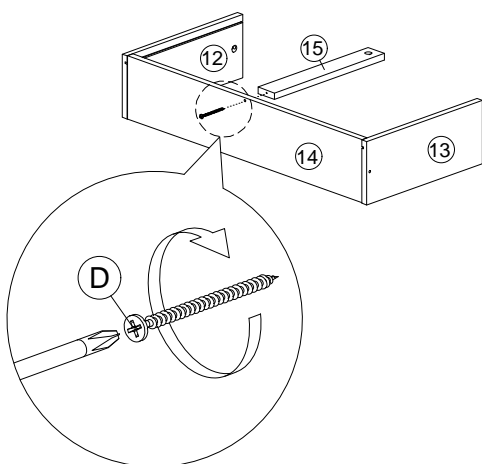


## Step 24

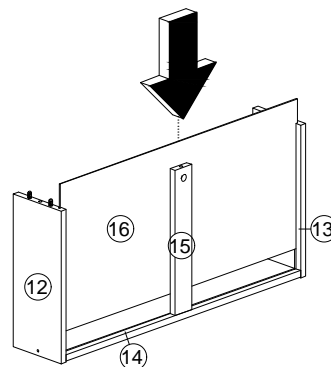


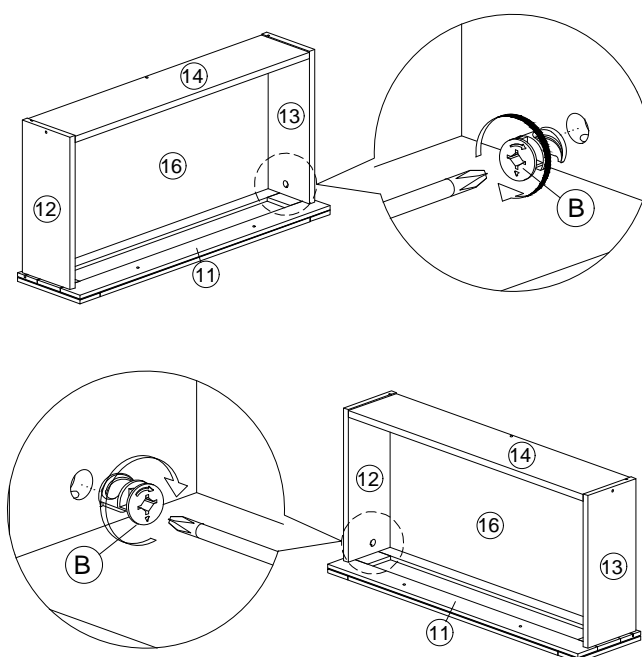
## Step 25

B		Minifix	1Pc
---	---	---------	-----

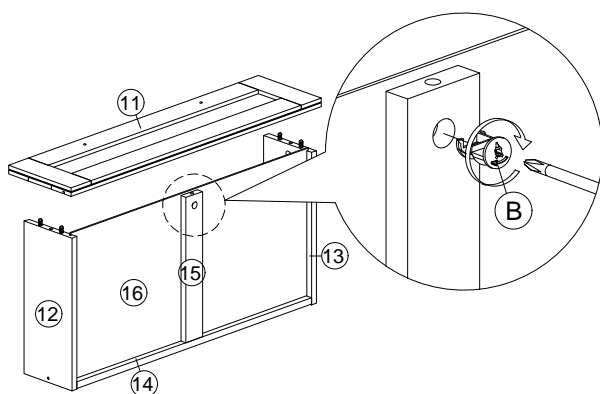

## Step 26



B		Minifix	2Pcs
---	---	---------	------








# Assembly Instruction


## Step 27

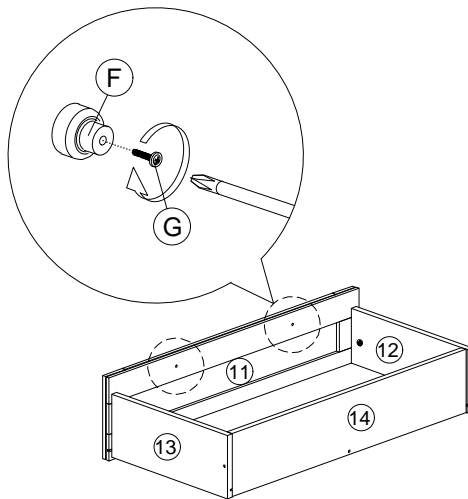F		Oil Cup Shaped Single Handle	2Pcs
G		M4x26mm Handle Screw	2Pcs




## Step 28

C		M3.5x16mm Screw	3Pcs
P		Drawer Slide 350mm - L	1Pc

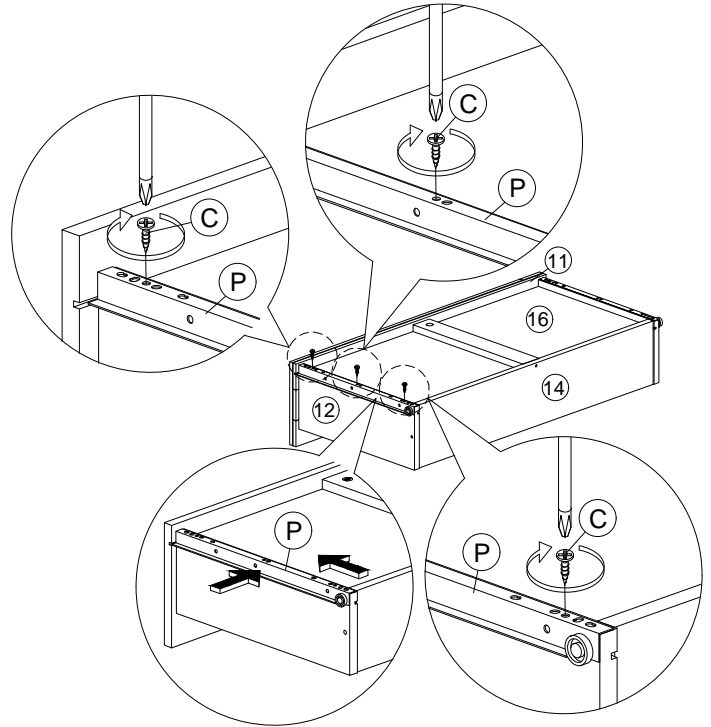


## Step 29

C		M3.5x16mm Screw	3Pcs
P		Drawer Slide 350mm - R	1Pc

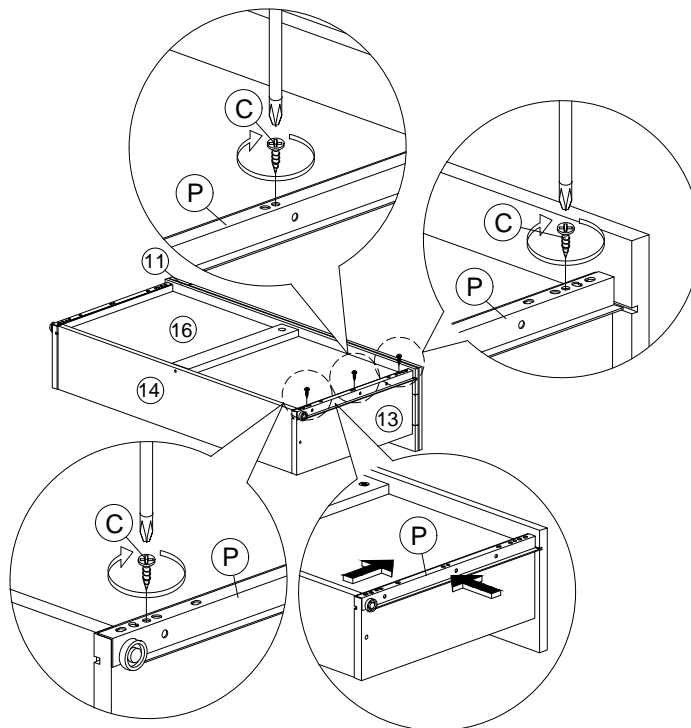


# Assembly Instruction

## Step 30


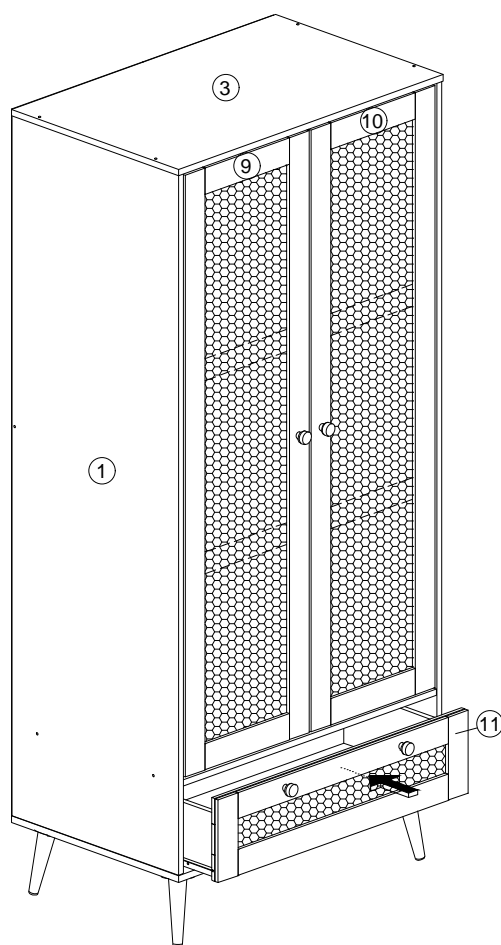


# FITTING OF ANTI-TIP SAFETY STRAP

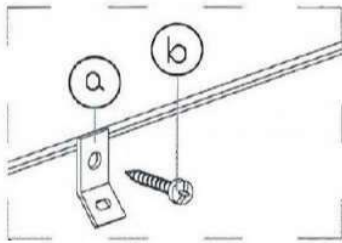


## STEP 1:

- Attach the mounting bracket (a) to the furniture in the solid part below the top panel a few inches away from the side of the unit.
- Screw (b) through the smallest hole of (a).

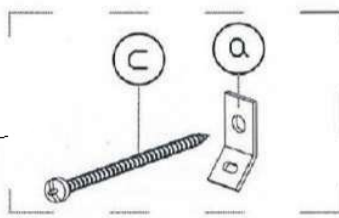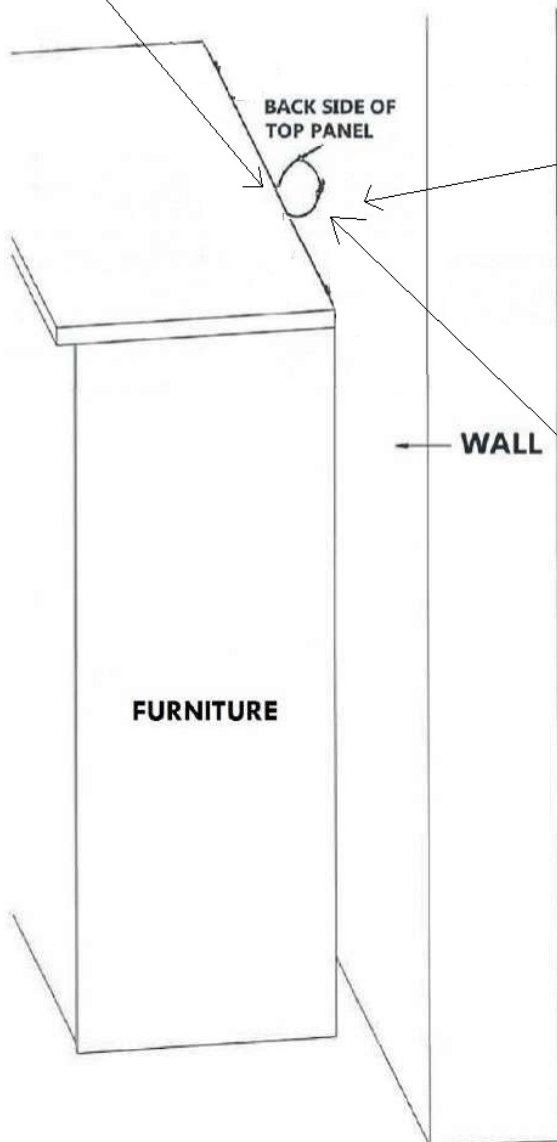

## STEP 2:

- Locate a stud in behind the wall to
- Place the other mounting bracket (a) on the wall stud 2 inches below the mounting bracket secured to the back of your unit.
- Attach to the wall stud using (c) through the smaller hole of (a).

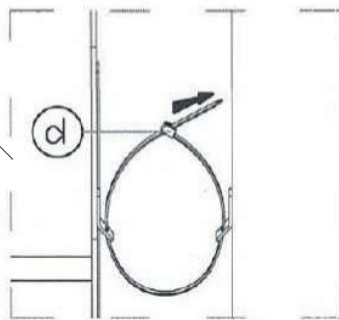

## STEP 3:

- Repeat the same step a few inches away from the other side of the unit.
- Place the furniture into position so both mounting brackets are vertically in line.
- Lace the end of the restraint strap through the larger holes in each mounting bracket.
- Secure the straps and lock into place.

