

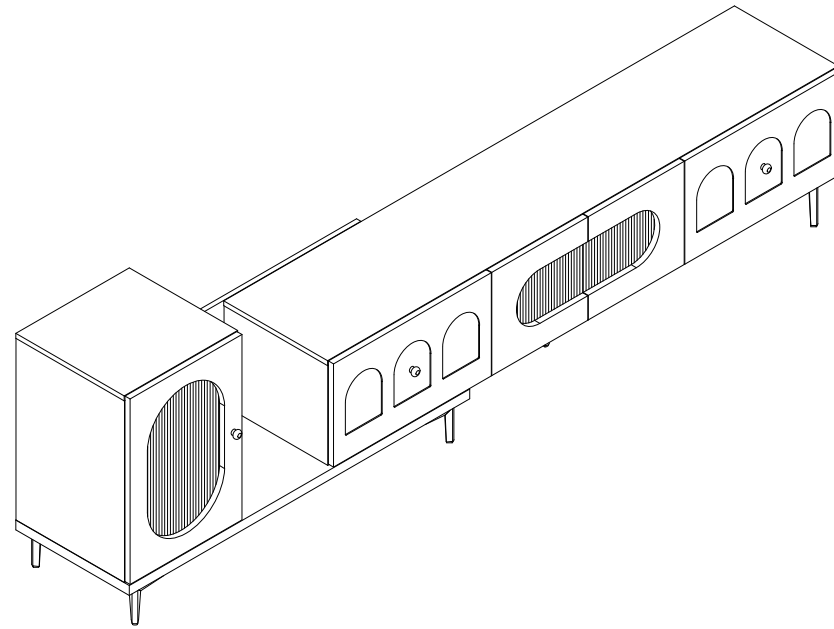
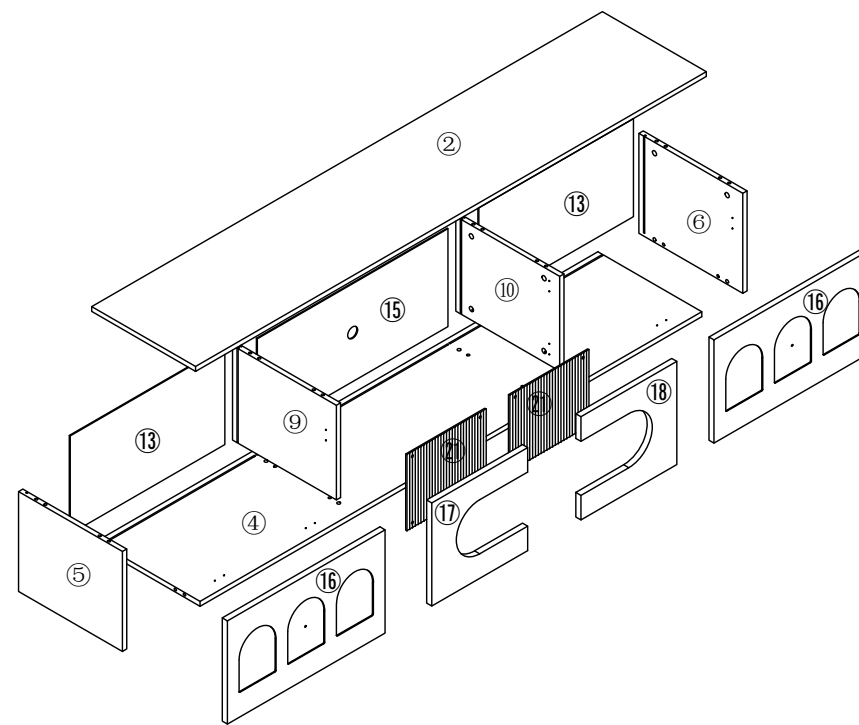
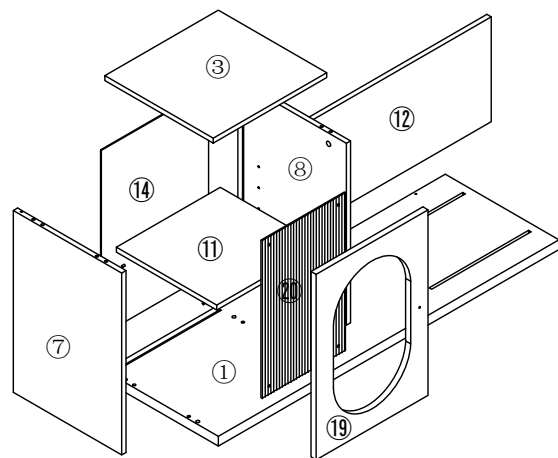





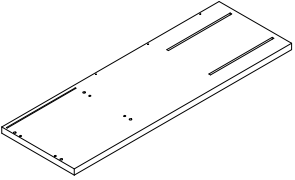
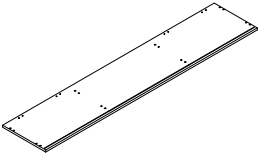
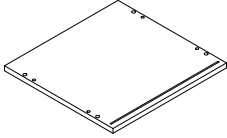
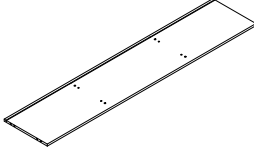

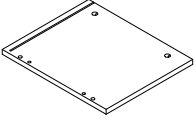
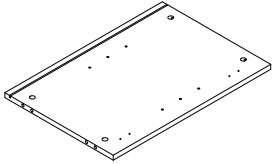
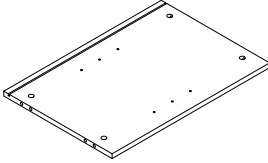
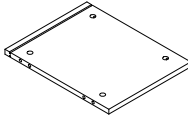
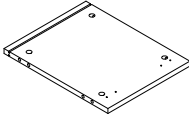
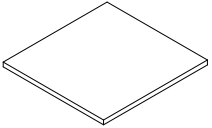
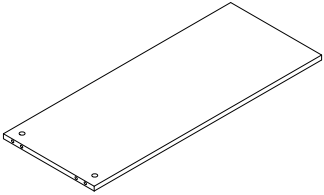
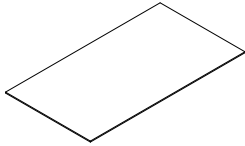
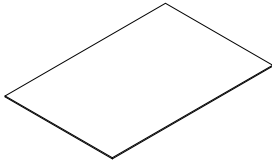
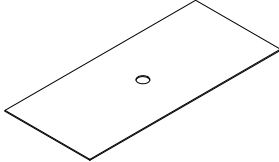
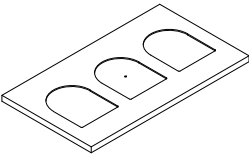




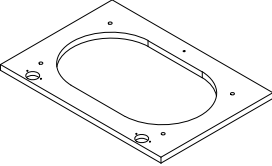


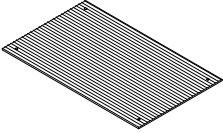

U	4*50	V	8*40
	2PCS		2PCS
K	120mm	L	150mm
	4PCS		3PCS
M		N	6*12
	6PCS		12PCS
O		P	
	4PCS		16PCS
Q	Q ₁ Q ₂ Q ₃ Q ₄ Q ₅	R	
	2PCS		16PCS
S		T	3*12
	2PCS		16PCS
A		B	
	26PCS		26PCS
C		D	8*40
	3PCS		26PCS
E	3.5*14	F	4*22
	98PCS		1PCS
G	8*20	H	7*50
	2PCS		3PCS
I		J	4*18
	4PCS		2PCS


1  1200*400 1PS	2  1800*367 1PS	3  400*382 1PS	4  1768*367 1PS	5  367*305 1PS
6  367*305 1PS	7  555*382 2PS	8  555*382 1PS	9  367*289 1PS	10  367*289 1PS
11  366*353.5 2PS	12  801*320 2PS	13  545*299 2PS	14  565*378 1PS	15  672*299 1PS
16  556*315 2PS	17  338*315 2PS	18  338*315 1PS	19  566*394 1PS	20  481*294 1PS

21




279*232.5 2PS

1

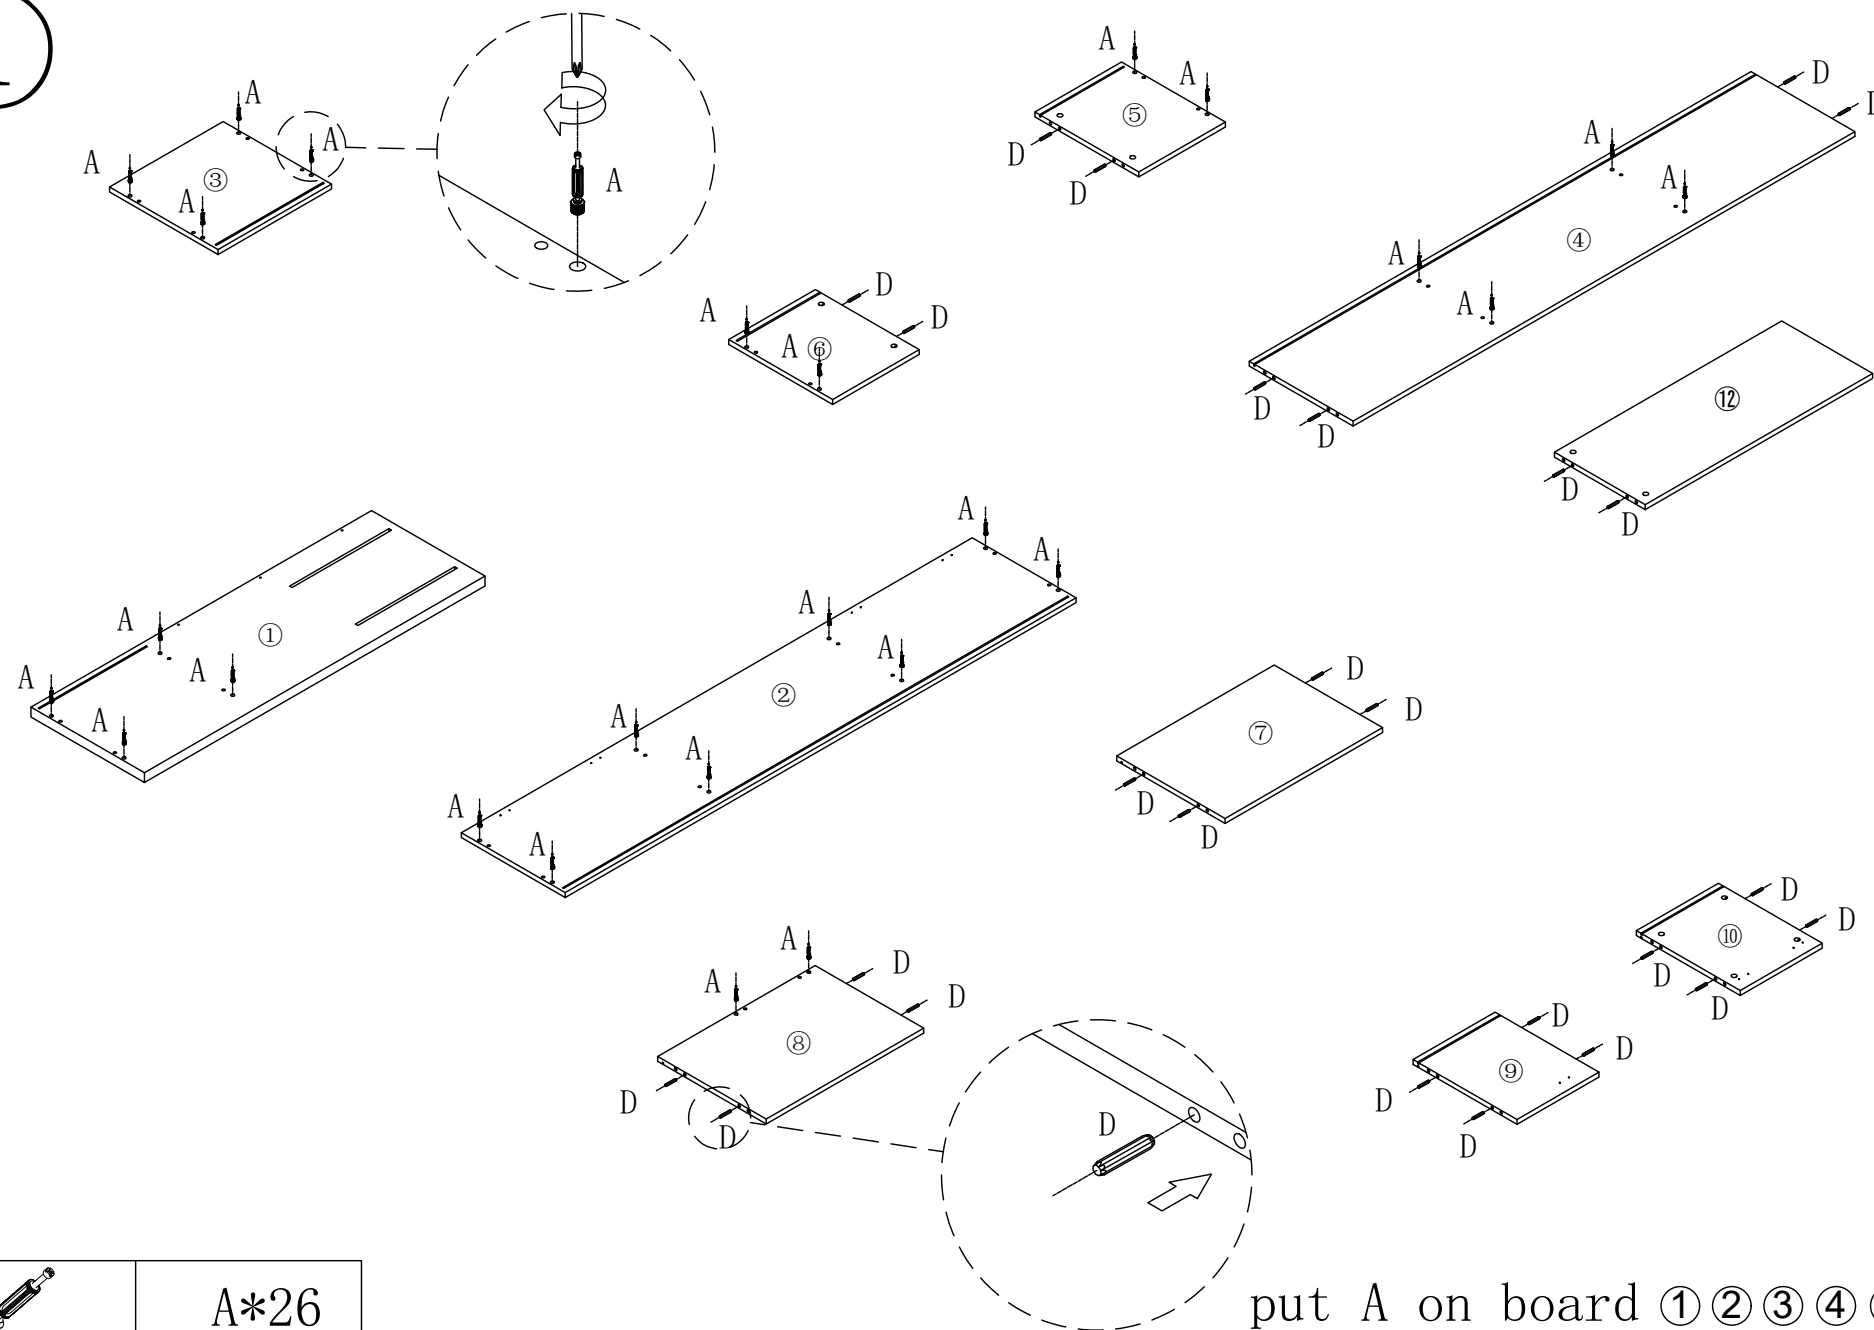







A*26



D*26

put A on board ① ② ③ ④ ⑤ ⑥ ⑧
put C on board ④ ⑤ ⑥ ⑦ ⑧ ⑨ ⑩ ⑫



2

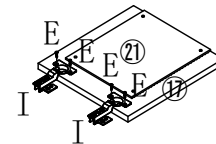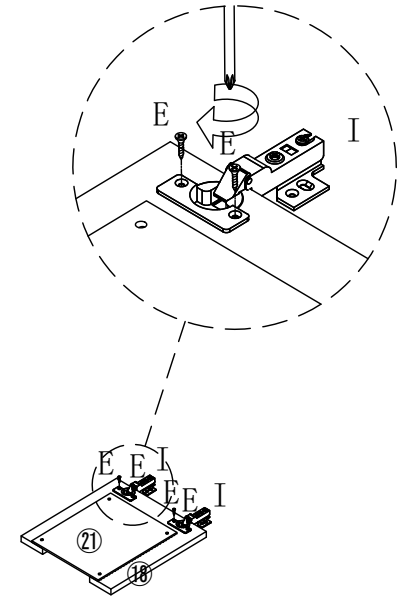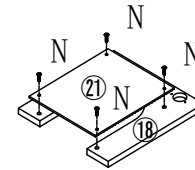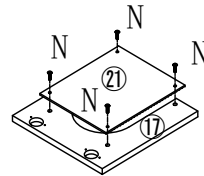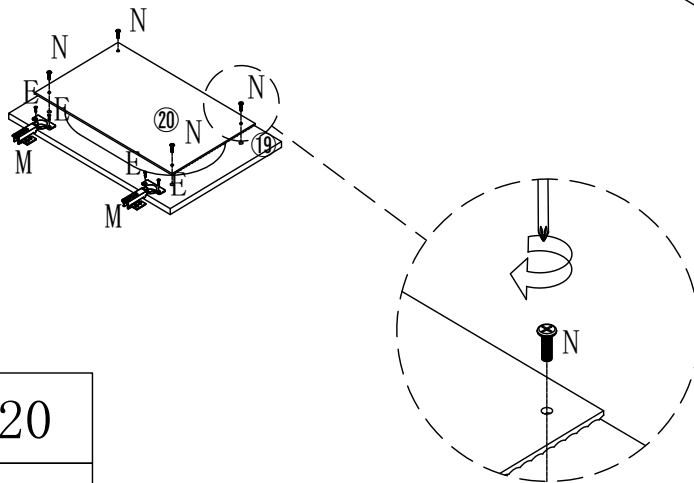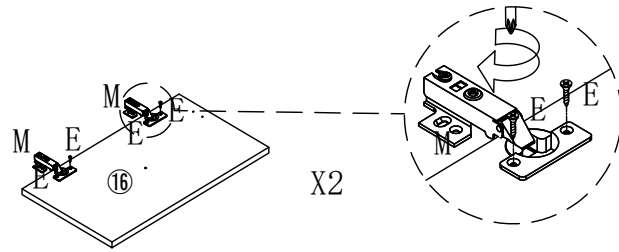

	E*20
	I*4
	M*6
	N*12

put E on board 16 17 18 19
 put I on board 17 18
 put M on board 16 19
 put N on board 20 21

3

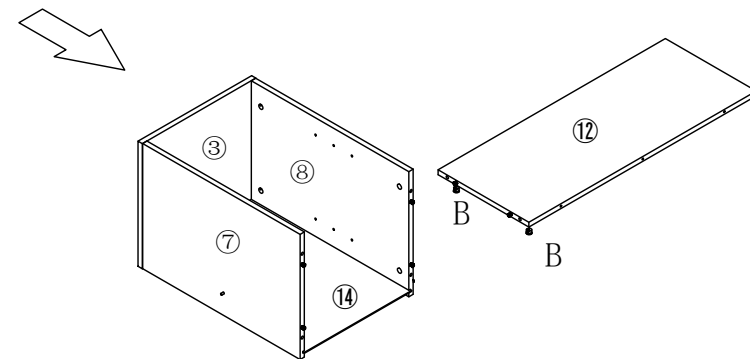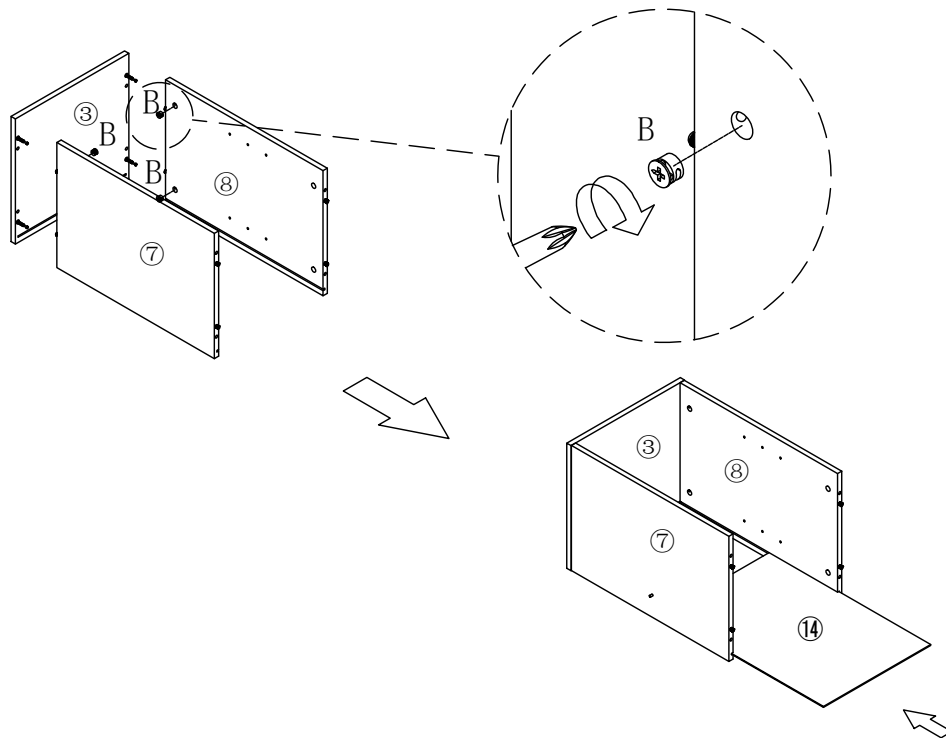


Make sure the arrow on the screw align to the hole on the side.

put B on board ⑦ ⑧ ⑫




B*6

4



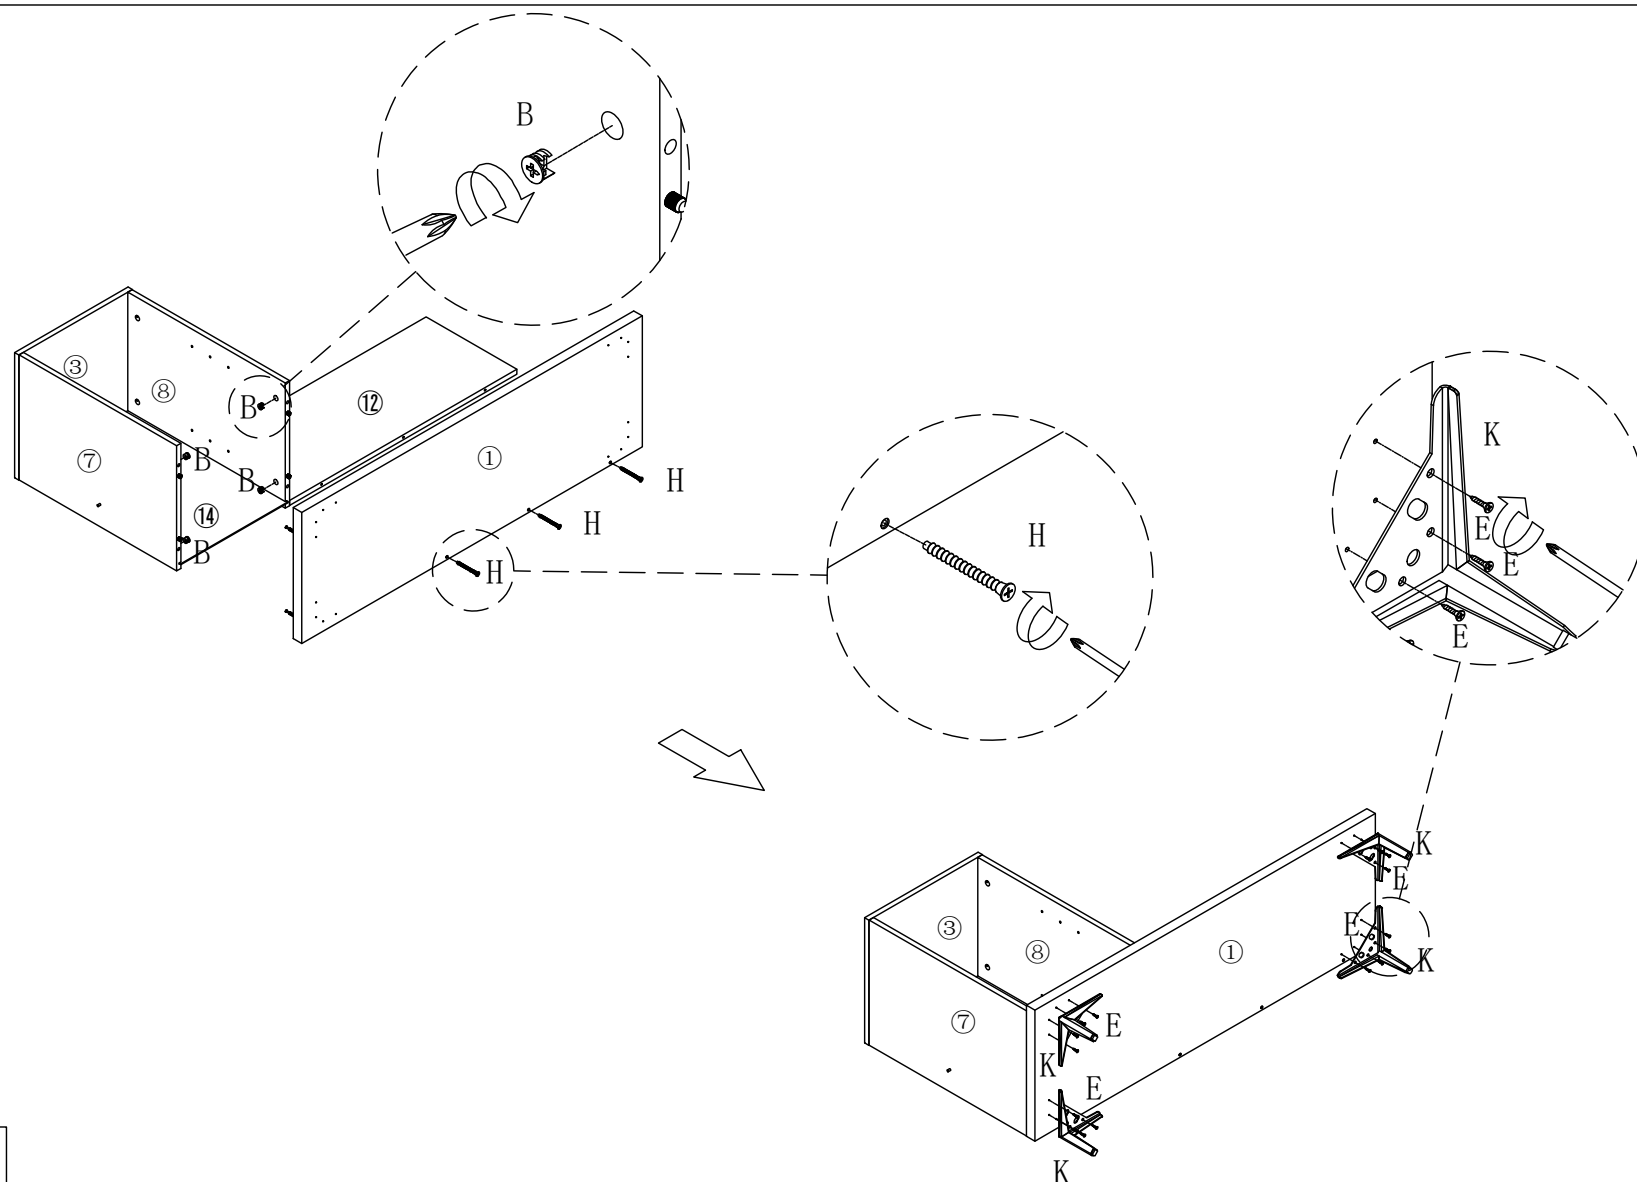


Make sure the arrow on the screw align to the hole on the side.

put B on board ⑦ ⑧
 put E on board ⑪
 put H on board ⑪
 put K on board ⑪

	B*4
	E*16
	H*3
	K*4

5

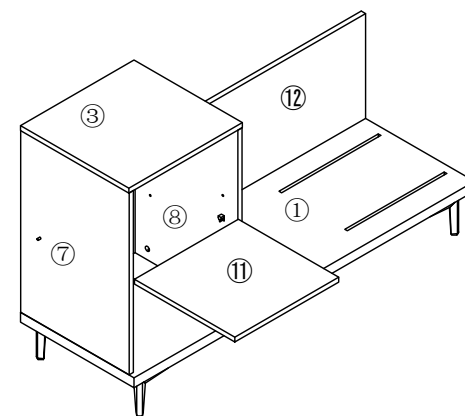

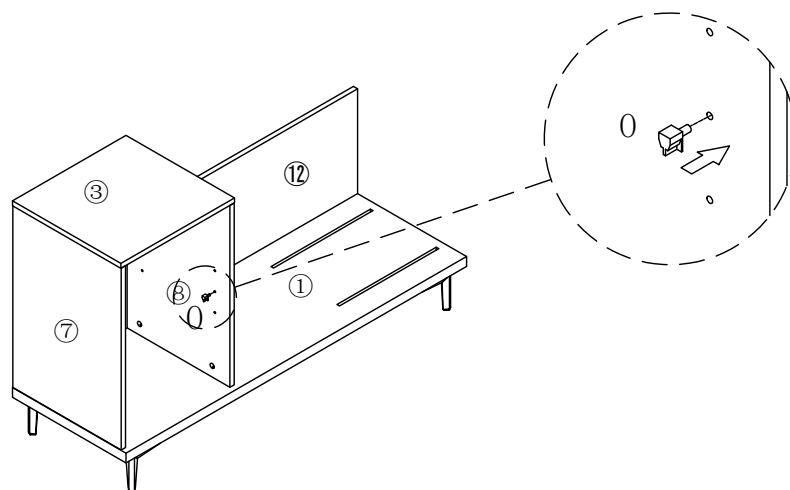


put 0 on board ⑦⑧



0*4

6

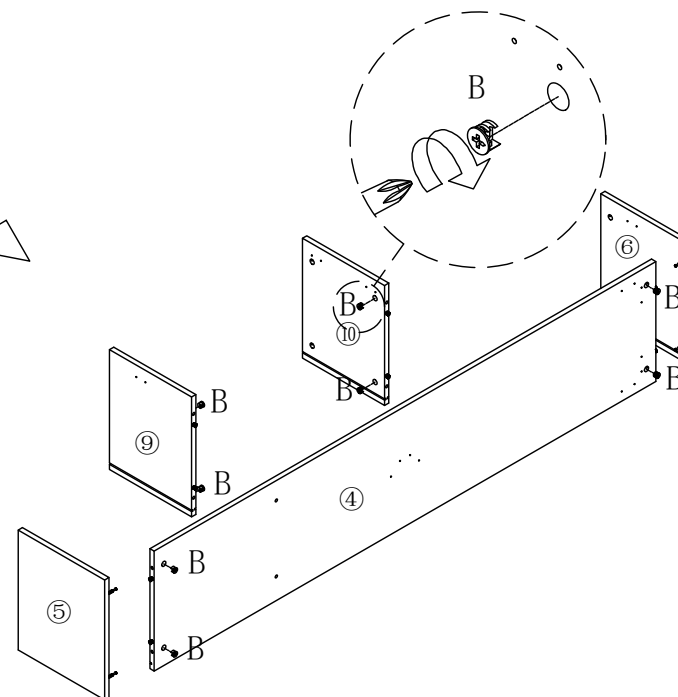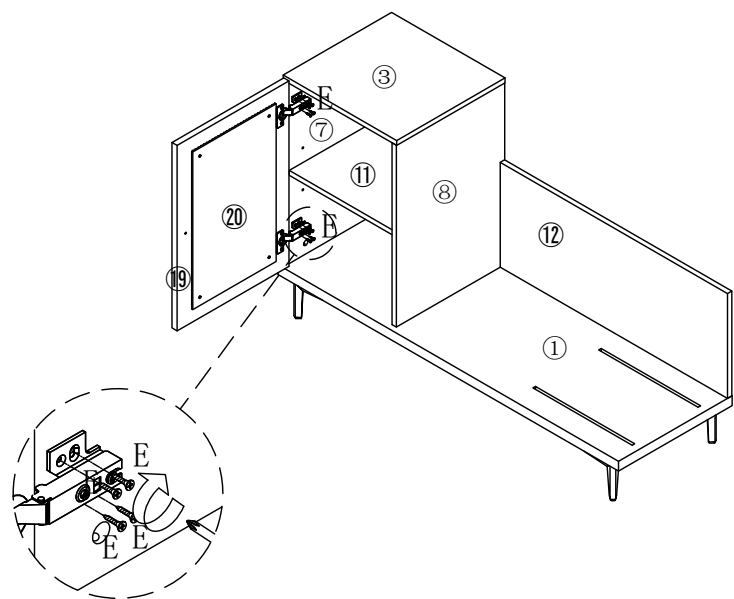

Make sure the arrow on the screw align to the hole on the side.

put B on board ④ ⑨ ⑩

put E on board ⑦




B*8



E*8

7

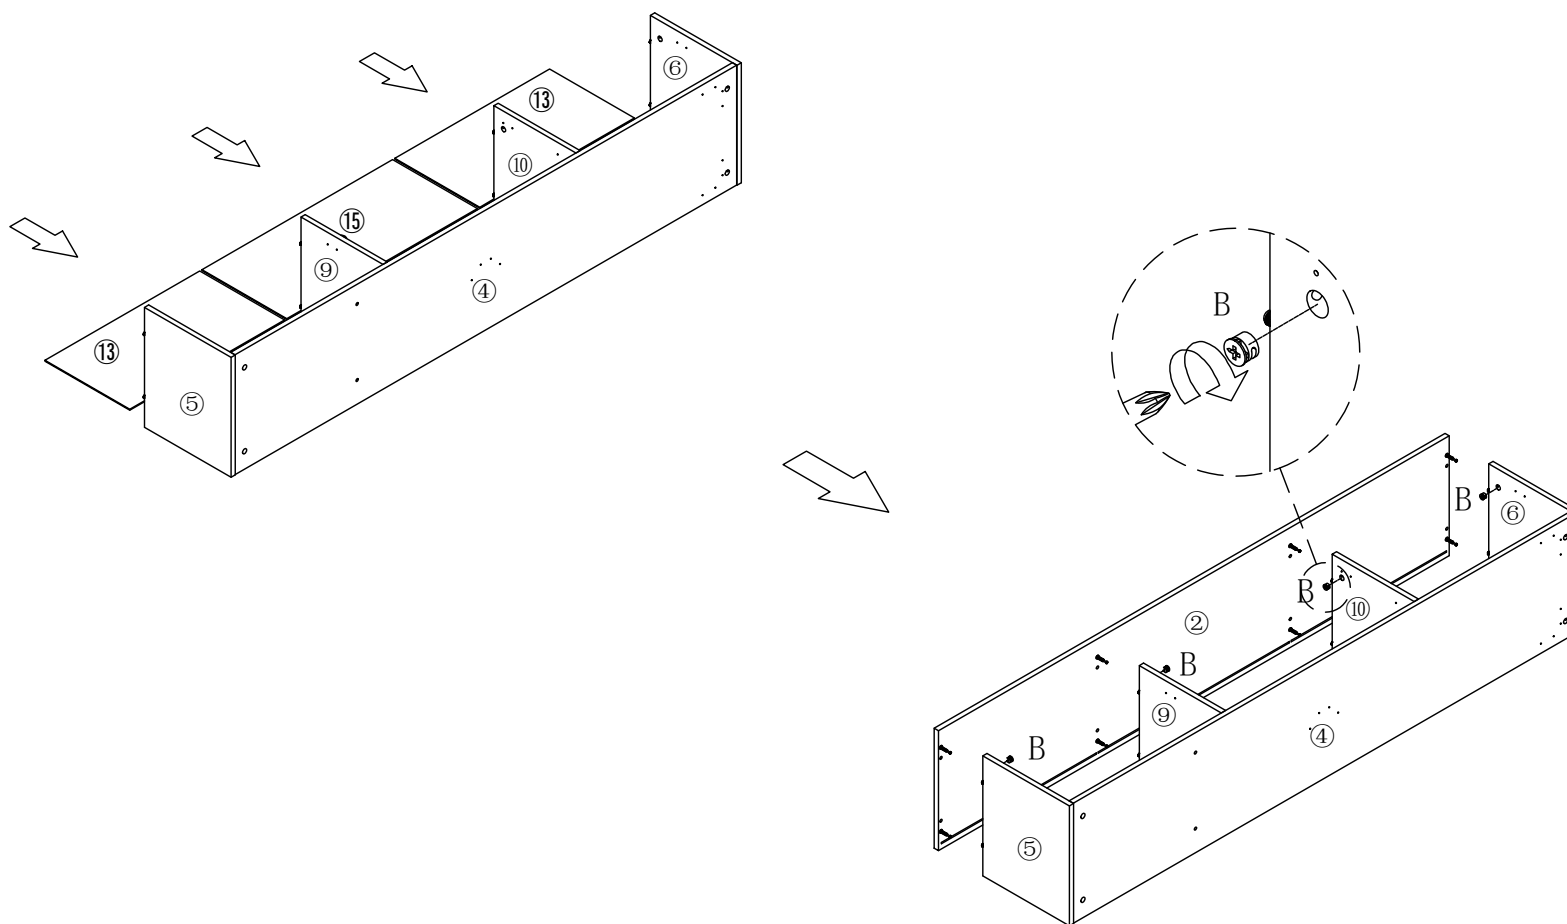




Make sure the arrow on the screw align to the hole on the side.

put B on board ⑤ ⑥ ⑨ ⑩



B*8


8

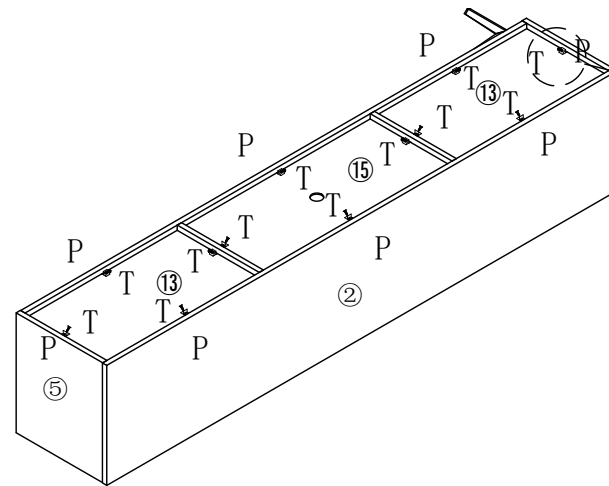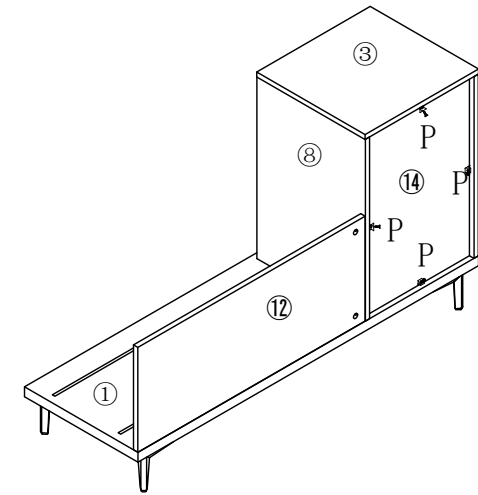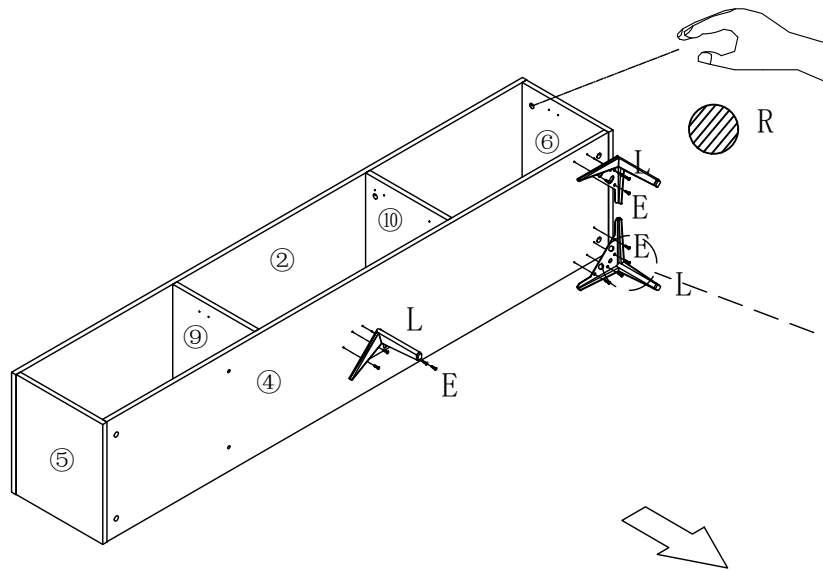

put E on board ④
put L on board ④

	E*12
	L*3
	P*16
	R*16
	T*16


9

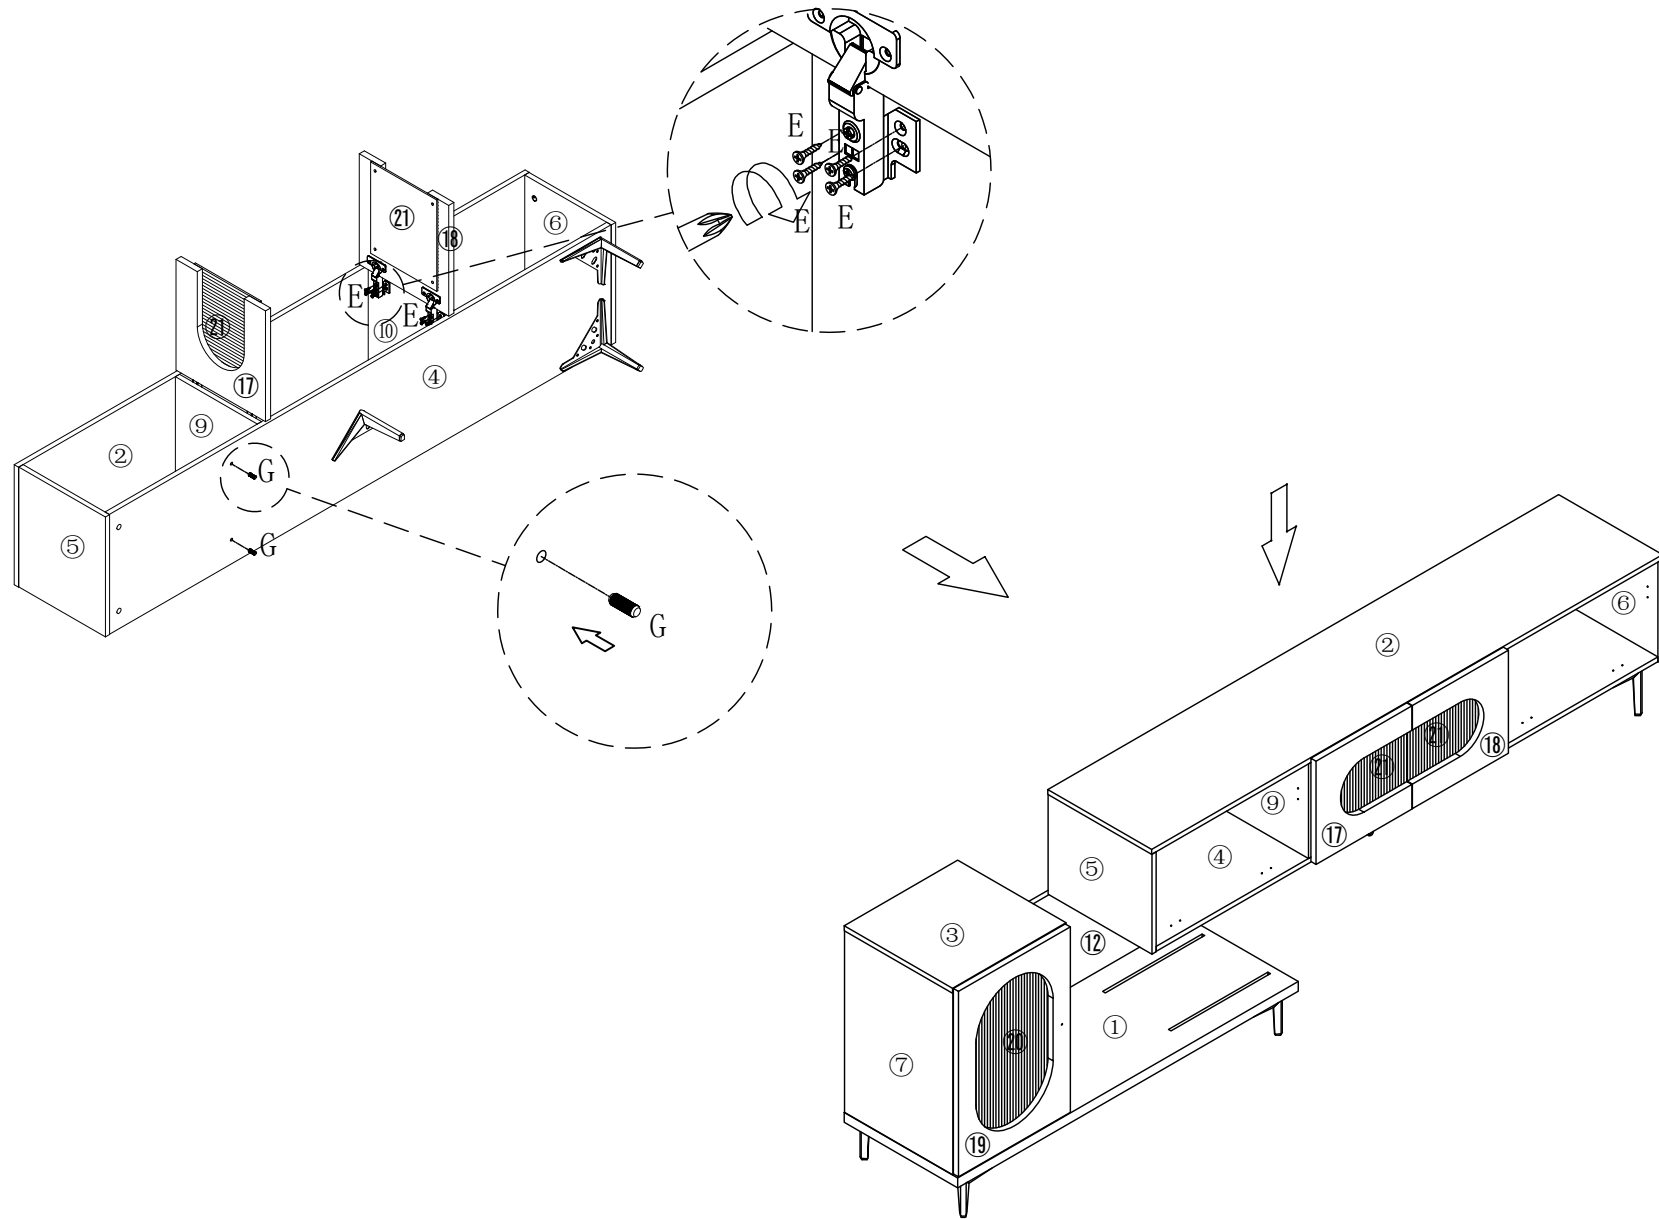

	E*16
	G*2






put G on board ④
put E on board ⑨ ⑩

10

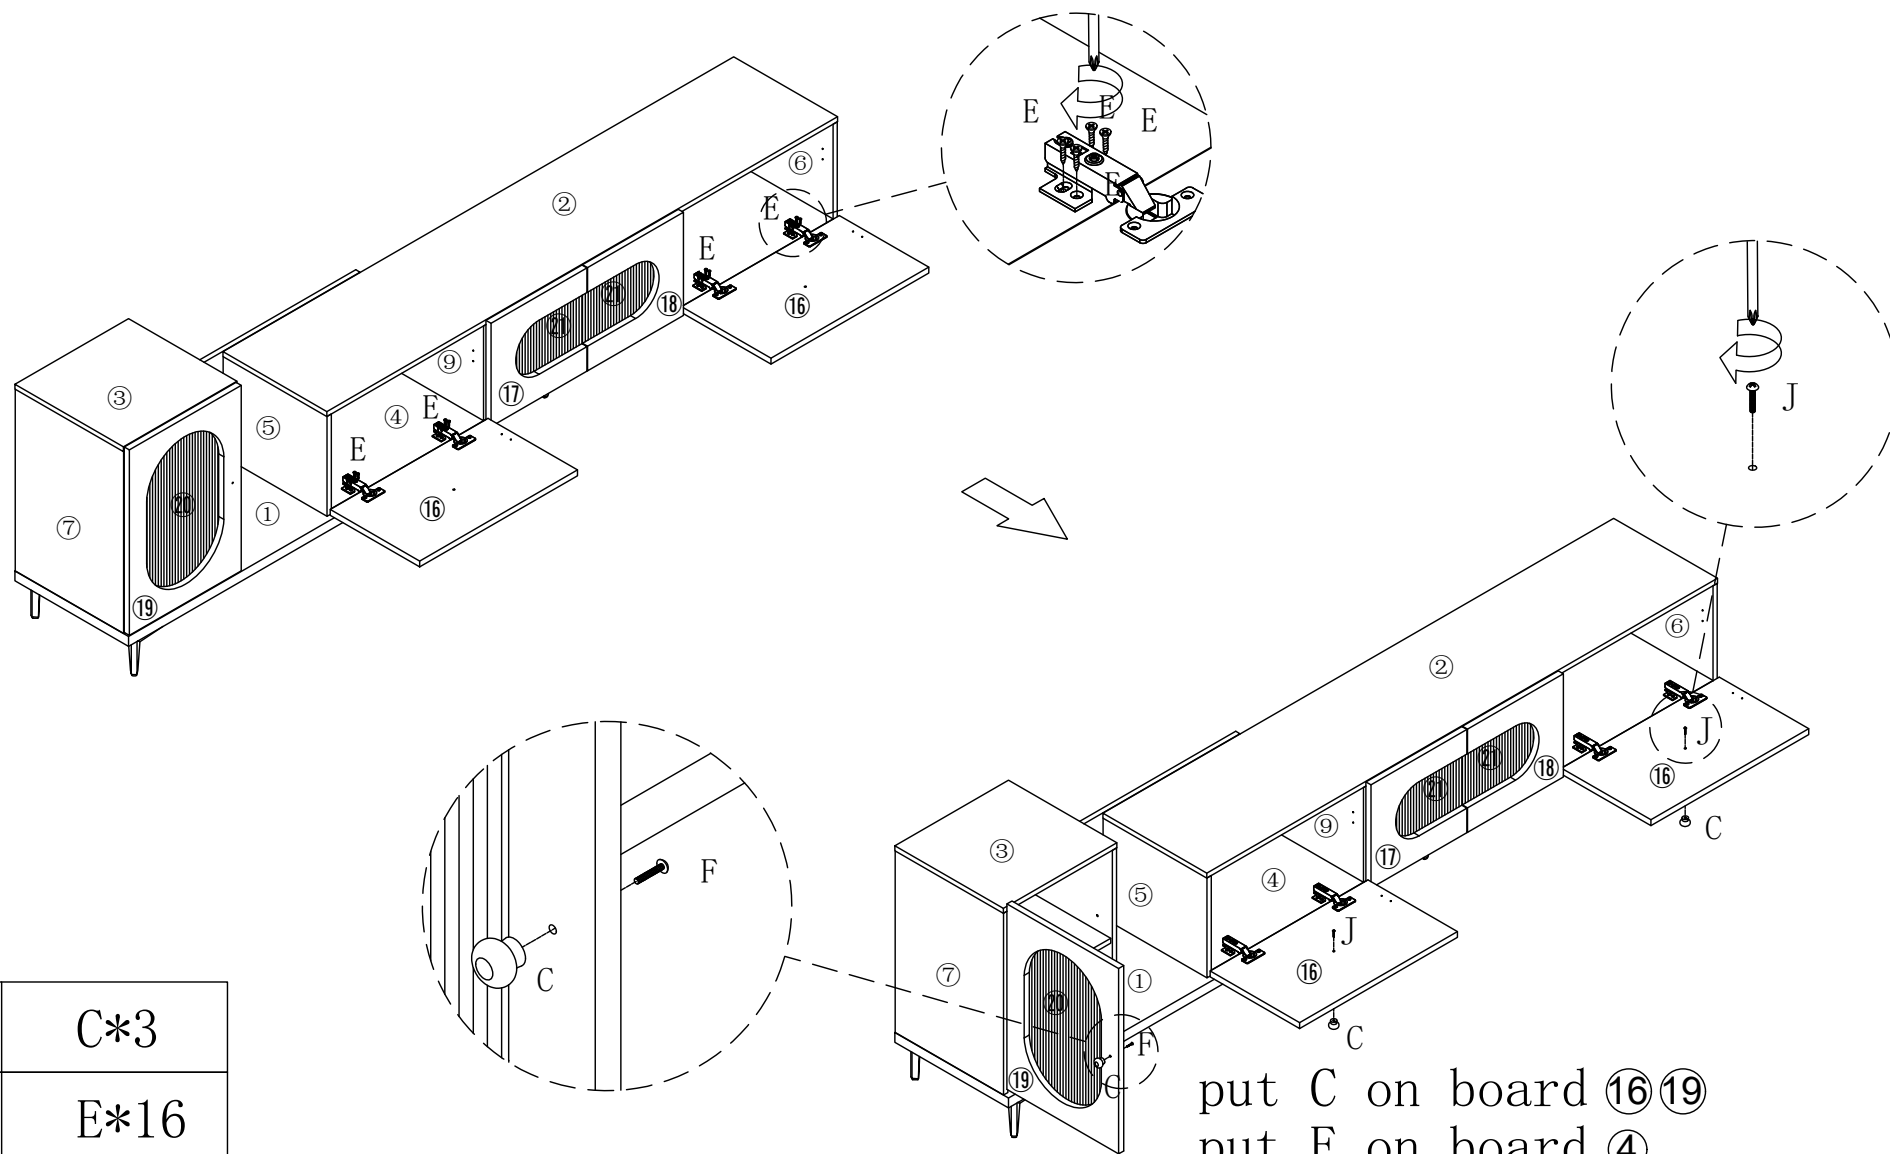

	C*3
	E*16
	F*1
	J*2






put C on board ①⑥⑨
 put E on board ④
 put F on board ①⑨
 put J on board ①⑥

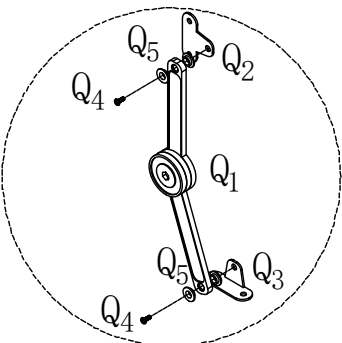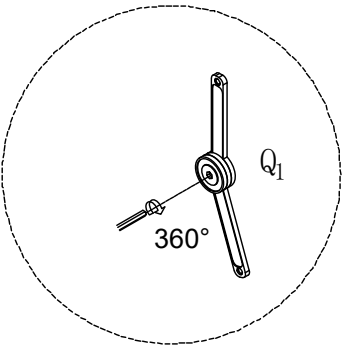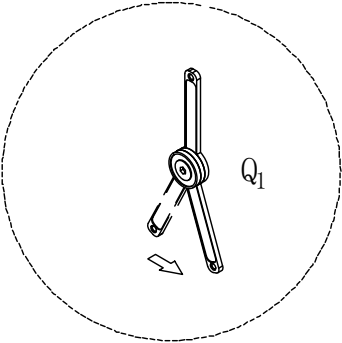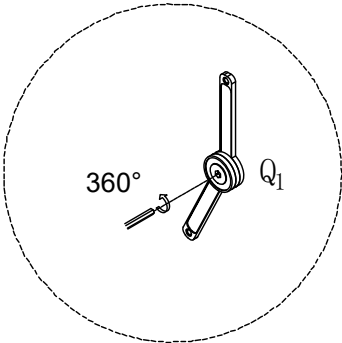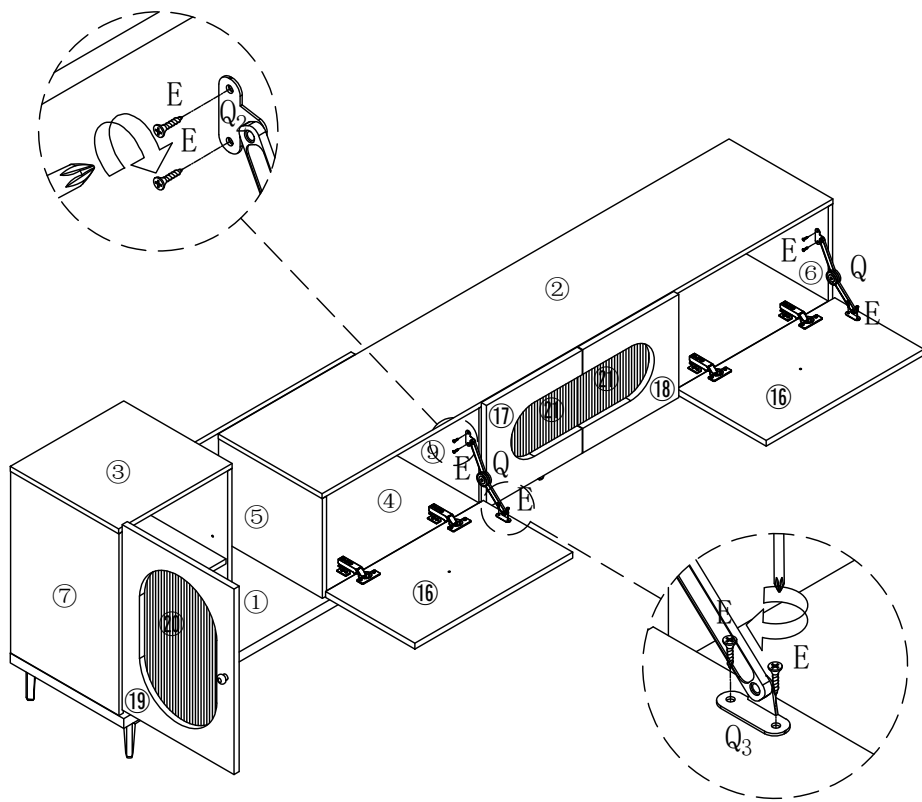

	E*8
	Q*2

put E on board ⑥ ⑨ ⑮

put Q on board ⑥ ⑨ ⑮

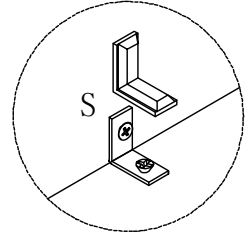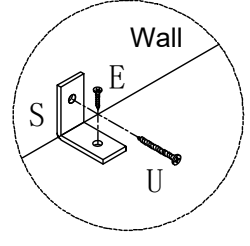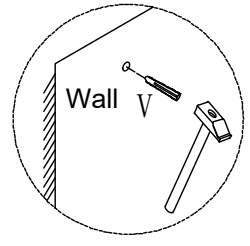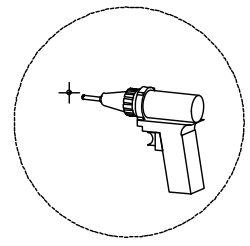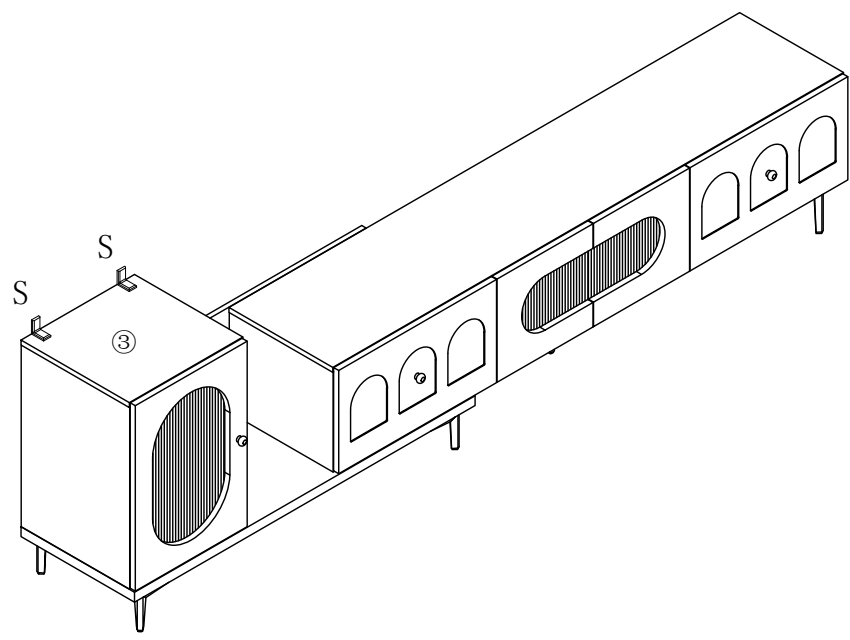

	E*2
	S*2
	U*2
	V*2

