



6.5'x12'

SKU: LGCF1663

METAL GRILL GAZEBO

## Assembly Manual

LGCF1663




## Pre-assembly

### TOOLS THAT MAY BE REQUIRED (Not included in boxes)

*\*NOTE: Tools / equipment are not shown to actual size and scale.*



LEVEL




RUBBER Mallet




PHILLIPS SCREW



DRILL



ALLEN KEY



ALLEN KEY

### EQUIPMENT REQUIRED (Not included in boxes)

*\*NOTE: Equipment are not shown to actual size and scale.*



SAFETY HAT



GLOVES



SAFETY GOGGLES



STEPLADDER

### Matters needing attention






1. Two or more people are required for assembly.



2. Do not fully tighten screws prior to complete assembly.

**A NOTICE IMPORTANT:** A gazebo may entail purchasing a municipal permit or be subject to specific building codes. It is the consumer's responsibility to inform themselves of any restrictions.

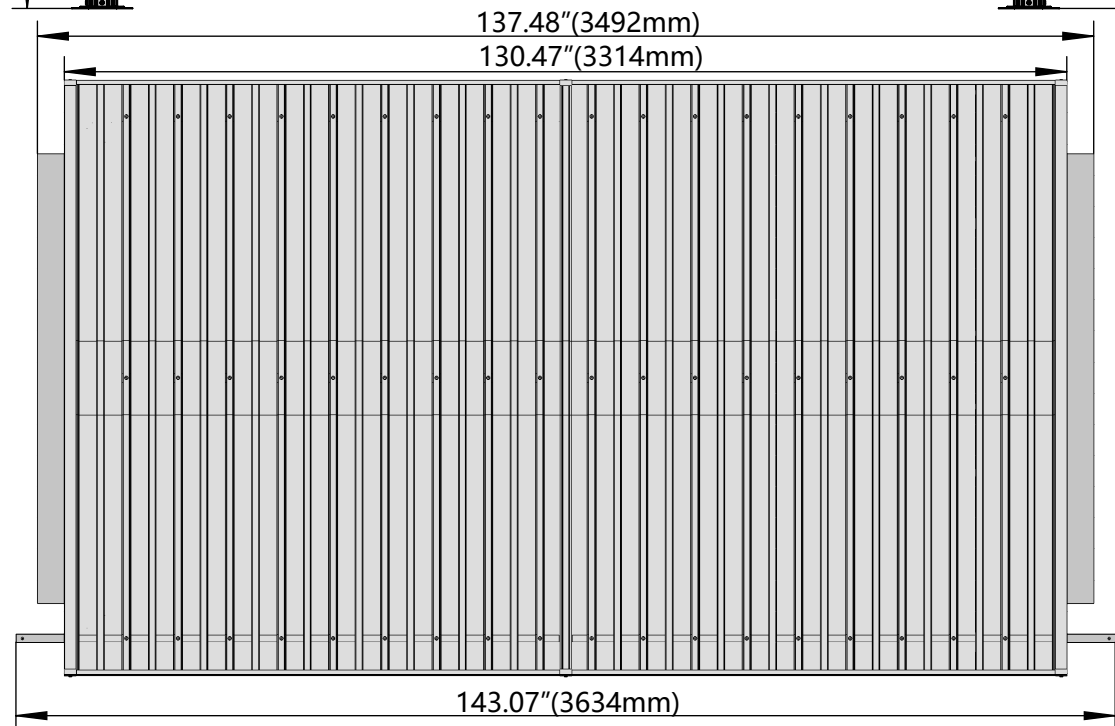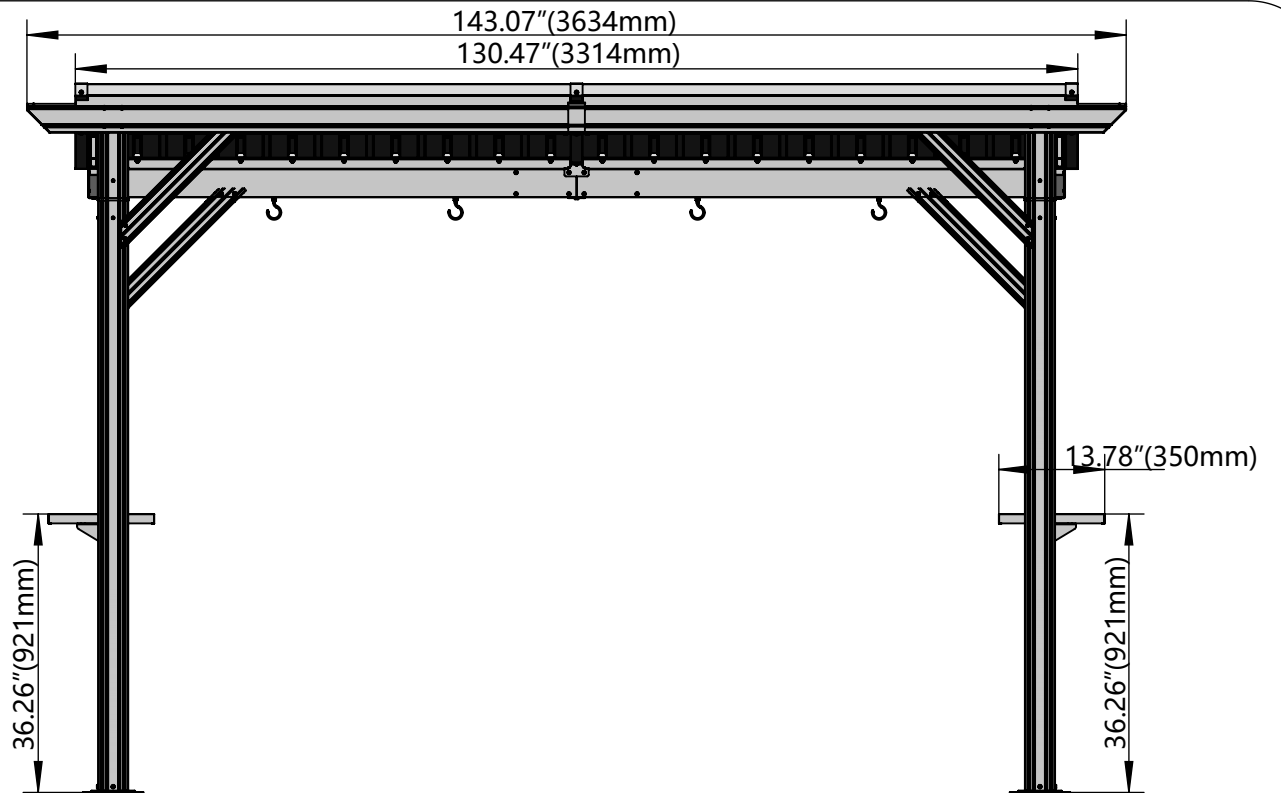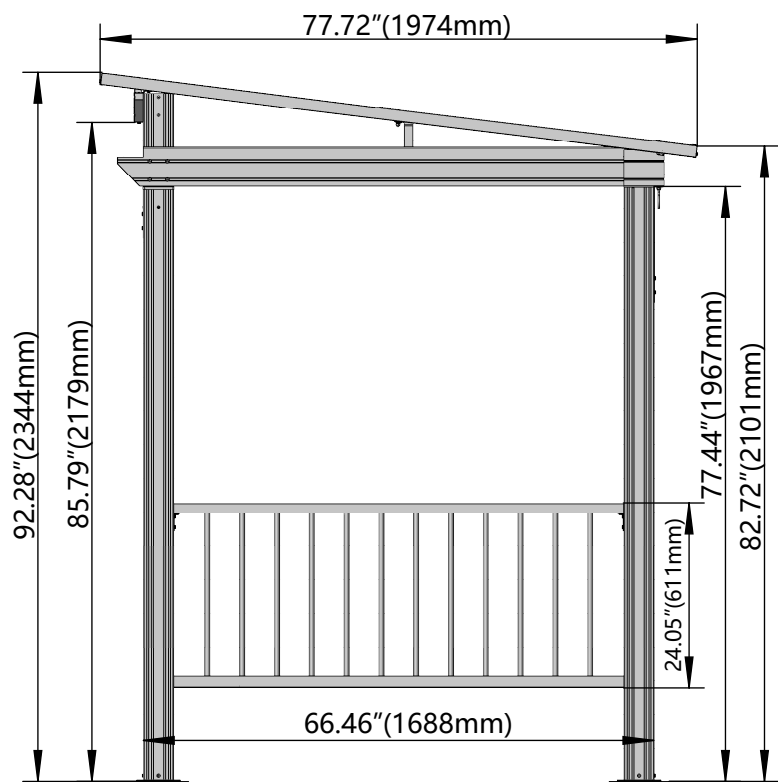







127.56"(3240mm)

120.63"(3064mm)

69.45"(1764mm)



62.52"(1588mm)

1


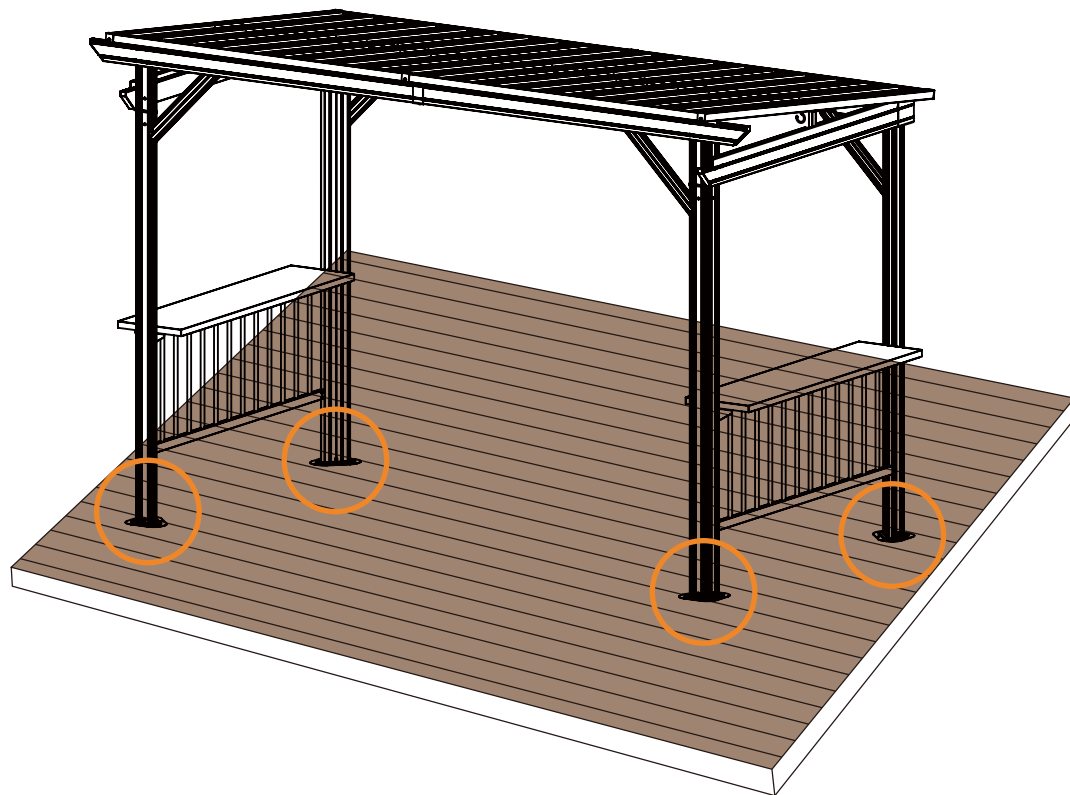


×12

If the deck is hard wood and the depth of it is over 3 inch, you can use **5/16 in. ×4 in. Structural Wood Screw** to mount the pergola.

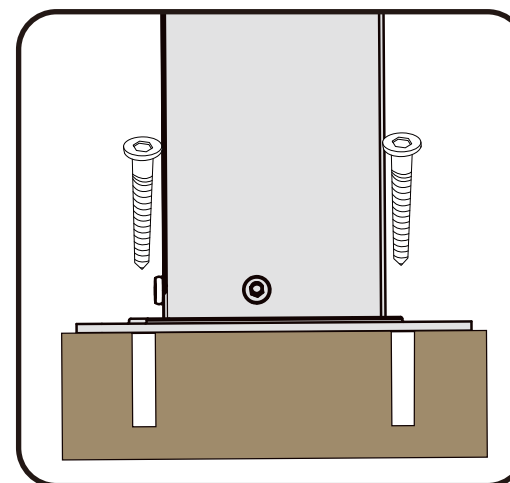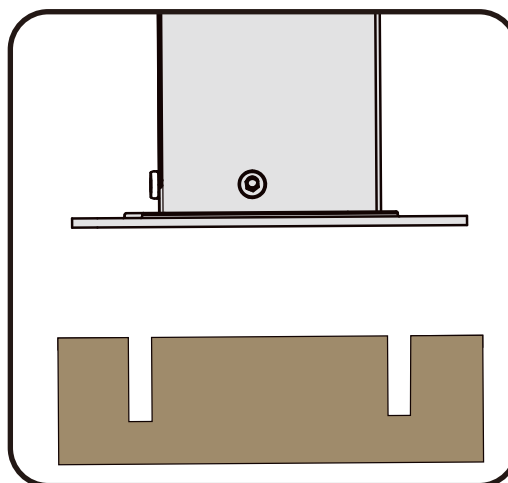

2

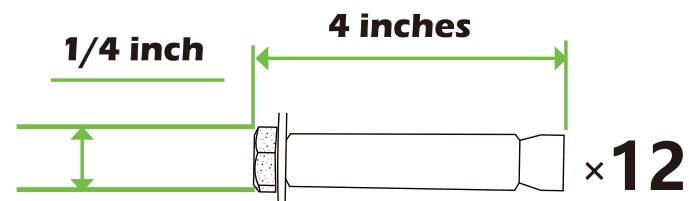
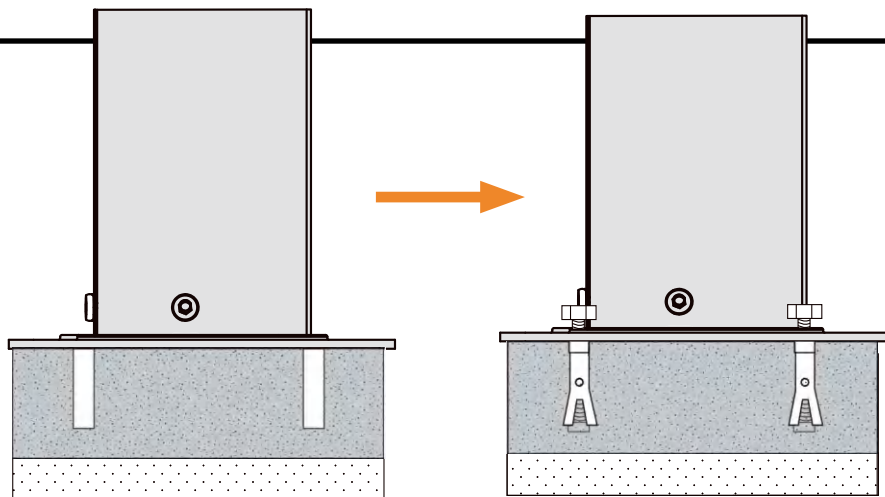


If the ground is concreted and the depth of it is over 3 inch, you can use 1/4 inch expansion bolts to mount the pergola


3




























Or you can make a concrete footing for gazebo, **12 x 12 inches** is recommended. use expansion bolts to mount the gazebo like ② shows.




**IMPORTANT:**  
Anchor is not recommended

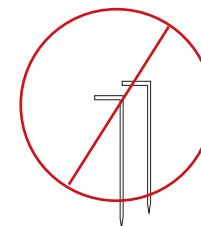

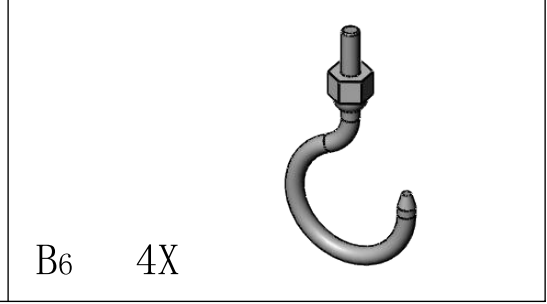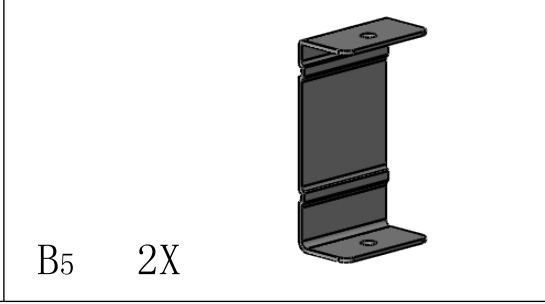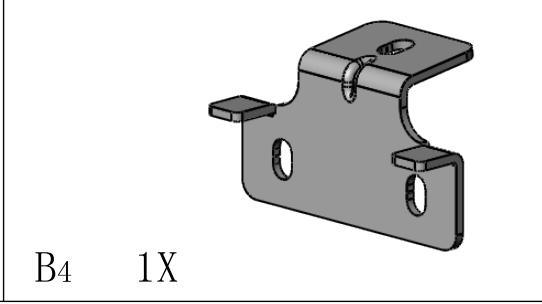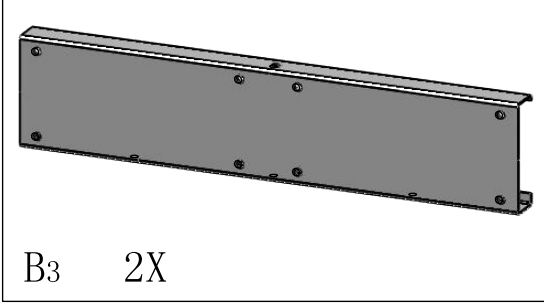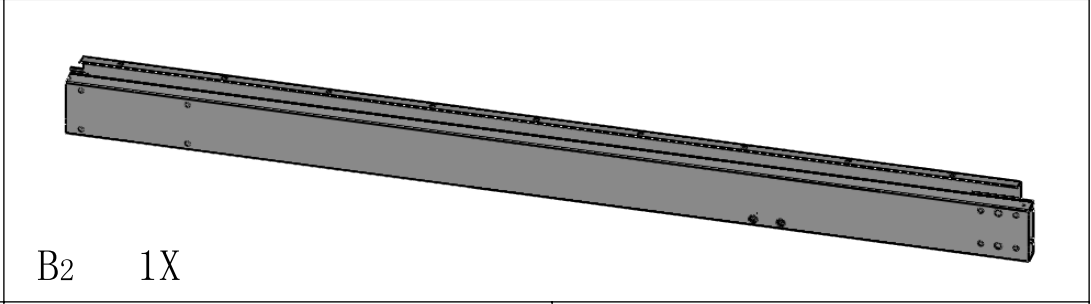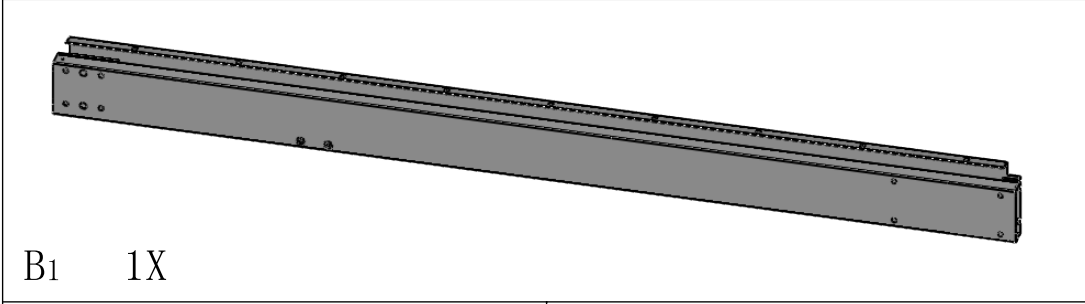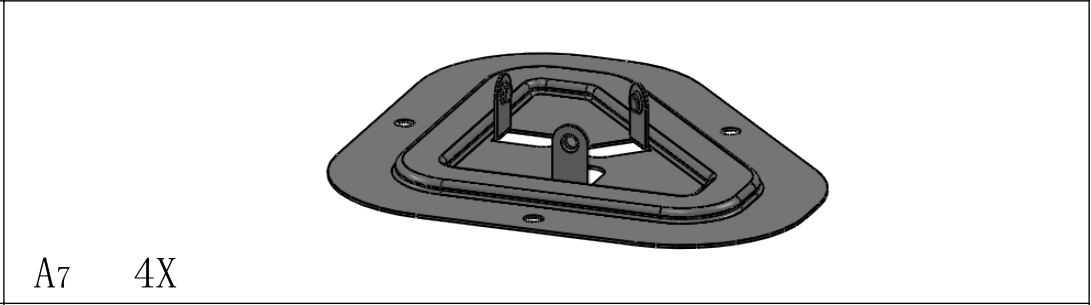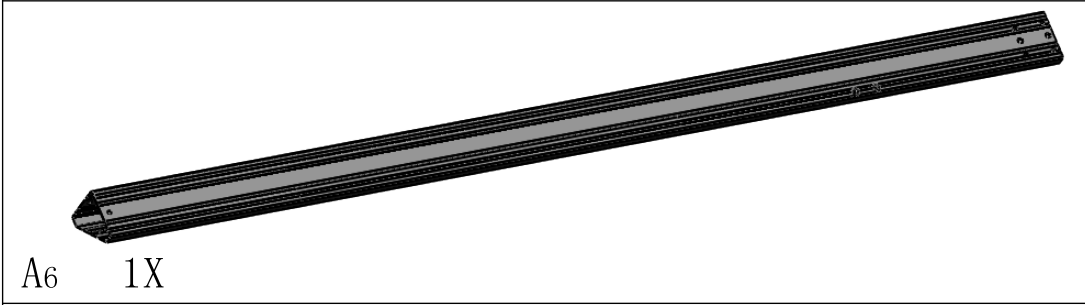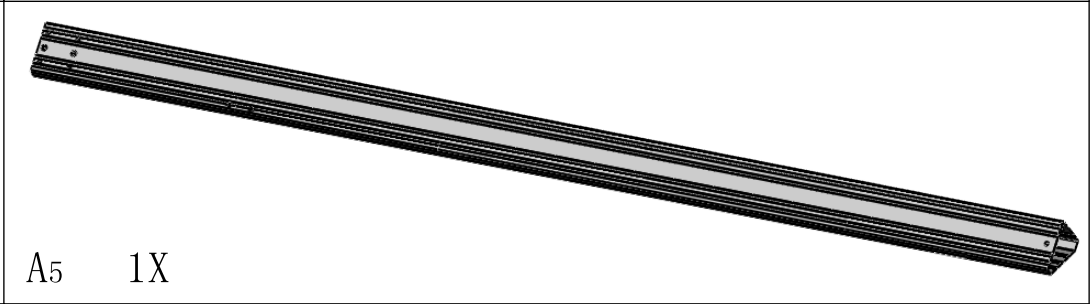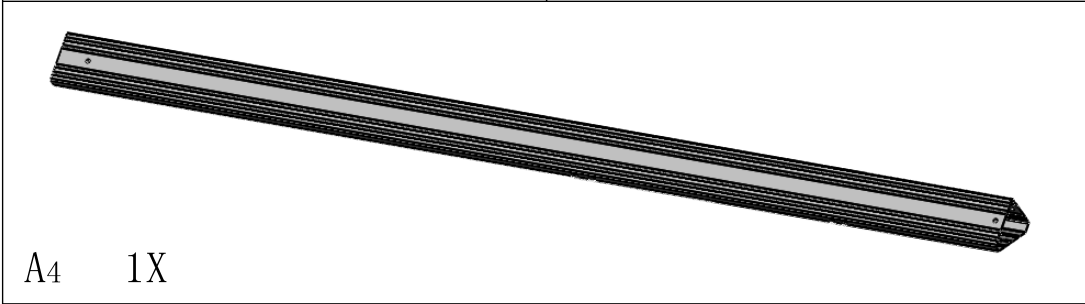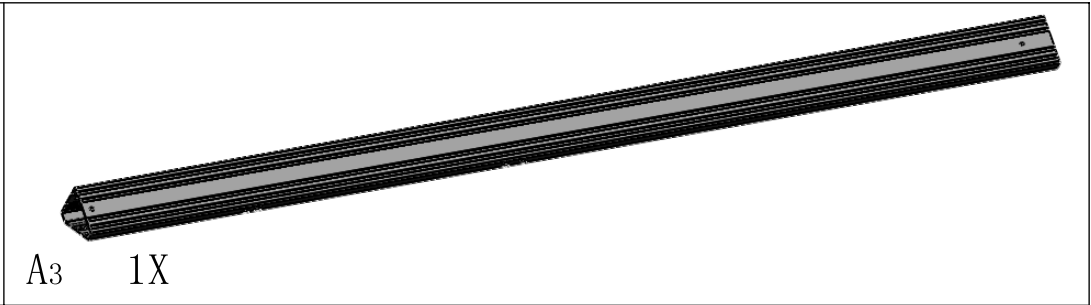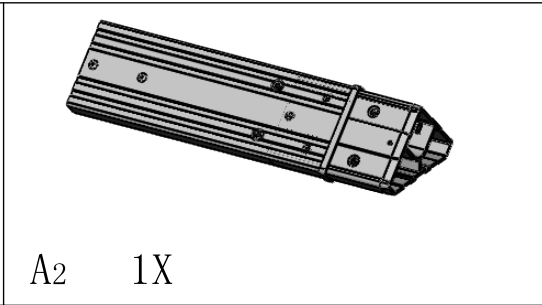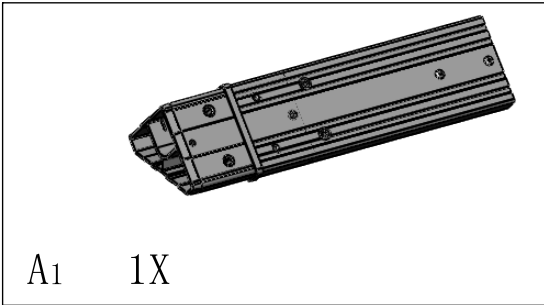


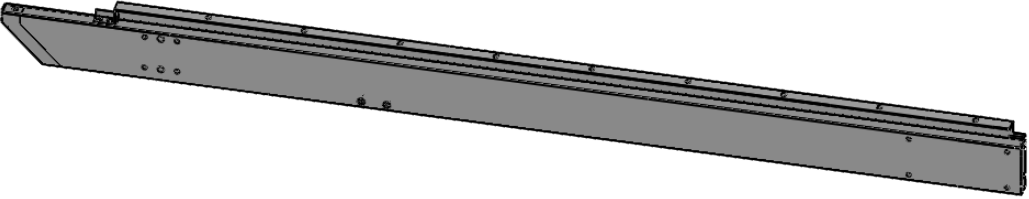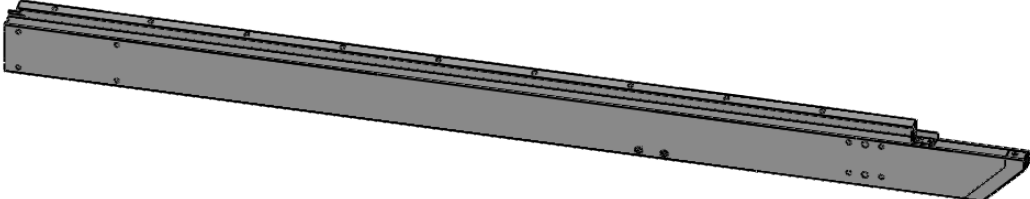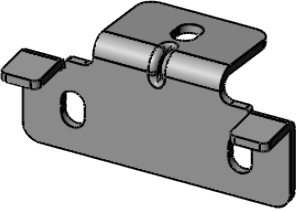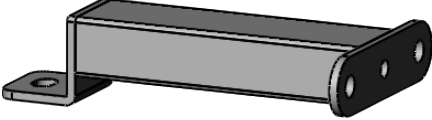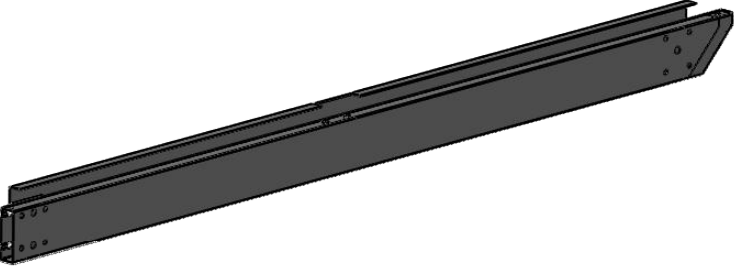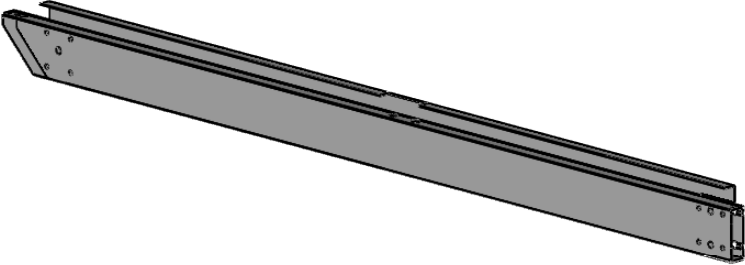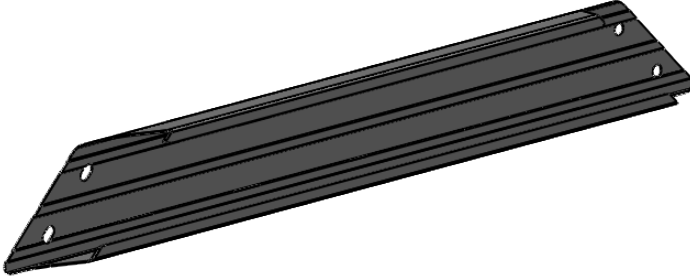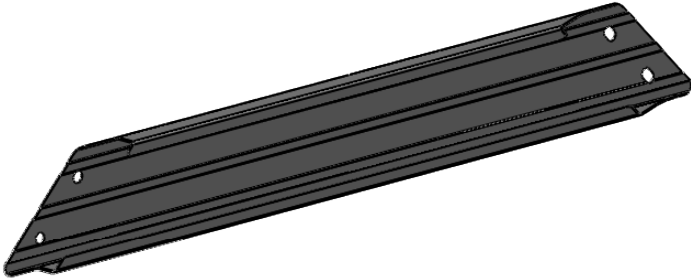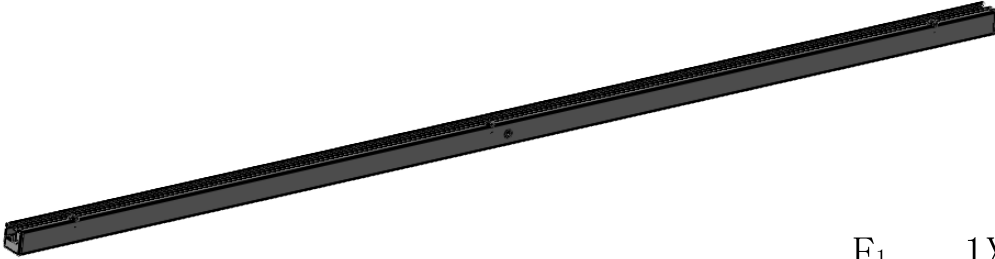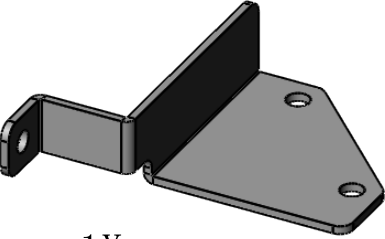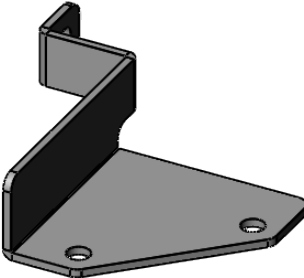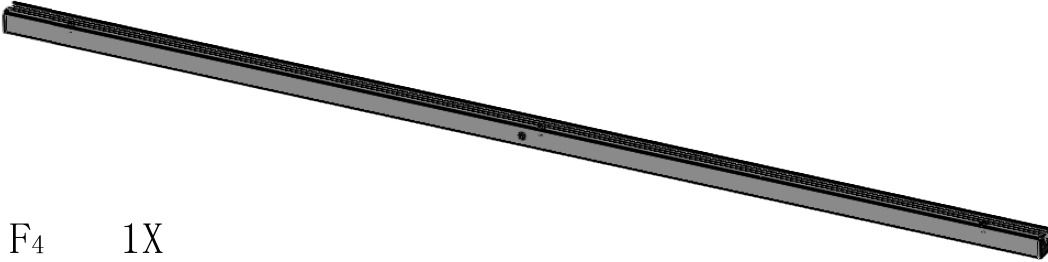 <p>C<sub>1</sub> 1X</p>	 <p>C<sub>2</sub> 1X</p>
 <p>C<sub>3</sub> 1X</p>	 <p>D<sub>1</sub> 2X</p>  <p>D<sub>2</sub> 1X</p>
 <p>D<sub>3</sub> 1X</p>	 <p>E<sub>1</sub> 2X</p>
 <p>E<sub>2</sub> 2X</p>	 <p>F<sub>1</sub> 1X</p>
 <p>F<sub>2</sub> 1X</p>	 <p>F<sub>3</sub> 1X</p>  <p>F<sub>4</sub> 1X</p>


G<sub>1</sub> 2X

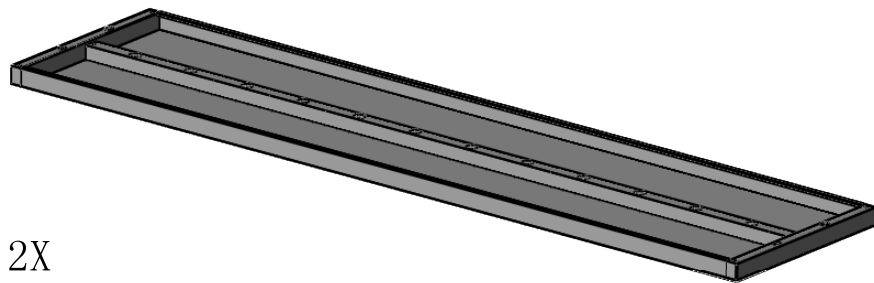


G<sub>2</sub> 4X

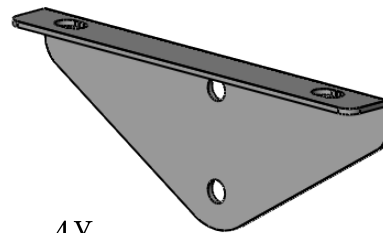


G<sub>3</sub> 4X

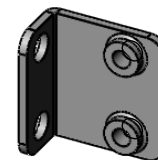


G<sub>4</sub> 2X

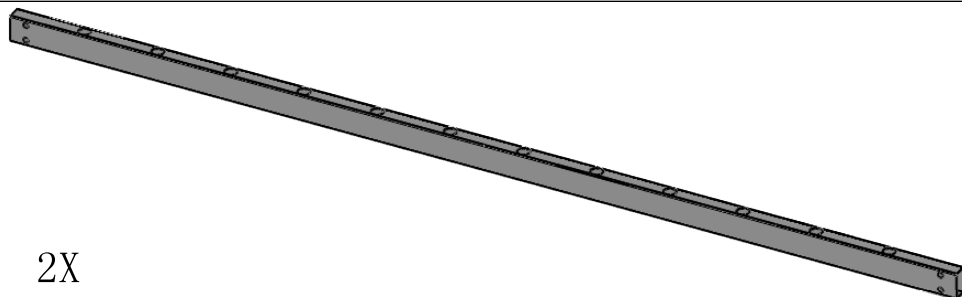


G<sub>5</sub> 24X

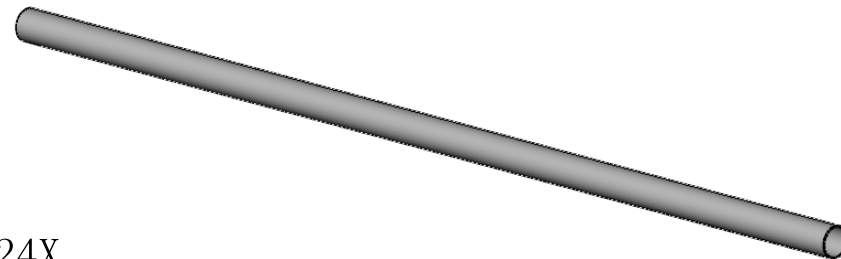


H<sub>1</sub> 1X

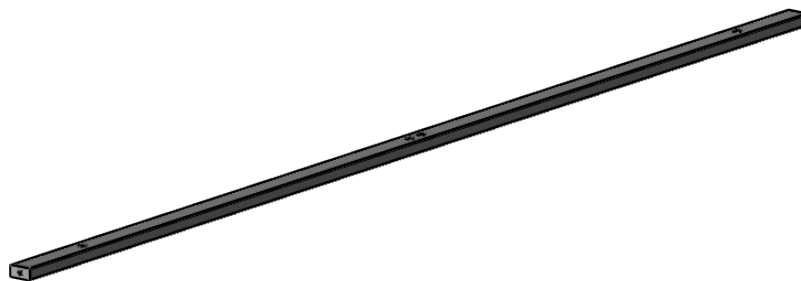


H<sub>2</sub> 2X

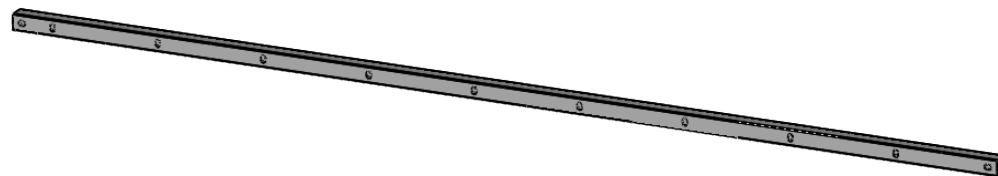


H<sub>3</sub> 1X

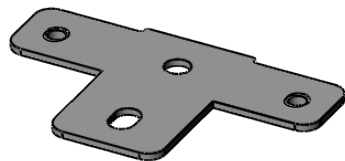


H<sub>4</sub> 2X




J<sub>1</sub> 2X

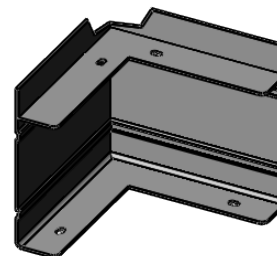


J<sub>2</sub> 6X

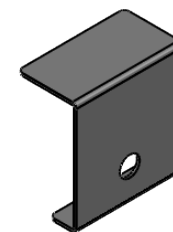
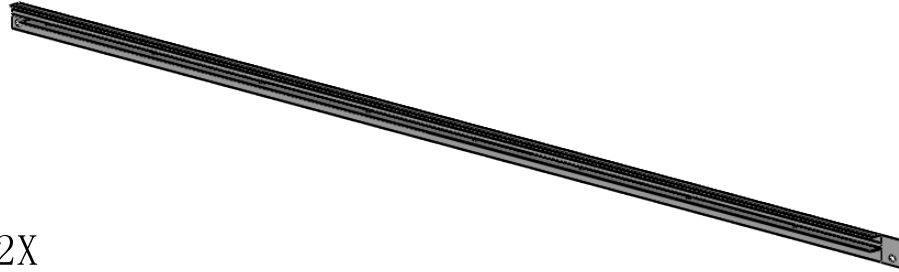

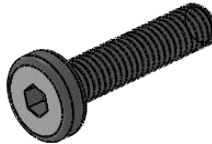
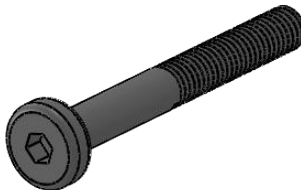






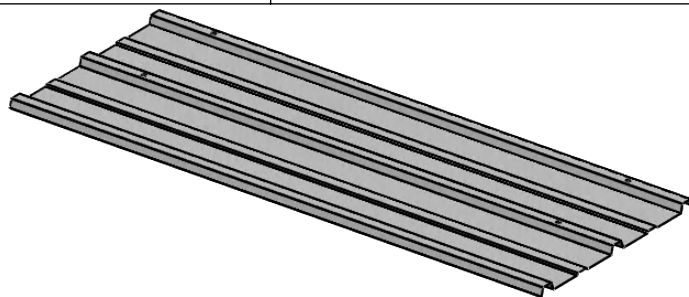



K<sub>1</sub> 4X

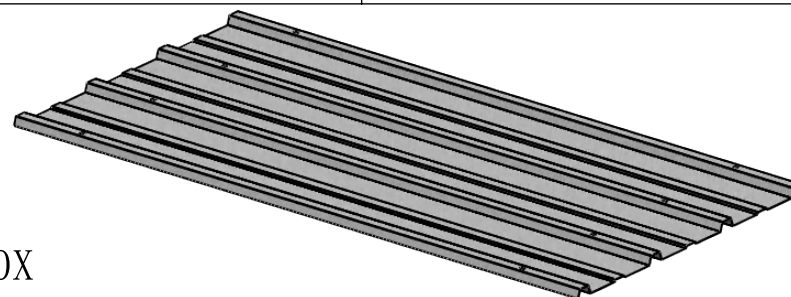

K<sub>2</sub> 10X

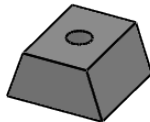


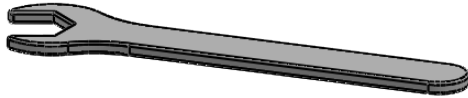					
L <sub>1</sub> 2X			L <sub>2</sub> 2X		
					
1#	110X	M6*16	2#	36X	M6*28
					
3#	18X	M6*50	4#	32X	
					
5#	12X	St5.0*16	6#	54X	
					
7#	54X	M6	8#	1X	S4
					
9#	1X	S13	10#	54X	D12/d5. 2*H2

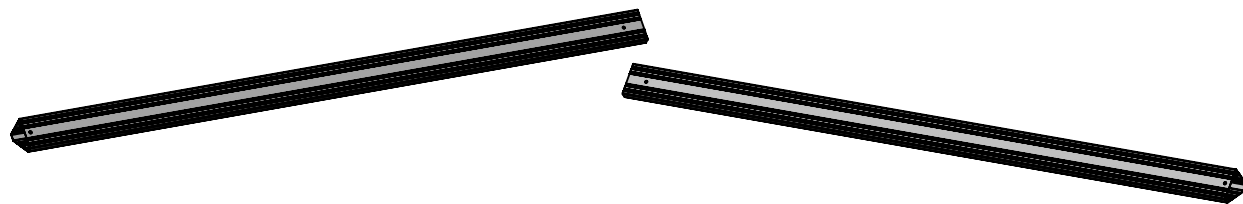

A3 1X


A4 1X

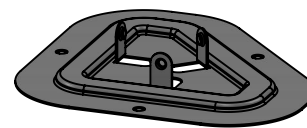

A7 2X




1# 6X

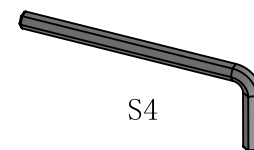


8# 1X

M6\*16


S4

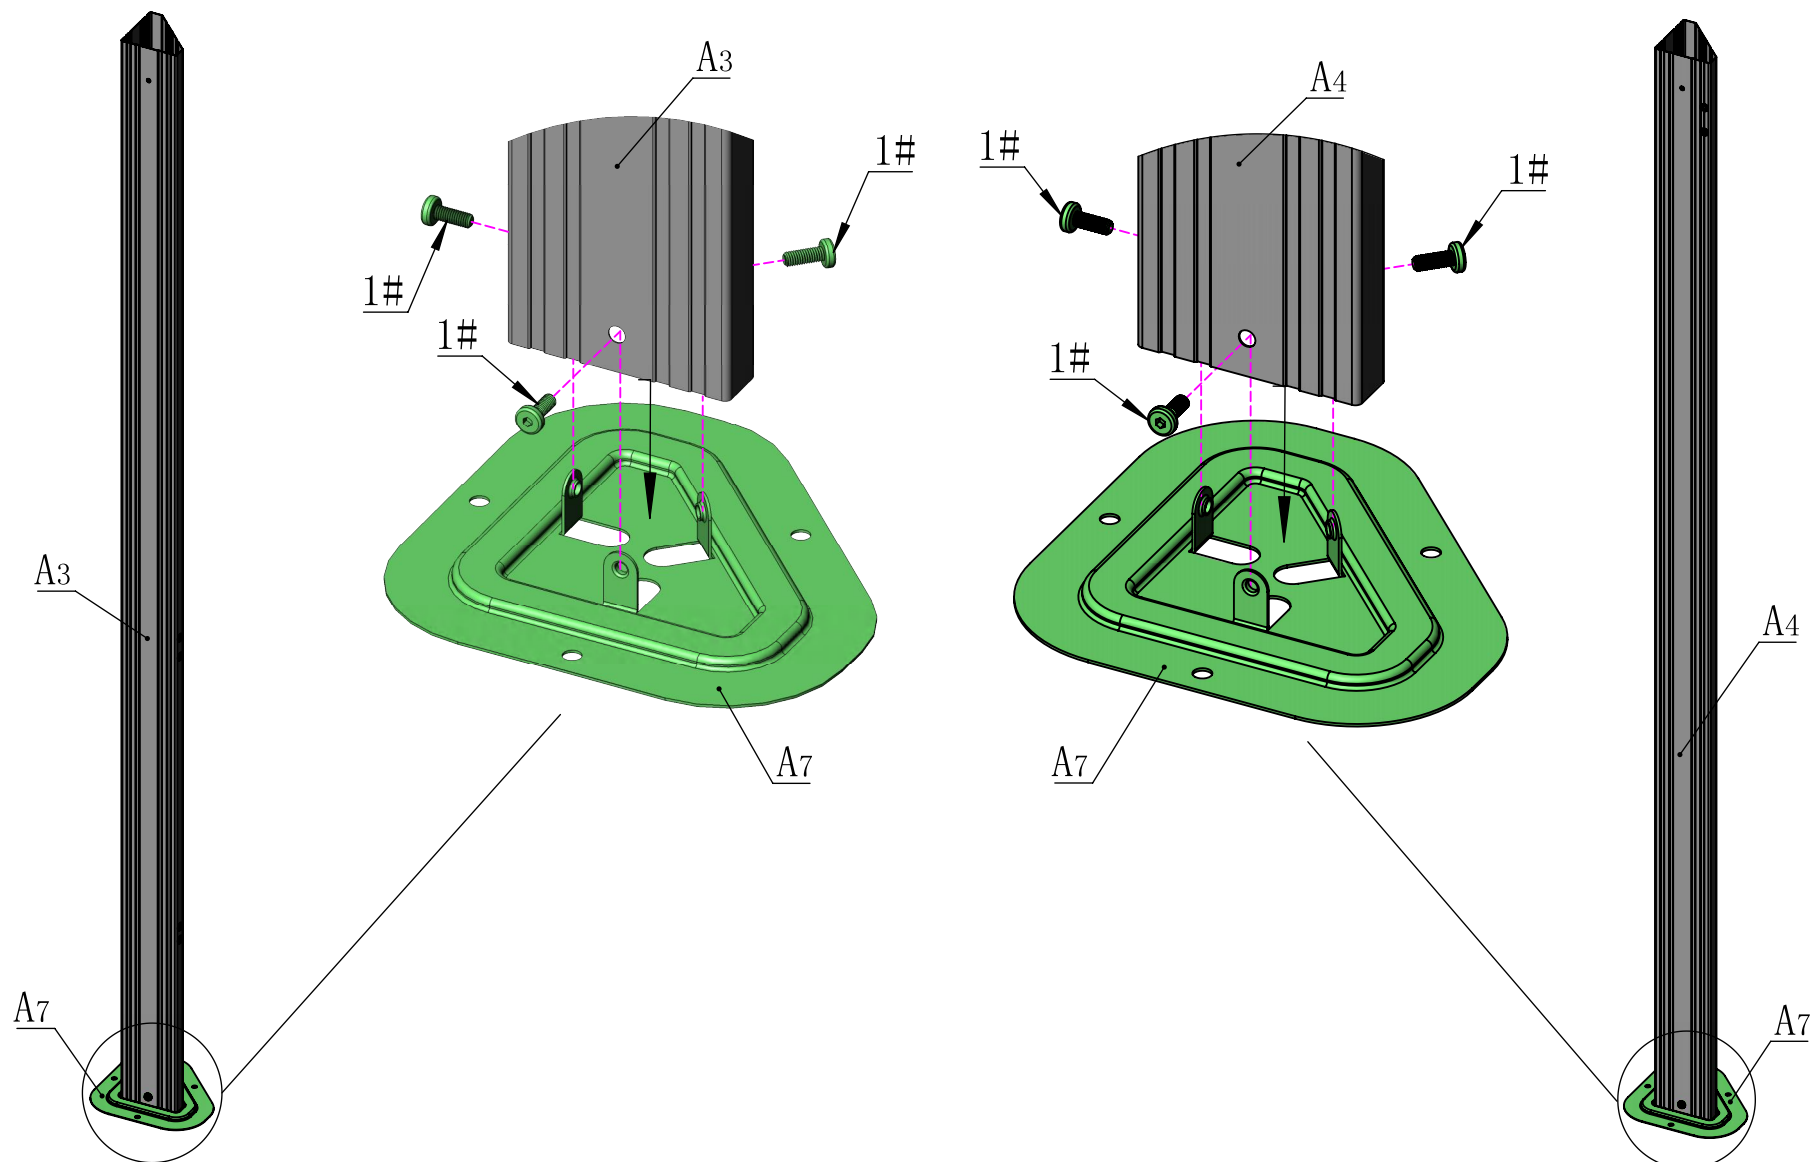



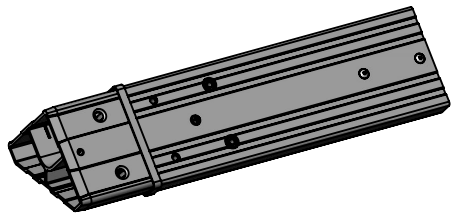

A1 1X


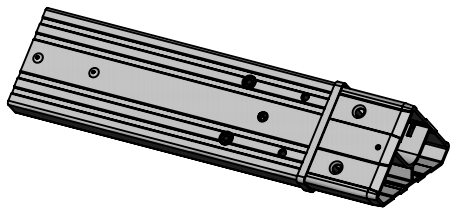



A2 1X




St5.0\*16

5# 4X

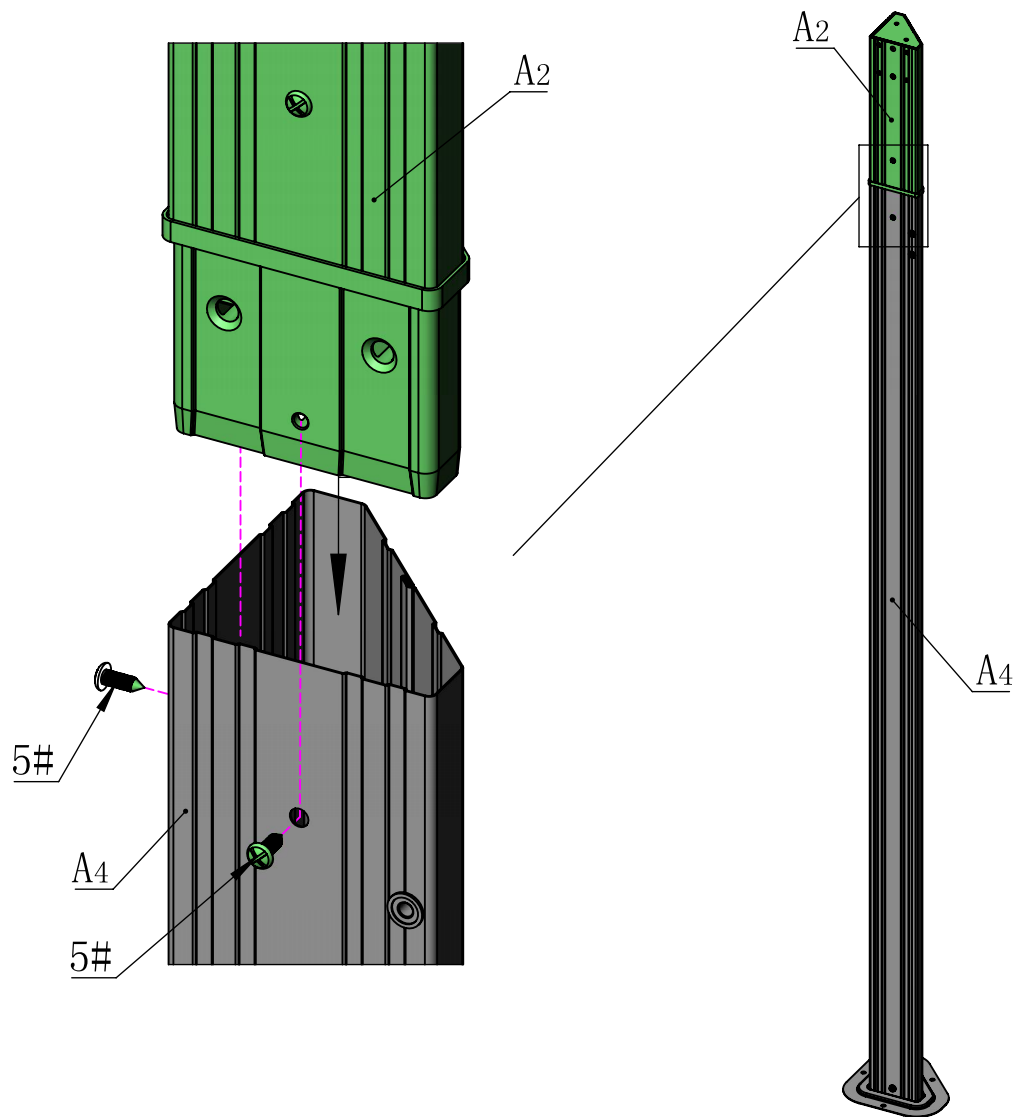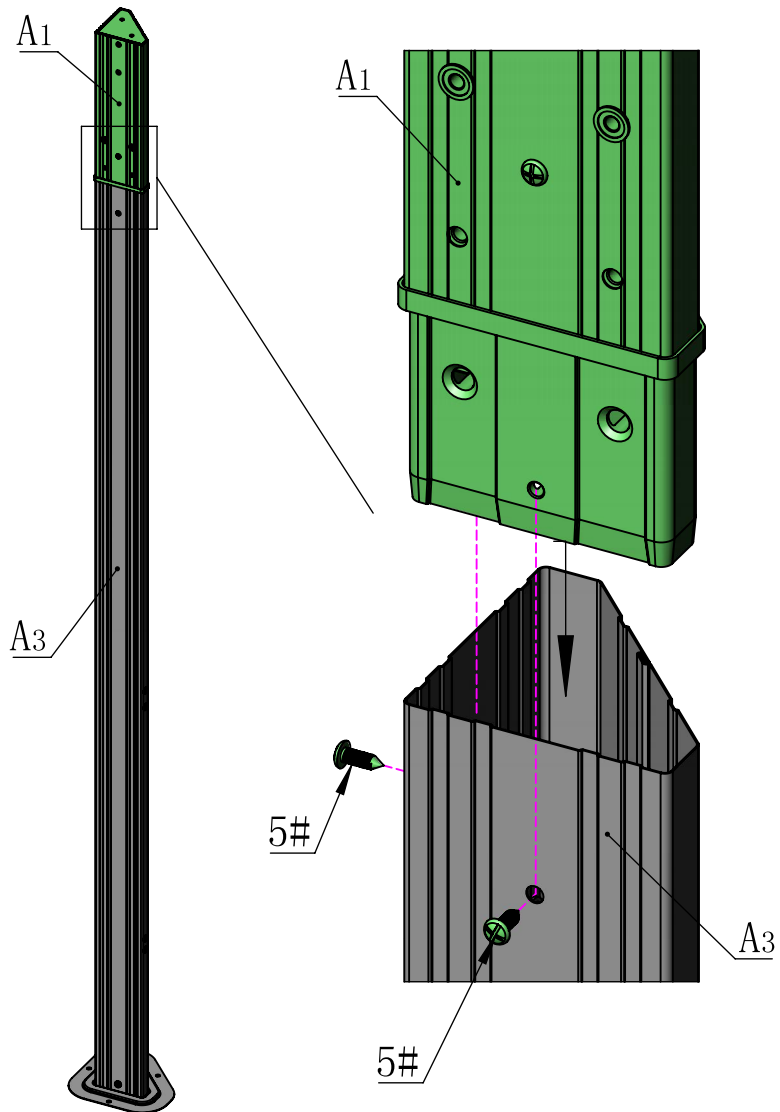


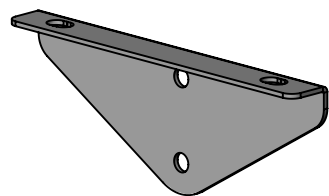


G2 2X

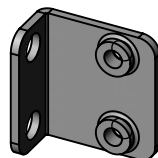



G3 2X




1# 8X

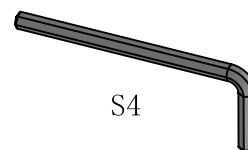

8# 1X

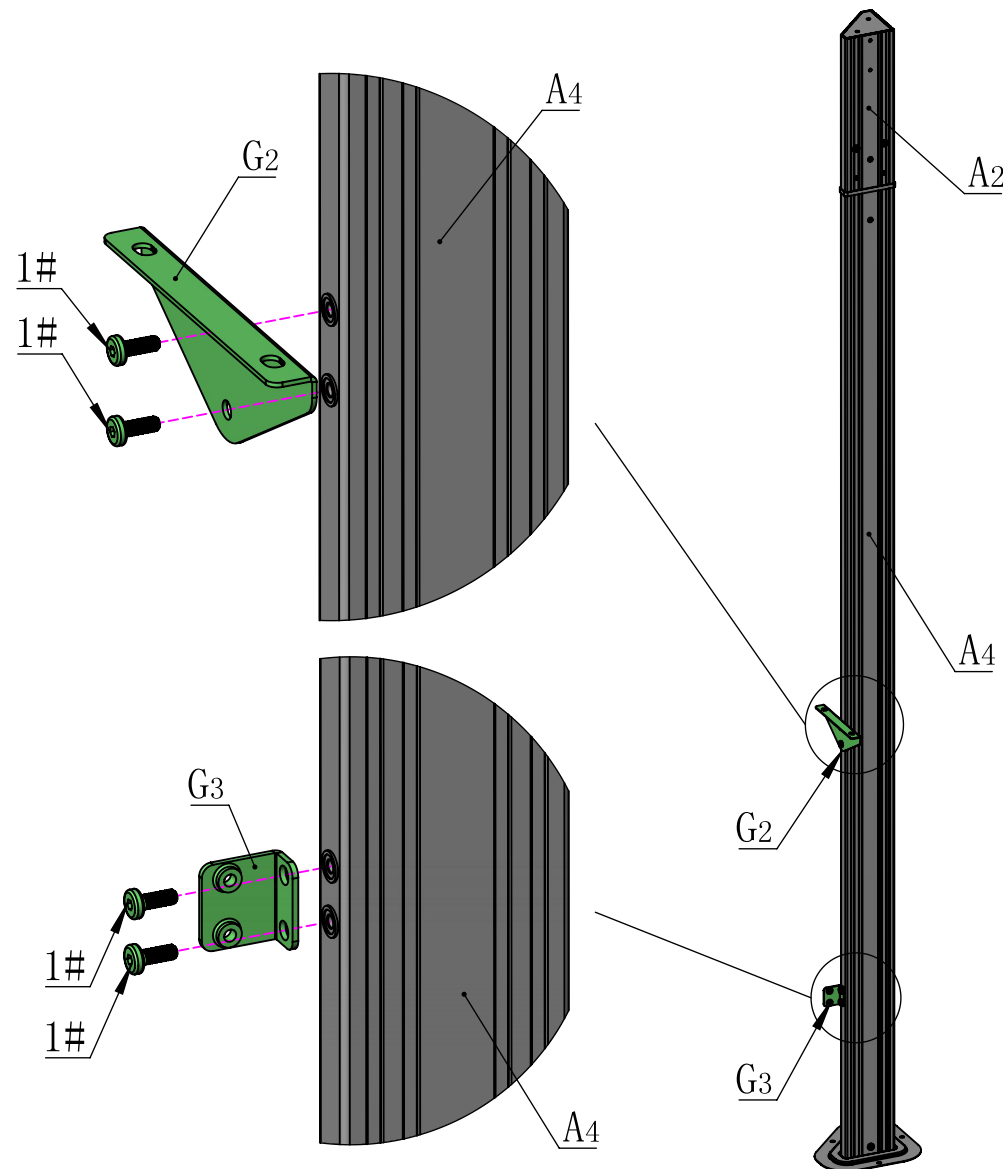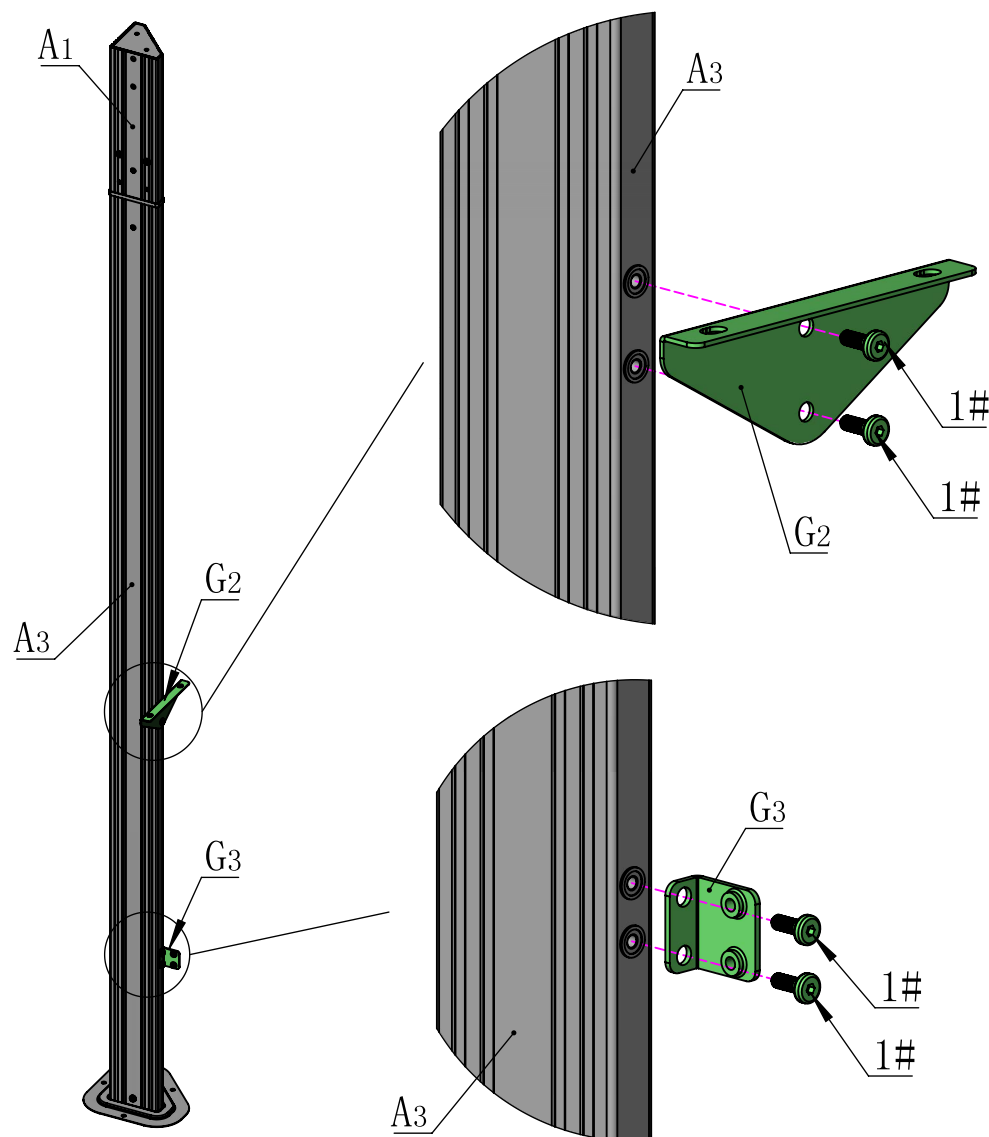

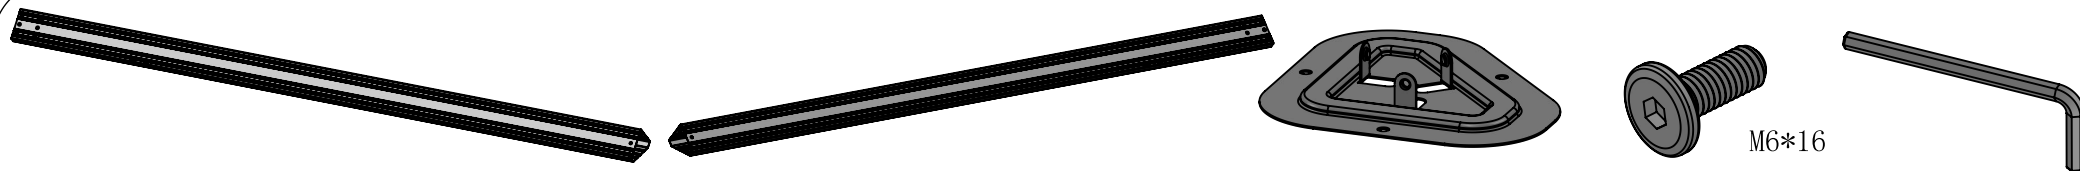


A5 1X


A6 1X

A7 2X


1# 6X

8# 1X

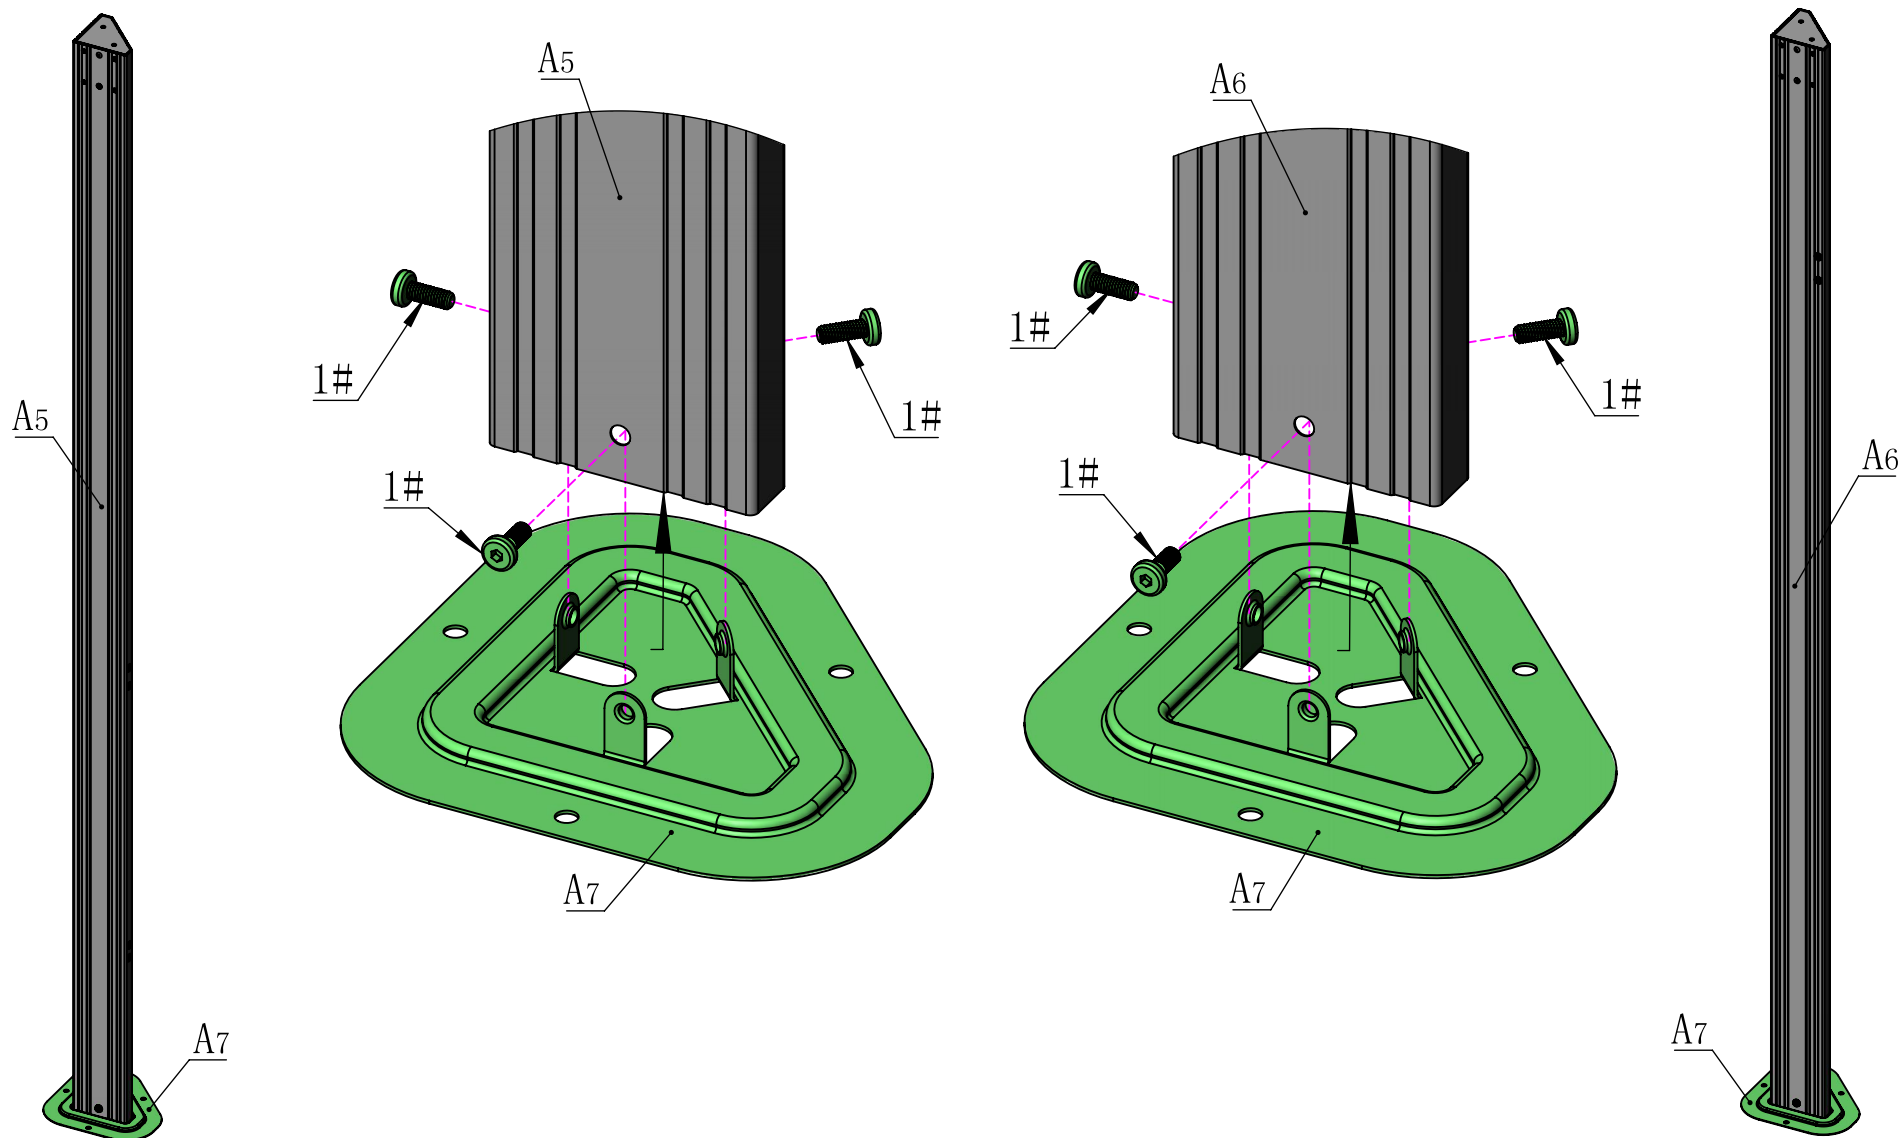


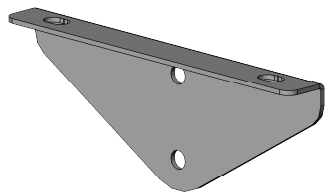


G2 2X

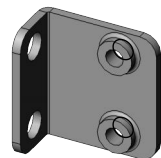


G3 2X

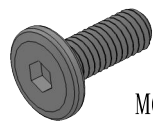


M6\*16

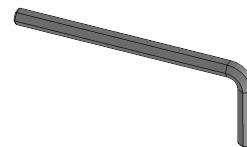


8# 1X

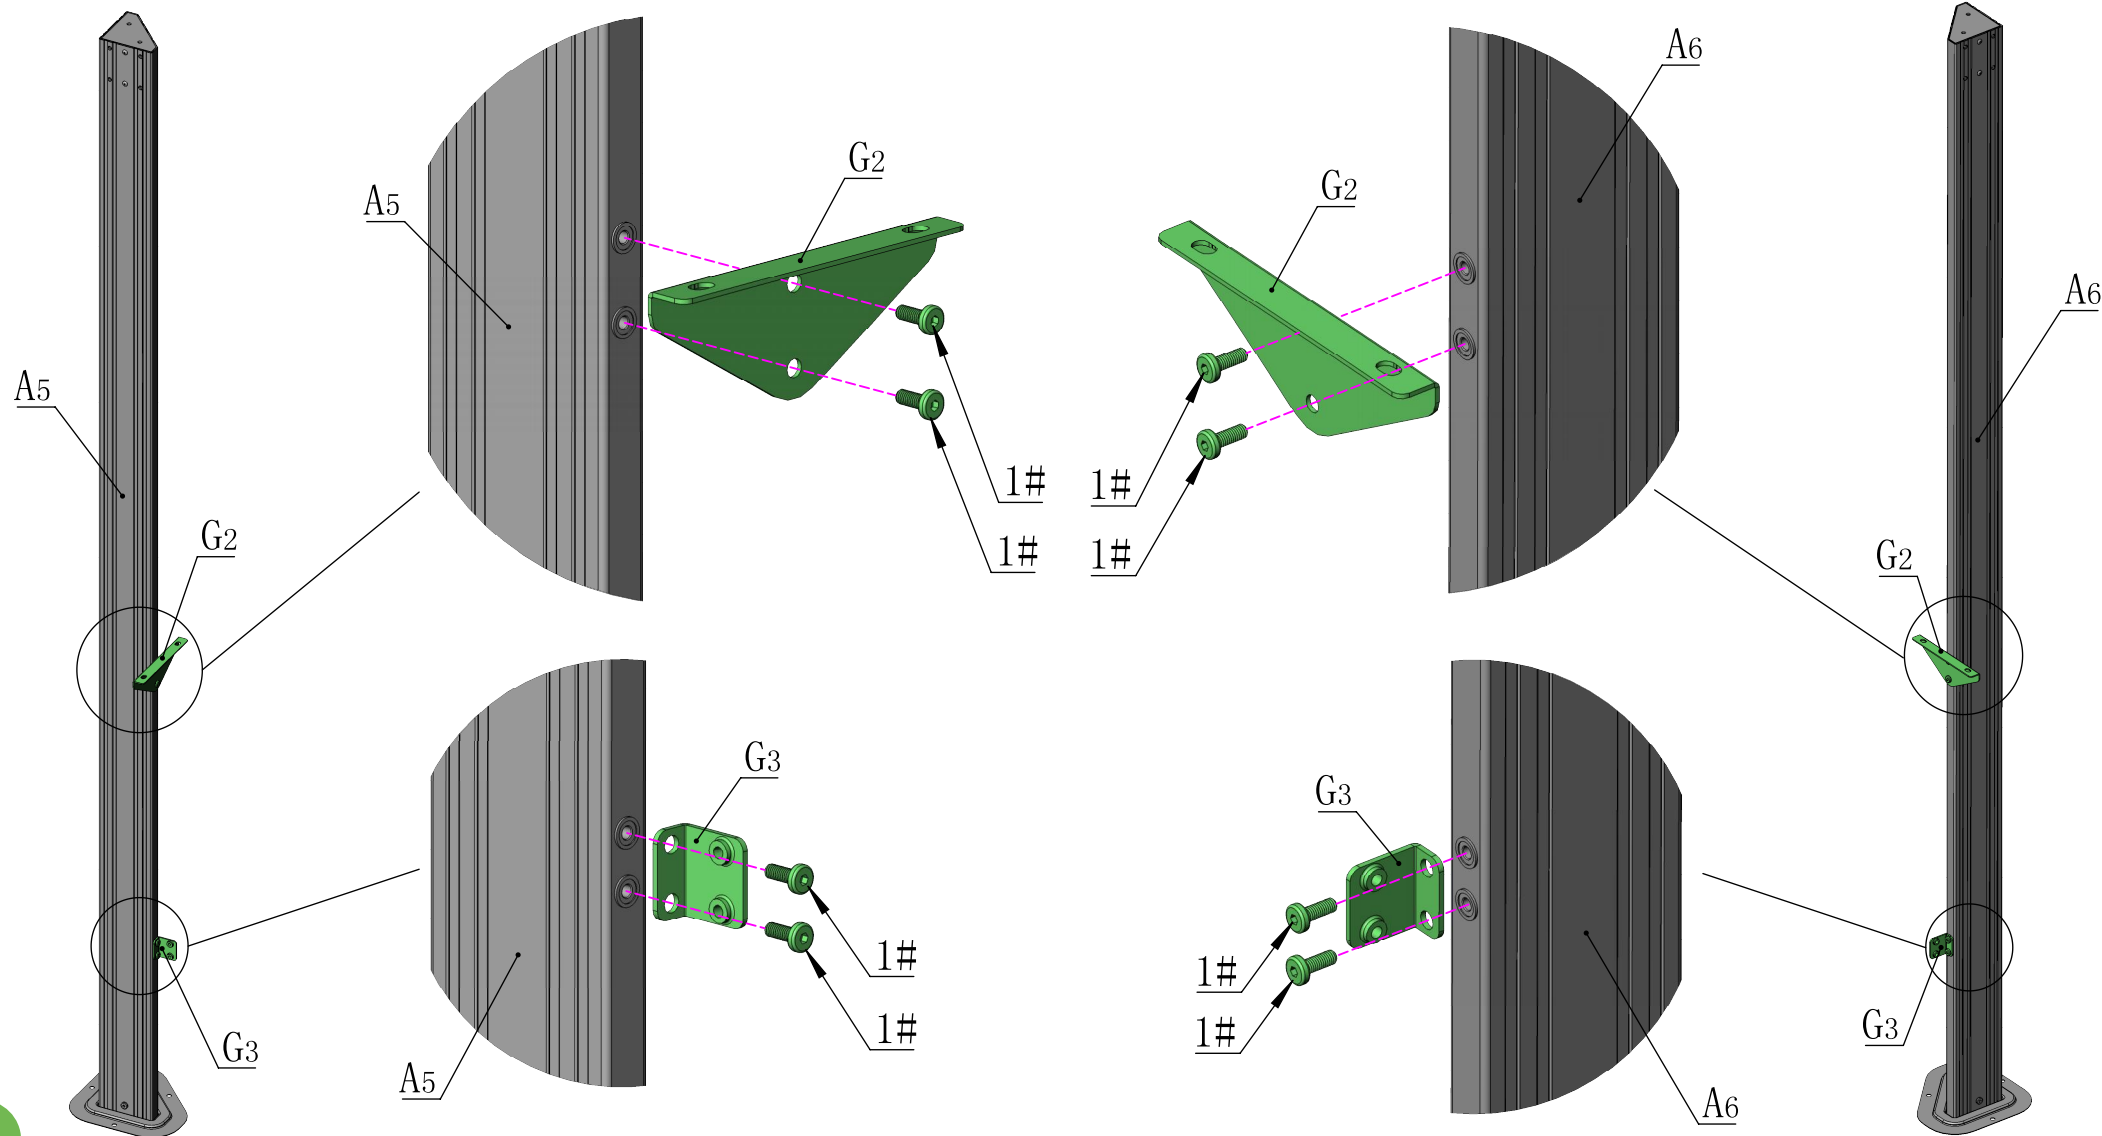




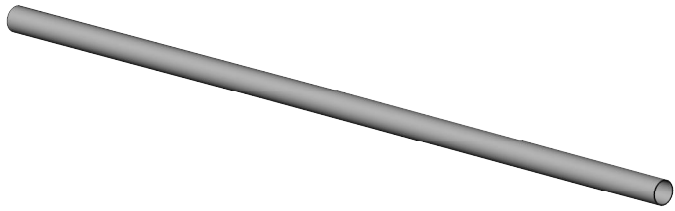


G5 12X

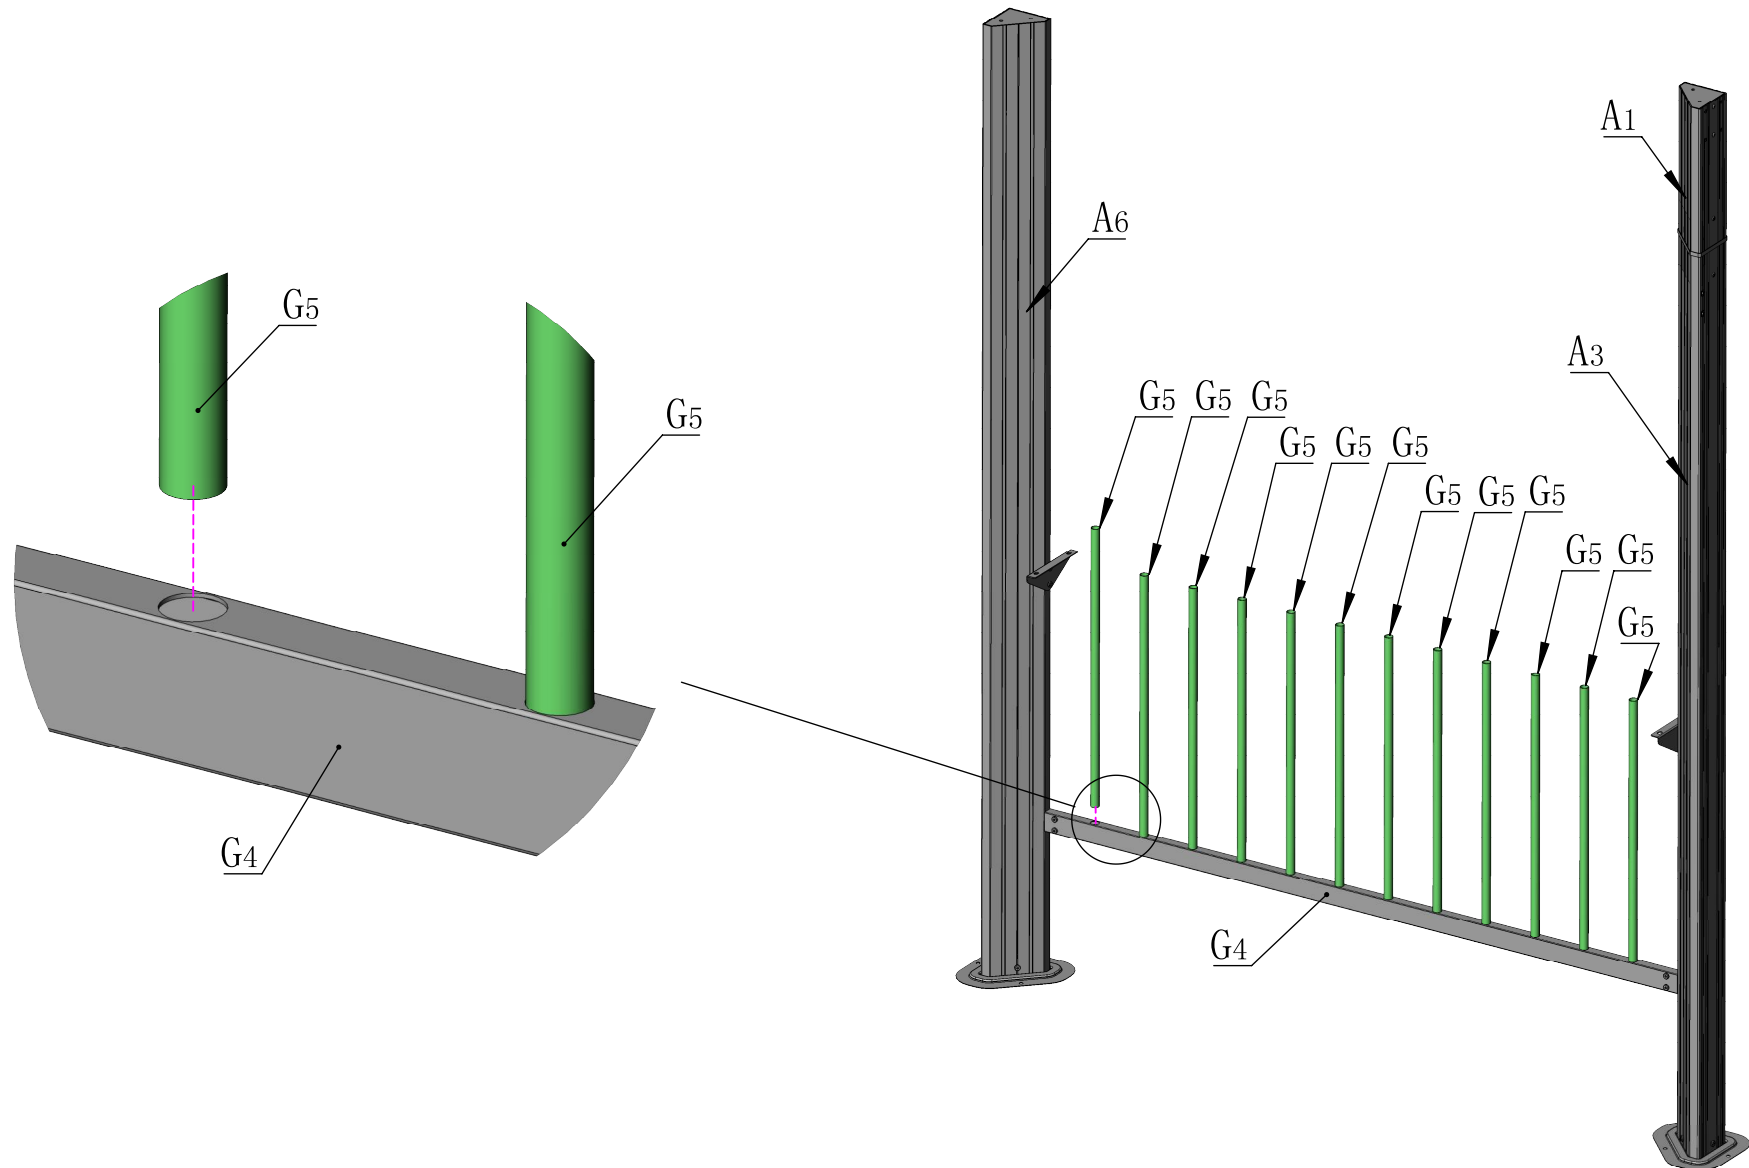

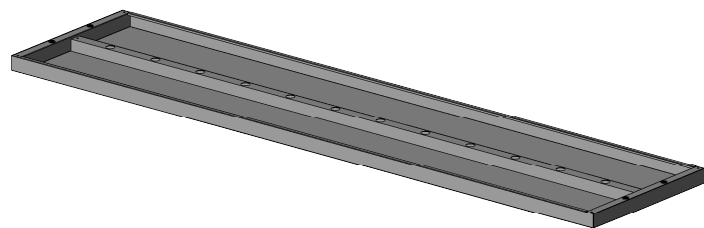


G1 1X

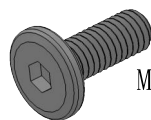




M6\*16

1# 4X

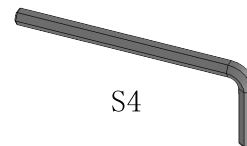


S4


8# 1X

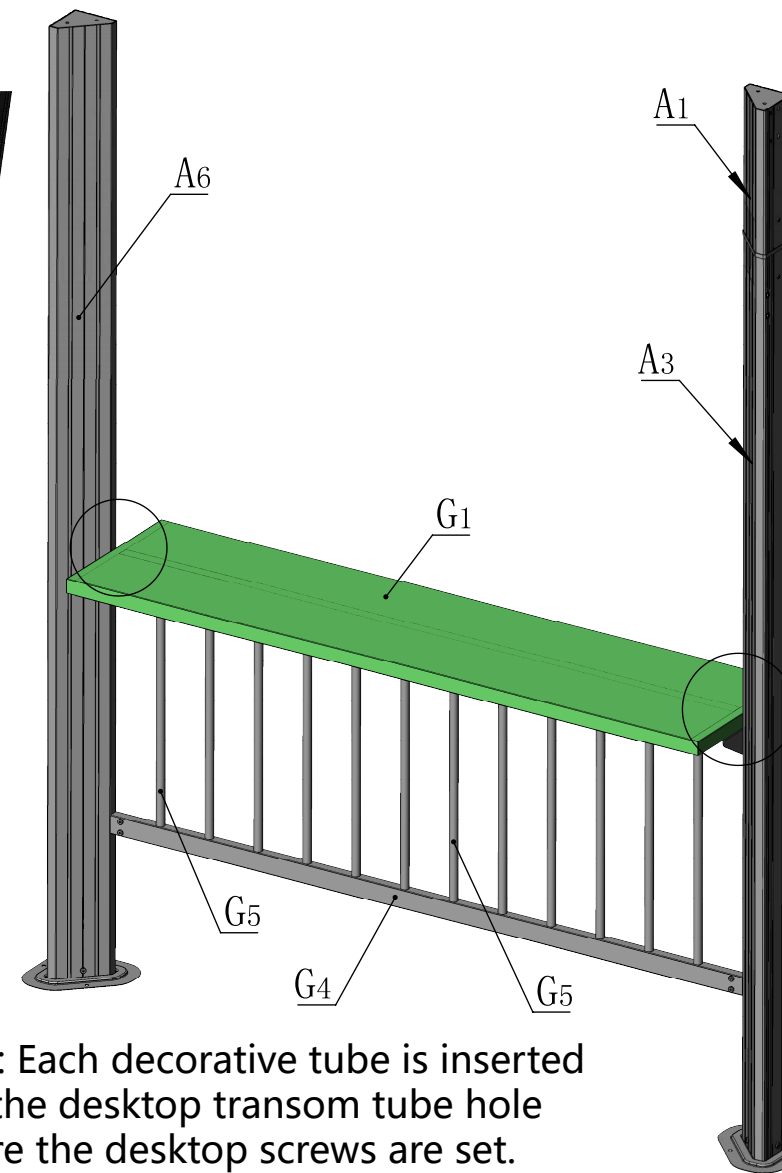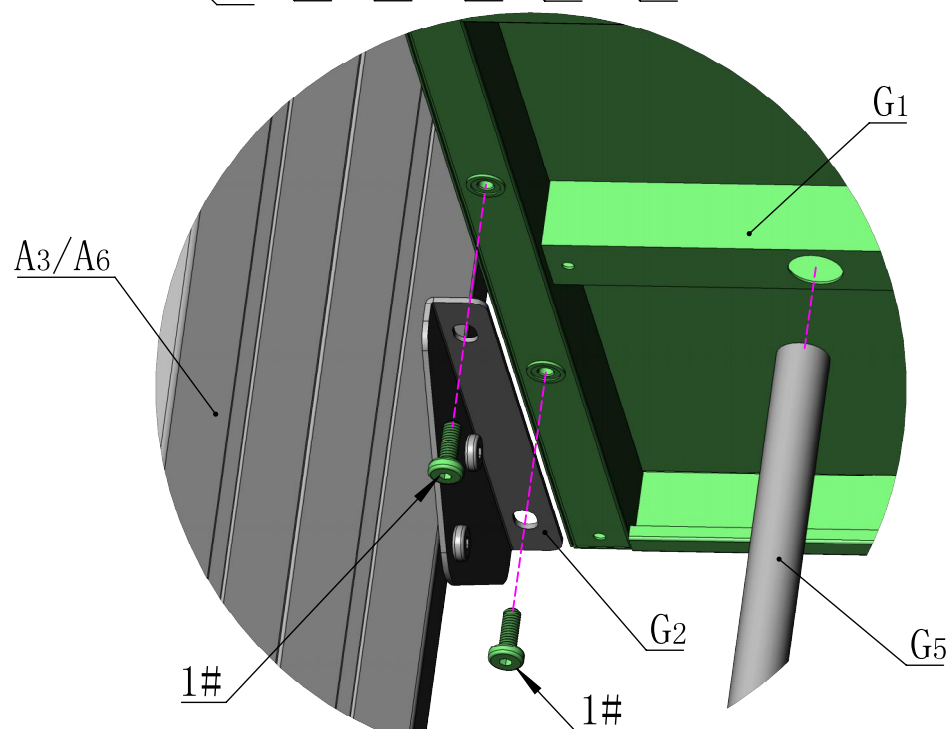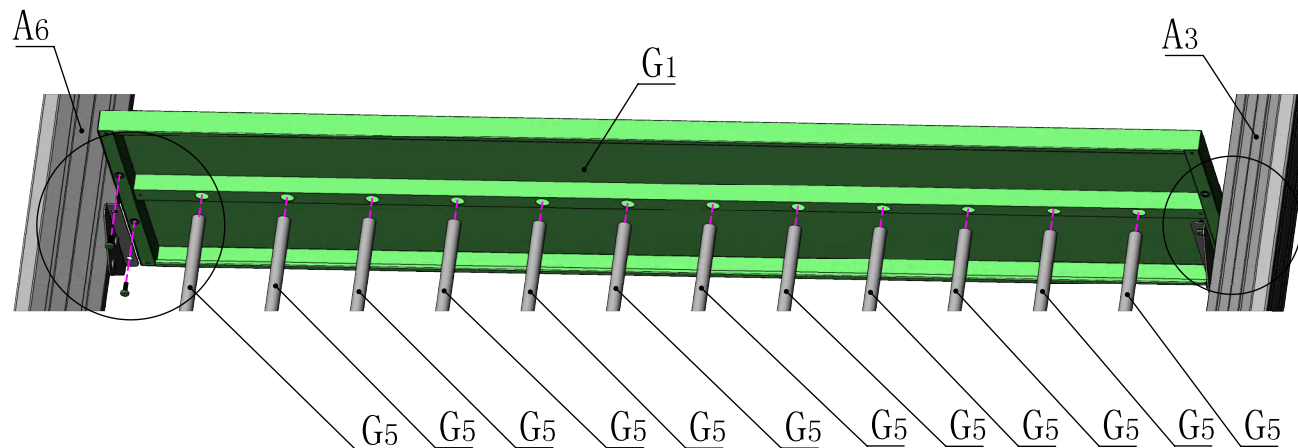


Note: Each decorative tube is inserted into the desktop transom tube hole before the desktop screws are set.

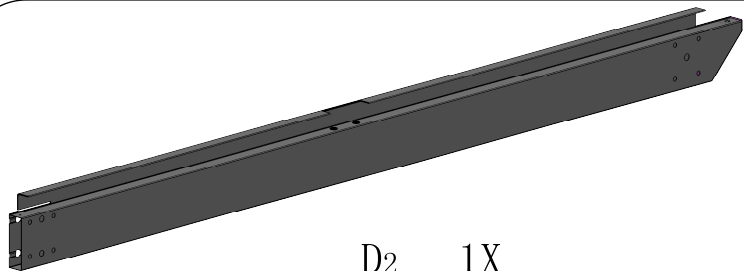


D2 1X

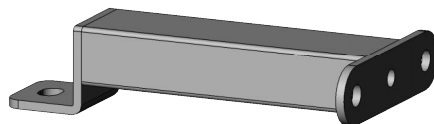


D1 1X

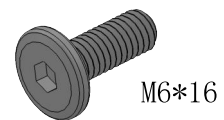

1# 2X  
M6\*16

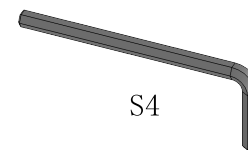


8# 1X  
S4

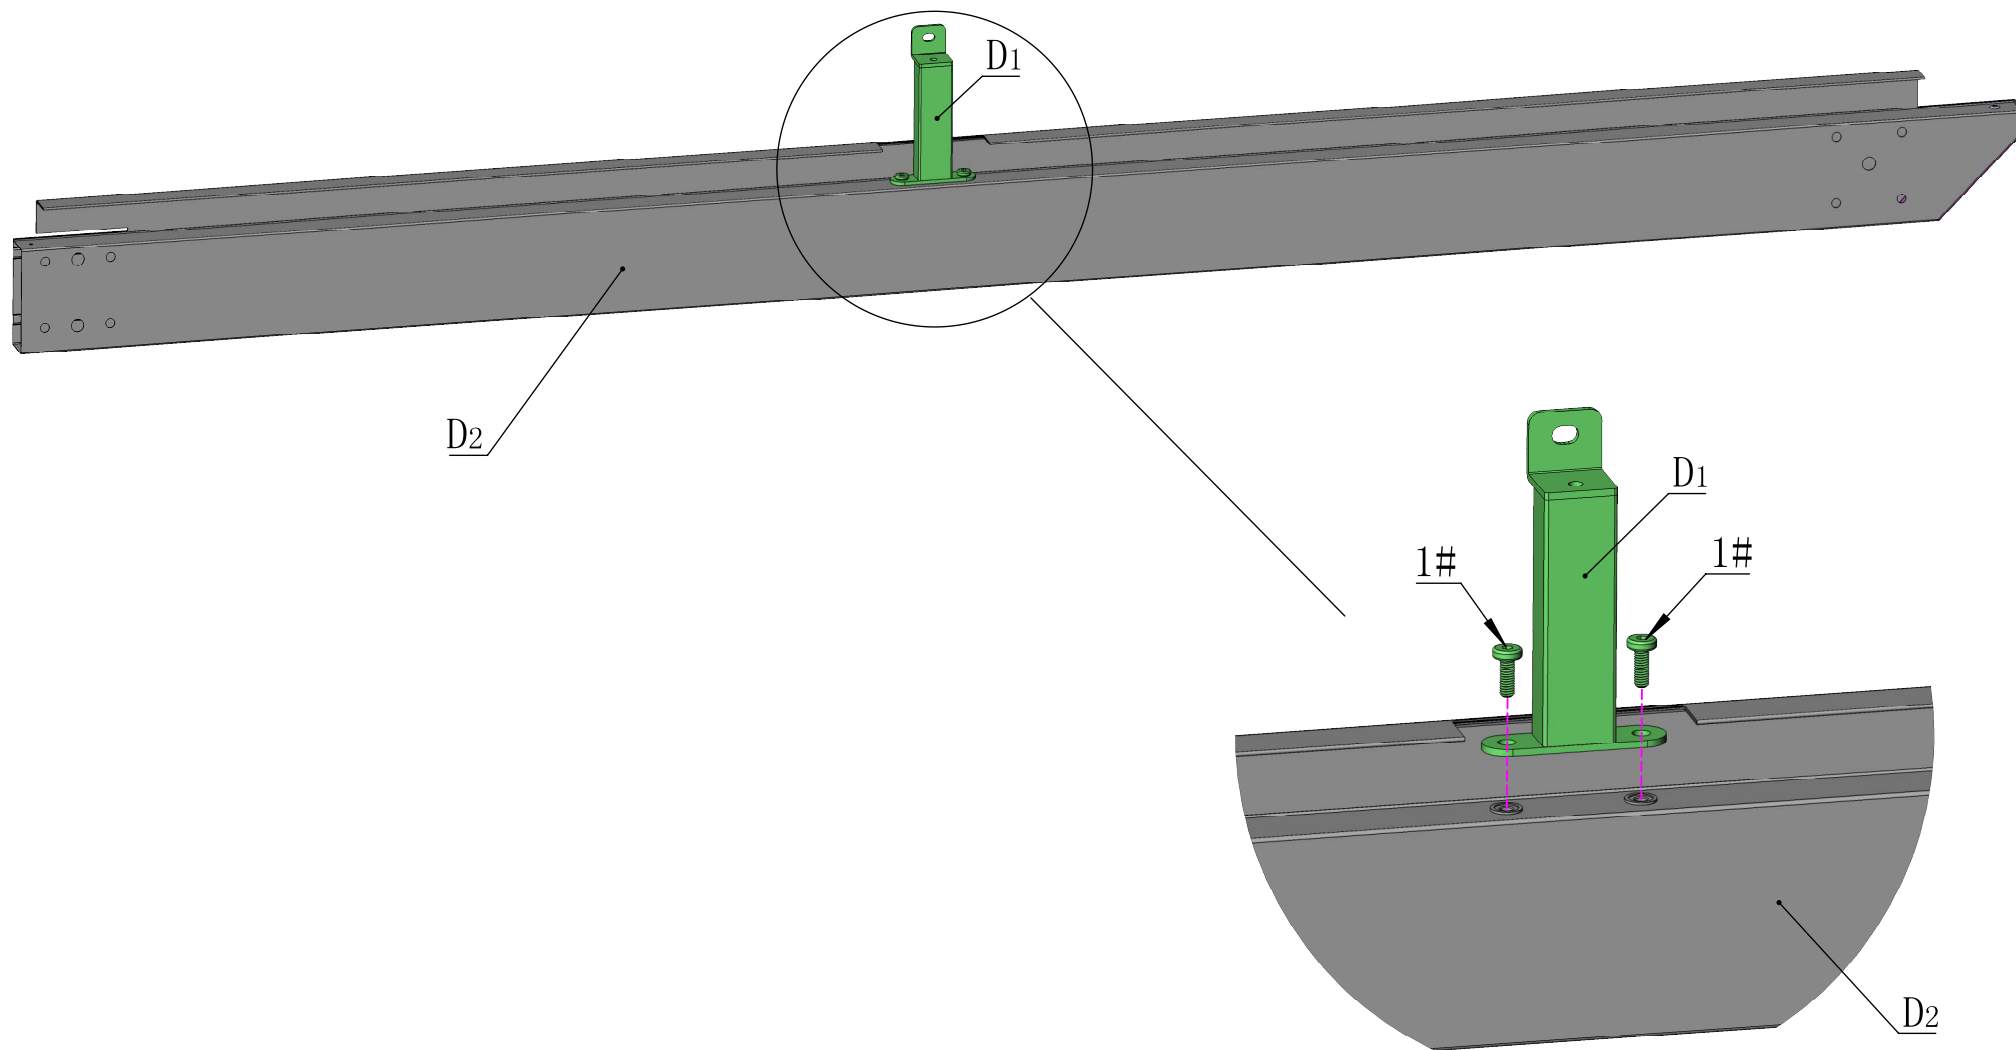








4# 8X

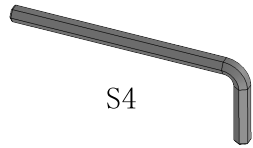


S4  
8# 1X

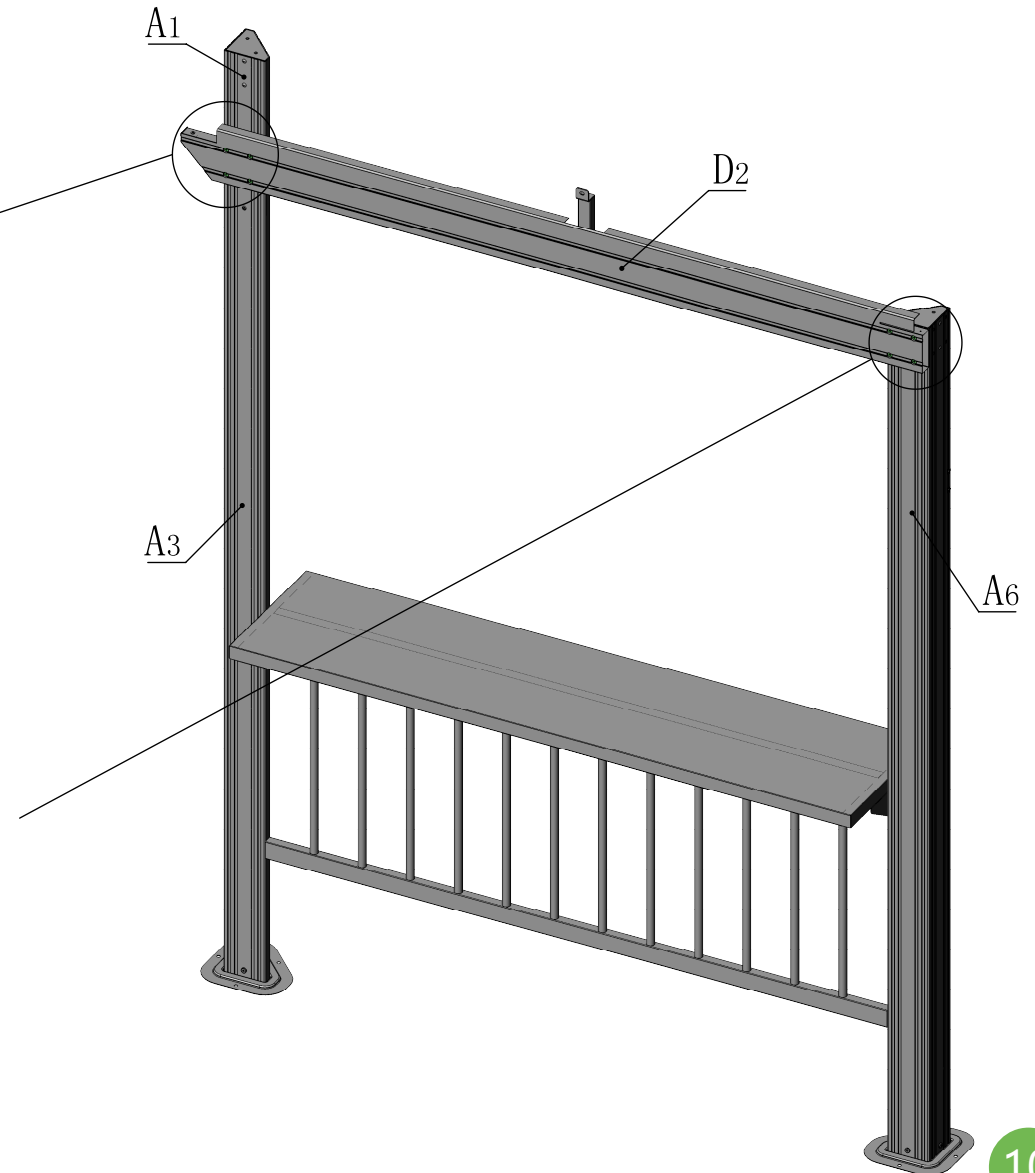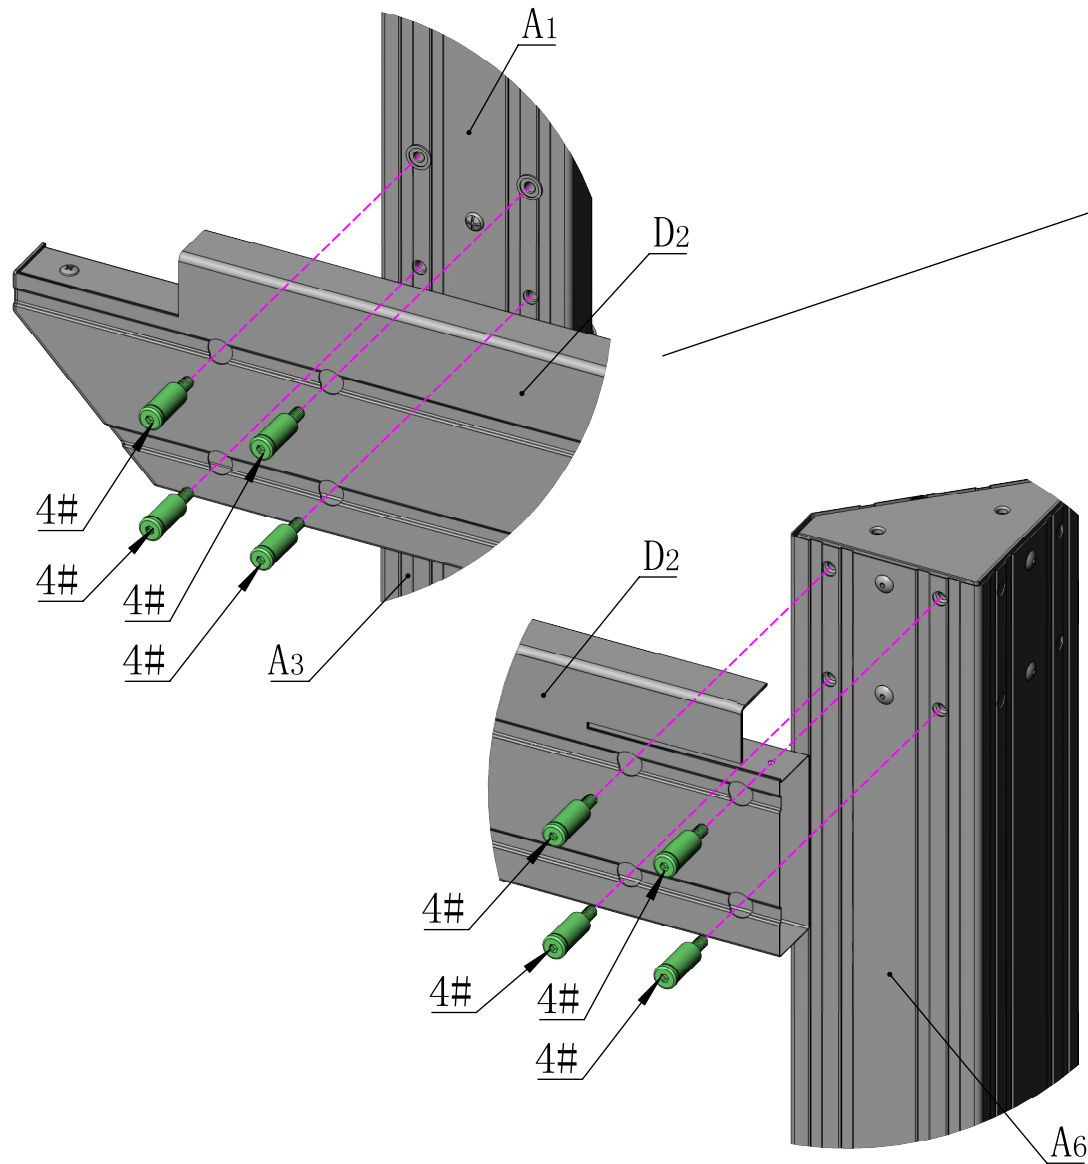


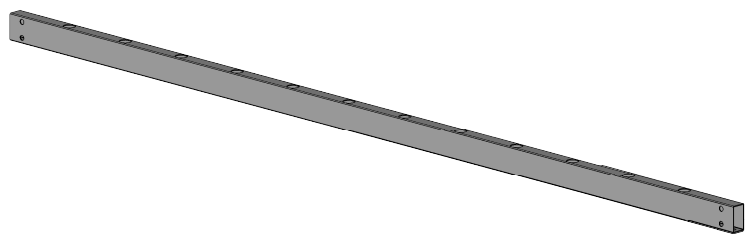


G4 1X




1# 4X


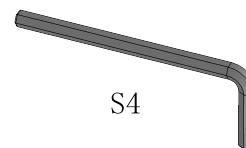



8# 1X

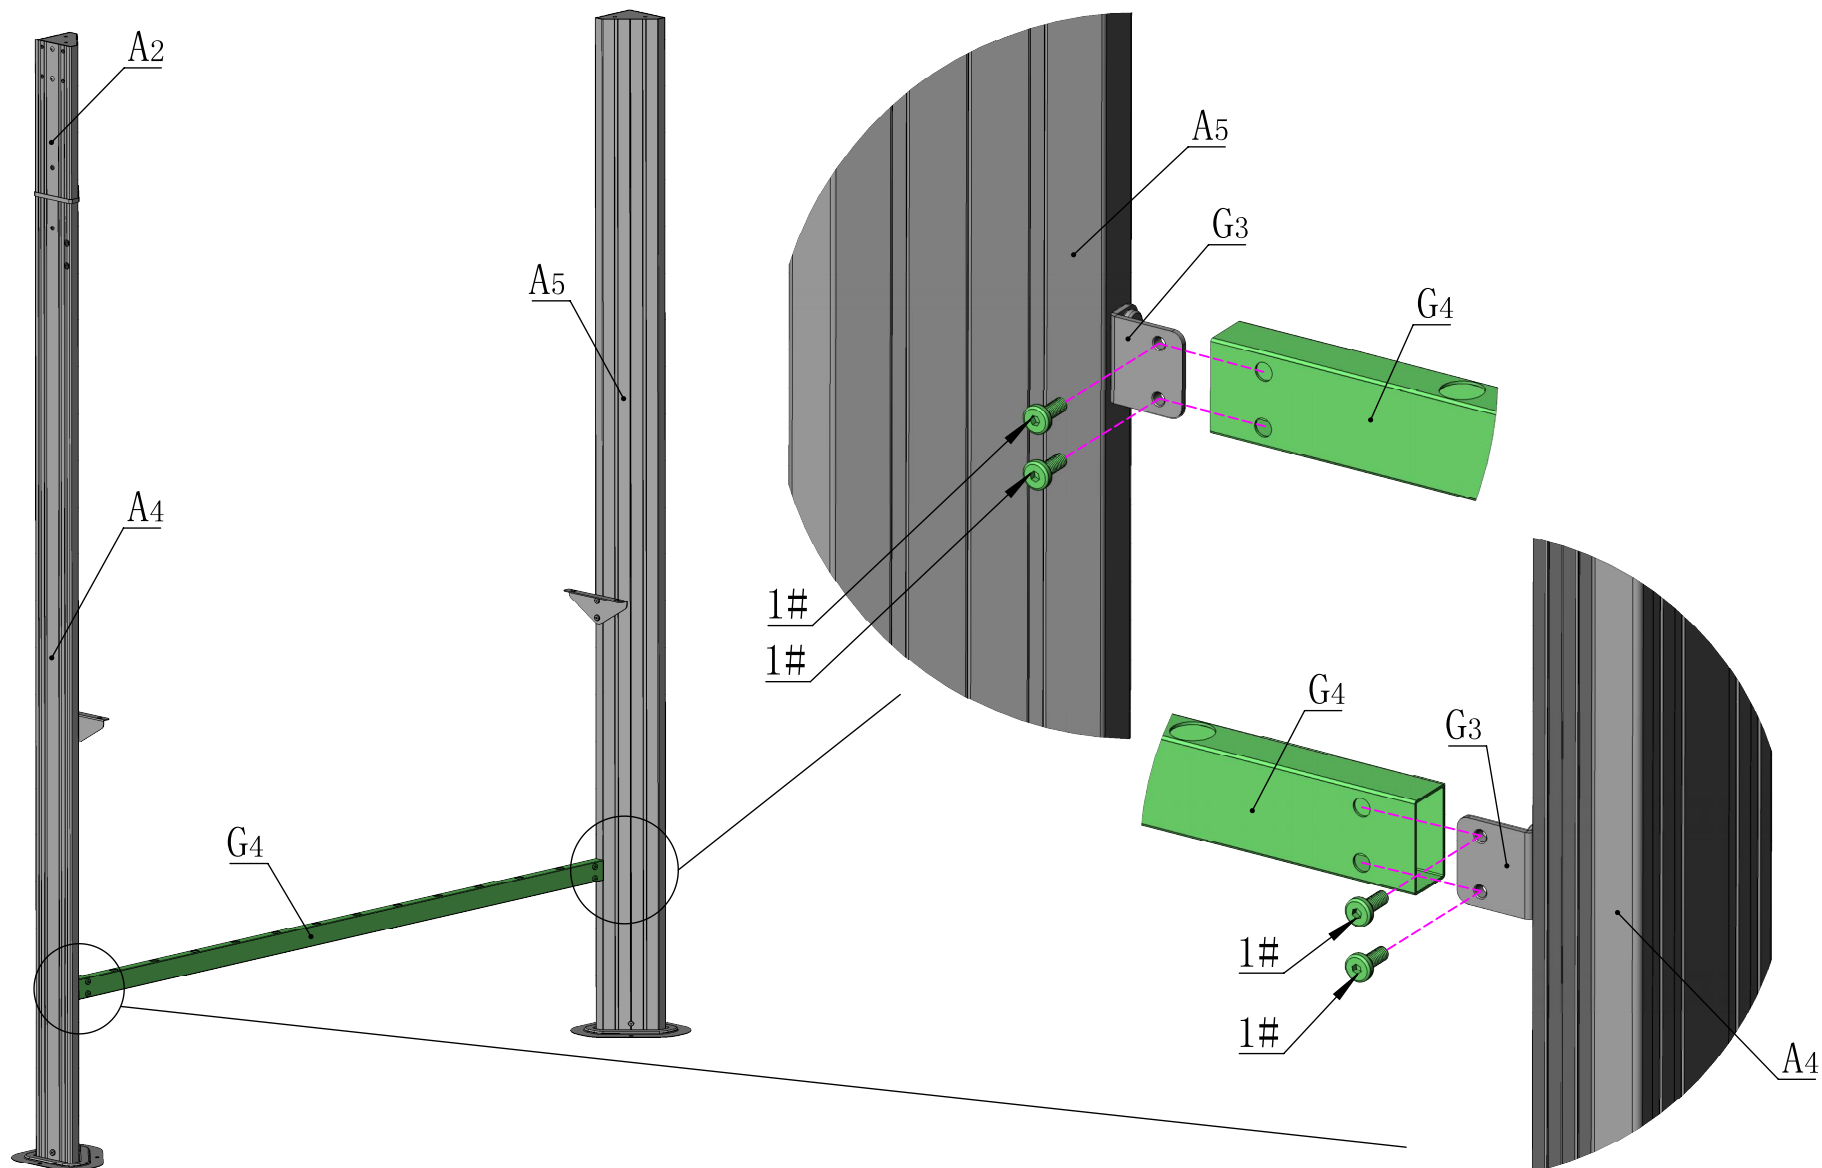

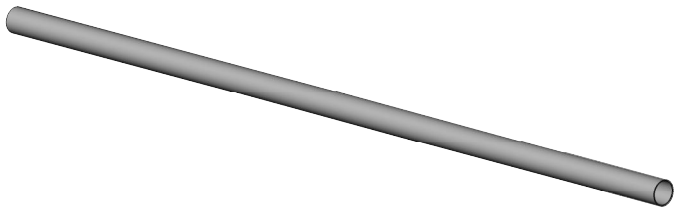


G5 12X

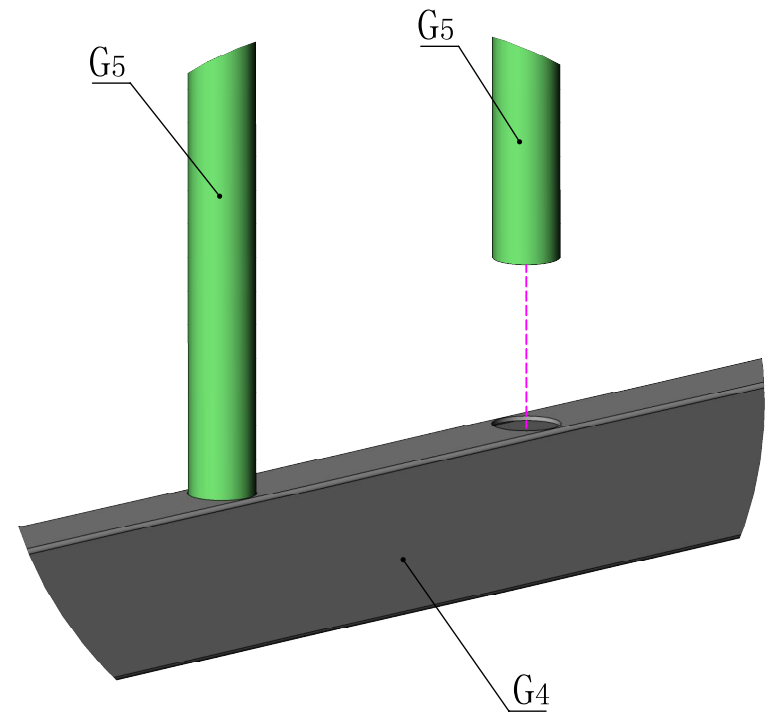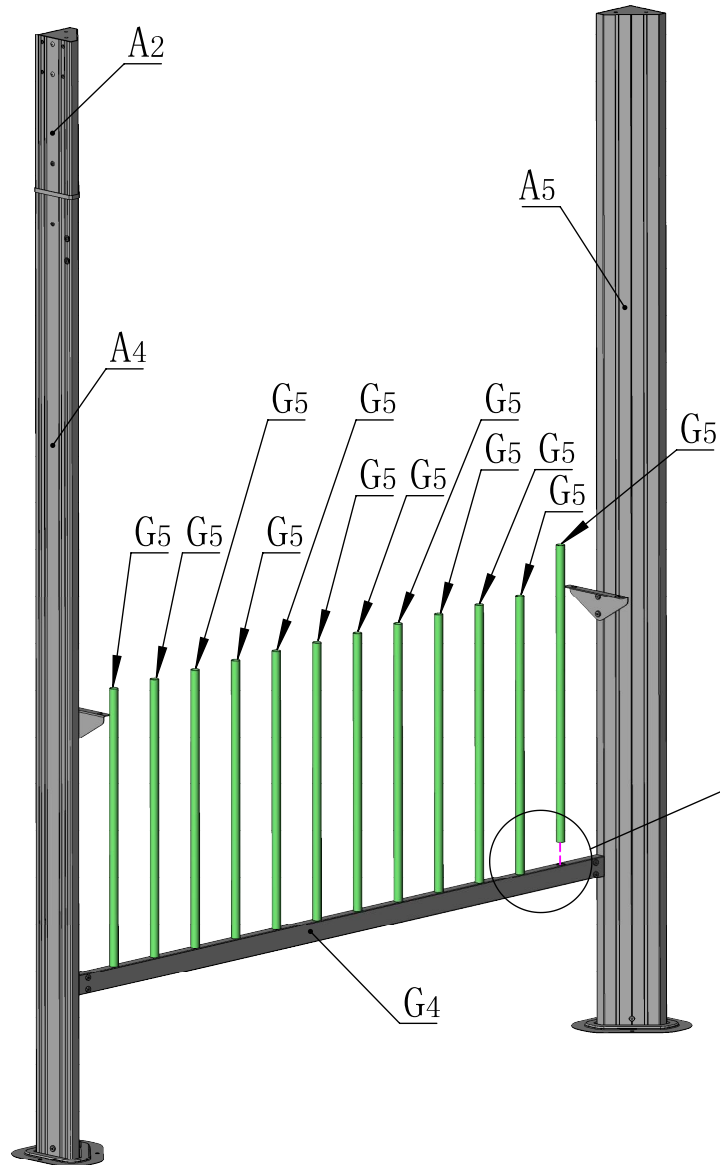

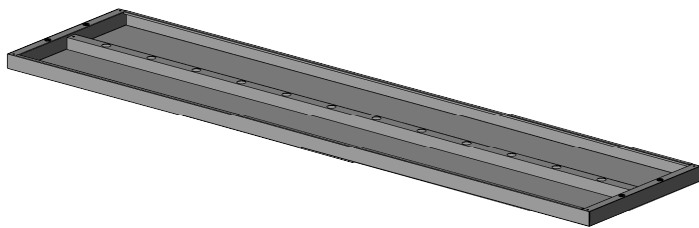


G1 1X

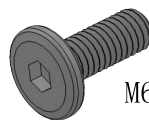




M6\*16

1# 4X





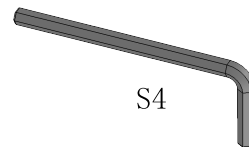


S4

8# 1X

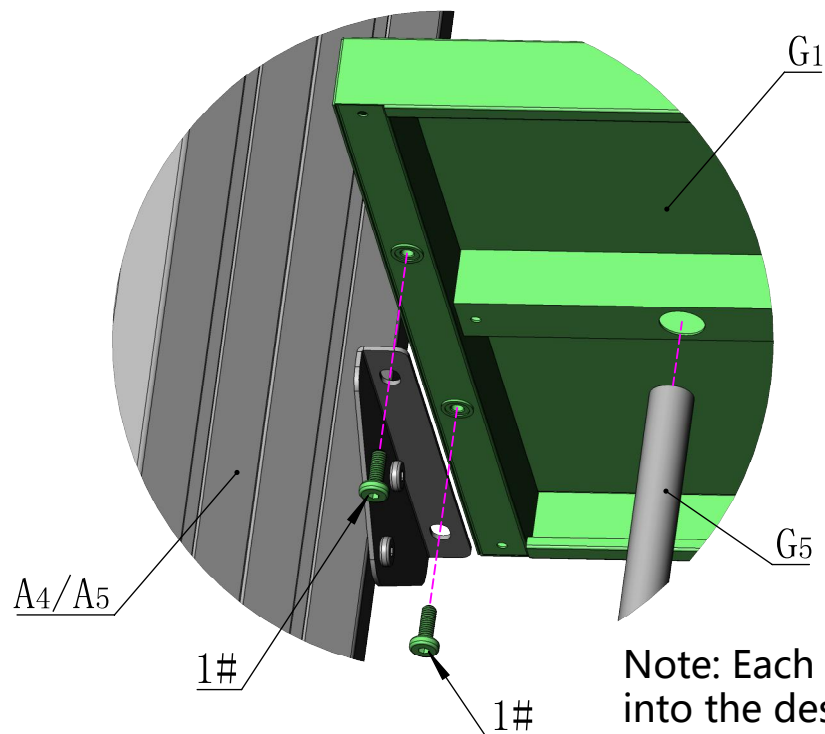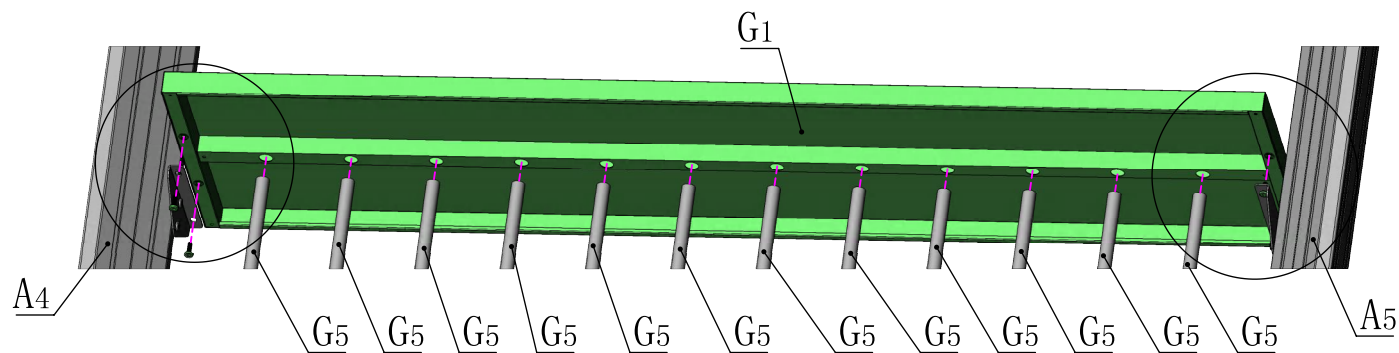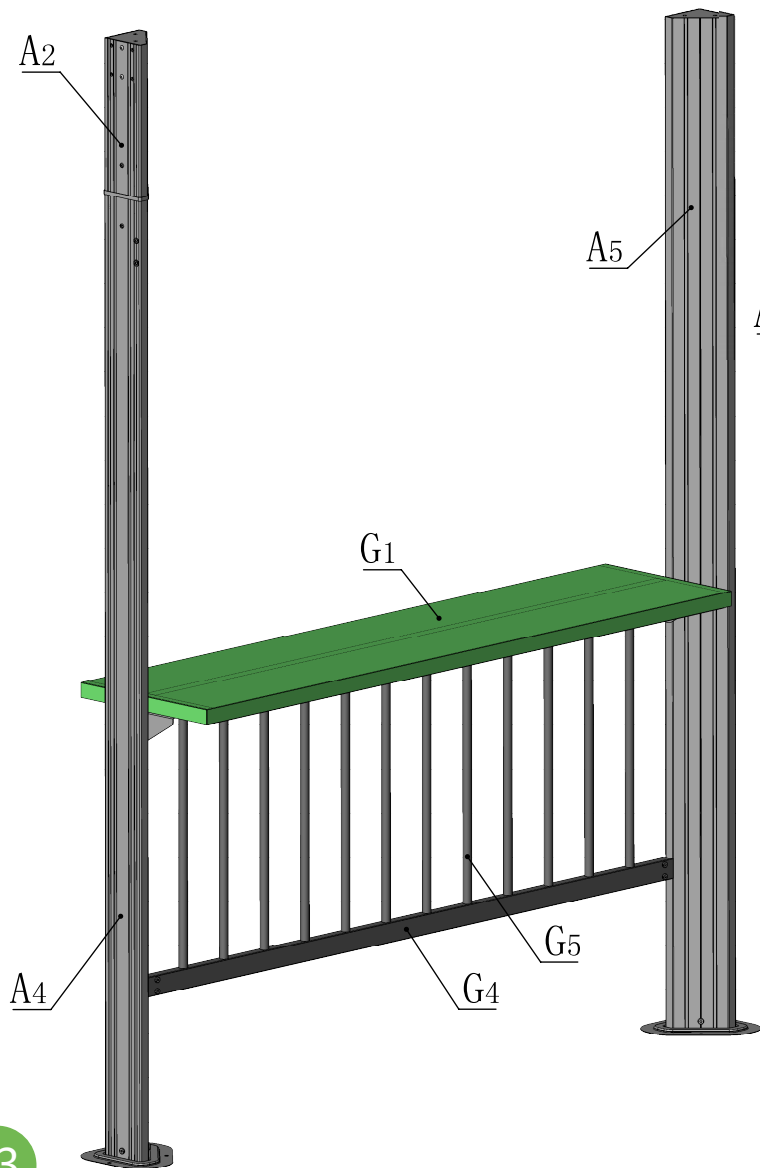


Note: Each decorative tube is inserted into the desktop transom tube hole before the desktop screws are set.

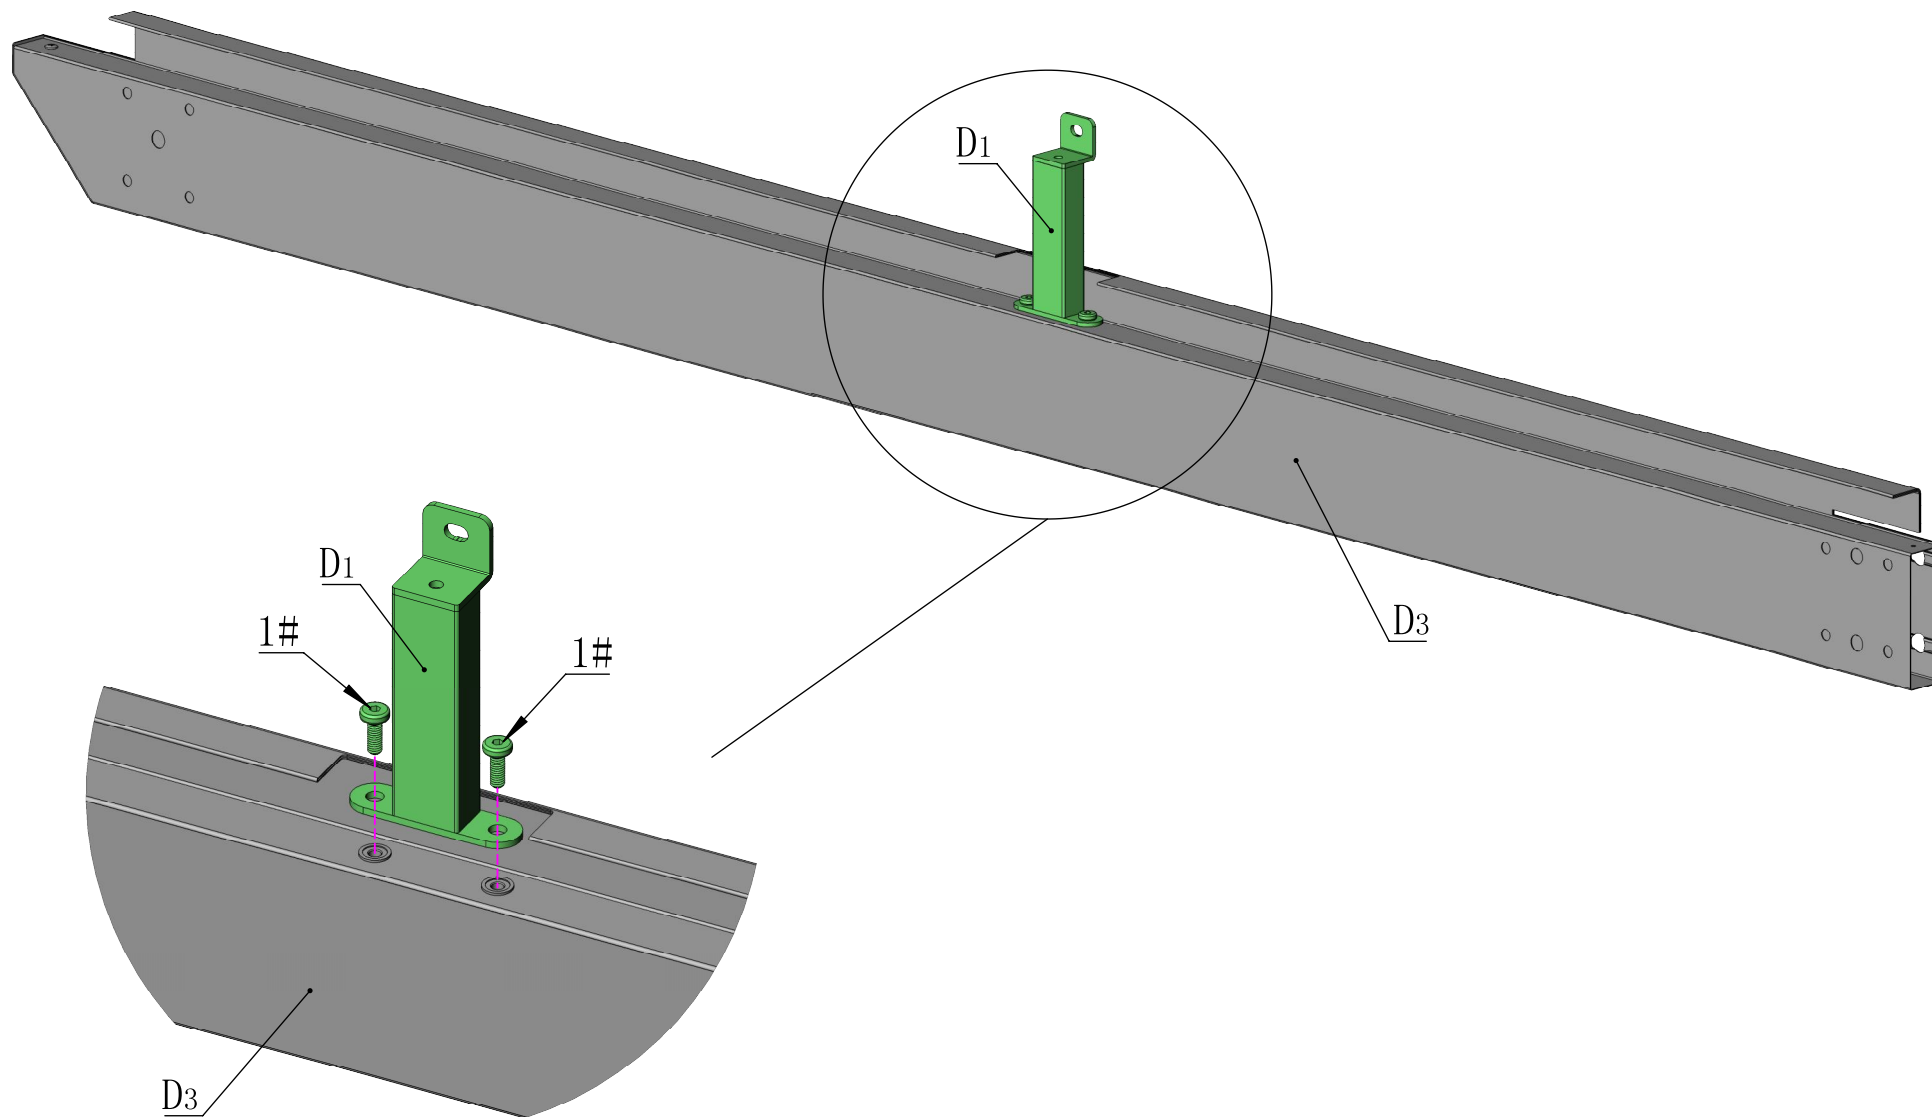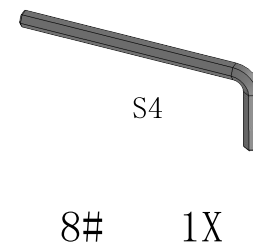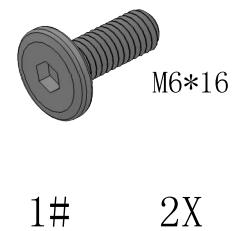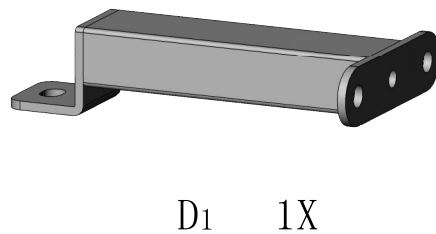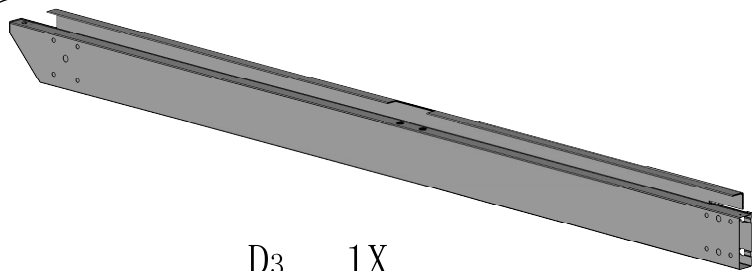







4# 8X

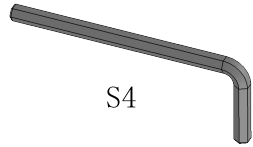


S4


8# 1X

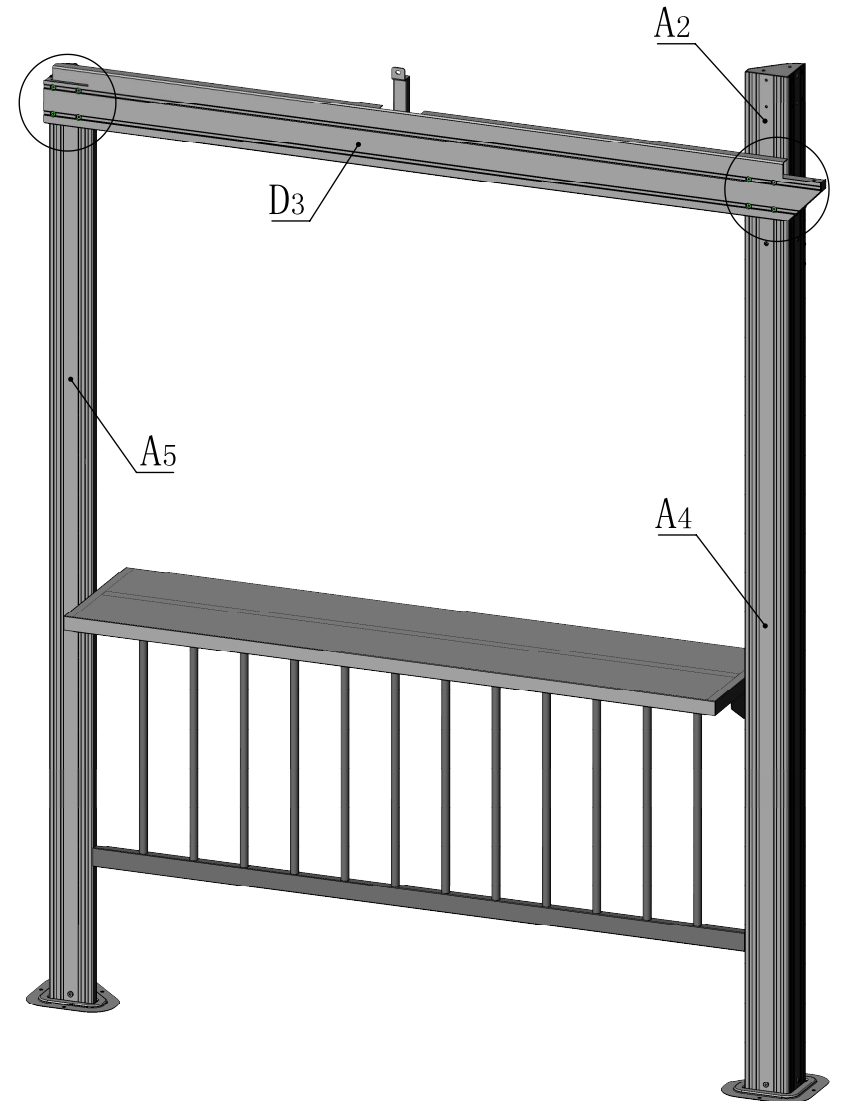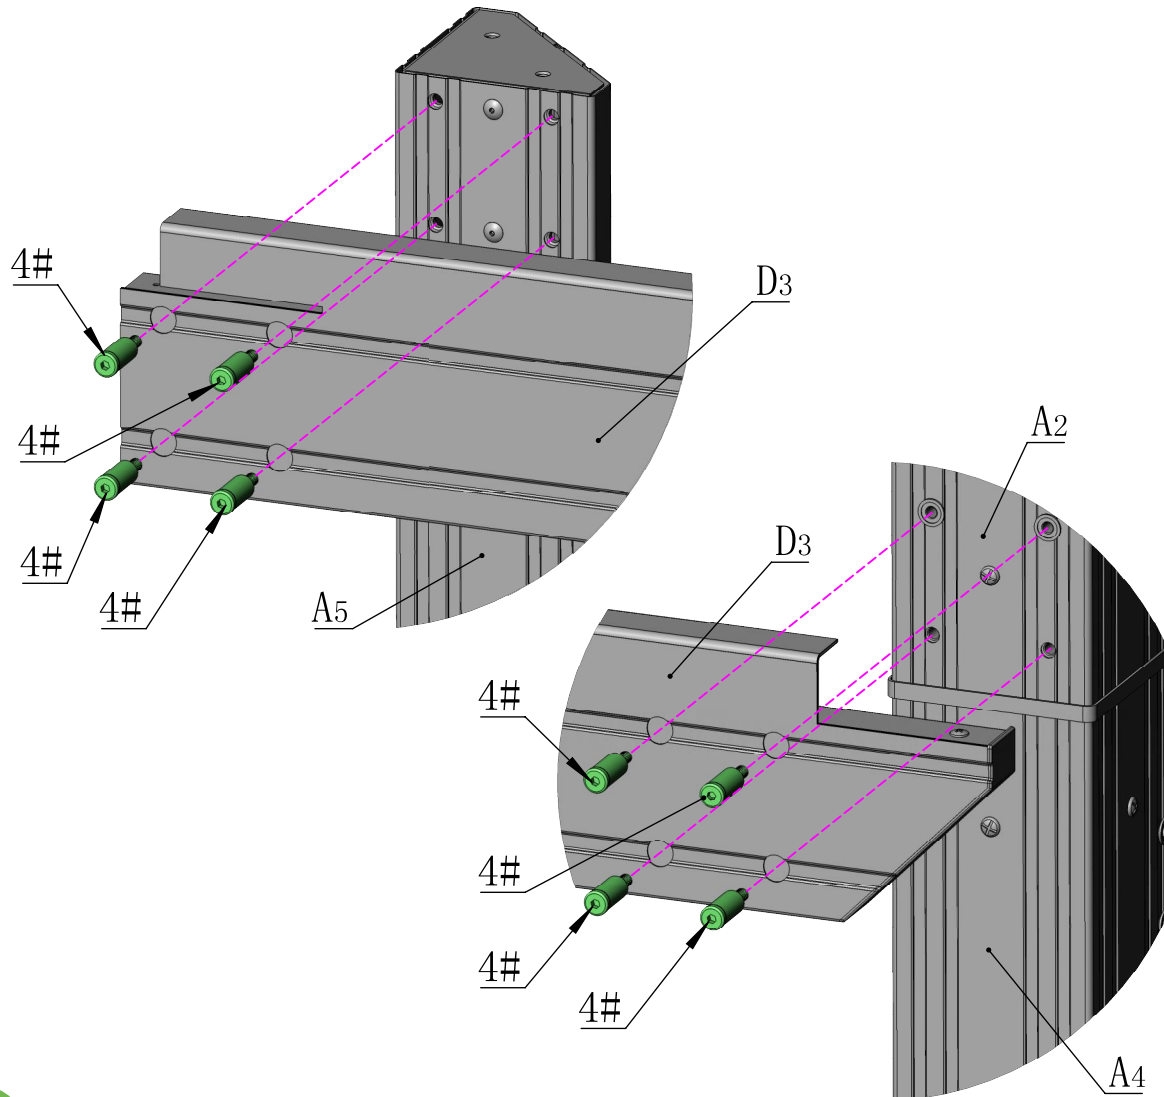

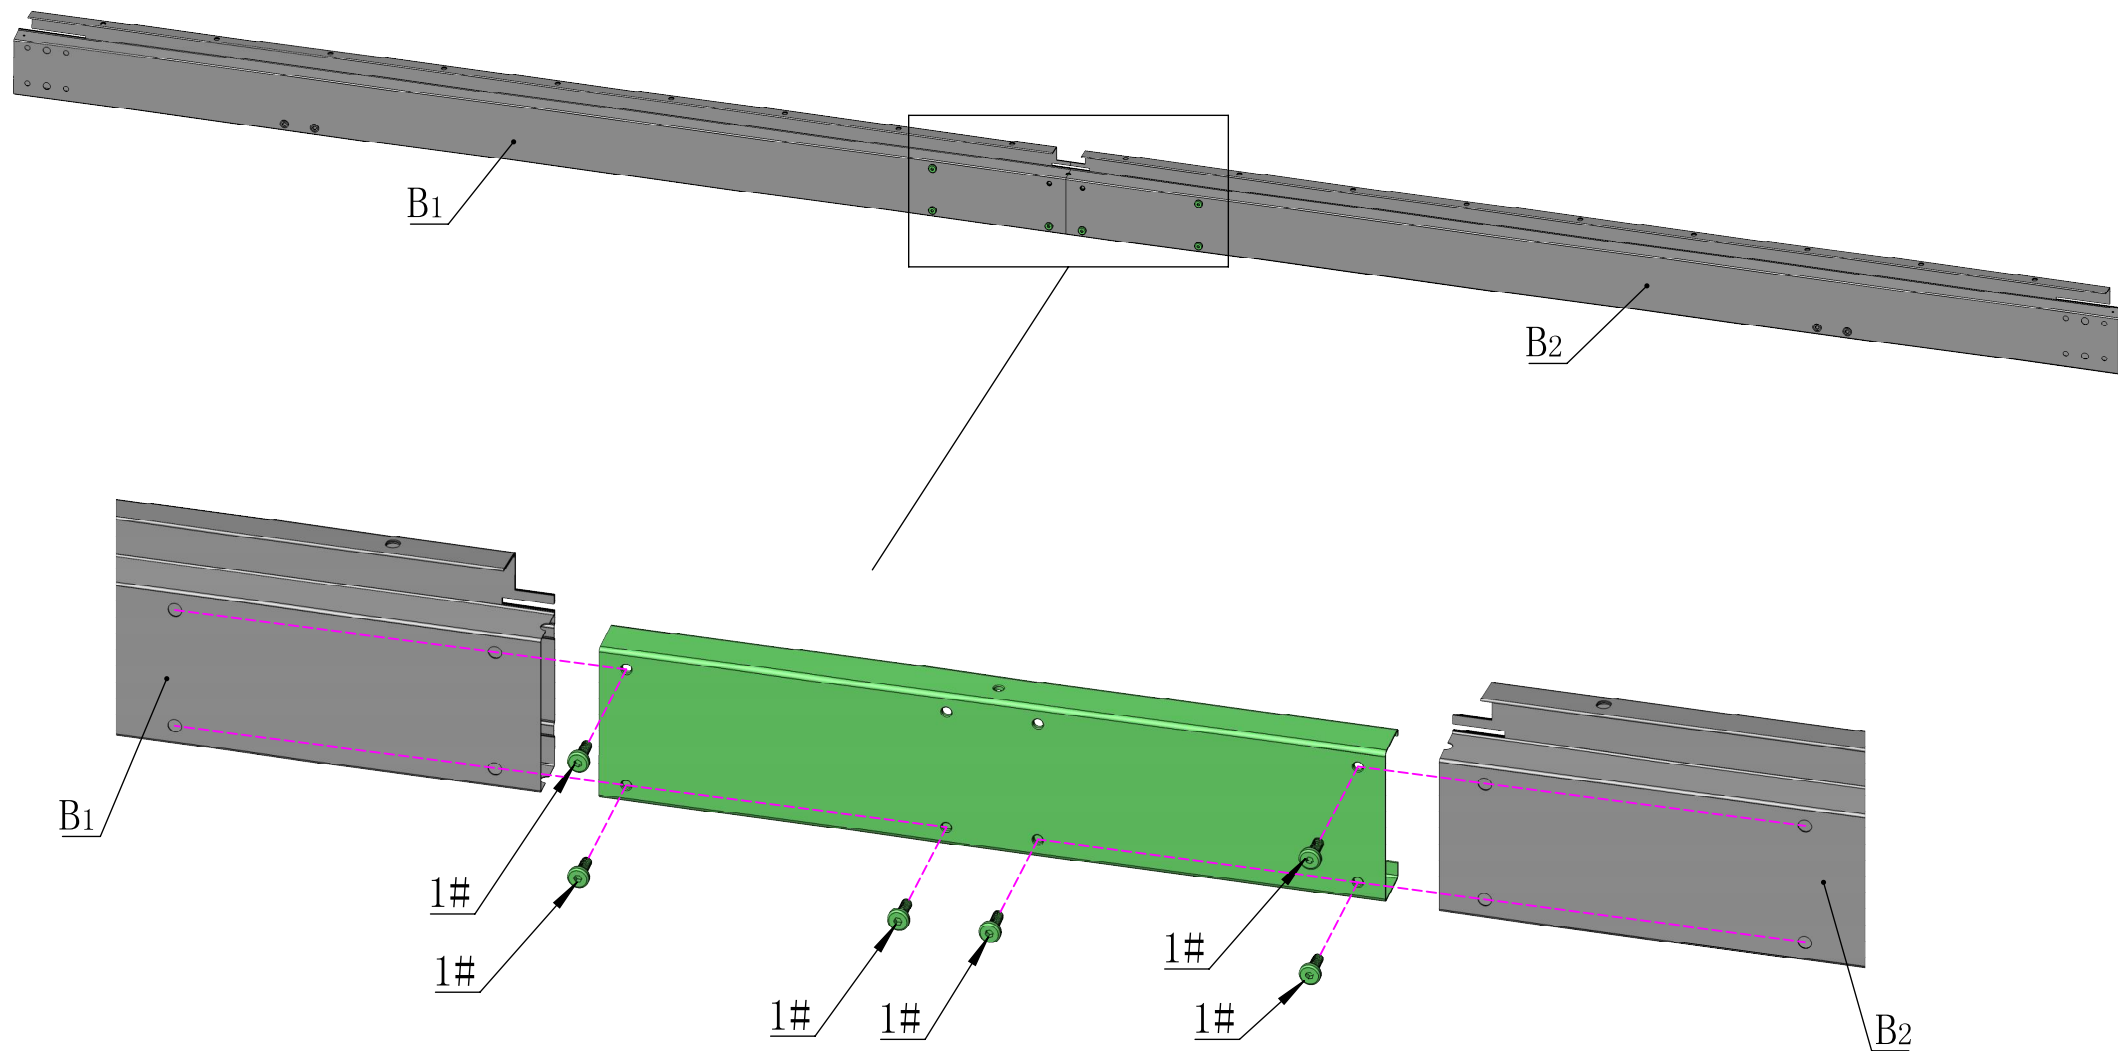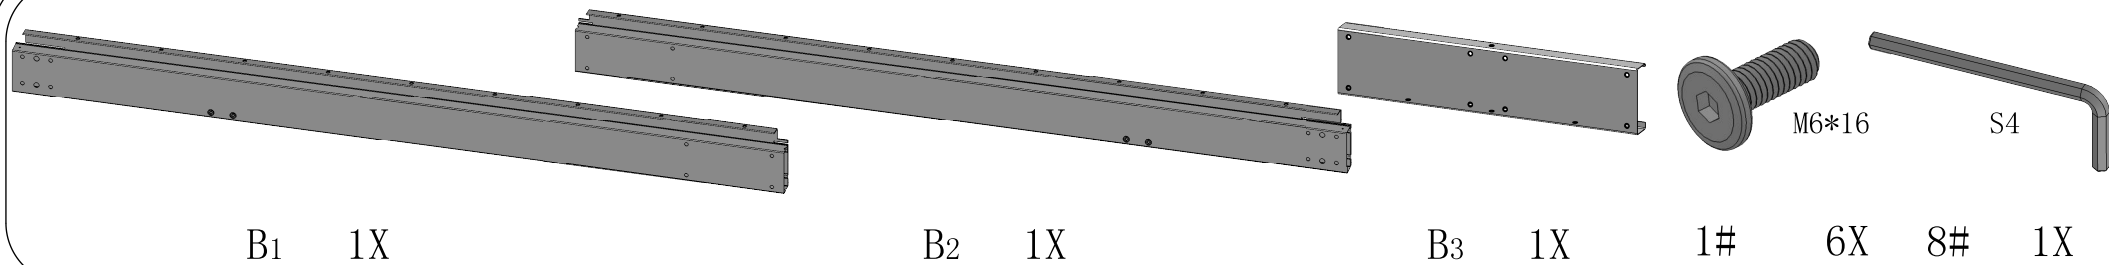

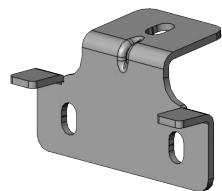


B4 1X

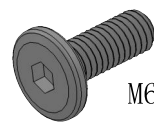



M6\*16

1# 2X

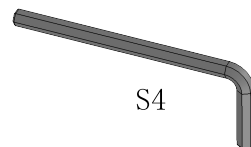


S4

8# 1X

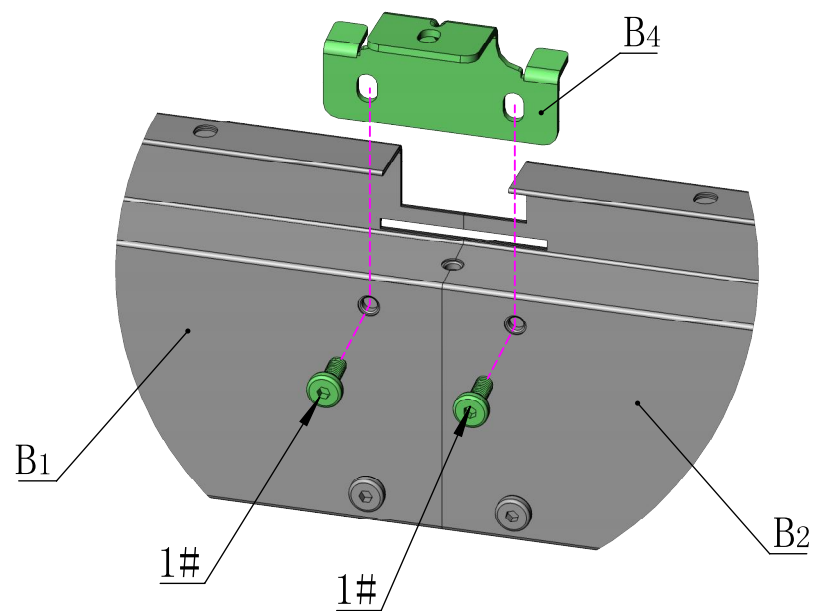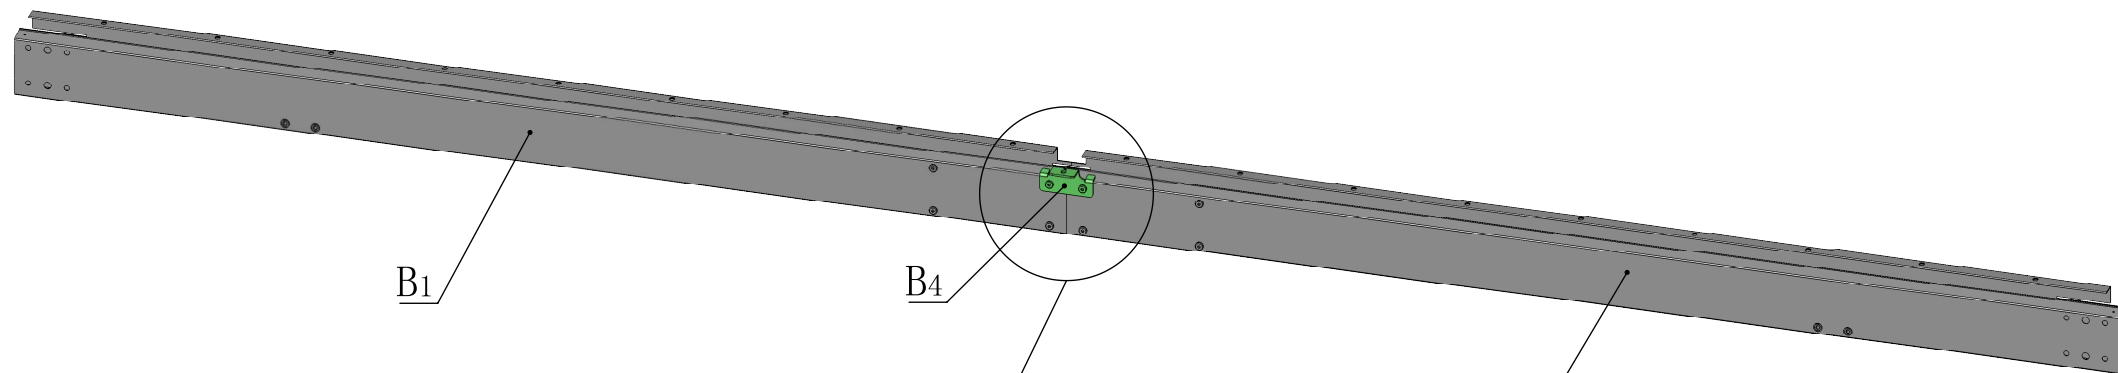












B6 4X

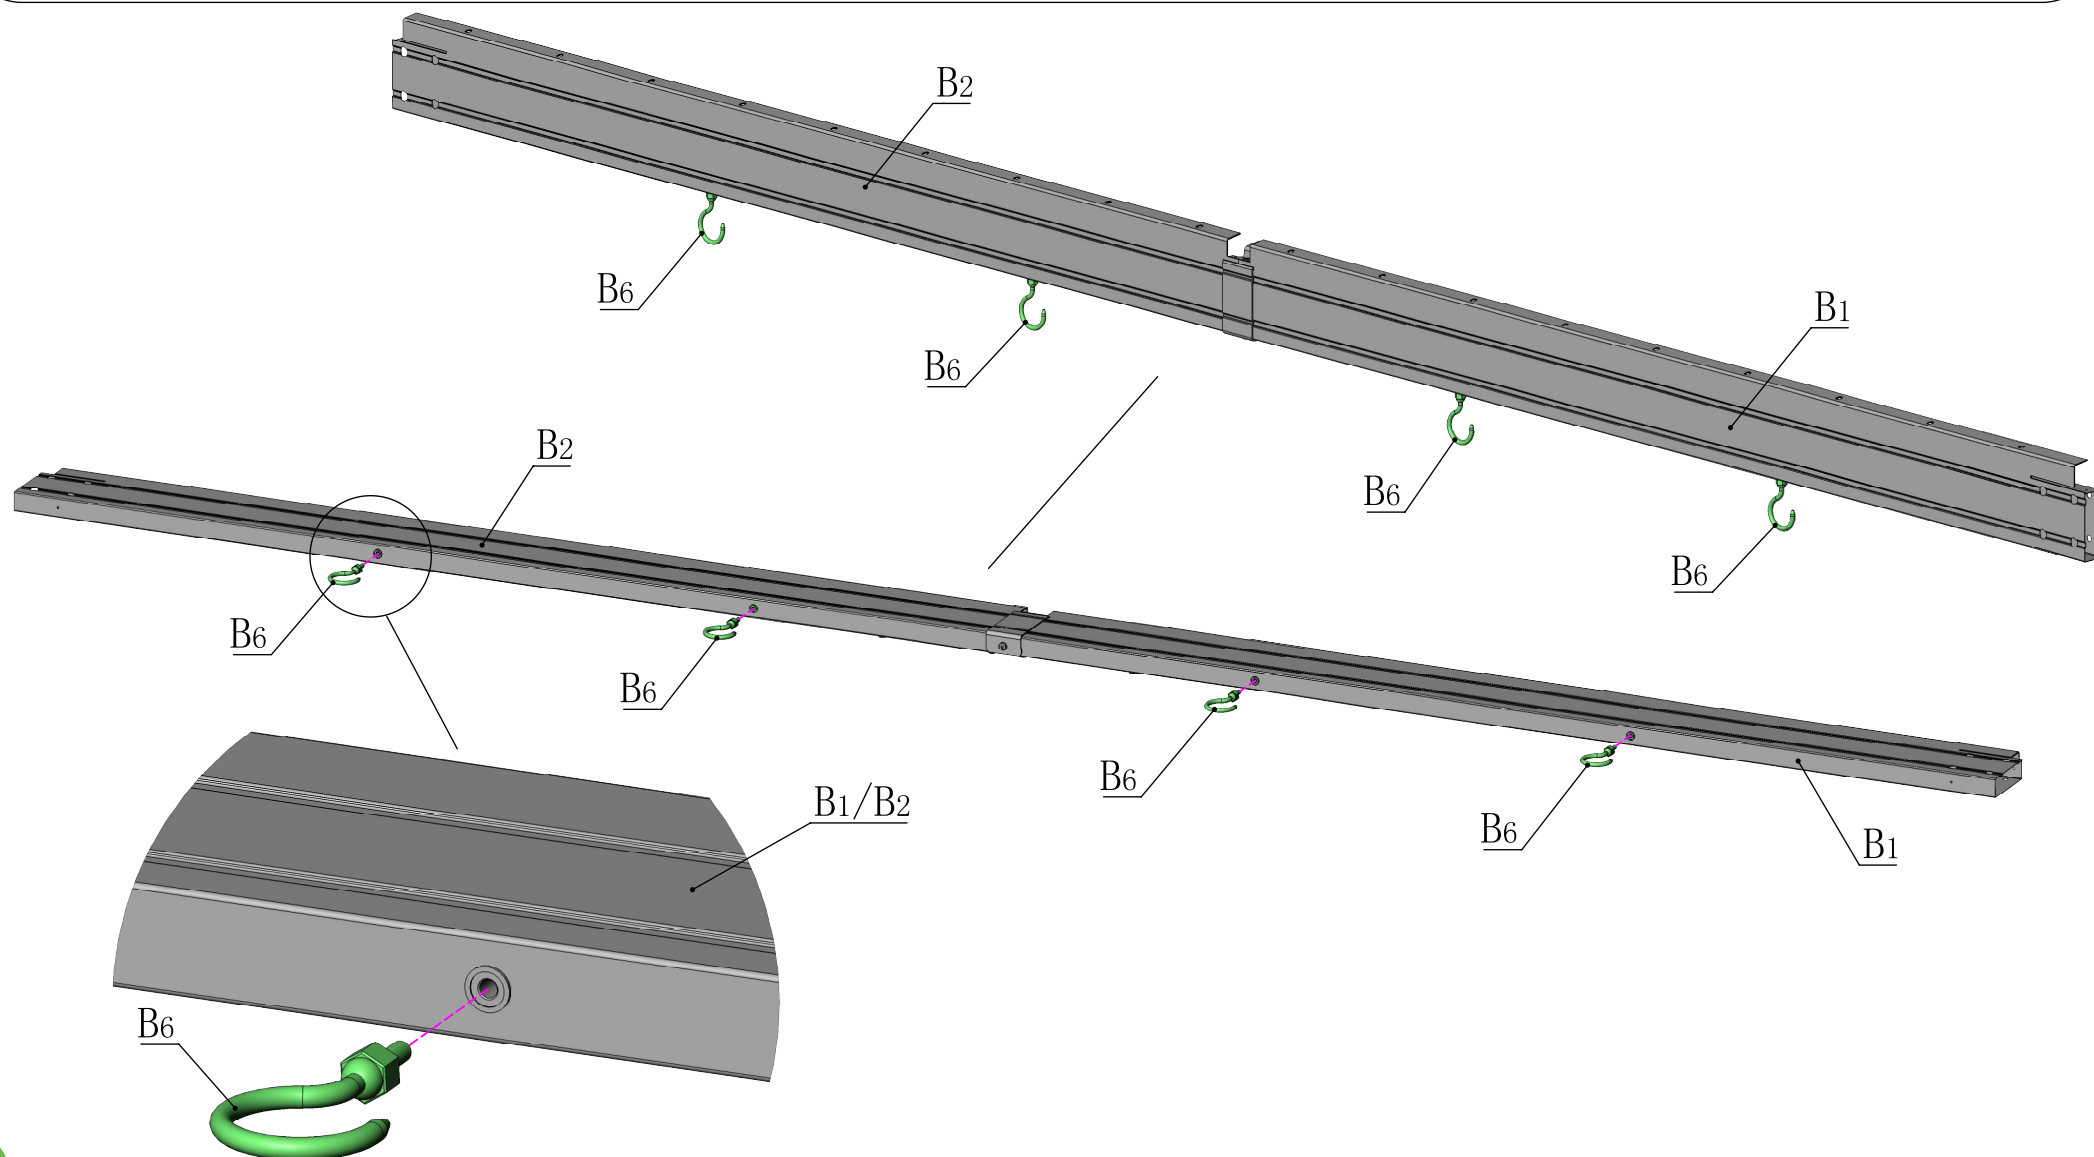

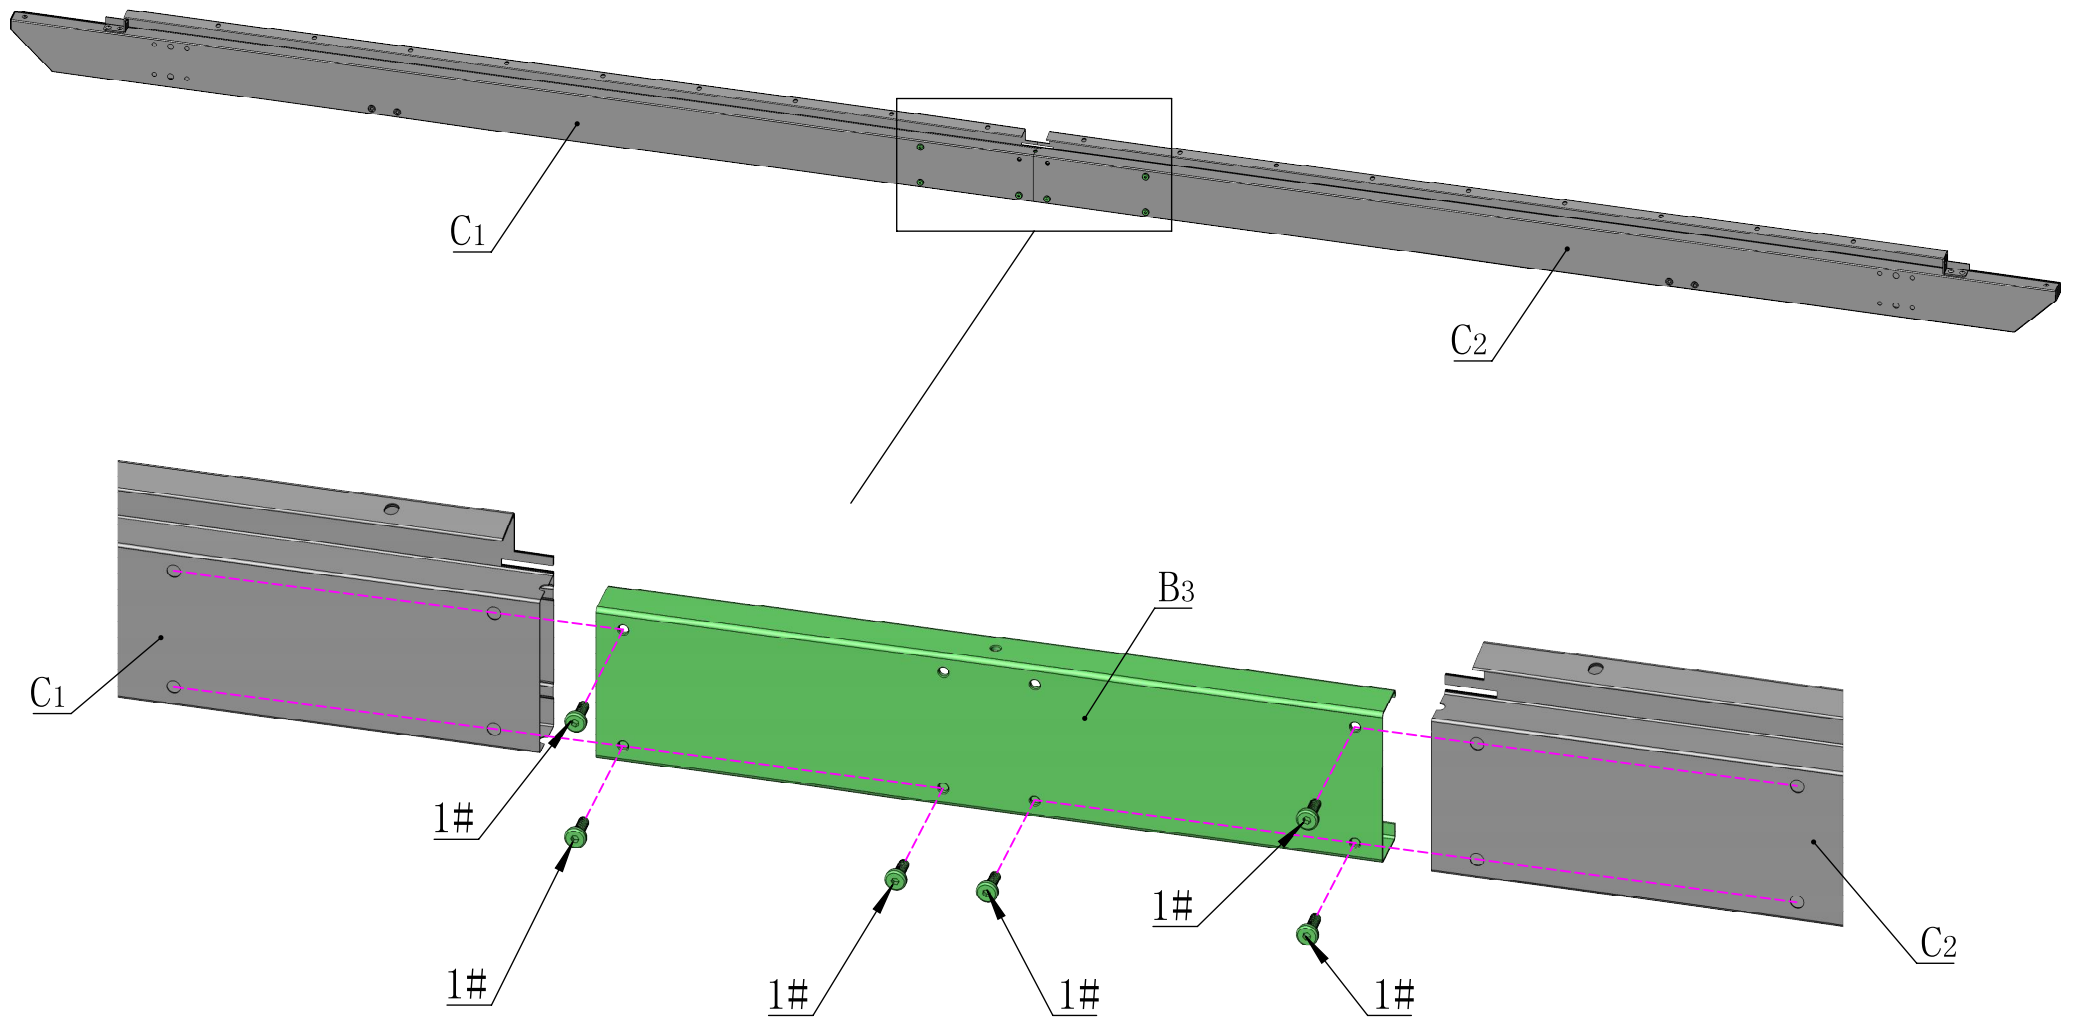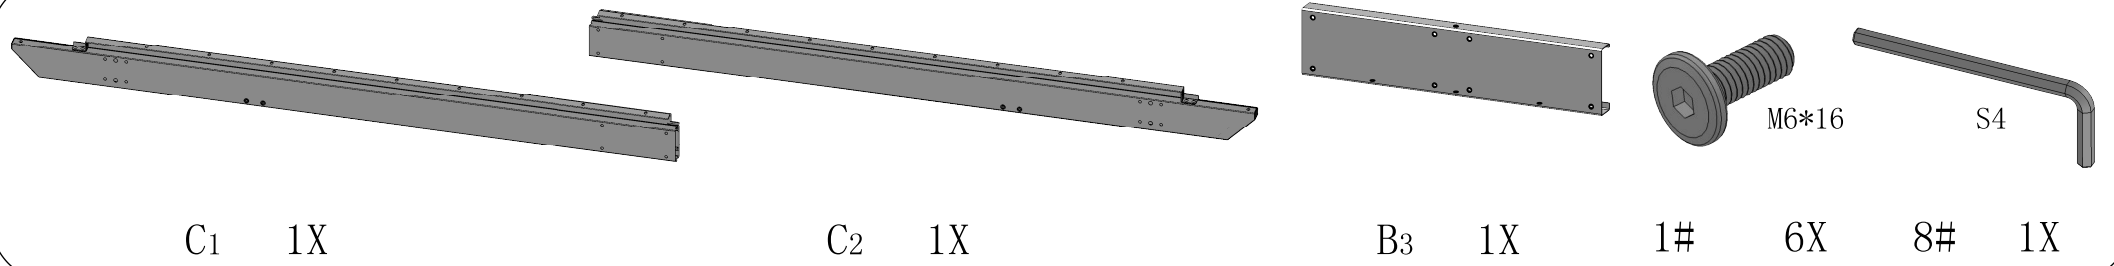

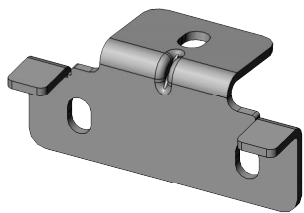


C3 1X

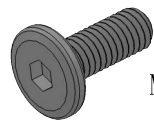


M6\*16

1# 2X

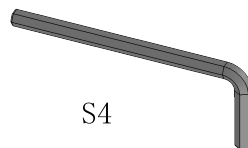


S4

8# 1X

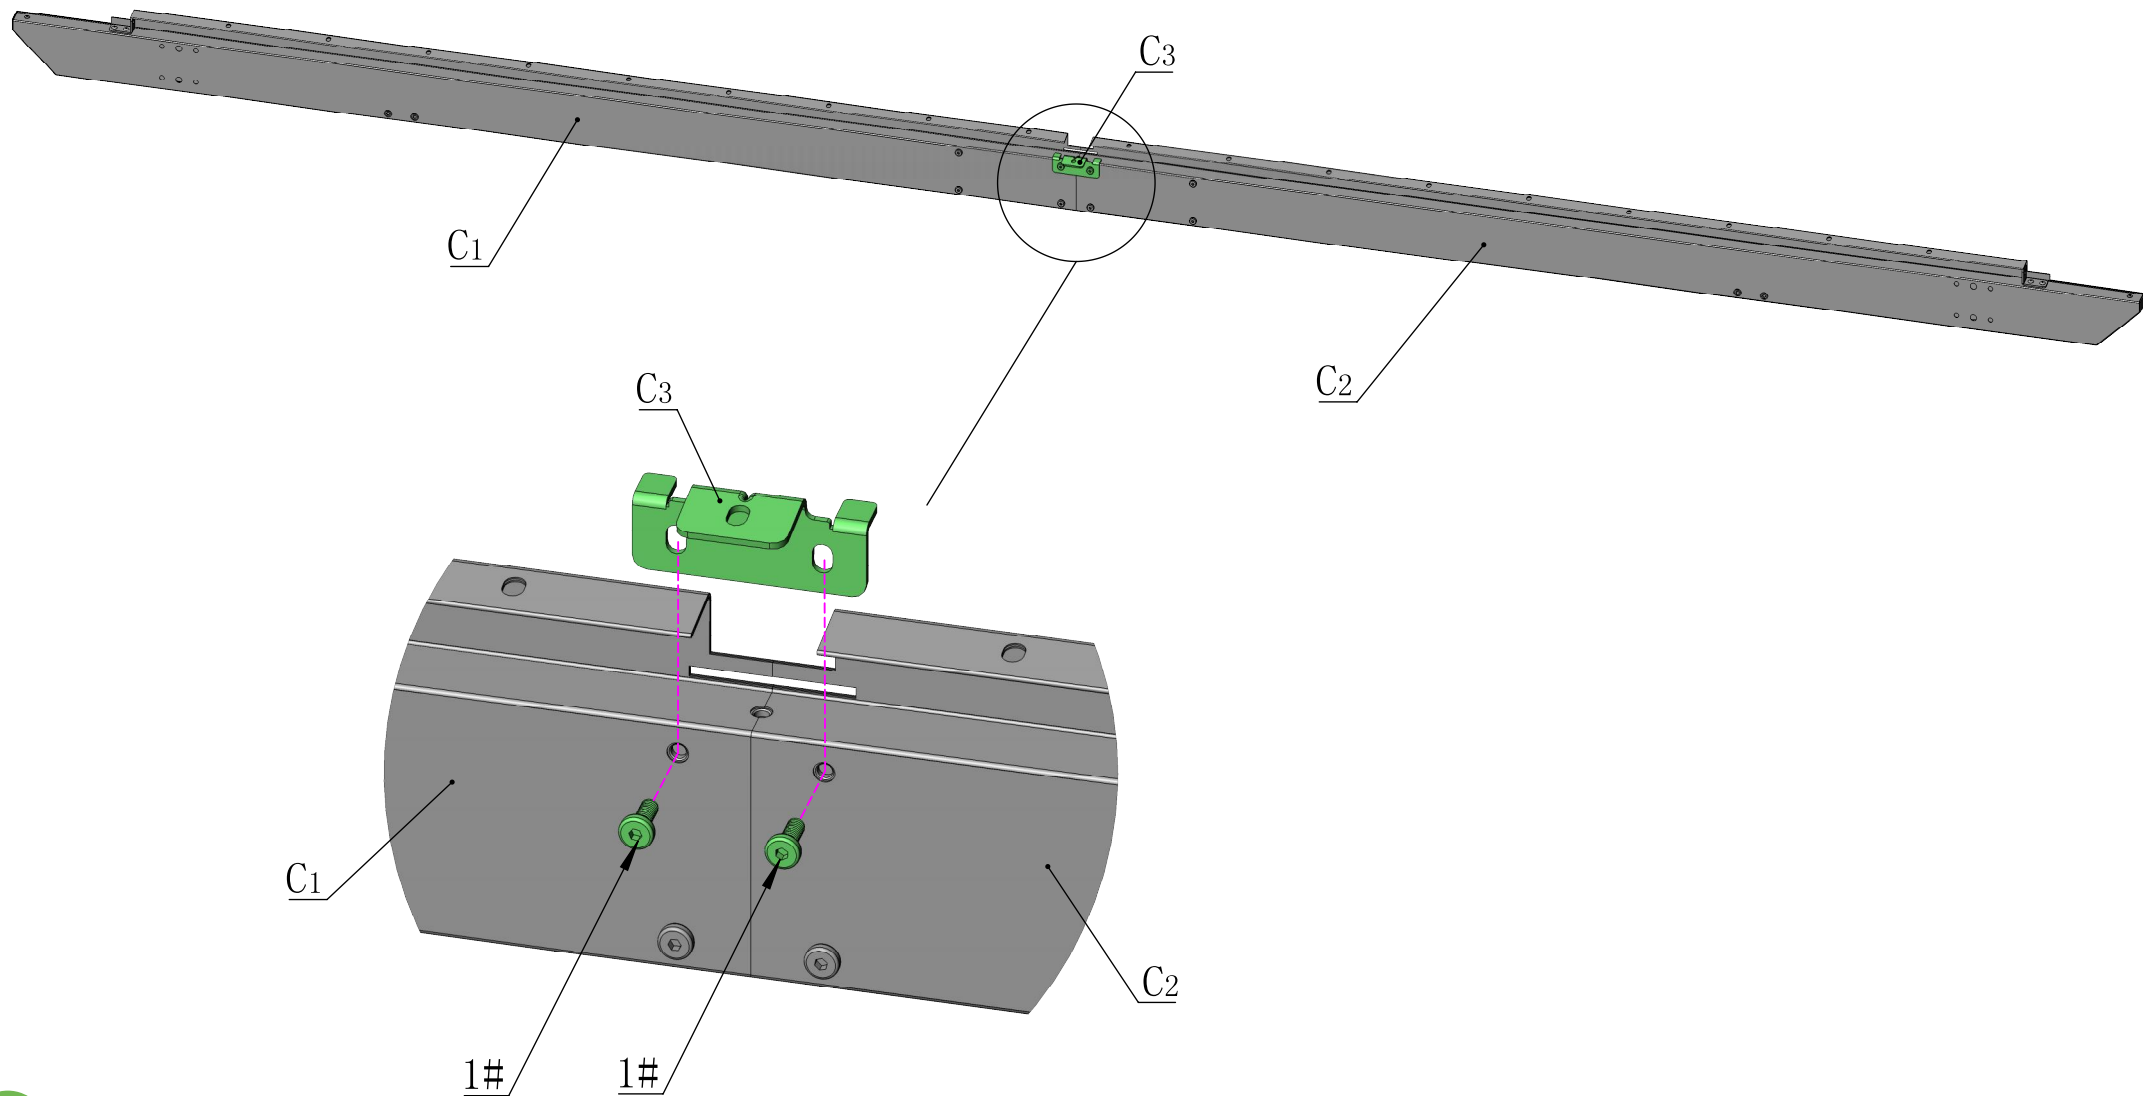




B5 1X




M6\*16

1# 2X

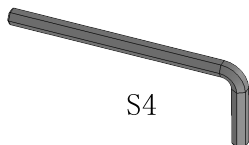


S4

8# 1X

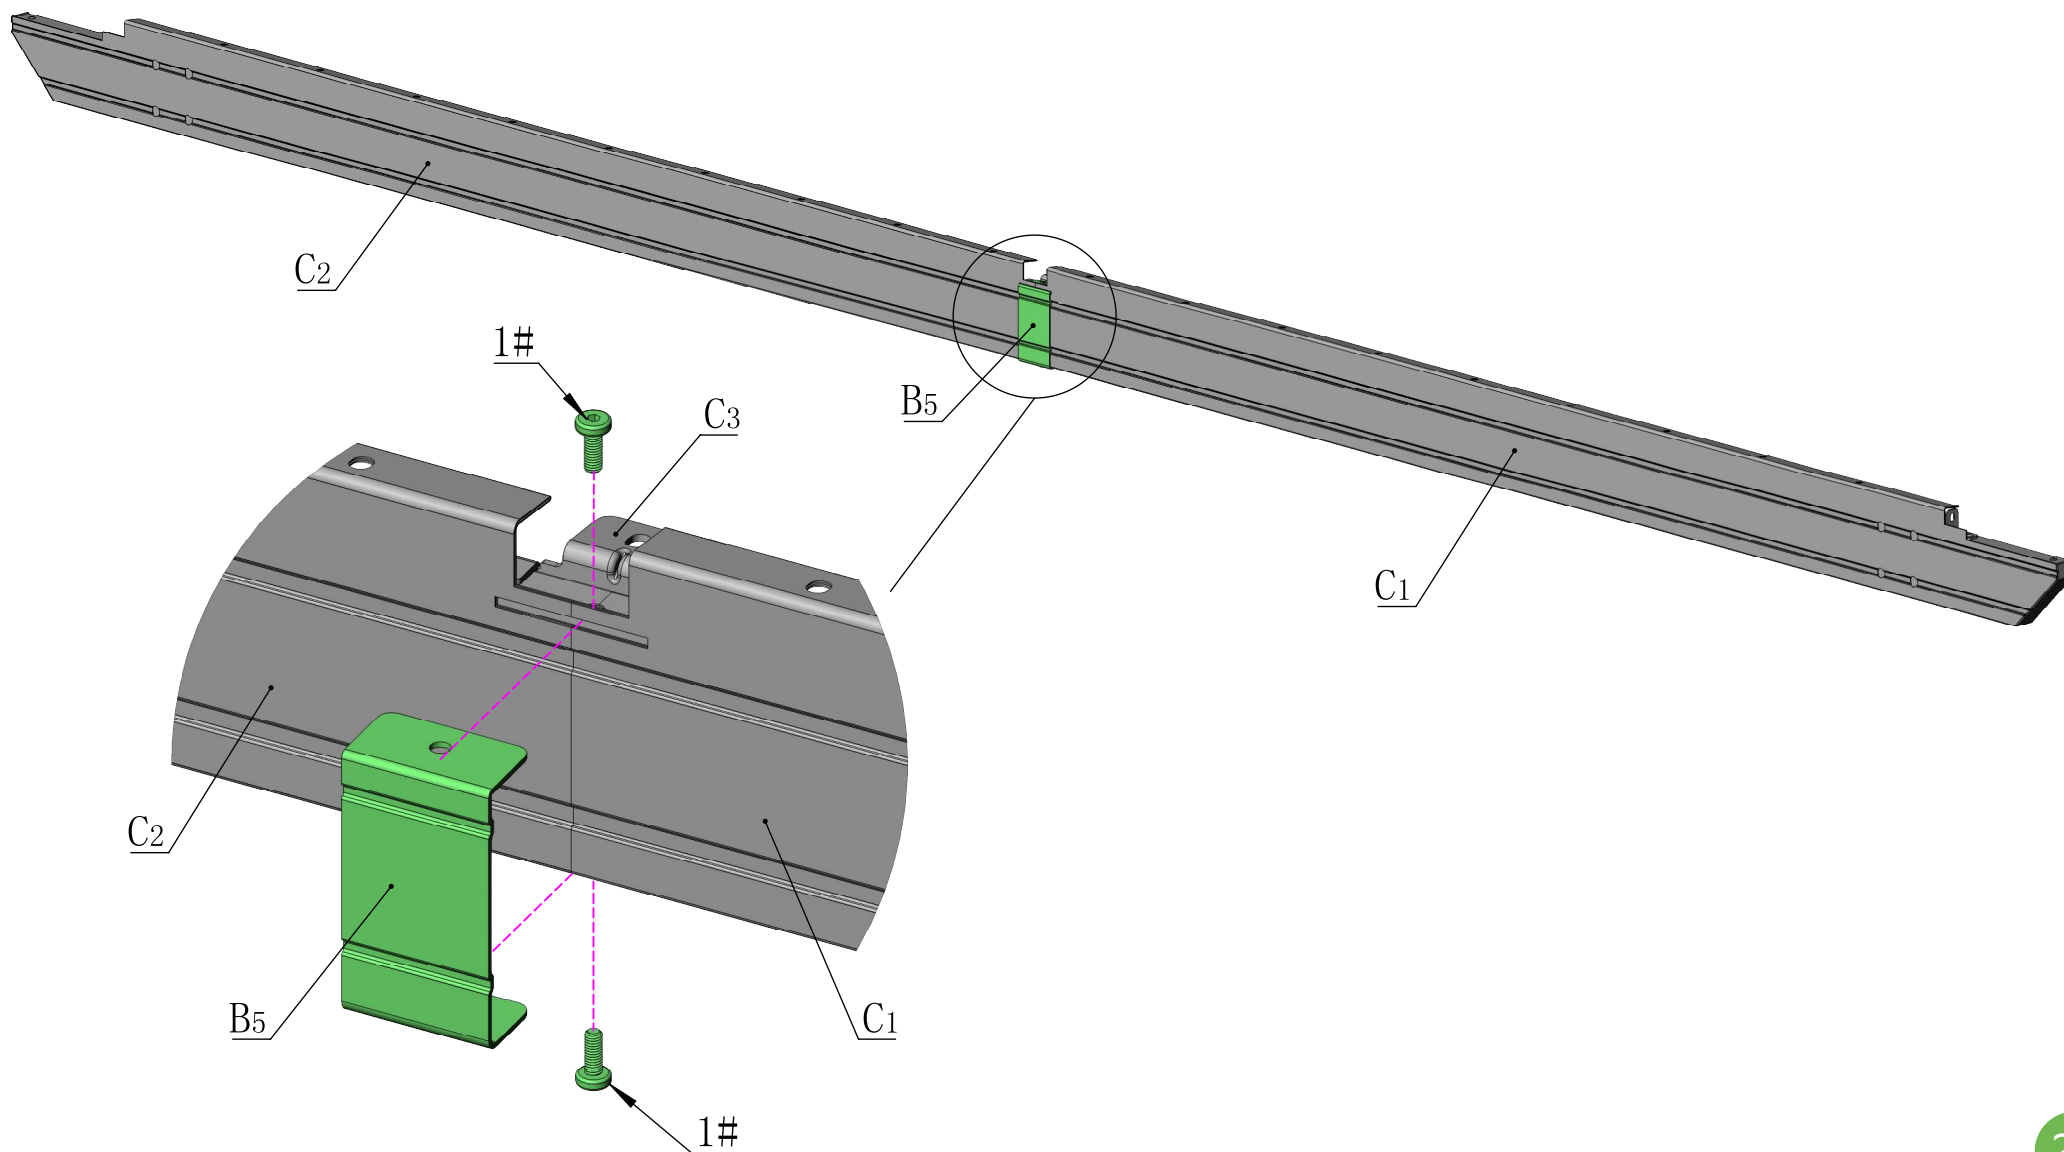




4# 8X

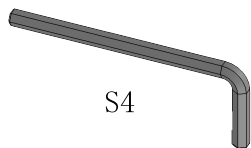


S4

8# 1X

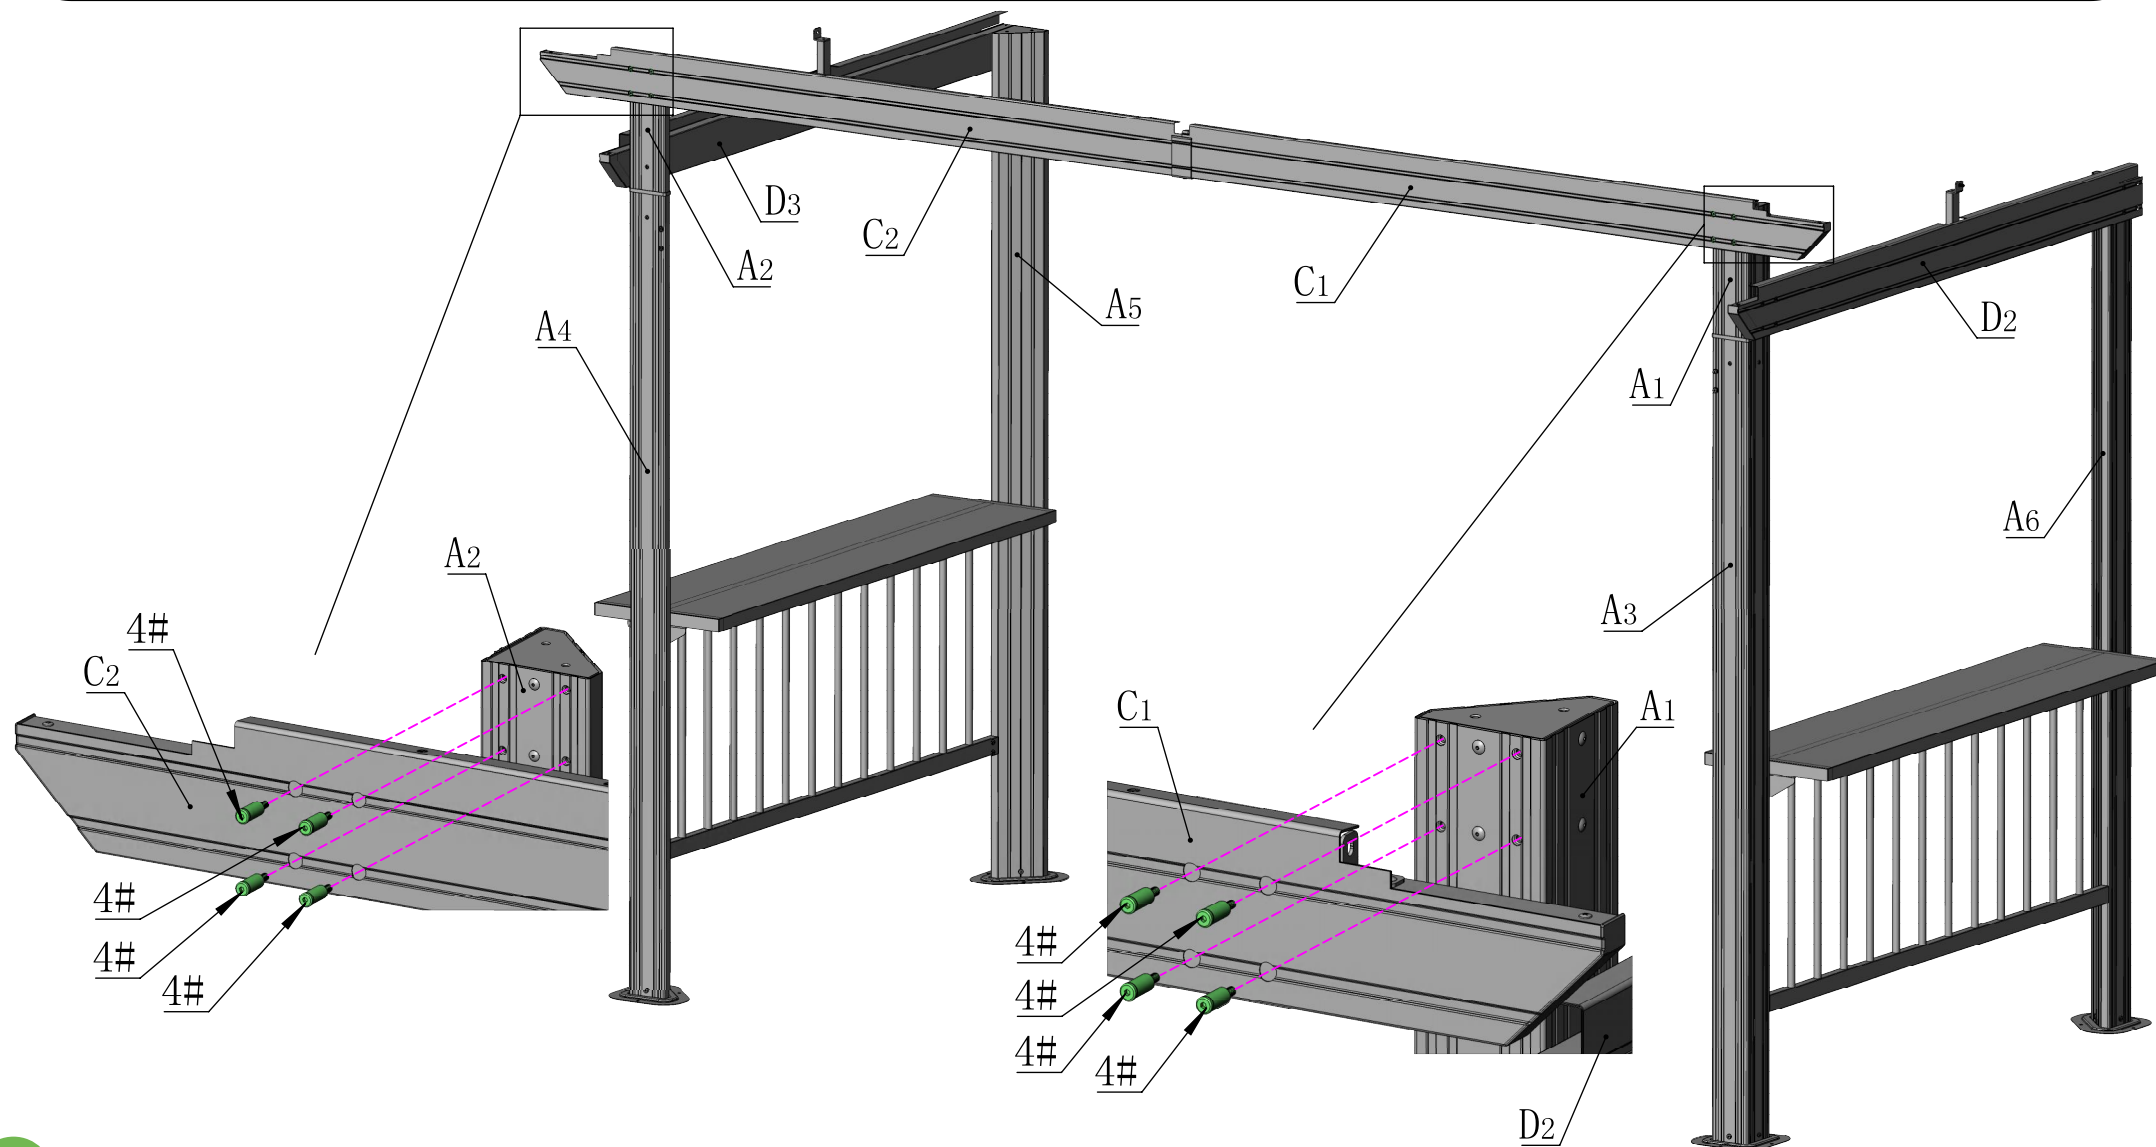




4# 8X

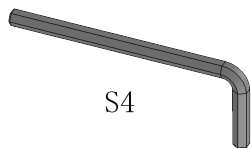


S4

8# 1X

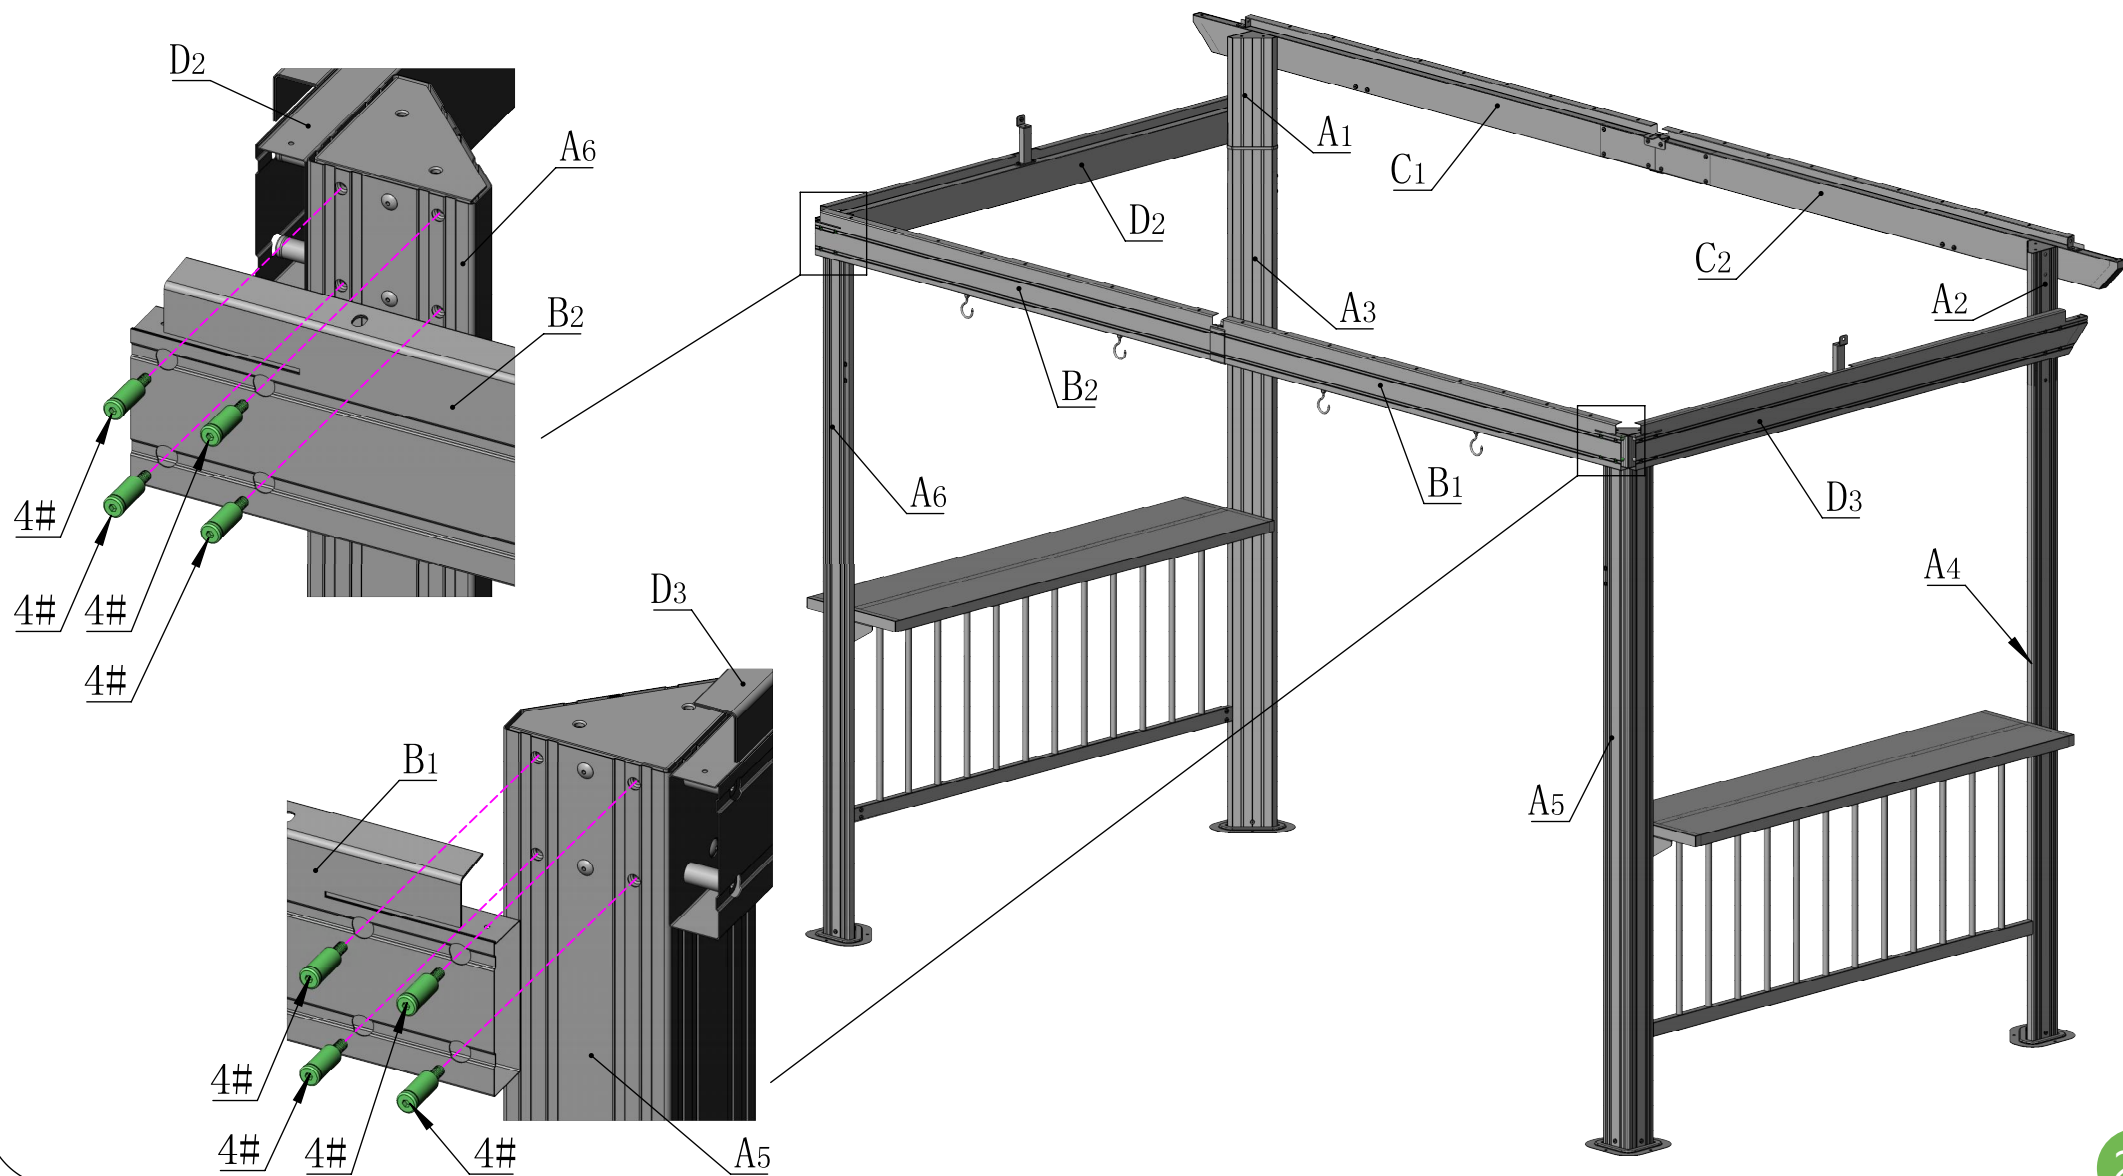



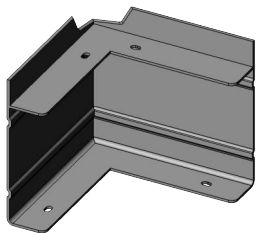


J1 2X




St5.0\*16


5# 8X

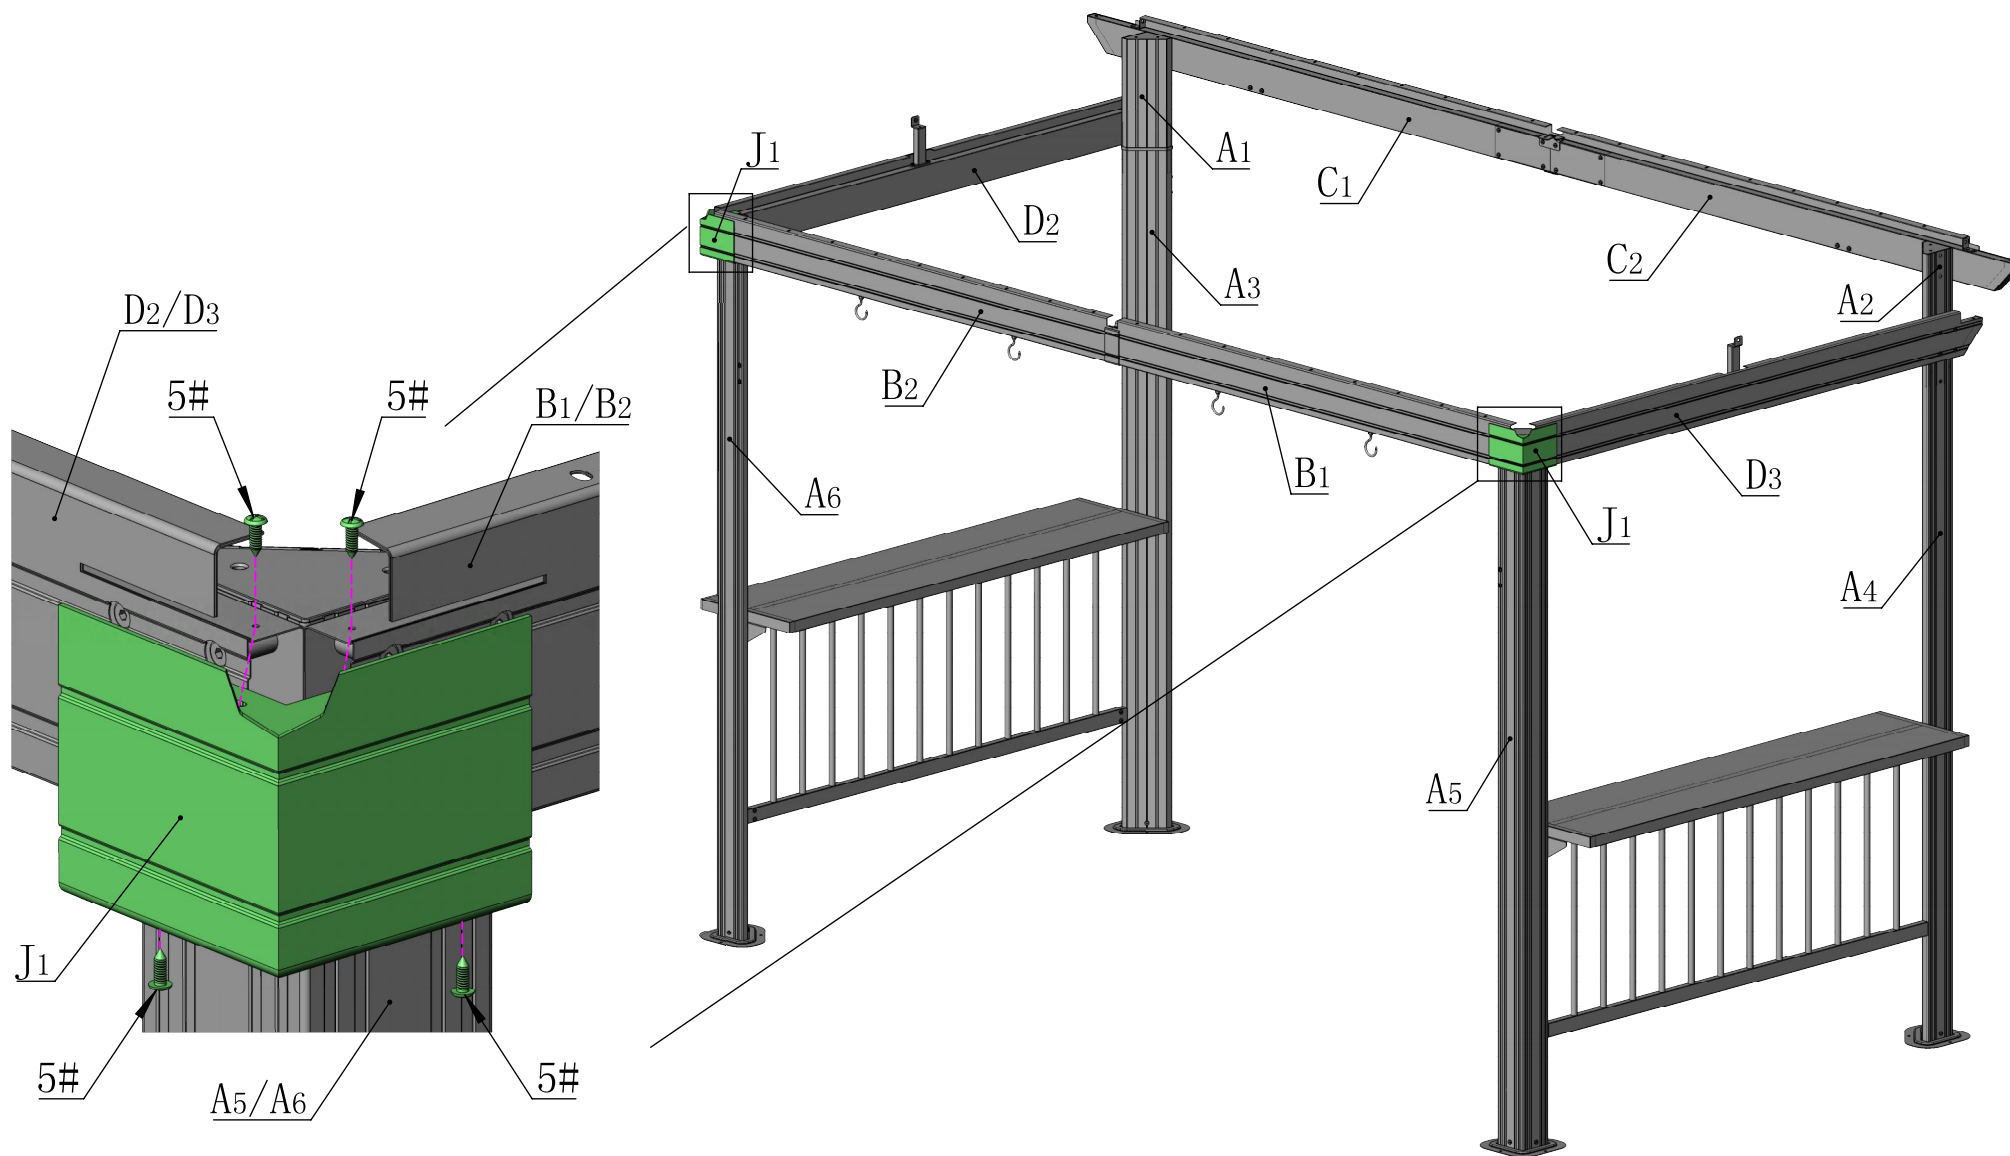




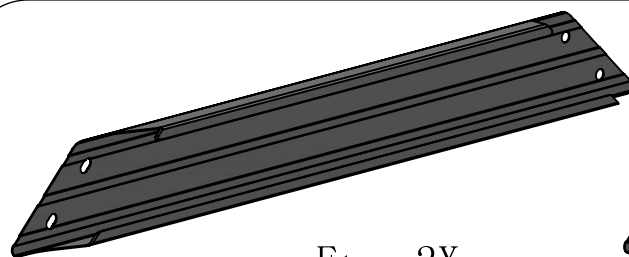


E1 2X

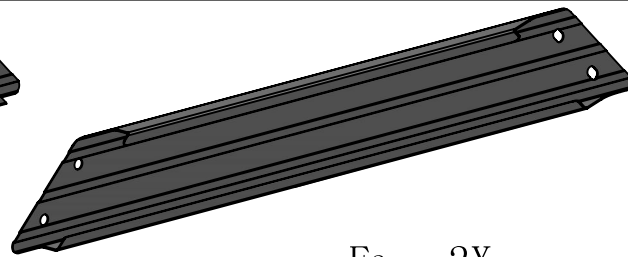

E2 2X

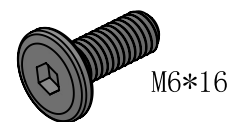


1# 16X


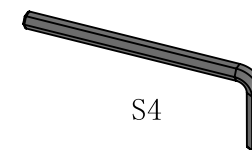


8# 1X

### Inside View

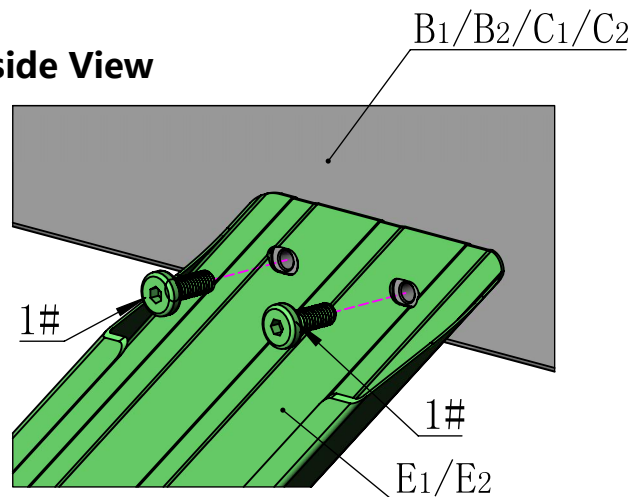


### Outside View

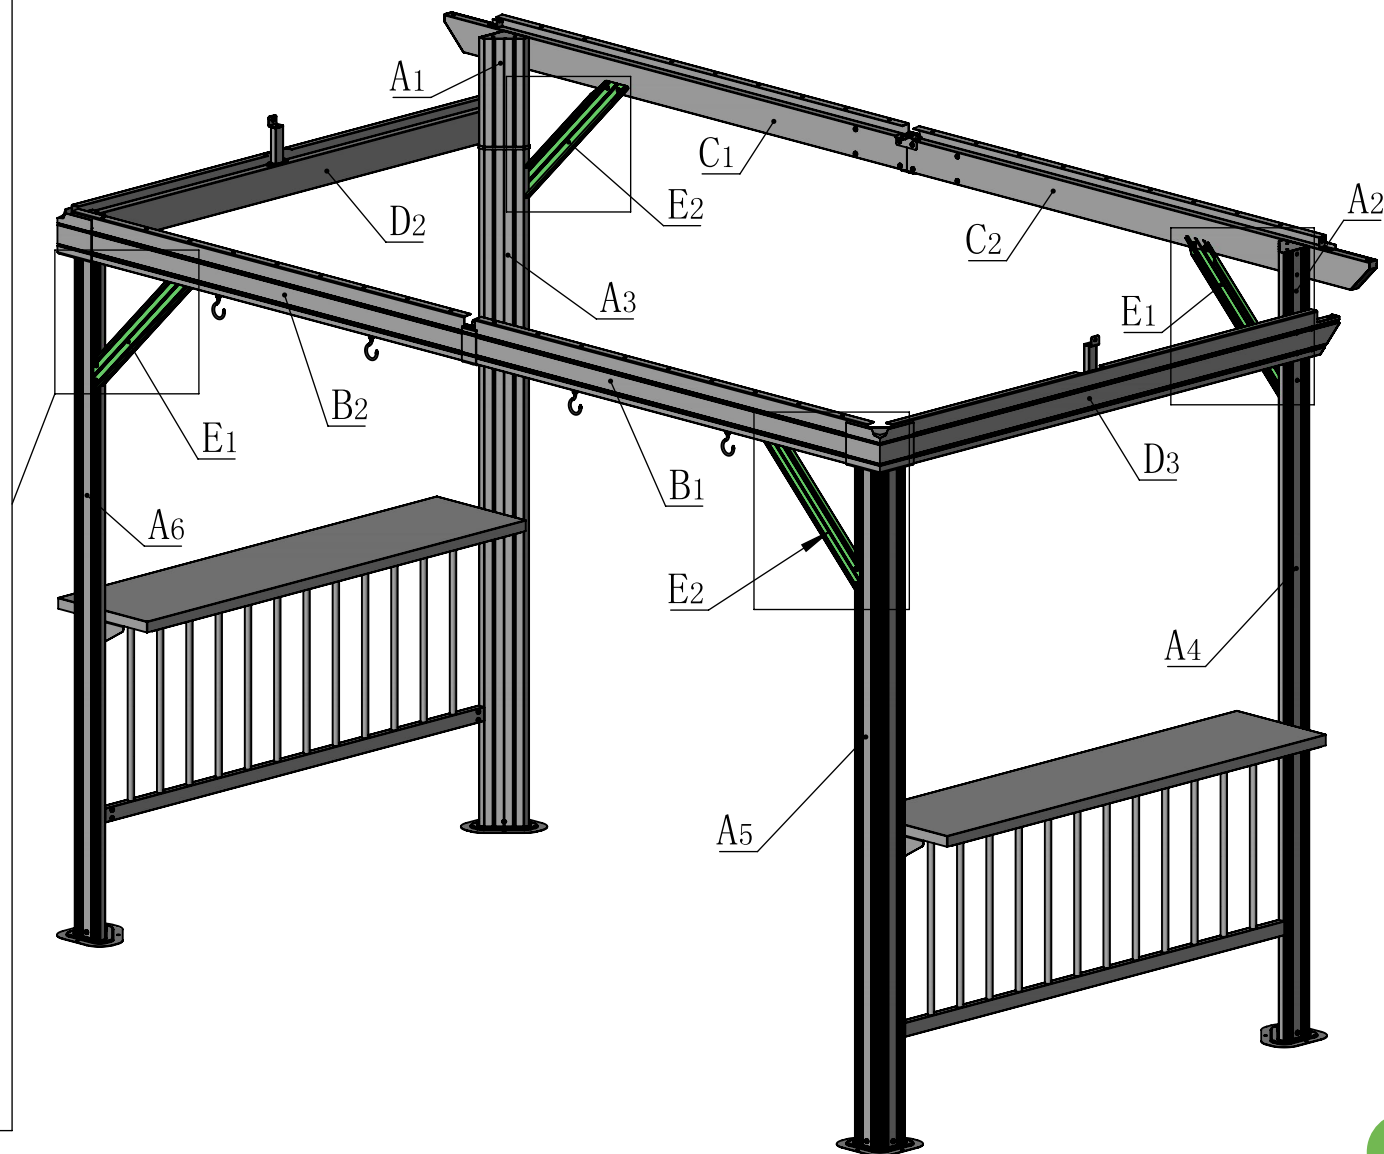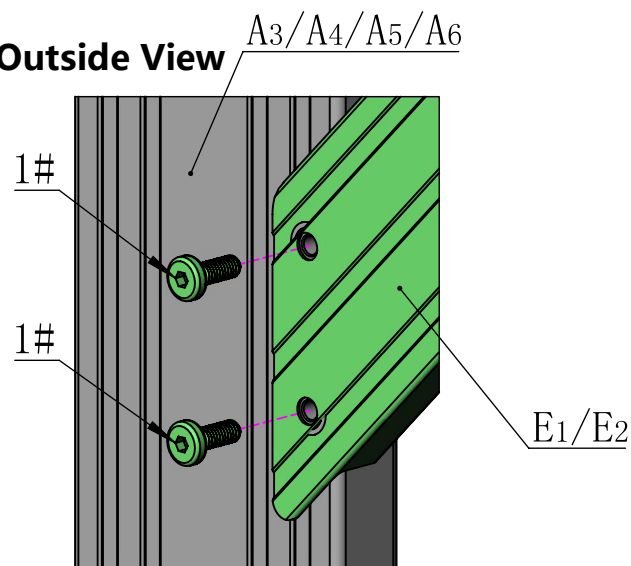



F1 1X

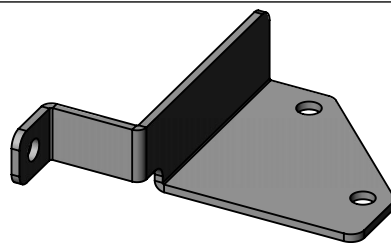


F2 1X





M6\*16

1# 1X

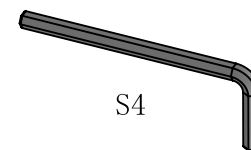


S4


8# 1X

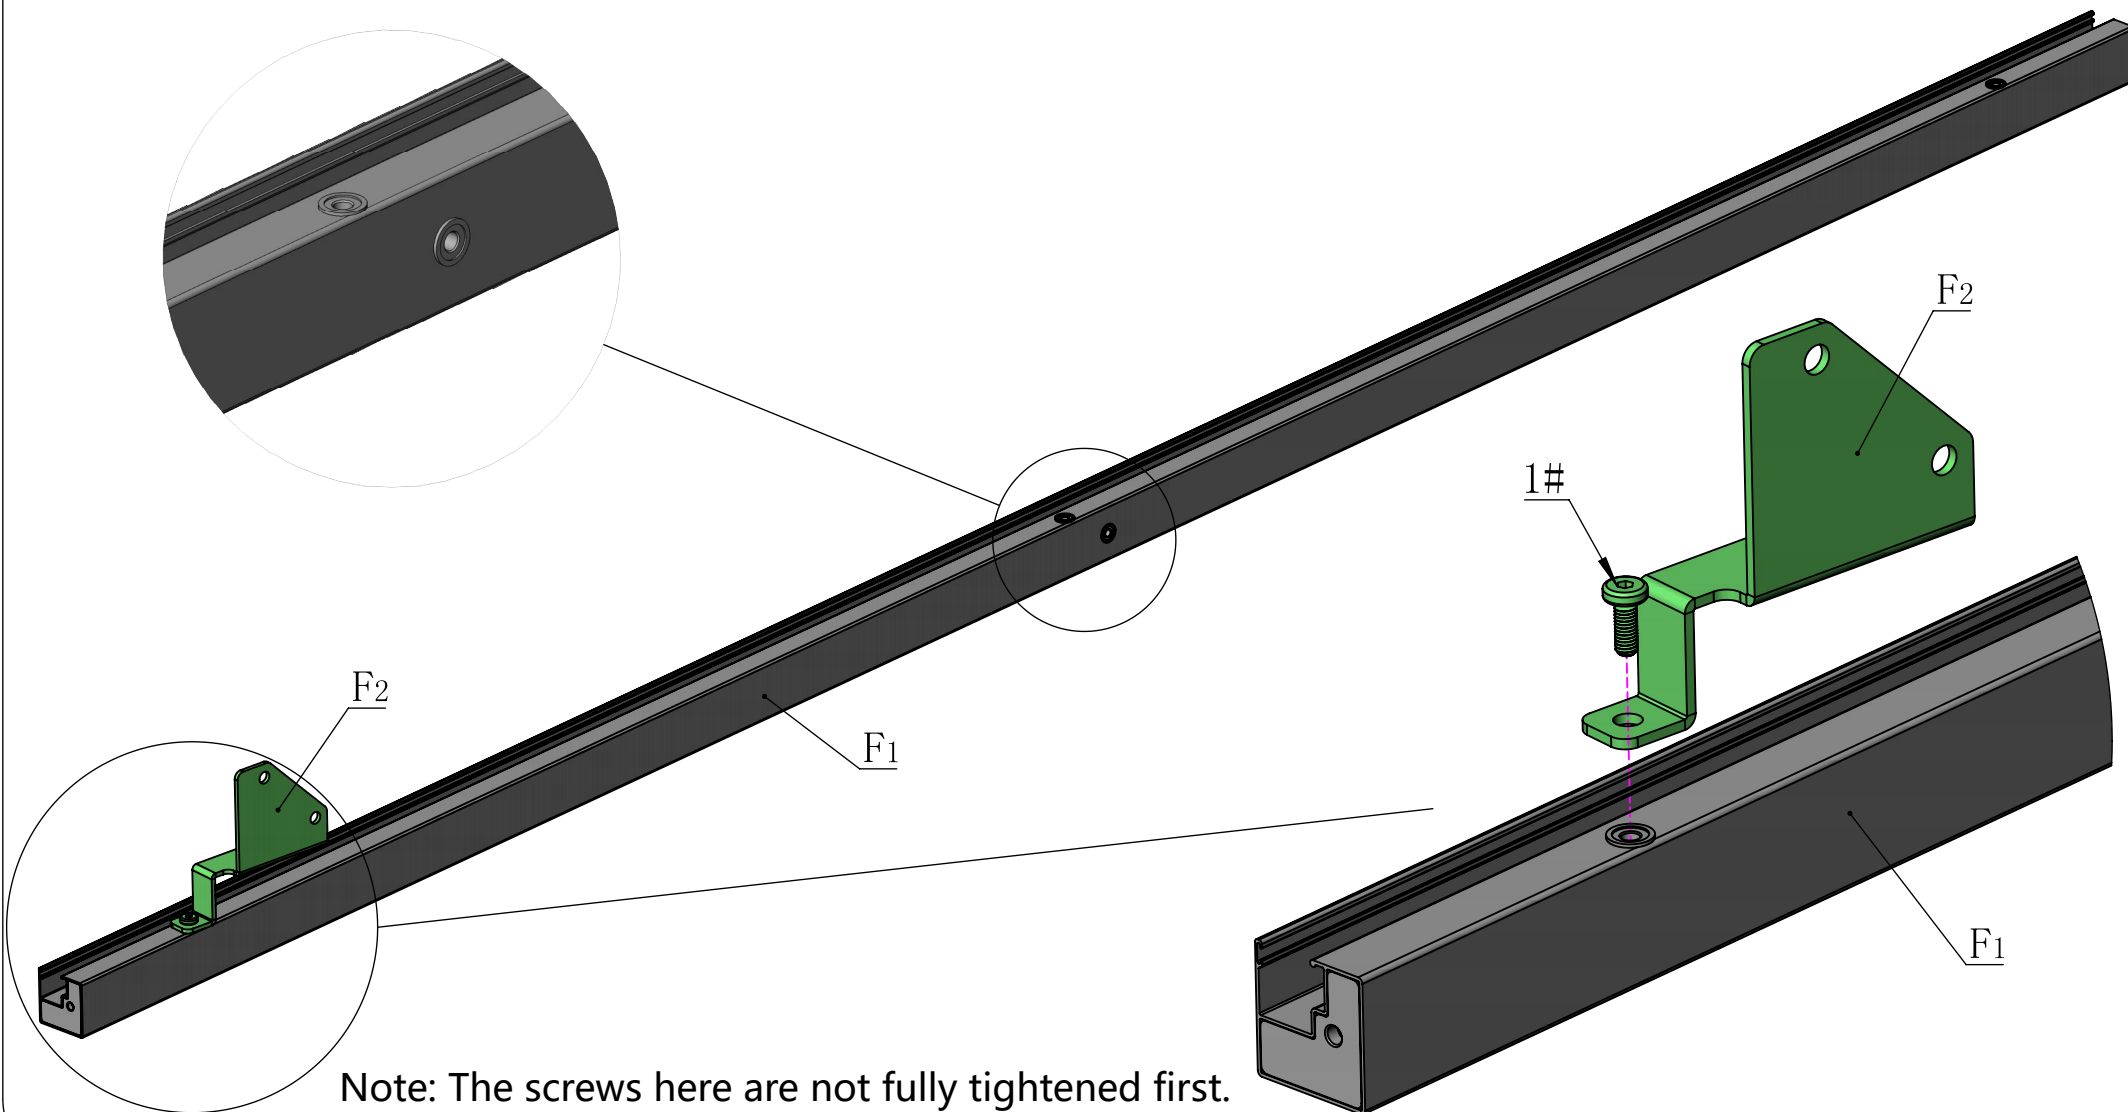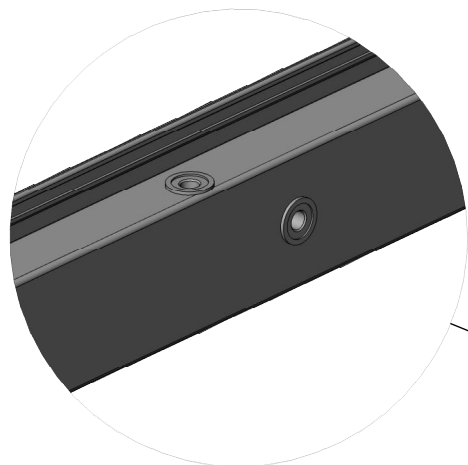

Note: The screws here are not fully tightened first.  
The angle needs to be adjusted for subsequent fixing.

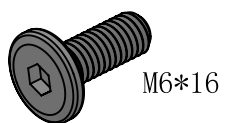


M6\*16

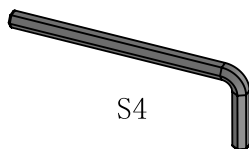


S4

1# 4X



8# 1X

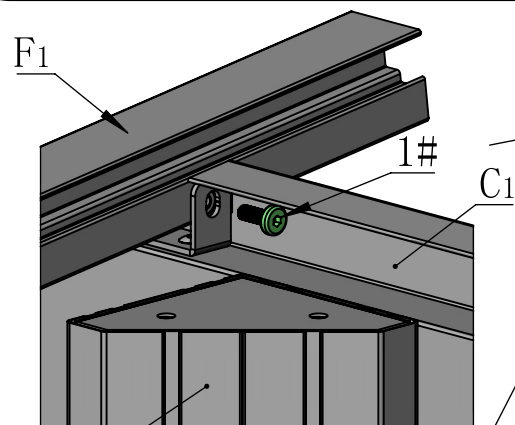


A1

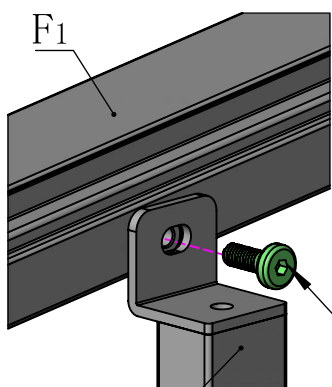


D1

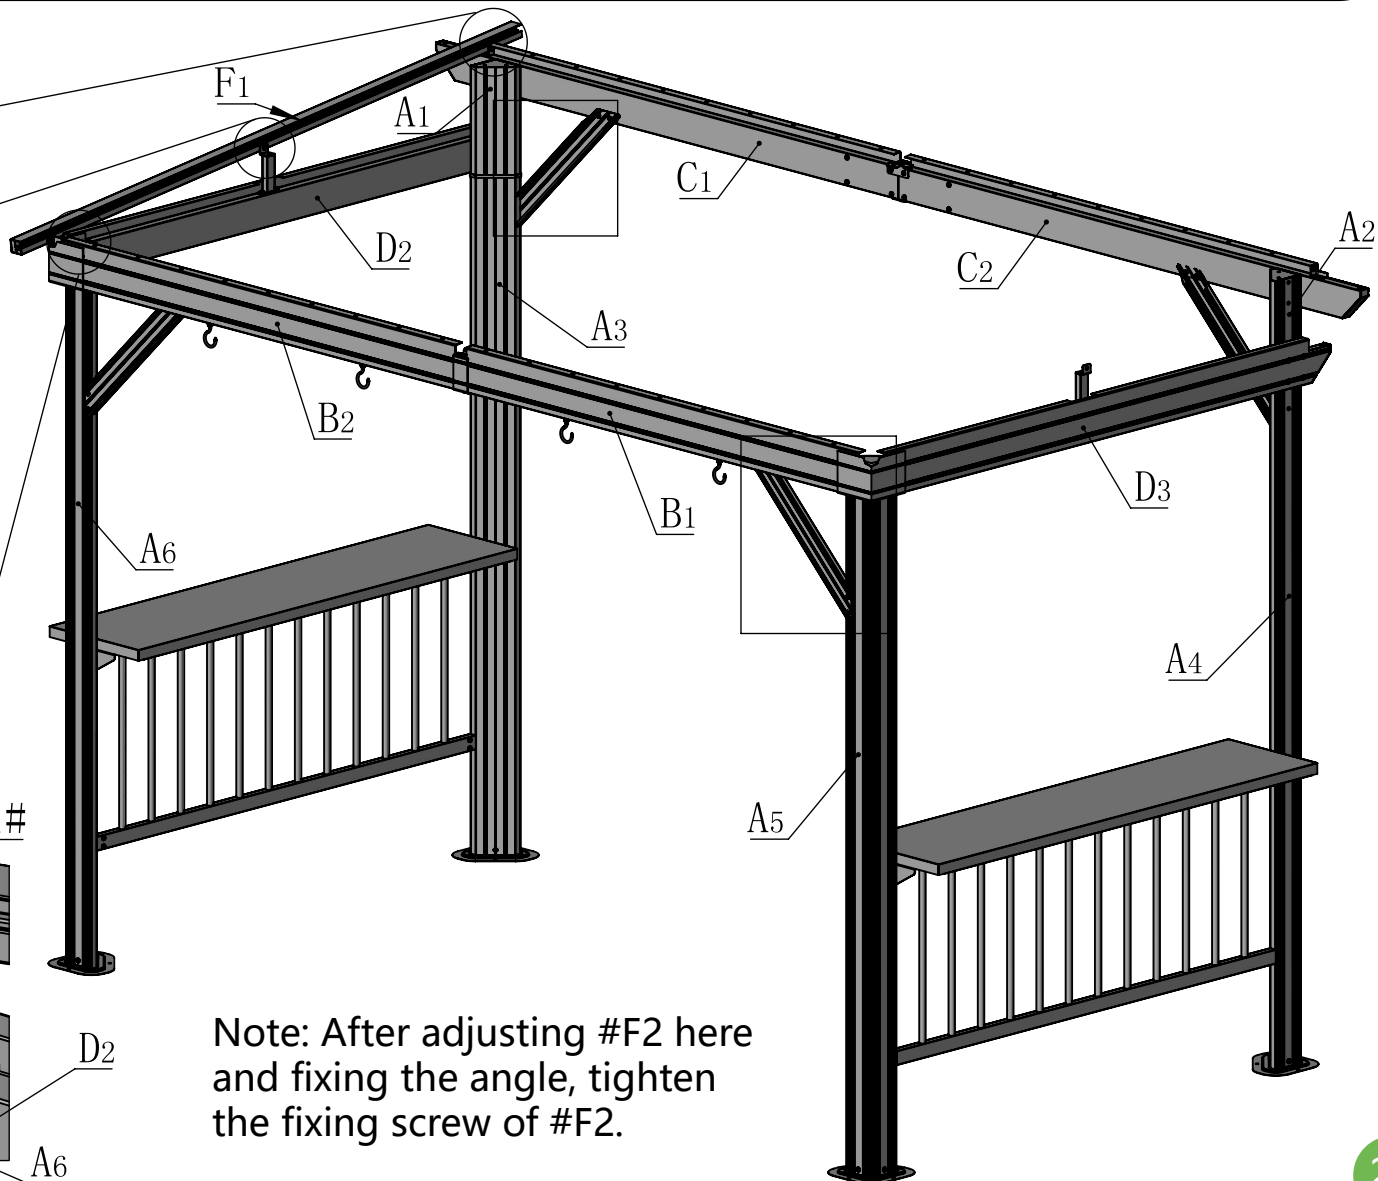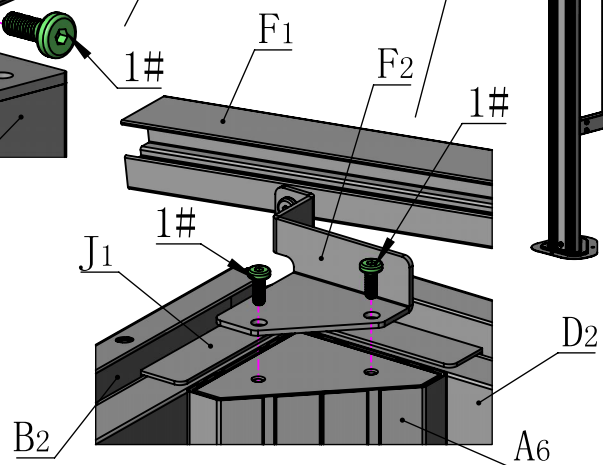

Note: After adjusting #F2 here and fixing the angle, tighten the fixing screw of #F2.

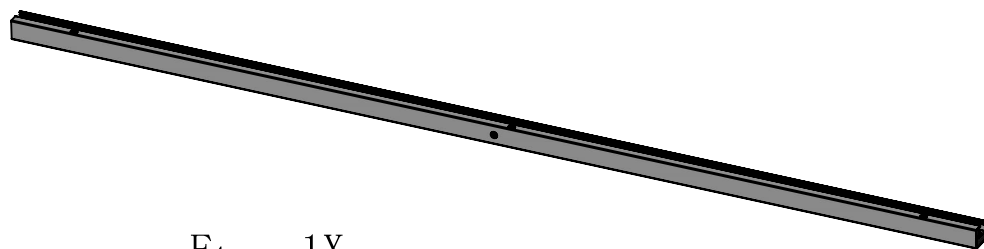


F<sub>4</sub> 1X

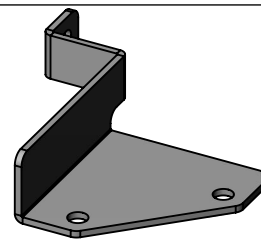


F<sub>3</sub> 1X





1# 1X

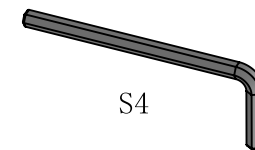

8# 1X

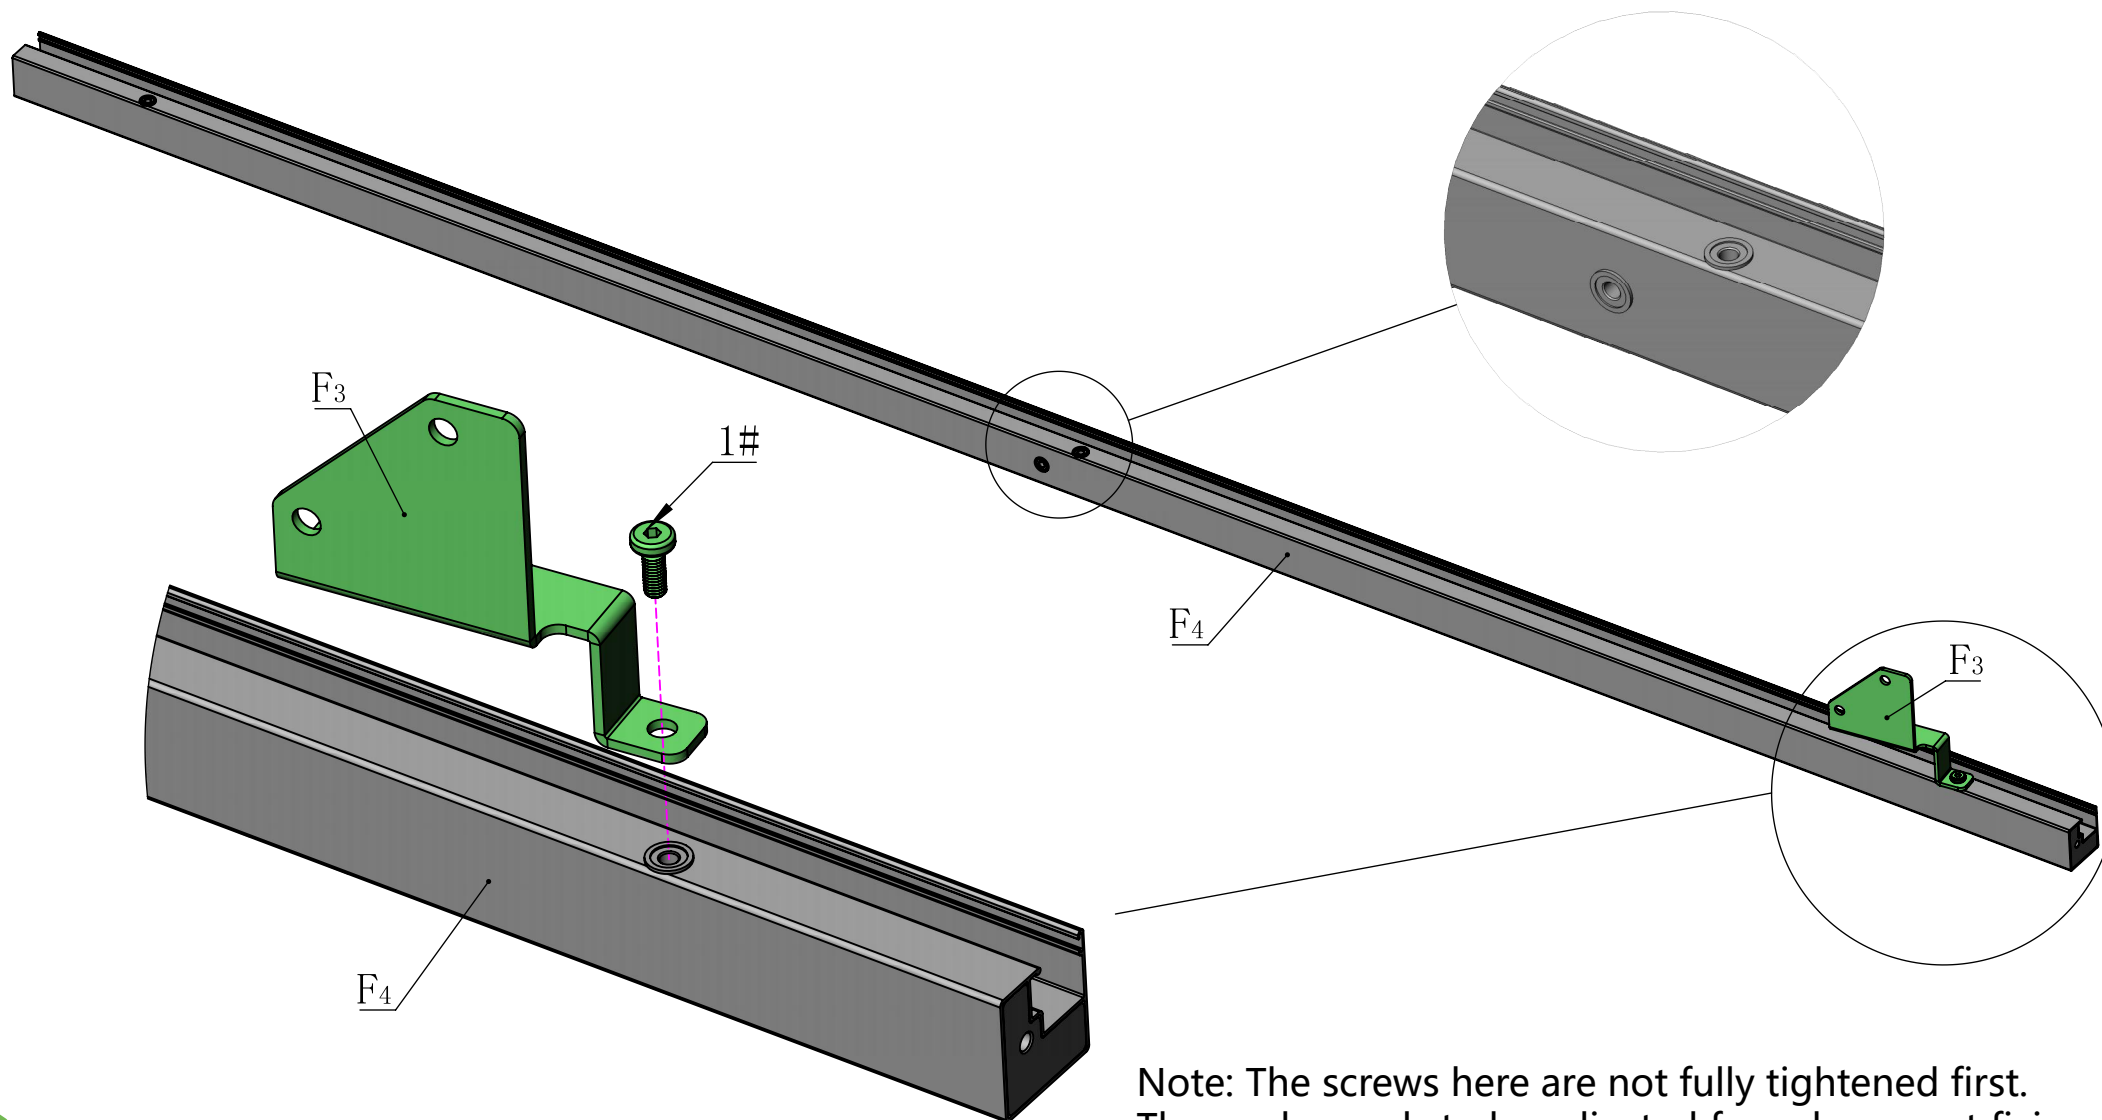


Note: The screws here are not fully tightened first.  
The angle needs to be adjusted for subsequent fixing.


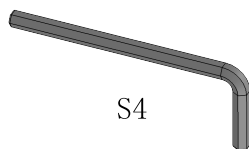
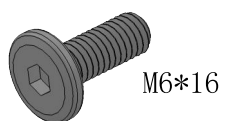




1# 4X

8# 1X

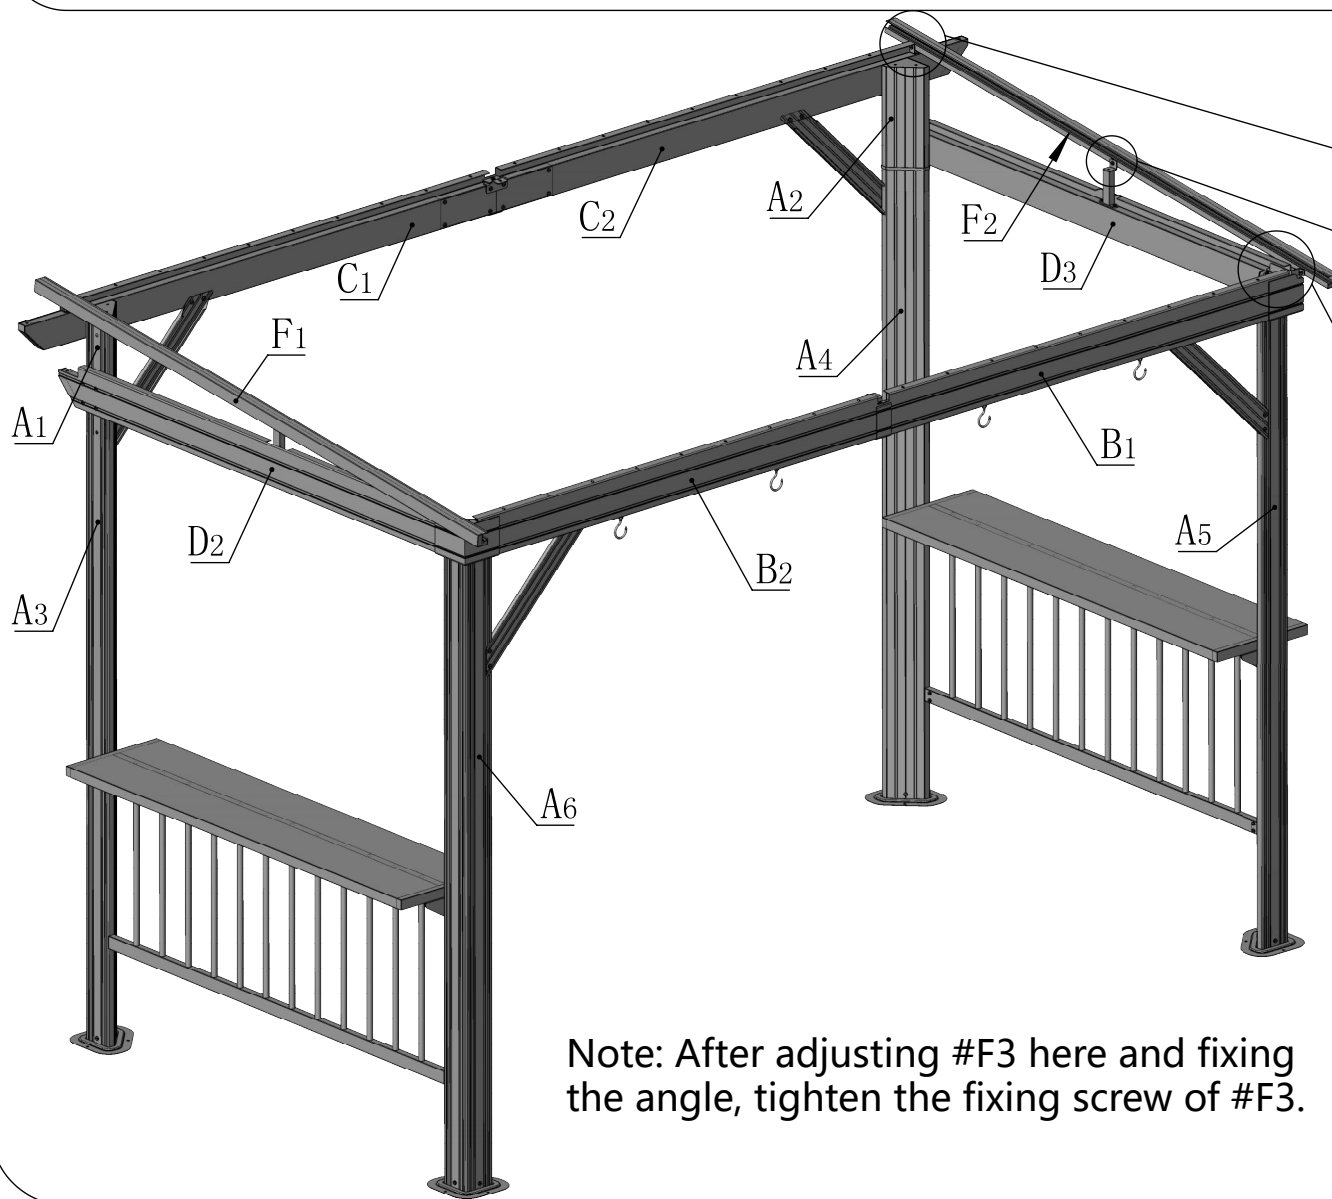


Note: After adjusting #F3 here and fixing the angle, tighten the fixing screw of #F3.


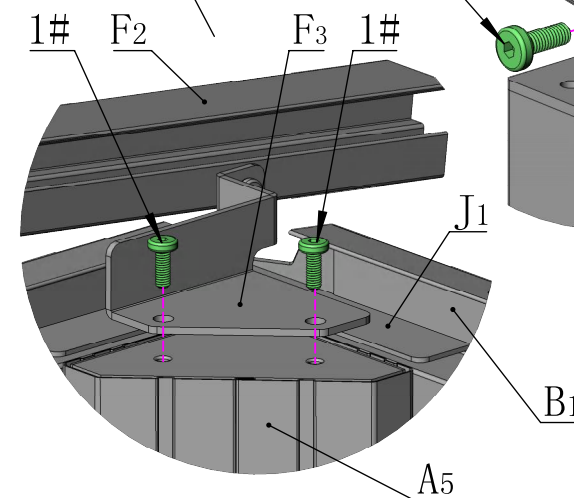
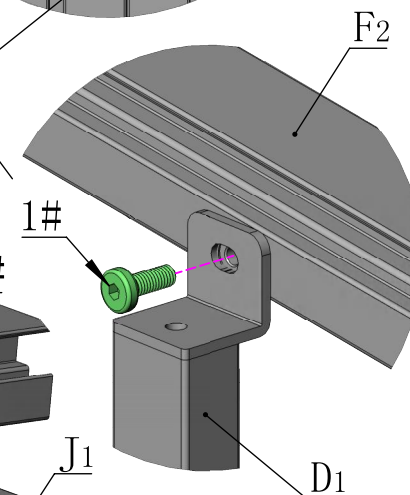
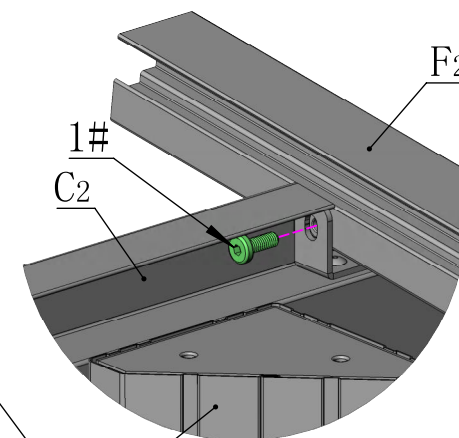


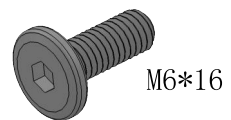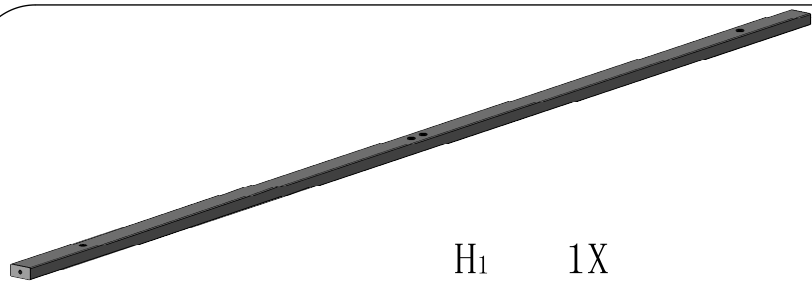

1# 2X


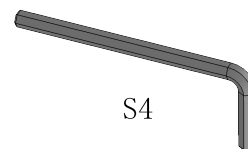



8# 1X

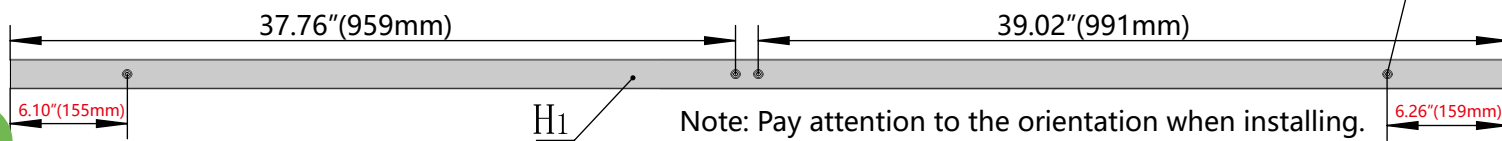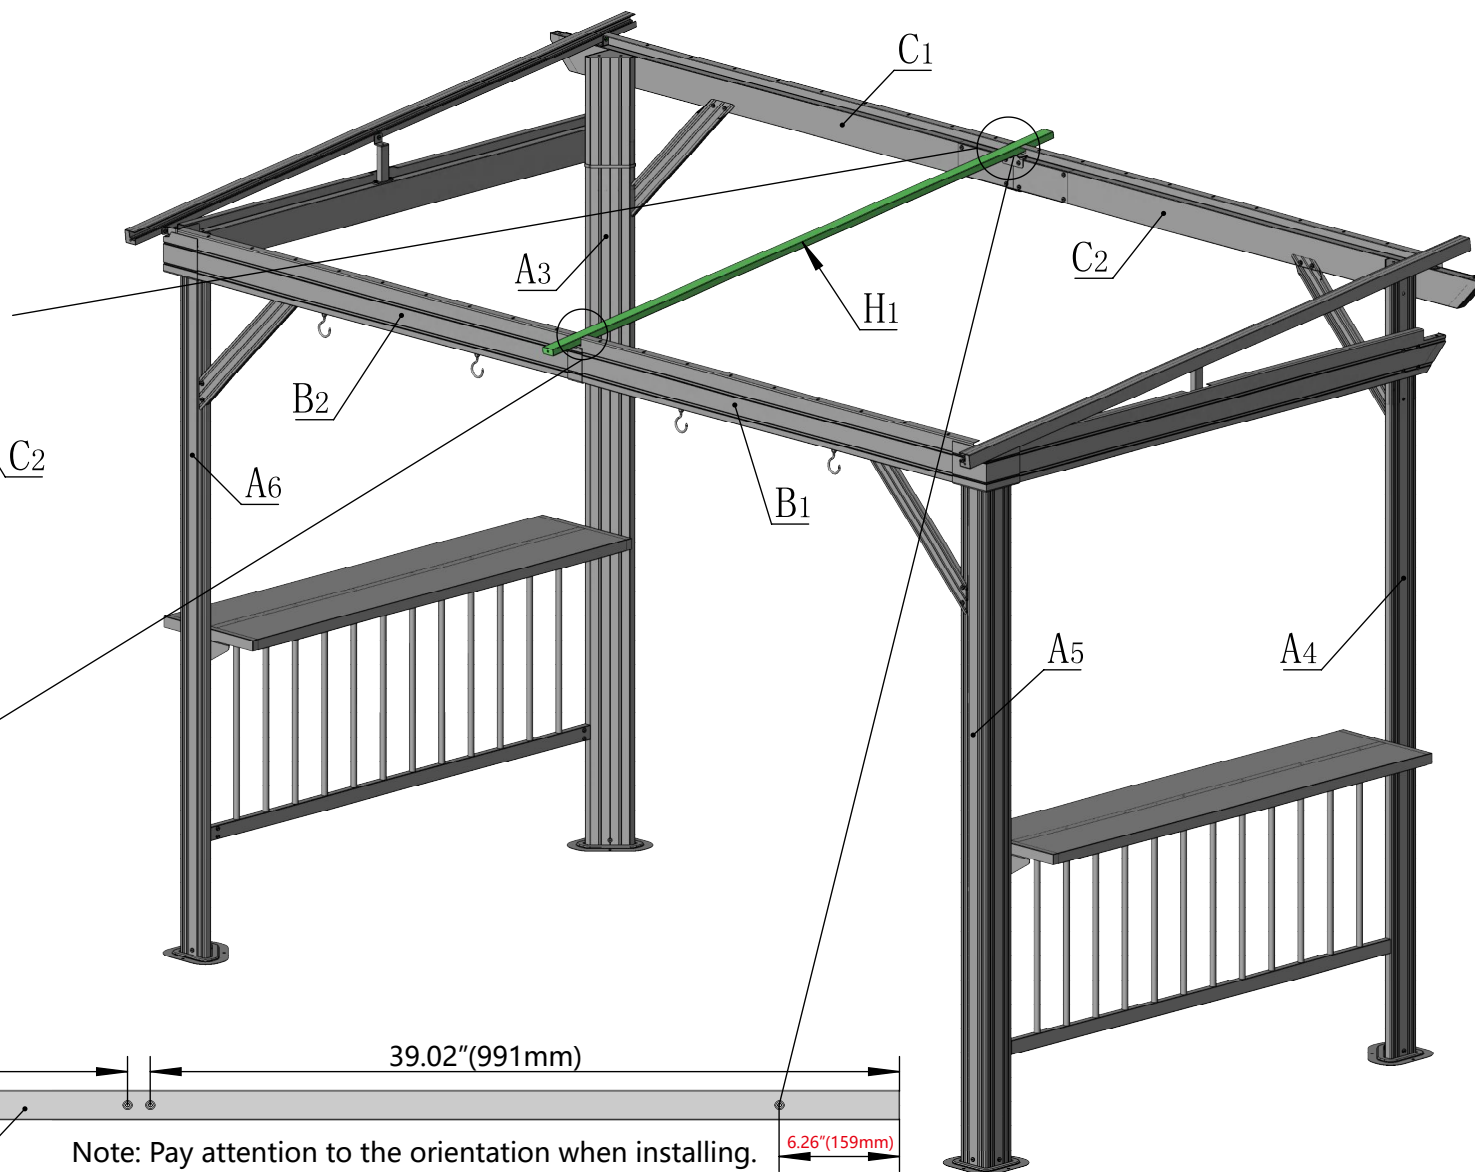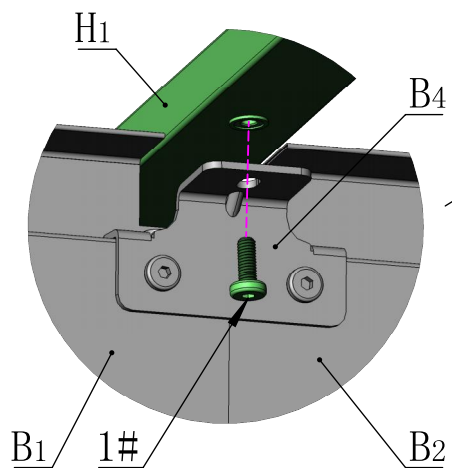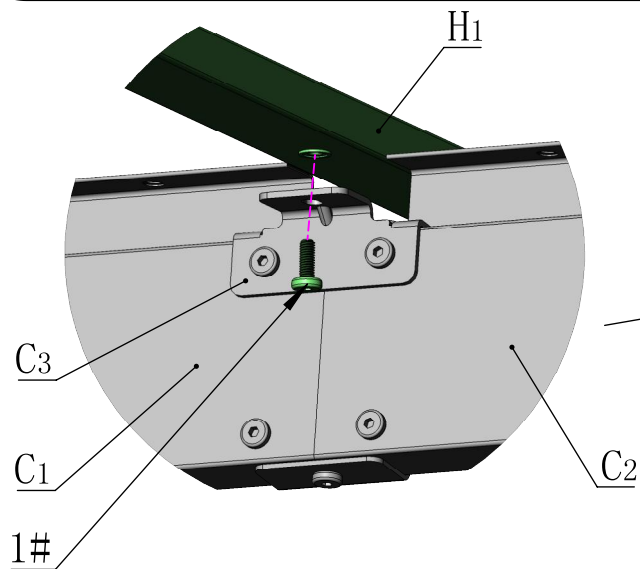


Note: Pay attention to the orientation when installing.



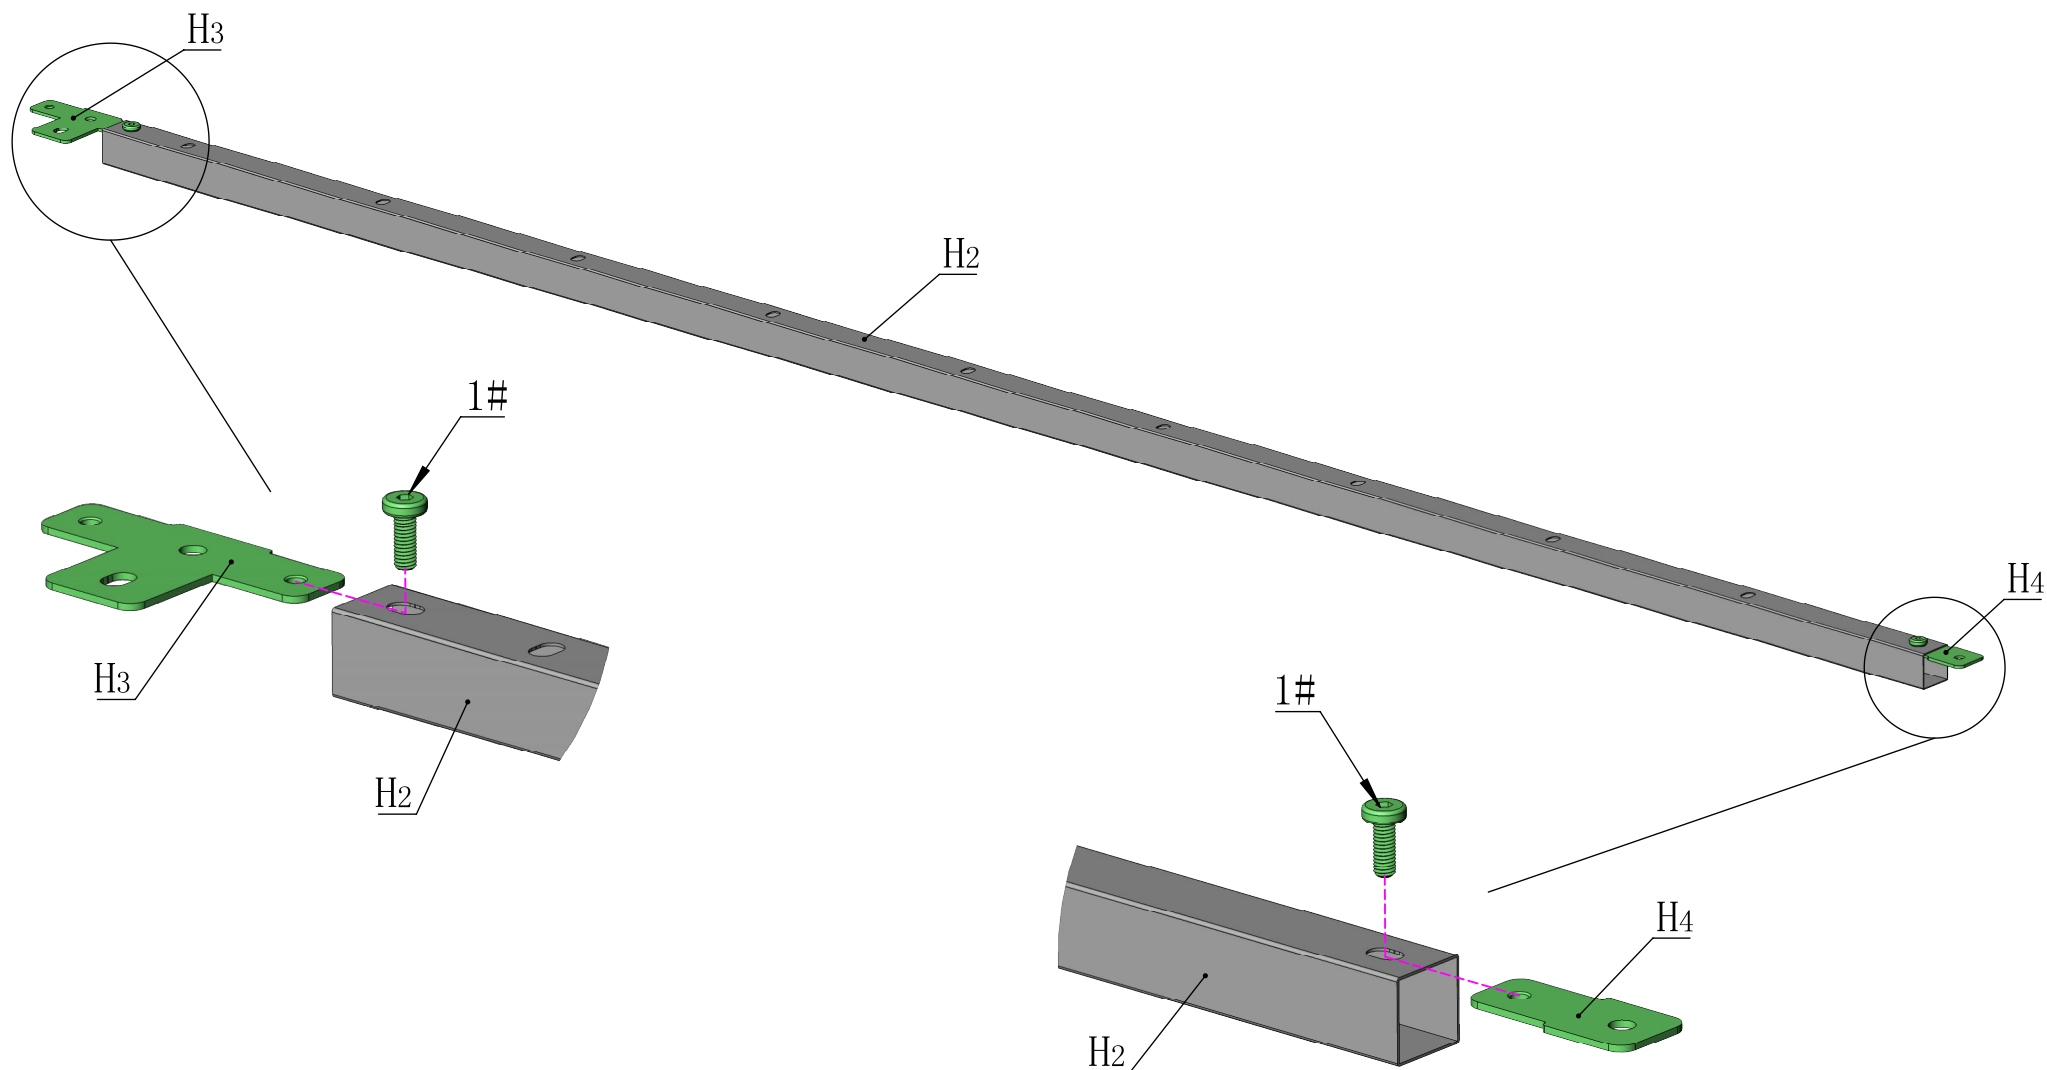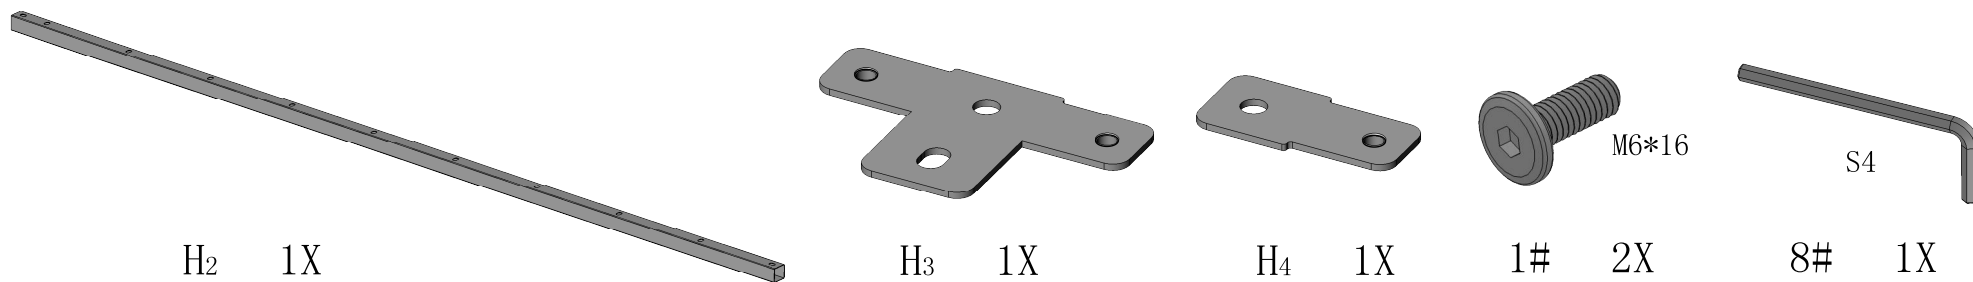

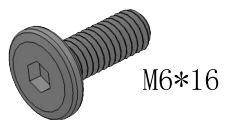


M6\*16

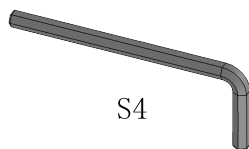






S4


1# 3X

8# 1X

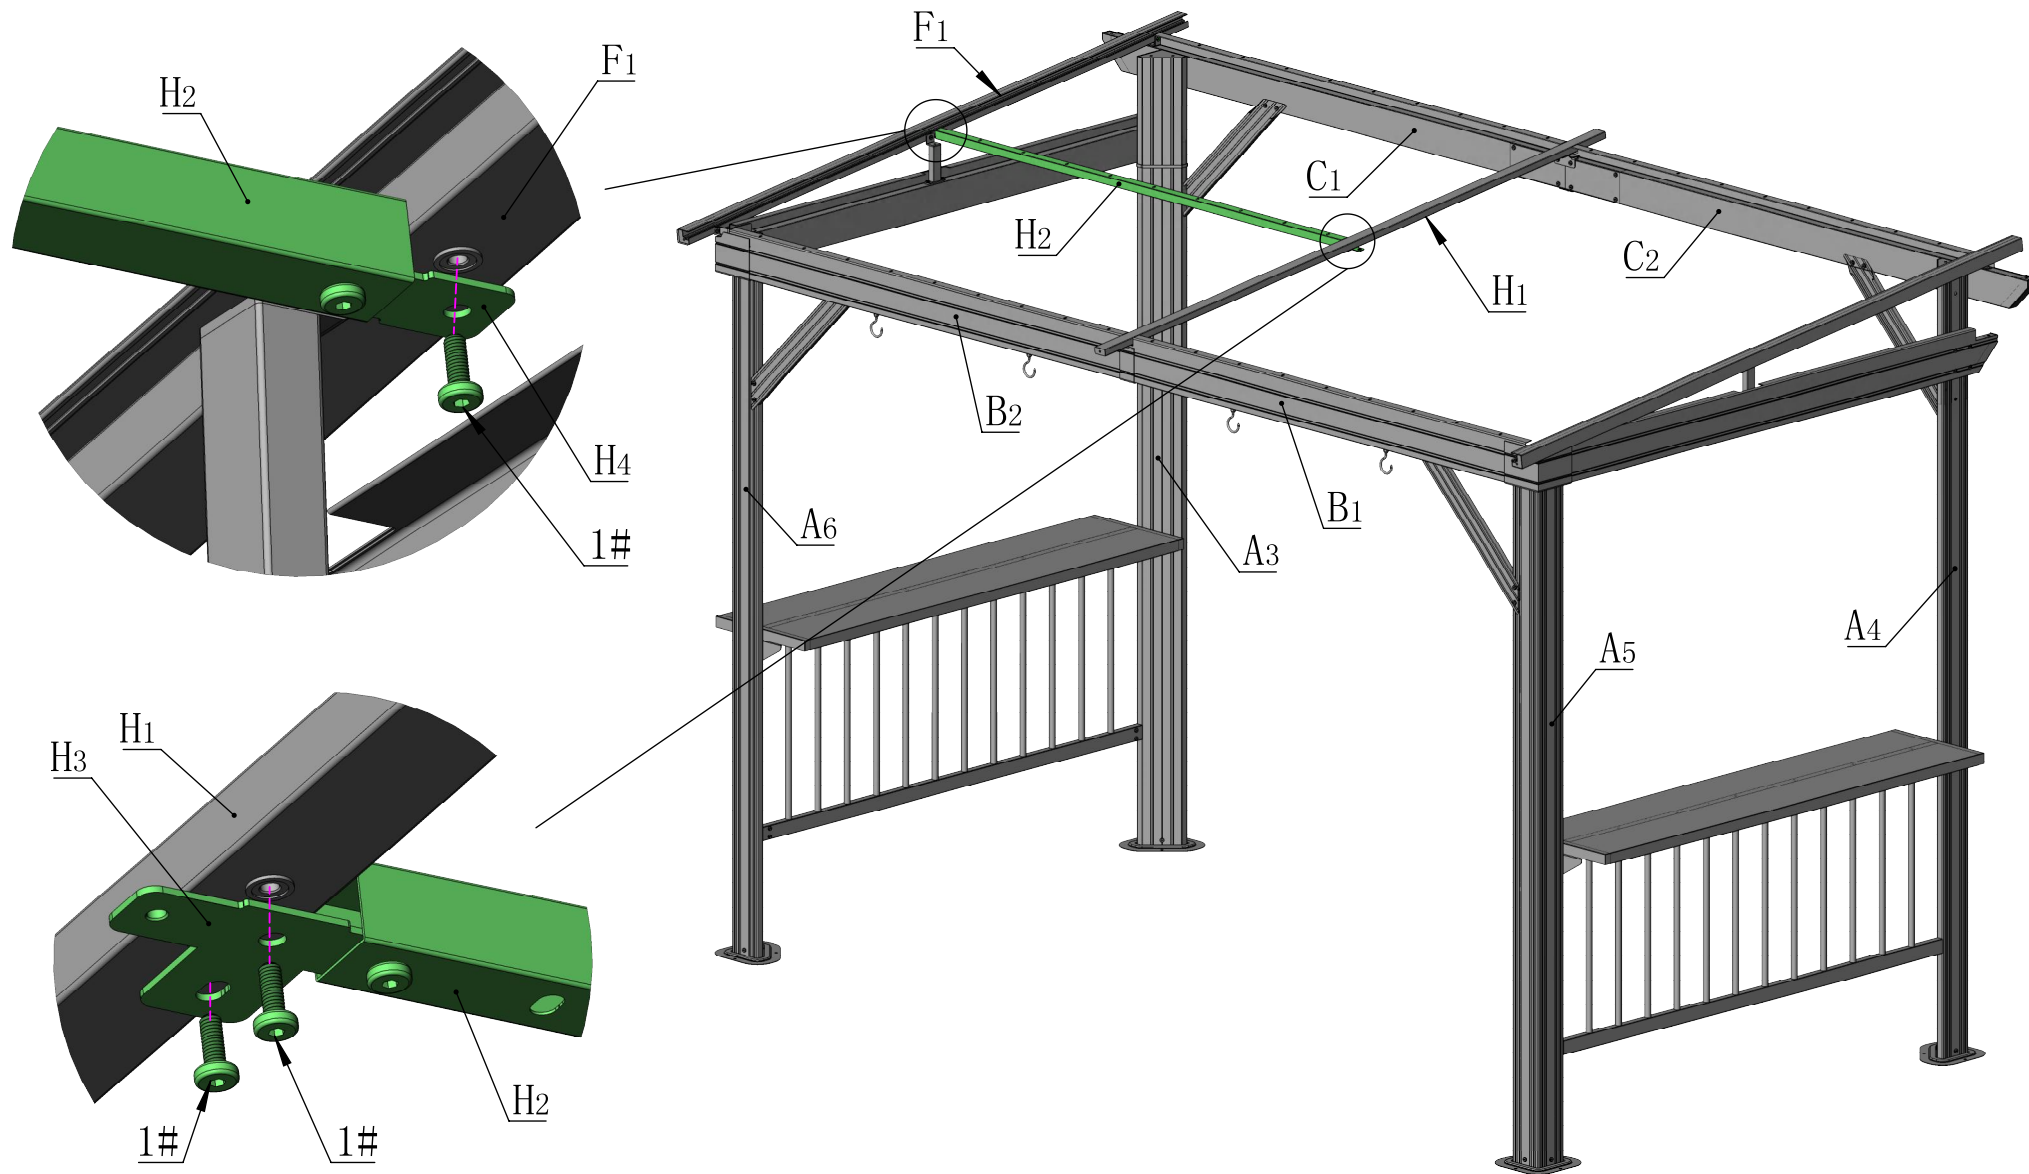




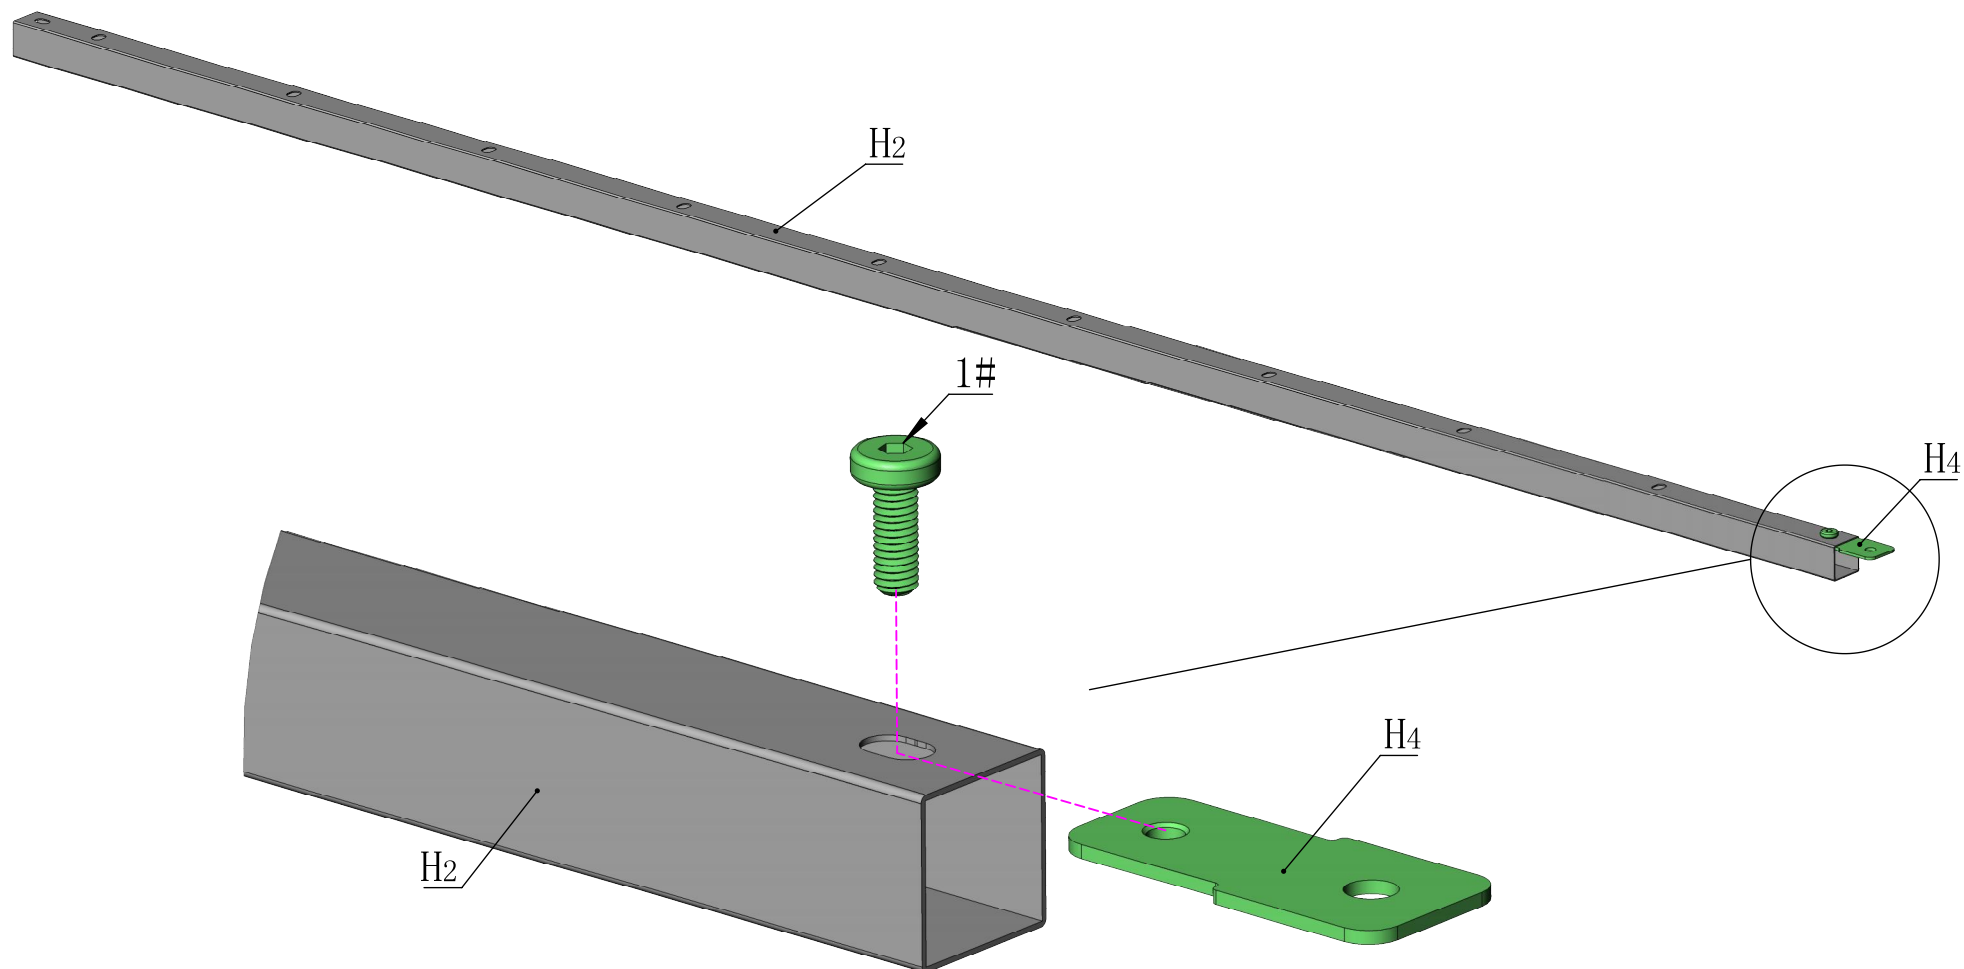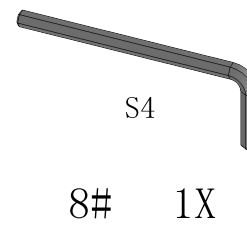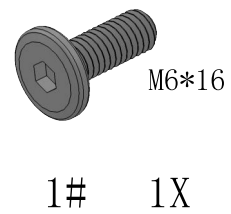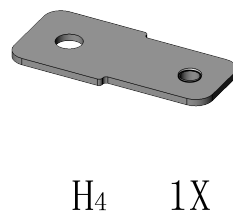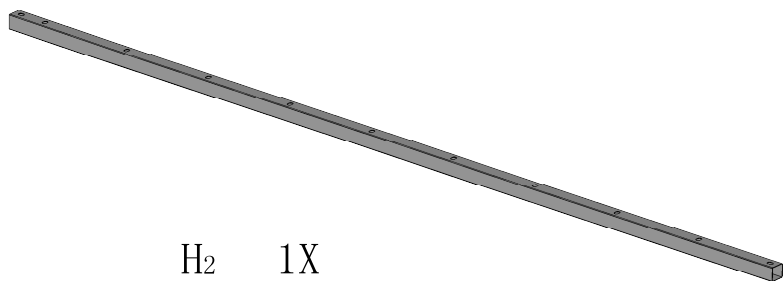

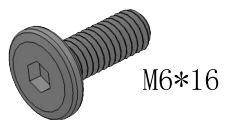

M6\*16

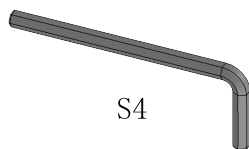


S4



1#



2X



8#

1X


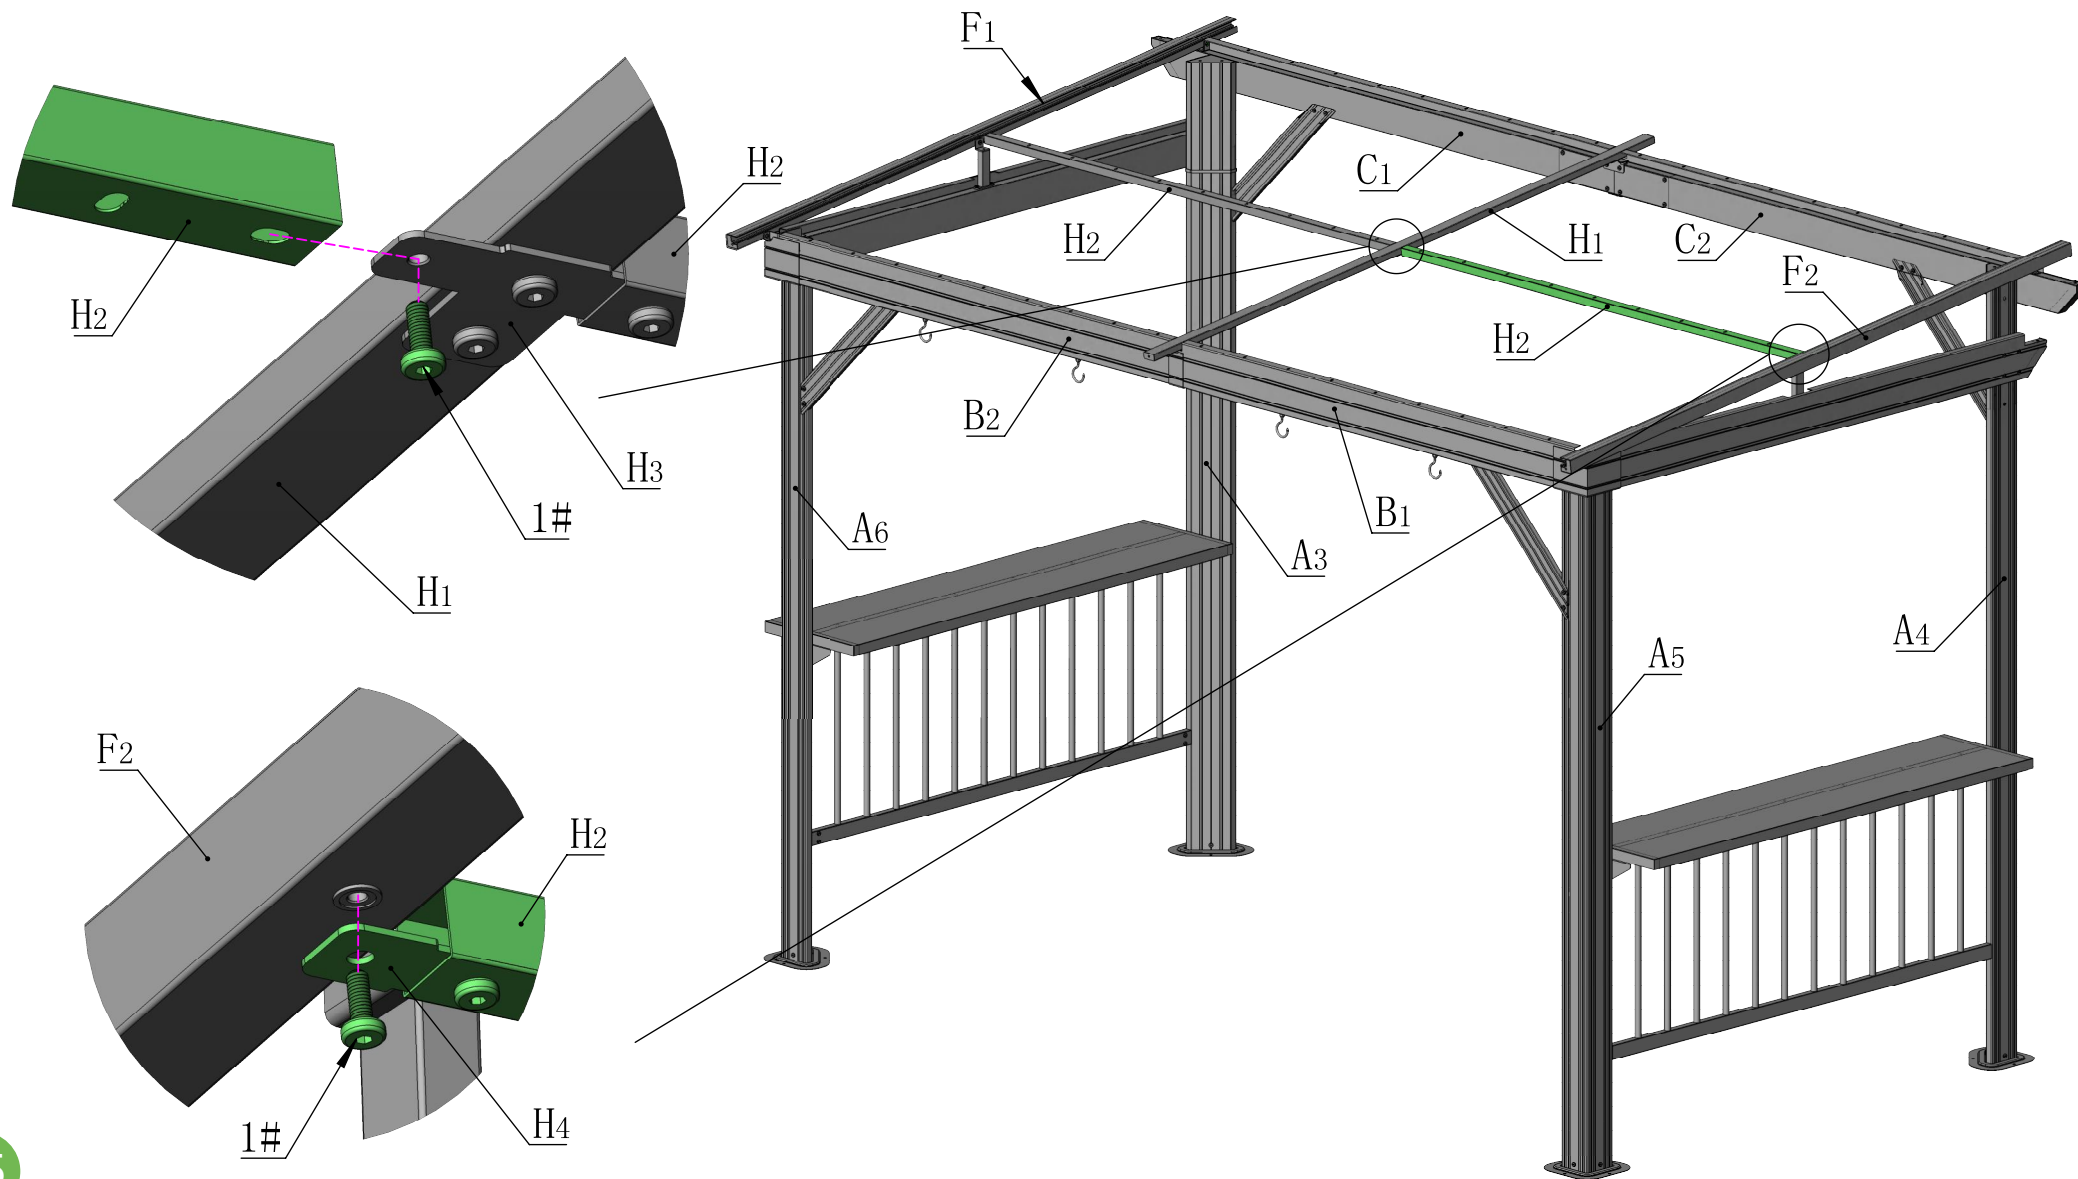


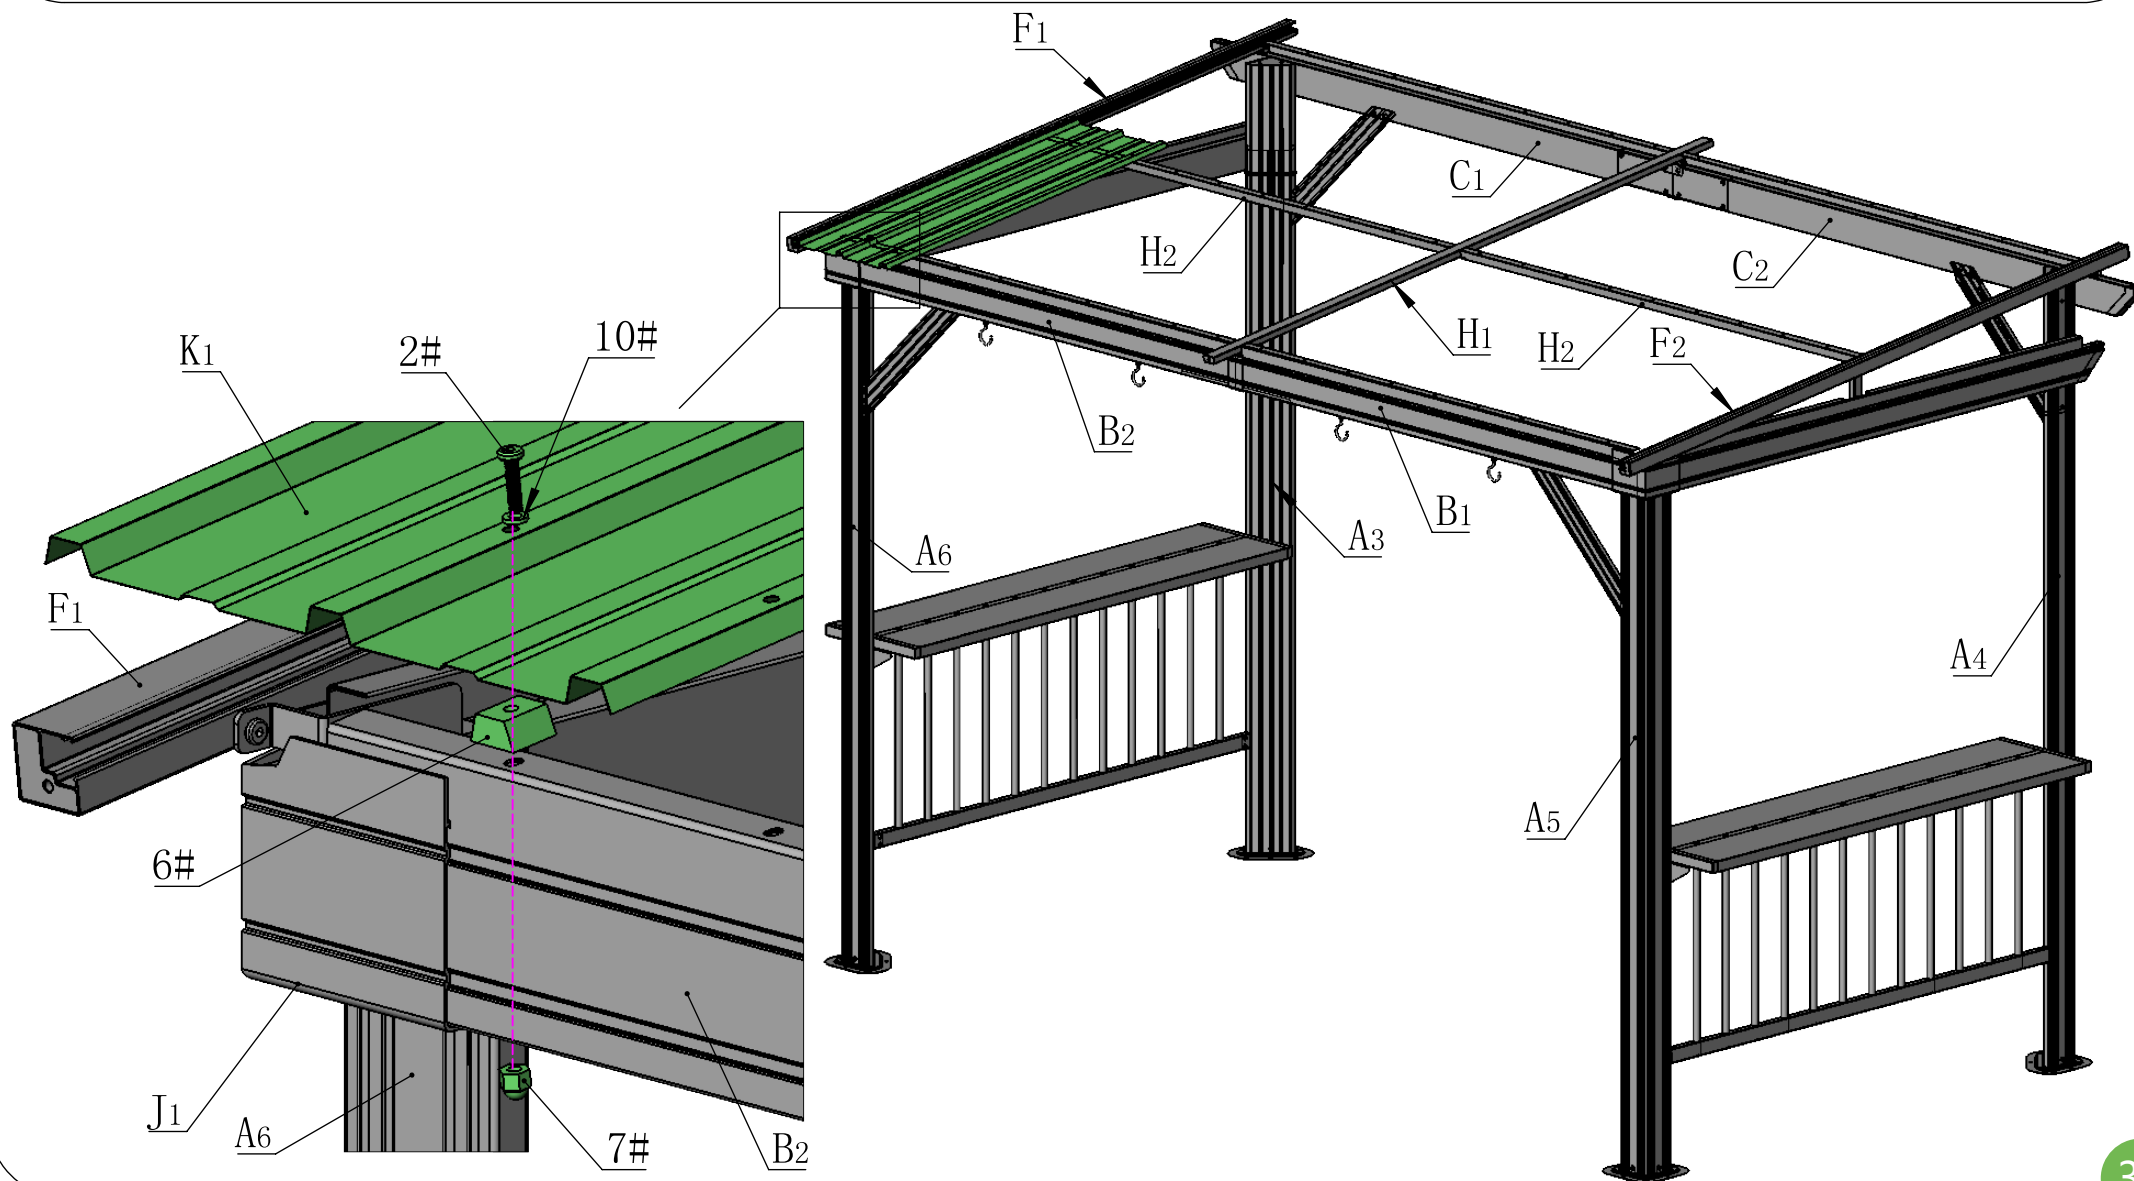
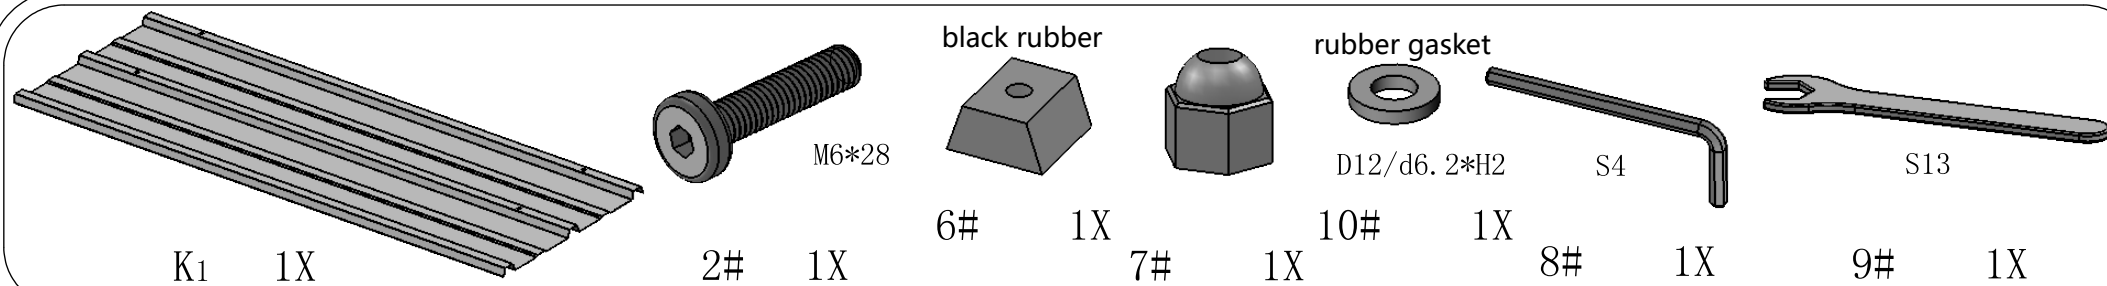


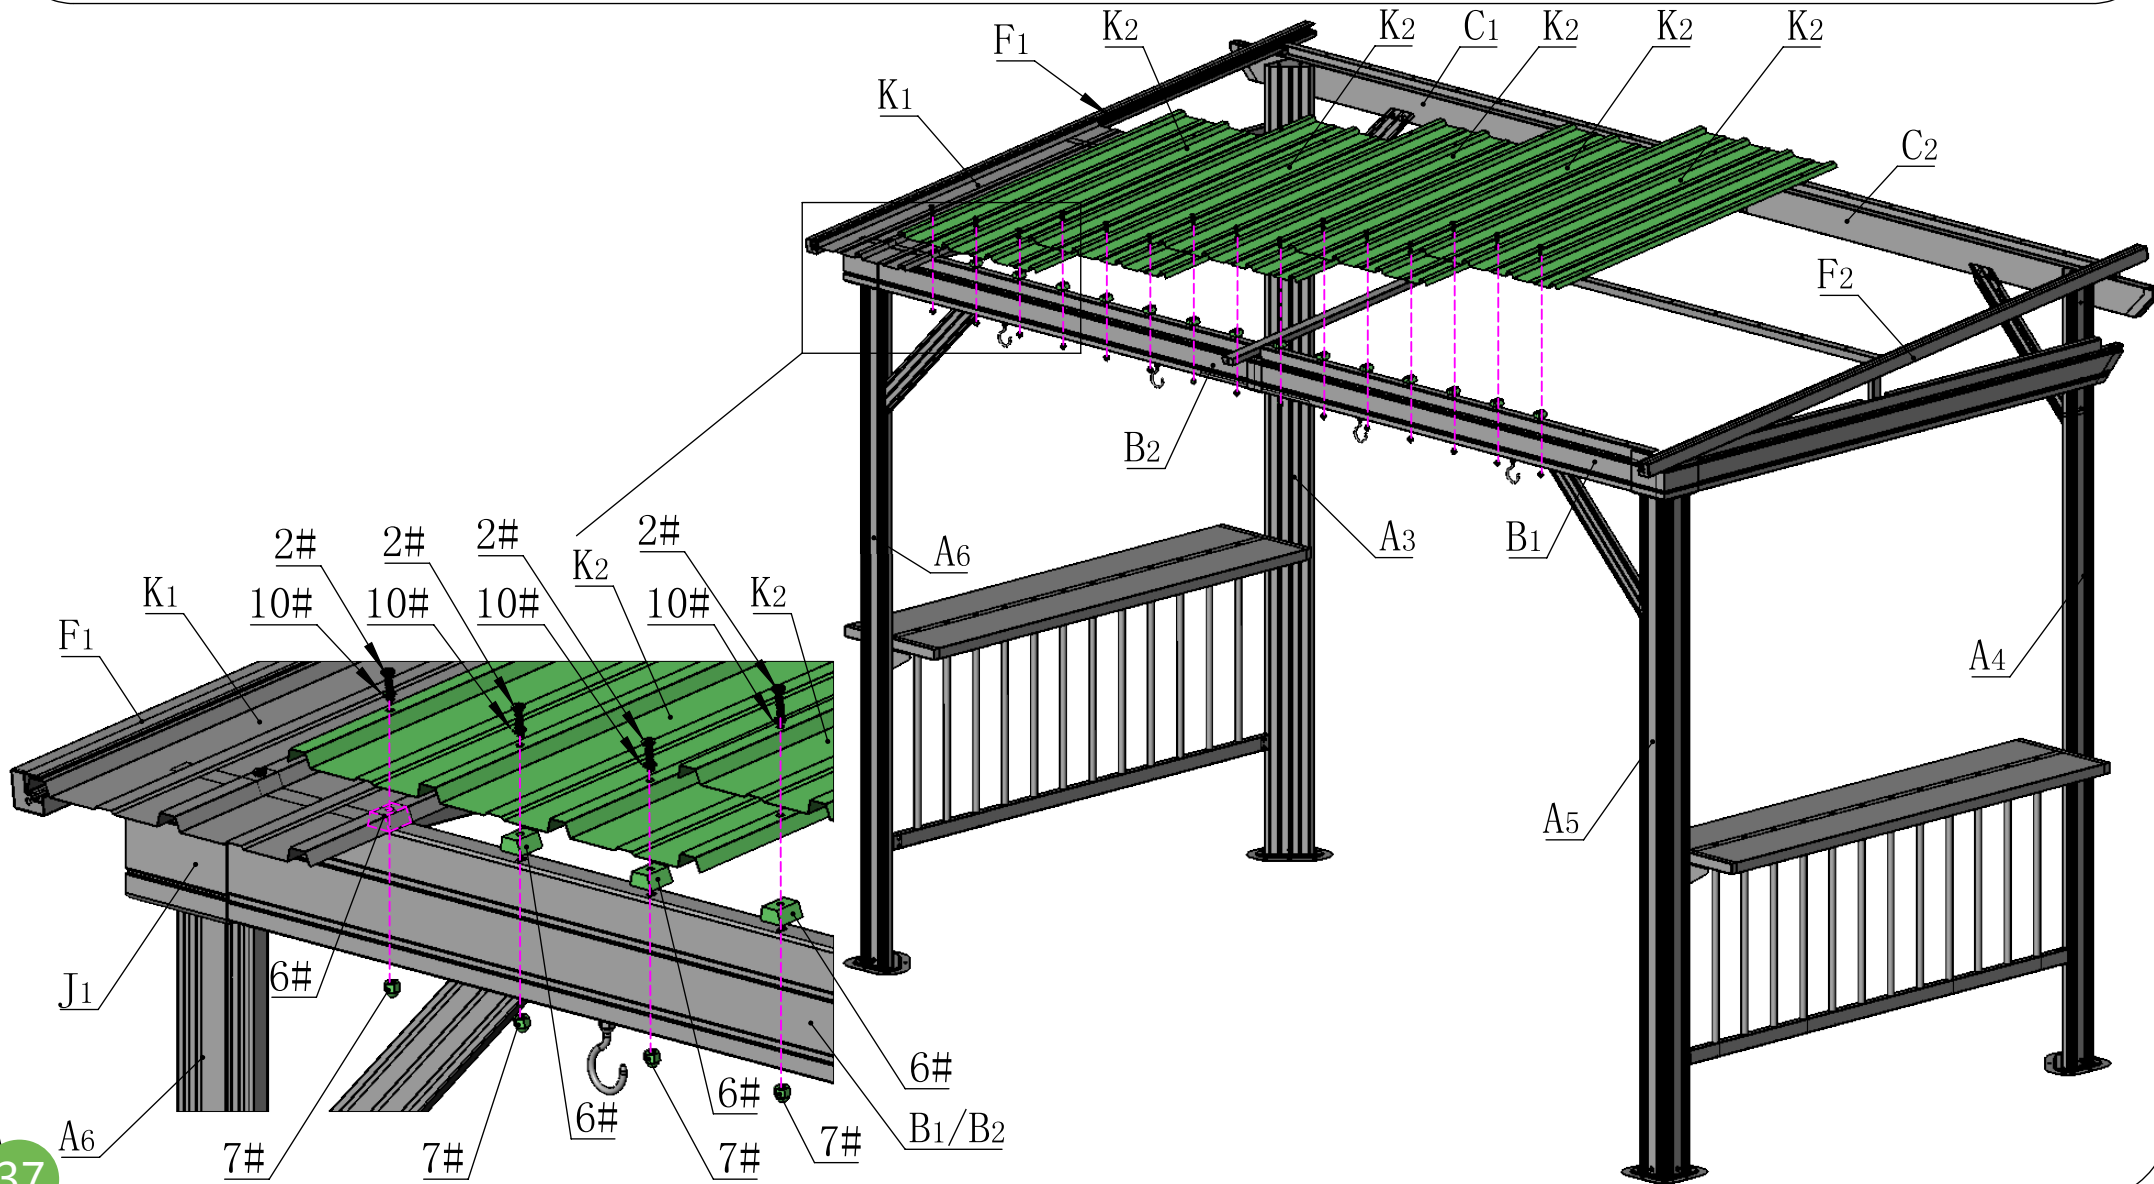
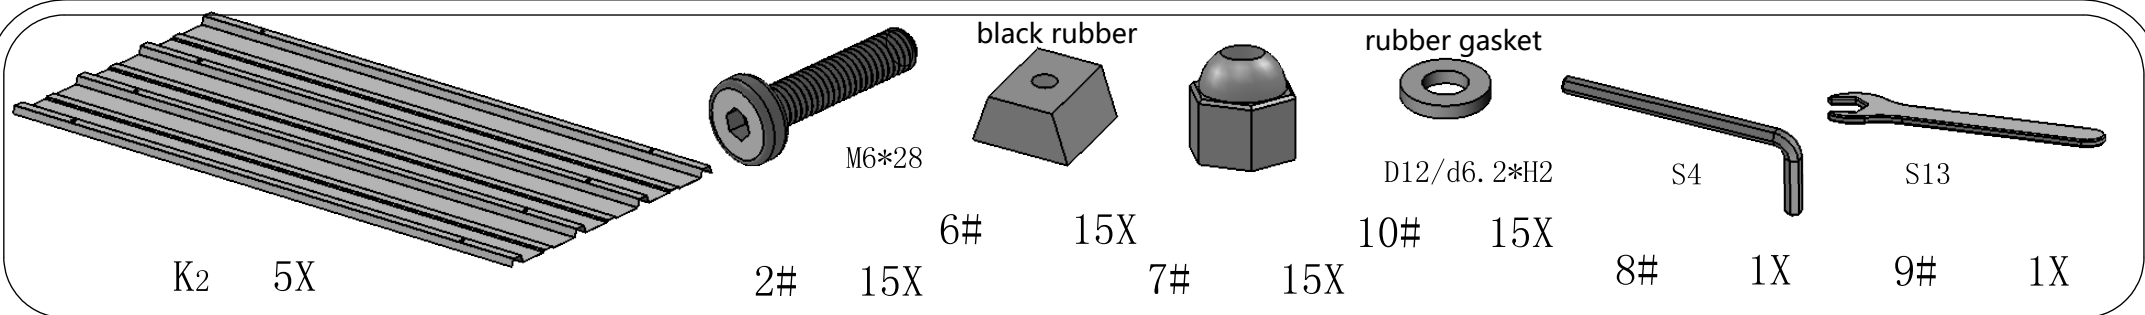


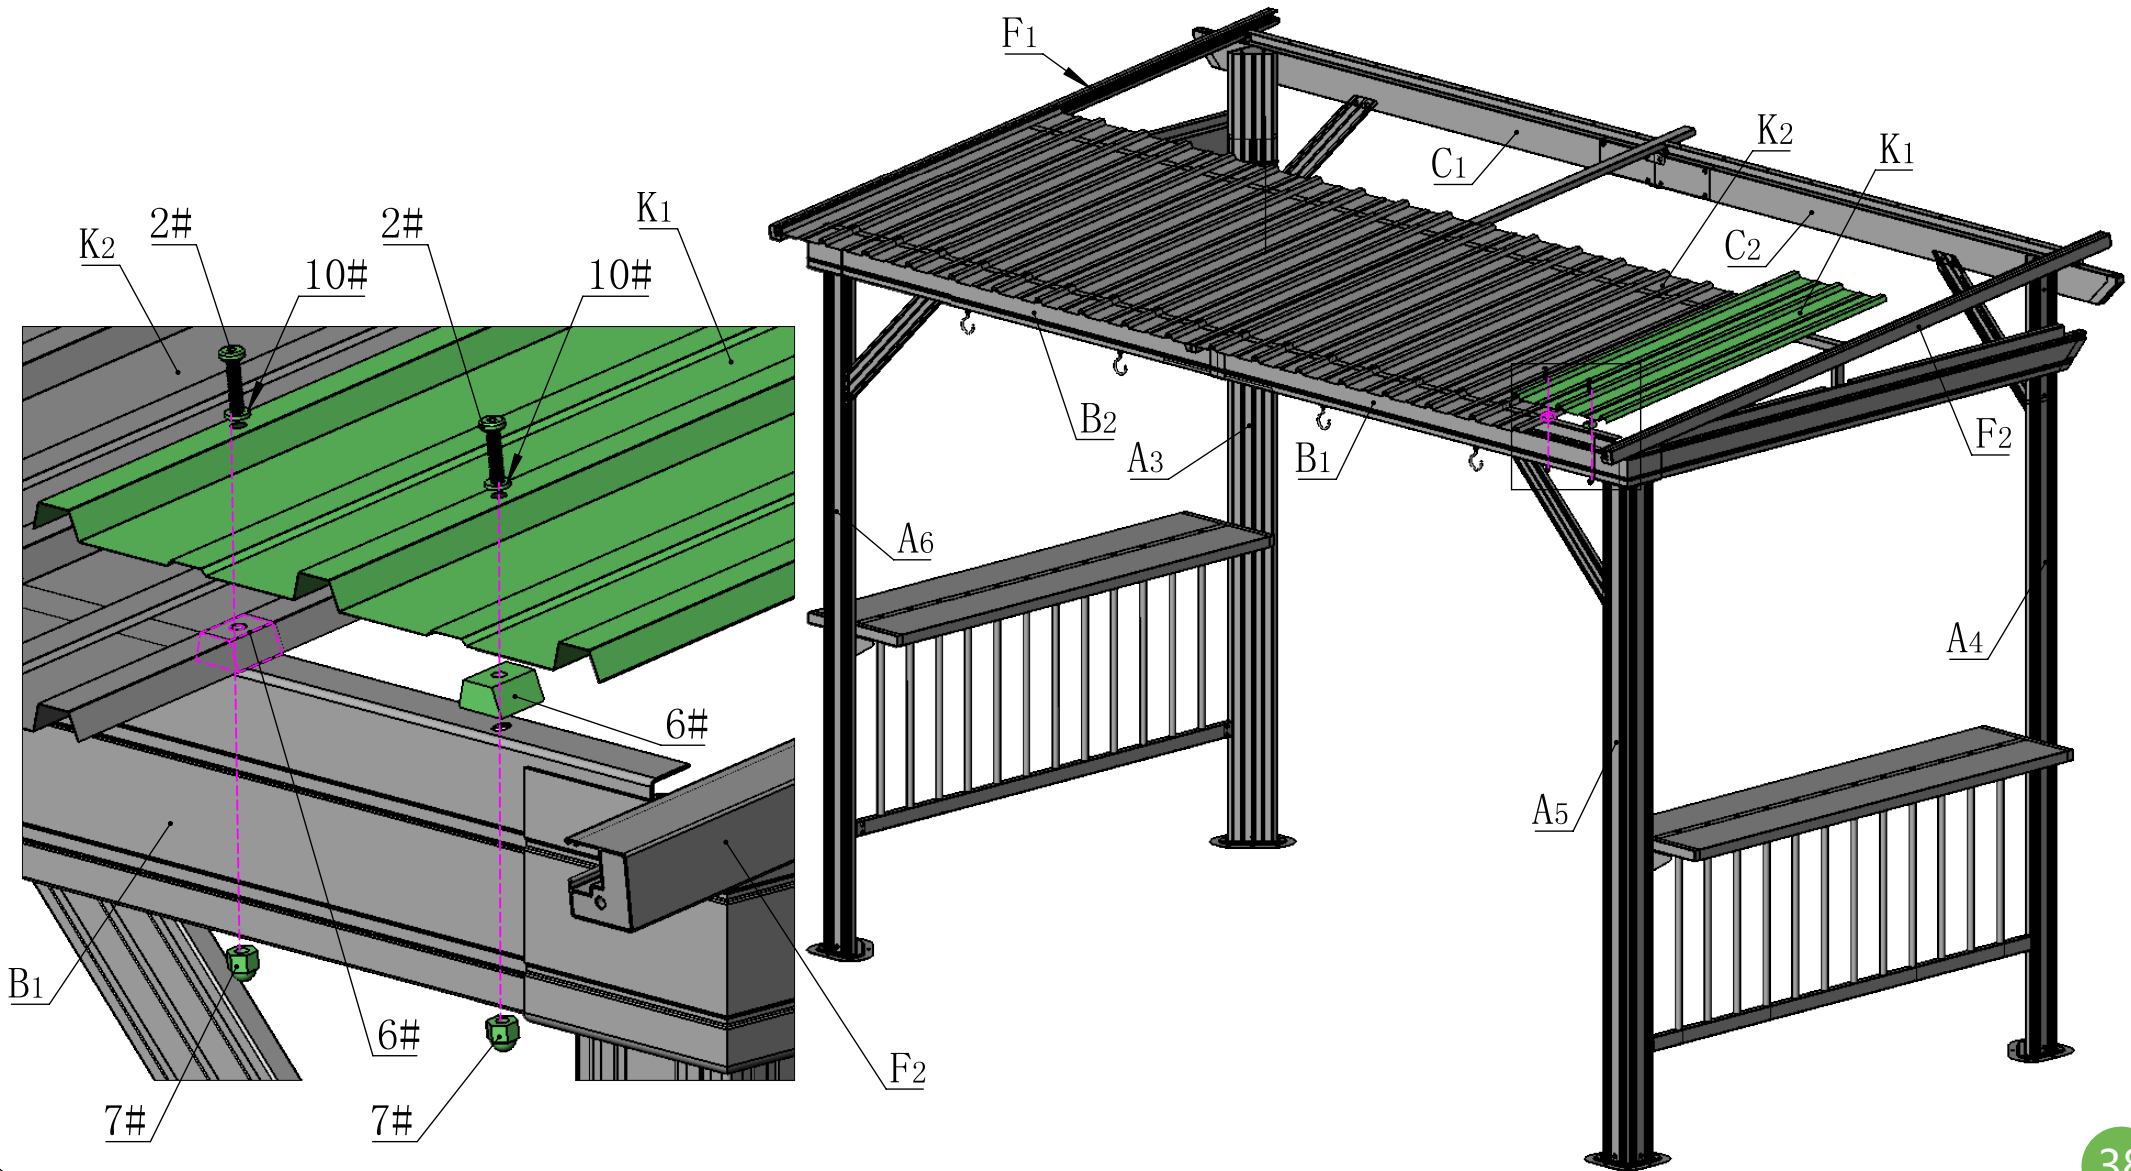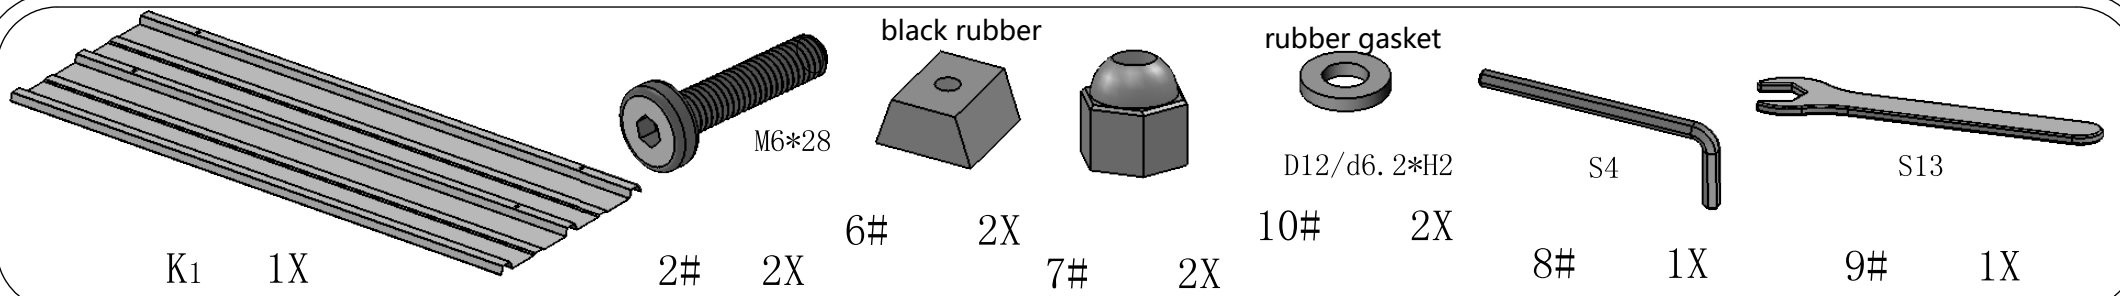





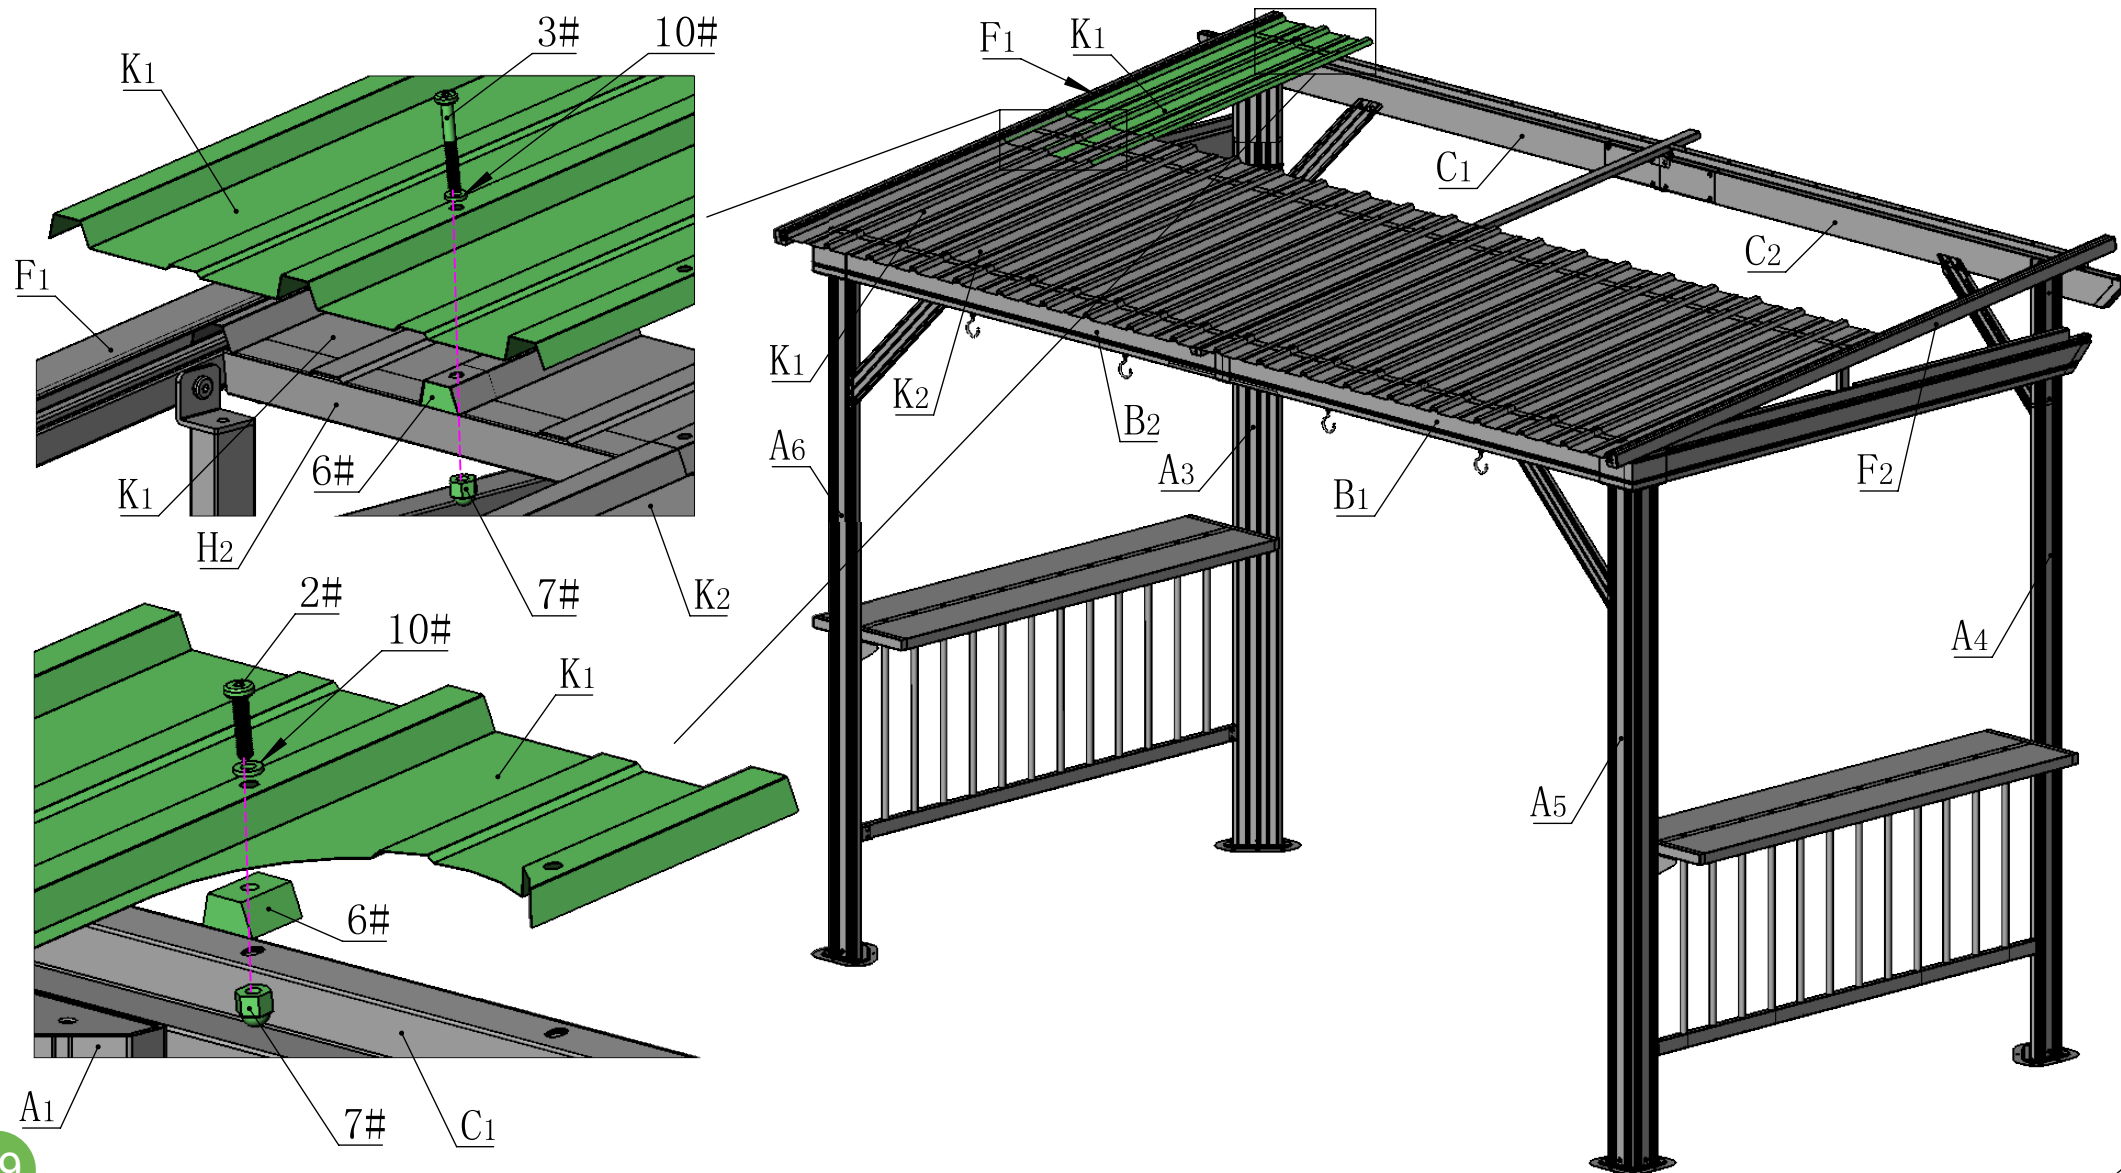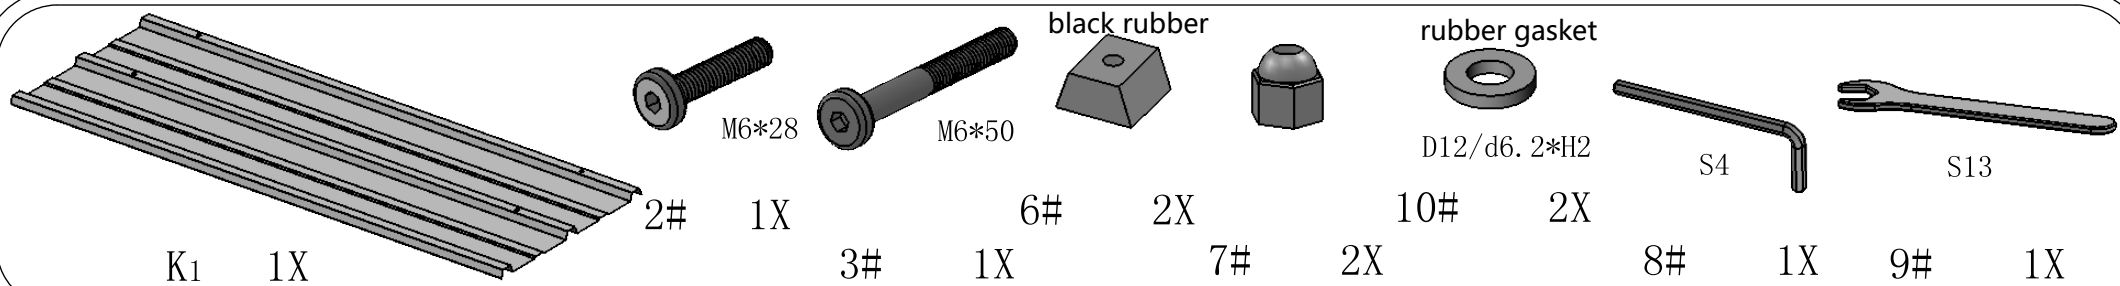

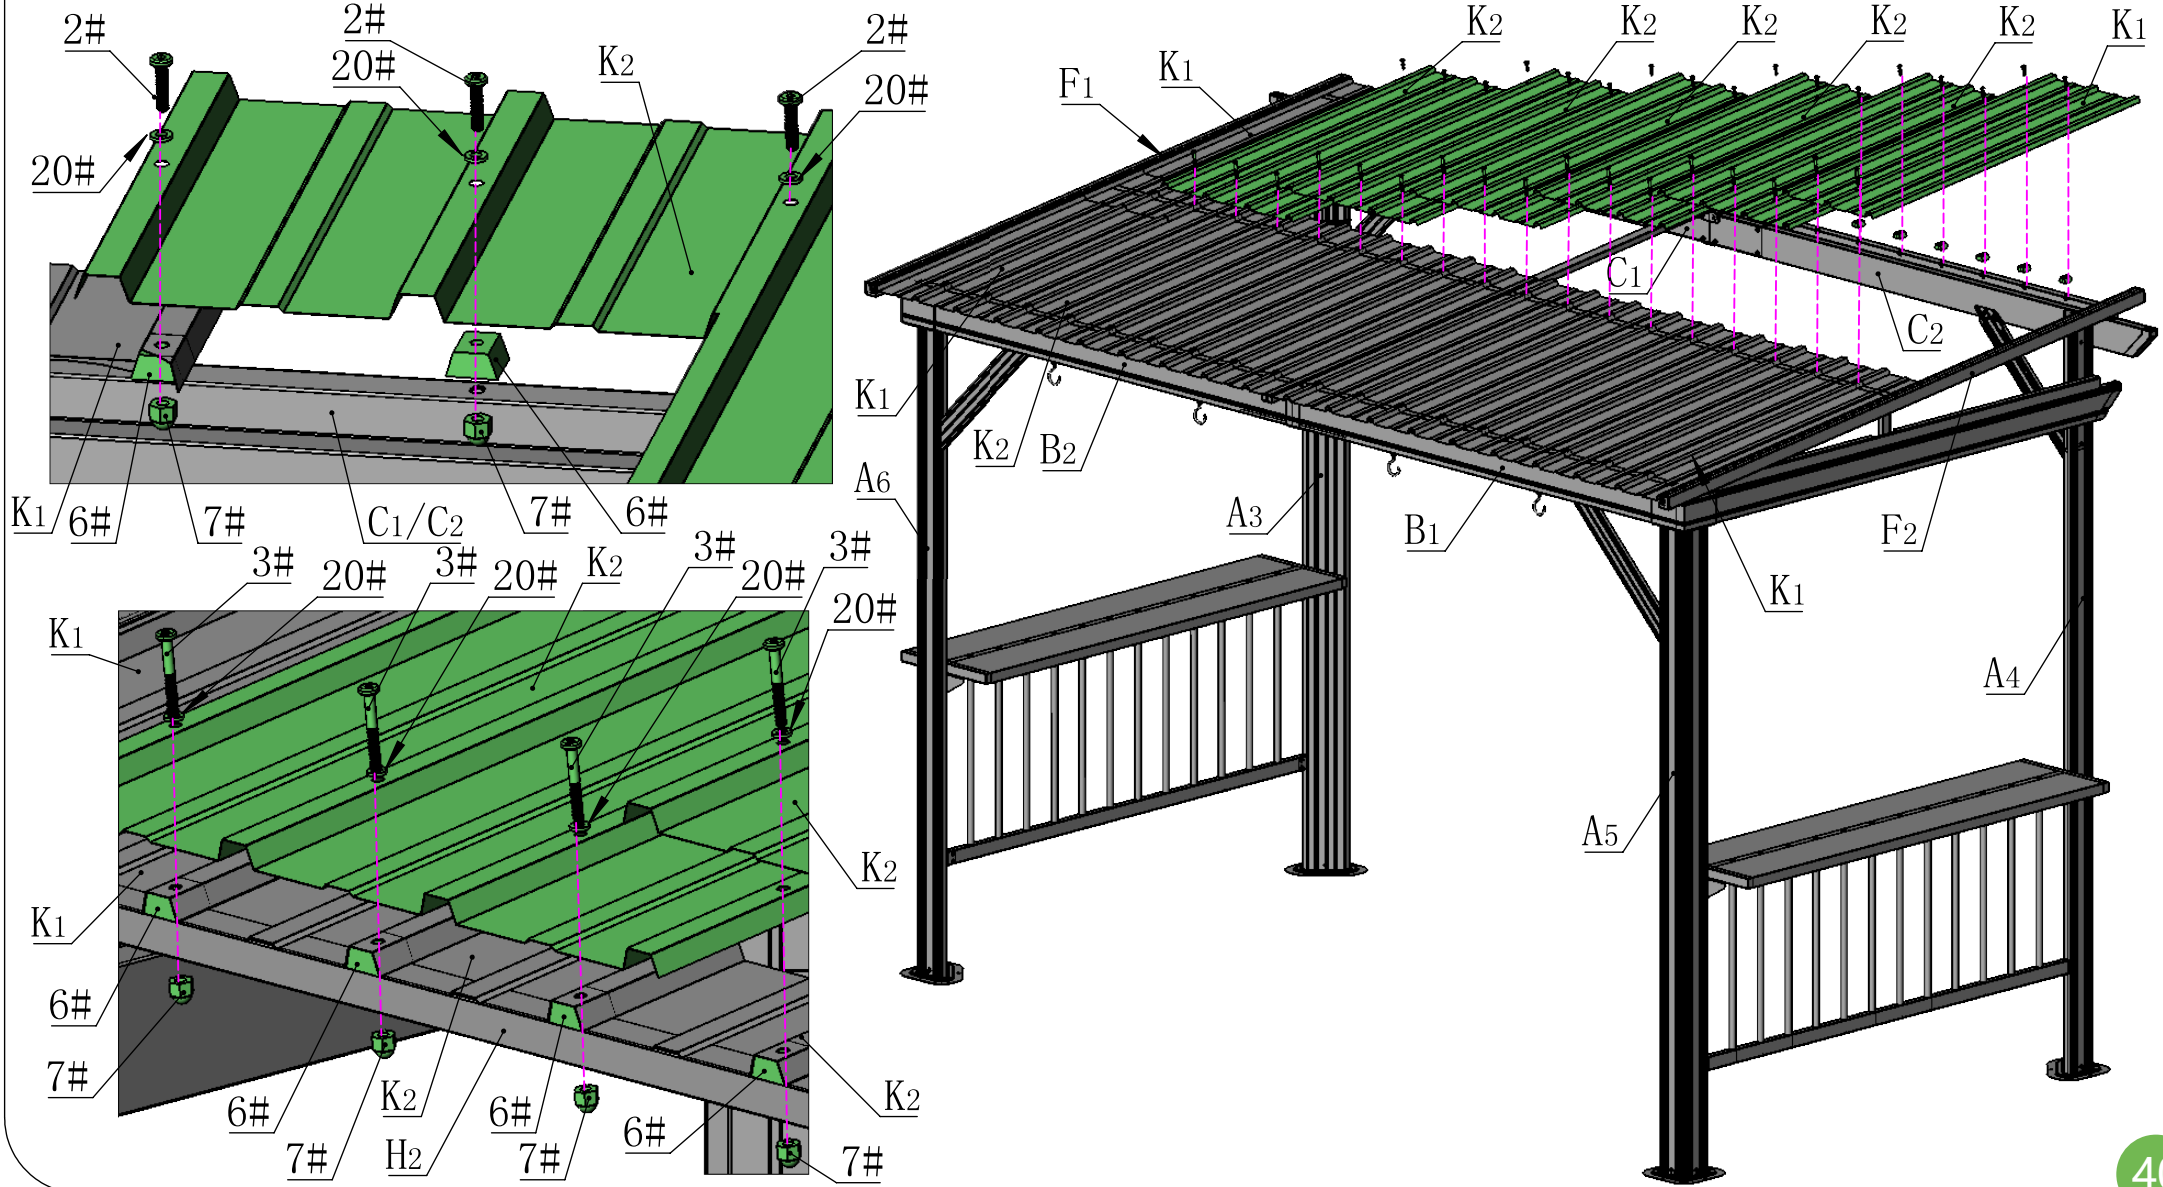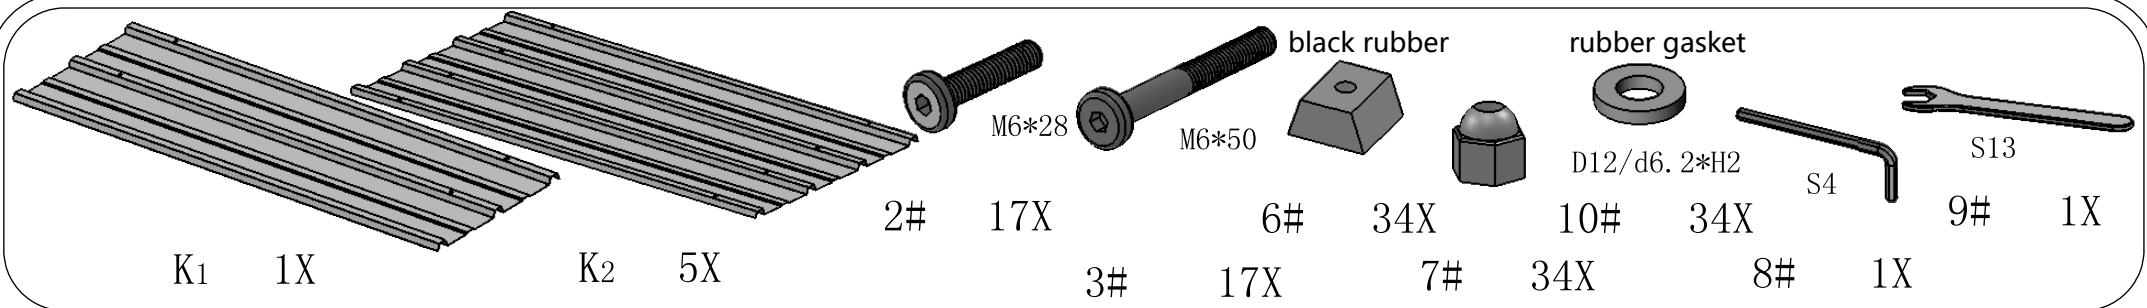

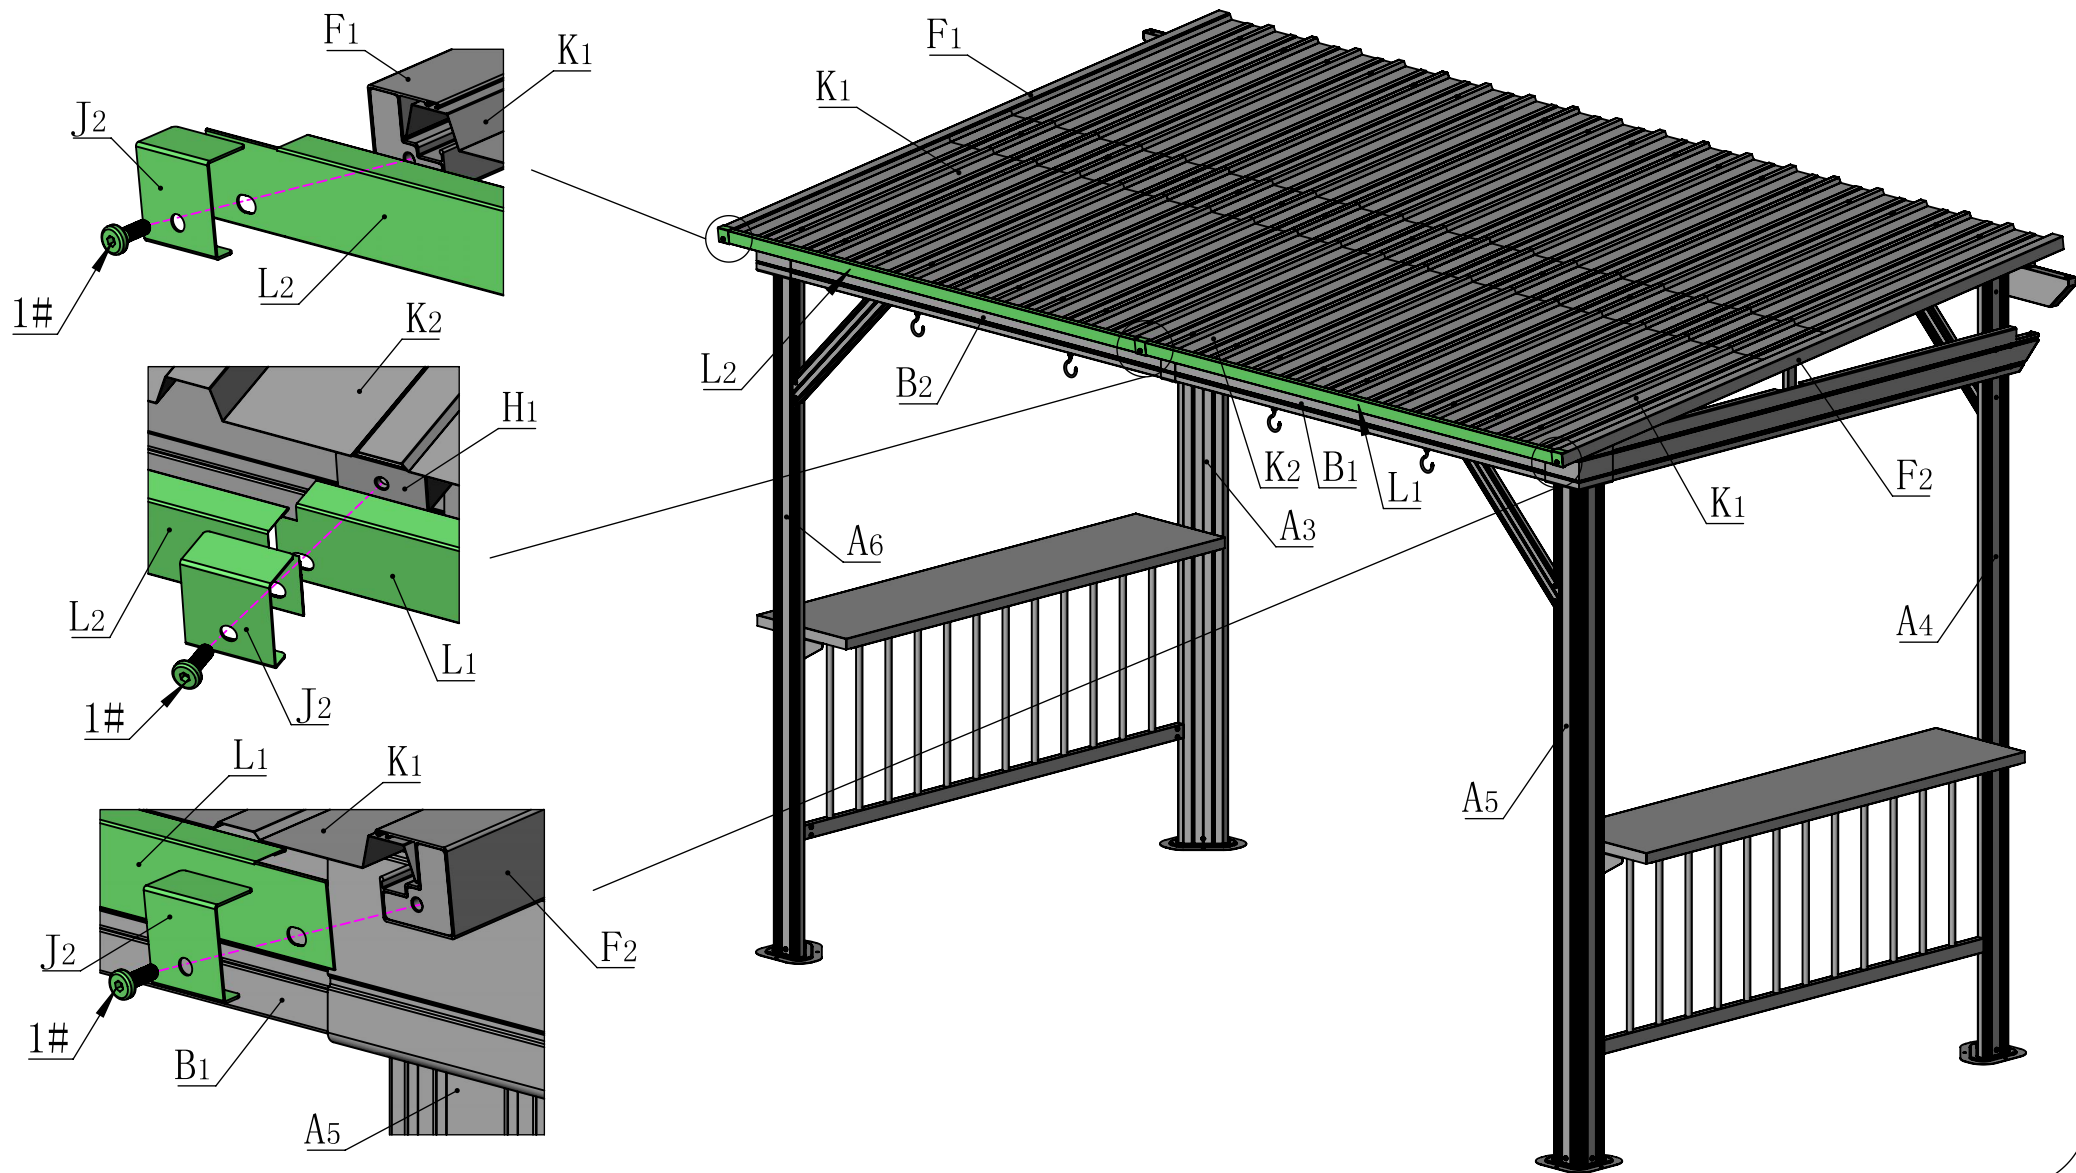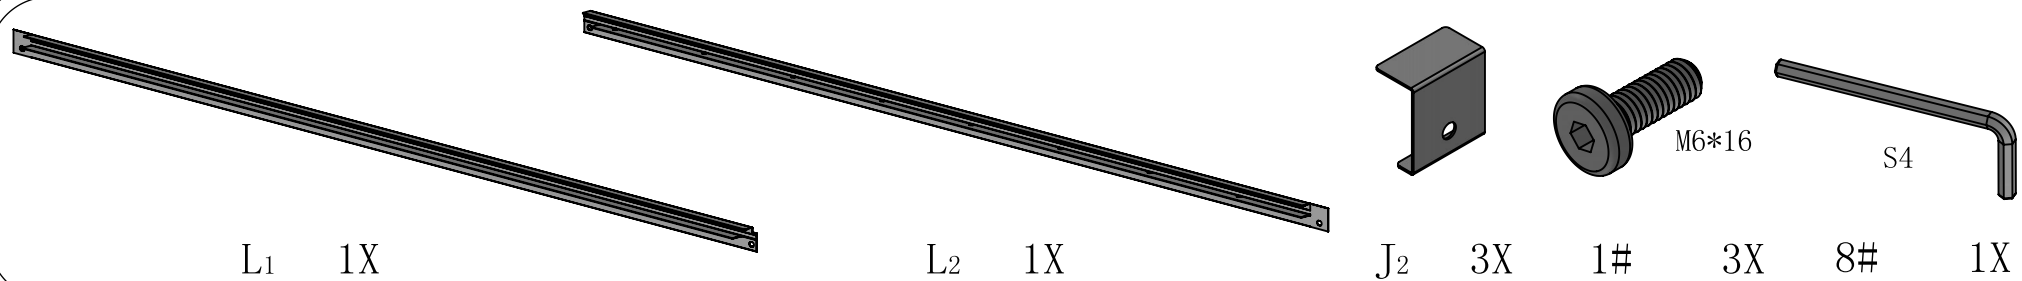



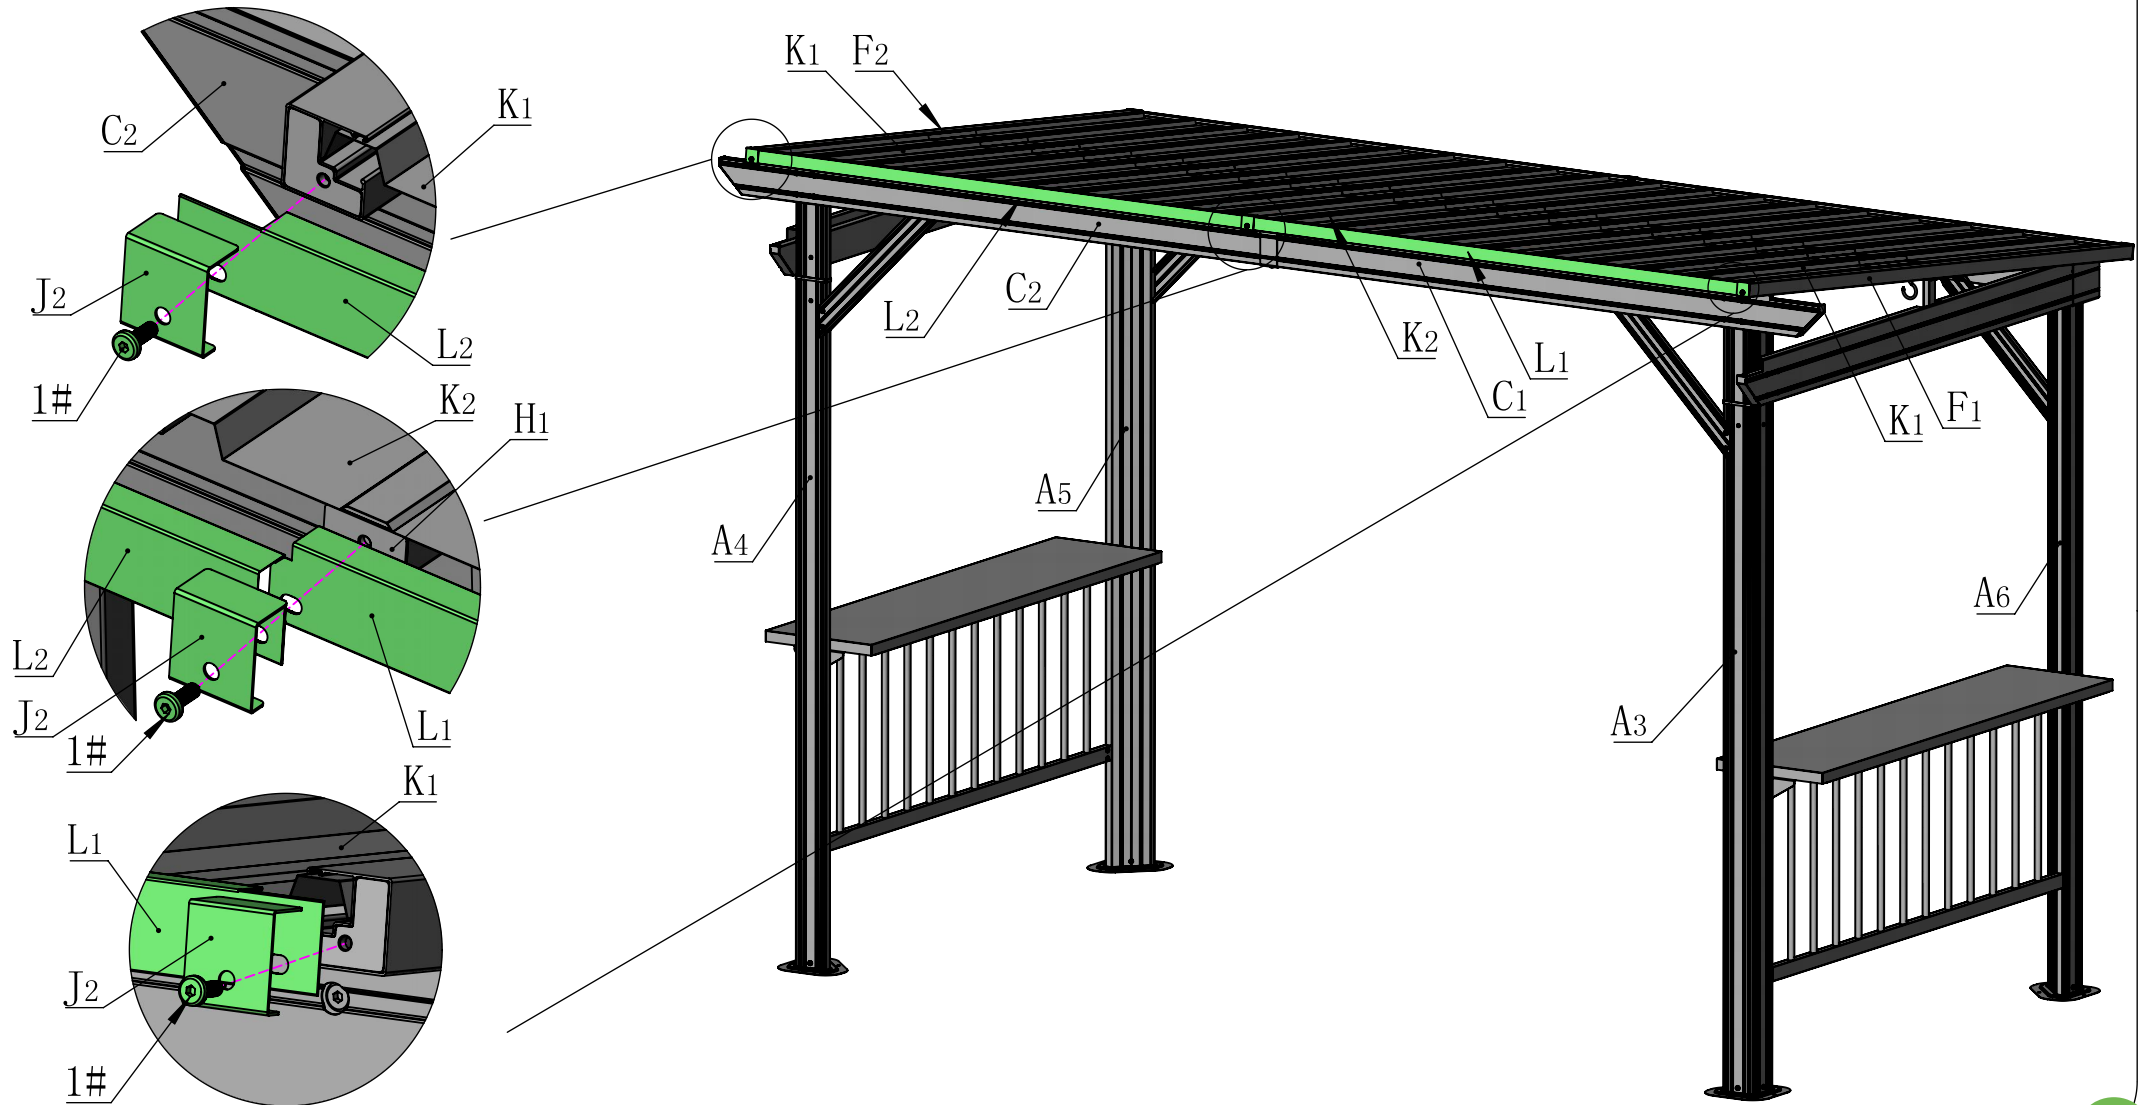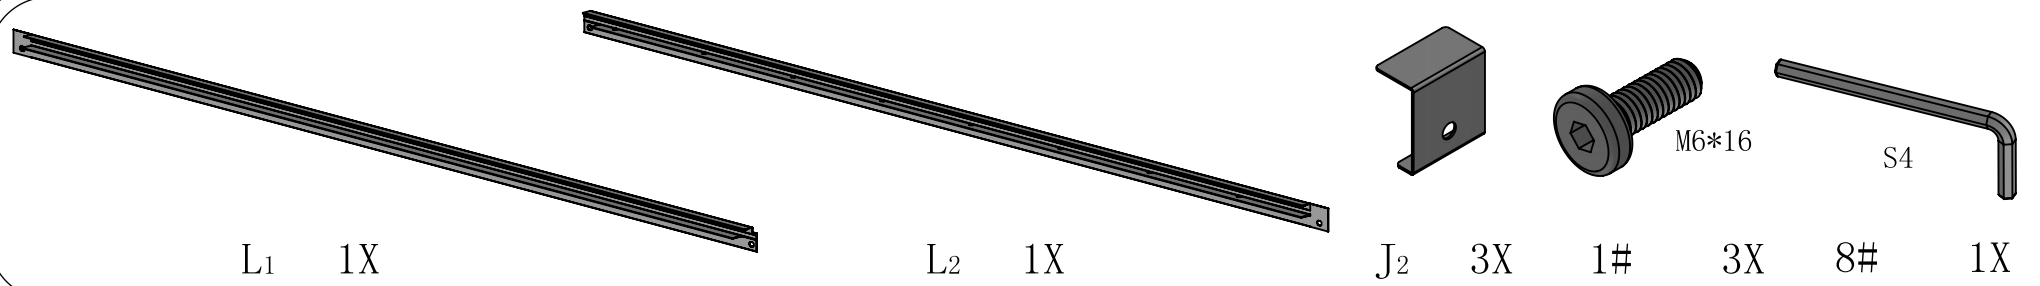

## **Care and Cleaning**

Wash frame parts and fabric with mild soap and water, rinse thoroughly.

Dry frame completely and allow the fabric to drip dry.

Do not use bleach, acid, or other solvents on the fabric or frame parts.

Please inspect and tighten all bolts or fasteners on a regular basis to ensure proper performance and safety of your gazebo.

# Warranty

## Frames

Frames constructions are warranted to be free from defects in material and workmanship for 1 year from item purchased. Damage to frame from negligence won't be covered by this warranty.

## Netting

Netting are warranted to be free from defects in material and workmanship for 1 year from item purchased. Damage from exposure to chemicals (including but not only oils ,spills, fluids) won't be covered by this warranty.

## Bolts & nuts

Bolts and nuts are warranted to be free from defects in material and workmanship for 1 year from item purchased. Damage from exposure to chemicals (including not only oils ,spills, fluids) won't be covered by this warranty.

## Warranty Limitation

This warranty is for the original purchase order only. (Order number required). This warranty is non-transferable. Domi outdoor living is responsible for the free replacement part including shipping charges for the 1 year warranty.

## Warranty Exclusion

This warranty does not cover products subject to negligence, abuse usage, inappropriate installation. Domi outdoor living reserves the right to explain warranty exclusions. When the replacement item is applied, the 1 year warranty automatically expires. Please feel free to contact us for applying warranty.

## RESORT COMFORT IN YONR OWN BACKYARD

**Support:**



**After-sales contact email:**

[service@domioutdoorliving.com](mailto:service@domioutdoorliving.com)

Please tell us your order ID when contact.

Attach photos of damaged part for instant reply.