
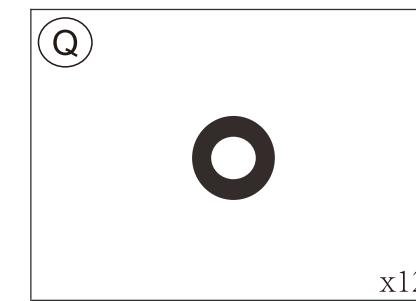
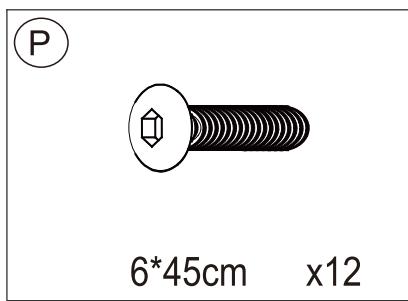
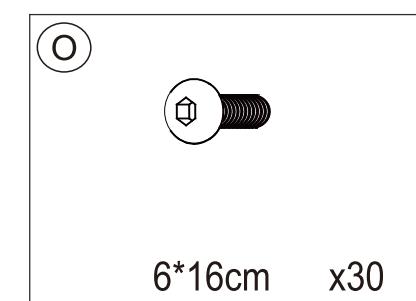
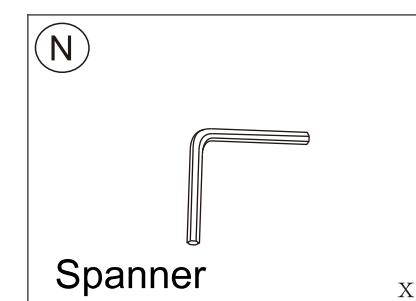
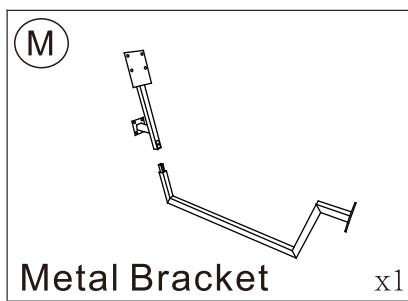
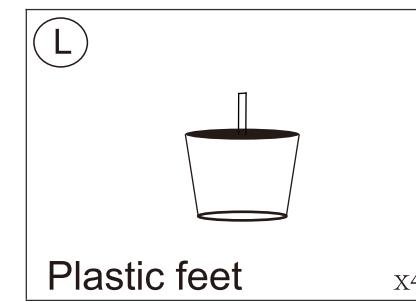
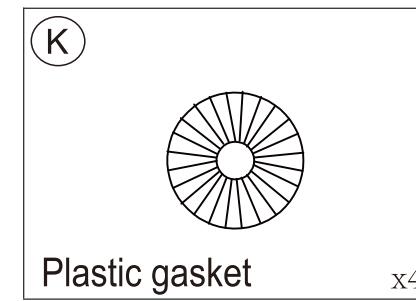
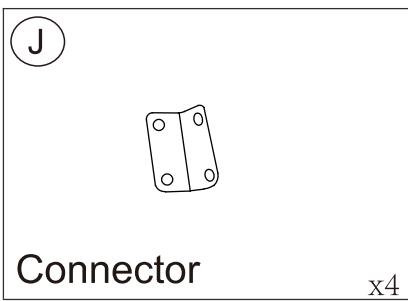
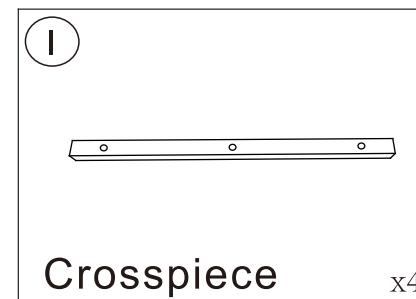
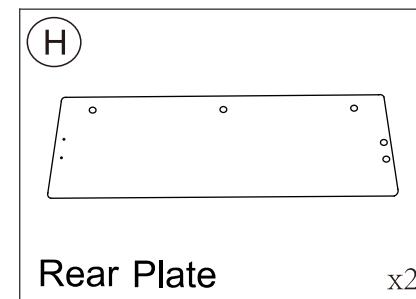
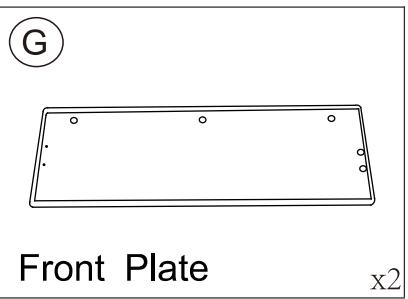
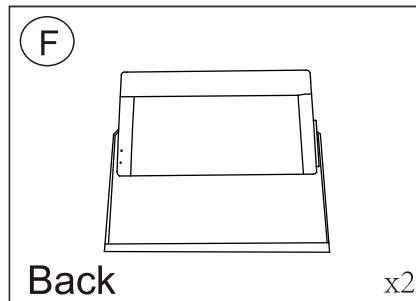
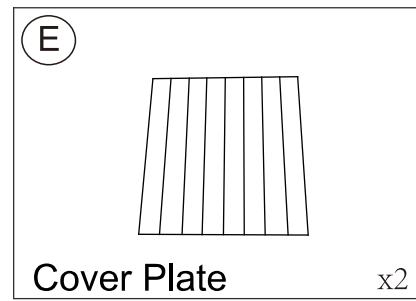
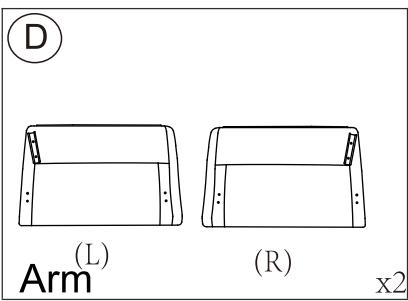
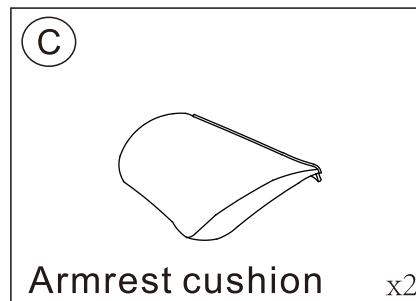
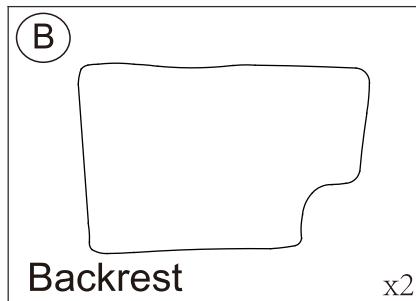



# INSTRUCTION MANUAL

## MODEL: 1352-2


## PACKAGE LIST

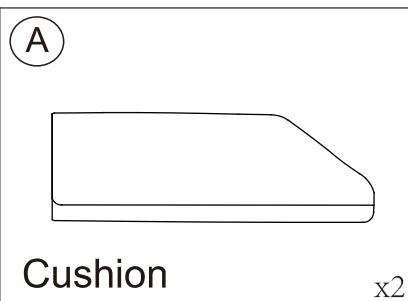

# ASSEMBLY INSTRUCTION 02

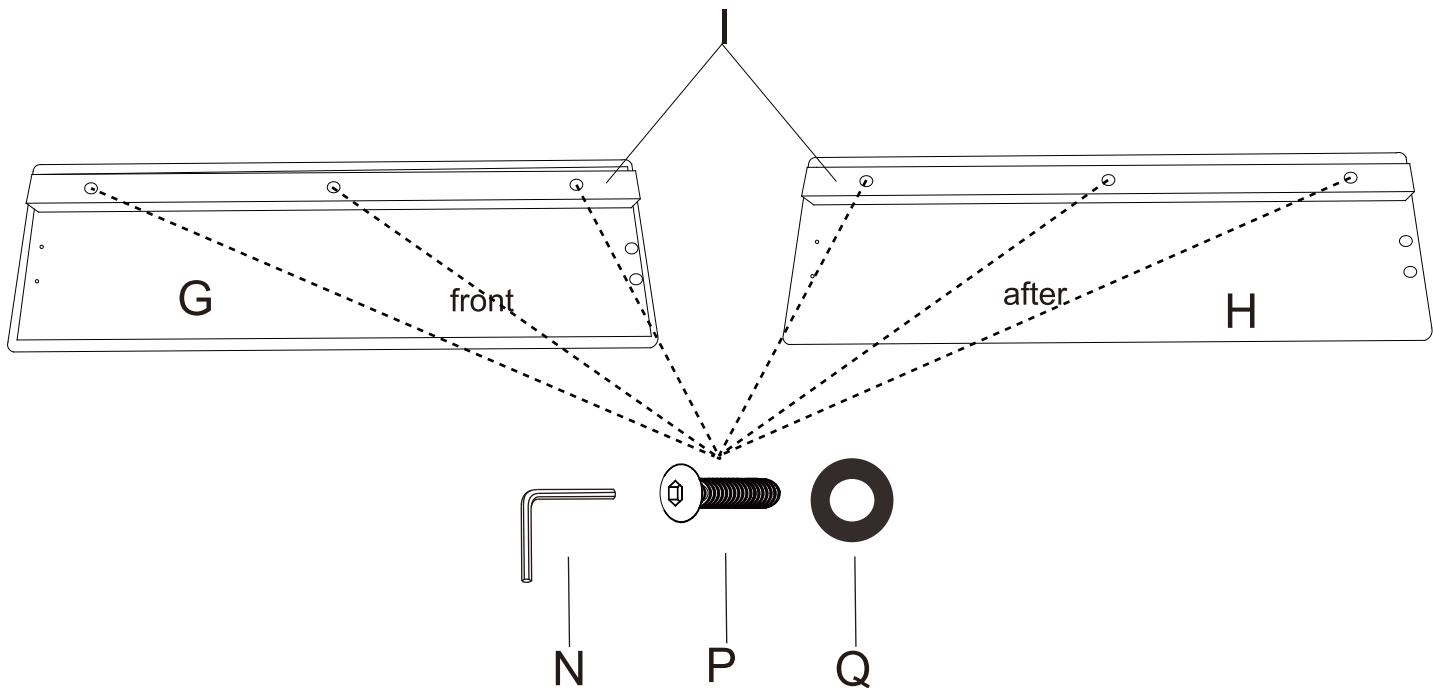


Install the crosspieces(I) onto the front and rear panels(G,H)

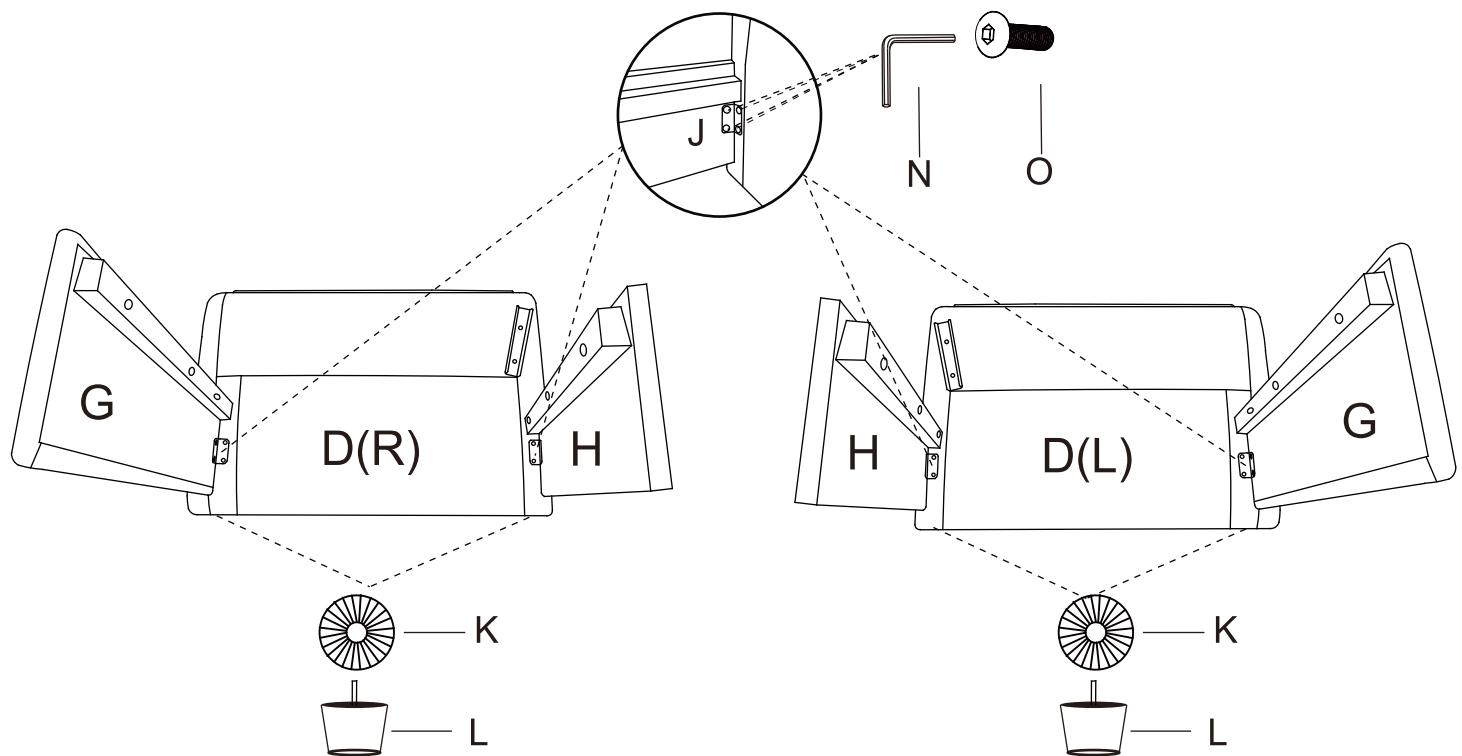


Connect the front and rear panels to the armrest using connectors, and install the plastic feet under the armrest

# ASSEMBLY INSTRUCTION 03

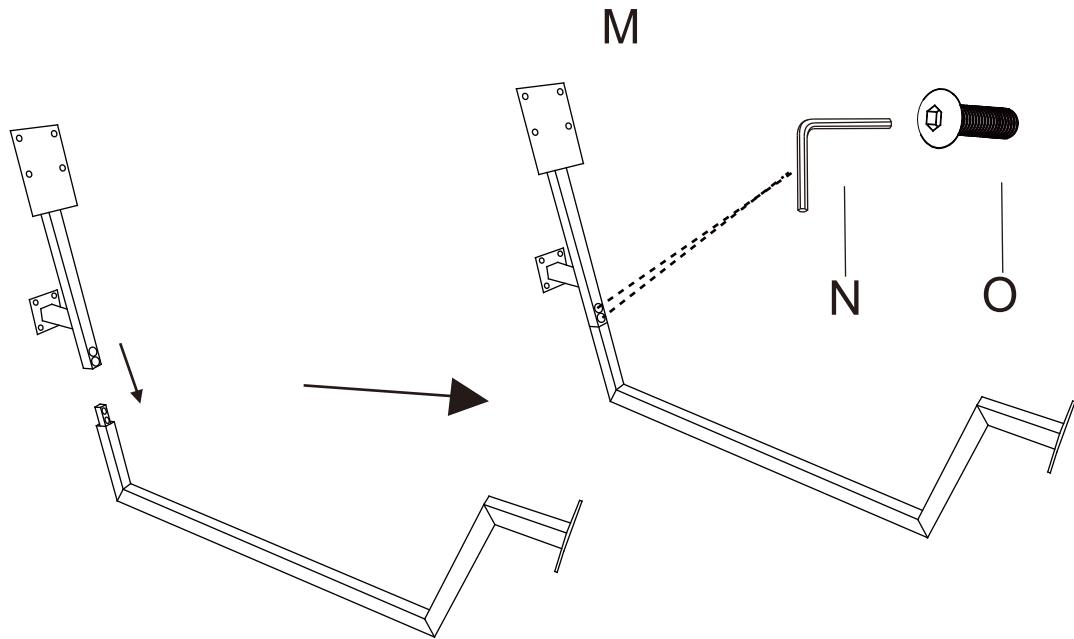


Connect two metal brackets with screws

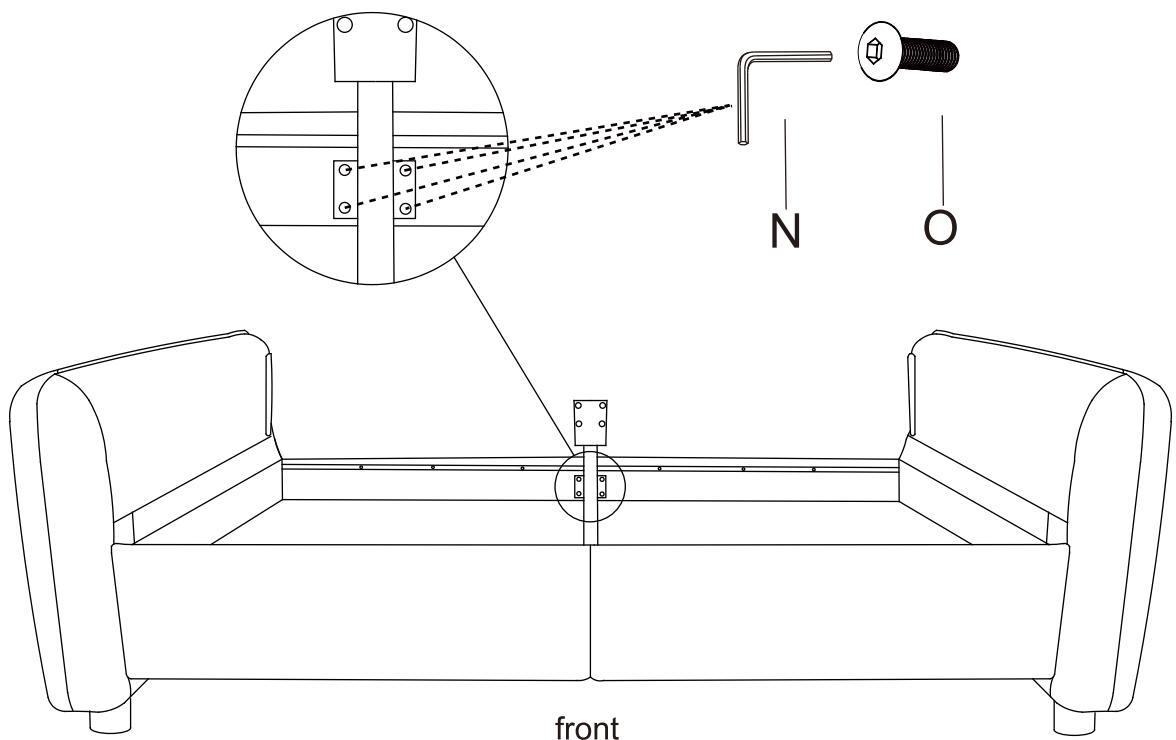


Fix the metal bracket as shown in the picture

# ASSEMBLY INSTRUCTION 04

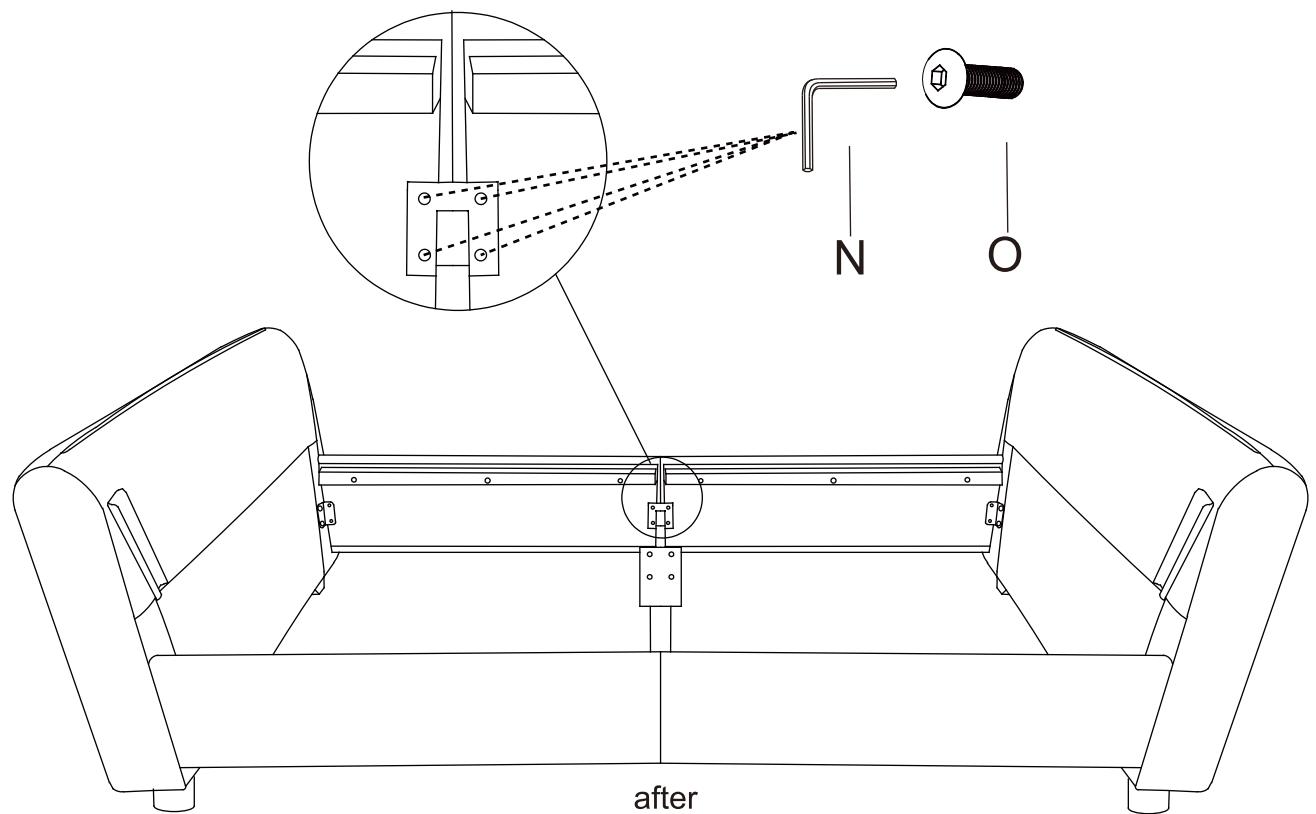


Connect two metal brackets with screws

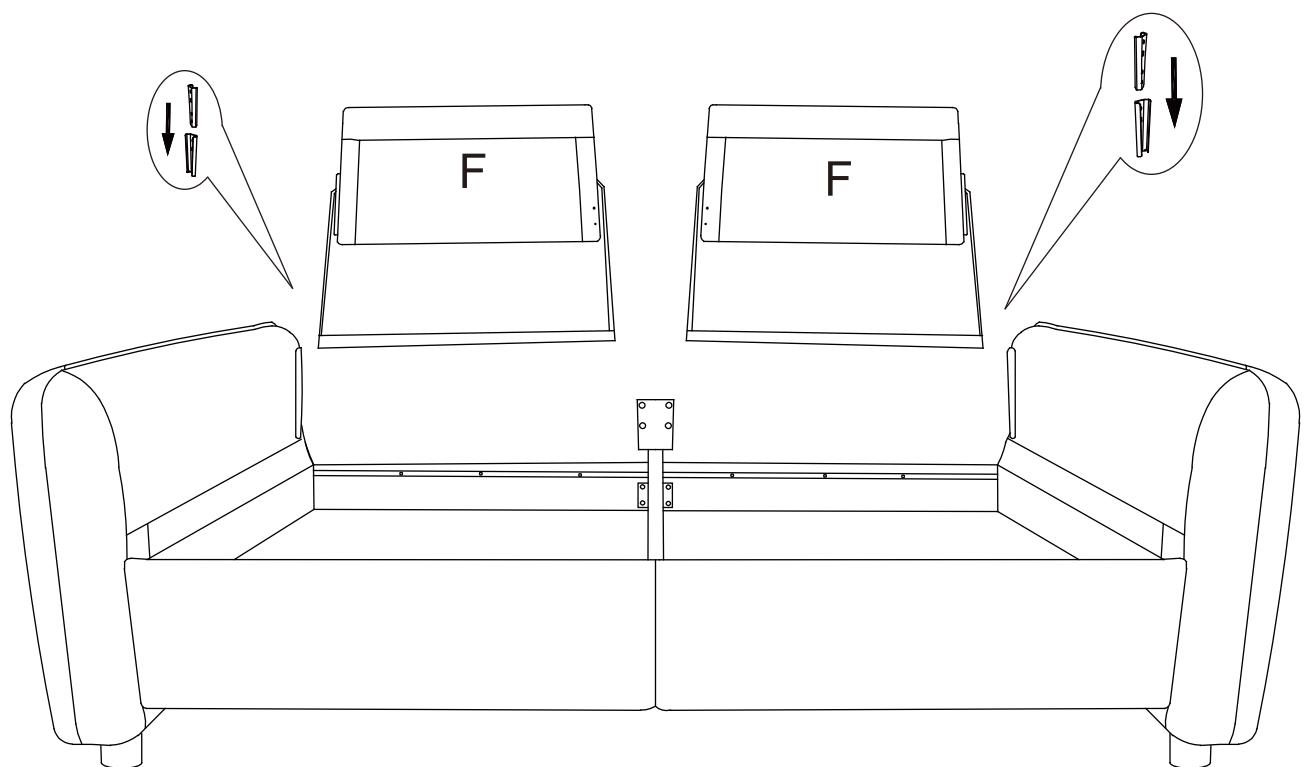


Insert the back frame.

# ASSEMBLY INSTRUCTION 05


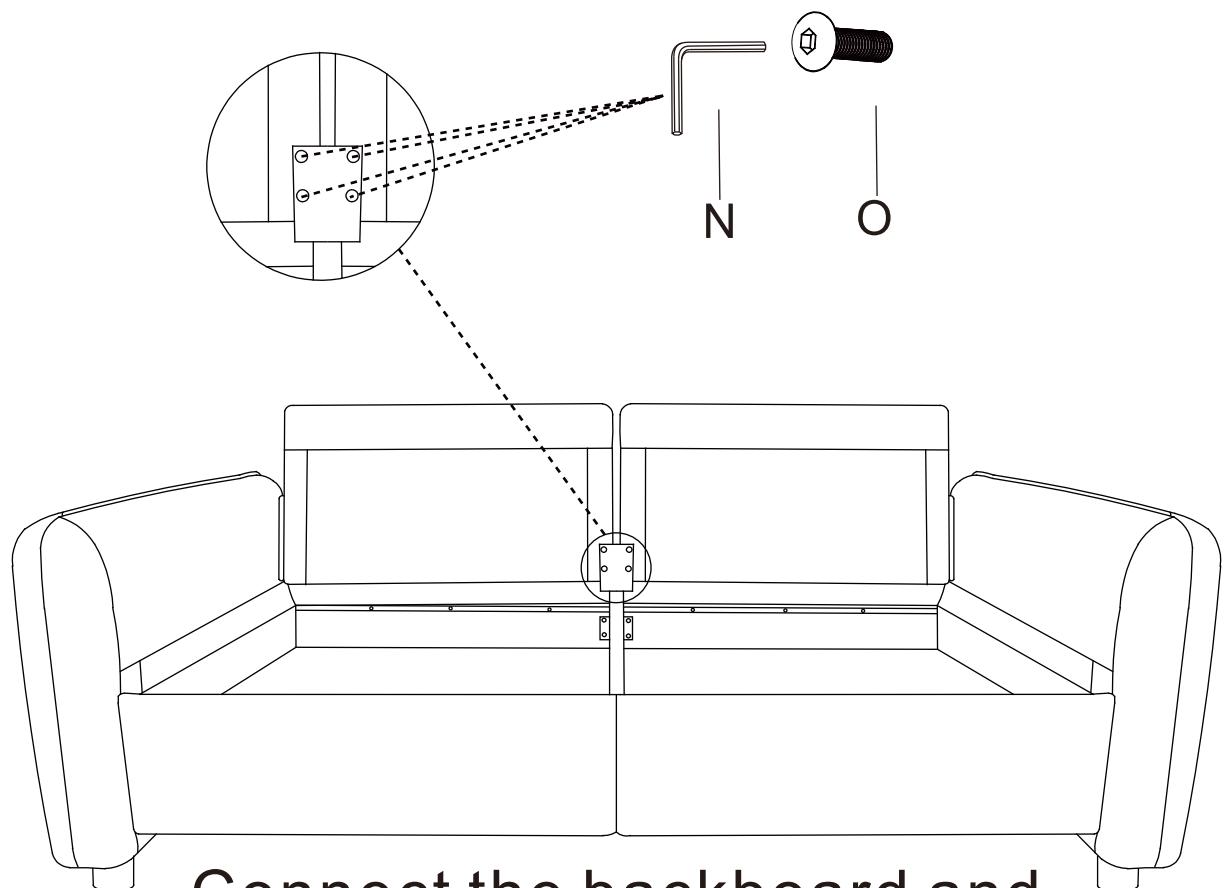


Connect the backboard and metal bracket with screws

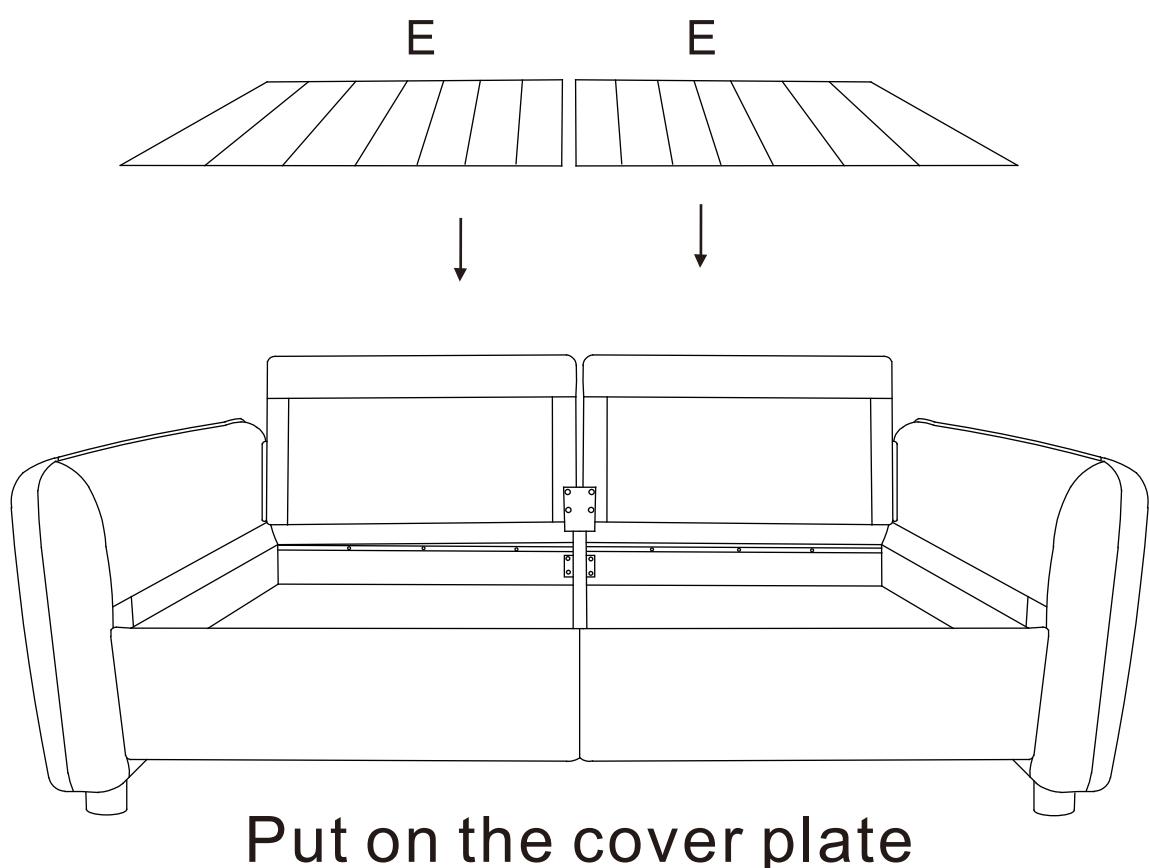


Put on the cover plate

# ASSEMBLY INSTRUCTION 06

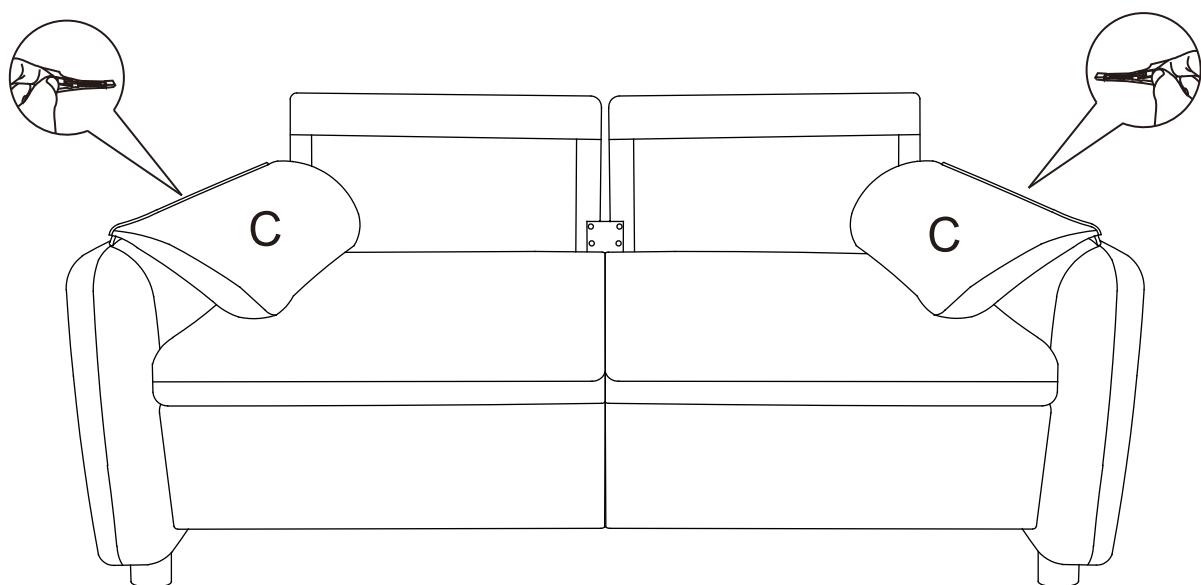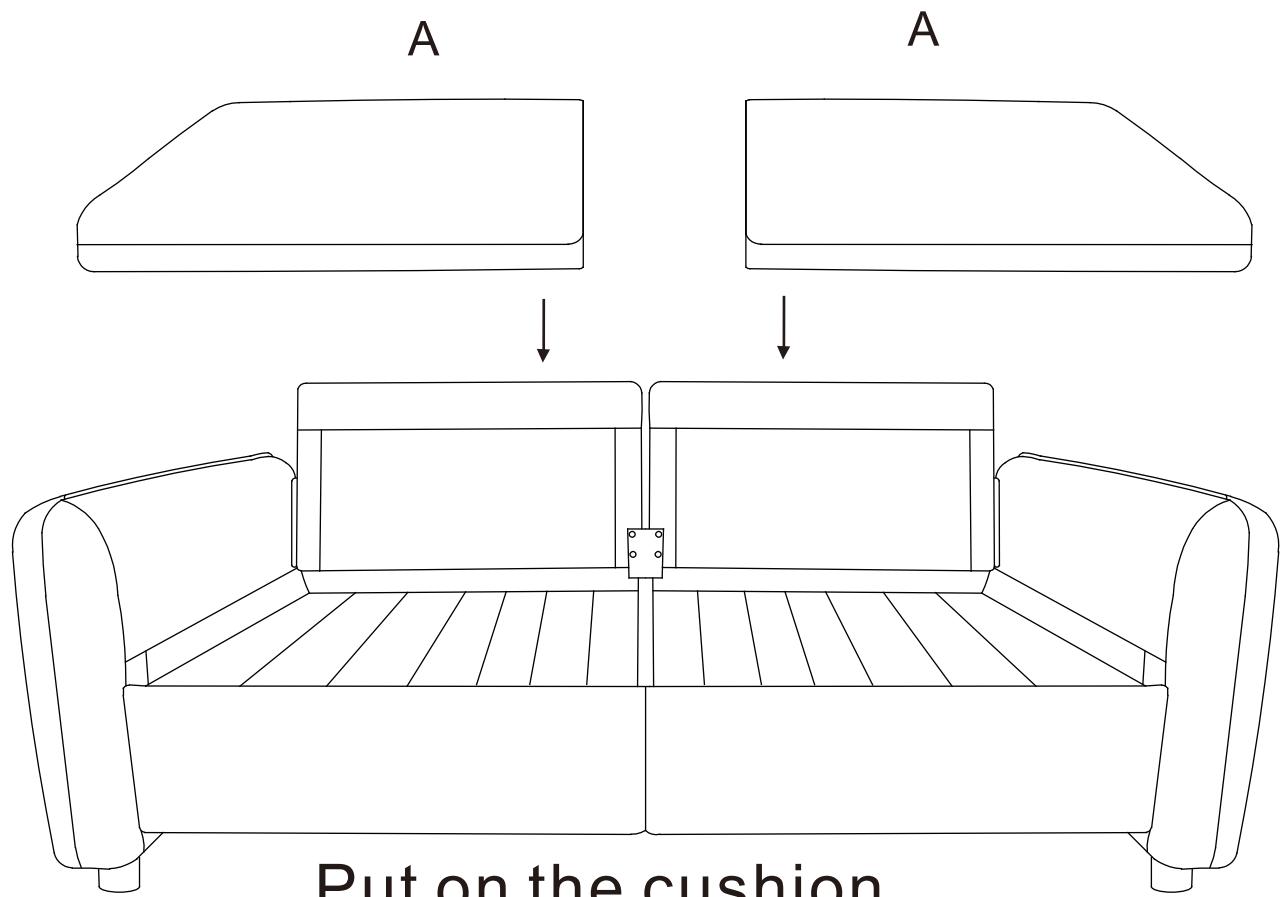


The armrest cushion is fixed on the armrest frame

# ASSEMBLY INSTRUCTION 07

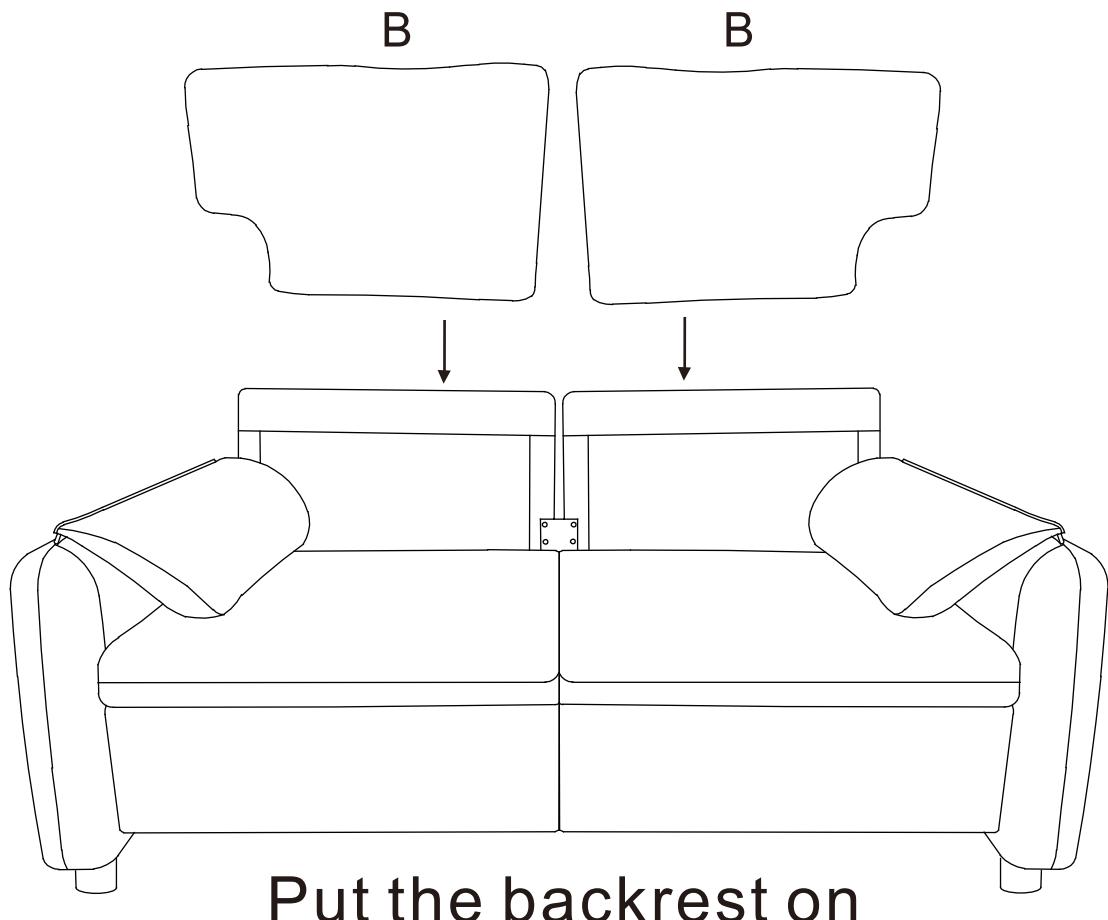

## Congratulations! You've assembled Your Sofa!

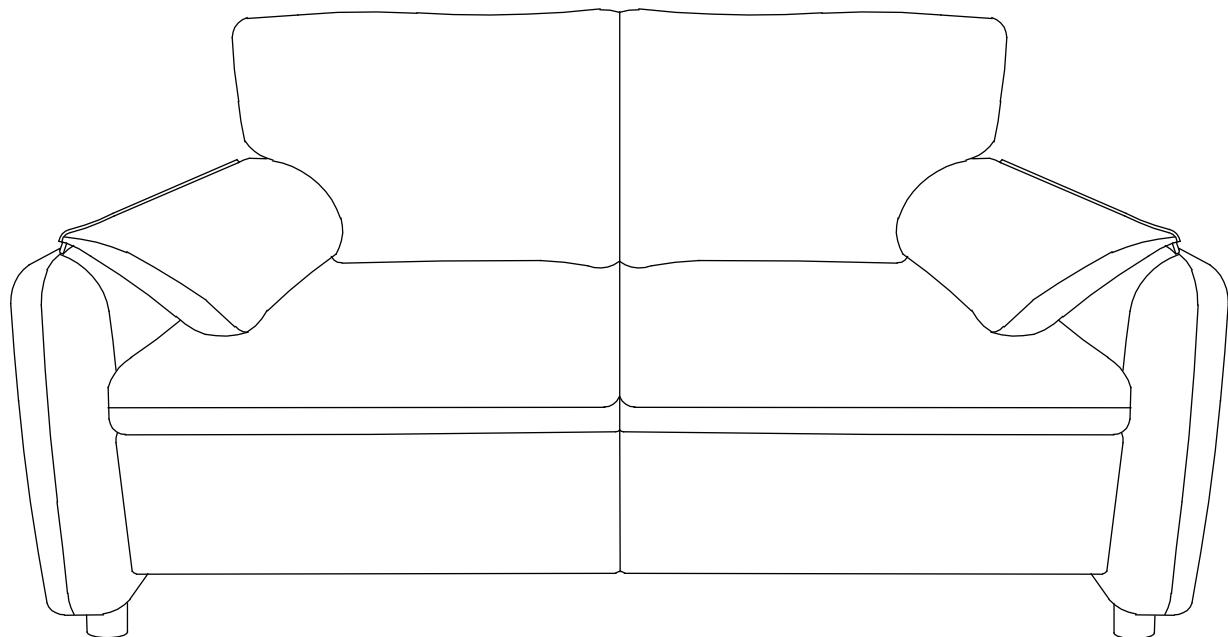

Note: Due to the compressed backrest, please repeatedly tap and adjust the backrest after product installation to help restore fullness. In about two days, you will receive a soft sofa bed as shown in the front desk picture.