
ASSEMBLY INSTRUCTIONS BATH VANITY-CABINET


SKU - N817P271077

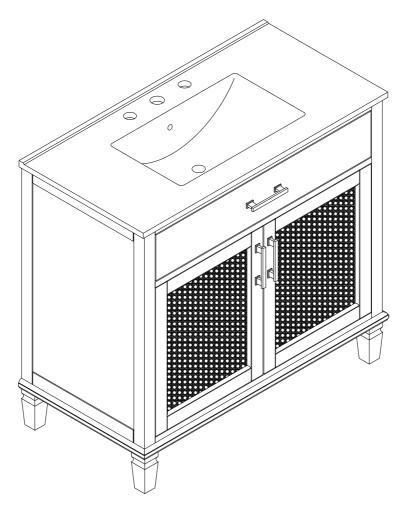

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.


DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED



IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE

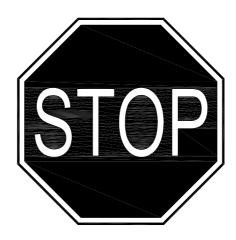

Please do not return this product to the retailer!! We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


Before Installation


Important- Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

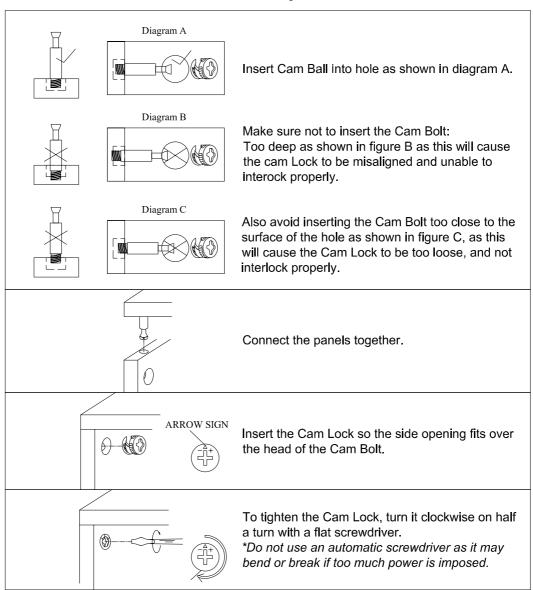


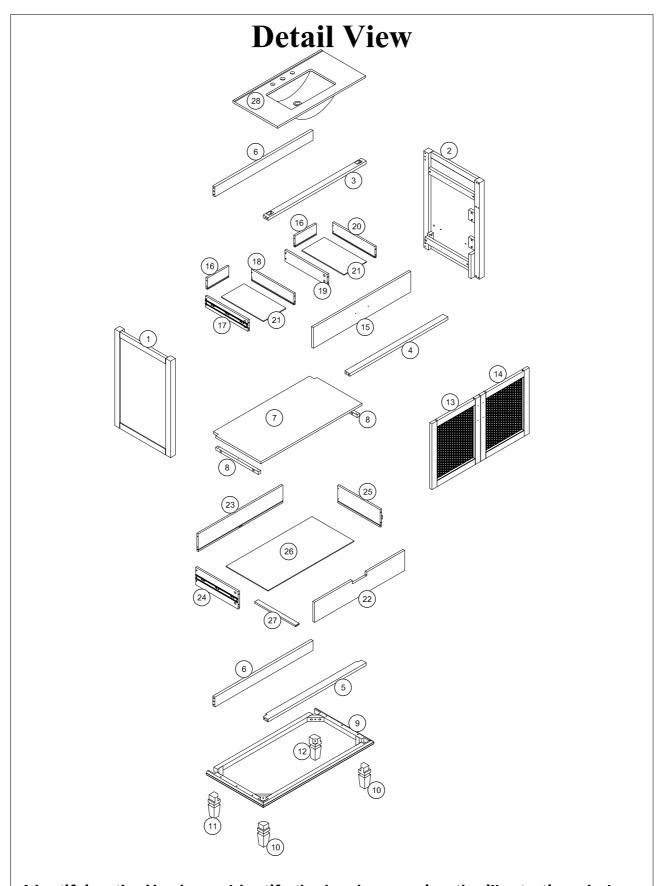


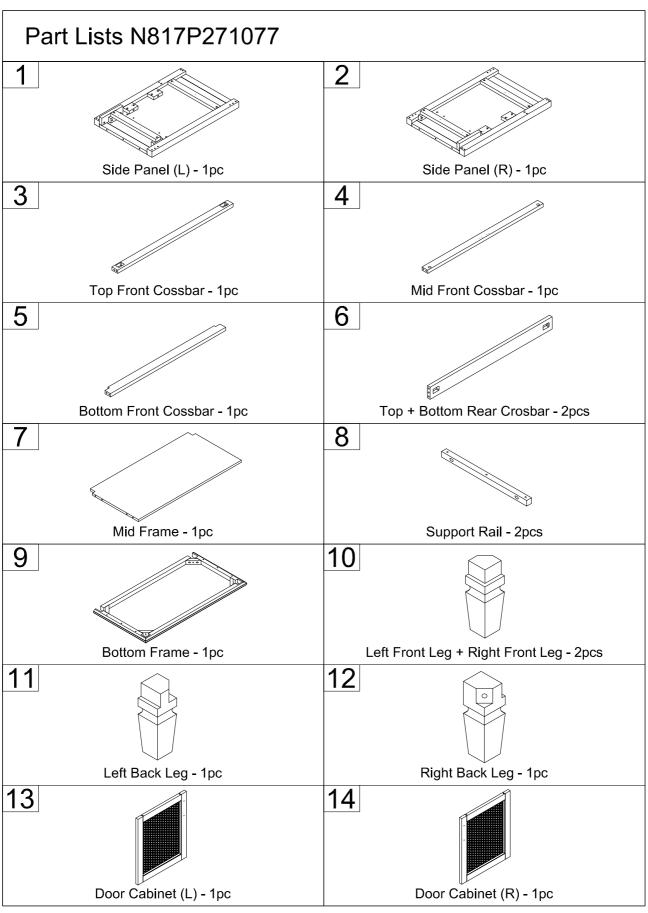


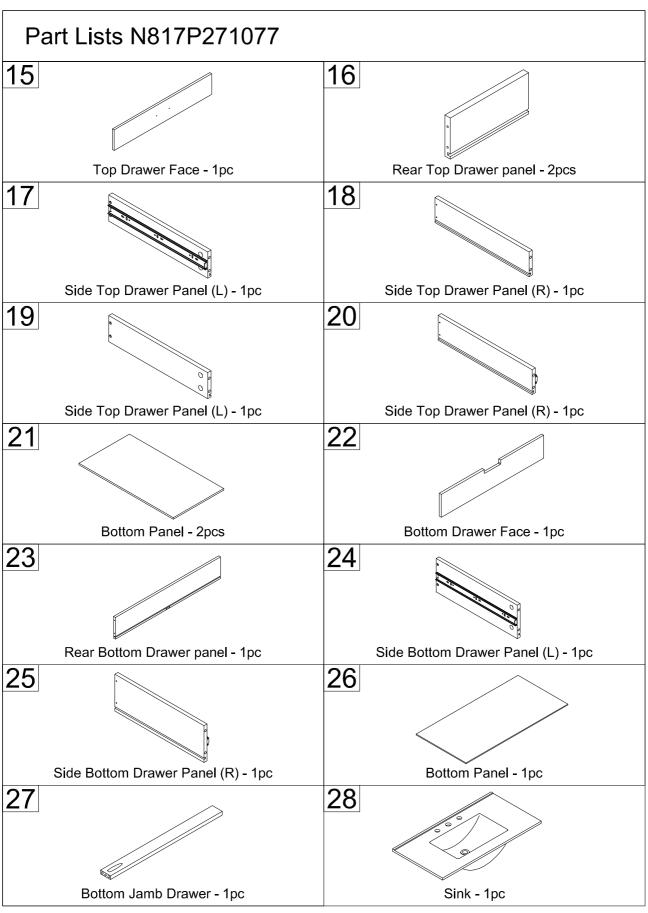



Hardware Lists N817P271077				
A		B		C
	G(0*200		GC*20	G14 5*0 5****
Woo	Ø8*30mm od dowel (16pcs)+1Pc	Thr	Ø6*32mm ee in on bolts (16pcs)+1Pc	Ø14.5*9.5mm Three in one locks (16pcs)+1Pc
D		E	ee iii oii boits (Topes): 11 e	
	Ones, Ones,			F
			Ø13xM6*30mm	Ø13xM6*50mm
Dar	mping hinge (4 sets)	Нє	ex-Head bolt (14pcs)+1Pc	Hex-Head bolt (4pcs)+1Pc
G		[H]		
	K4mm			Ø8xM4*20mm
A	llen key (1pc)+1Pc		Handle (3pcs)	Handle screw (6pcs)
	<u></u>	K	- AT	1
	45*12*1mm			
	45*17*14mm		Ø8xØ3.5*15mm	Ø8xØ3.5*15mm
	c Door Magnet (2 sets)		nd head screw (4pcs)+1Pc	Flat head screw (4pcs)+1Pc
M		N	30000000000000000000000000000000000000	O
	Ø10*10mm		Ø8xØ4*35mm	Ø8xØ3.5*12mm
Plastic	c Canopy (12pcs)+1Pc	Rour	nd head screw (12pcs)+1Pc	Flat head screw (12pcs)+1Pc
Р		Q		R
			E Marie	
Woo	Ø6*20mm od dowel (4pcs)+1Pc	Pou	Ø8xØ3.5*20mm and head screw (2pcs)+1Pc	Black slide Rail (4 pcs)
S	od dower (4pcs)+1FC	T	illu ileau sciew (zpcs)+iFc	
<u>S</u>				
Anti	fall Hardware (2 sets)	Sp	ring Washers (8 pcs)+1Pc	Washers (8 pcs)+1Pc
V	Left.			
	Dangangan			
	Ø8xØ4*25mm			
Flat head screw (6pcs)+1Pc				

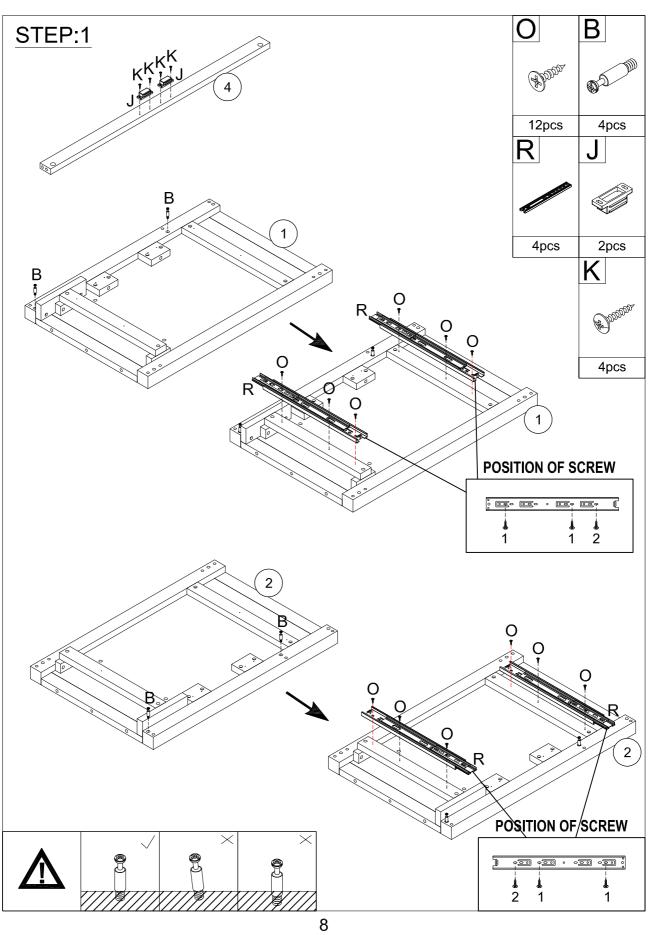


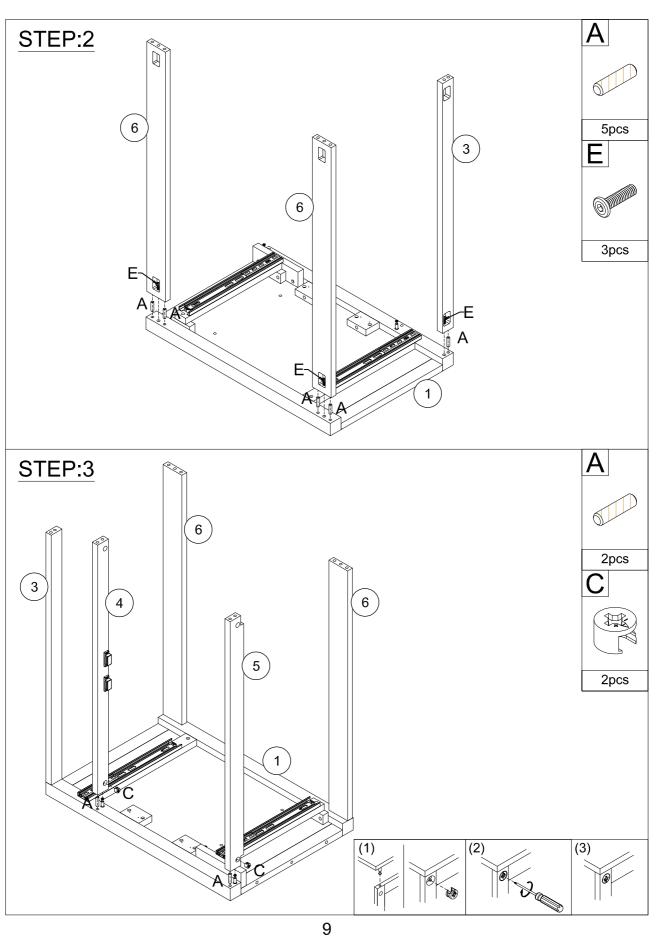


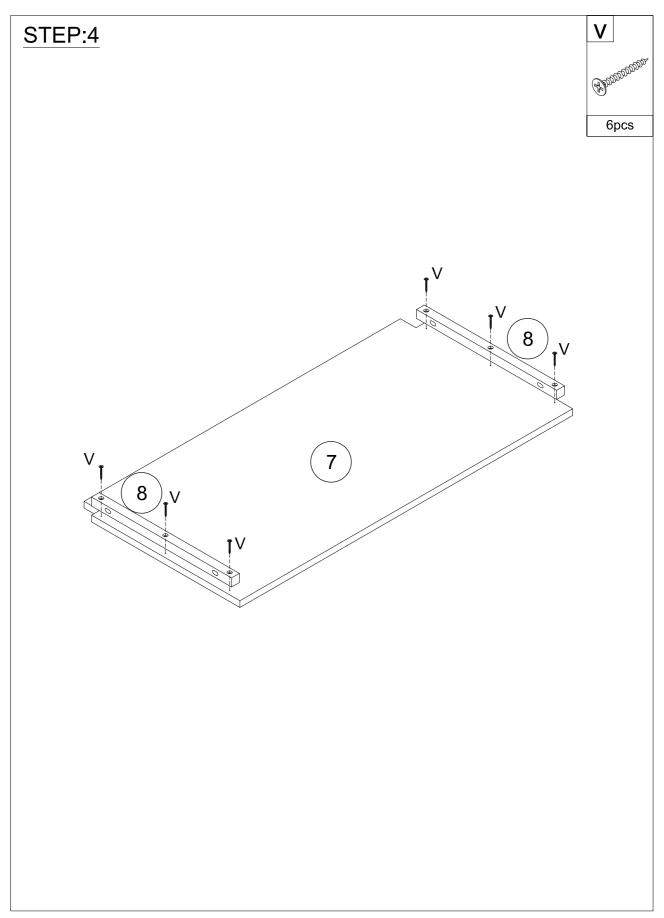


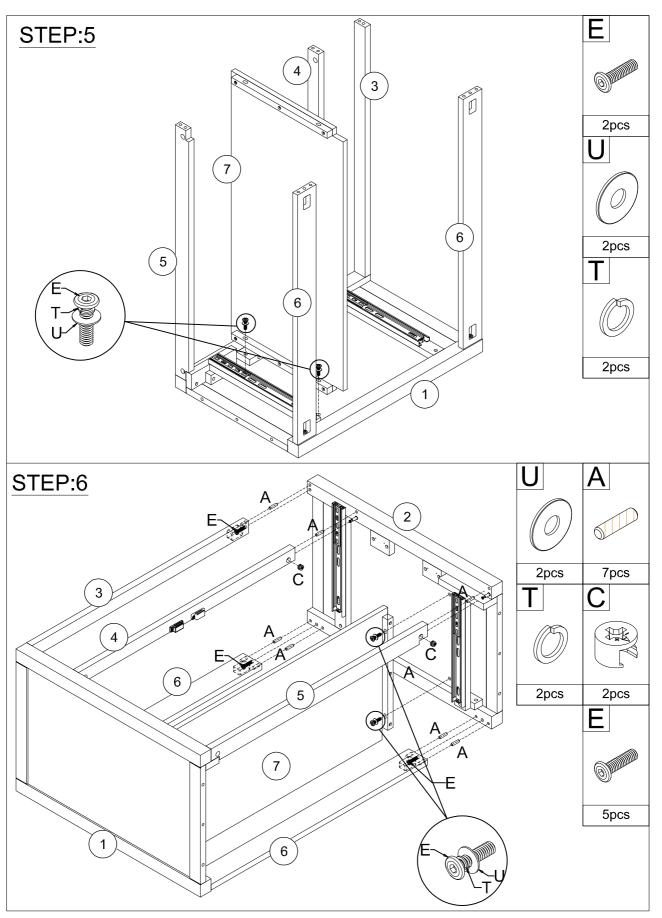


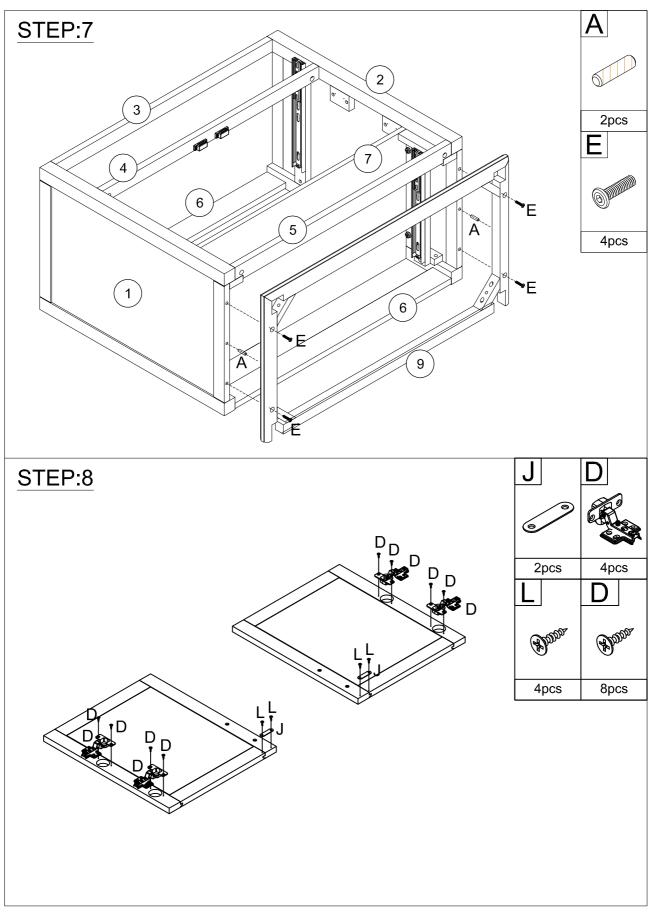


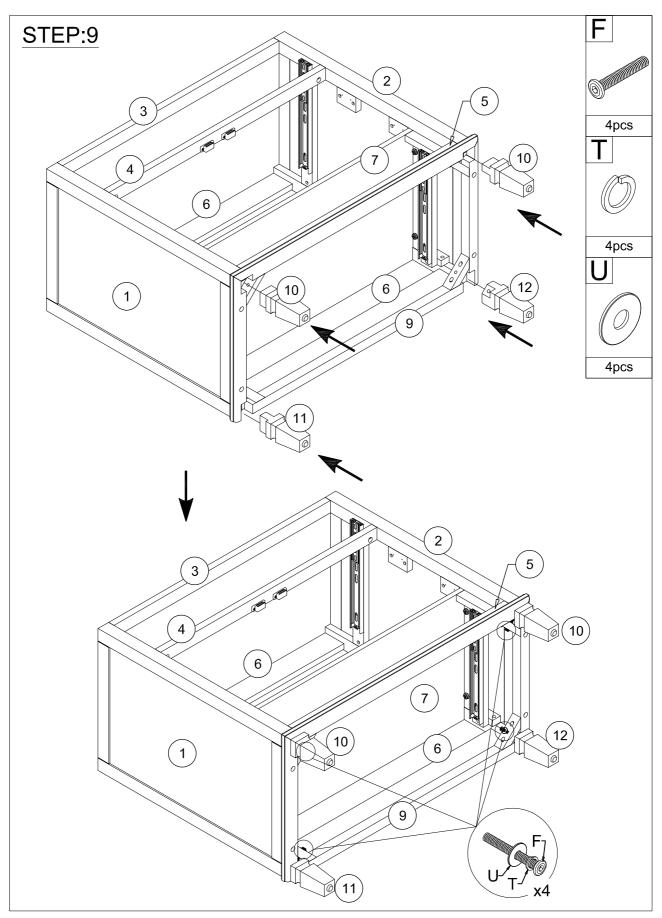


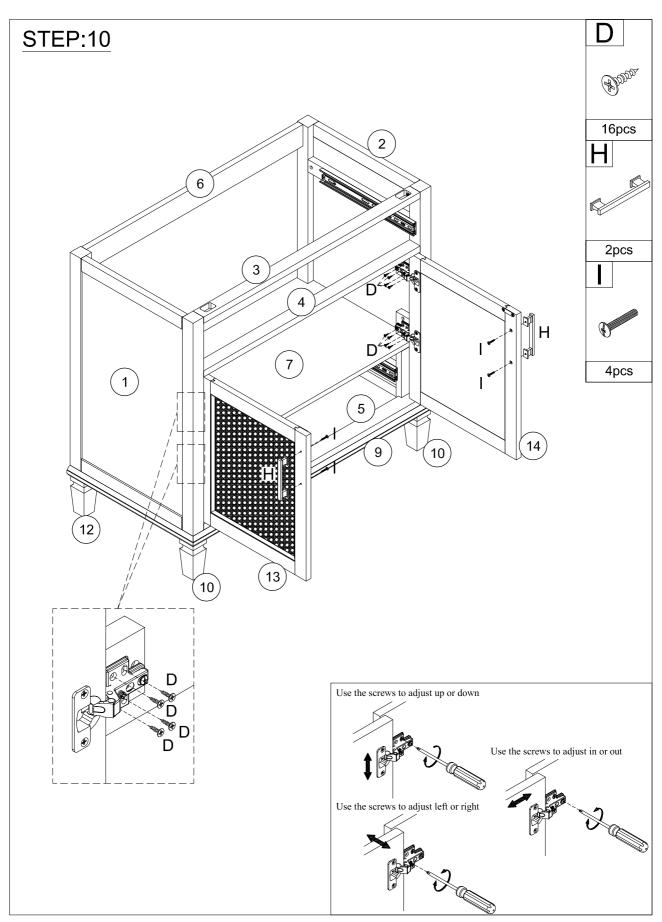


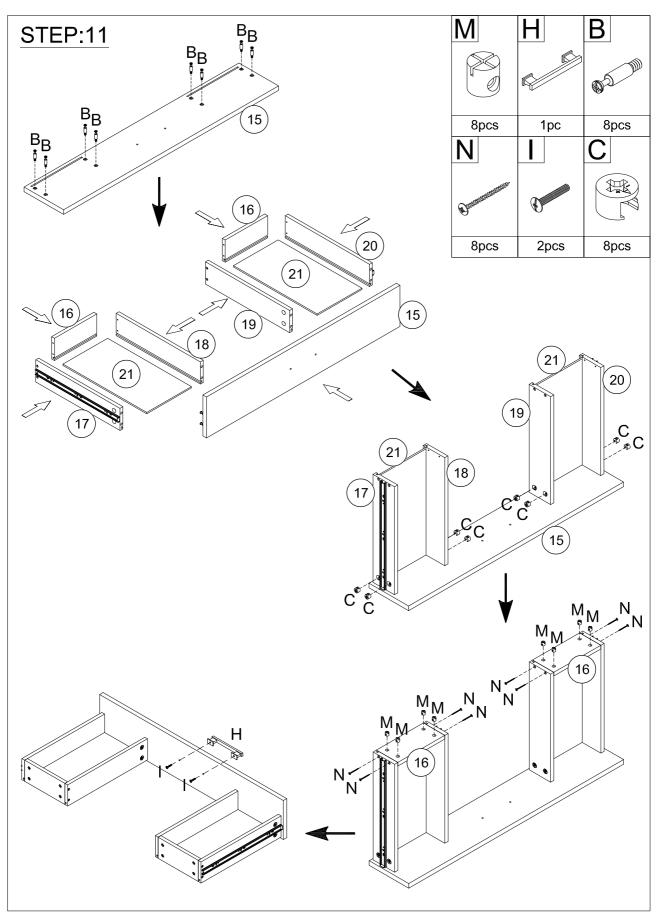

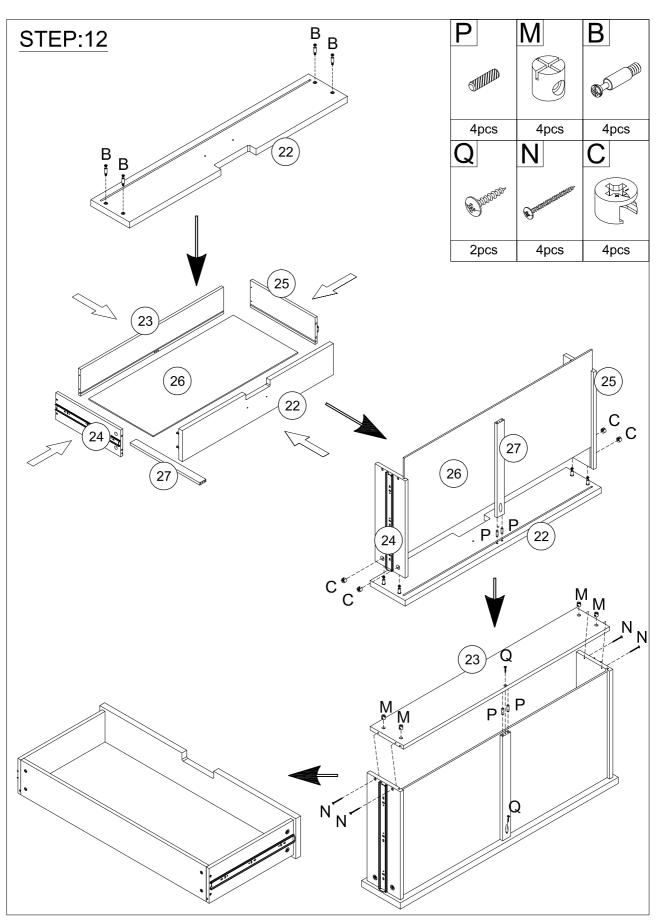


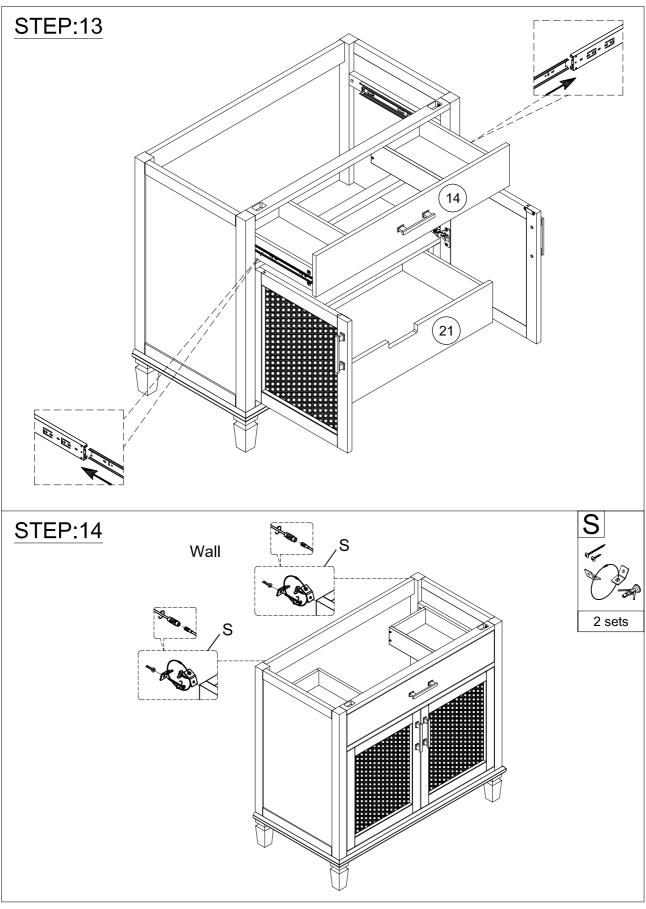

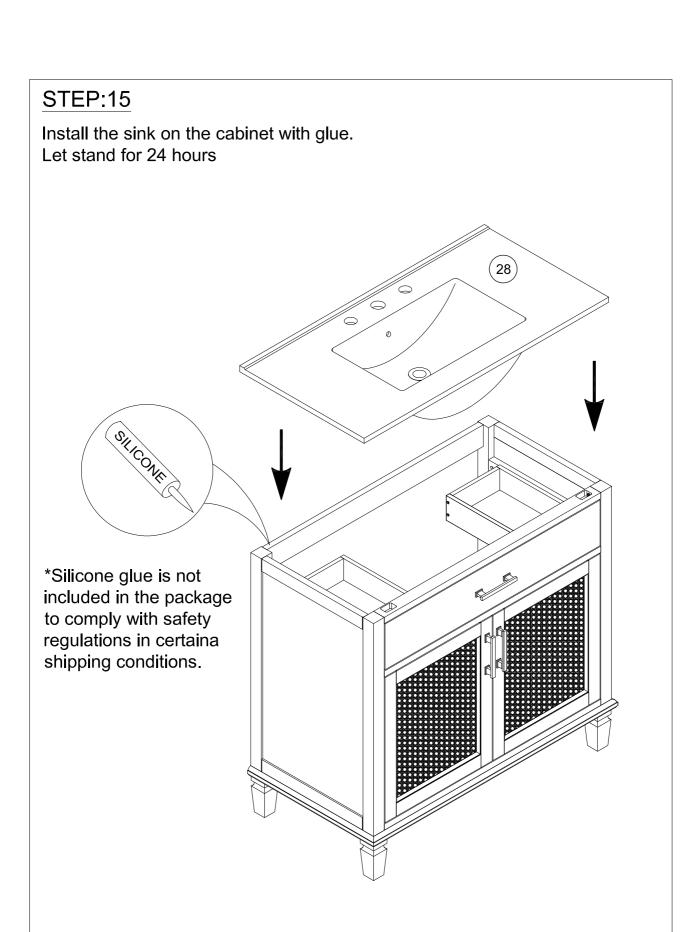

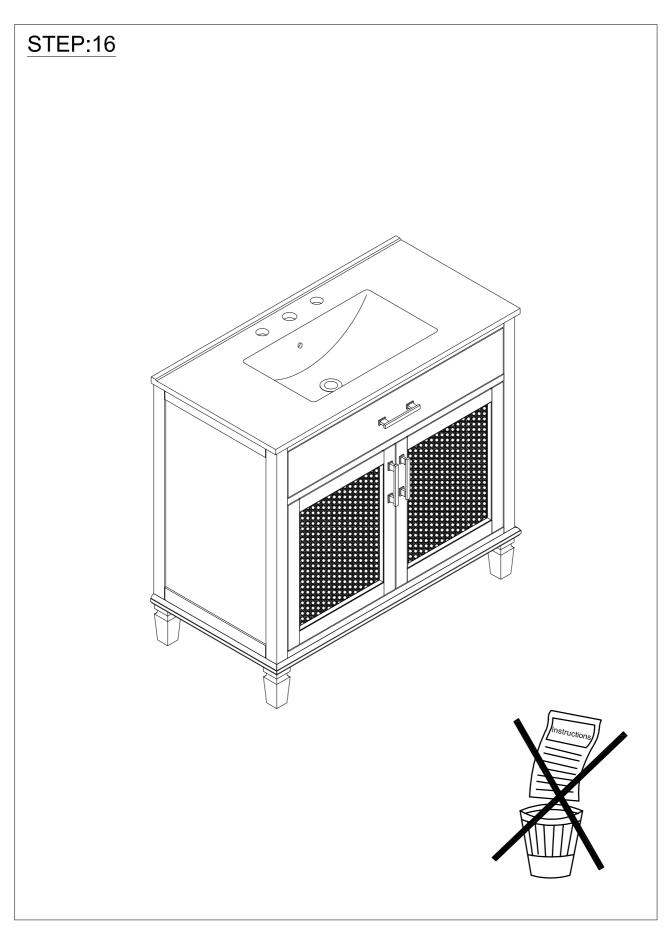

HINGE ADJUSTMENTS

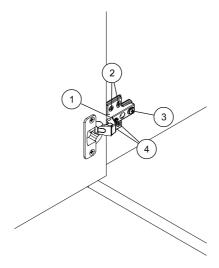

1 Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from
the side of the cabinet

anticlockwise to move the door closer to the
side of the cabinet



While supporting the weight of the door, turn the screws

clockwise to move the door up **anticlockwise** to move the door down

1) Forward and back adjustment

