




12' X 14' SUNROOM

ASSEMBLY MANUAL

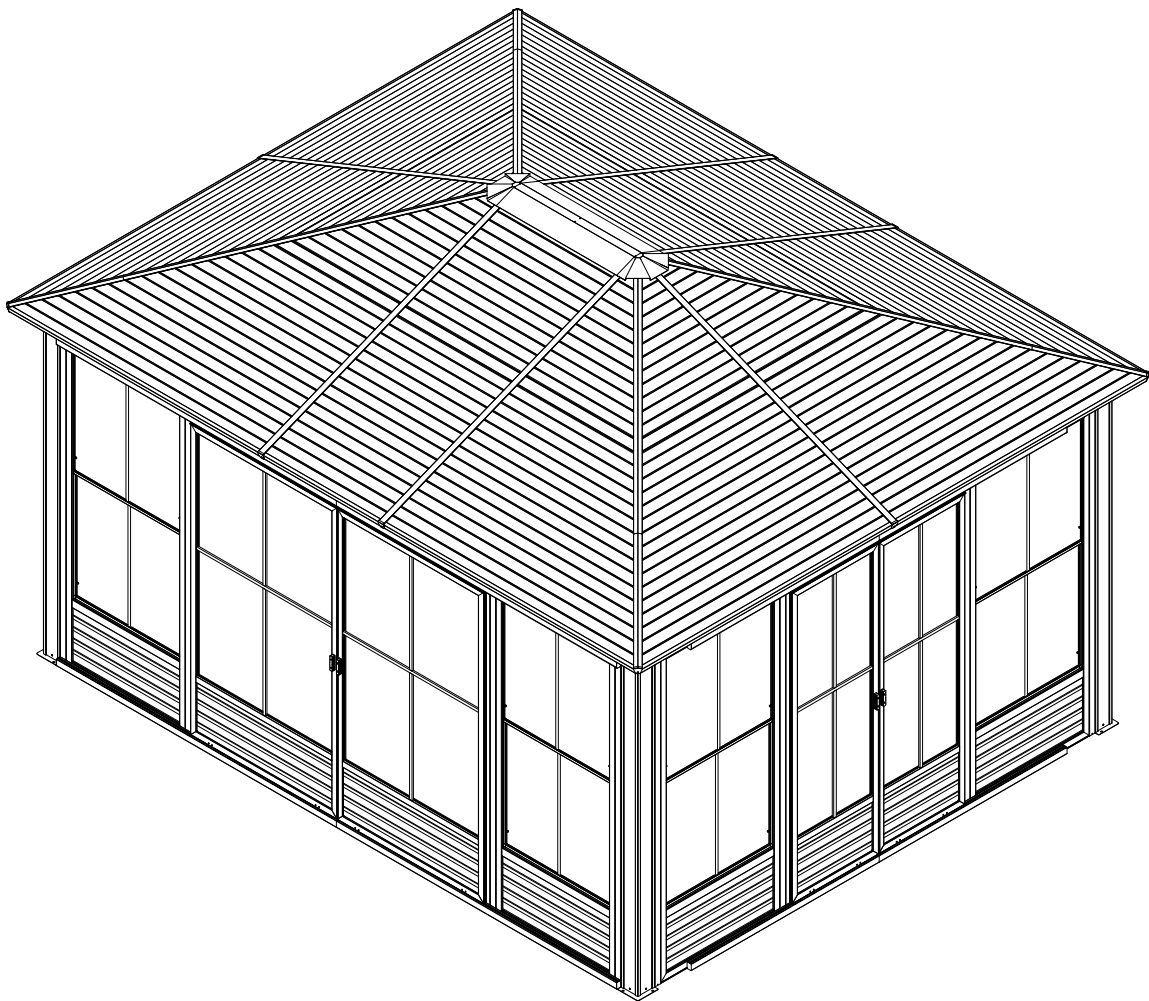

MODEL#::LGMF1503A

Missing part? Damaged? Contact us via email at

service@domioutdoorliving.com

www.domioutdoorliving.com

© Copyright 2023–2025 domi outdoor living LLC. All Rights Reserved.

THANK YOU FOR PURCHASING THE DOMI OUT LIVING® CHALET PAVILION.

- This manual will provide you with clear and detailed instructions on how to safely and correctly assemble and maintain your chalet pavilion, to ensure it brings you many years of use and enjoyment.

NOTICE

- **IMPORTANT:** A gazebo may entail purchasing a municipal permit or be subject to specific building codes. It is the consumer's responsibility to inform themselves of any restrictions.
- It is important to read and follow all safety information prior to assembly of the unit as well as during usage to reduce risk of injury and avoid damage to the product and its surroundings.
- It is highly recommended to avoid installing and settling your gazebo in a corridor of heavy wind.

OPERATION

- The gazebo is intended to be used as a shelter, Do not use this product for anything other than its intended use.
- Your shelter has been designed to be enjoyed during all four seasons and will resist snow accumulations up to 2000 lbs (907 kg). For your comfort and safety, it is recommended not to use the gazebo during sub-zero temperatures.
- **WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM ALL FABRICS.**
- Do not place any type of space heater, heat conductor, or exposed flame under or within 5 feet of the gazebo.
- The fabrics meet the flammability requirements of the CPA1-84, The fabrics may burn if they are in continuous contact with a flame. Any foreign substance applied directly to the fabrics may weaken the flame-resistant properties.
- Avoid using excessive force while opening or closing the mosquito netting. When tying the netting to the columns, be mindful not to make the Velcro tangle with the netting.
- Do not suspend or hang from the structure any objects exceeding 15 lbs (6.8 kg).

MAINTENANCE AND CARE

- Check periodically that the gazebo is anchored properly to the floor or ground and that all bolts remain tight to maintain the solidity of the structure.
- Remove any foreign objects from the roof in order to avoid damages. Remove any snow accumulation on the roof at all times.
- Make sure there is no ice buildup anywhere on the main structure.
- Remove all accessories during the winter.
- To order replacement parts refer to the model # of the unit as well as part # in the parts list.

PLANNING INSTALLATION AND SAFTY

A. Keep this user guide and parts list for future Reference.

- Make sure that the boxes contain all the parts prior to assembly.
- Follow all assembly instructions for proper construction.
- In order to avoid damages to the shelter and its components, place all parts on a soft surface and use appropriate tools during assembly.
- Do not assemble the gazebo during periods of heavy wind or rain.

B. It is highly recommended to avoid installing your gazebo in a corridor of heavy wind.

- You must schedule enough time to complete the assembly. For safety issues, you must not leave the unit unattended if it is not fully assembled, The assembly will take approximately 4 to 5 hours.

C. A minimum of 2 people are required to assemble the gazebo.

- This unit must be assembled on a level platform(wood deck, stone tile or anchored using appropriate screws for that flooring.
- Be sure to keep all children and pets away from assembly area.

- To avoid damages, the gazebo should be assembled no less than 5 feet from any fixed obstruction.
- During assembly, do not use the structure as a support. Use a stepladder when necessary.
- Some parts contain sharp edges. Wear protective gloves when handling these parts. It is also recommended to wear protective goggles (safety glasses) and closed shoes.
- It is recommended to tighten all bolts and screws once a step is completed.

TOOLS AND EQUIPMENT REQUIRED (NON INCLUS)

- Note: Tools and equipment are not shown to actual size and scale.




Rubber Mallet




Phillips screw driver



Drill

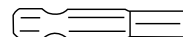

5/32" bit

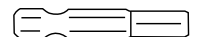

7/32" bit



Safety hat



Gloves



Safety goggles




Stepladder




Level




A 4x Column

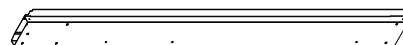


C 2x Crossbeam

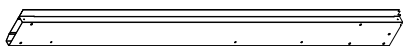

C1 2x Crossbeam

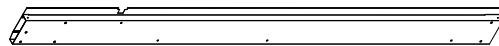

C2 2x Crossbeam

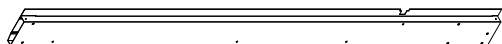

C3 2x Crossbeam





D 4x Corner Roof Bar





D1 6x Roof Bar




D2 4x Corner Roof Bar

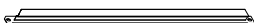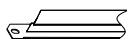


E 4x Support Bar

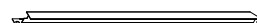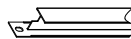

E1 4x Support Bar

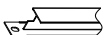

E2 4x Support Bar

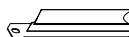

F 4x Support Bar



F1 4x Support Bar




G 4x Finishing End Bar




G1 4x Finishing End Bar



G2 2x Finishing End Bar

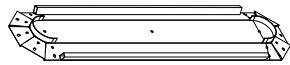


(H) 1x Inside Roof Connector

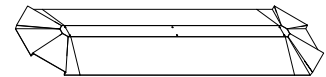


(H1) 1x Outside Roof Connector




(J) 8x Screen Panel

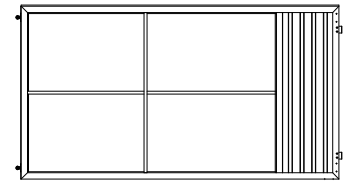


(J1) 2x Sliding Screen Door

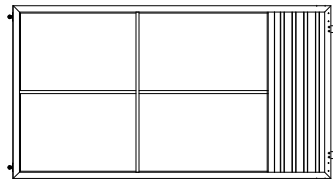


(J2) 2x Sliding Screen Door

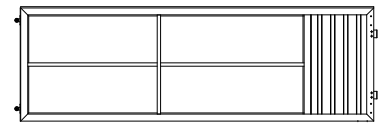

(J3) 2x Sliding Screen Door

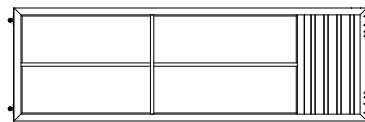

(J4) 2x Sliding Screen Door

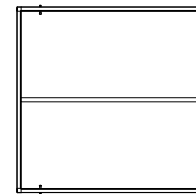

(K) 16x Mica Window



(L) 8x Frame Tube



(L1) 2x Frame Tube



(L2) 2x Frame Tube



(L3) 2x Frame Tube



(L4) 2x Frame Tube









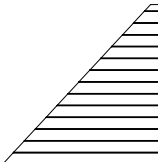
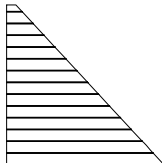
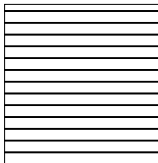
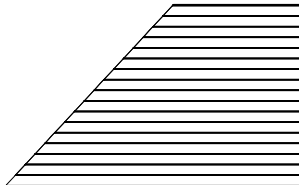
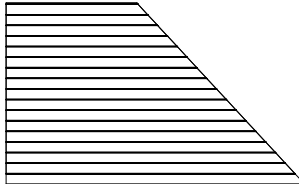
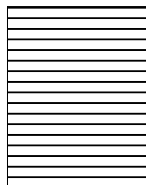
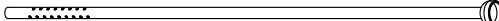

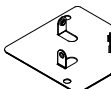
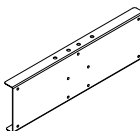
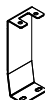
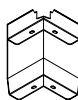

(M) 2x Track



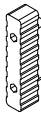
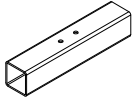



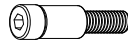
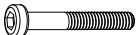






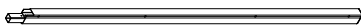





(M1) 2x Track





(M2) 2x Track

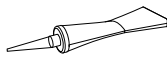	 <div>M3 2x Track</div>	 <div>N 2x Track</div>		
	 <div>N1 2x Track</div>	 <div>N2 2x Track</div>		
	 <div>N3 2x Track</div>	 <div>P 32x Panel Connector</div>		
	 <div>Q 4x Roof Panel</div>	 <div>Q1 4x Roof Panel</div>		
	 <div>Q2 2x Roof Panel</div>	 <div>R 4x Roof Panel</div>		
	 <div>R1 4x Roof Panel</div>	 <div>R2 2x Roof Panel</div>		
	 <div>AA 1x Temporary Support Pole</div>	 <div>BB Temporary Support Pole</div>		
 <div>B 4x Base</div>	 <div>C4 4x Beam Connector</div>	 <div>S 4x Gap Cover</div>	 <div>S1 4x Corner Cover</div>	 <div>T 4x Finishing End Plate</div>

	 T1 6x Finishing End Plate	 U 24x Panel Connector	 V 16x Door Handle	 V1 4x Track Connector
	 W 20x Roof Panel Plug	 1 156x M6x16	 2 3x M6x20	 3 16x M6x35
	 4 64x M6x55	 5 16x M4x50	 6 32x ST5x16	 7 8x ST4.8x16
	 8 64x ST3.5x15	 9 1x S4	 10 16x M5x6	 11 1x Silicone Sealant
	 CC 1x	 DD 1x		

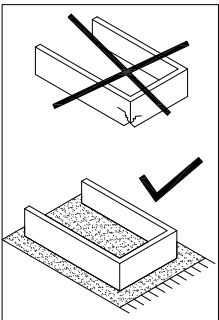

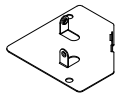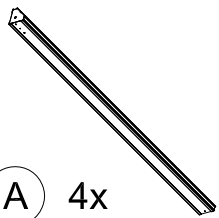

1


12x




9

1x

POLE ASSEMBLY:

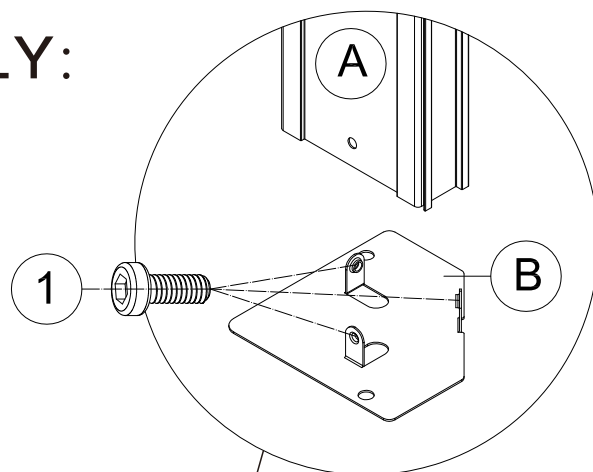


A

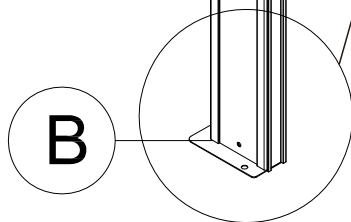


X4


CROSSBEAM ASSEMBLY

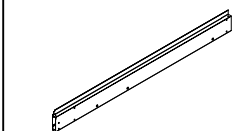


C 2x

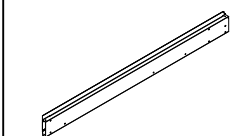


C1 2x

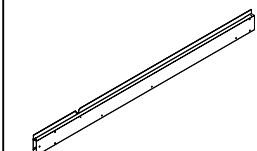


C2 2x

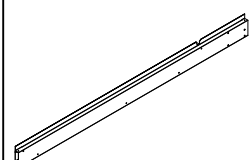

C3 2x

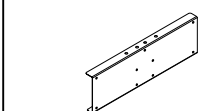

C4 4x

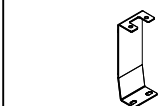

S 4x





M6x16

1 32x




ST5x16

6 16x

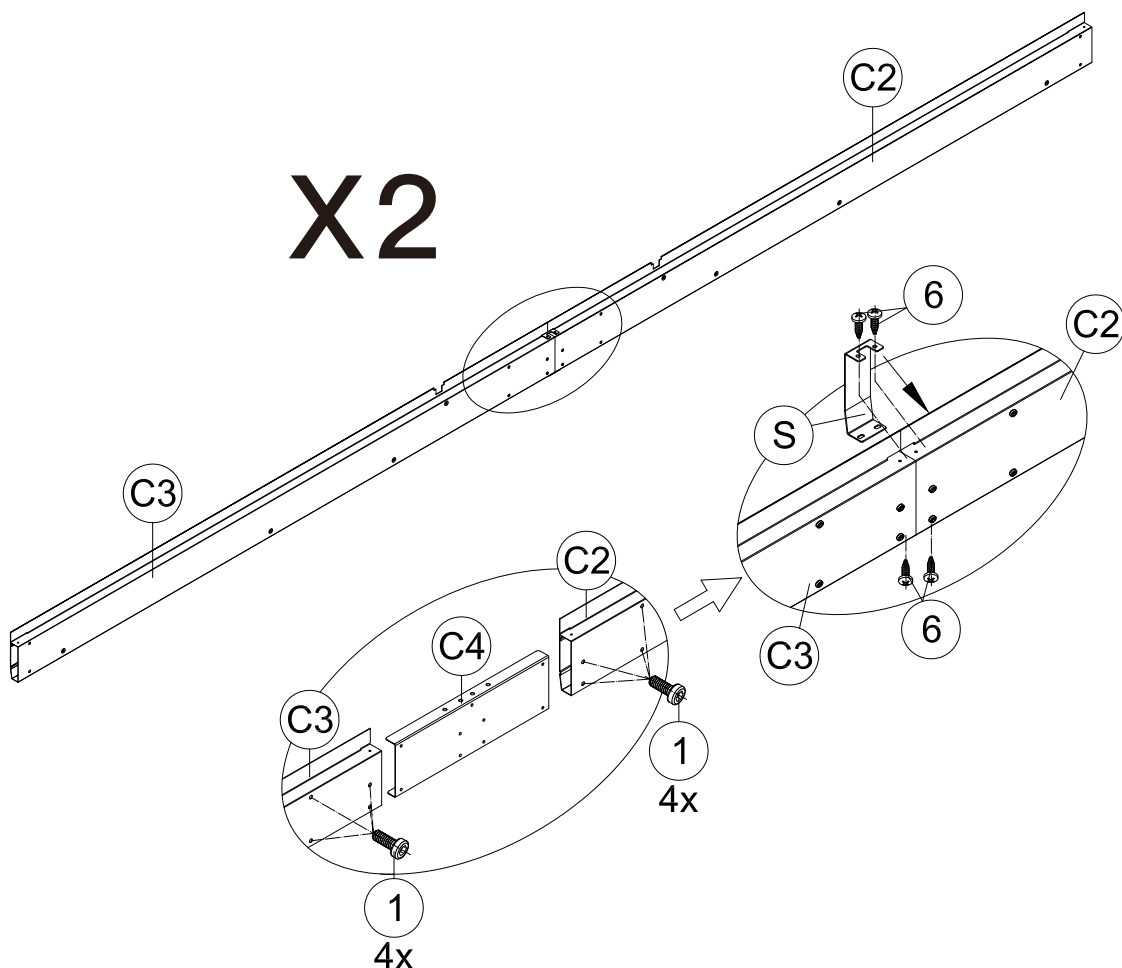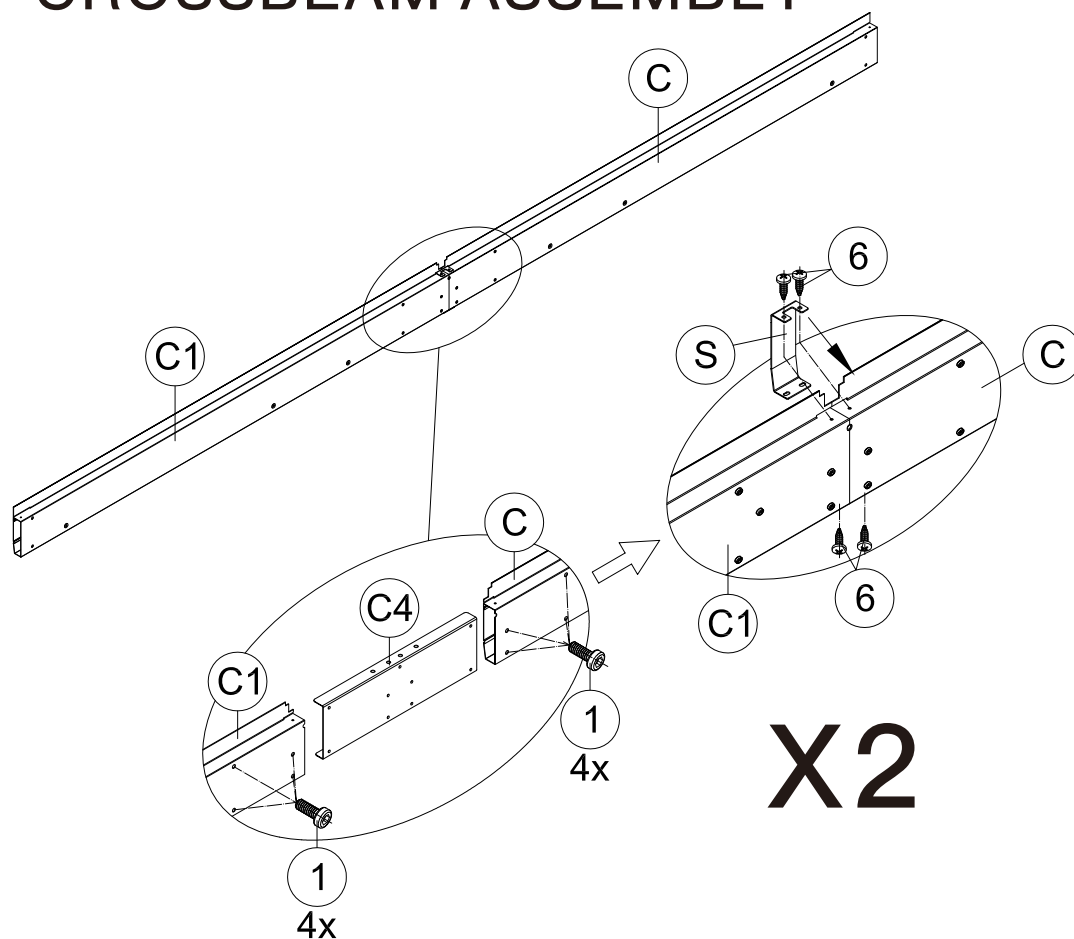





J 8x

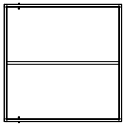


K 16x

SCREEN PANEL ASSEMBLY:

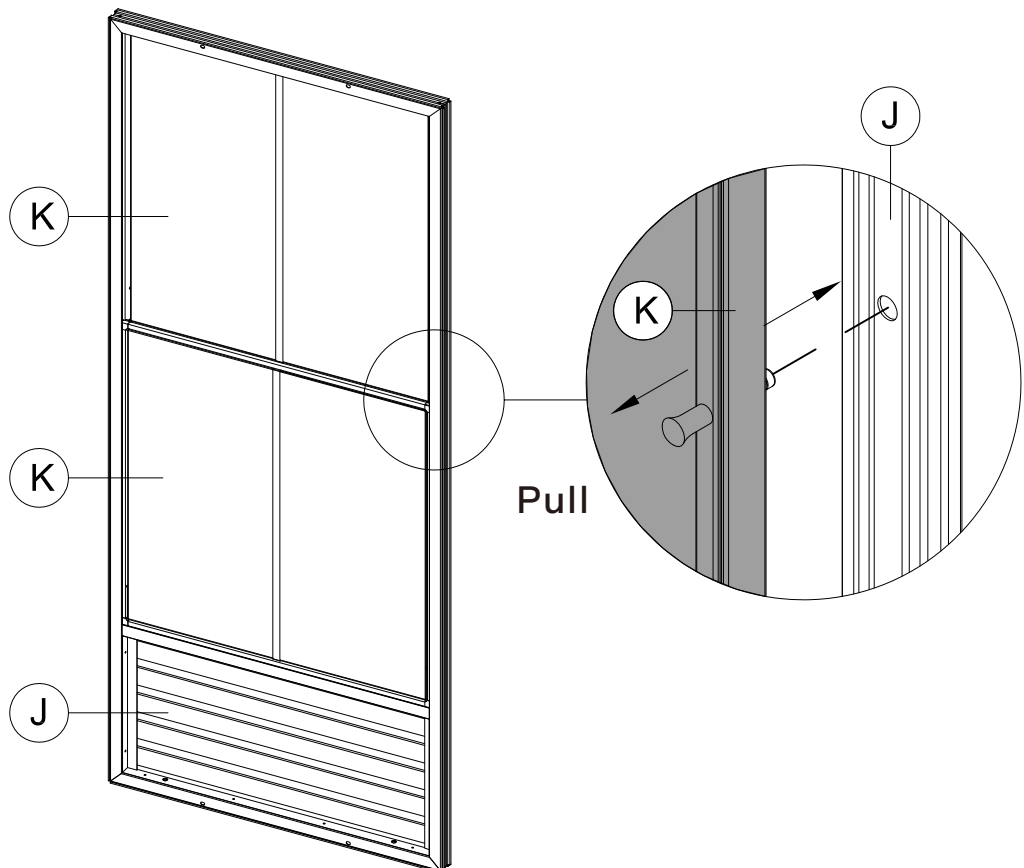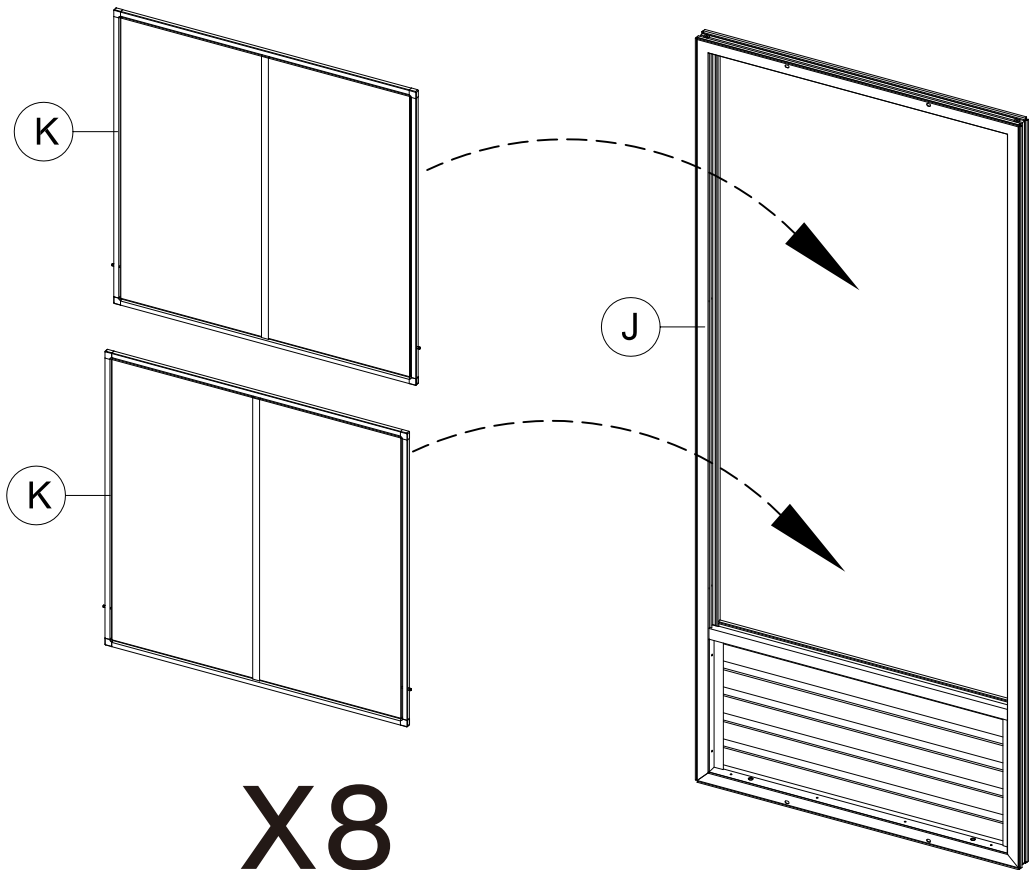

DOOR FRAME ASSEMBLY

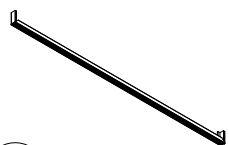

L 4x



L1 2x





L2 2x





ST3.5x15

8 32x

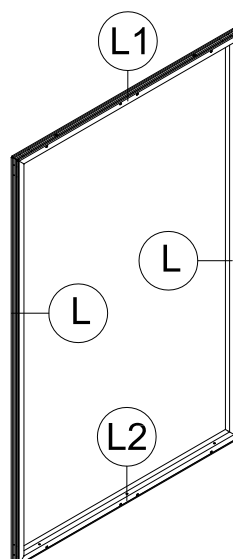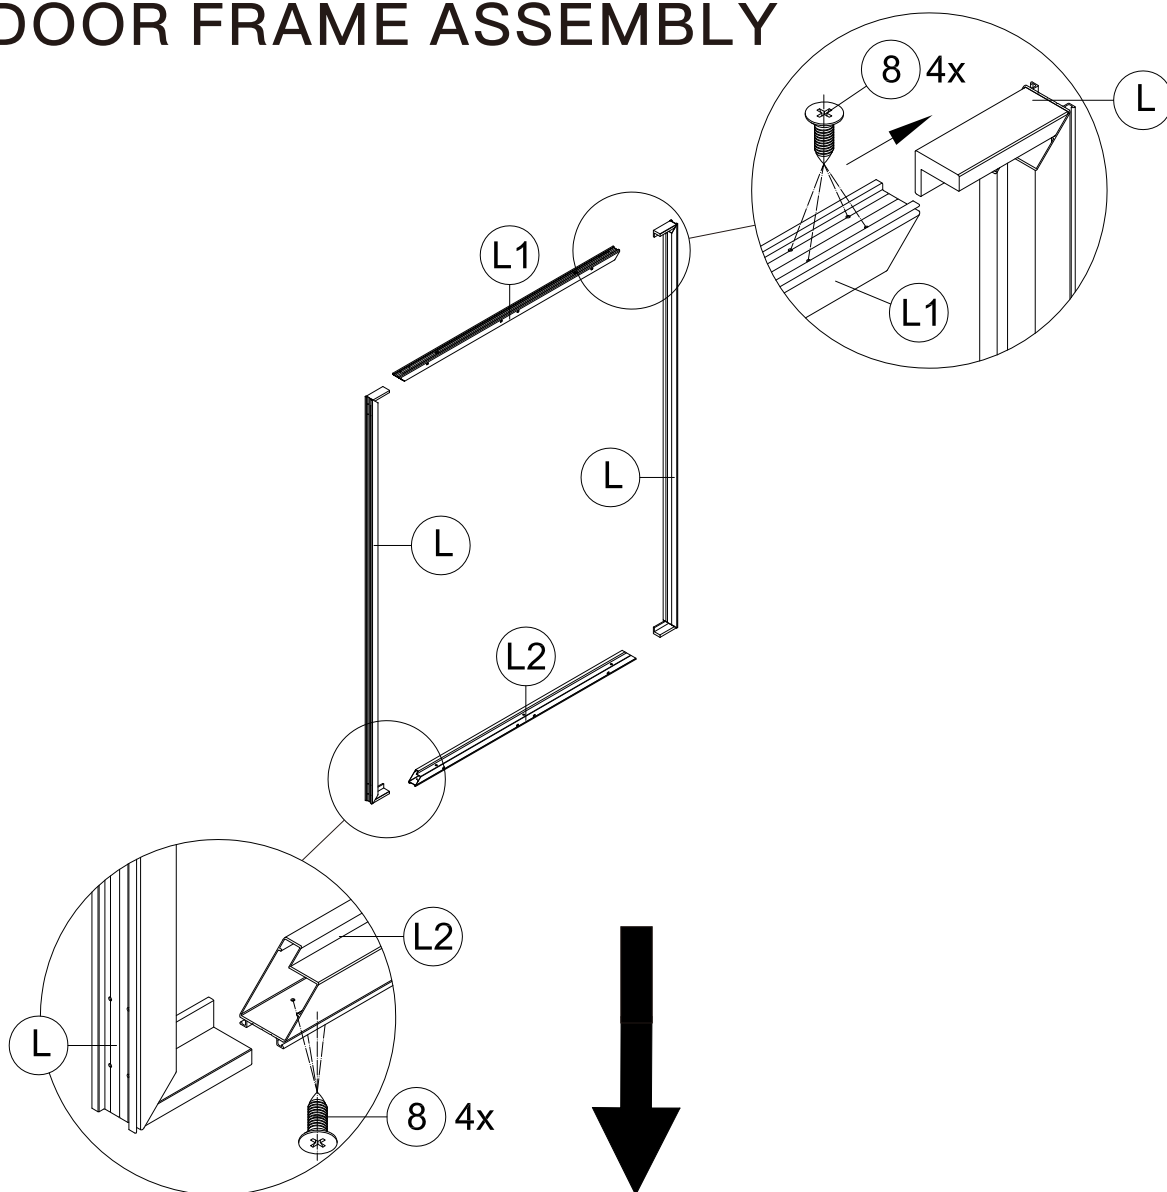


X2

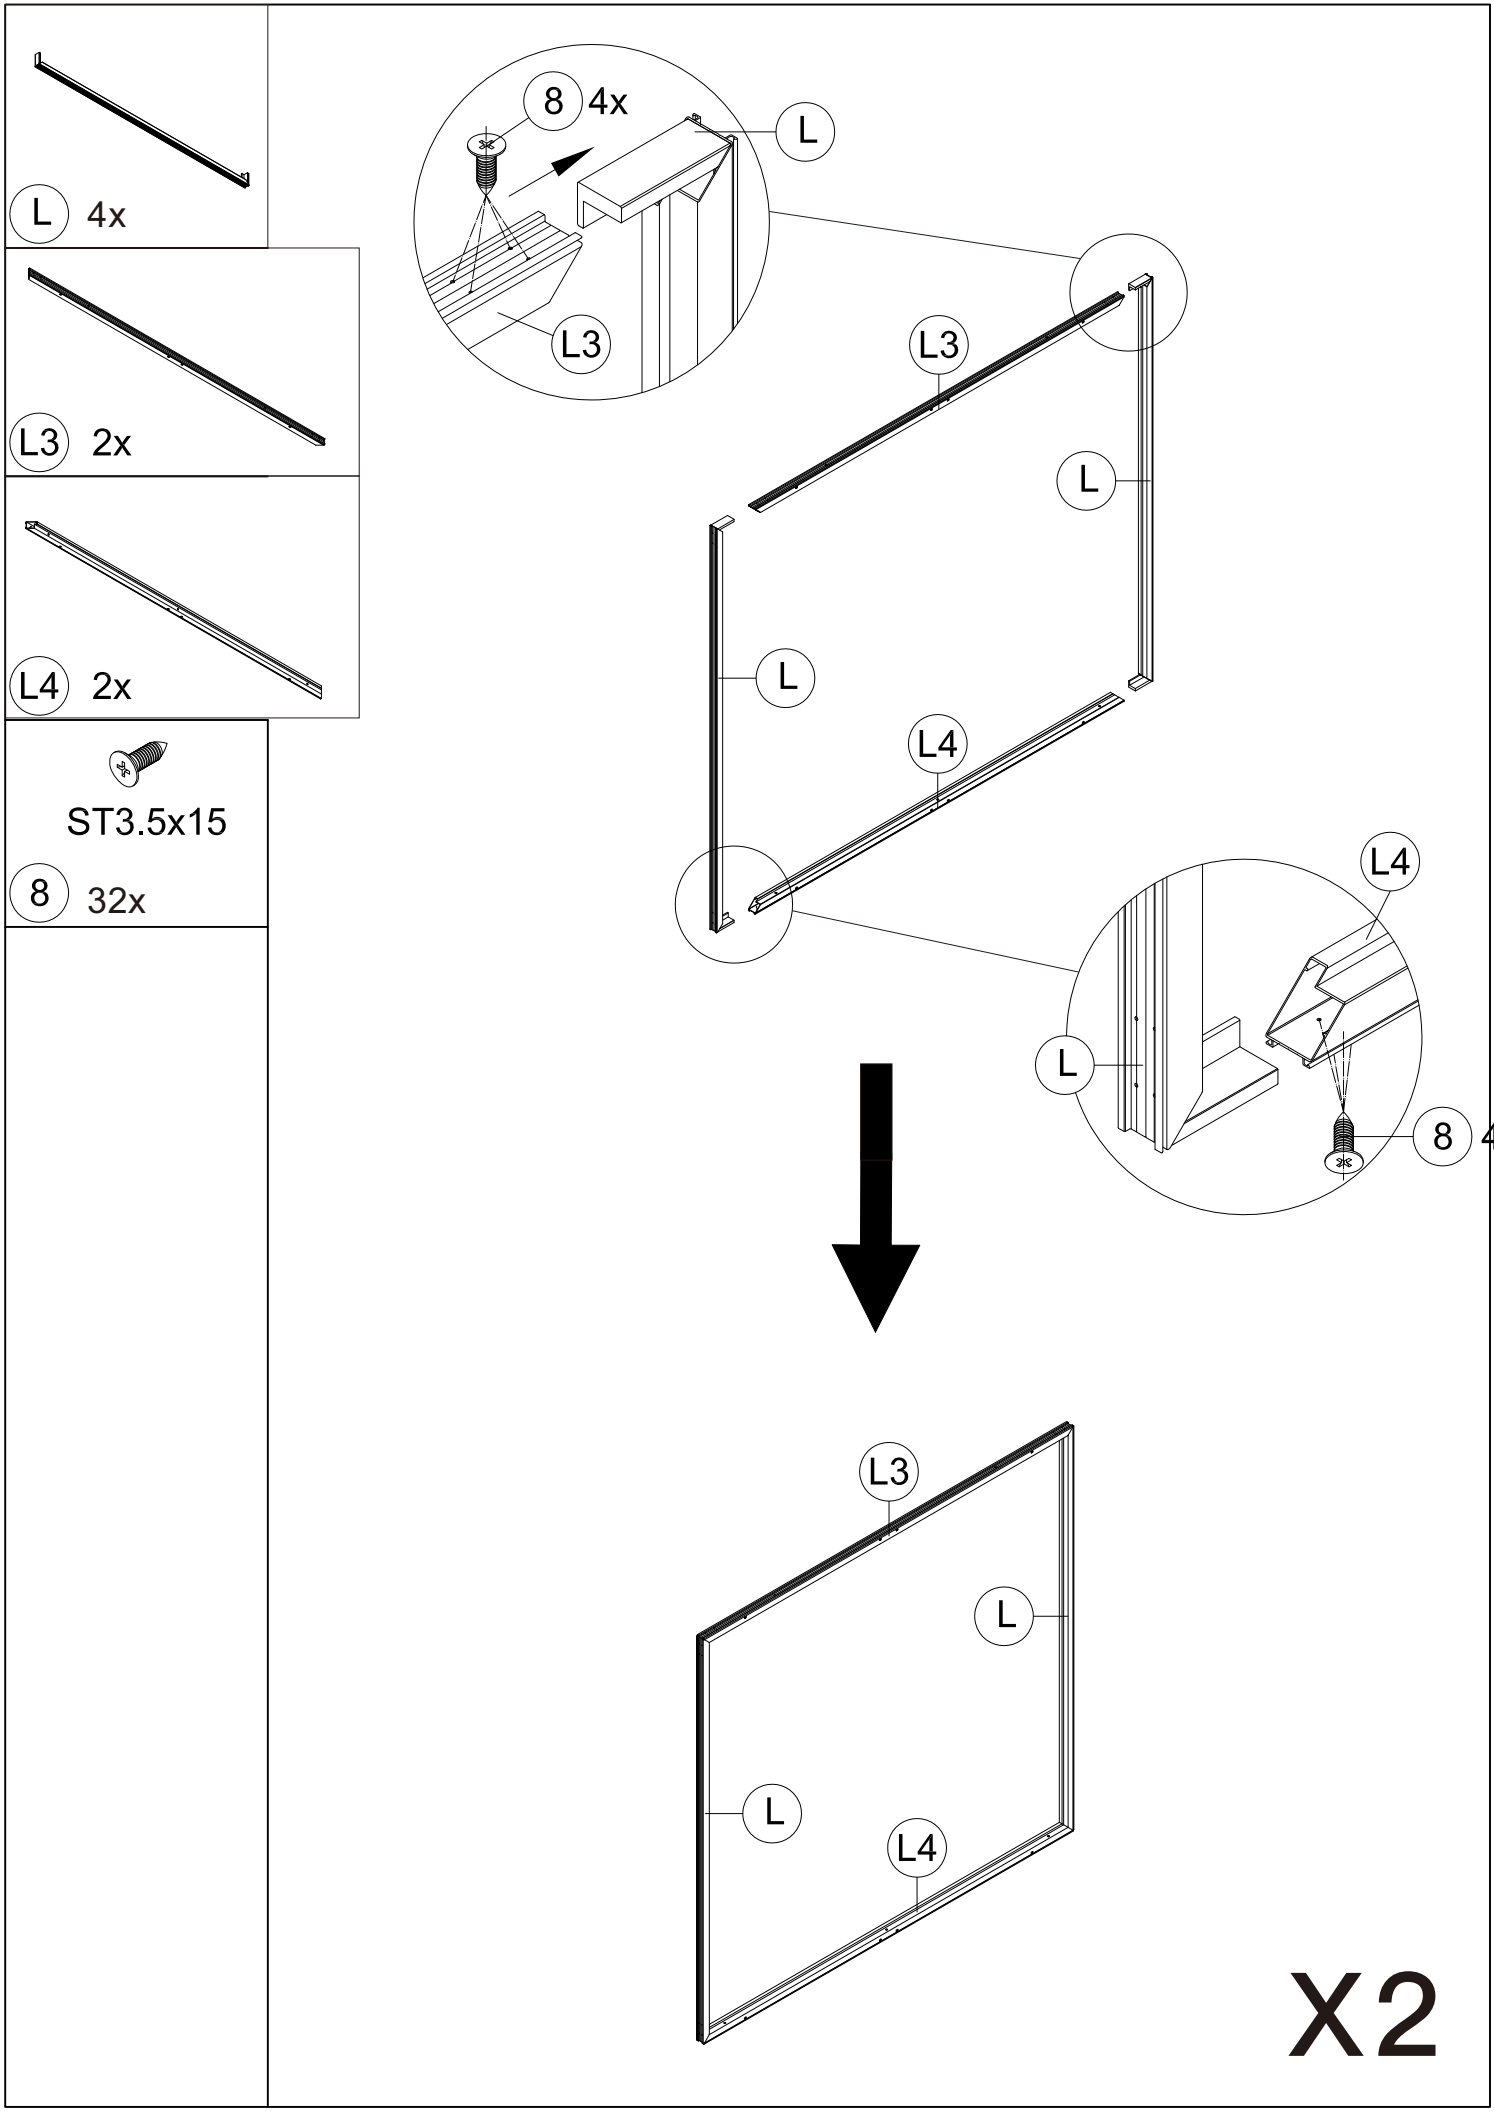




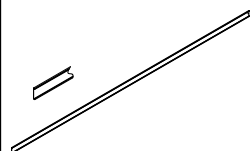


P 16x

Connecting The Poles and Screen Panels.

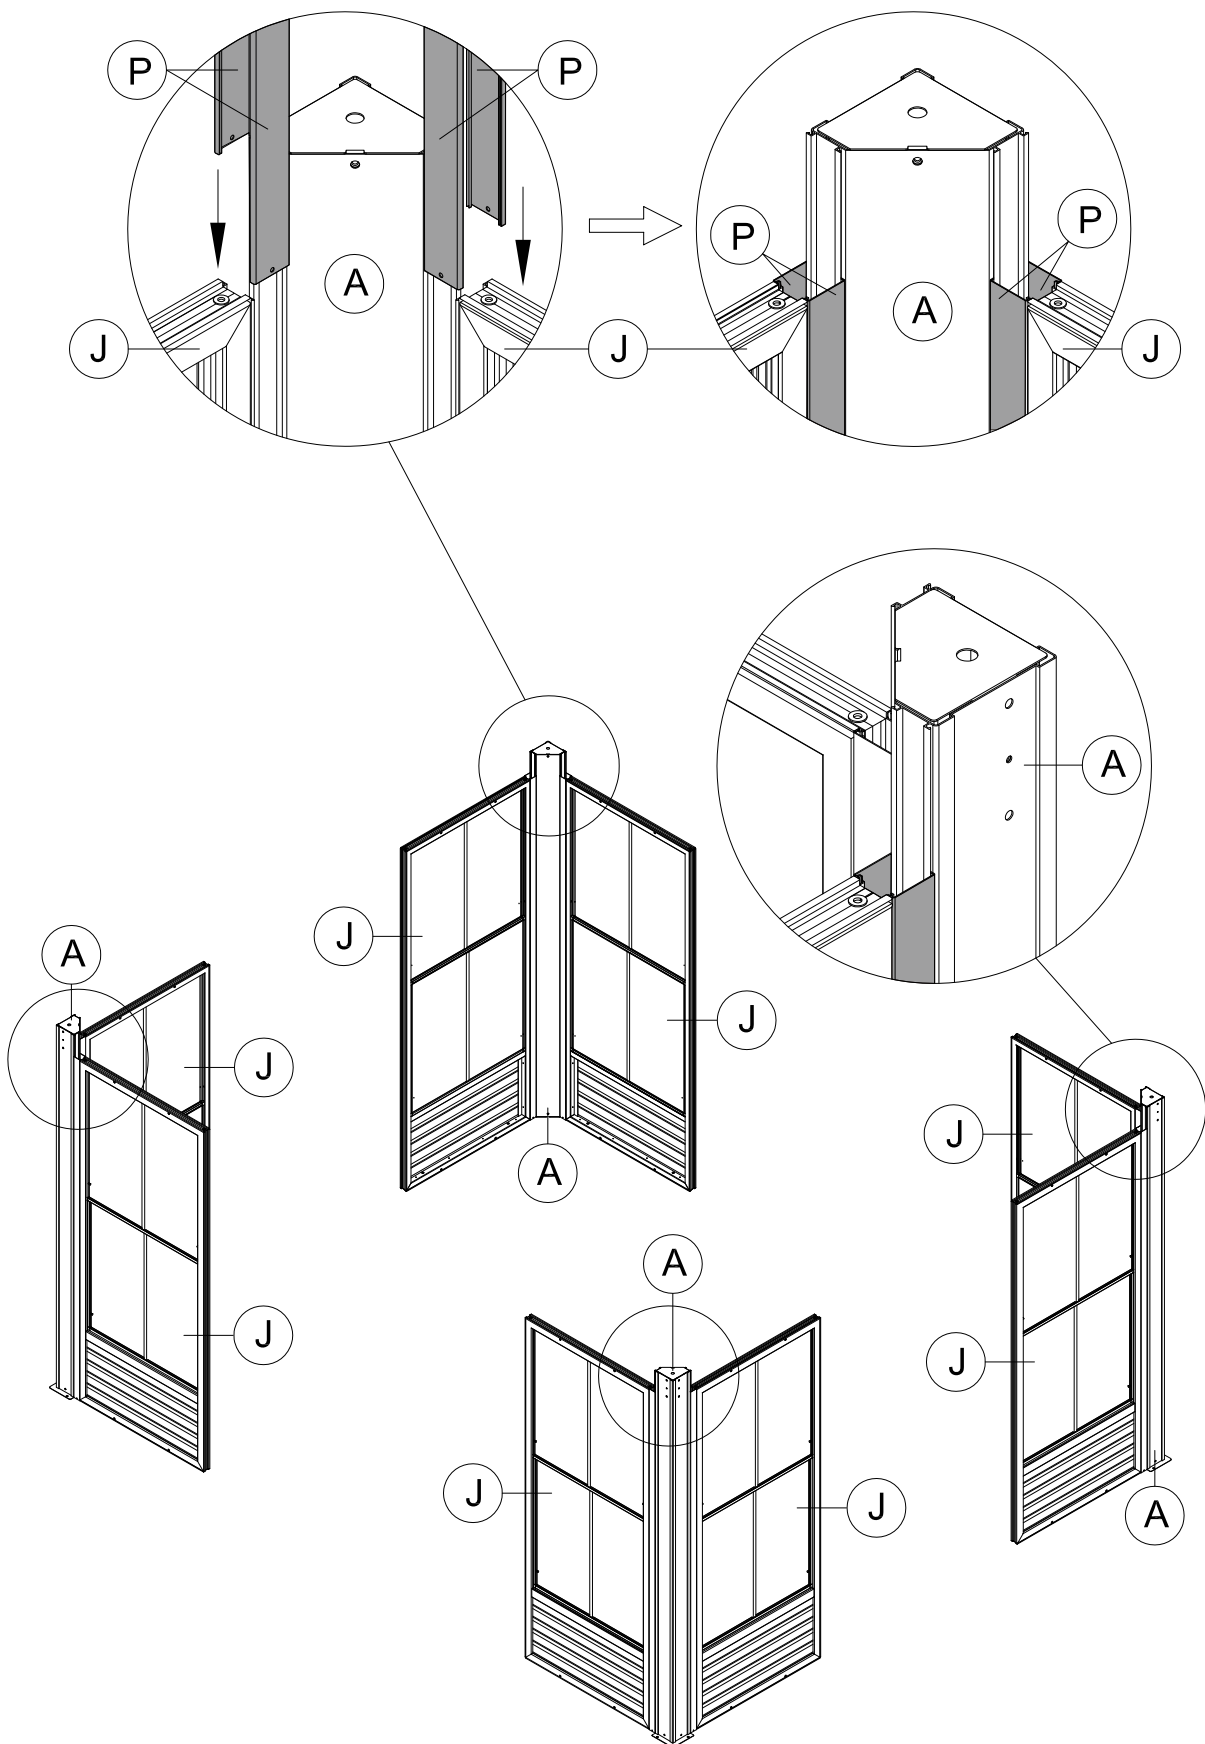

Connecting The Door Assemblies and Screen Panels

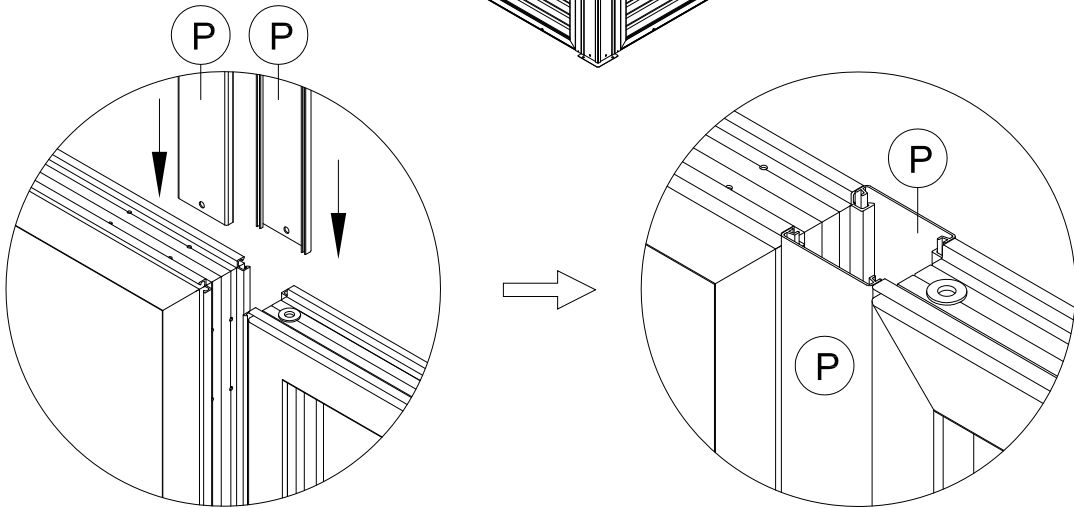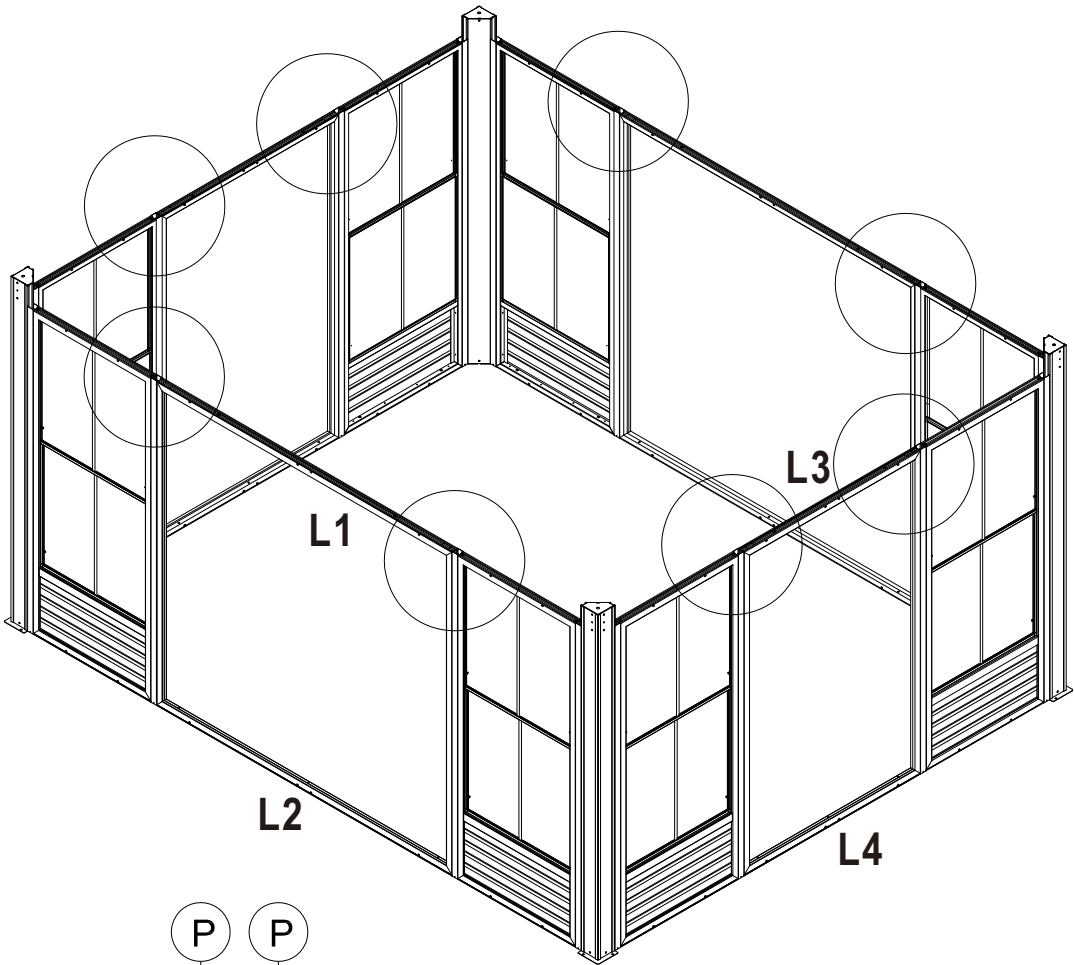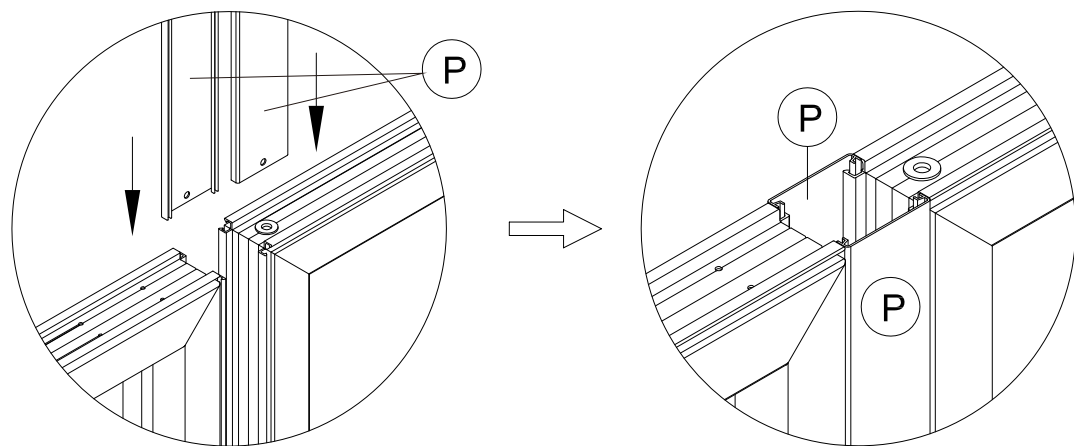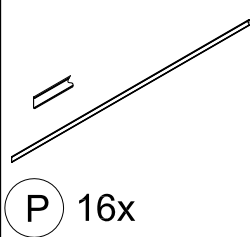



M6x35



3 16x



S4

9 1x

CROSS BEAM ASSEMBLY

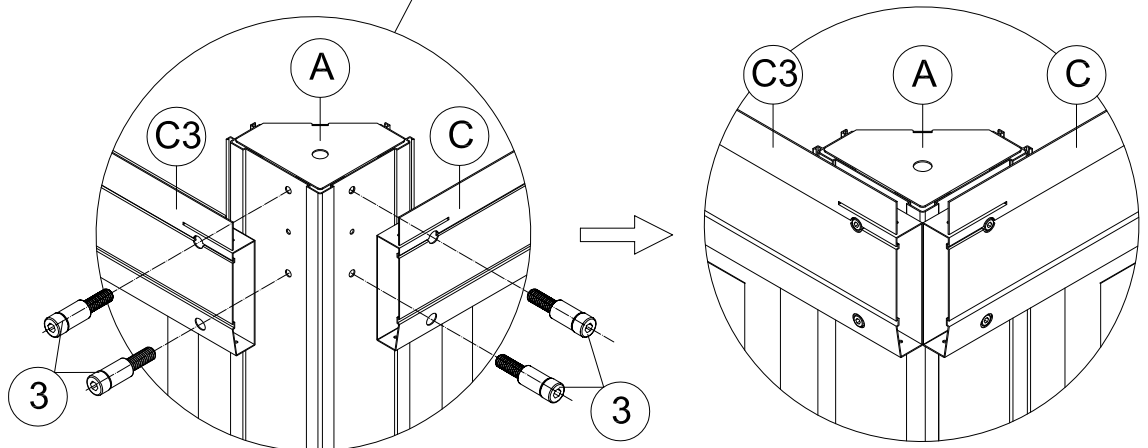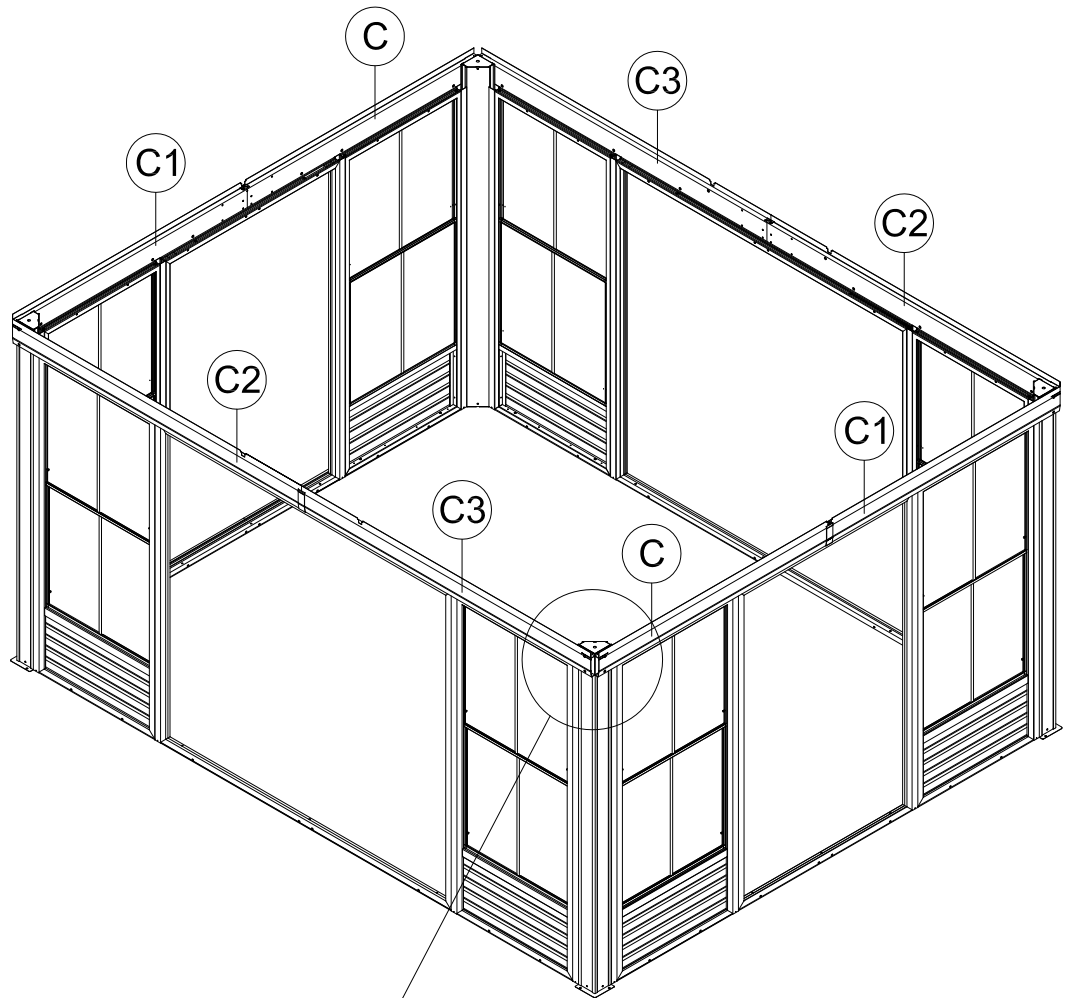




S1 4x





ST5x16

6 16x

CORNER COVER ASSEMBLY

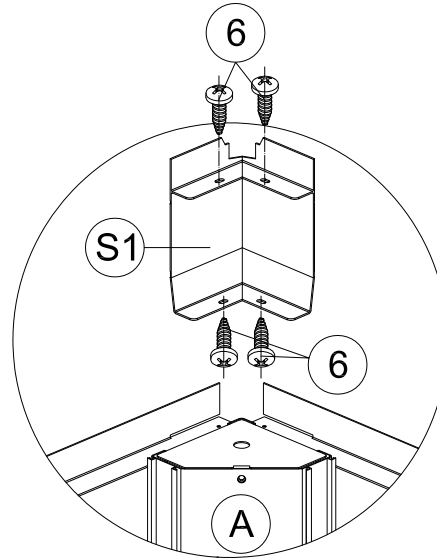

Insert View

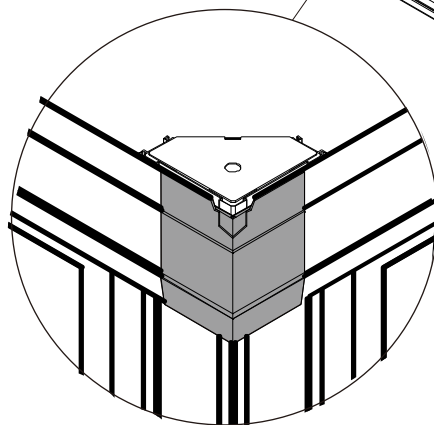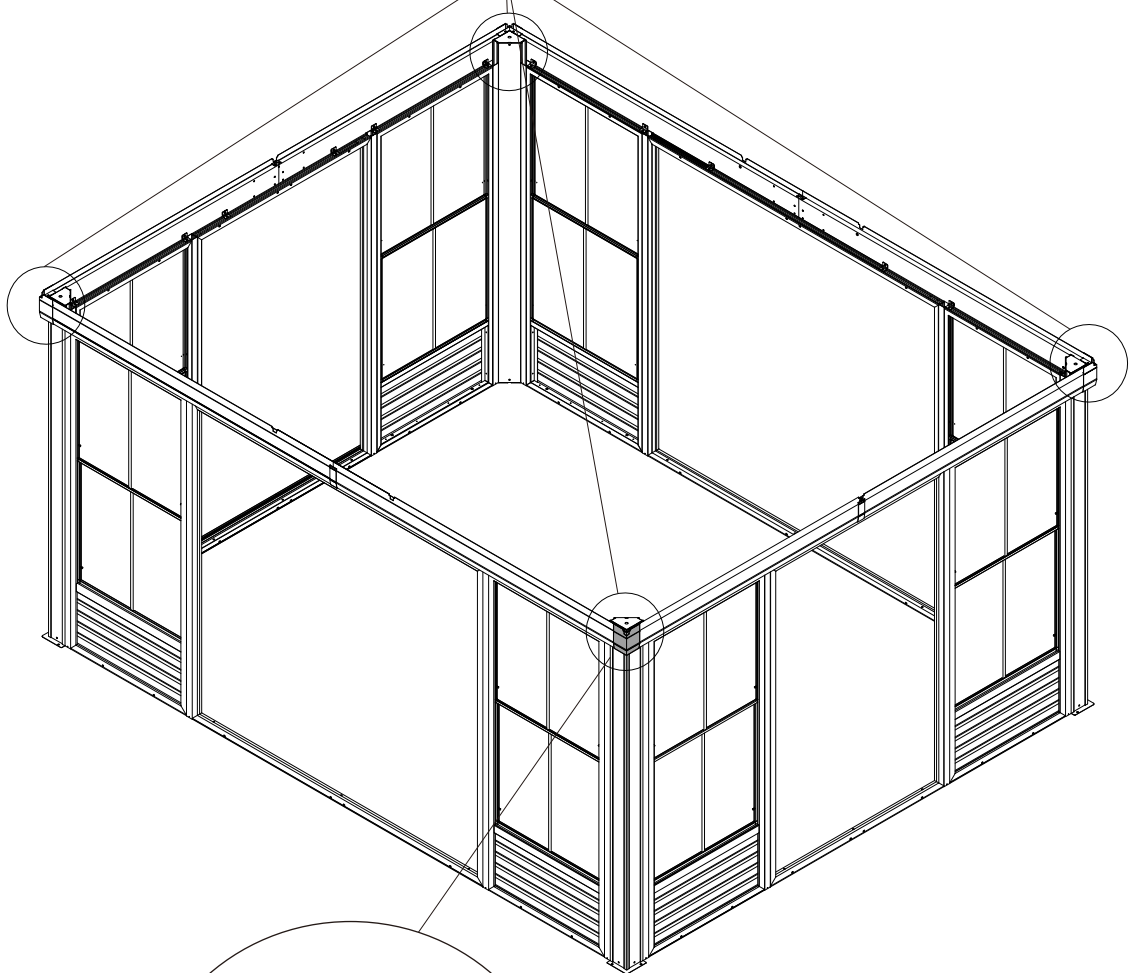

Insert View



U 24x



M6x16

1 48x







S4

9 1x

PANEL CONNECTOR ASSEMBLY

1

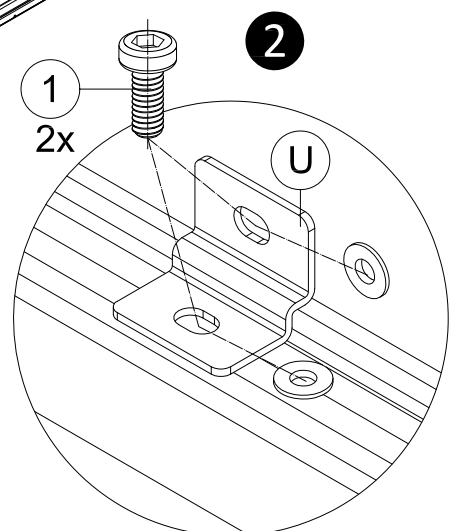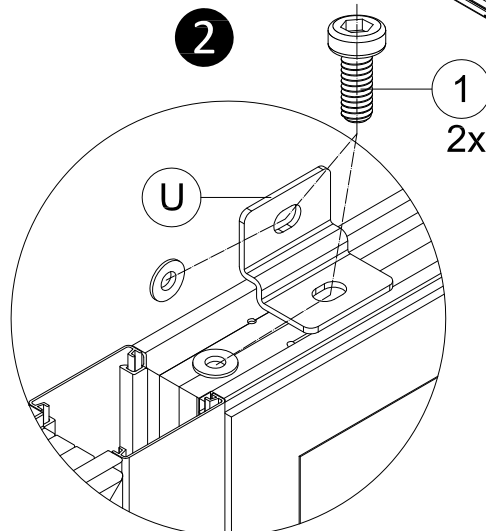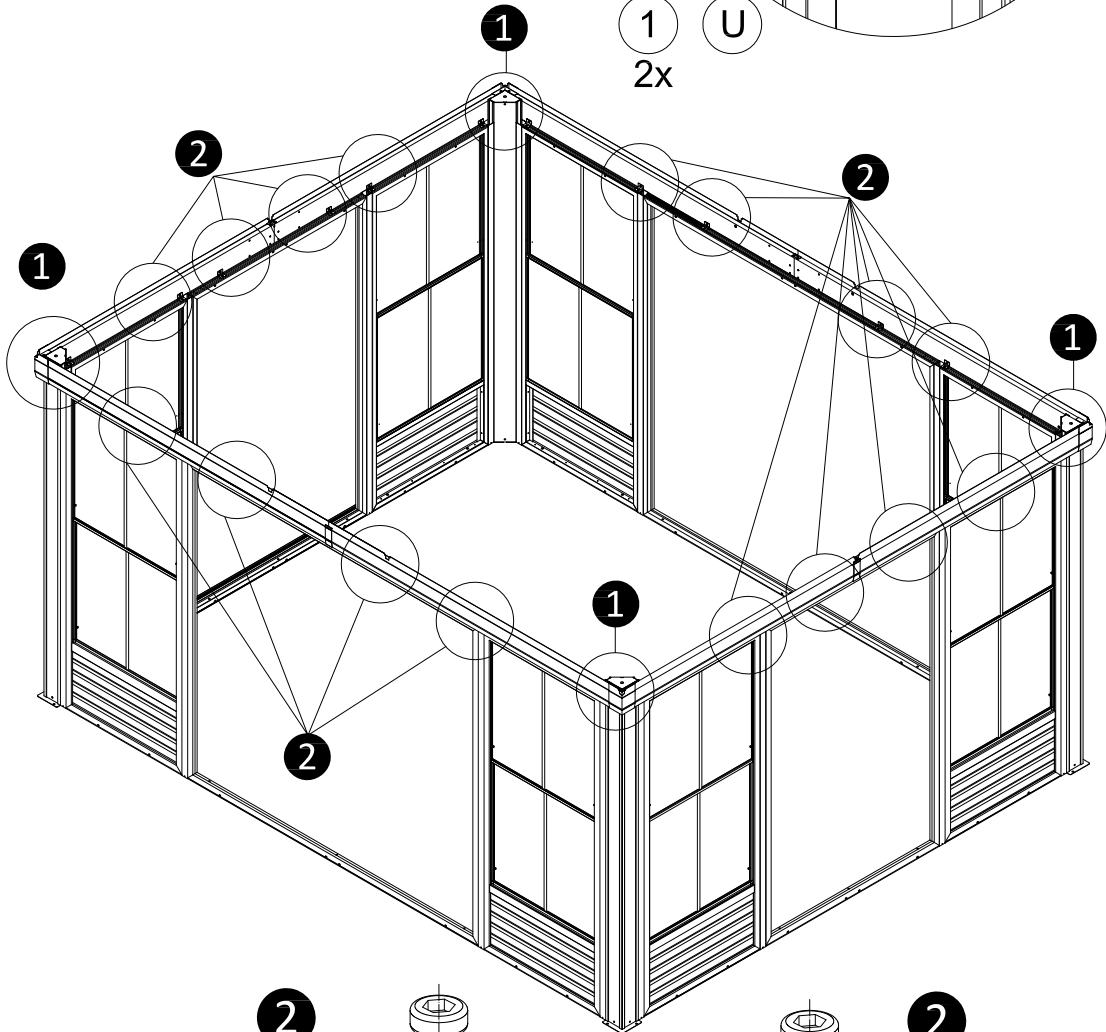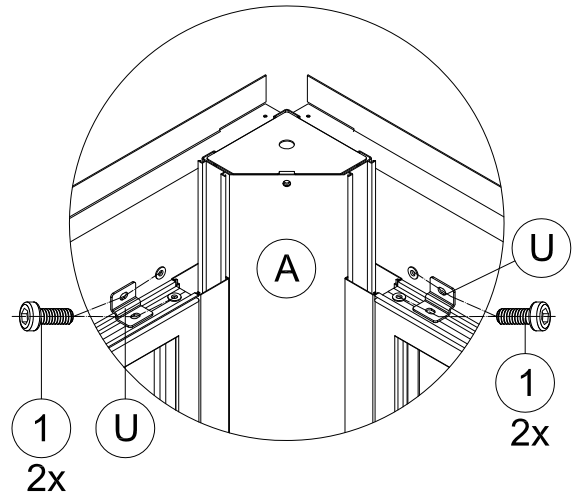

TRACK ASSEMBLY



N 2x




N1 2x



N2 2x



N3 2x

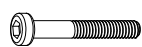


M6x55

4 32x




S4


9 1x

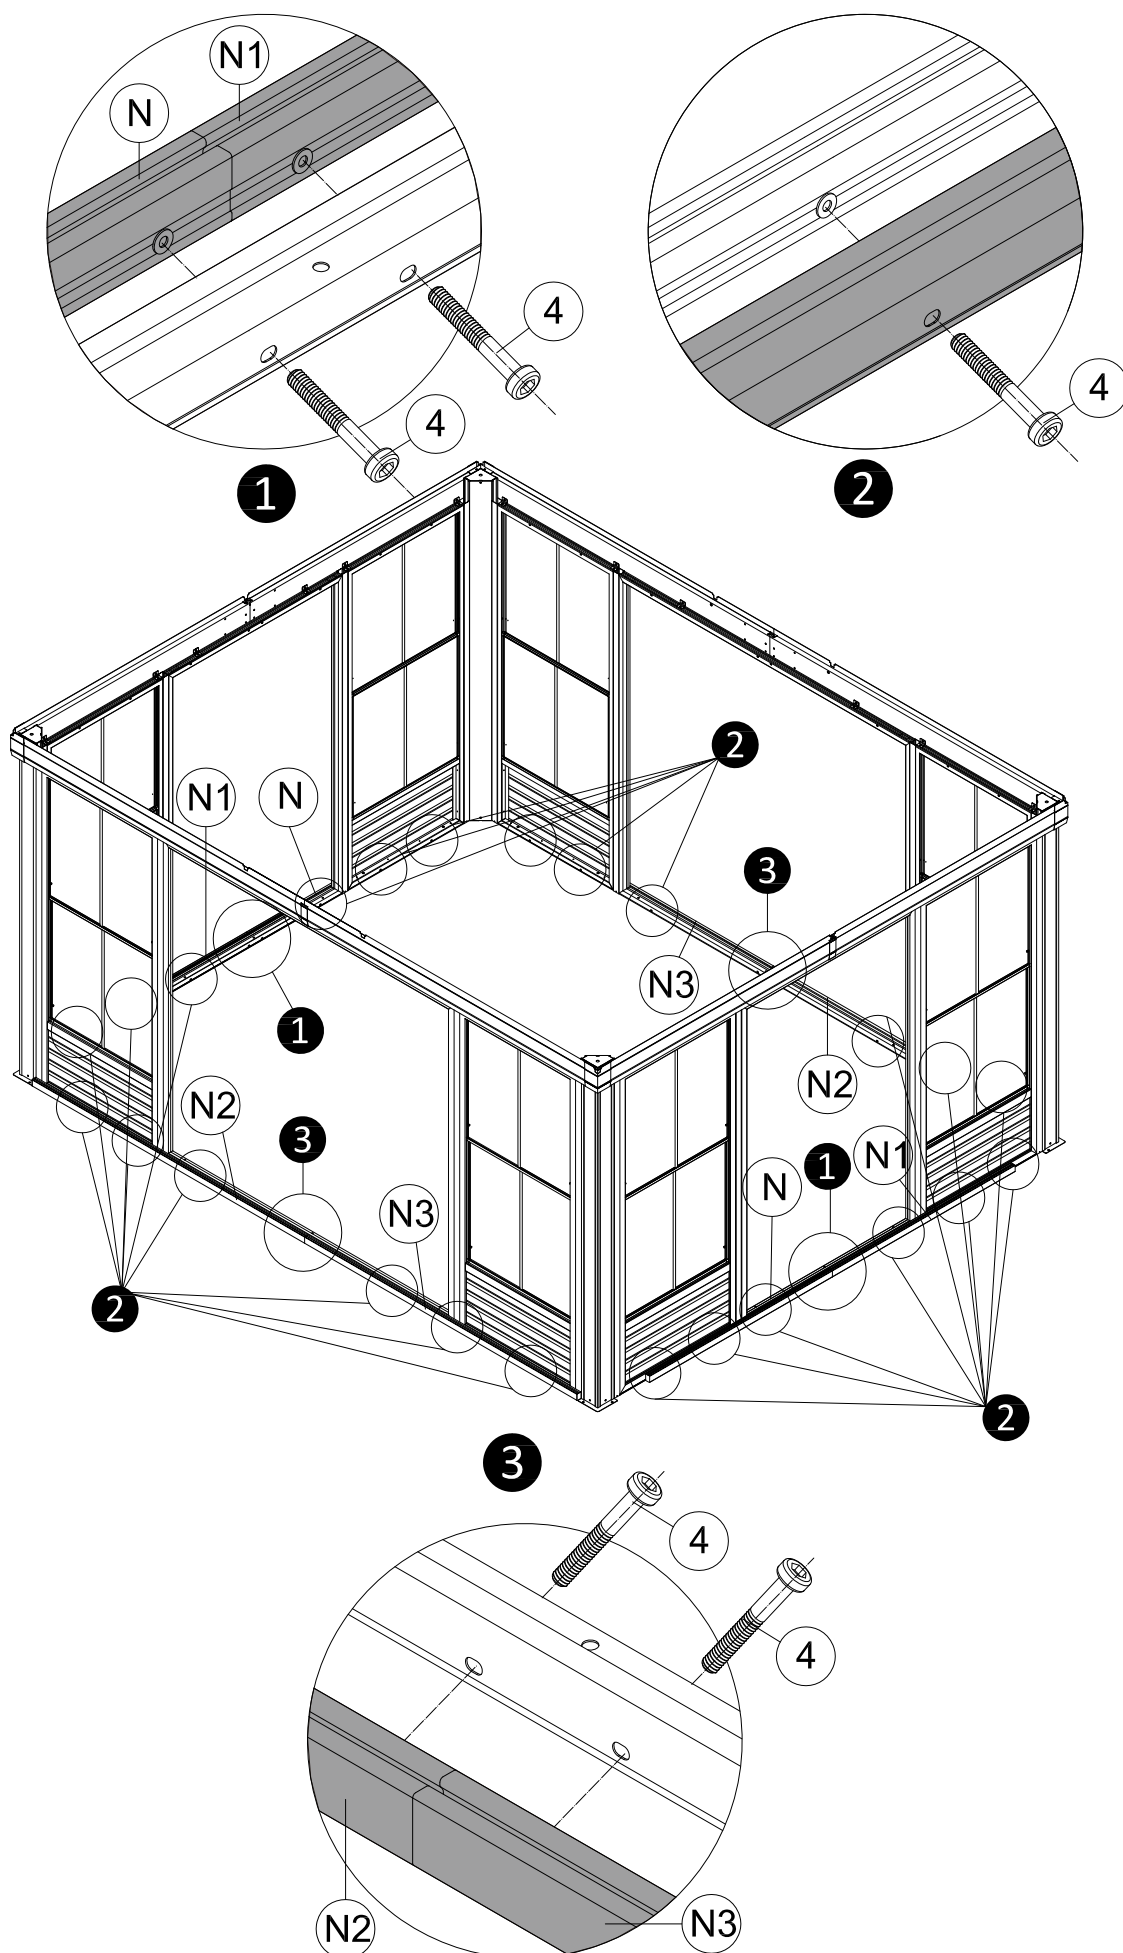


SLIDING DOOR ASSEMBLY

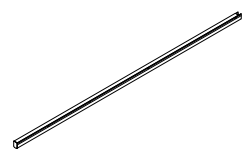


M 2x

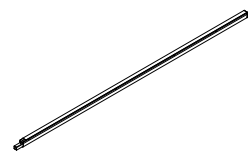


M1 2x

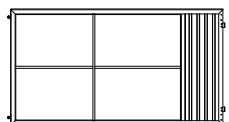


J1 2x

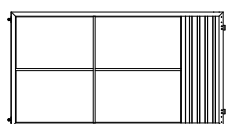

J2 2x

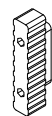

V 8x

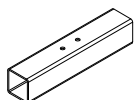

V1 2x




M4x50



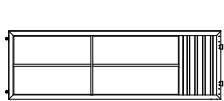

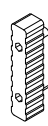
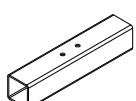


5 8x





ST4.8x16

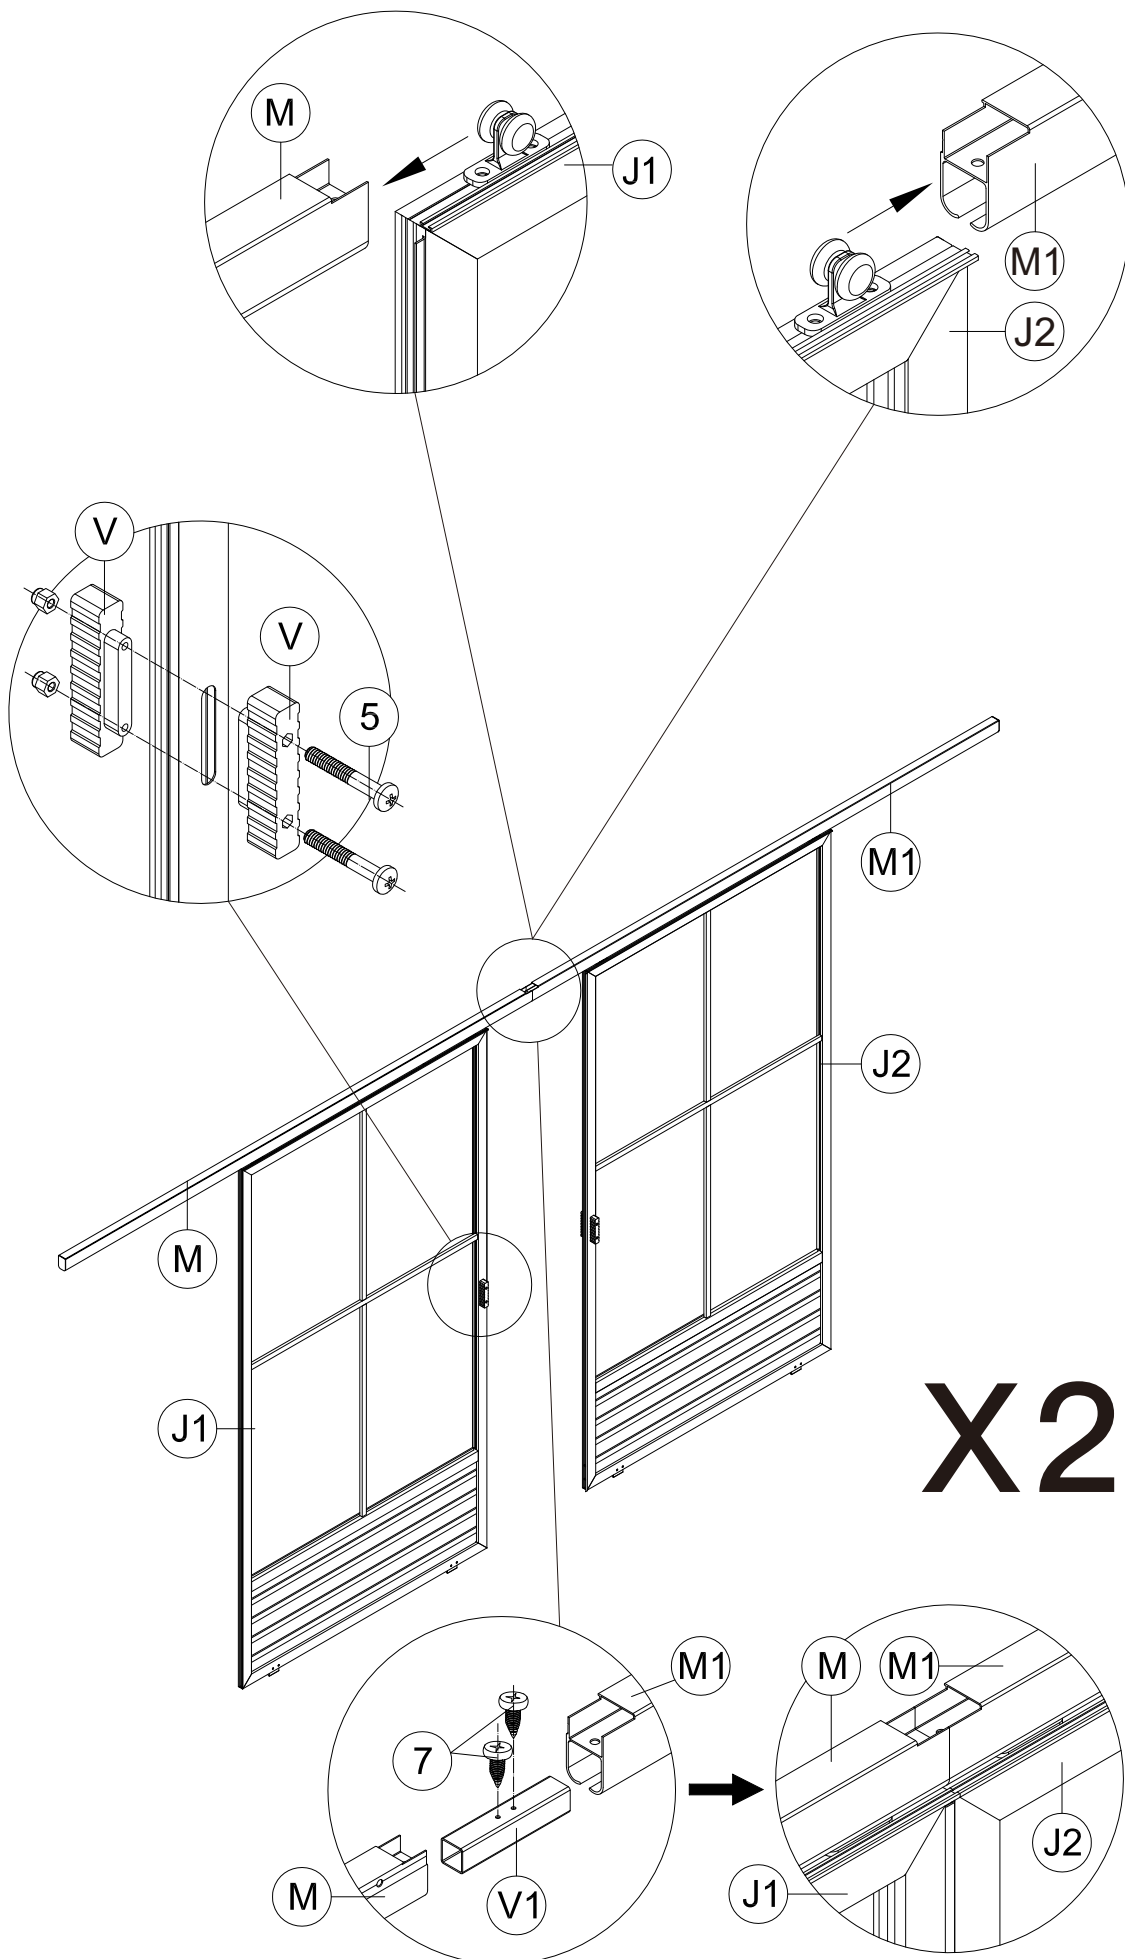7 4x

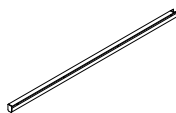


M2 2x

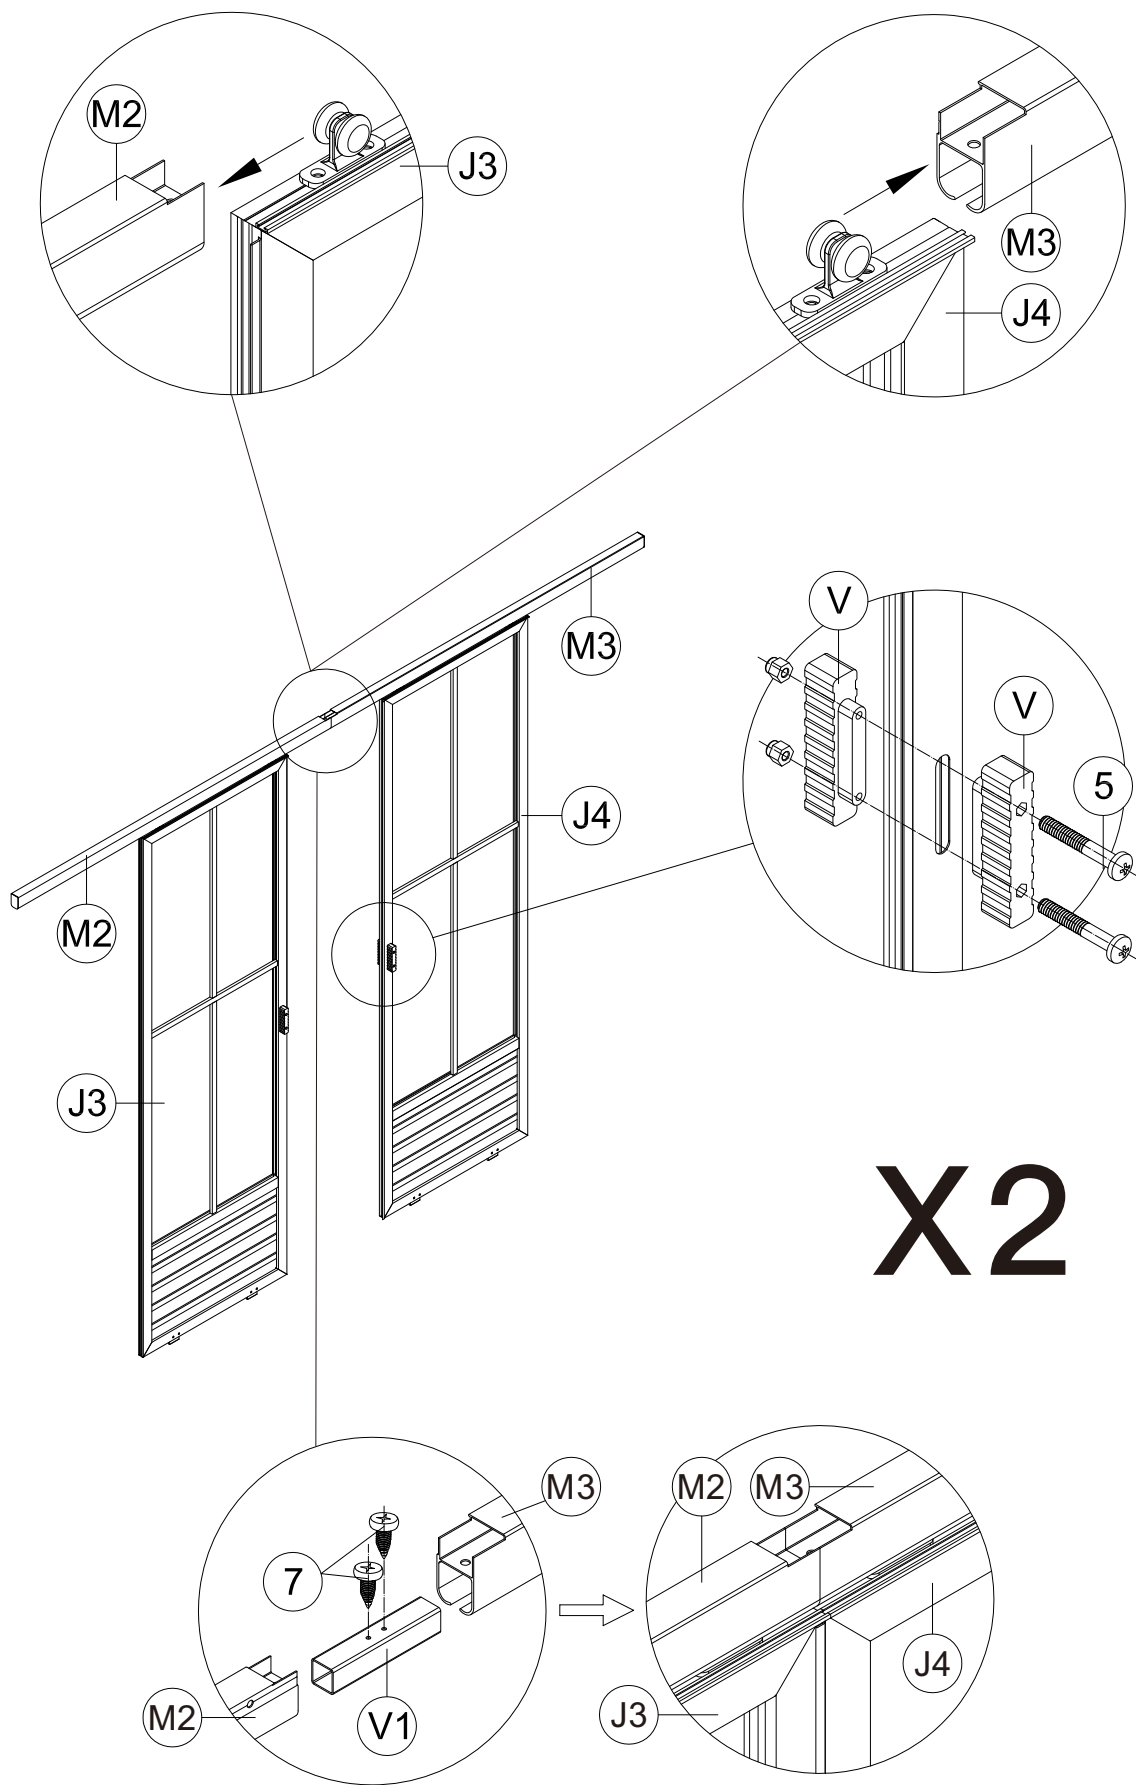M3 2x

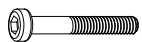J3 2x

J4 2x

V 8x

V1 2x

M4x50 5 8x

ST4.8x16 7 4x






M6x55

4 32x











9 1x


SLIDING DOOR ASSEMBLY

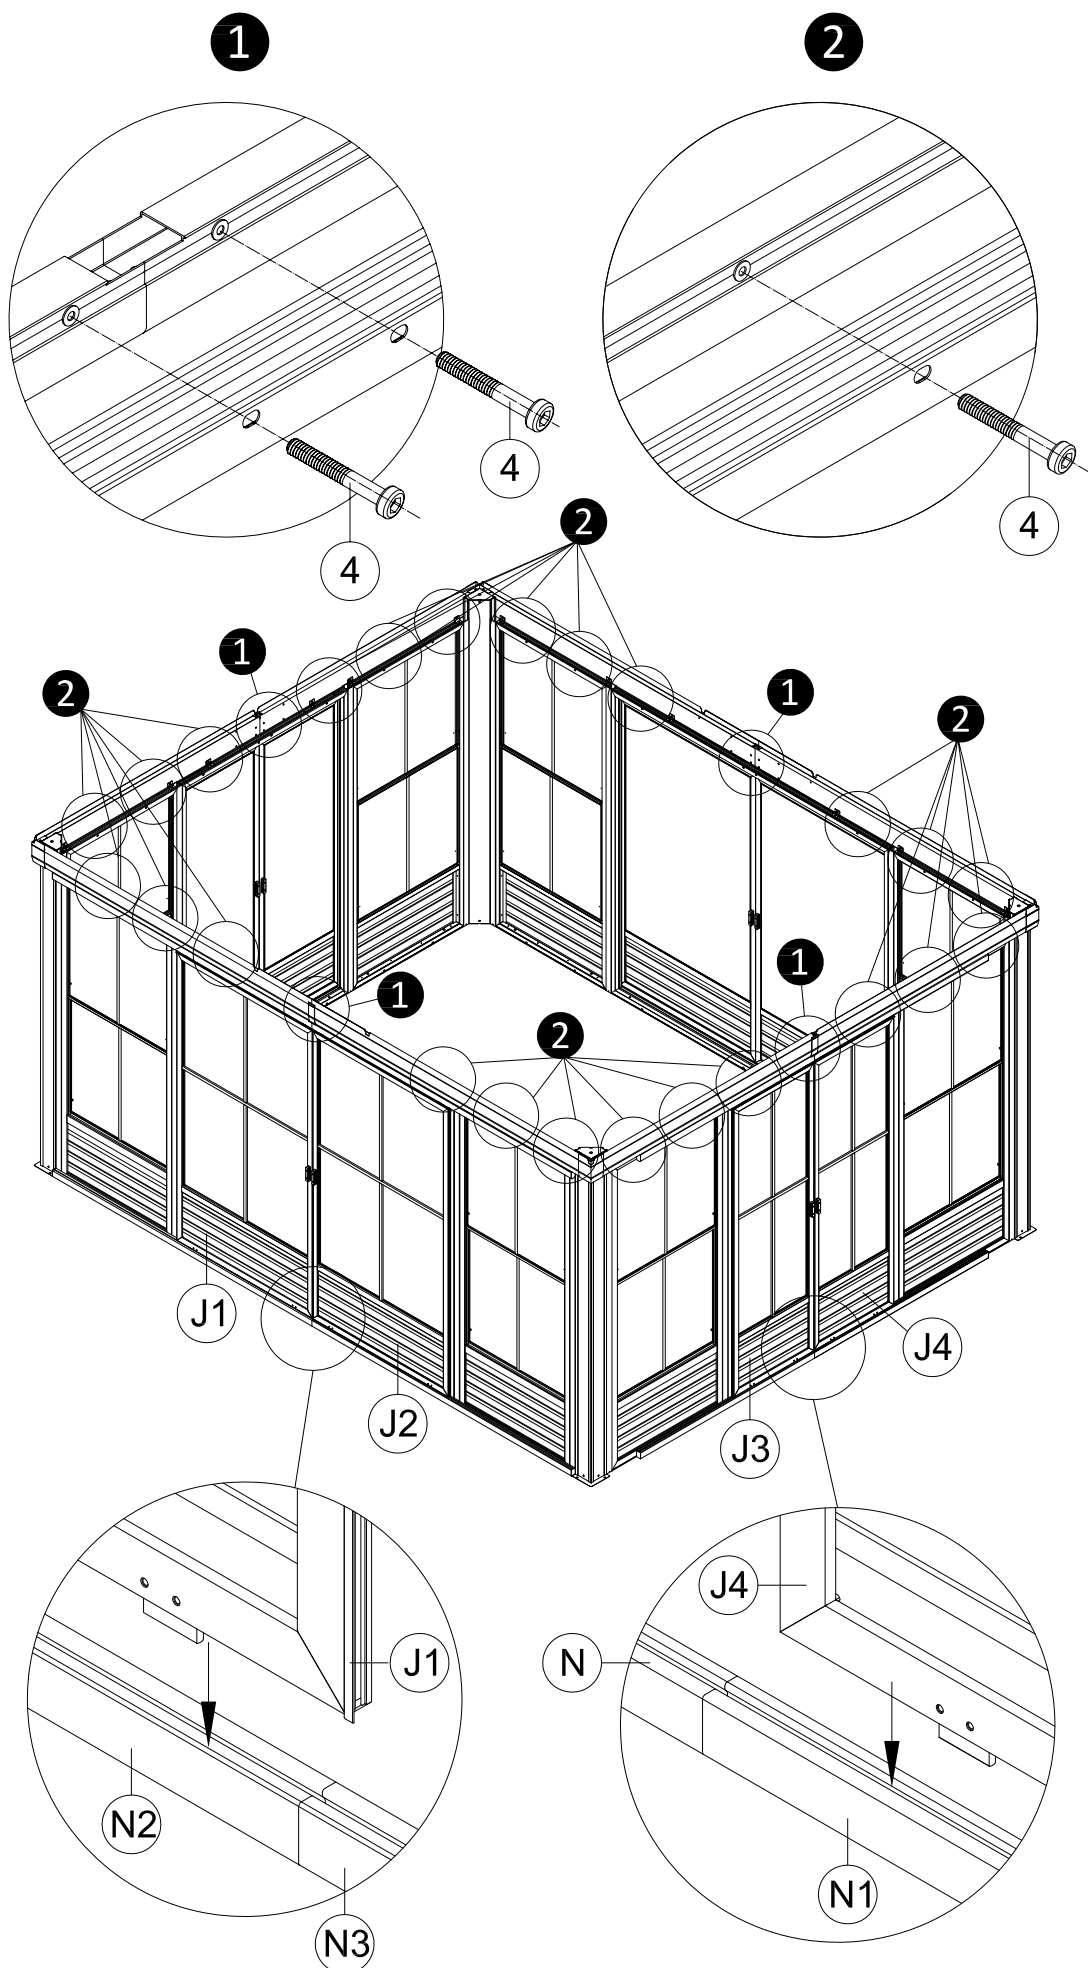


CORNER ROOF TUBE ASSEMBLY

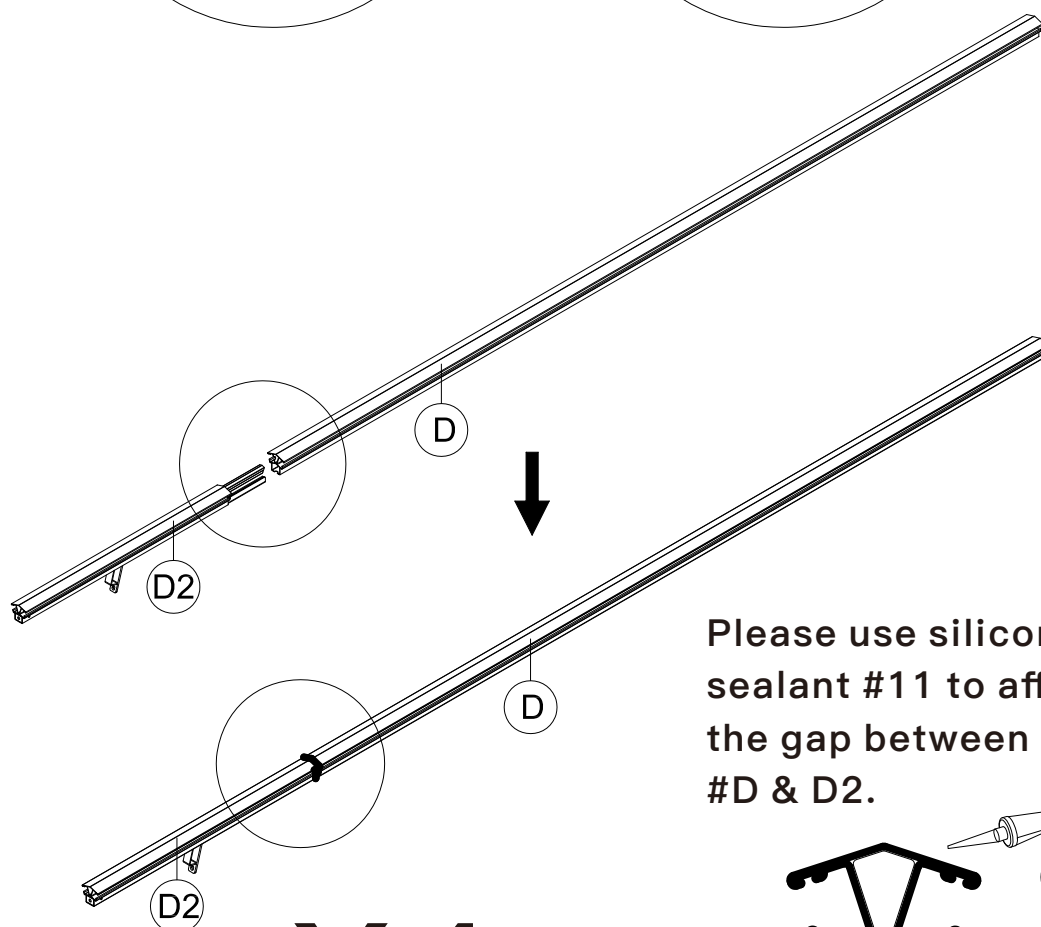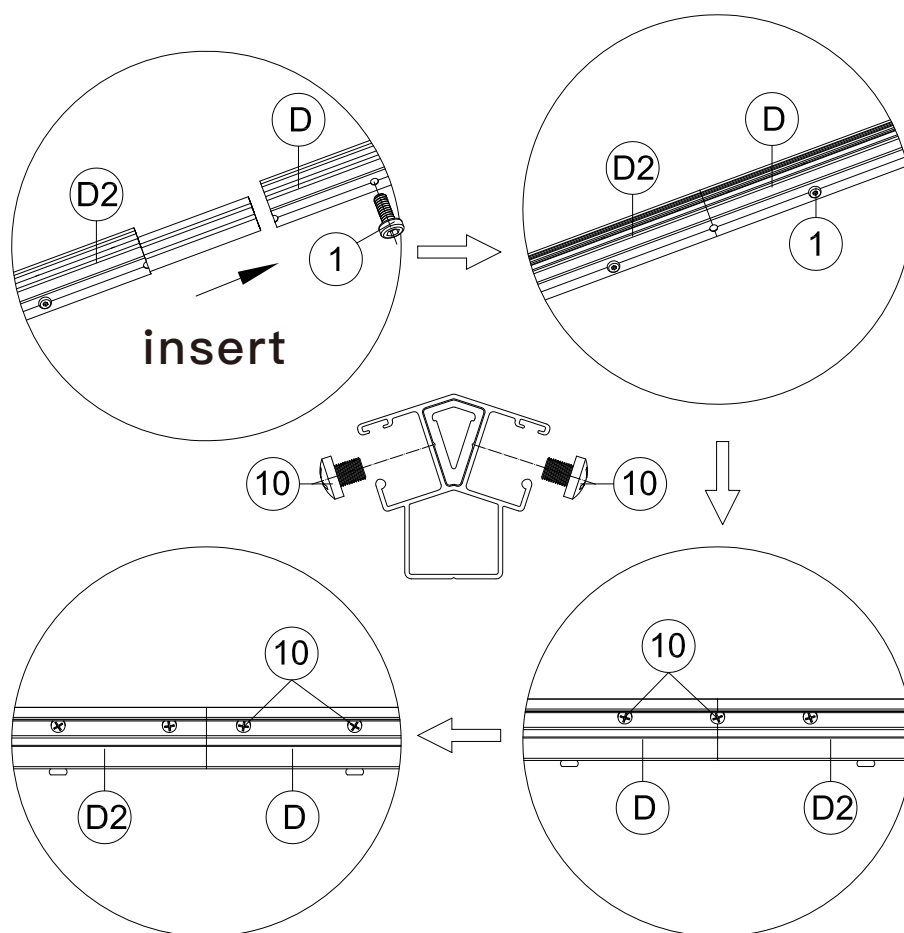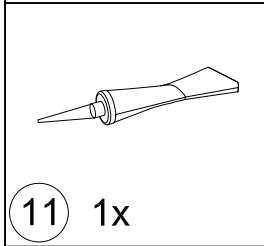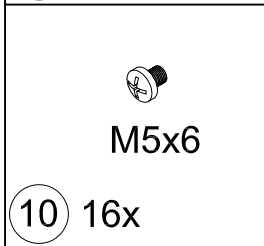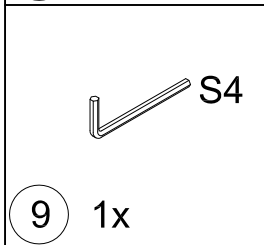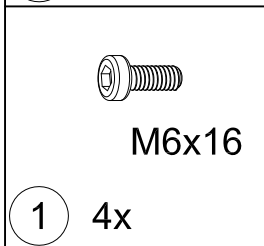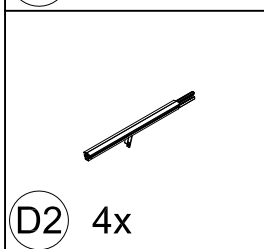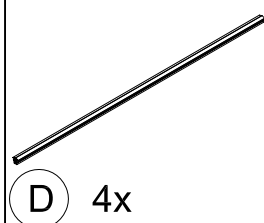

Please use silicone sealant #11 to affix the gap between #D & D2.

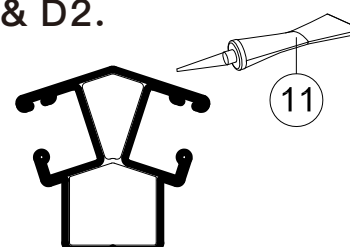

X4

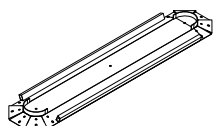

H 1x



M6x16


1 12x




S4

9 1x

CORNER ROOF TUBE AND INSIDE ROOF CONNECTOR ASSEMBLY

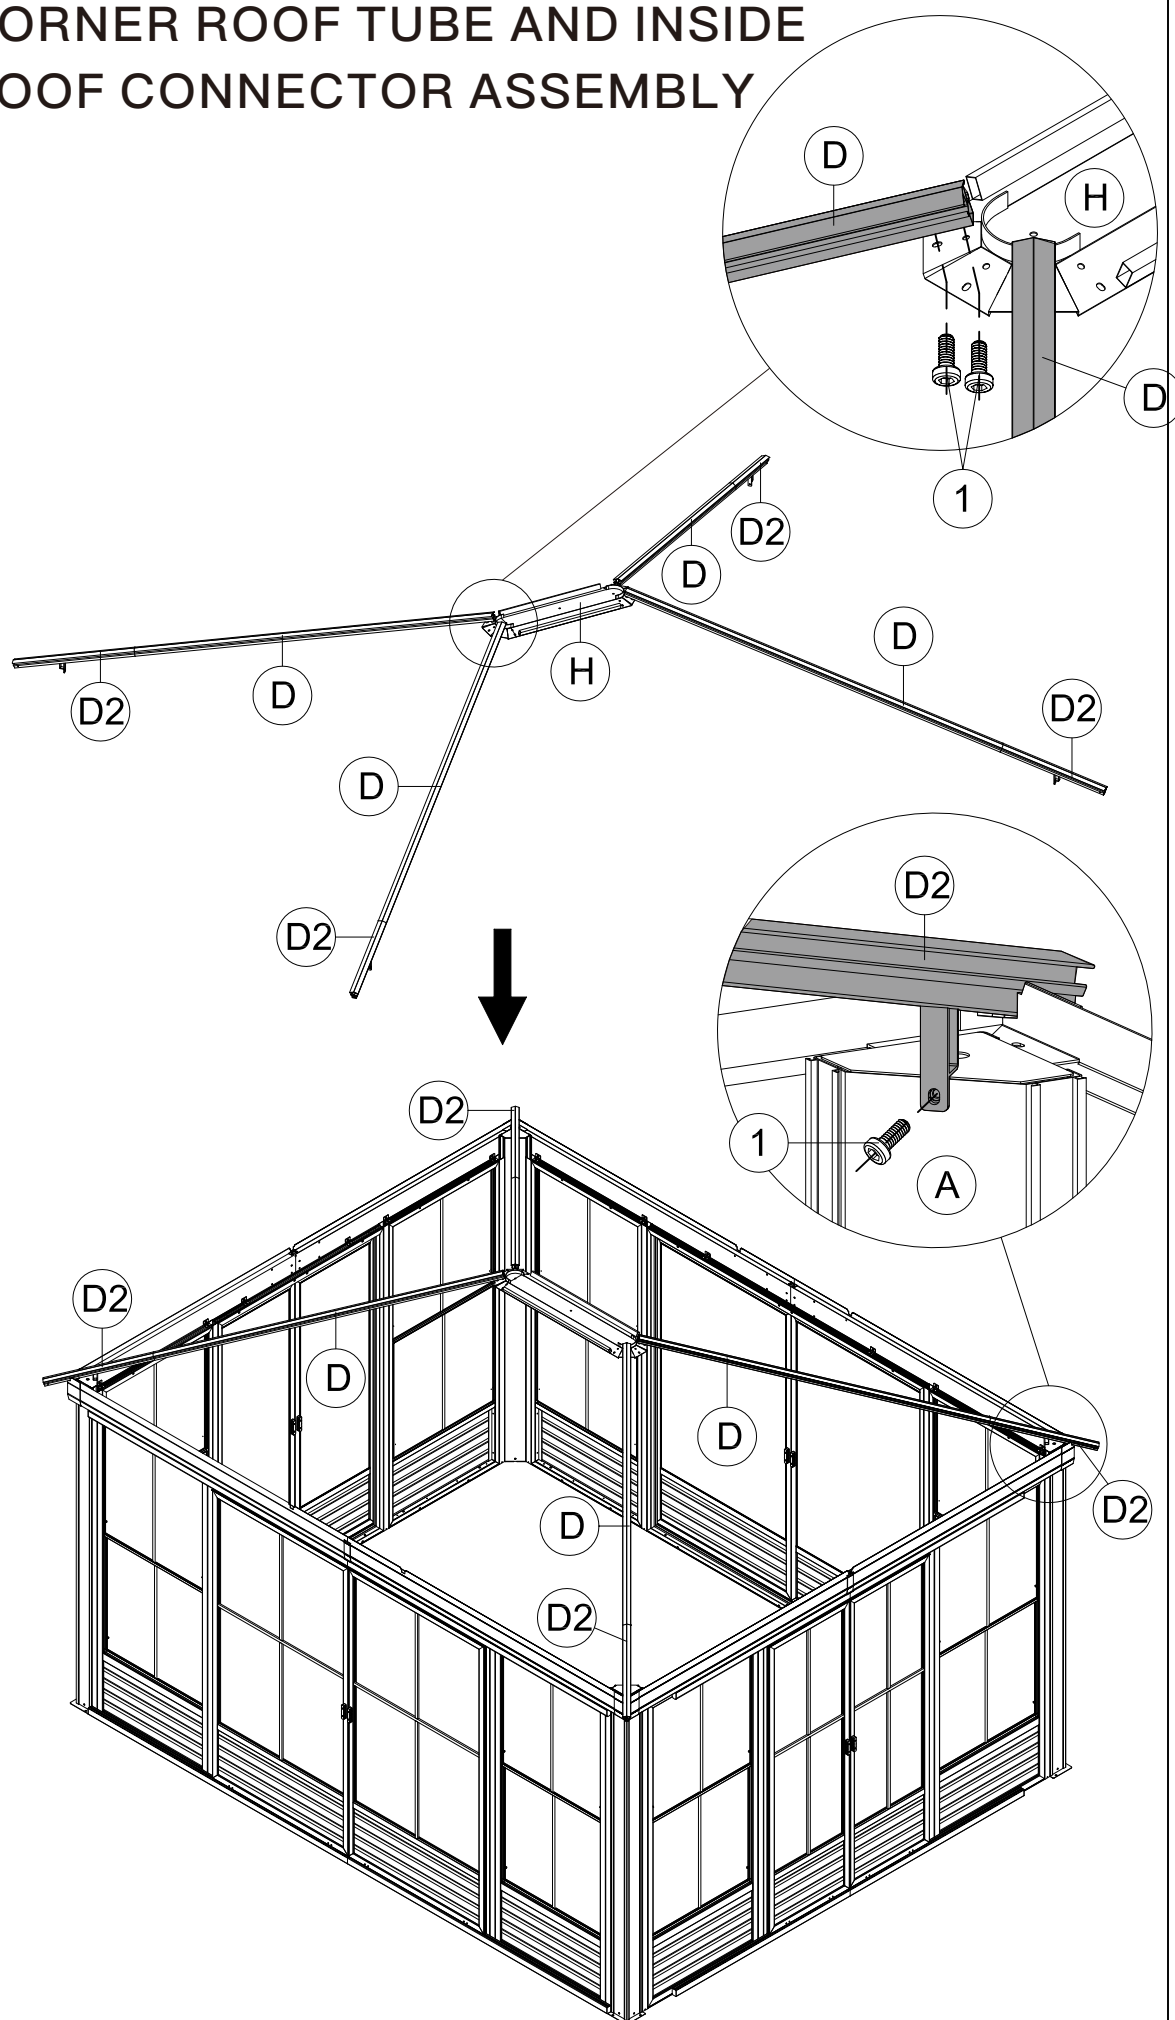

ROOF TUBE ASSEMBLY

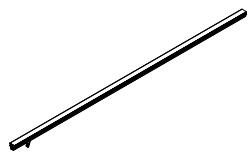

D1 6x







M6x16


1 18x




S4

9 1x

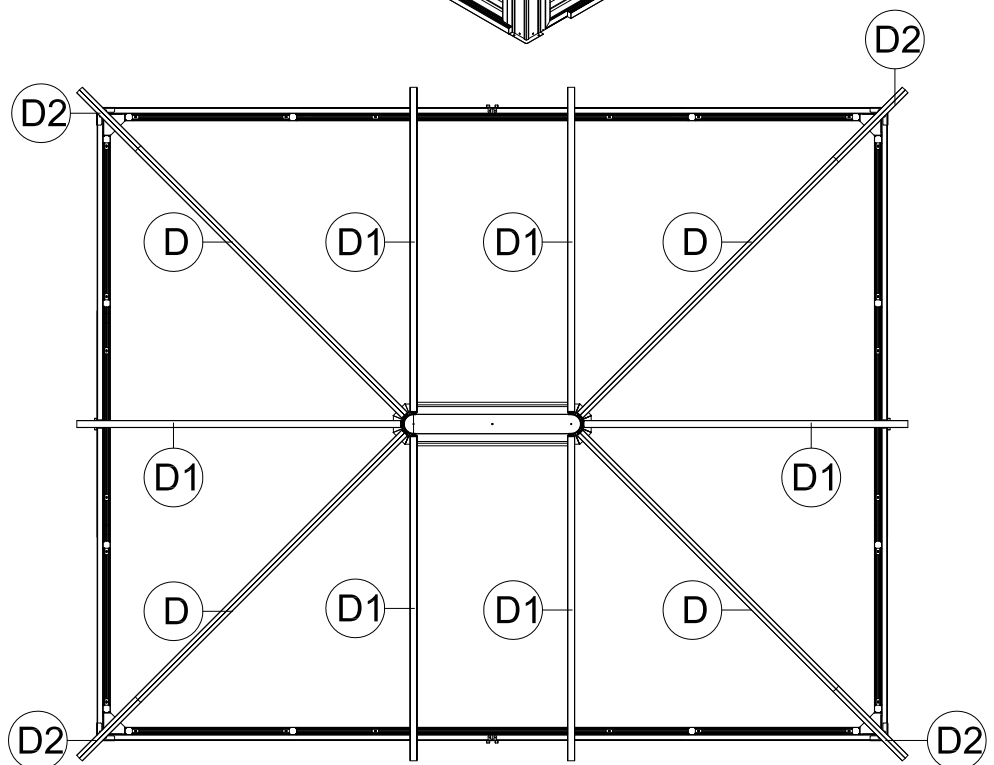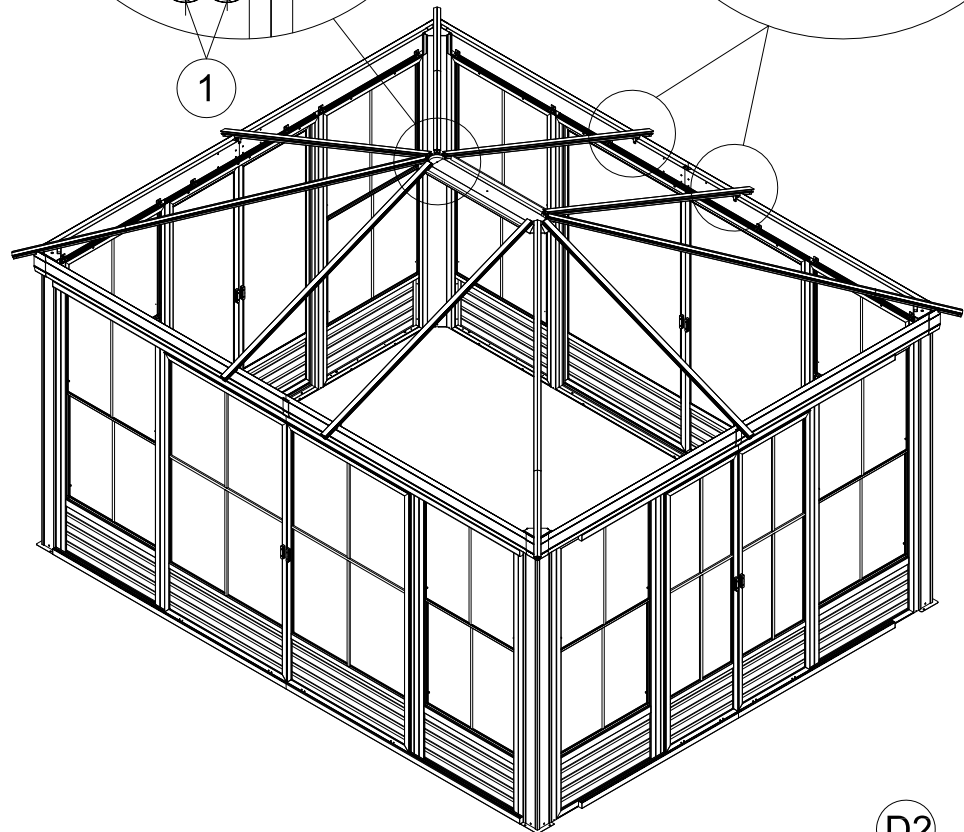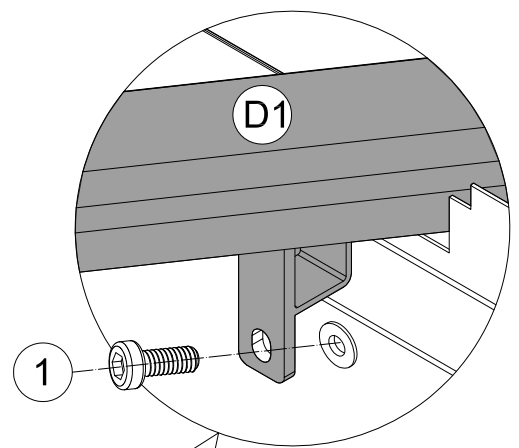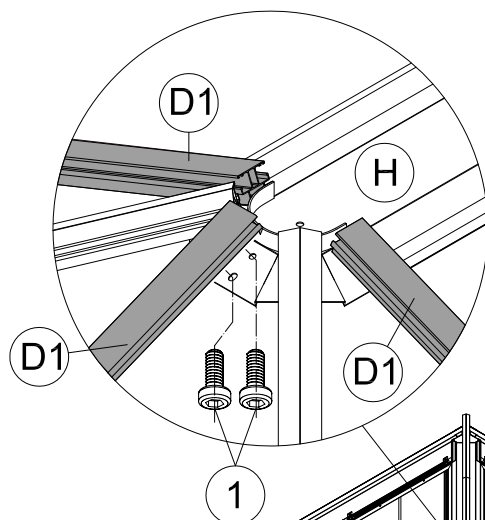

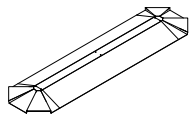

H1 1x

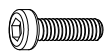

M6x20


2 3x




S4

9 1x


OUTSIDE ROOF CONNECTOR ASSEMBLY

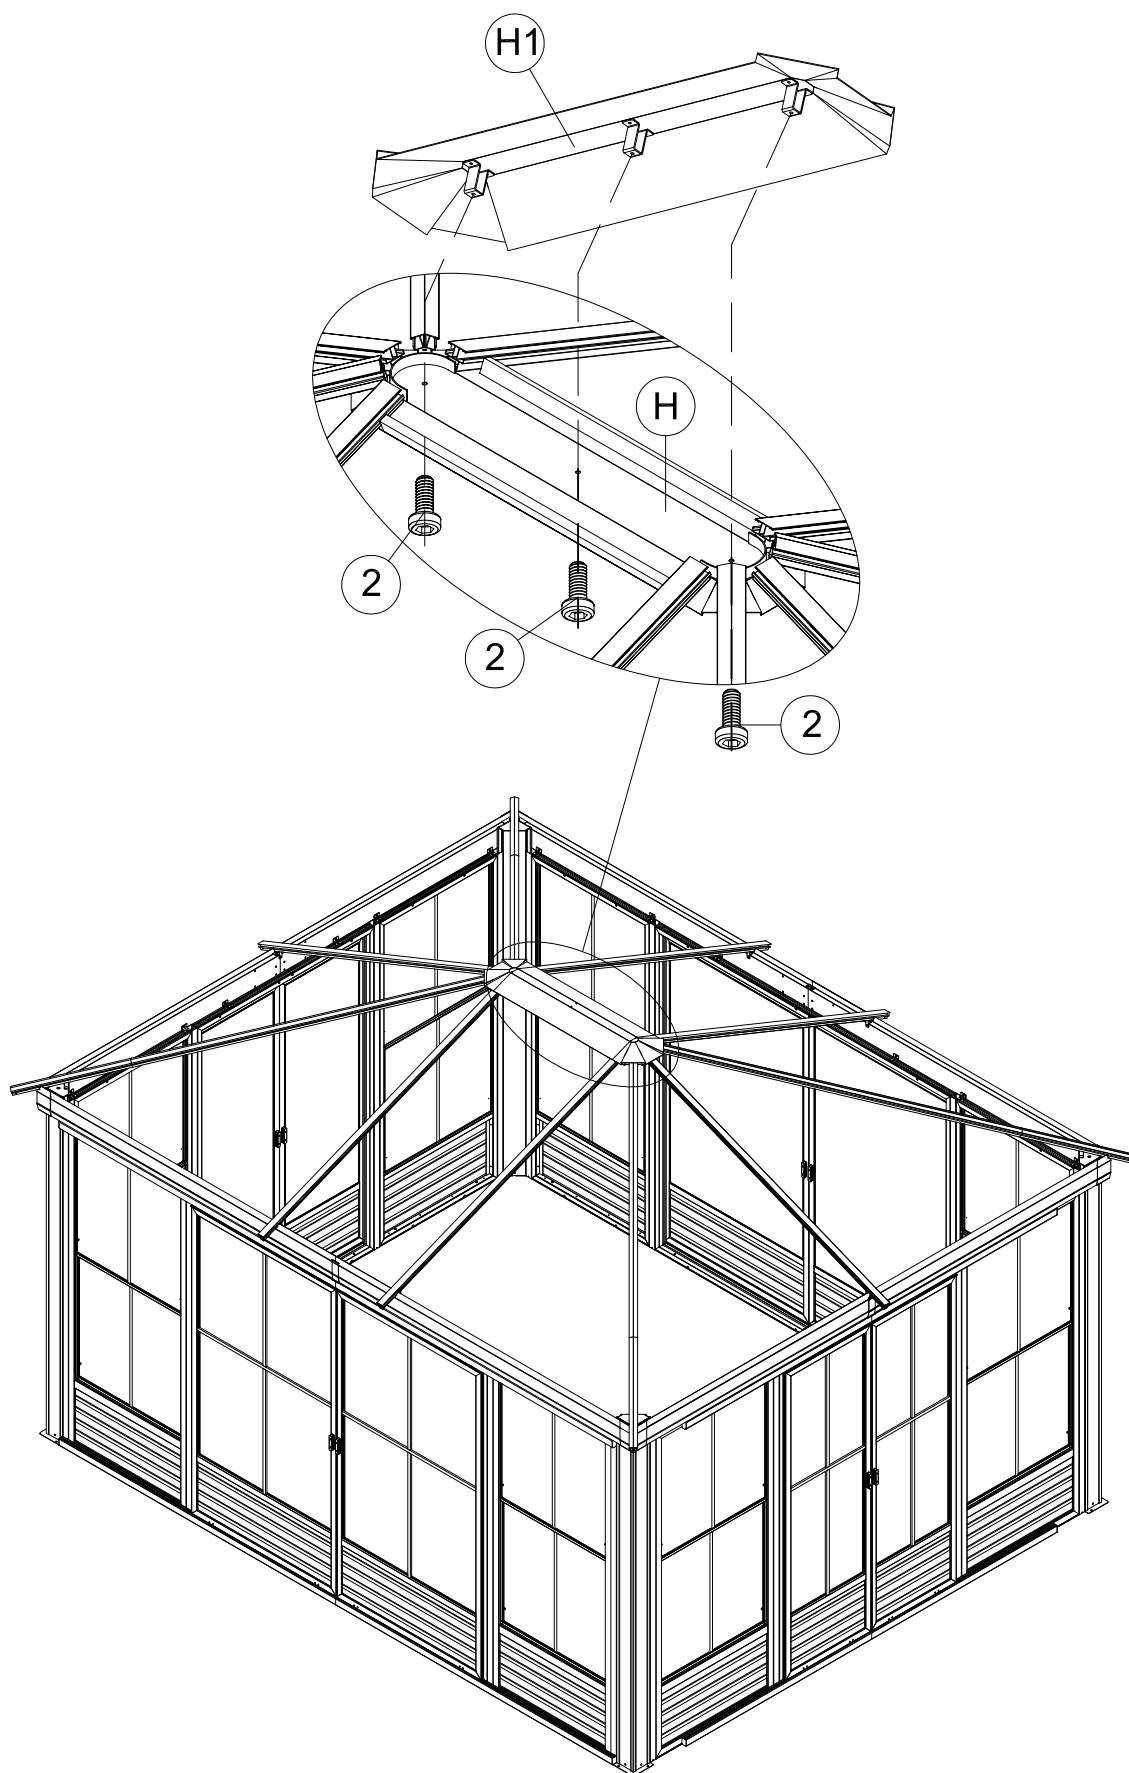


SUPPORT BARS ASSEMBLY

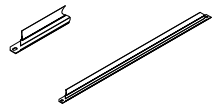


E 4x

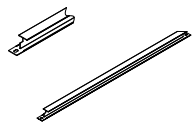


E1 4x

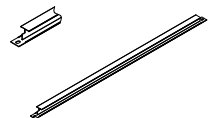

E2 4x

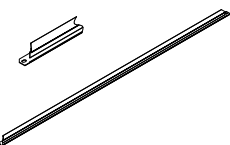

F 4x

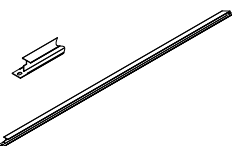

F1 4x





M6x16

1 20x





S4

9 1x

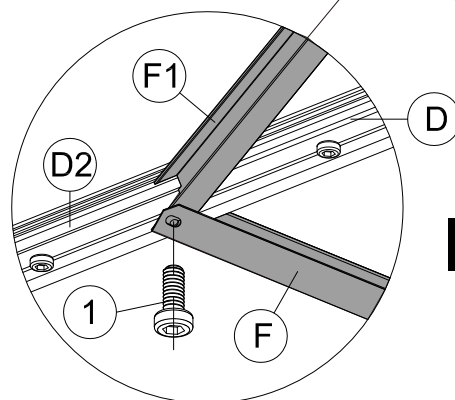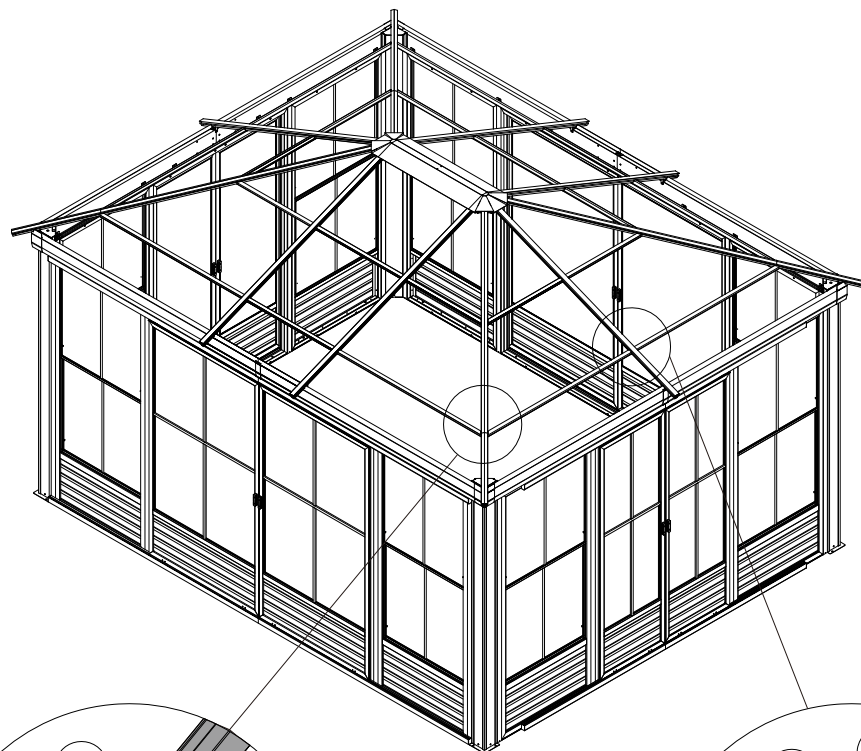


Inside View

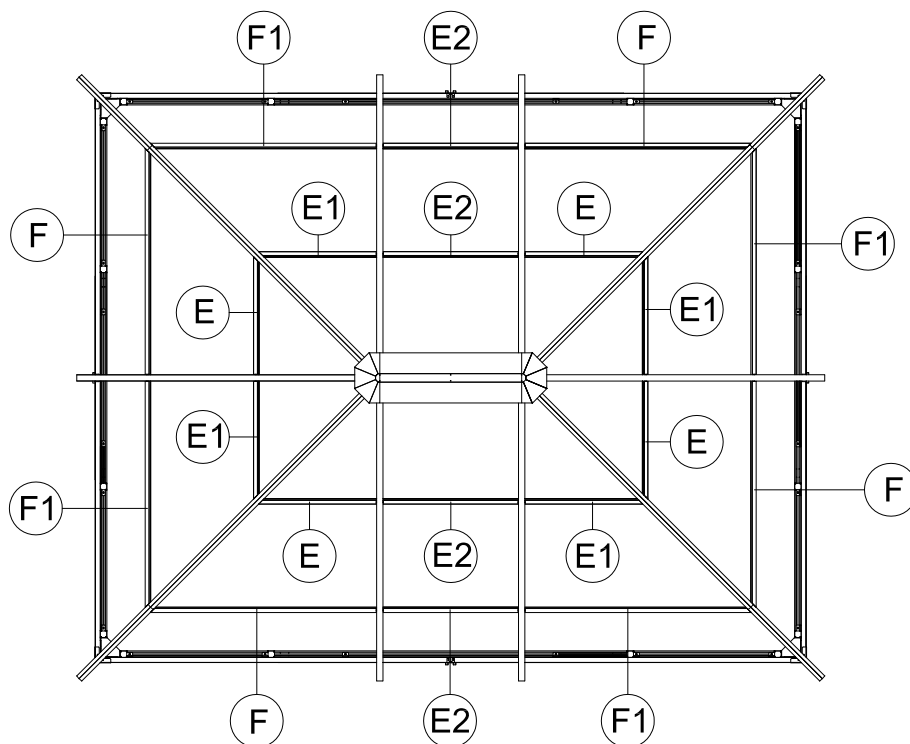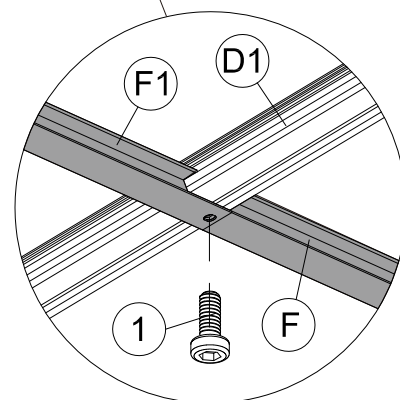


Outside View


Installing the Roof Panels, Finishing End Bars, and Finishing End Plates

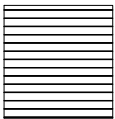


Q22x

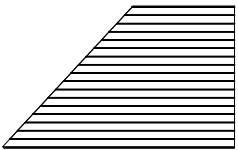


R4x

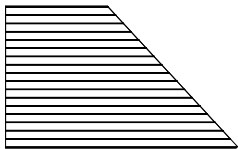


R14x

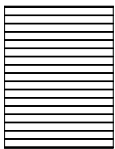


R22x

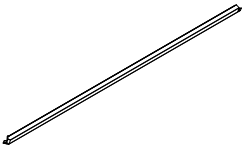


G4x

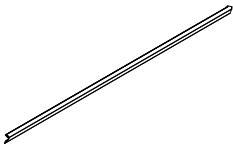


G14x

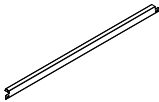


G22x




T4x





T16x





M6x16110x



S491x

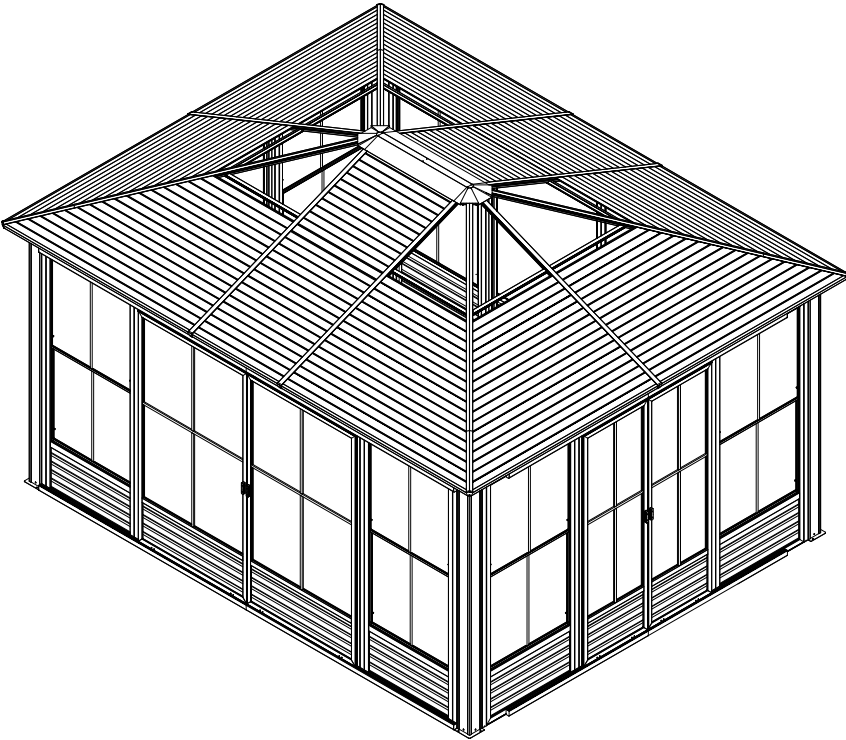
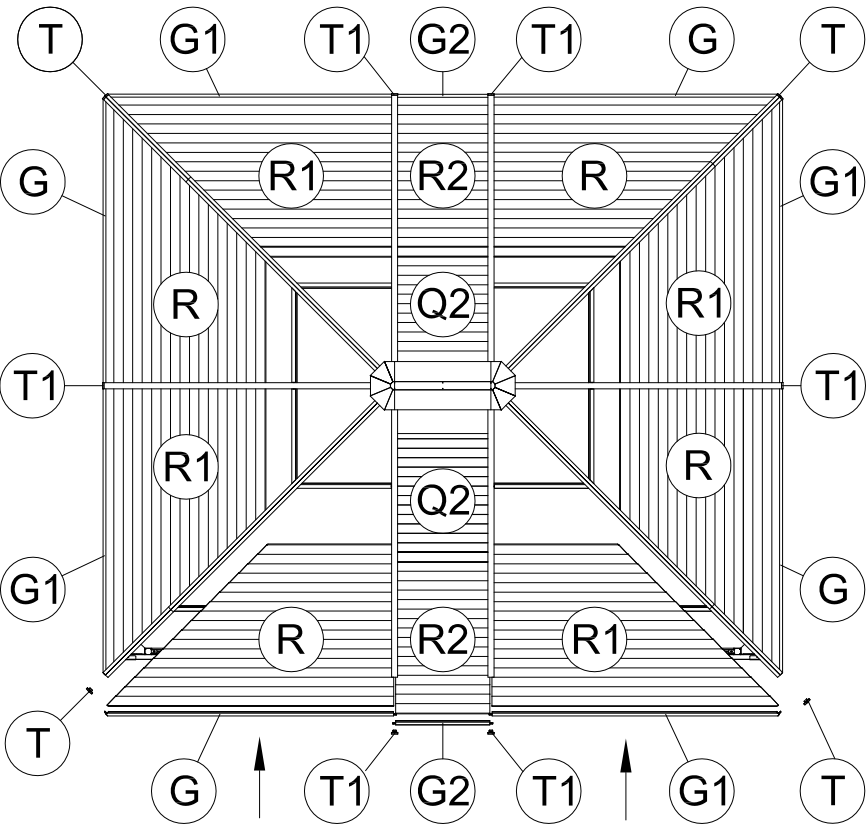


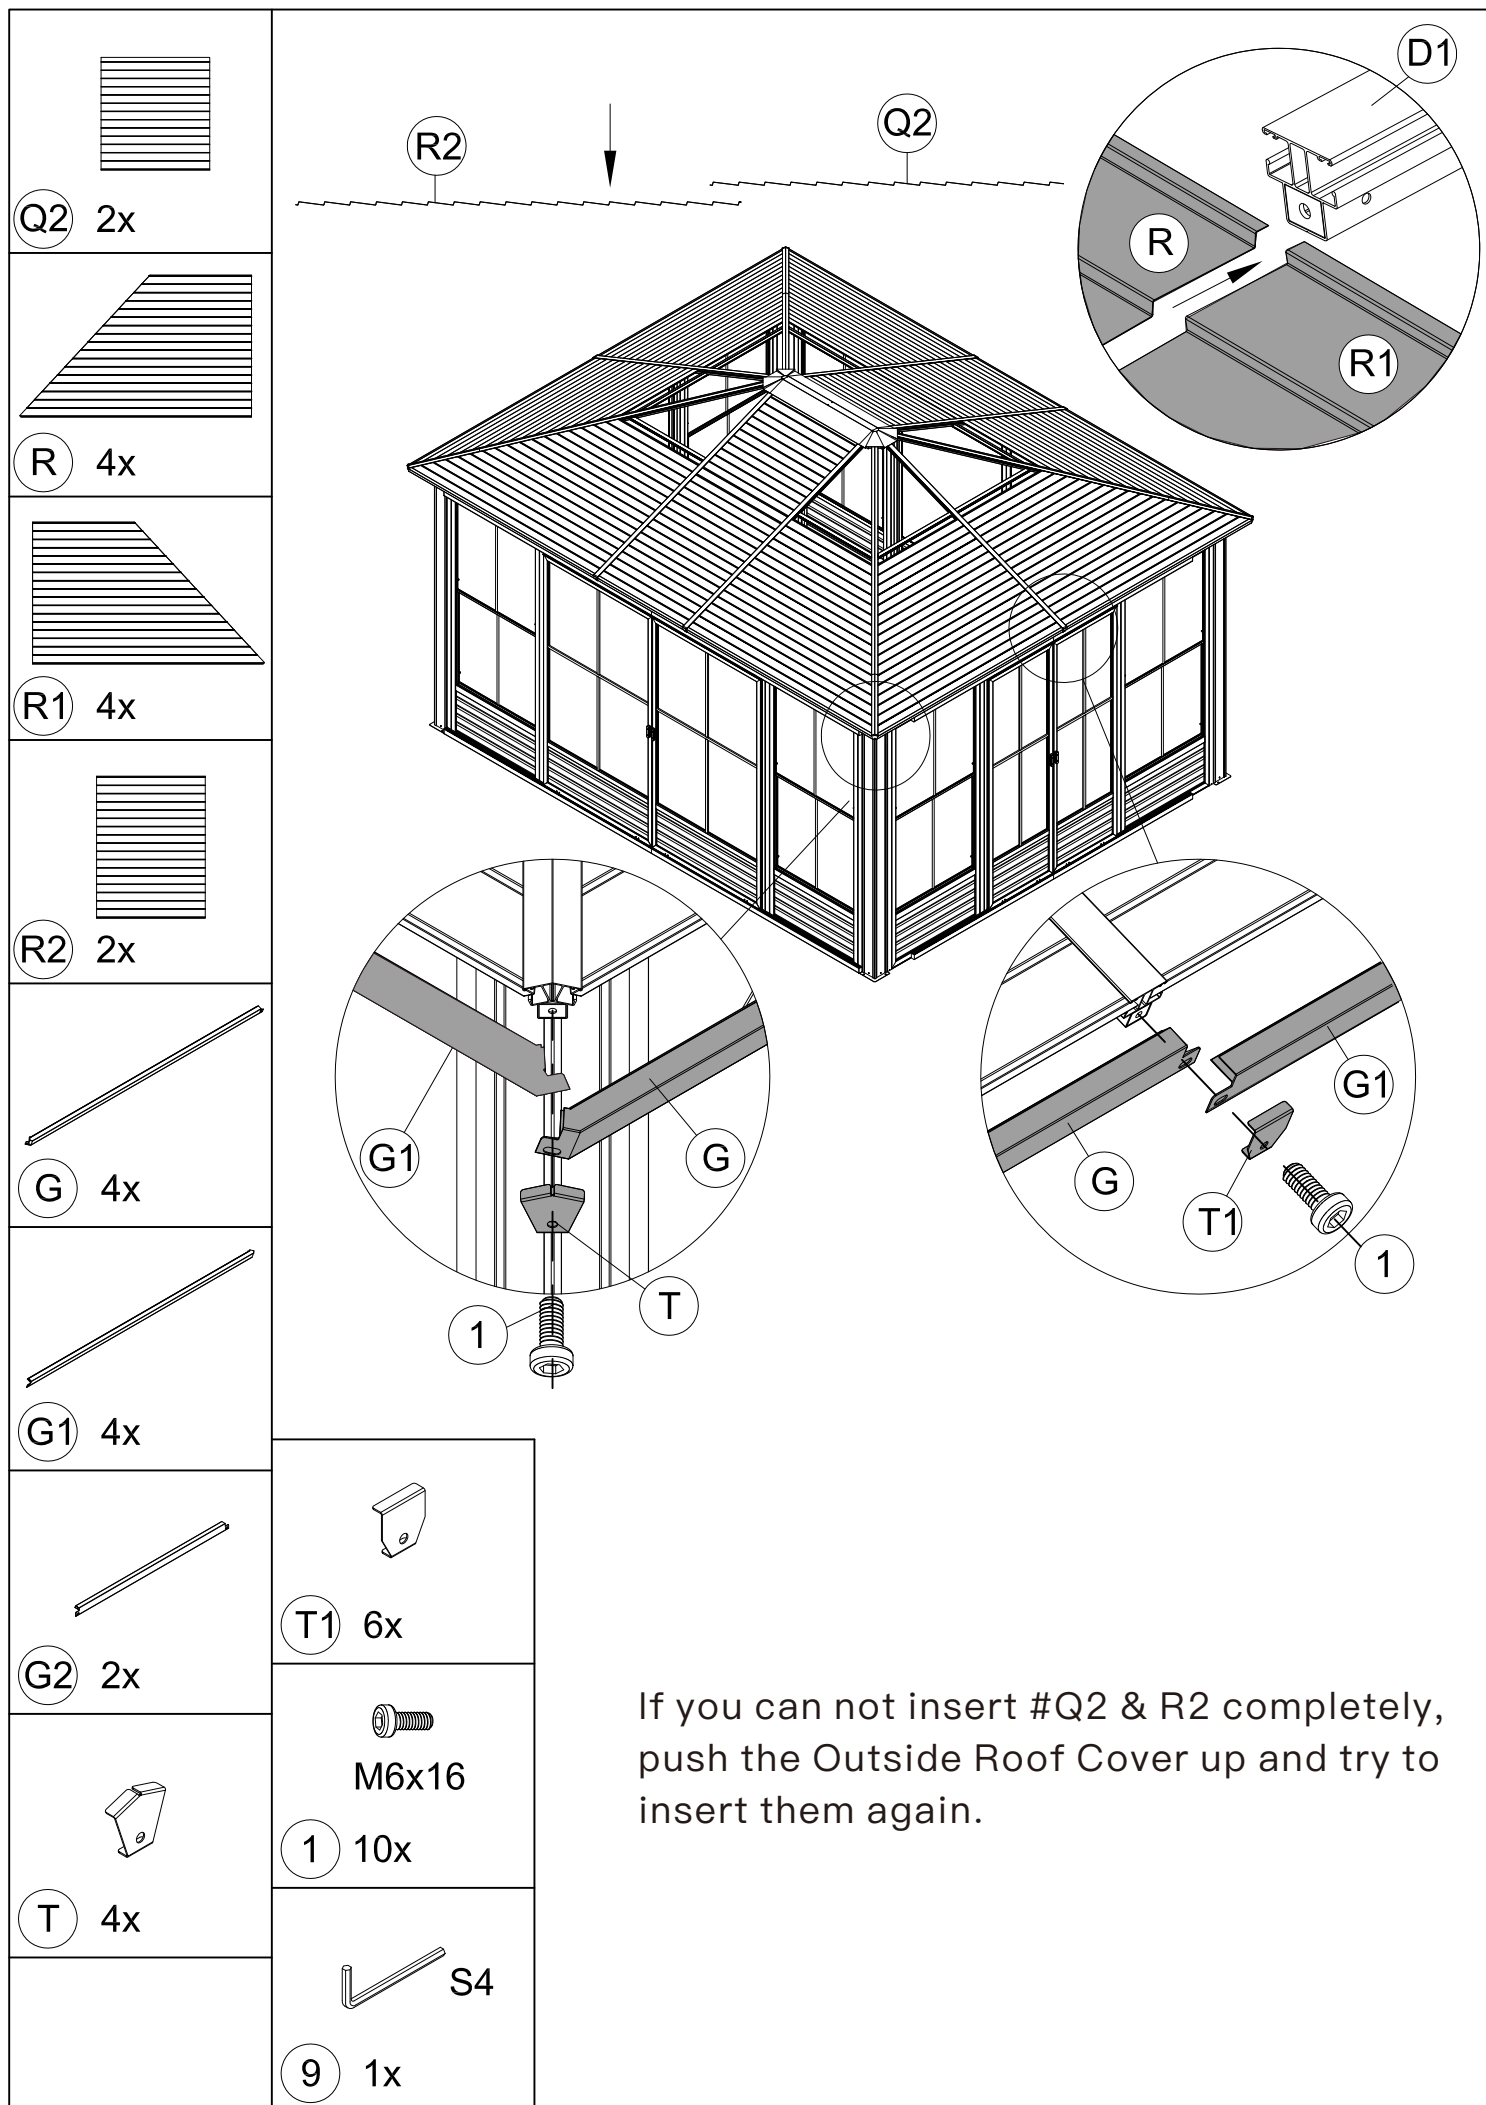

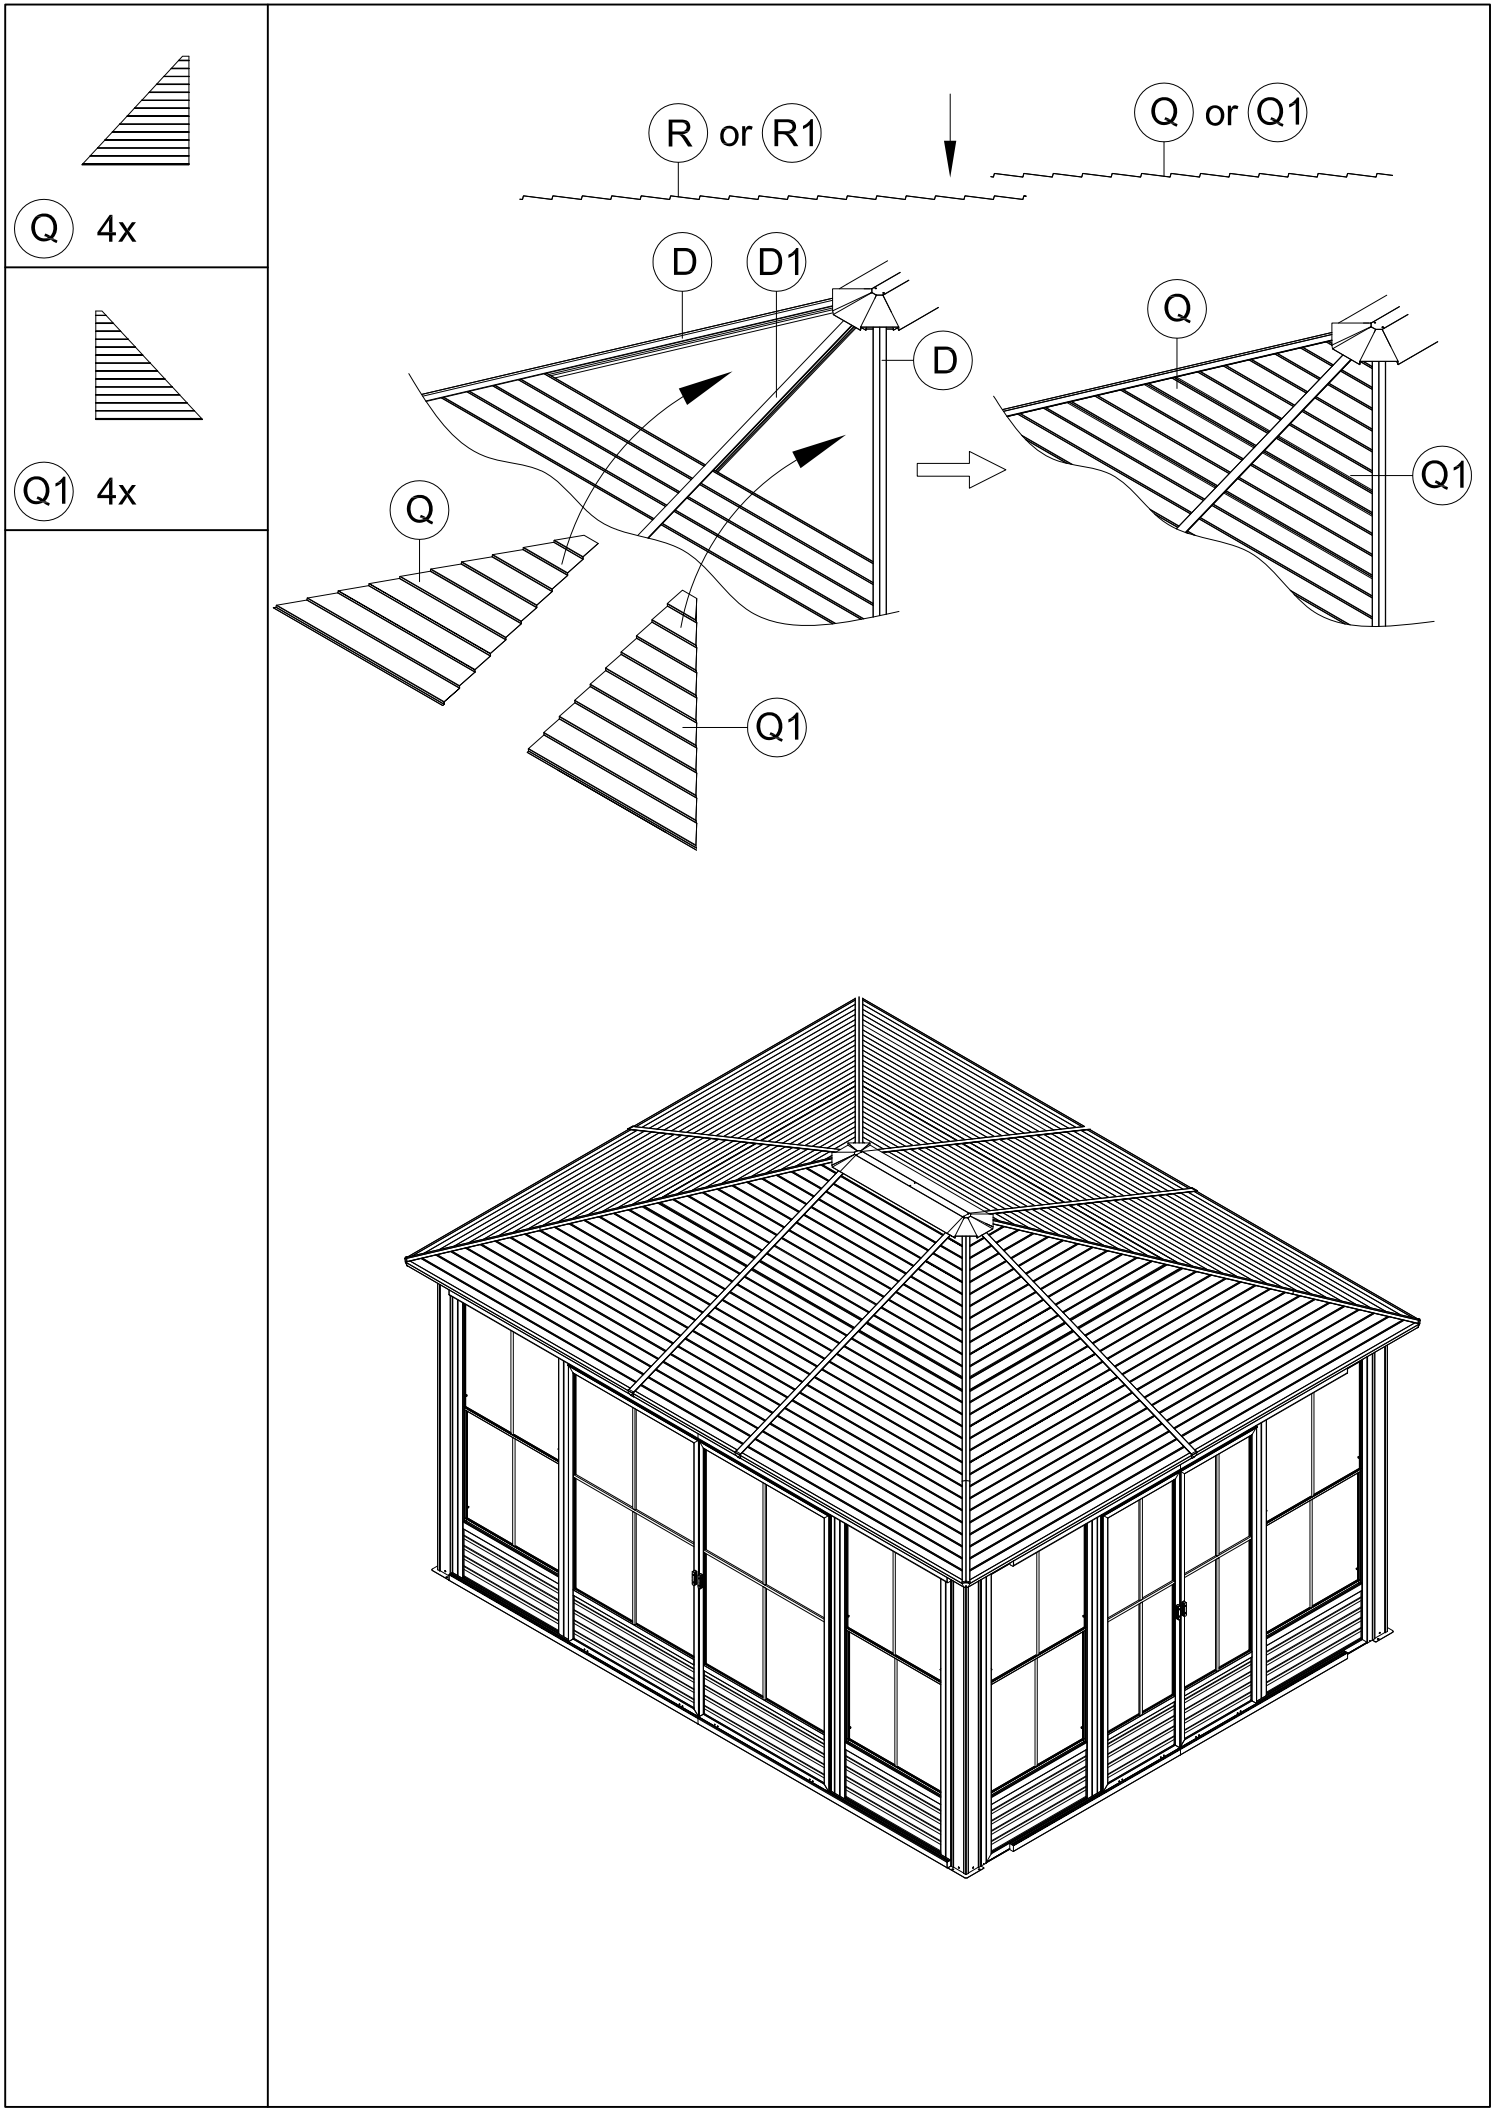




W 20x

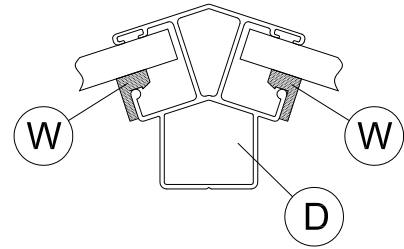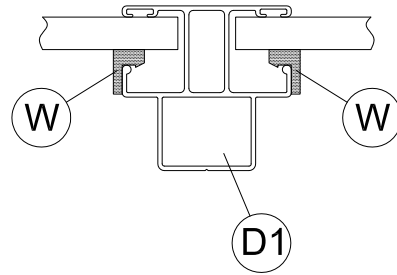


Section View






Roof Panel Plug #W needs to be inserted between the Roof Tubes and the splicing of the upper and lower roof panels

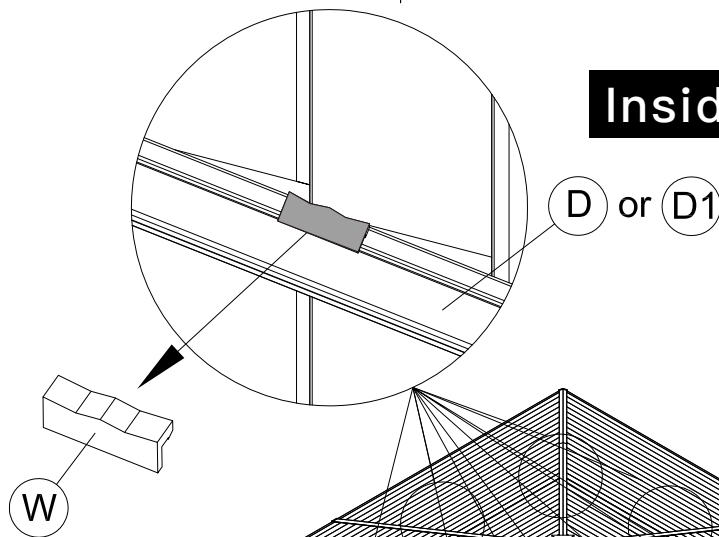

Inside View

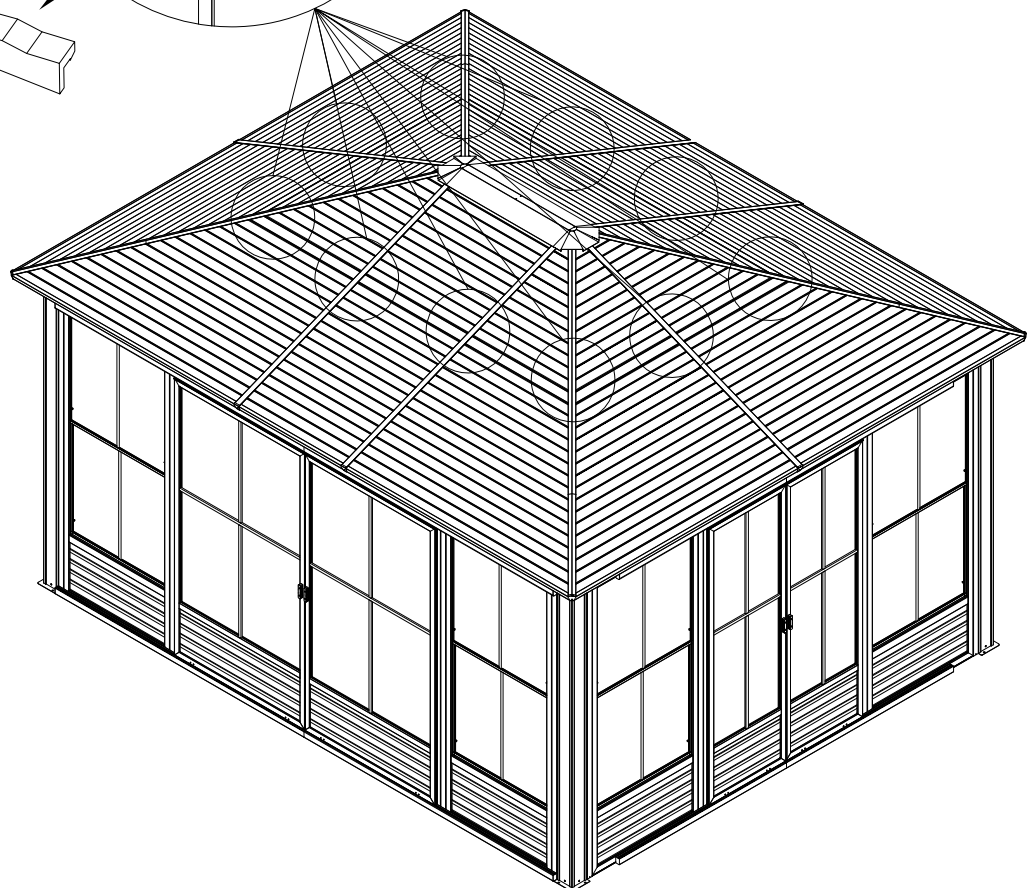


TEMPORARY SUPPORT POLE ASSEMBLY

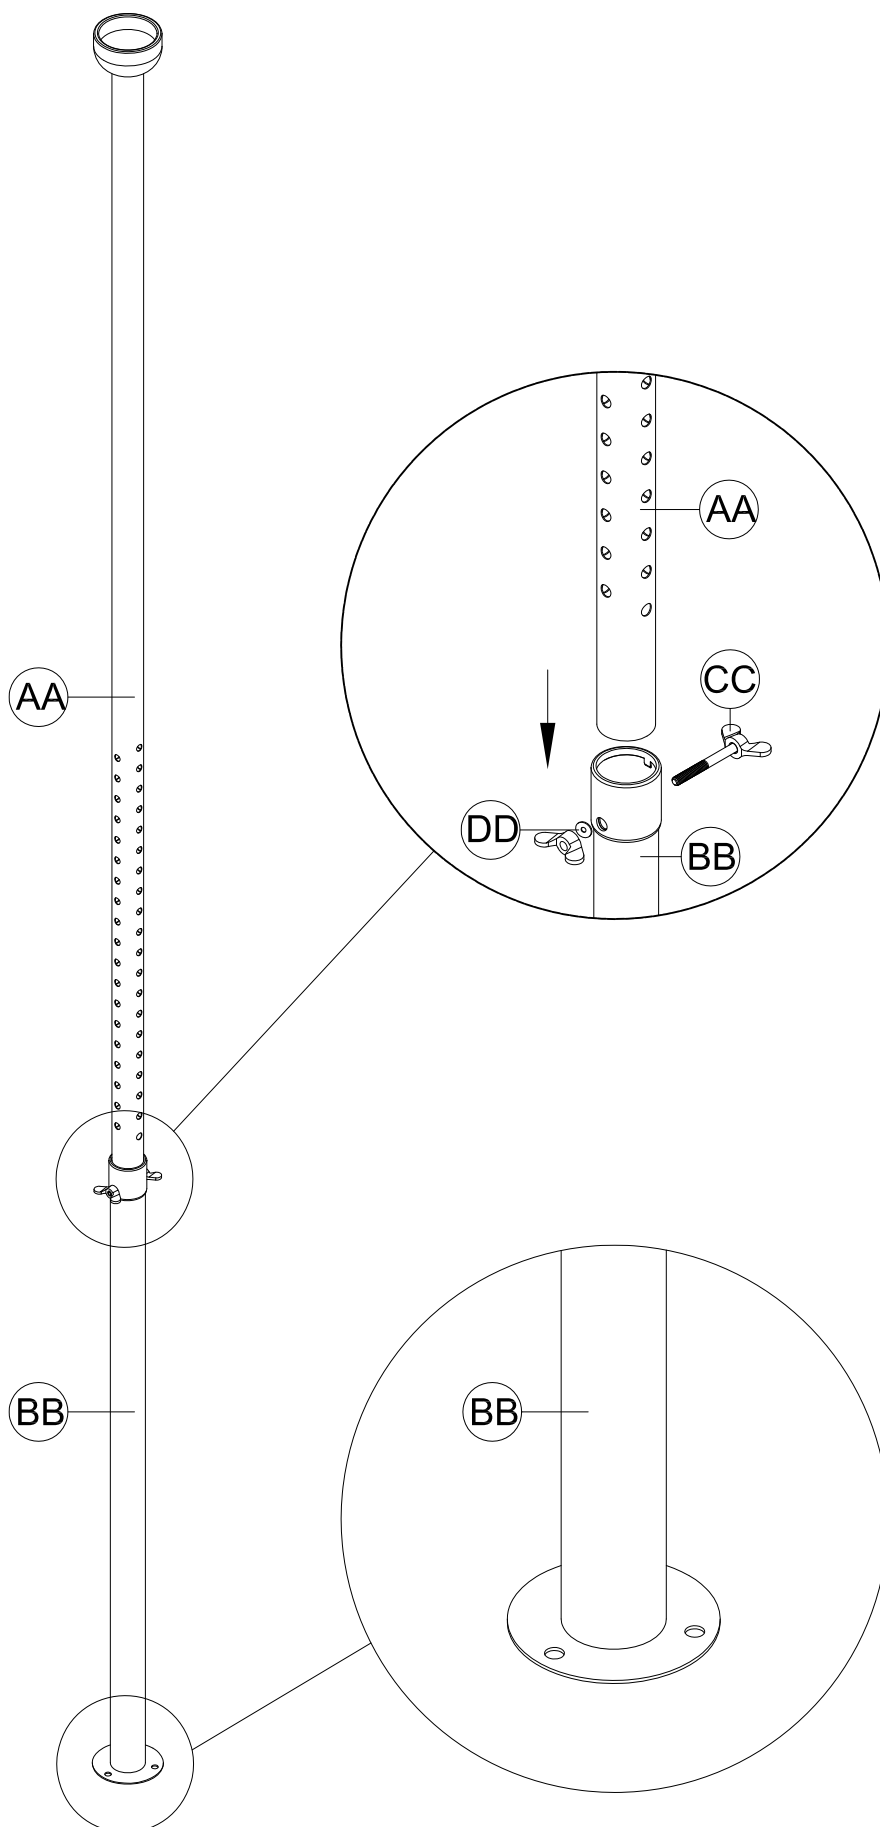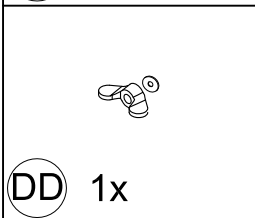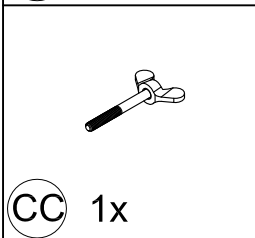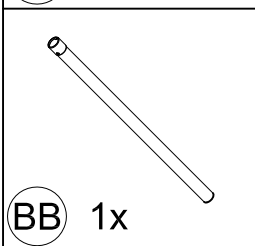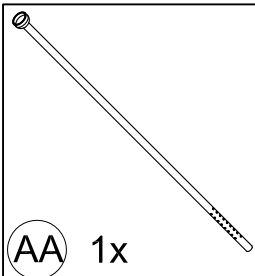

The Temporary Support Pole is used to stand under the inside roof cover, Which can strengthen the weight capacity of the metal roof.

In bad weather, especially snowstorms, it is needed to prevent the roof from collapsing under heavy snow.


In daily life, you can put it away.

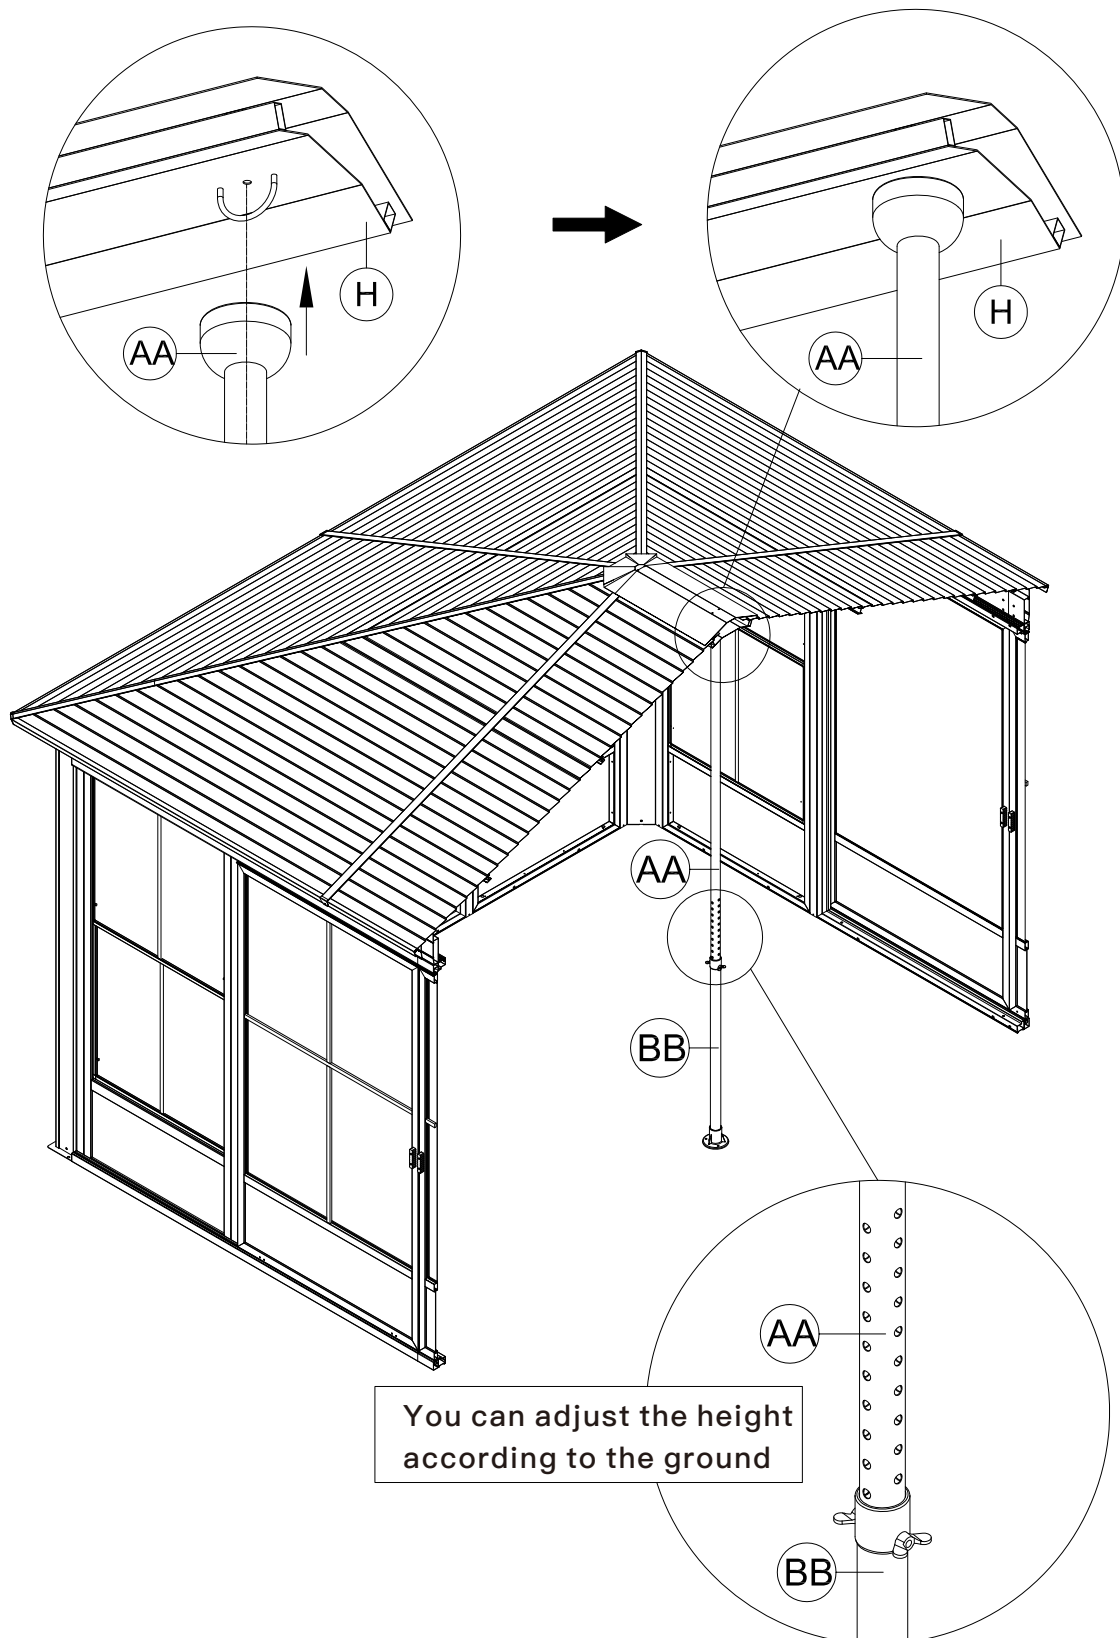

Anchoring the solarium:

The unit must be anchored to either wood, stone tiles, or concrete using appropriate screws for that flooring.

IMPORTANT: Camp nails cannot be used for permanent anchoring. Failure to do so may nullify the Warranty.

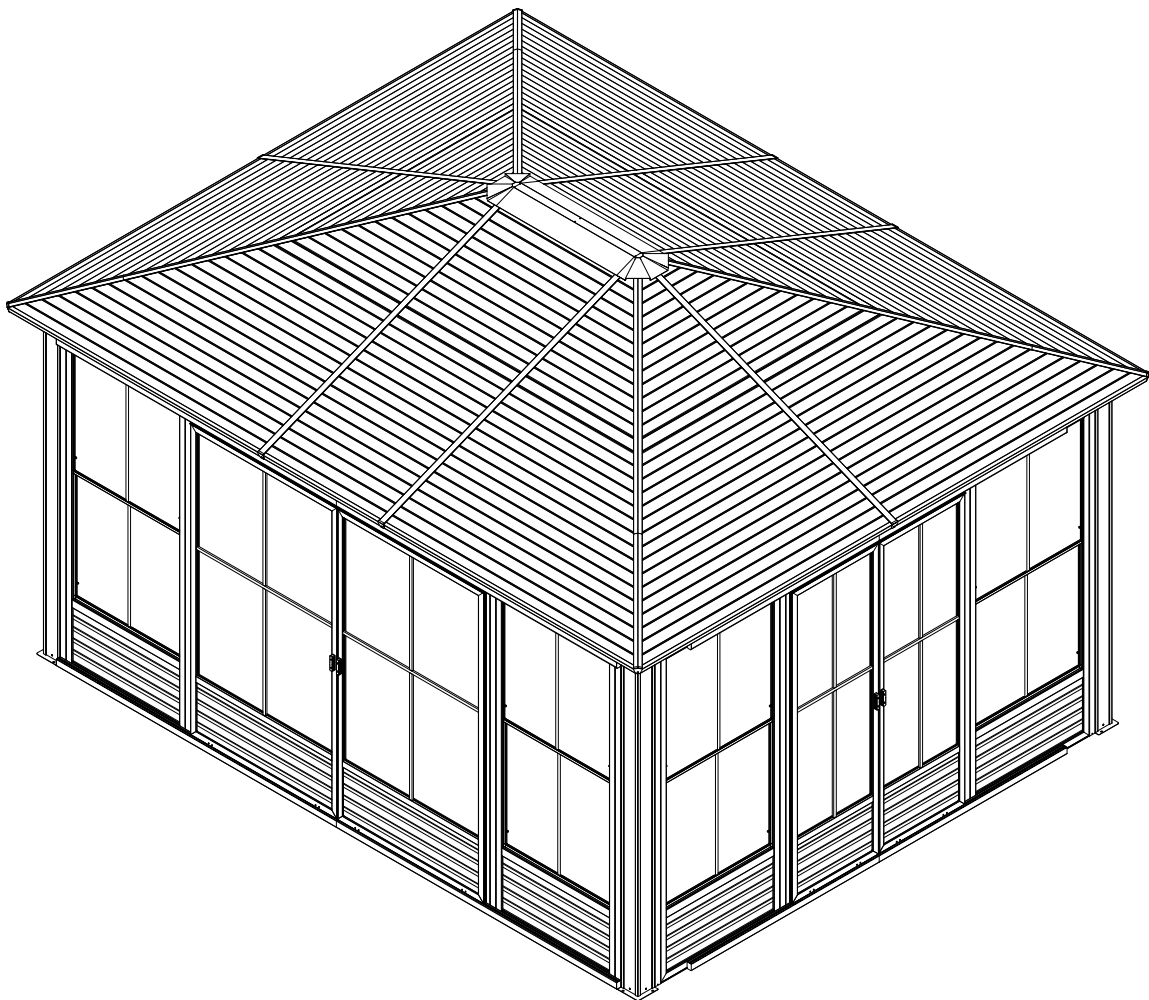



Thanks for your purchase.

At domi outdoor living, we believe in our products.

That's why we provide a 12-month warranty and friendly, easy-to-reach after-sales service. So, if you have any questions about our product or assembly, please feel free to contact us. We are here for you.

Support:  

After-sales contact email:

service@domioutdoorliving.com

Business cooperation contact email:

marketing@domioutdoorliving.com

Please have your order ID available if you reach out for support.

If you have damaged parts or product, please send us photos for an immediate response.